


Endurance®
Freestanding Desk

CORTECH

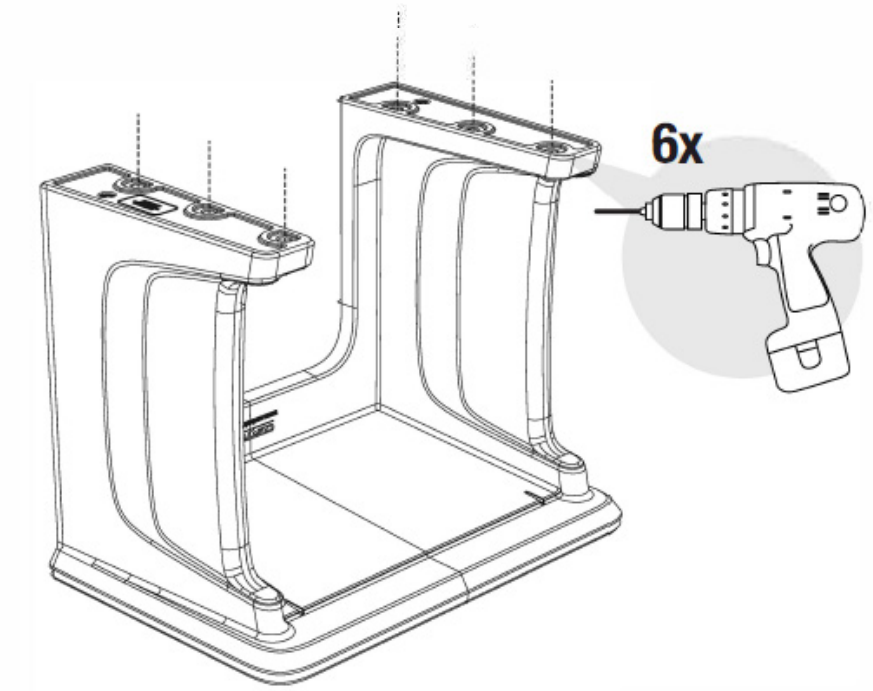

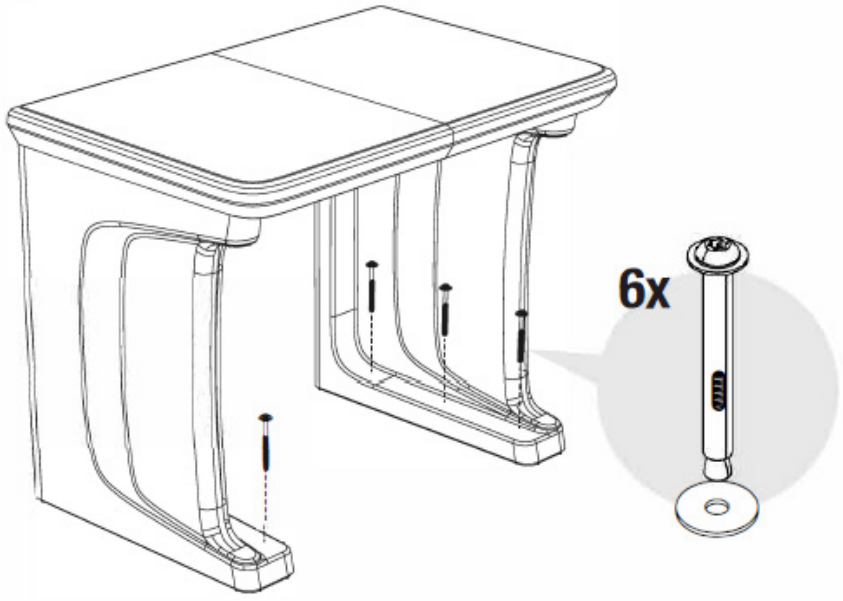

You will need:

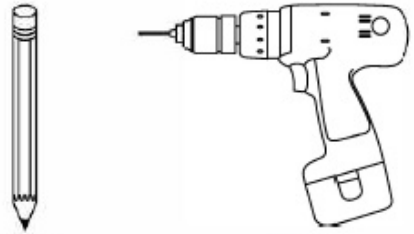


1x
Pencil
For Marking Floor And Wall

1x
Drill
With 3/8 Bit



6x
3/8-16 x 3.75"
Security Torx Anchor Bolts



6x
Flat Washer

1. Position desk on its top as to access the bottom of the desk.
2. Select and drill all six mounting locations on the bottom of the desk.
3. Place desk right side up and locate where it is to be secured to the floor.
4. Using a pen or pencil, mark mounting hole locations on the floor using the holes drilled in step 2.
5. Move desk and drill holes in the six locations where you marked the floor. Hole depth should be 2.0" deep MINIMUM.
6. Replace the desk lining up the drilled holes with the holes in the floor.
7. Place one flat washer over each of the six anchor bolt and guide the bolts through the desk and into the holes into the floor.
8. Tighten each anchor bolt 3-5 turns past finger tight.

Endurance Freestanding Desk

Bolt Locations

