

Endurance® Nightstand

CORTECH

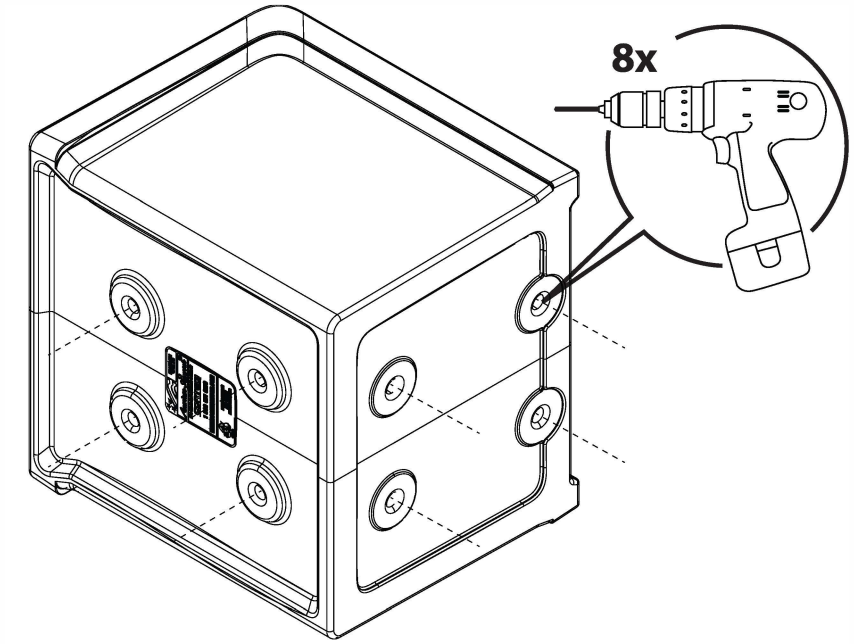


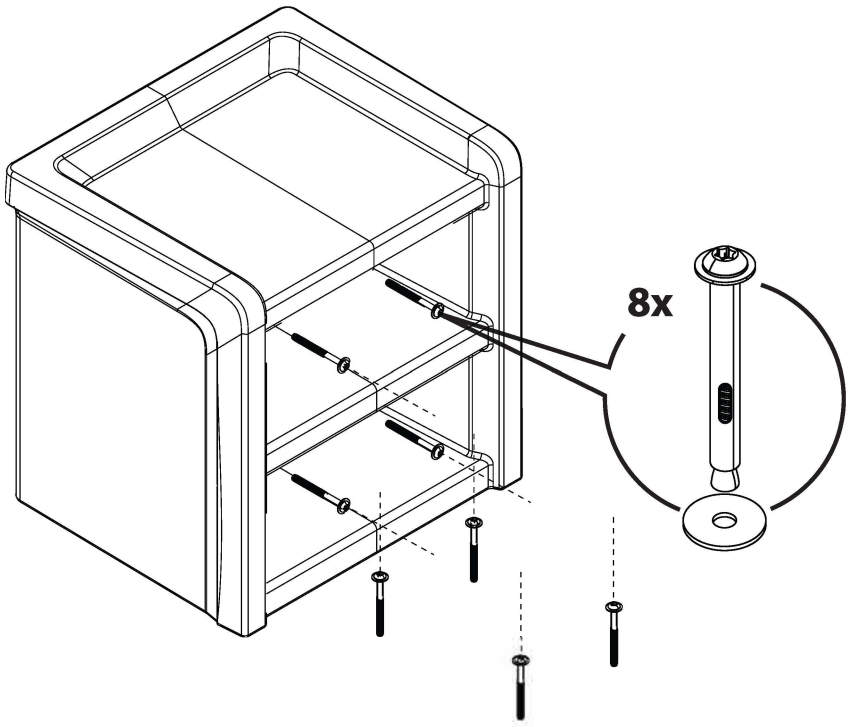

You will need:




1x
Pencil For Marking Floor And Wall

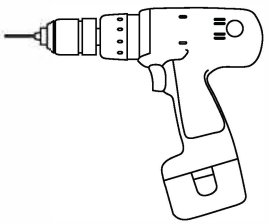

1x
Drill
With 3/8 Bit



8x
3/8-16x3.75" Security Torx Anchor Bolts



8x
Flat Washer

1. Position nightstand on its side as to access the bottom of the nightstand.
2. Select and drill all eight mounting locations on the bottom and back the nightstand.
3. Place stand right side up and locate where it is to be secured to the floor.
4. Using a pen or pencil, mark mounting hole locations on the floor and wall using the holes drilled in step 2.
5. Move nightstand and drill holes in the eight locations where you marked the floor and wall. Hole depth should be 2.0" deep MINIMUM.
6. Replace the nightstand lining up the drilled holes with the holes in the floor and wall.
7. Place one flat washer over each of the eight anchor bolt and guide the bolts through the nightstand and into the holes into the floor.
8. Tighten each anchor bolt 3-5 turns past finger tight.