


Endurance® Open Chest

CORTECH

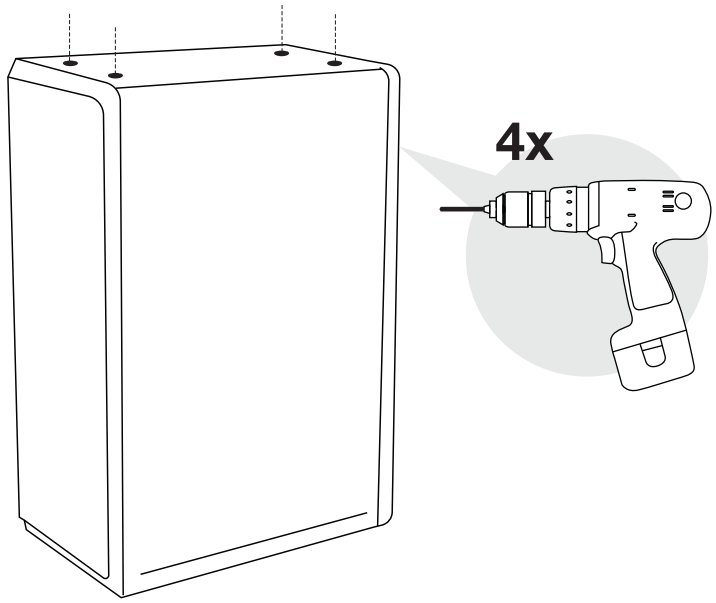

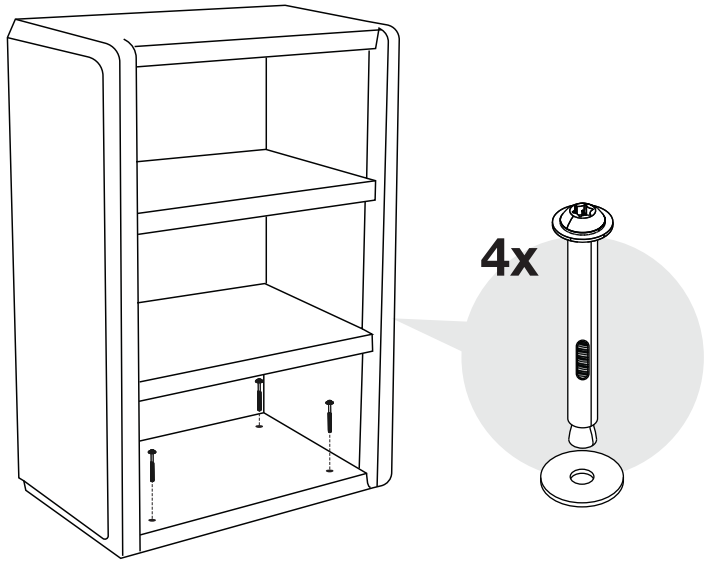


You will need:




1x

Pencil
For Marking Floor

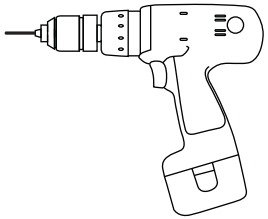


1x

Drill
With 3/8 Bit



4x

3/8-16 x 3.75”
Security Torx Anchor Bolts



4x

Flat Washer

1. Position open chest on its top as to access the bottom of the open chest.

2. Select and drill all four mounting locations on the bottom of the open chest.

3. Place open chest right side up and locate where it is to be secured to the floor.

4. Using a pen or pencil, mark mounting hole locations on the floor using the holes drilled in step 2.

5. Move open chest and drill holes in the four locations where you marked the floor. Hole depth should be 2.0” deep MINIMUM.

6. Replace the open chest lining up the drilled holes with the holes in the floor.

7. Place one flat washer over each of the four anchor bolt and guide the bolts through the open chest and into the holes into the floor.

8. Tighten each anchor bolt 3-5 turns past finger tight.