


Endurance®
Wall Mount Desk

CORTECH

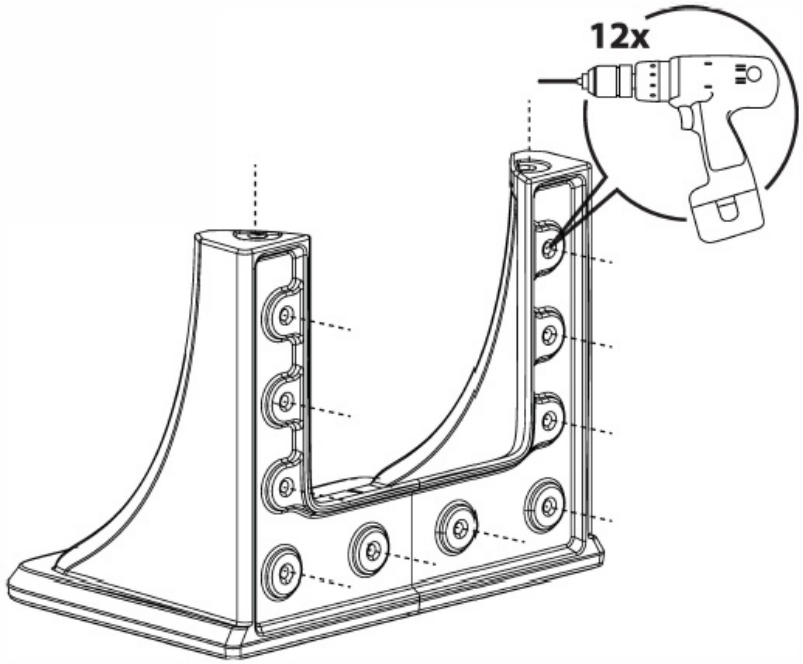

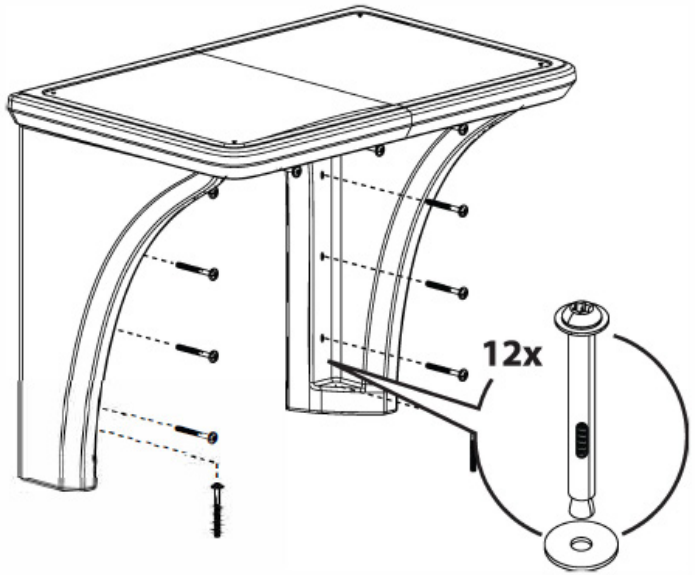

You will need:




1x
Pencil
For Marking Floor And Wall



1x
Drill
With 3/8 Bit



12x
3/8-16 x 3.75"
Security Torx Anchor Bolts

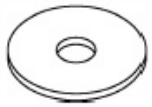

12x
Flat Washer

1. Position desk on its top as to access the bottom of the desk.

2. Select and drill mounting locations on the bottom and back the desk.

3. Place desk right side up and locate where it is to be secured to the floor.

4. Using a pen or pencil, mark mounting hole locations on the floor and wall using the holes drilled in step 2.

5. Move desk and drill holes in the eight locations where you marked the floor and wall. Hole depth should be 2.0" deep MINIMUM.

6. Replace the desk lining up the drilled holes with the holes in the floor and wall.

7. Place one flat washer over each of the twelve anchor bolt and guide the bolts through the desk and into the holes into the floor.

8. Tighten each anchor bolt 3-5 turns past finger tight.