
Floor Glide Installation

CORTECH



You will need:

Included

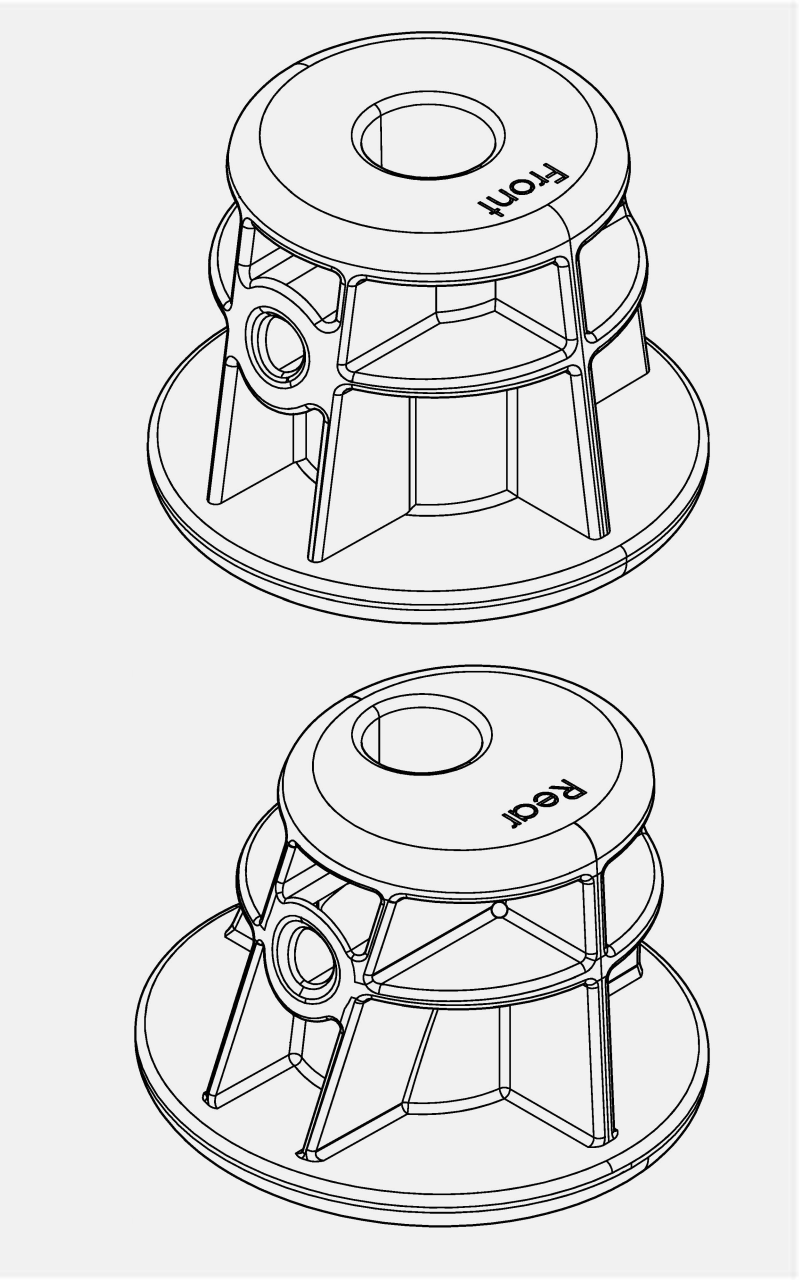

2x / 3x / 4x
Rear Floor Glide

Included



2x / 3x / 4x
Front Floor Glide




1x
Pencil
For Marking Floor




1x
Drill
With .375" Masonary Bit



1x
Screwdriver
With Tamper Resistant Torx Bit



4x / 6x / 8x
1/4-16 x 3.75"
Security Torx Anchor Bolts



4x / 6x / 8x
Flat Washer For .25" Screw Size
.26" ID .562" OD

Included



4x / 6x / 8x
.625"
Tamper Resistant Torx Screw

1 Seat requires
4x 1/4-16 x 3.75" Anchor Bolt
4x Flat Washer
4x Security Torx Set Screw
2x Front Floor Glides
2x Rear Floor Glides

2 Seat requires
4x 1/4-16 x 3.75" Anchor Bolt
4x Flat Washer
4x Security Torx Set Screw
2x Front Floor Glides
2x Rear Floor Glides


3 Seat requires
4x 1/4-16 x 3.75" Anchor Bolt
4x Flat Washer
4x Security Torx Set Screw
2x Front Floor Glides
2x Rear Floor Glides

4 Seat requires
6x 1/4-16 x 3.75" Anchor Bolt
6x Flat Washer
6x Security Torx Set Screw
3x Front Floor Glides
3x Rear Floor Glides

5 Seat requires
8x 1/4-16 x 3.75" Anchor Bolt
8x Flat Washer
8x Security Torx Set Screw
4x Front Floor Glides
4x Rear Floor Glides


Floor Glide Installation

1.

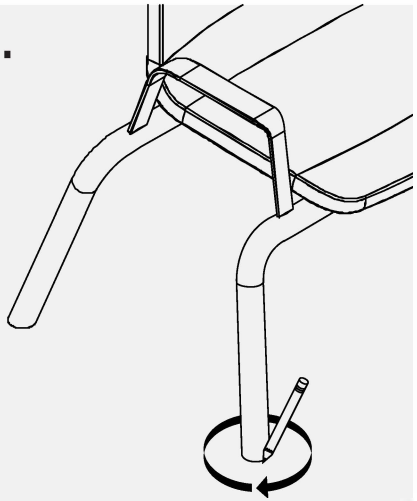


Position chair in desired location. Using a pen or pencil, trace around each leg base to mark the foot location onto the floor.

2.

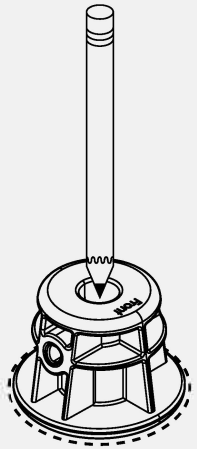


Move chair out of the way and center each floor glide in the circle marked on the floor. Mark the center of the floor mount hole.

3.

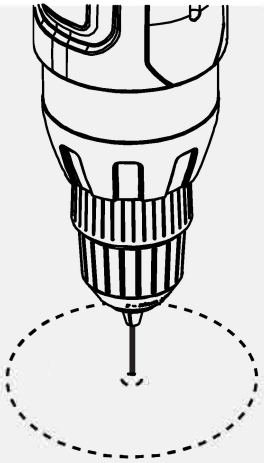


Drill holes in the locations where you marked the center of the floor mount hole. Hole depth should be 2.0" deep MINIMUM.

4.

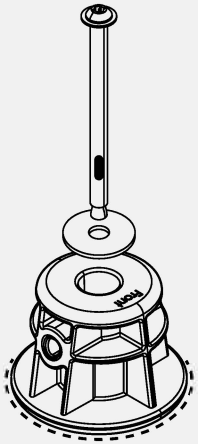


After installing each concrete anchor, position each floor glide over the anchor, place one flat washer over the floor glide top, and insert the bolt. The bolt should be finger tightened only, to allow for any fitment adjustments.

5.

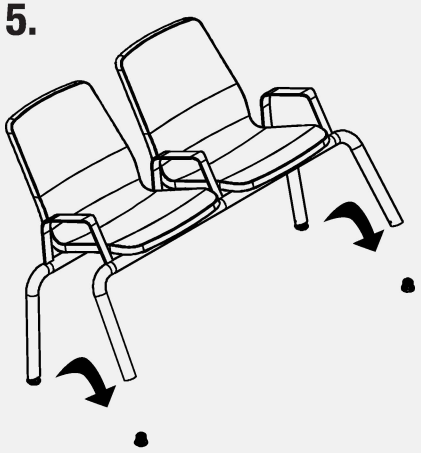


After loosely installing all floor glides, first set the rear legs onto the floor glide and swing the chair onto the front glides. Check fitment and make any necessary adjustments.

6.

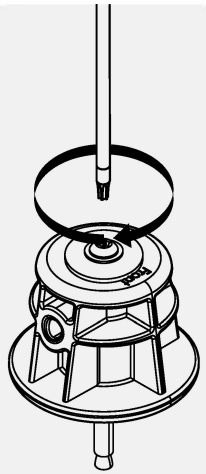


Remove chair and tighten each anchor bolt 3-5 turns past finger tight.

7.

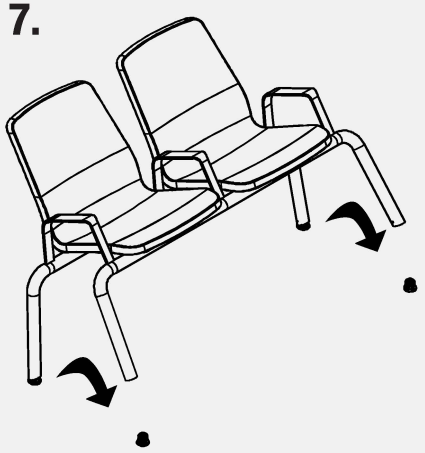

Replace the chair being sure to first secure the rear legs followed by the front.

8.

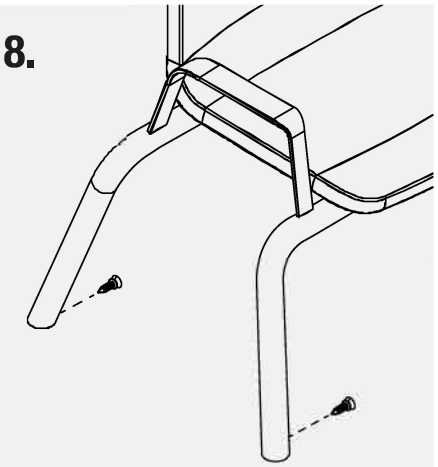

Insert and tighten each set screw 3-5 turns past finger tight.