



FOR THE APPLE //E

Appletini ONE

Installation and quick start

FIRMWARE
F1.1.1
INSTALLED

This document tells you how to install the Appletini ONE card in your Apple //e and how to start it for the first time. Read all the steps before you start.

CAUTION

- Turn off the Apple //e and disconnect its power cable before you install or remove the card.
- Static electricity can cause damage to the card. Touch the metal case of the power supply before you touch the card.
- Hold the card by its edges. Do not touch the gold contacts.

1 Install the microSD card


This package does not contain a microSD card. You must supply one. The Appletini ONE keeps its settings and disk images on the microSD card.

1. Find the microSD slot on the top edge of the card (item **B** in the photo below).
2. Hold the microSD card with its contacts toward the card.
3. Push the microSD card fully into the slot, until it stops.

NOTE

Install the microSD card before you turn on the computer. The card cannot start without it.

2 Install the card in slot 7

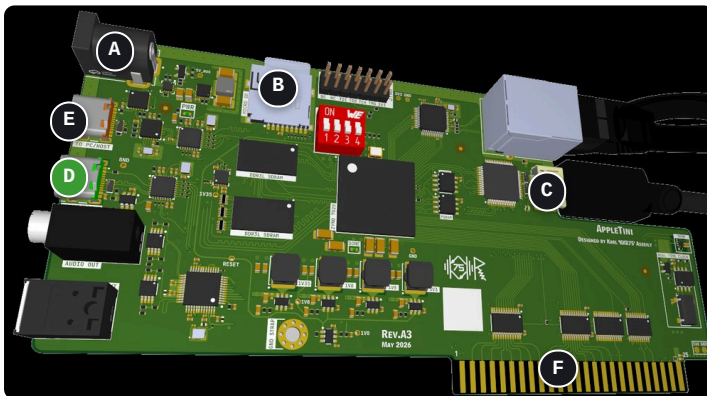

- | | |
|-----------------------------------|-----------------------------------|
| A 12 V DC power input | B microSD slot (top) |
| C Mini-HDMI video output | D Lower USB-C port (green) |
| E Upper USB-C port (to PC) | F Slot edge contacts |

1. Remove the lid of the Apple //e.
2. Find slot 7. Slot 7 is the slot that is farthest from the power supply.
3. Remove the cover from the rear-panel opening that is nearest to slot 7, if necessary.
4. Align the edge contacts (**F**) with slot 7. The connectors must point to the rear of the computer.
5. Push the card straight down until it is fully in the slot. Do not rock the card.
6. Make sure that the card does not touch other cards.

NOTE

To use the real-time clock, install a CR2032 battery in the battery holder on the back of the card. Do this before you install the card.

3 Connect the cables

Connect all the cables before you turn on the computer.

1. Connect the mini-HDMI cable to the video output (**C**). Connect the other end to your monitor or TV.
2. Connect the 12 V power adapter to the power input (**A**). Connect the adapter to a mains outlet.
3. If you have a USB mouse or the USB keypad, connect it to the lower USB-C port (**D**). This port is green.

Power adapter: 12 V DC, 3 A

Video: mini-HDMI, 1920 × 1080

Mouse / keypad: green USB-C port

CAUTION

Use only a 12 V DC, 3 A power adapter. An incorrect adapter can cause damage to the card.

4 Start the computer

1. Put the lid back on the Apple //e. Connect the power cable of the Apple //e.
2. Turn on the monitor. Then turn on the Apple //e.
3. When the computer starts, push **A**. The Appletini boot menu opens.
4. In the boot menu, select a SmartPort slot. Then select a disk image to load in that slot.

- NOTE**
- In the boot menu, you can always use the Apple //e keyboard to navigate.
 - The boot menu is the only place where you can change the mapping of the USB keys and buttons.
 - To go back to the **A:APPLETINI** prompt at any time, push **Ctrl** + **Open-Apple** + **Reset** together.

5 Use the USB keypad

Connect the keypad to the lower USB-C port (green). Use the keypad to control the Appletini menu and the speed of the Apple //e. Grey keys have no function.

	Menu navigation 8 2 4 6 Move up, down, left or right in the current tab. 9 3 Go to the previous tab (9) or the next tab (3).
	Select and go back Enter OK (push). Configuration menu (push and hold, see the note). ← Back (Backspace key).
	Screenshots 0 Ins Save the Apple screen area only, without effects. . Del Save the full 1920 × 1080 screen, with the bezel and CRT effects.
	Speed / * Set 0.05× speed (/) or 1× speed (*). Push again to cancel. + - Increase (+) or decrease (−) the speed.

- NOTE** The **Enter** key has two functions. In the Appletini menu, push **Enter** to select an item (OK). While the Apple //e operates normally, push and hold **Enter** until the configuration menu opens.

6 Update the firmware

Firmware **F1.1.1** is already installed. To install a newer version, do these steps:

1. Download the latest **FIRMWARE.BIN** from github.com/hasseily/appletini-one/releases/latest.
2. Turn off the Apple //e. Remove the microSD card from the card.
3. Copy **FIRMWARE.BIN** to the root folder of the microSD card. Push the microSD card fully back into the top slot.
4. Turn on the Apple //e.
5. Wait. The card writes and checks the new firmware. Then it changes the file name to **FIRMWARE.OK** and starts normally.

CAUTION Do not turn off the power during the update.

Thank you!

Thank you for your purchase of the Appletini ONE. We hope that it gives your Apple //e a long and exciting new life. For help, news and new software, join the Appletini community on Discord.

— The Appletini team

WEBSITE

appletini.org

DISCORD

discord.gg/MkpzJHrzFd



JOIN US ON
DISCORD