

Chapter 8

Switching

Introduction

- For a very large network topologies such as a mesh or a star are impractical.
- It is also impractical to use a bus topology as the distance between devices and the number of devices increase beyond the capacities of the media and equipment.
- Switching provides a better solution.

Source:<https://www.coursehero.com/file/66044702/switch-designppt/>

Introduction

- Switches are hardware and/or software devices capable of **creating temporary connections** between two or more devices linked to the switch but not to each other.
- A switching network consists of a series of interconnected nodes, called switches.
- In a switching network, some of these nodes are connected to the communicating devices. Others are used for routing.

Source:<https://www.coursehero.com/file/66044702/switch-designppt/>

Figure 8.1 *Switched network*


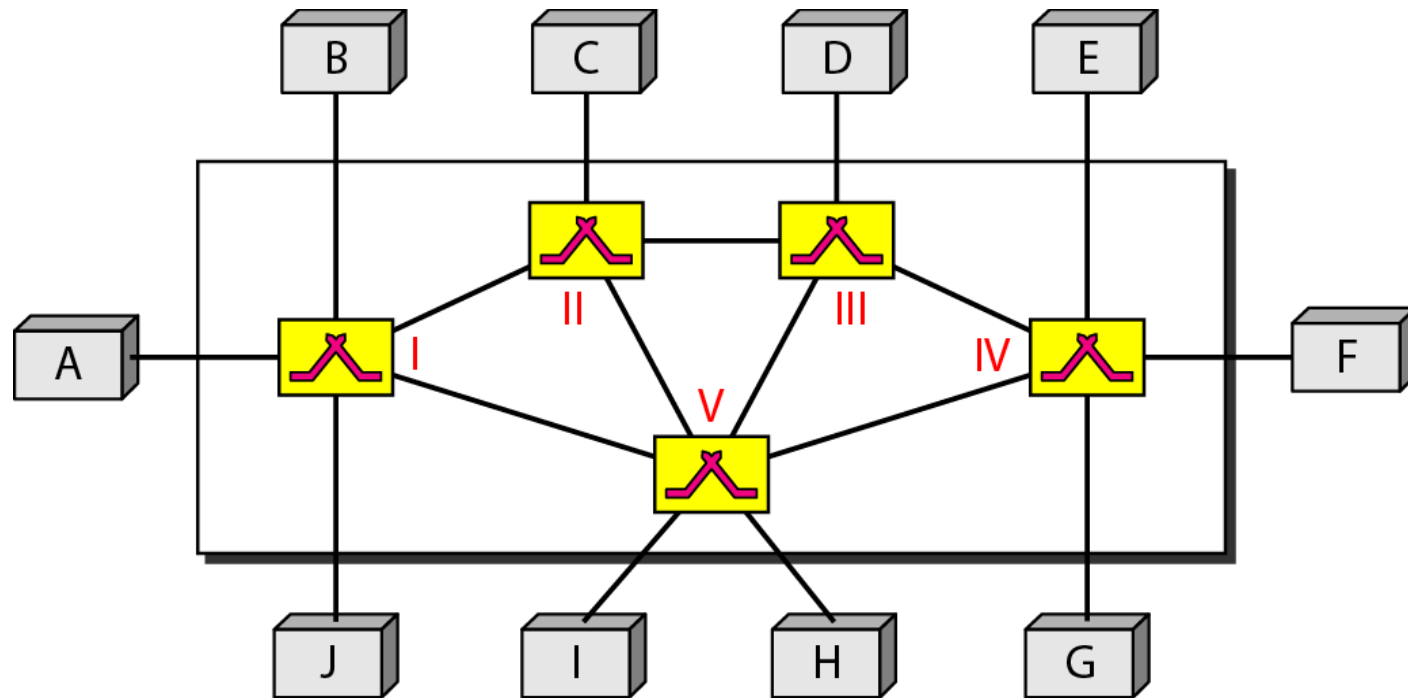


Figure 8.2 *Taxonomy of switched networks*

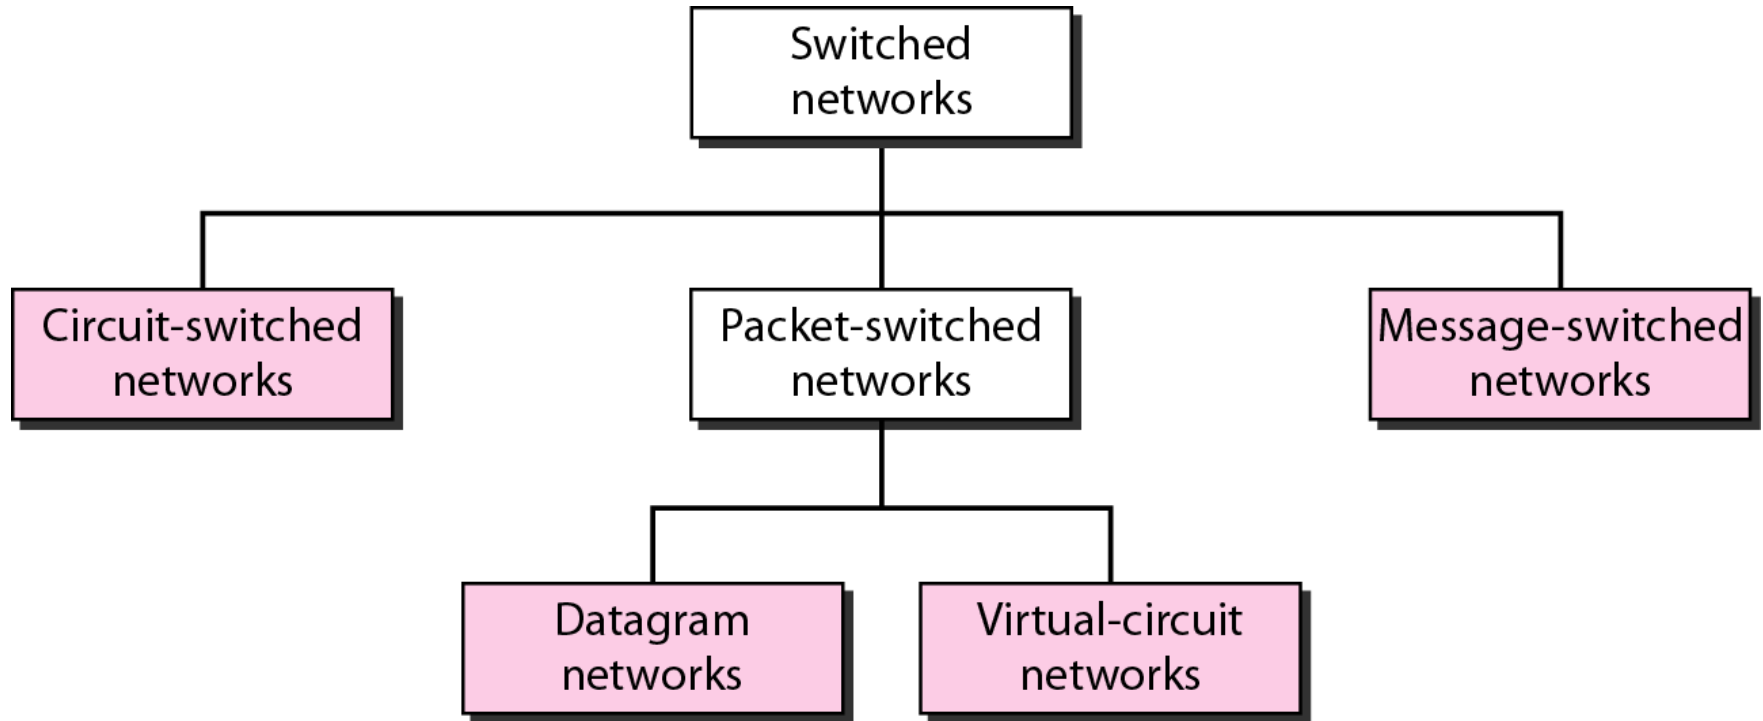

Introduction

- The virtual-circuit networks have some common characteristics with circuit-switched and datagram networks.
- Today the tendency in packet switching is to combine datagram networks and virtual circuit networks.
- Networks route the first packet based on the datagram addressing idea, but then create a virtual-circuit network for the rest of the packets coming from the same source and going to the same destination.

Introduction

- In message switching, each switch stores the whole message and forwards it to the next switch.
- Message switching is not used at lower layers in the current era; it is still used in some applications like electronic mail (e-mail).

8-1 CIRCUIT-SWITCHED NETWORKS

A circuit-switched network consists of a set of switches connected by physical links. A connection between two stations is a dedicated path made of one or more links. However, each connection uses only one dedicated channel on each link. Each link is normally divided into n channels by using FDM or TDM.

Topics discussed in this section:

Three Phases

Efficiency

Delay


Circuit-Switched Technology in Telephone Networks



Note

A circuit-switched network is made of a set of switches connected by physical links, in which each link is divided into n channels.

Figure 8.3 *A trivial circuit-switched network*

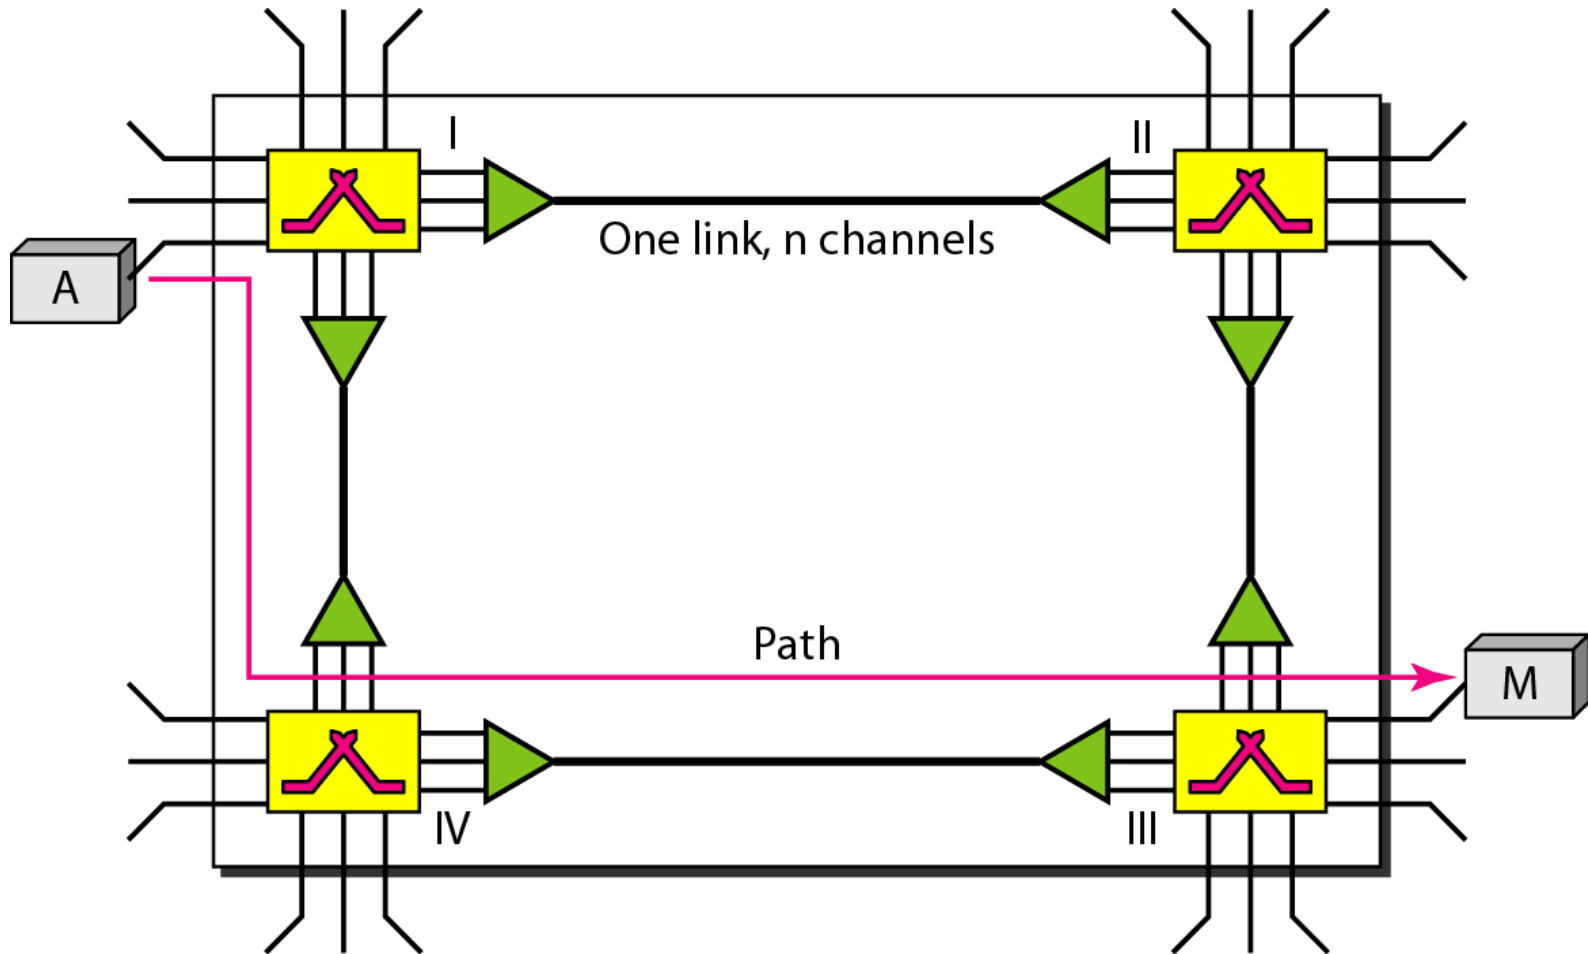

Note


In circuit switching, the resources need to be reserved during the setup phase; the resources remain dedicated for the entire duration of data transfer until the teardown phase.



Example 8.1

As a trivial example, let us use a circuit-switched network to connect eight telephones in a small area. Communication is through 4-kHz voice channels. We assume that each link uses FDM to connect a maximum of two voice channels. The bandwidth of each link is then 8 kHz. Figure 8.4 shows the situation. Telephone 1 is connected to telephone 7; 2 to 5; 3 to 8; and 4 to 6. Of course the situation may change when new connections are made. The switch controls the connections.

Figure 8.4 *Circuit-switched network used in Example 8.1*

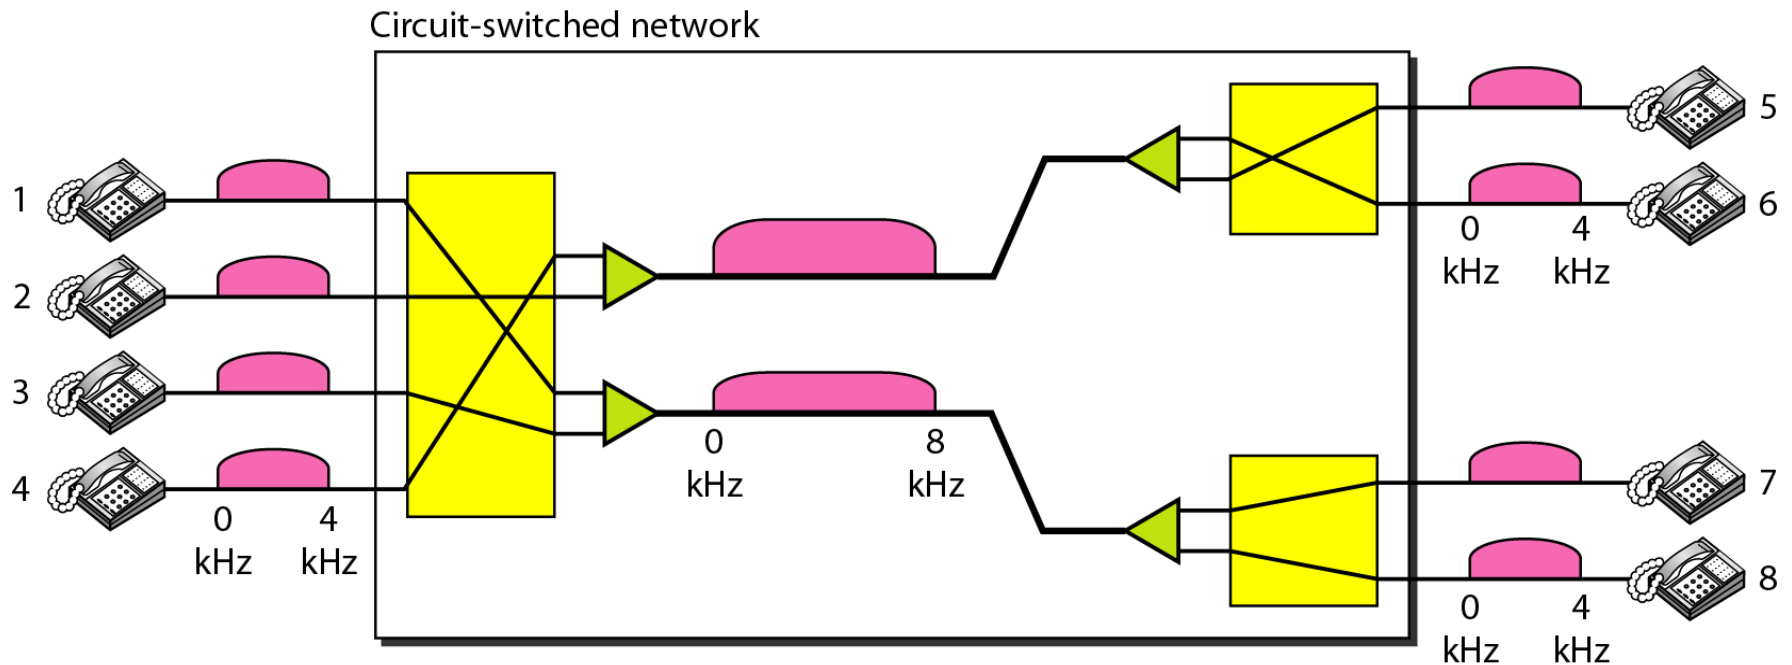



Example 8.2

As another example, consider a circuit-switched network that connects computers in two remote offices of a private company. The offices are connected using a T-1 line leased from a communication service provider. There are two 4×8 (4 inputs and 8 outputs) switches in this network. For each switch, four output ports are folded into the input ports to allow communication between computers in the same office. Four other output ports allow communication between the two offices. Figure 8.5 shows the situation.

Figure 8.5 *Circuit-switched network used in Example 8.2*


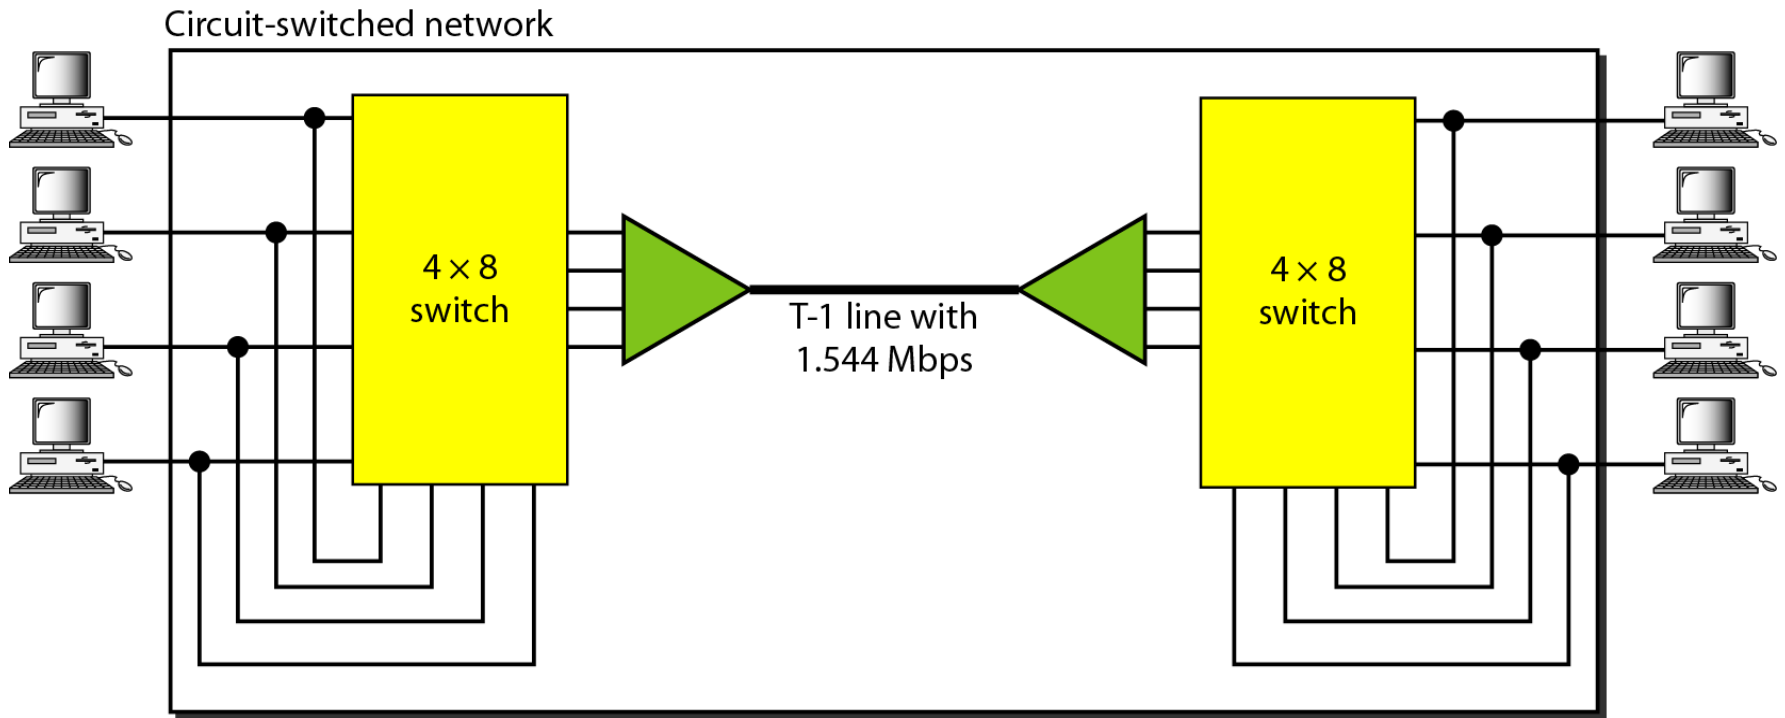


Figure 8.6 *Delay in a circuit-switched network*

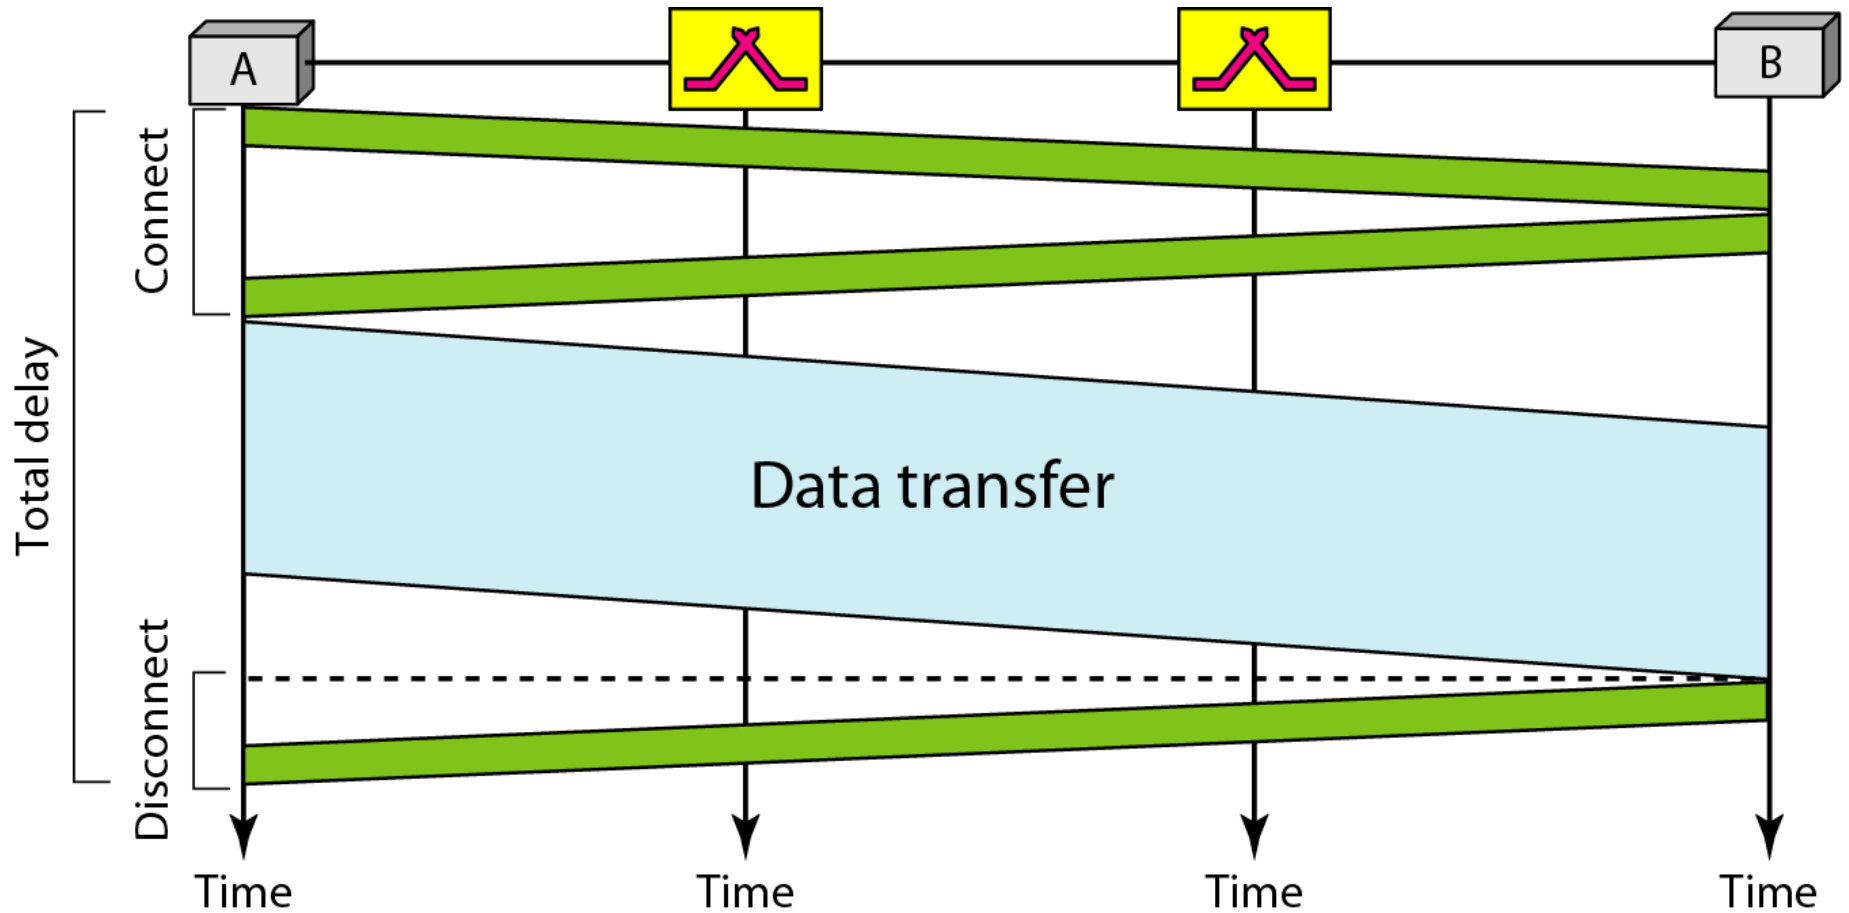

Note

Switching at the physical layer in the traditional telephone network uses the circuit-switching approach.

8-2 DATAGRAM NETWORKS

In data communications, we need to send messages from one end system to another. If the message is going to pass through a packet-switched network, it needs to be divided into packets of fixed or variable size. The size of the packet is determined by the network and the governing protocol.

Topics discussed in this section:

Routing Table

Efficiency

Delay

Datagram Networks in the Internet

Note

In a packet-switched network, there is no resource reservation; resources are allocated on demand.

Figure 8.7 *A datagram network with four switches (routers)*


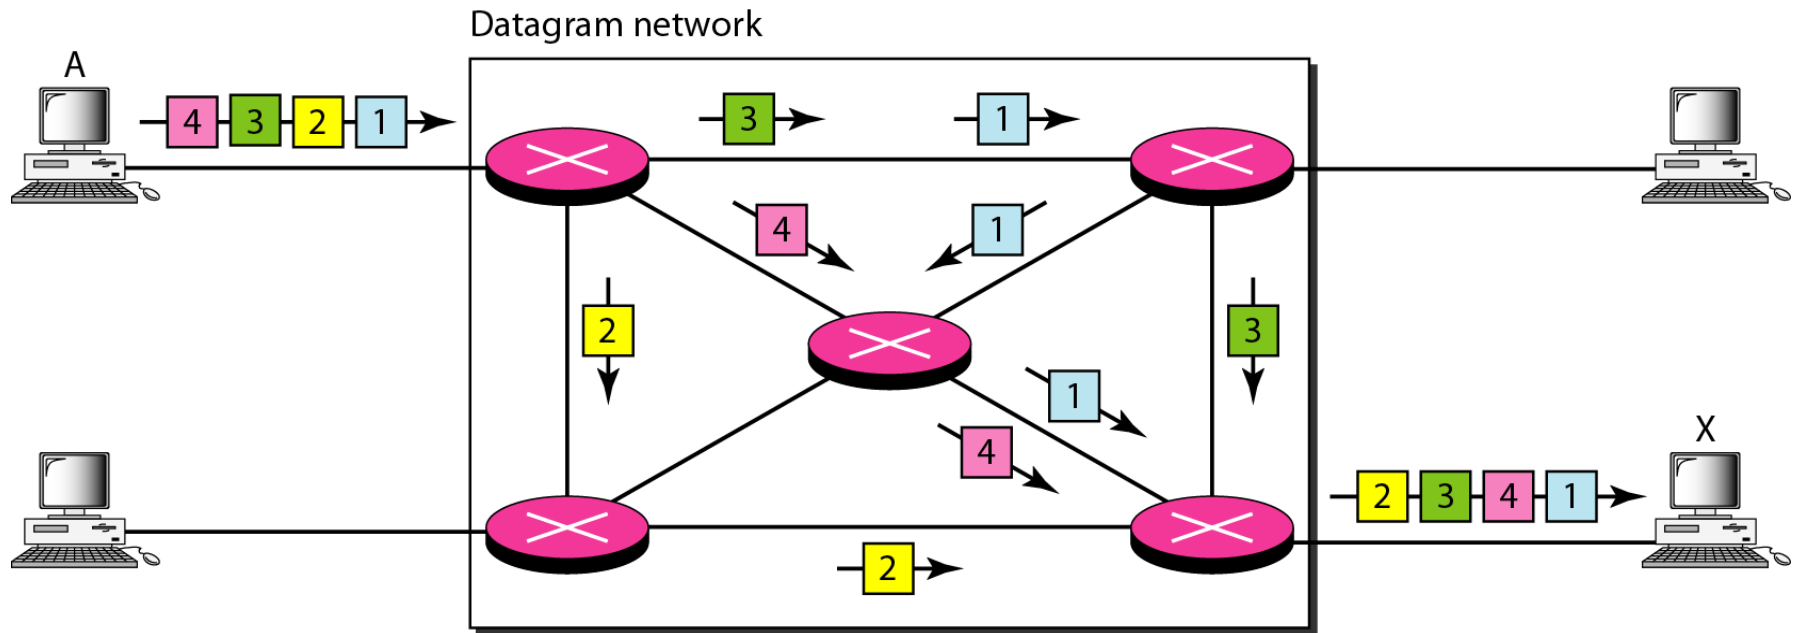


Figure 8.8 *Routing table in a datagram network*



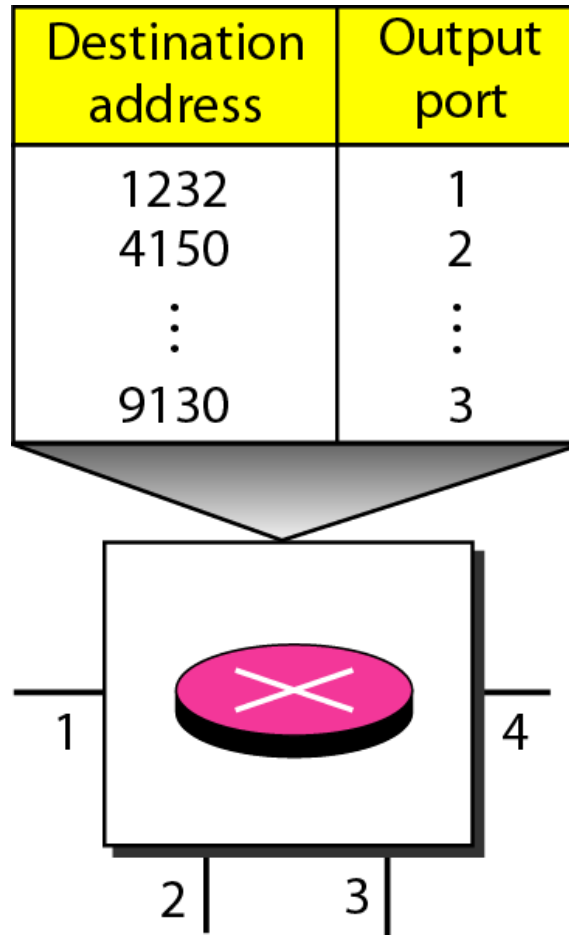


Note

A switch in a datagram network uses a routing table that is based on the destination address.

Note

The destination address in the header of a packet in a datagram network remains the same during the entire journey of the packet.

Figure 8.9 *Delay in a datagram network*

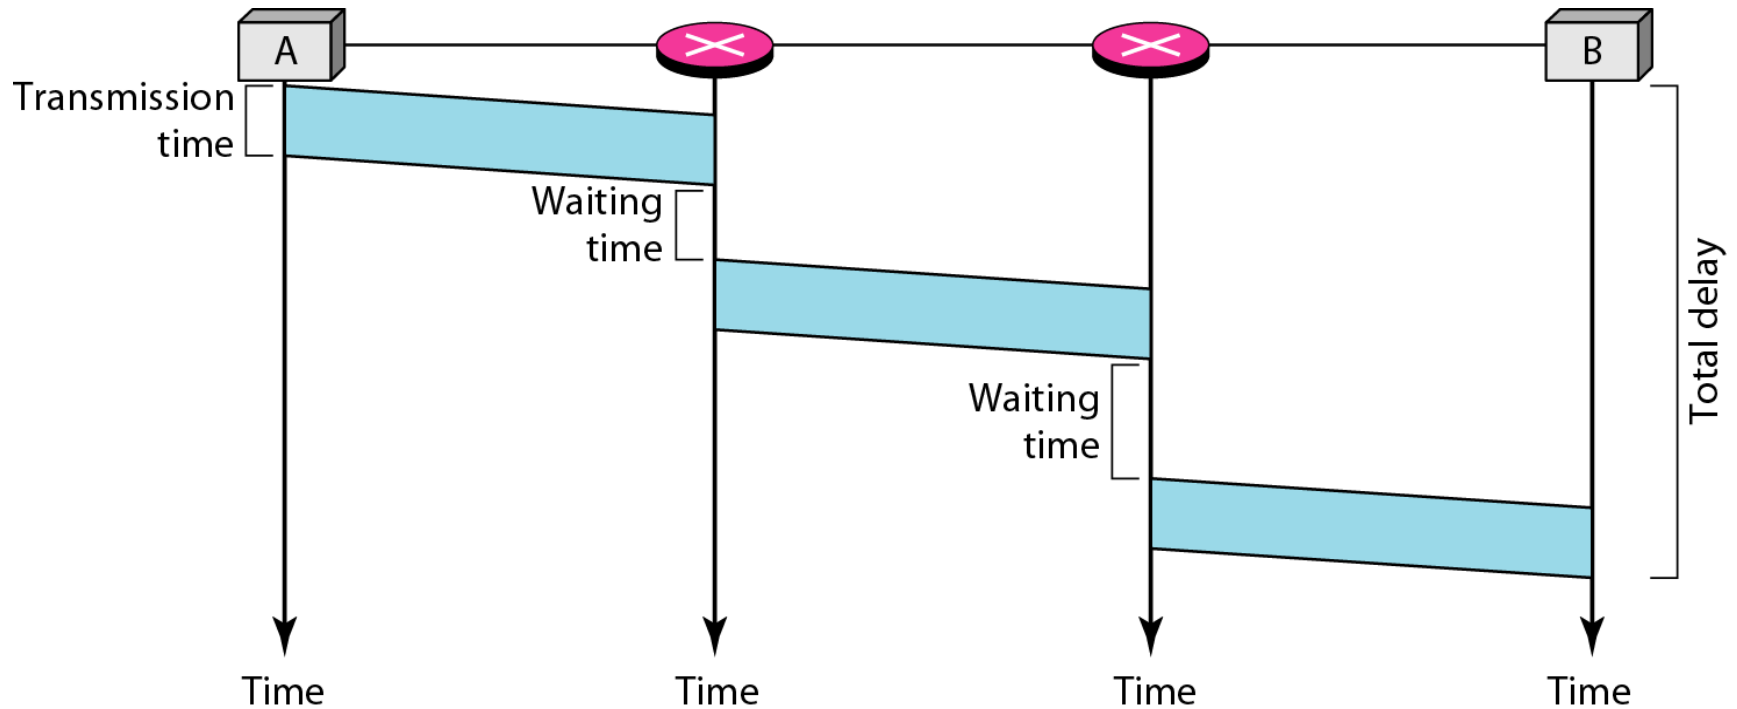



Note

**Switching in the Internet is done by
using the datagram approach
to packet switching at
the network layer.**

8-3 VIRTUAL-CIRCUIT NETWORKS

A virtual-circuit network is a cross between a circuit-switched network and a datagram network. It has some characteristics of both.

Topics discussed in this section:

Addressing

Three Phases

Efficiency

Delay

Circuit-Switched Technology in WANs

Figure 8.10 *Virtual-circuit network*

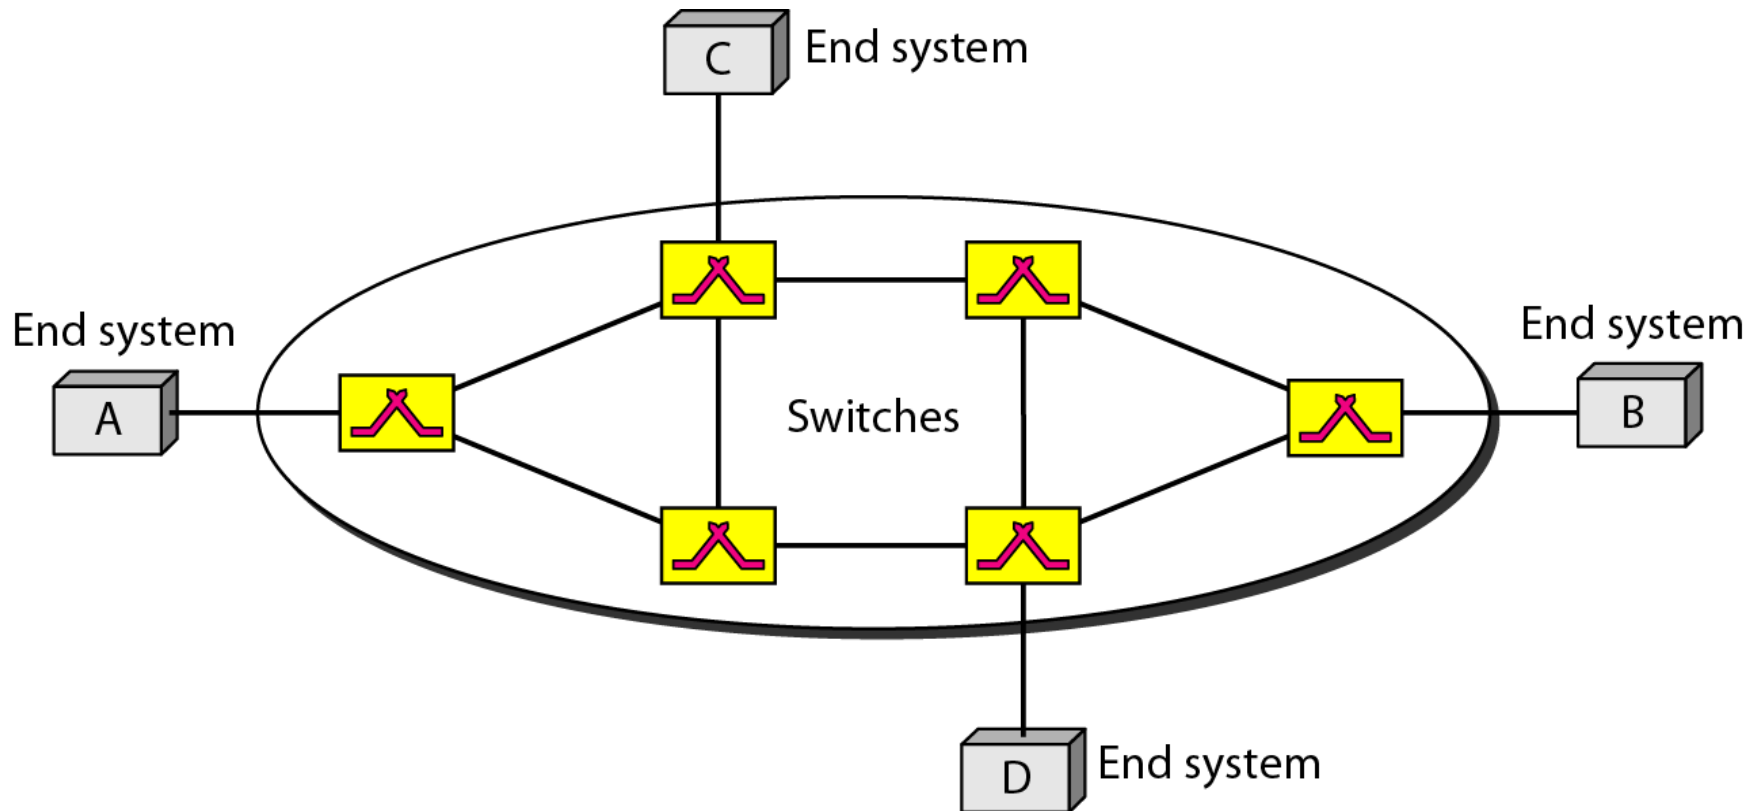


Figure 8.11 *Virtual-circuit identifier*

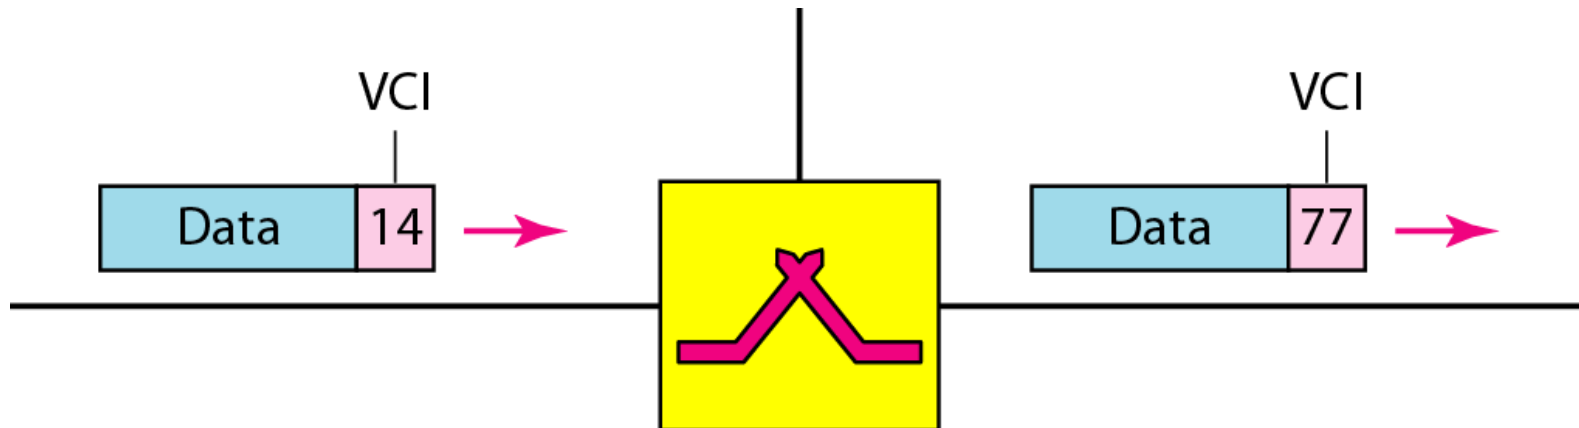


Figure 8.12 *Switch and tables in a virtual-circuit network*

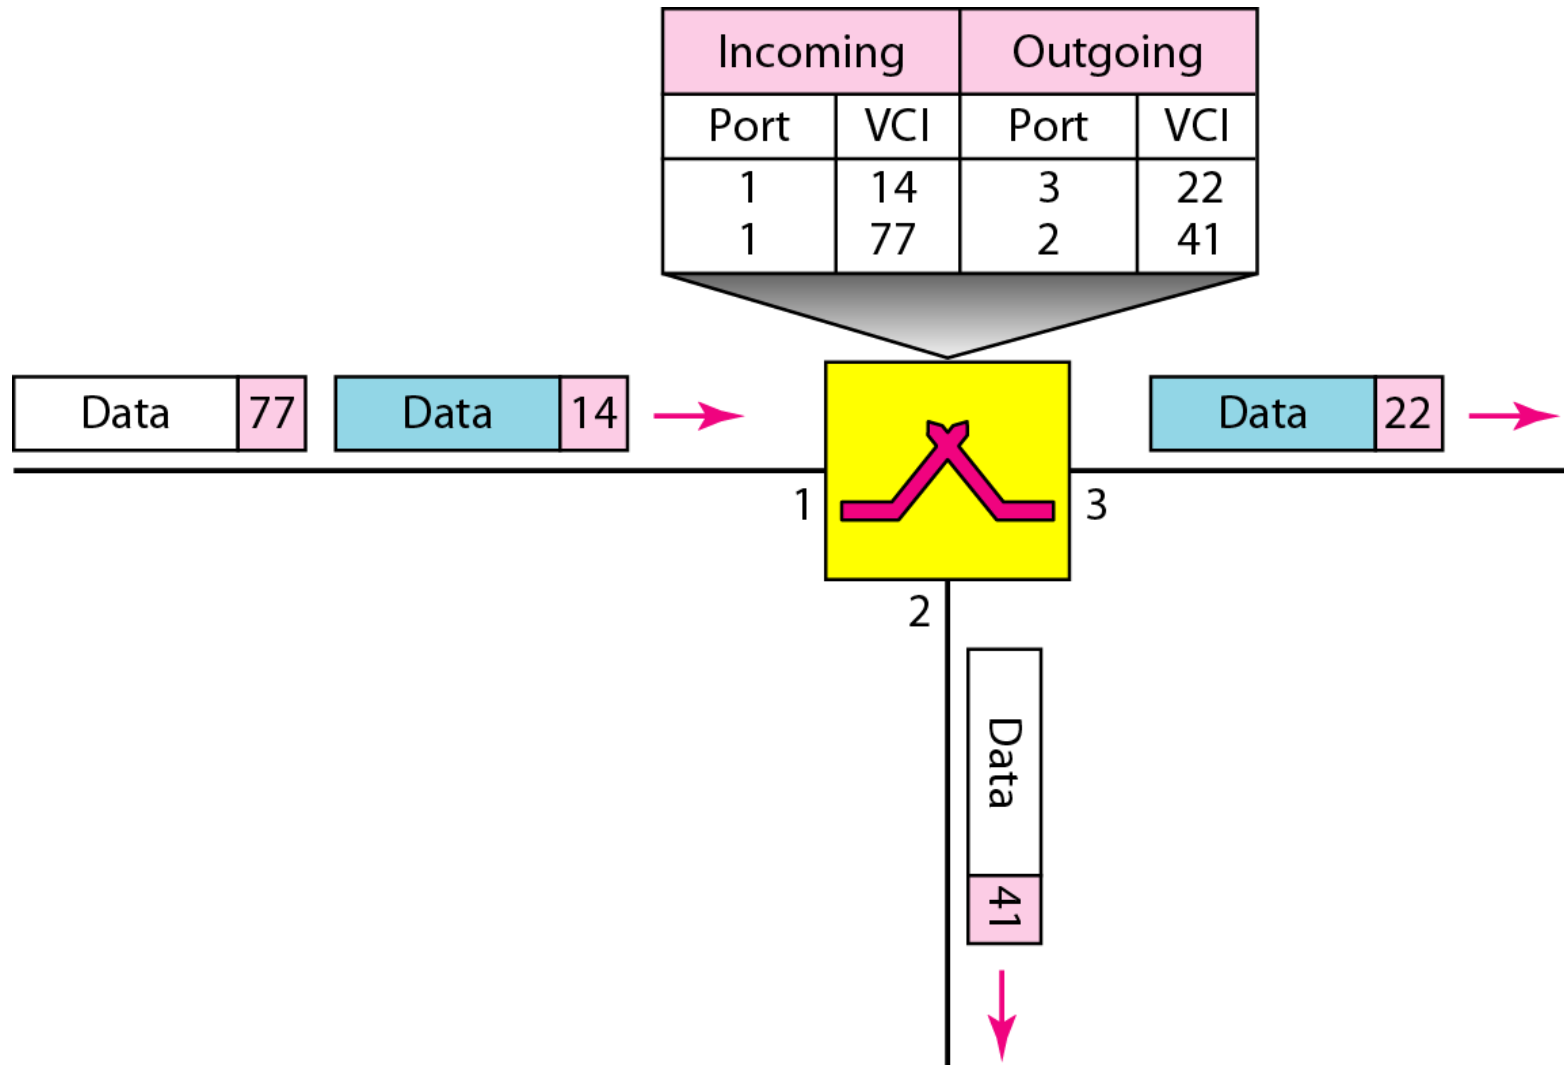


Figure 8.13 *Source-to-destination data transfer in a virtual-circuit network*

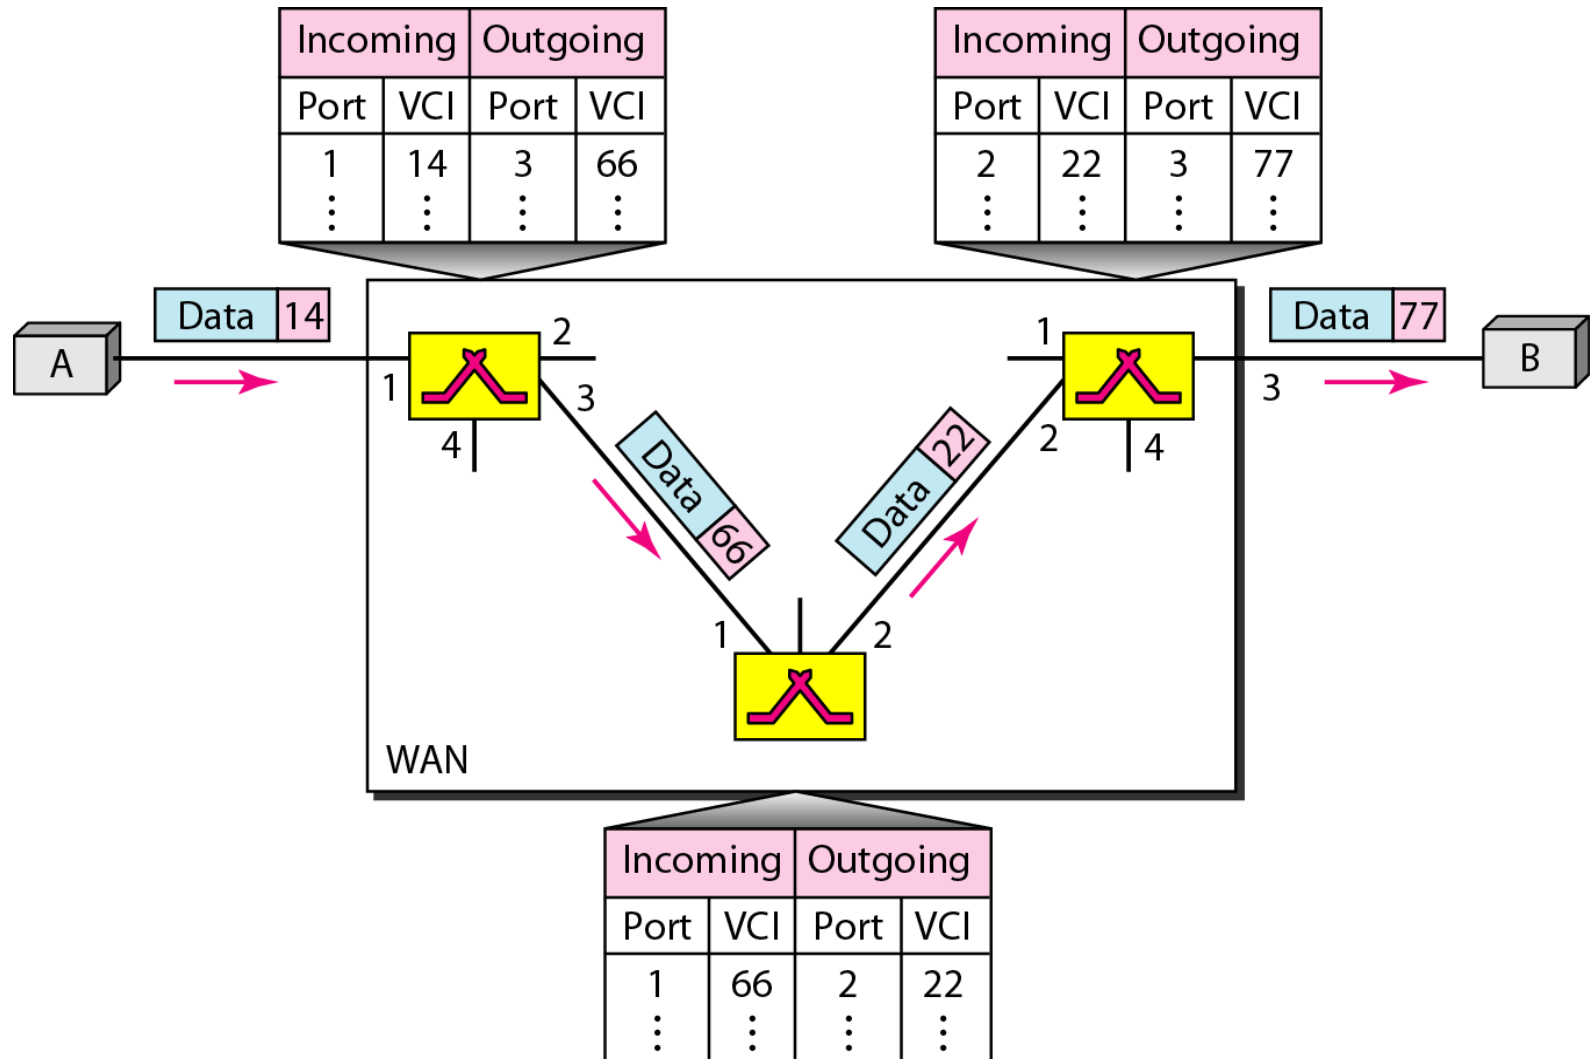


Figure 8.14 *Setup request in a virtual-circuit network*


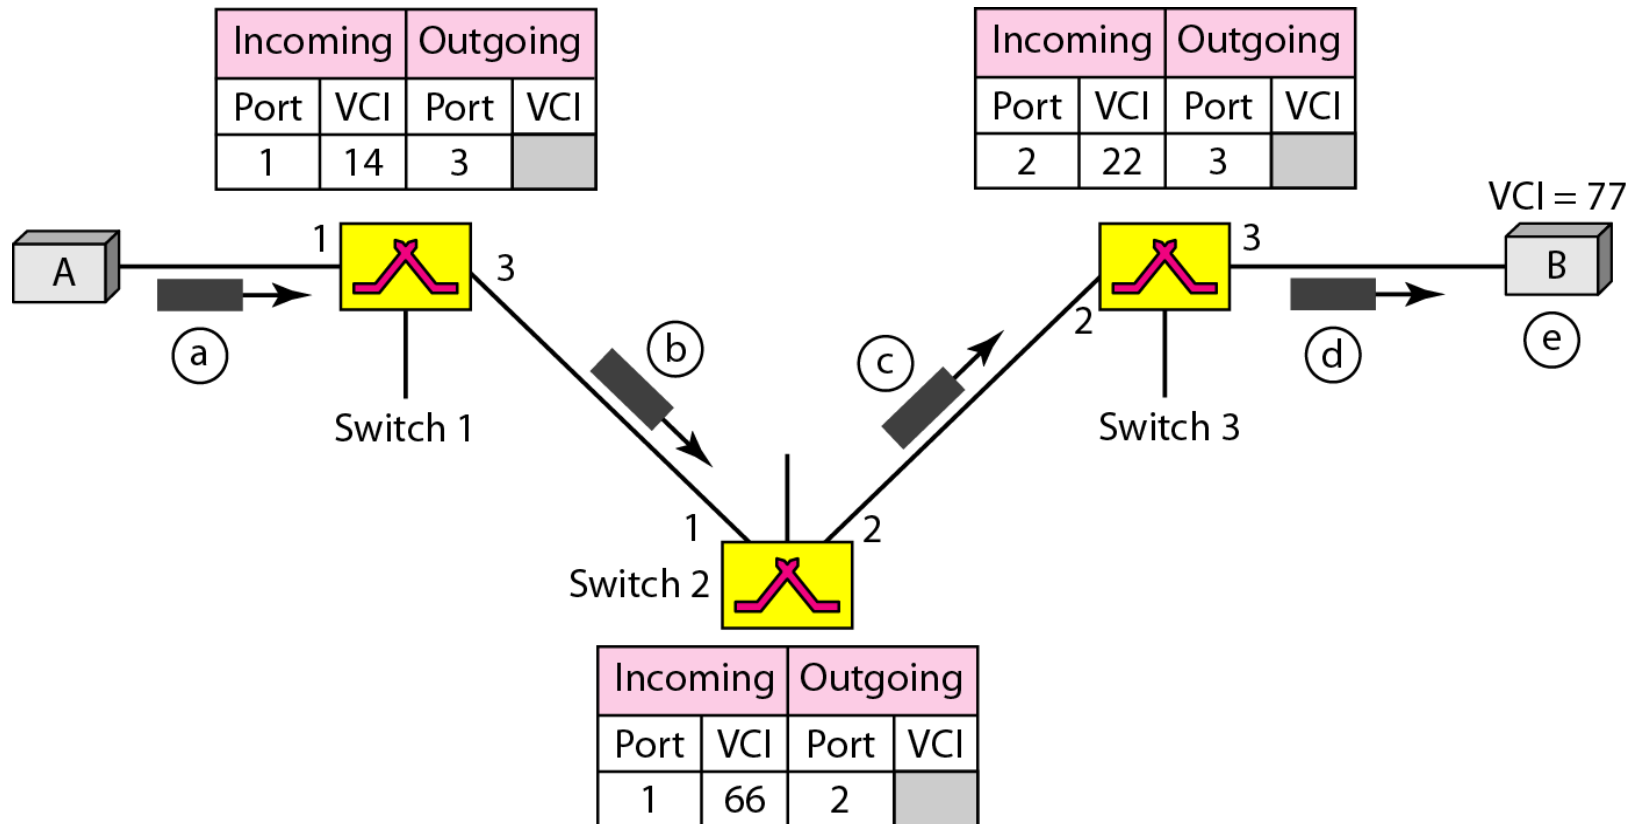



Figure 8.15 *Setup acknowledgment in a virtual-circuit network*

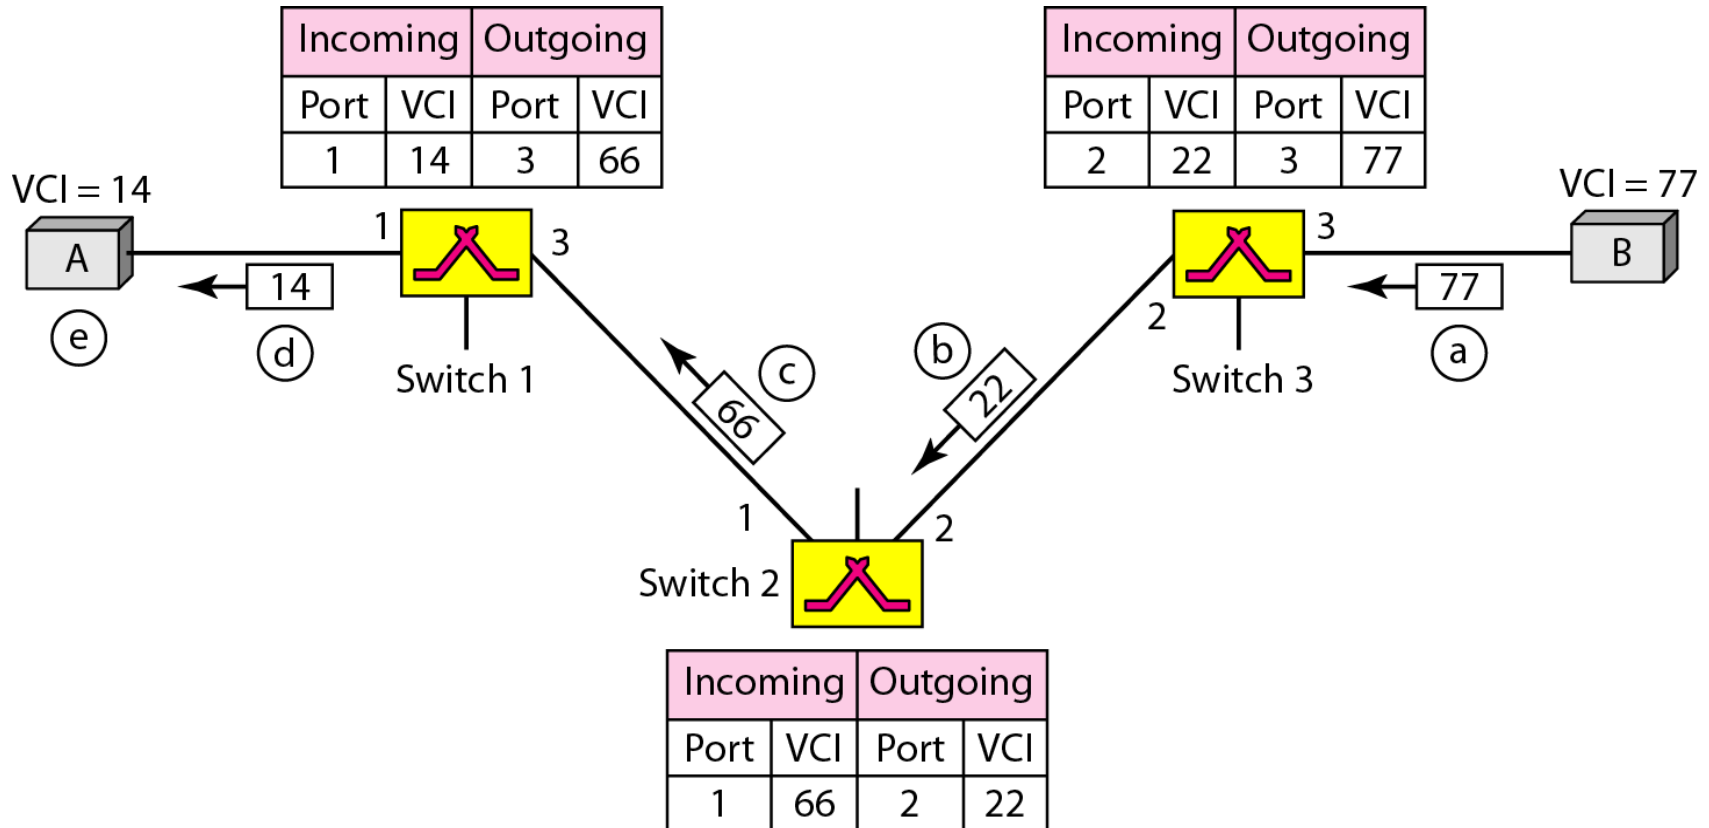

Note

In virtual-circuit switching, all packets belonging to the same source and destination travel the same path; but the packets may arrive at the destination with different delays if resource allocation is on demand.

Figure 8.16 *Delay in a virtual-circuit network*

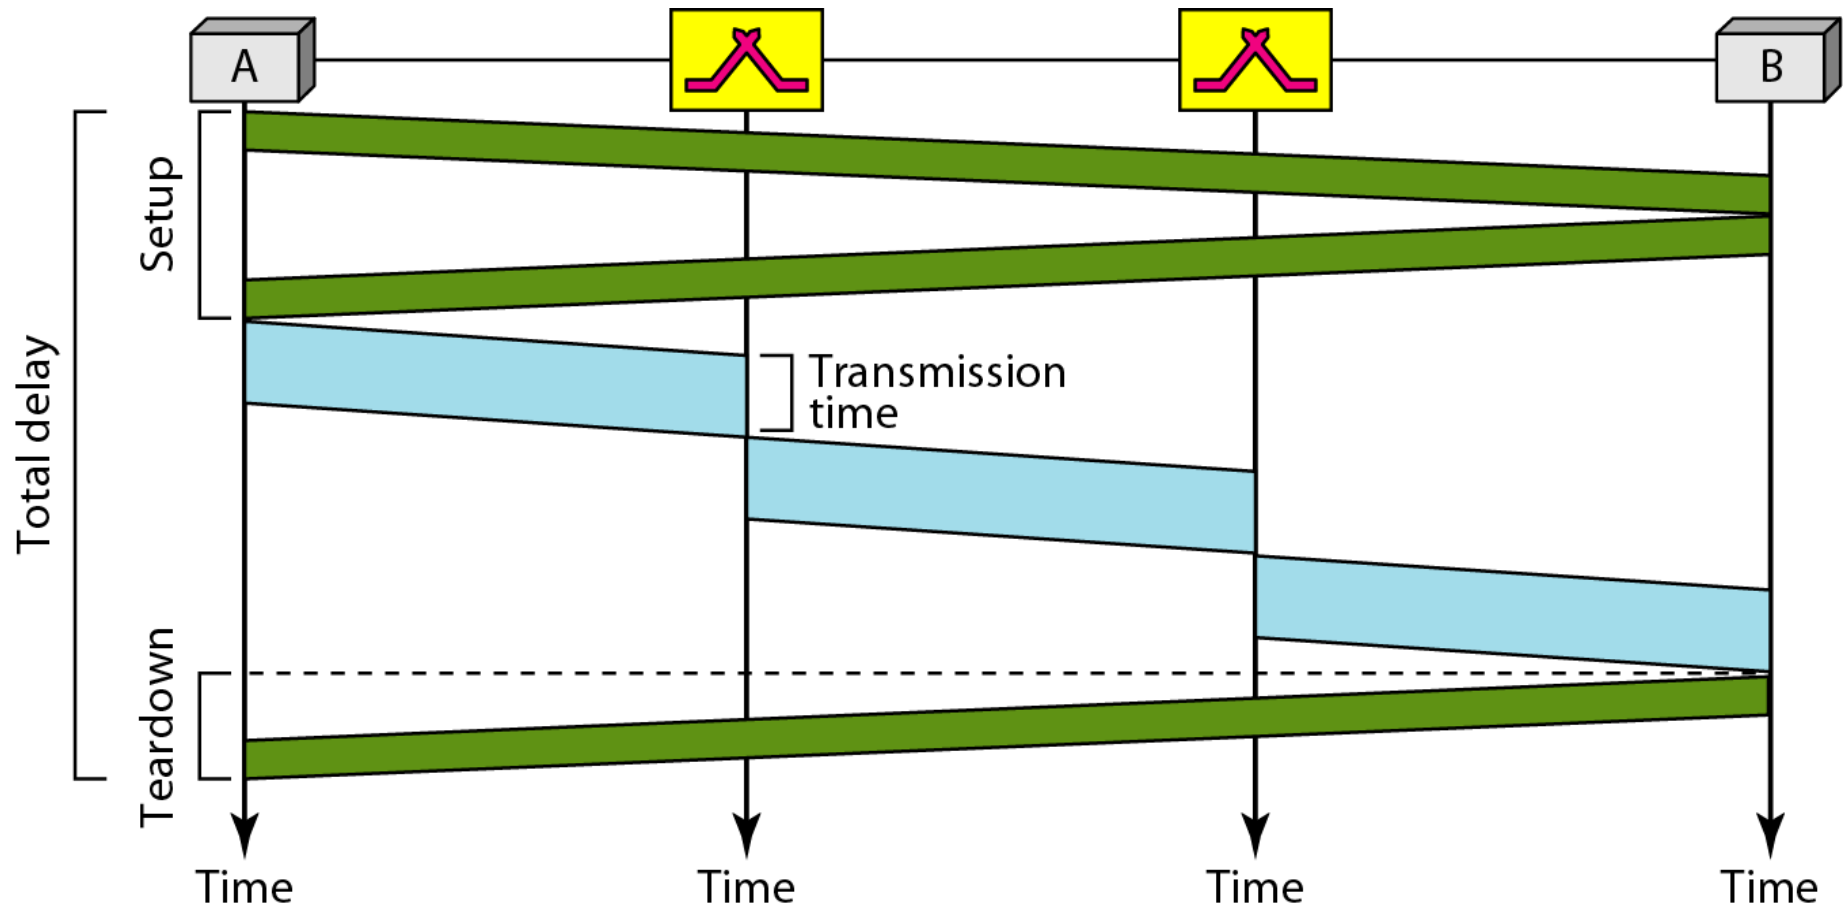



Note

Switching at the data link layer in a switched WAN is normally implemented by using virtual-circuit techniques.