
apaiser


installation & care manual

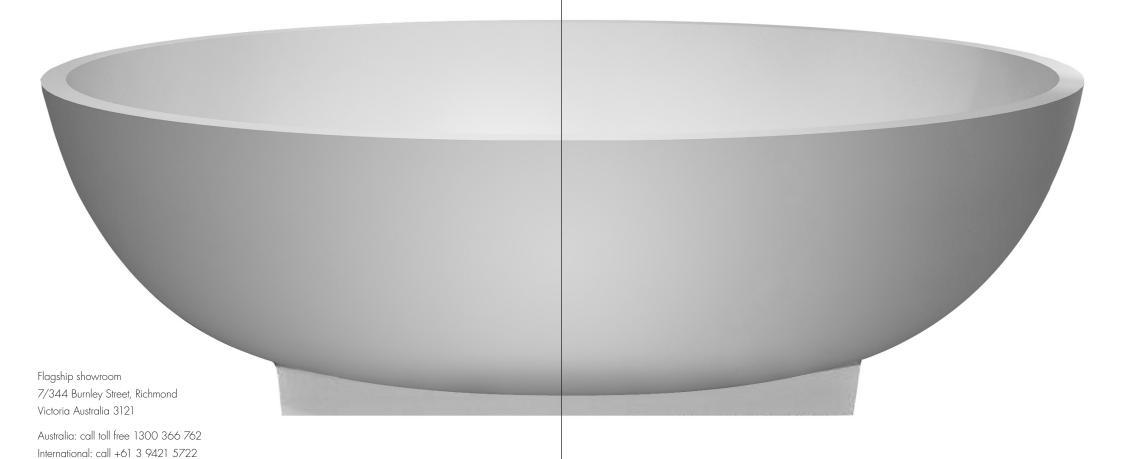

Email: info@apaiser.com.au www.apaiser.com.au


$\stackrel{\text{step}}{-\!\!\!-\!\!\!-}$ one

Your apaiser bath will arrive in a timber crate that has trolley jack access.

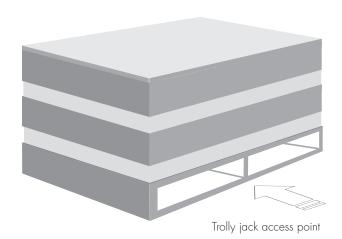


step three

Remove the four sides of the crate.

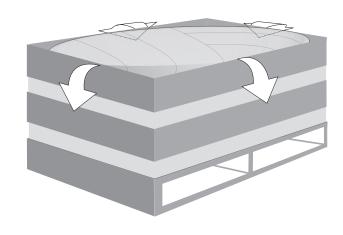


$\stackrel{\text{step}}{-}$ two

Remove the lid from the crate.

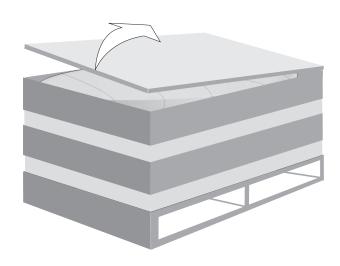

$\stackrel{\text{step}}{=}$ four

Remove the protective foam from around the bath.

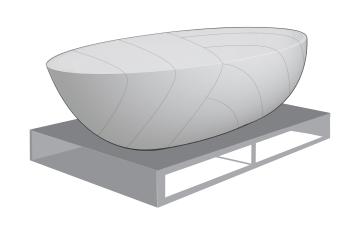


step five

Your apaiser bath will be wrapped in a protective film. Leave this film wrap on the bath until the waste has been connected. On the floor of the bath you will find:

(a) installation & care instructions (b) chrome pop-up waste

Remove these items from the bath.

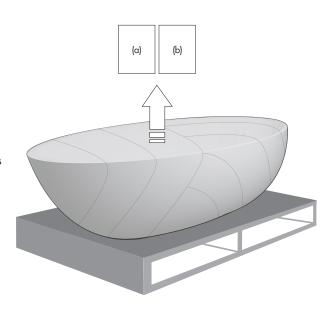



stone composite bathware

step seven

Carefully place your bathtub on supports (approx. h= 140mm) and locate the bath over the waste connection in the floor. Adjust to the desired position.


Note: Your apaiser bathtub must be installed on a perfectly level floor surface. The levelling of the bathtub must be done on site, during the fixing stage, using supports or adjustable rests

step Six

Carefully remove the bath from the pallet/skid.

Important: When moving the bath, it is recommended that a trolley or another form of lifting device is used.

When any manual lifting is required, please ensure that you have enough people to safely lift and lower the bath into position.

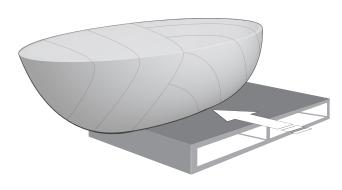


step eight

Insert the plug and drain into the bathtub and fit off waste as per standard.

Important: do not over tighten the waste.

Note: (only applicable if your bath has an overflow) Please ensure that the hole in waste aligns with overflow discharge point in bath.

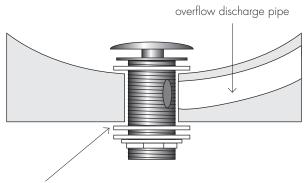

Apply a small bead of bathroom grade silicone to the top of the bottom rubber washer.

step nine


Test the water tightness of all connections (this is made possible by the wooden spacers the bathub is supported on). If no leaks are detected during the testing process, carefully remove the wooden spacers avoiding any sudden movements. Remove the protective film from the bath. Carefully lower the bathtub onto the floor in the chosen position and seal the perimeter edge with silicone



step ten

Finally, to protect the newly installed bath from other builders or materials, we recommend you use a plastic tarp or cloth to cover the bath.

Special note: If there is no access to connect a trap to the bath waste supplied, a 40mm PVC expansion joint with a 40mm PVC cap and lining is recommended to be used to connect the bath at final fit-off.

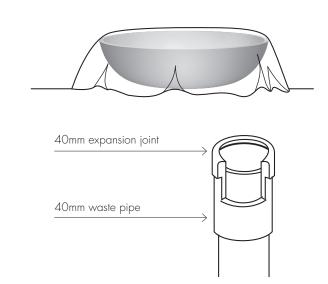

Cleaning and care of your apaiser bathware product

As you will be aware, each item produced by apaiser is unique, an outcome of the hand finishing processes used and which form an integral part of the creation of the item. As such, this hand finishing reflects the organic and natural materials used in the process of creating the apaiser bathware range. Unlike other stone and concrete stone composite bathware, apaiser's unique formulation requires no sealing or extra preparation before use or during its life.

The core properties of the apaiser stone composite mean that the product is inert and non-porous, throughout the material. On unpacking and installation of your product wash the item with warm soapy water. To remove any marks left behind during installation and delivery, or if a stain or substance is left on the surface, such as pen, essential oils or just simple soap and bath oils, use a standard bathroom cleaner such as Windex. For more substantial stains or marks then a more aggressive cleaner such as Jif or a similar product such as Domestos can be applied.

The properties of the material mean these cleaners will not damage the surface of the bathware. If a very significant stain such as crayon, rubber or even nail polish was to be left on the surface then acetone, applied with a WHITE cloth may be used to remove the stain. Acetone is in fact used in the production process to remove sanded residue after the item has been hand sanded. Should your apaiser bathware item ever be scratched then this may be removed easily.

Simply use "Wet n Dry" 1000 grit sandpaper, applied with water and gently sand out the scratch. Then clean the surface with acetone, applied with a WHITE cloth. This will restore the surface to its original state.

Use of cleaning products containing sulfamic acid (e.g. "Easy Off Bam") are NOT recommended and will void the manufacturer's warranty.

If you require any further information or would like some more advice on the care and use of your apaiser item please feel free to contact us on the following numbers:

Call: +61 3 9421 5722 Fax: +61 3 9421 5733 Email: info@apaiser.com.au

stone composite bathware

7/ 344 Burnley Street, Richmond Victoria Australia 3121

