

BEARINGS ARE MAGNETIC.
ALTITUDES, DISTANCES,
ELEVATIONS AND HEIGHTS
IN METERS.

ILS/LOC
110.3 ILL
ELEV 134.0
ILS/GP
333.8

ILS/GP
335.0

ILS/LOC
109.9 IMJ

ILS/LOC
111.10 ICC

ILS/GP
330.20

ILS/GP
331.70


ILS/LOC
110.70 IDG

Legend:
HS1 : Hot spot
Construction area

320 0 320 640 960m



Bearing strength	RWY	Direction
PCR 1390/R/B/W/T: RWY05L/23R ASPH	05L/R	051°
PCR 880/R/A/W/T: RWY05R/23L CONC	23L/R	231°
PCR 1270/F/B/W/T: TWY Y		
PCR 1260/R/A/W/T: TWY B11		
PCR 1220/R/B/W/T: TWY B12, B13		
PCR 1170/R/B/W/T: TWY V, V0-V2		
PCR 1120/R/A/W/T: TWY B8, B14		
PCR 1110/R/B/W/T: TWY A(N of TWY B16, BTN B16 & B18), A0, A7, A8		
PCR 1100/R/A/W/T: TWY B4		
PCR 1070/R/A/W/T: TWY B5-B7		
PCR 970/R/A/W/T: TWY B1-B3, C3-C5, S, S1, S2, V5-V8		
PCR 960/F/B/W/T: TWY A1		
PCR 960/R/B/W/T: TWY B(N of B18), B9, B10		
PCR 950/R/A/W/T: TWY B15, B16, C1, C2		
PCR 920/F/B/W/T: TWY A2, A3, A5, A6		
PCR 920/R/A/W/T: TWY V4		
PCR 910/R/A/W/T: TWY B17, B18, C(N of C7), C6, C7, W(N of V9)		
PCR 890/R/A/W/T: TWY V3		
PCR 880/R/A/W/T: TWY H1, H2, H7-H9, W(S of V9), W5, W11		
PCR 870/R/A/W/T: TWY A(S of TWY B18), B(S of B18), B19, B20, C(S of C7), C8-C14, D, D1-D3, D9, D10, E, E1-E10, G, T1, T2, U1, U2		
PCR 830/R/A/W/T: TWY D4-D8		
PCR 820/R/A/W/T: TWY V9		
PCR 690/R/A/W/T: TWY V10, V12, V13, W1-W4, W9, W10		
PCR 650/R/A/W/T: TWY R1, R2		

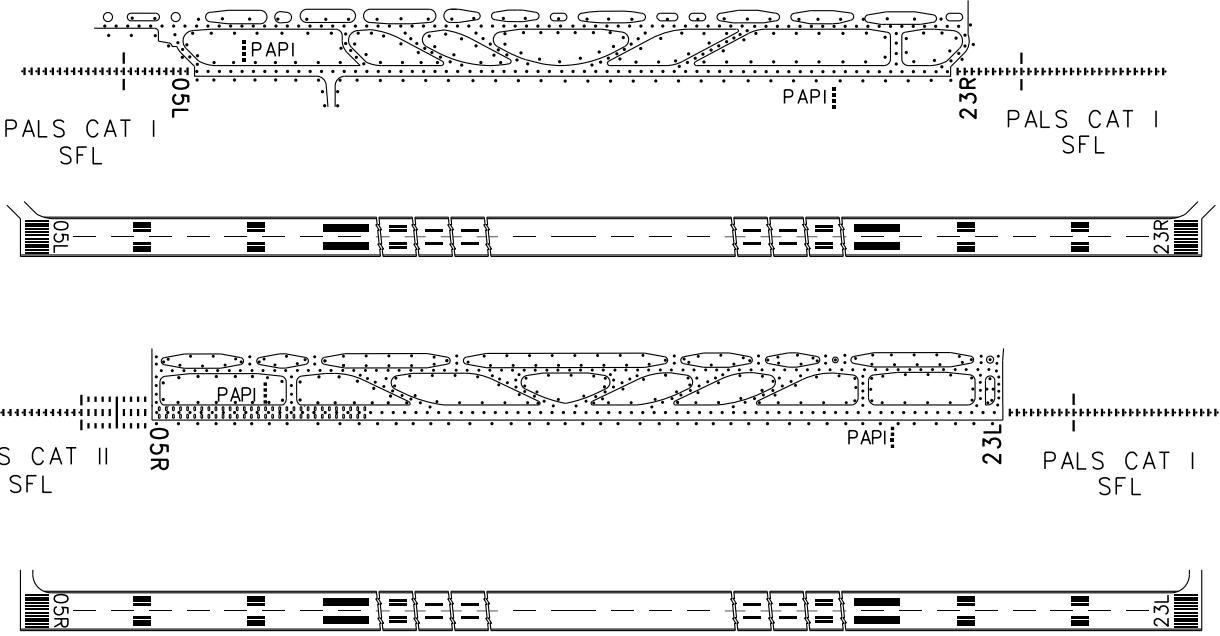

TAKE-OFF MINIMA(WITH RELIABLE ALTN)(m)					LIGHTS		
ACFT Type		RWY05L/R,23L/23R		RWY05L/23R	RWY05R/23L	RWY05L/23L/23R	RWY05R
		REDL	NIL(Day only)	LVP in force, REDL RCLL			
2 TURB ENG or 3&4 ENG	A					PALS CAT I SFL PAPI REDL RCLL RENL	PALS CAT II SFL PAPI RTZL REDL RCLL RENL
	B	RVR400	RVR500	^{HUD} RVR150	RVR200		
	C	VIS800	VIS800				
	D						
Other 1&2 ENG		VIS1600					
Note: Nil							

Changes: TWYs R1, R2, PCR, construction area.