


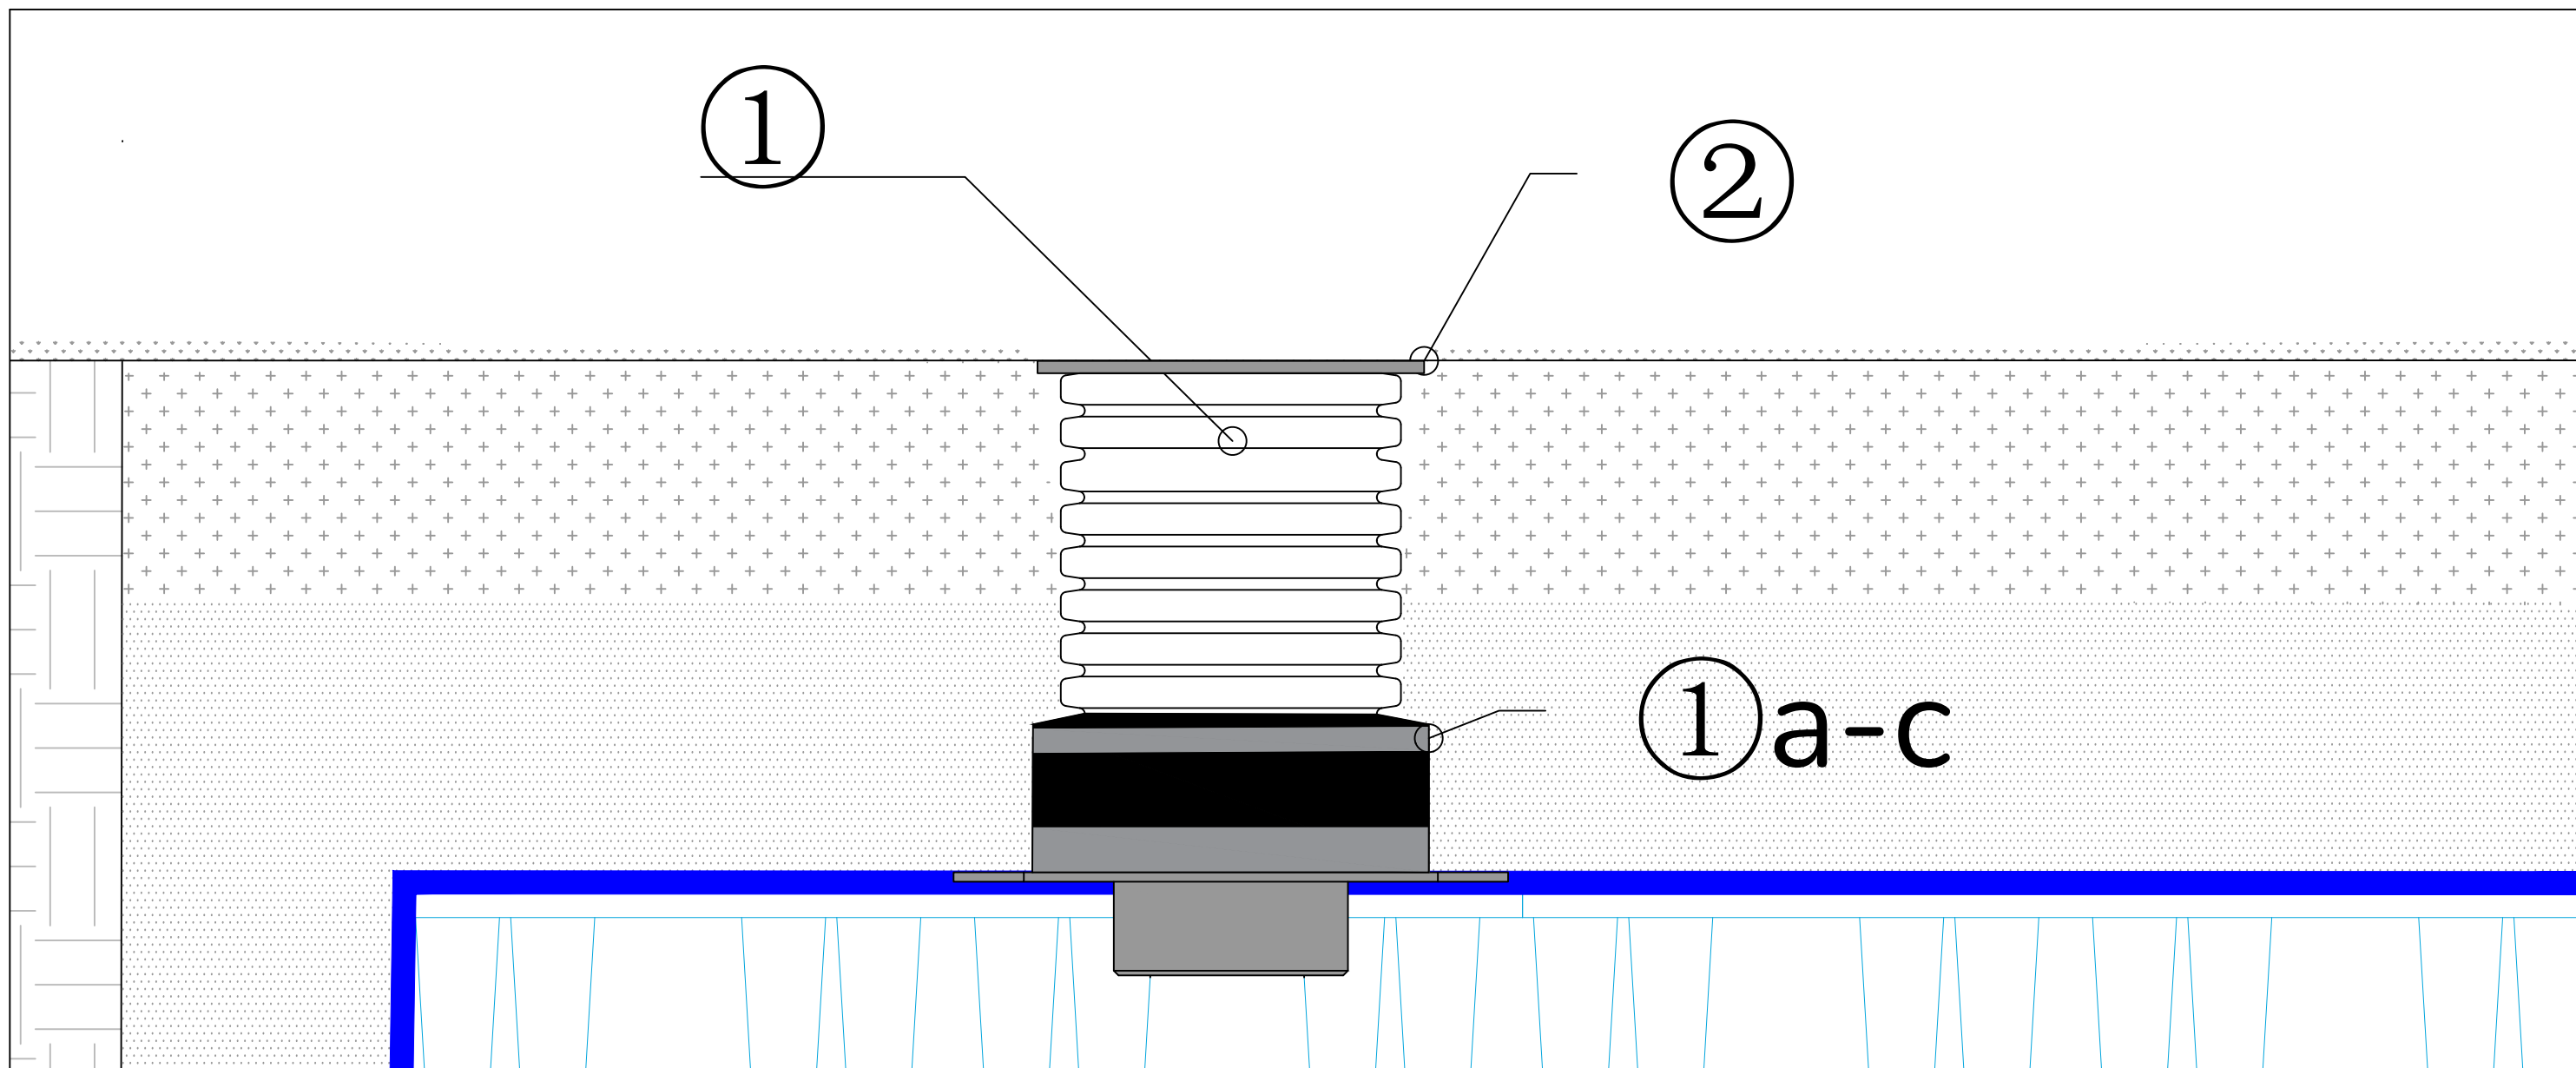

Notes:

1. For connection to **16" Top Adapter (2476842000)**, use 12" HDPE (ASTM D2321 / F2648) pipe for vertical connection < 8 ft. from top of AquaCell to surface (**Non-Traffic**).
 - a. Locate cutout points at the top of the AquaCell system where the Top Adapter will be installed.
 - b. Cut the fabric on top and install the top adapter in previously cored 10" open hole, spigot end first.
 - c. Install 12" HDPE inside the top adapter & secure the fabric around the adapter / base of HDPE riser with steel bands or appropriate corrosion resistant protection tape.
2. Provide a frame/grate appropriate to the application that takes into account local traffic and soil conditions (**Provided by others**).
2. Install a PVC Inline Drain or similar coupler (if needed) that transitions 12" HDPE pipe at surface to the appropriately sized frame/grate for the application (**Provided by others**).
3. Additional vertical riser pipe options with 16" Top Adapter include 18" PVC SCH.40 meeting ASTM D2665 (**Not Shown**).
4. Reference **AquaCell Installation Guide** for further information and instructions related to AquaCell Top Adapter, vertical pipe, and geosynthetics installation.



Managing water better since 1955.

950 Winter Street
Waltham, MA 02451
wavin.us
wavintechsupport@orbia.com



The design details/specifications presented in this document are for informational purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com

Title: AquaCell Vertical Riser Connection Detail (Non-traffic)

Date: 7/1/2025	Scale: NTS	Drawing: AQ-100-06	Rev: 3
Drawn: HJD	Approved: JS	Sheet: 1 of 1	