


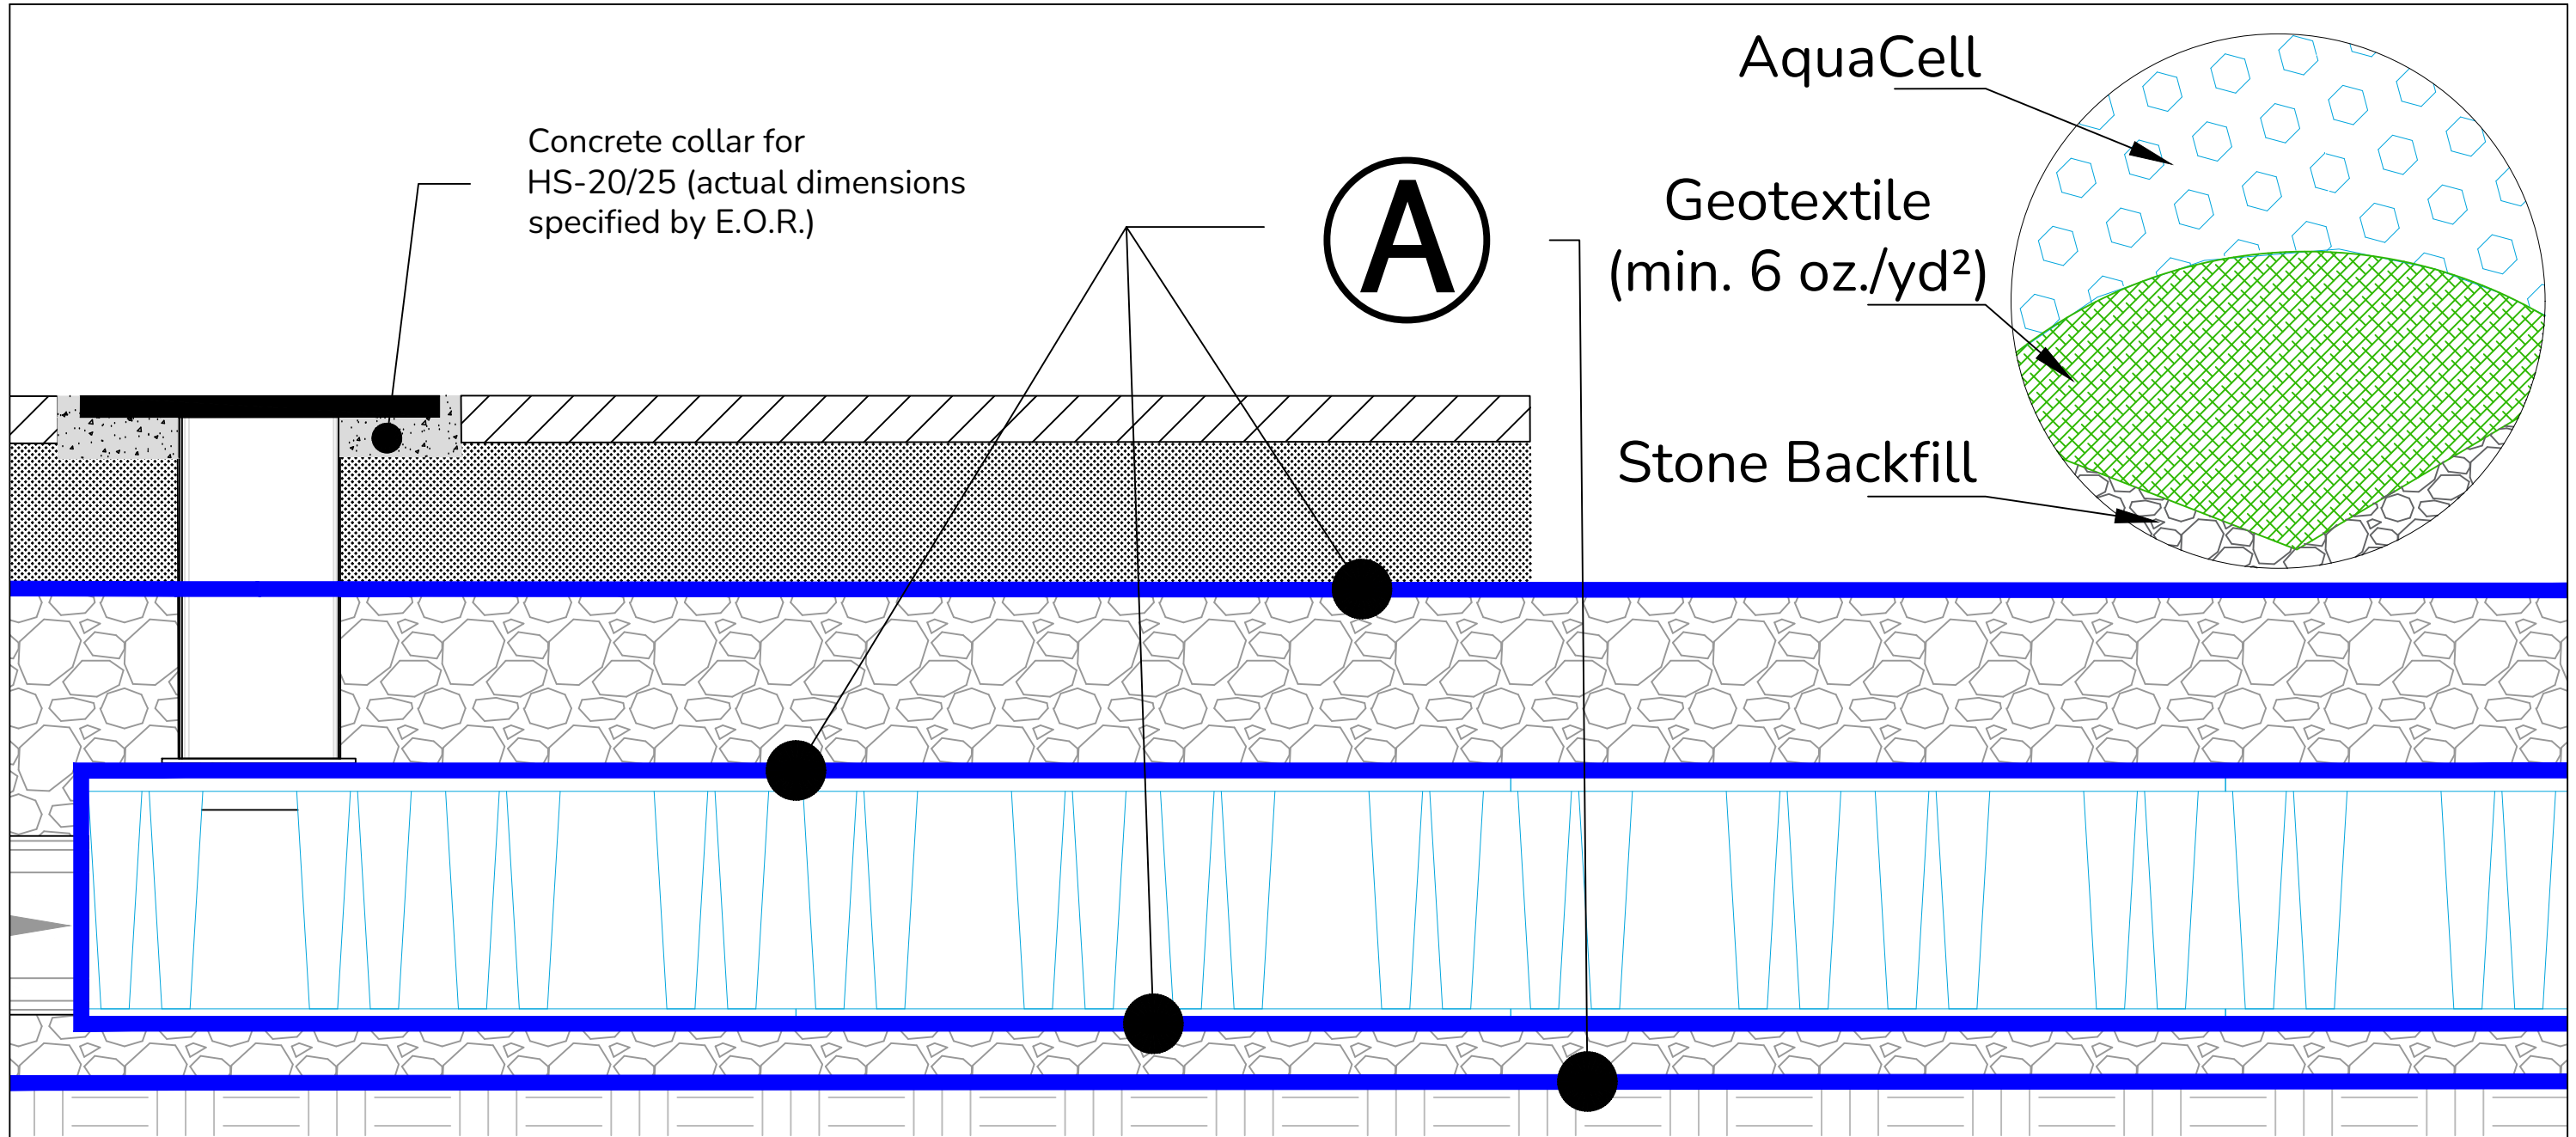

Notes:

- For **Retention/ Infiltration systems**, provide a geotextile fabric with a minimum permittivity of 1.4 sec^{-1} . This will provide rapid water flow through the fabric which is essential to maintain infiltration performance and reduce the risk of clogging over time.
- Wrapping the **AquaCell** system with geotextile also provides protection against abrasion, puncture, and UV degradation before and during installation. **Geosynthetics provided by others.**
- Geotextile is layered around entirety of stone backfill & completely wrapped after initial backfill/ cover over top of tank is complete. Final backfill installed to surface grade as designed by E.O.R.
- Reference **AquaCell Installation Guide** for further information and instruction on geosynthetics installation.



Managing water better since 1955.

950 Winter Street
Waltham, MA 02451

wavin.us
wavintechsupport@orbia.com



The design details/specifications presented in this document are for informational purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com

Title: AquaCell Infiltration Detail

Date: 12/1/2025	Scale: NTS	Drawing: AQ-100-03.1	Rev: 3
Drawn: HJD	Approved: JS	Sheet: 1 of 1	