


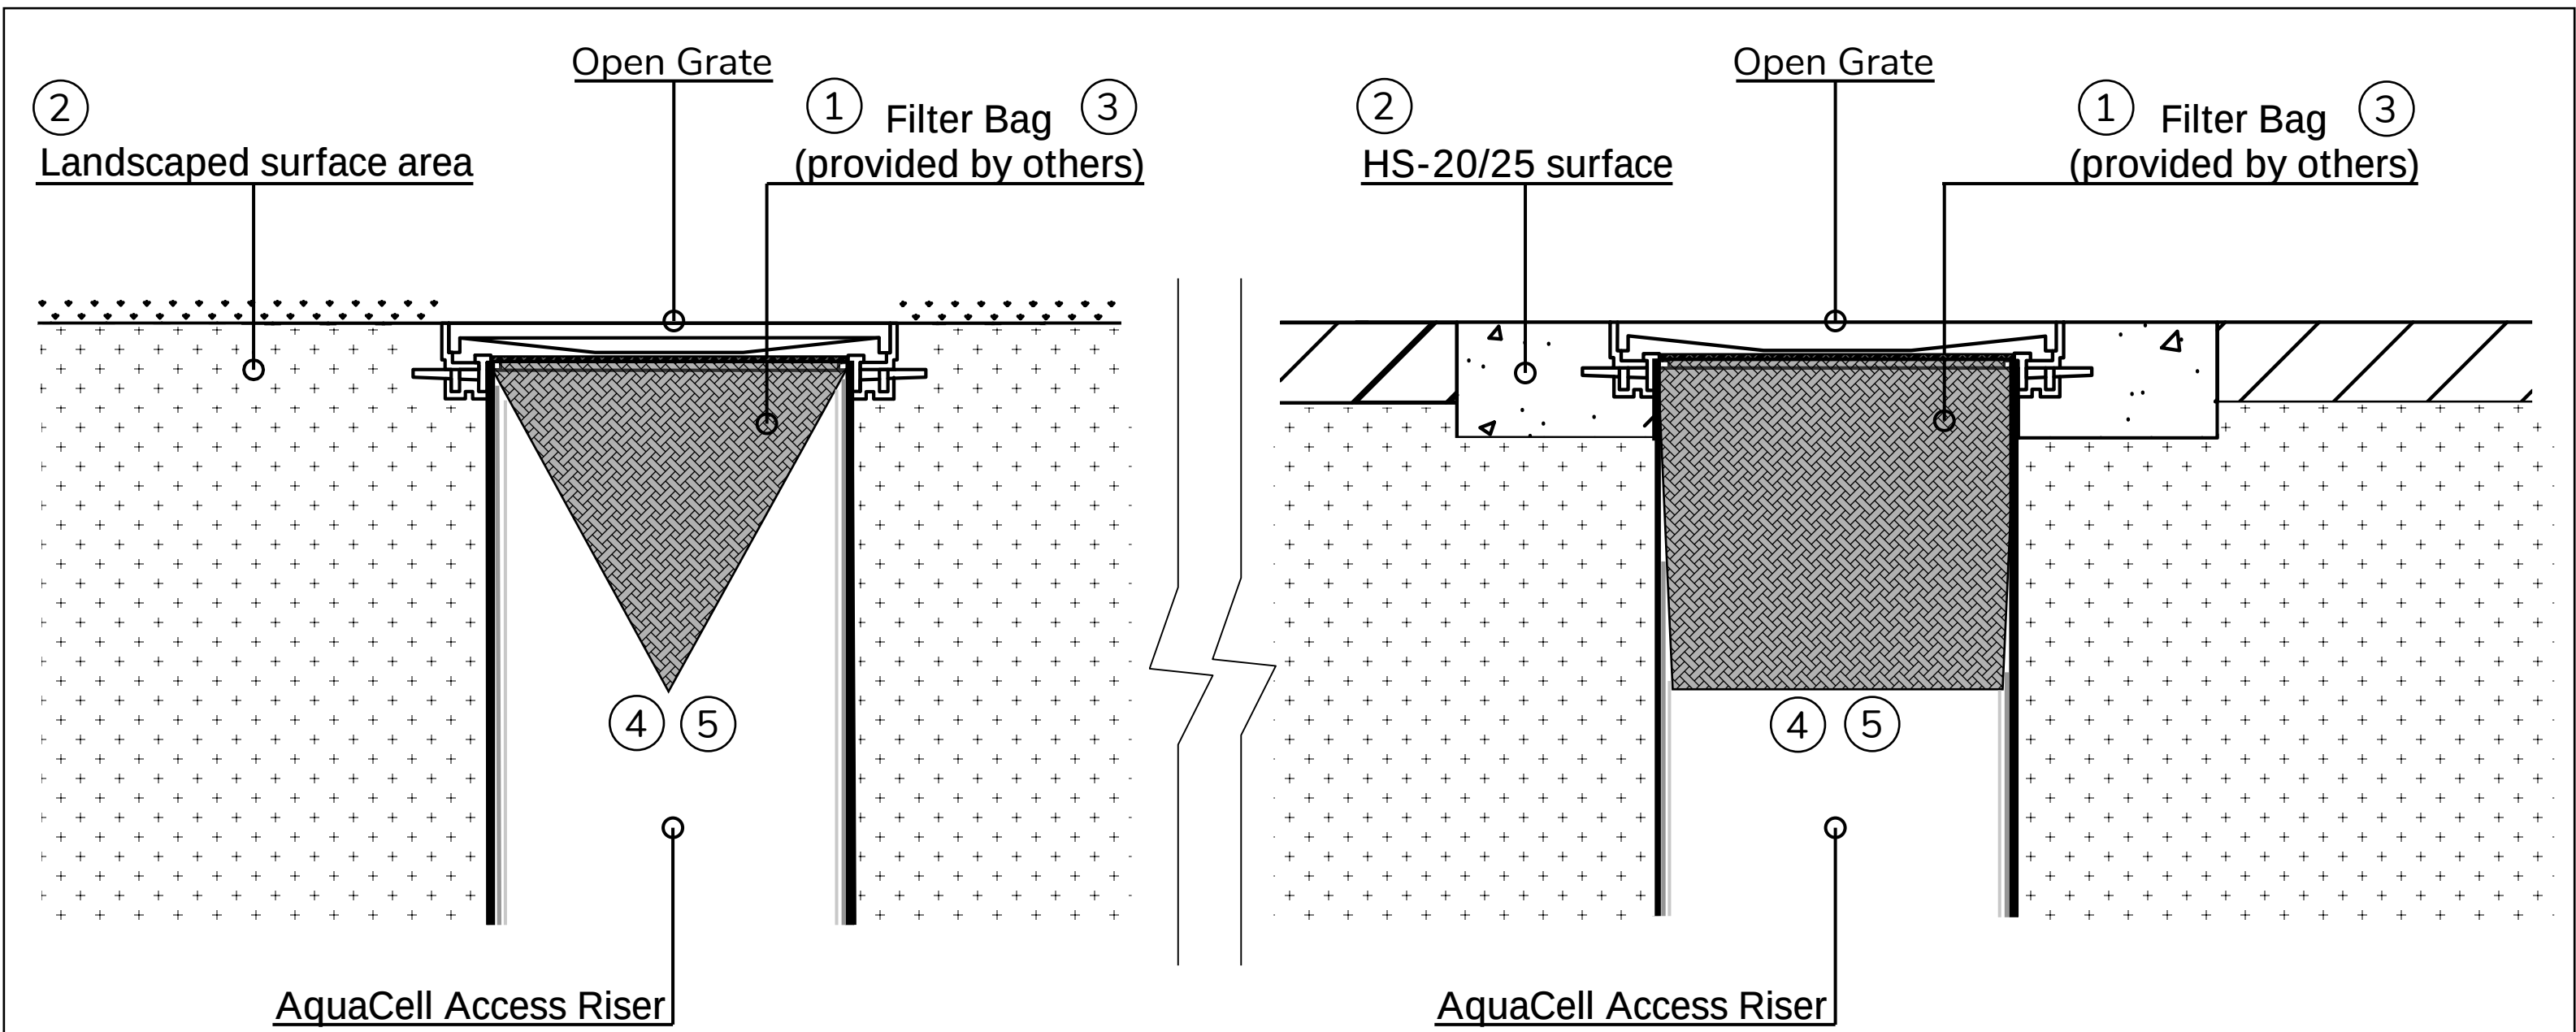

NOTES:

1. Filtration bags (provided by others) are recommended for any grated inlet (provided by others) into the **AquaCell** to prevent sediment & debris from entering the system.
2. Below grade, under grate sediment bags are recommended for both traffic and non-traffic applications.
 - a) Remove the grate from the casting. Clean debris around the frame.
 - b) Place the filter bag onto the frame of the casting following manufacturer's installation details.
 - c) Replace the grate into the casting and secure.
3. The size of the sediment filter bag will depend on the size of the grated inlet casting and as specified by the design engineer.
4. For stormwater applications, a sediment filter bag with a micron rating of 100 to 200 microns is typically sufficient or as specified by the design engineer.
5. Recommended filtration bags of non-woven geotextile fabric or polypropylene should be used or as specified by design engineer.



Managing water better since 1955.
 950 Winter Street
 Waltham, MA 02451
 wavin.us.com
 wavintechsupport@orbia.com

Title: Sediment Bag Installation from a Grated Inlet into AquaCell

The design details/specifications presented in this document are for informational & reference purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com.

Drawn by: HJD	Approved by: KS
Scale: NTS	Revision: 0
AQ-100-19	Date: 7/18/2024

Sheet 1 of 1