


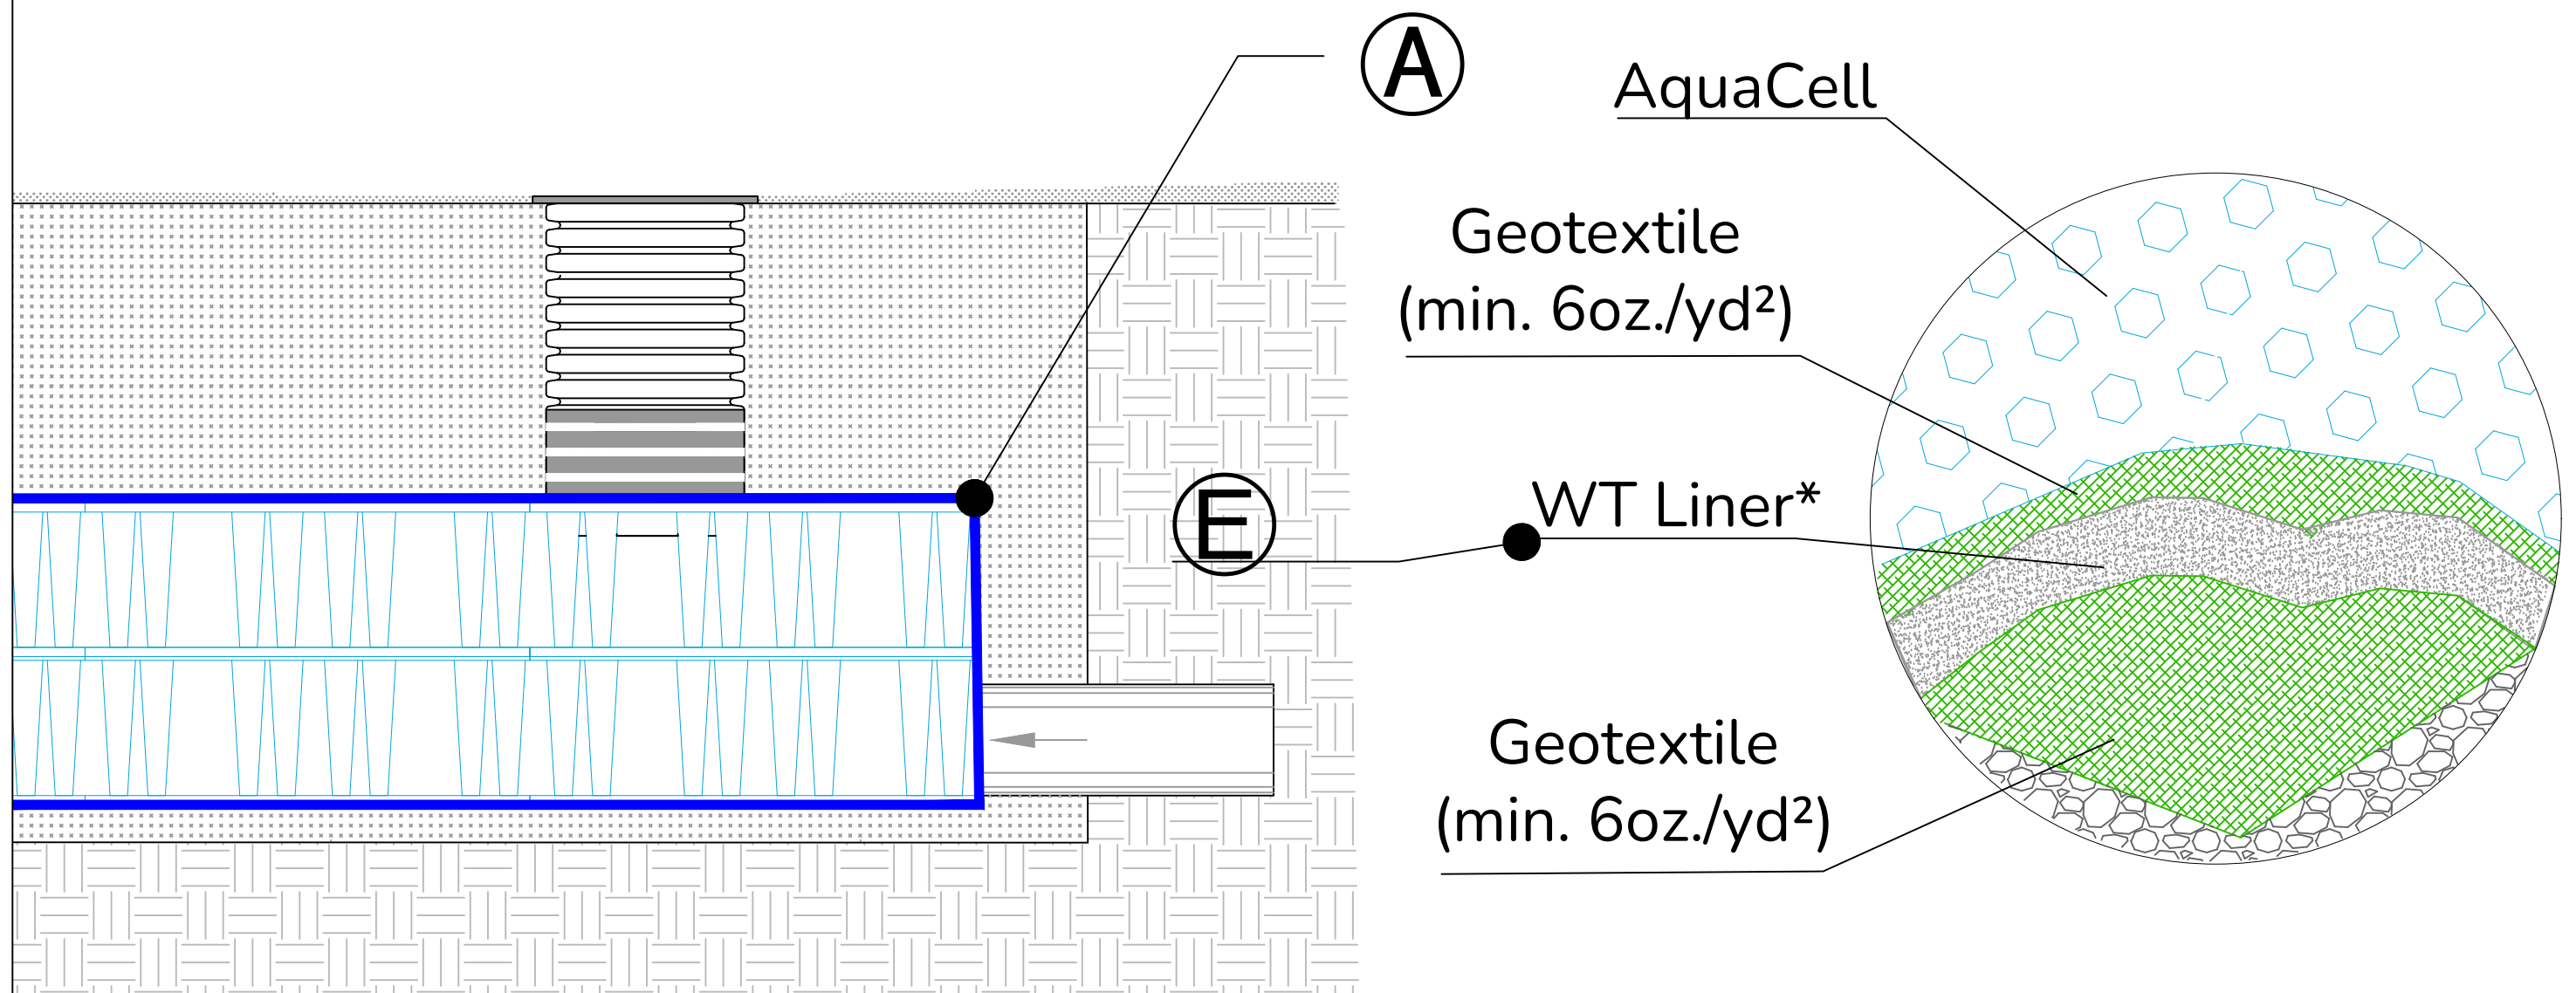

Notes:

- For **Detention & Reuse systems**, provide a *WT liner (minimum 30 mil geomembrane) with a thickness tolerance of $\pm 5\%$ as defined by ASTM 5199.
- Choose geomembrane fabric based on site specific applications. Material should be puncture resistant and durable. **Geosynthetics provided by others.**
- It is recommended that the geomembrane is wrapped with an inner & outer layer of min. 6 oz./yd² non-woven geotextile to protect the WT liner from puncture or damage during installation.
- Reference **AquaCell Installation Guide** for further information and instruction on geosynthetics installation.
- For detention & water reuse systems, woven geotextiles such as Mirafi FW402 may be used as a protective layer over the geomembrane to provide abrasion and puncture resistance during installation.
- This detail represents a partially drained watertight detention system. No underdrain or full drawdown is assumed unless specifically designed by the EOR.



Managing water better since 1955.

950 Winter Street
Waltham, MA 02451

wavin.us
wavintechsupport@orbia.com



The design details/specifications presented in this document are for informational purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com

Title: AquaCell Detention Detail

Date: 4/6/2026	Scale: NTS	Drawing: AQ-100-03.2	Rev: 4
Drawn: HJD	Approved: JS	Sheet: 1 of 1	