


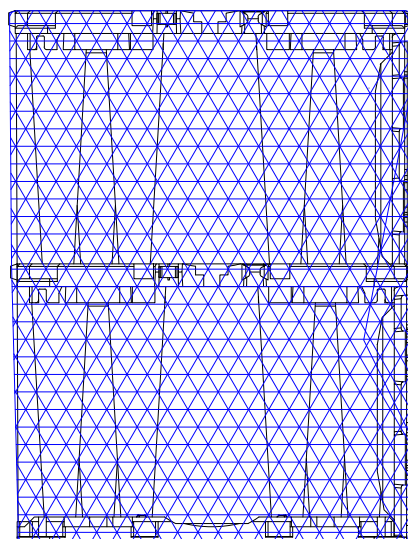

① HDPE/PP PIPE ADAPTER (OPTIONAL) $\geq 16"$ STUBOUT SHALL BE ANCHORED INTO SIDE PLATE BENEATH GEOTEXTILE

STAINLESS STEEL HOSE CLAMPS OR CORROSION RESISTANT MASTIC TAPE

12" MIN.

INTEGRATED TECHNOLOGIES
LOUAN TILLMAN
(615) 738-6217
TILLMANLOUAN@GMAIL.COM

UP TO 36"

GEOTEXTILE FIELD FABRICATED BOOT

Notes:

- For pipe connections to **AquaCell** ≥ 16 inches, connect to **Side Plate (2476600003)** using a HDPE/PP stub out adapter (*optional*) with geotextile "boot" wrapped around the pipe.
 - If using a custom pipe adapter, secure to the **AquaCell Side Plate** *before* wrapping the tank with geotextile.
- Cut hole or sections in **Side Plate** $\pm$ diameter of inlet pipe ID to allow for open area with no obstruction for water flow.
- Cut an "X" in the geotextile fabric wrapped directly around the tank slightly larger than the pipe pipe OD.
- Pull the fabric opening around the pipe, then slide pipe against the AquaCell side panels (or pull fabric around the stub out previously installed).
- Weld the boot sleeve to the pipe using corrosion resistant adhesive tape (duct tape).
- Secure the connection around the pipe & geotextile with stainless steel hose clamps (recommended min. two (2) for connections $\geq$ than 24 inches).
- All custom adapters ≥ 16 inches, adhesive tape, hose clamps, and geotextile *provided by others*.
- Reference **AquaCell Installation Guide** for additional information/ guidance when installing pipe boot.



Managing water better since 1955.

950 Winter Street

Waltham, MA 02451

wavin.us

wavintechsupport@orbia.com

The design details/specifications presented in this document are for informational purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com

Title: AquaCell Large Diameter Pipe Abutment (Geotextile Boot)

Date: 8/25/2025

Scale: NTS

Sheet: 1 of 1

Rev: 2

Drawn: HJD

Approved:

Drawing: AQ-100-10

