


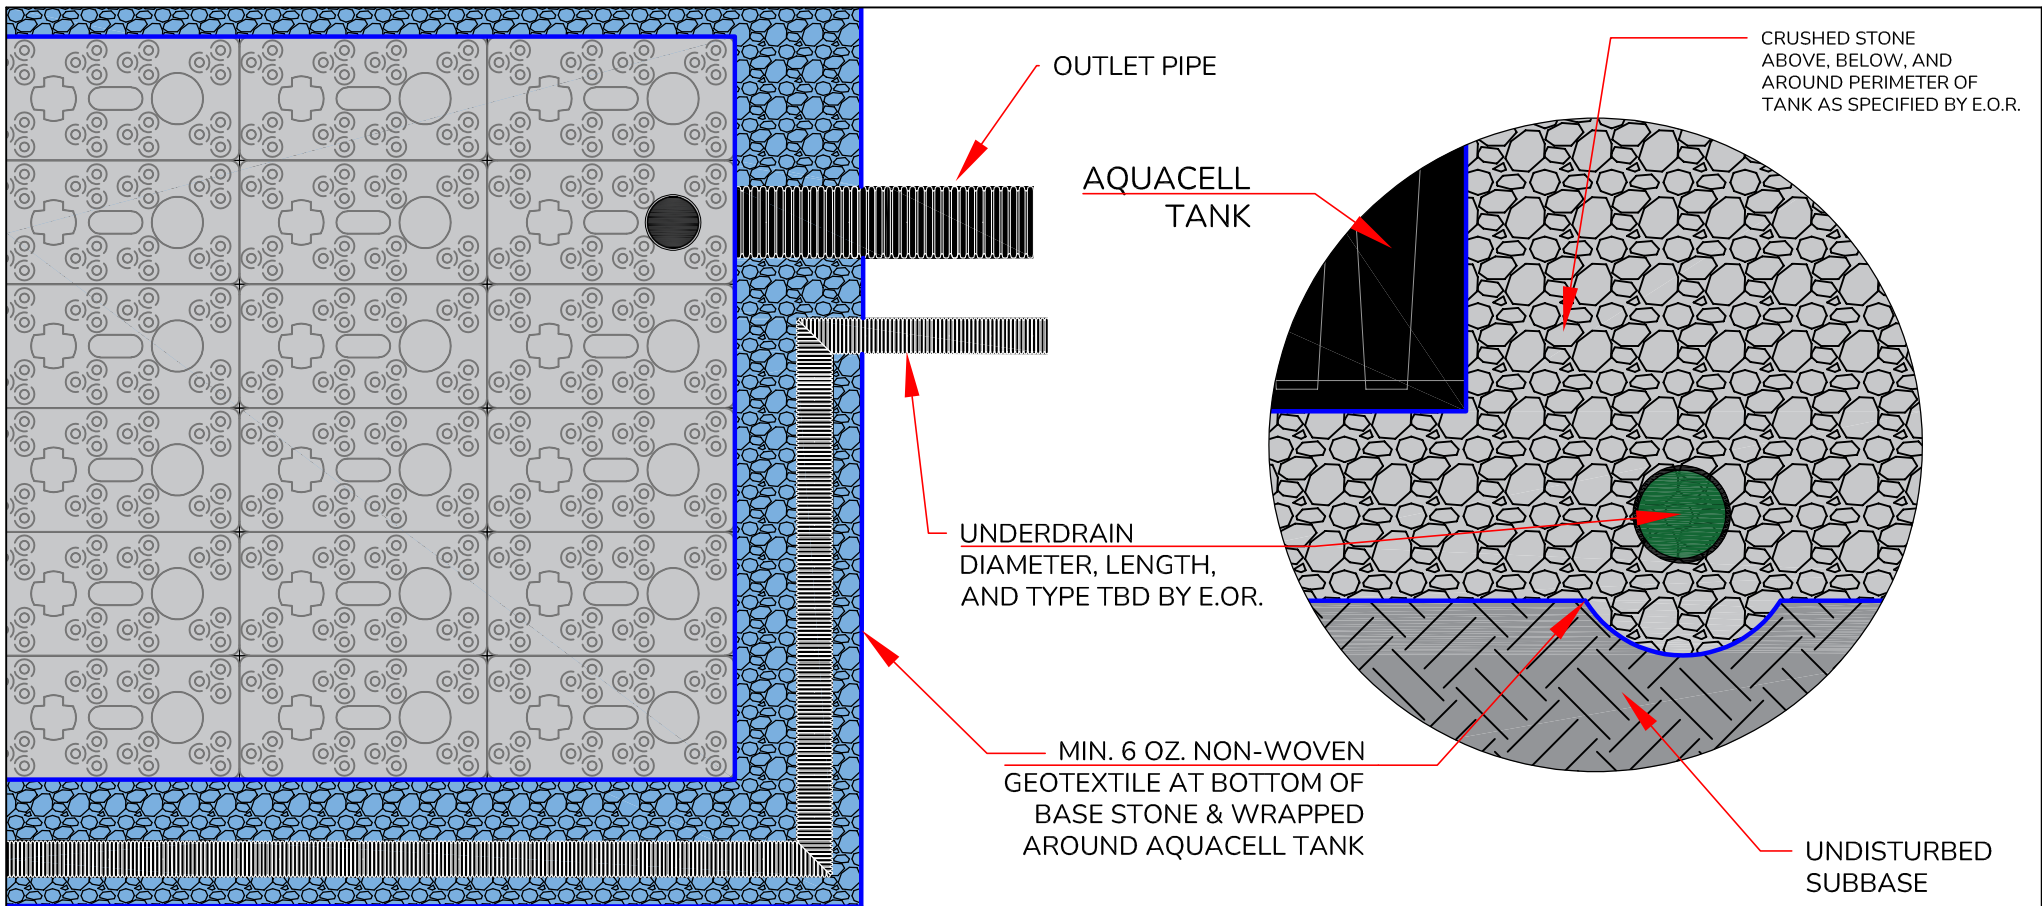

Notes:

1. Provide a minimum horizontal separation of 12 in. (300mm) between the underdrain pipe and the **AquaCell** crates to ensure adequate stone envelope, prevent point-loading, and maintain proper hydraulic connection.
2. Place the underdrain invert at or slightly below the base of the **AquaCell** tank system, supported in clean, washed ASTM #57 stone, to ensure efficient drainage of the lowest portion of the tank.
3. Wrap all stone surrounding the underdrain and the **AquaCell** system with non-woven geotextile (minimum 6 oz.) to prevent fines migration and protect long-term infiltration performance.
4. Select the underdrain pipe size and outlet configuration based on site-specific infiltration rates and required drawdown time, as determined by the Engineer of Record (E.O.R), with 6 in. (150 mm) perforated HDPE as the typical minimum.
5. Reference **AquaCell Installation Guide** for further information and instructions related to AquaCell Top Adapter, vertical pipe, minimum surface to top of tank distances, and geosynthetics installation.



Managing water better since 1955.

950 Winter Street
Waltham, MA 02451

wavin.us

wavintechsupport@orbia.com

WAVIN.US



The design details/specifications presented in this document are for informational purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com

Title: AQUACELL SYSTEM WITH UNDERDRAIN

Date: 1/28/2026	Scale: NTS	Drawing: AQ-100-26	Rev: 0
Drawn: HJD	Approved: JS	Sheet: 1 of 1	