

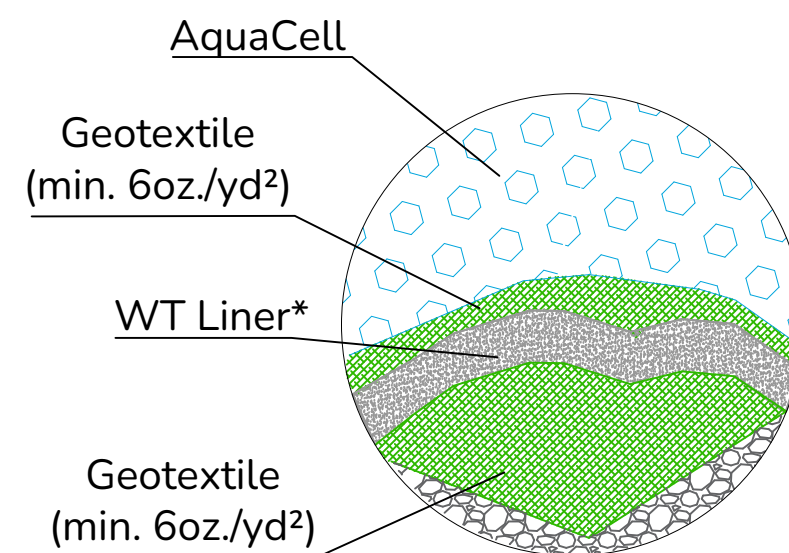


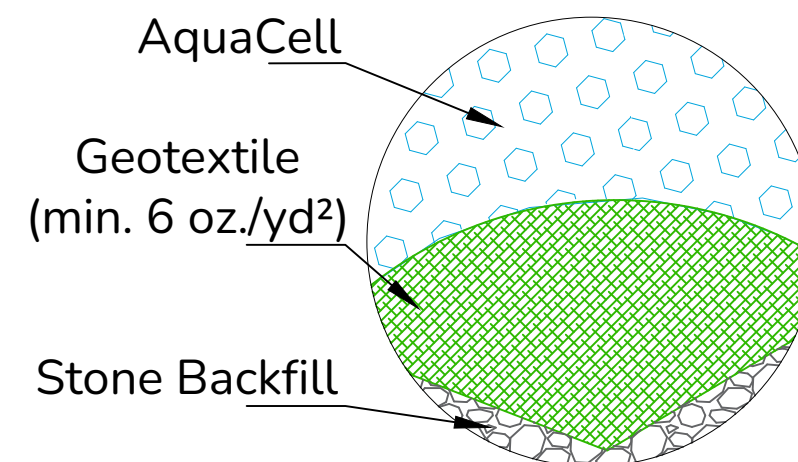

Notes:

- A. For **Detention & Reuse systems**, provide a *WT liner (minimum 30 mil geomembrane) with a thickness tolerance of $\pm 5\%$ as defined by ASTM 5199.
- B. The **AquaCell tank** shall be wrapped with a min. 6 oz./ yd² non-woven geotextile fabric. An impermeable liner is **not required** directly around the AquaCell unless specified by the E.O.R.
 - B.1. Choose geomembrane fabric based on site specific applications. Material should be puncture resistant and durable. **Geosynthetics provided by others.**
- C. It is recommended that the geomembrane is protected with an inner & outer layer of min. 6 oz./yd² non-woven geotextile to protect the WT liner from puncture or damage during installation.
 - C.1. Woven geotextiles may also be used as a protective layer wrapping the geomembrane to provide abrasion and puncture resistance during installation, as approved by E.O.R.
- D. If required by E.O.R, provide a perforated underdrain within the foundation stone (reference AQ-100-27). Underdrain shall penetrate the WT liner using an approved boot or welded penetration detail and connect to the outlet system.
 - D.1. This configuration represents a fully lined, drain-to-empty detention system. Detention storage includes stone and AquaCell void space. System drains to the underdrain invert.
- E. Reference **AquaCell Installation Guide** for further information and instruction on geosynthetics installation.

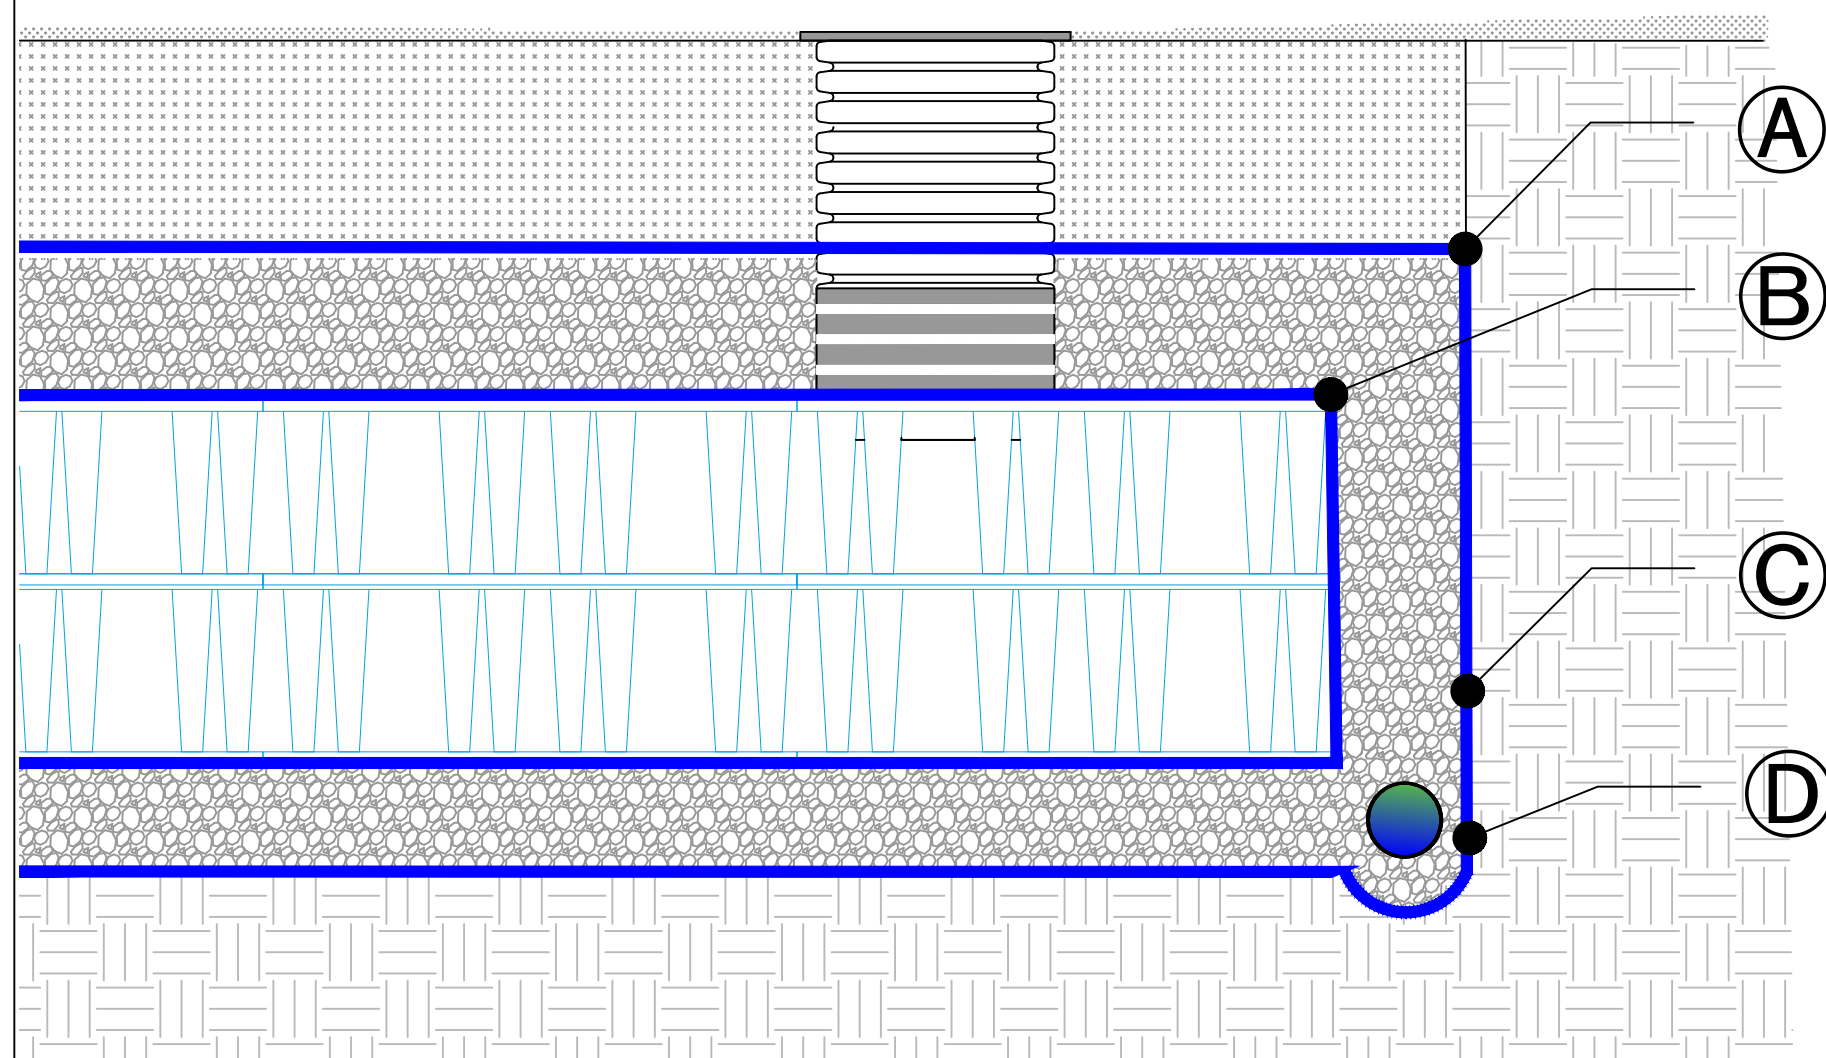

Managing water better since 1955.

950 Winter Street
Waltham, MA 02451

wavin.us
wavintechsupport@orbia.com



The design details/specifications presented in this document are for informational purposes only and are subject to change without notice. Responsibility for design of any AquaCell system rests solely with the original design engineer of record. For questions, contact: wavintechsupport@orbia.com

Title: AquaCell Detention Detail with Underdrain

Date: 4/20/2026	Scale: NTS	Drawing: AQ-100-03a	Rev: 1
Drawn: HJD	Approved: JS	Sheet: 1 of 1	