



**Troubleshooting
and Support**

AIMS Log

- I. Check the log files (C:\Program Files (x86)\AIMS\Services\Logs)
 - I. NeopostIO_YYYYMMDD.txt
 - I. YYYY is the Year
 - II. MM is the Month
 - III. DD is the Day
- I. The primary log file is NeopostIO. This log file will show all communication between the Folder Inserter and the AIMS Server.
- II. Any error in this log file will be designated with either the word “Error” or “Err”.
- III. Every entry in the log will show a Date and Time stamp.
- IV. The list of log files are date and time stamped.

Problems With Connection Speeds Or No Connection

- I. This could be the Server or the Network Connection
- II. Check the DataStation by running the Simulator. If the Simulator runs slowly without the network being involved then this would point to the issue being on the DataStation.
- III. Check the Network Connection by pinging the DataStation from the Folder Inserter (IMOS PC). If this fails then this would point to their being a break in the Network Connection.
- IV. Move the DataStation next to the Folder Inserter with only a network cable and a switch between them. If this fails to improve the issue of speed then the Network Cards on the DataStation may have a problem or the DataStation may have some Management Software or Anti-Virus Software that is slowing down connections.

Issues Appearing After Successful Install

- I. If a problem occurs after the Folder Inserter and DataStation have been successfully communicating for a number of days then the following should be considered.

- II. IMOS Questions
 - I. Has the IMOS job set-up been changed?
 - II. Has Anti-virus been added to the IMOS PC?
 - III. Has the IMOS PC been added to the domain?
 - IV. Has any software been added to the IMOS PC

- III. Questions will need to be asked as to what has changed on the DataStation.
 - I. Has the DataStation been moved?
 - II. Has Anti-Virus been added to the DataStation?
 - III. Has the DataStation been added to the Domain?
 - IV. Has any software been added to the DataStation?

AIMS PC Support and Recovery Process

Support within the UK

There is a Three-year, next business day, on-site, worldwide warranty with Dell (through our Dell supplier, Officevision Ltd).

In the event of a faulty PC please contact Officevision customer services;
Rachel Bird – Rachel@officevision.co.uk Tel: 01279 600066

Below are the main details initially required in order to raise an RMA or arrange an engineer visit.
Please state: PC Model & Tag Number, Serial number of PC, Fault description of PC

Worldwide Support of Dell PC

The 3 Year Next Business Day Warranty on the Vostro Model PC's is also an International Warranty. Please register the Tag number within the country the PC is in. This can be done by calling the customer care department in the country you are in and getting them to transfer the TAG details, you can fill in a form online on the Dell International Ownership Transfer form website.

The warranty on all PC's is initially logged against Officevision Ltd (see below for details).

To transfer the warranty: Go to <http://support.dell.com/>

Use the local telephone number to contact Dell or use the online International Ownership Transfer form.

You can also register with Dell for on line support.

Please note that to transfer the warranty to a new owner (namely the Neopost OpCo or Dealer) you will also need to know the current name, which the warranty is logged.


This is as follows:

Officevision, Allen House, The Maltings, Station Road, Sawbridgeworth, Hertfordshire CM21 9JX United Kingdom

Email: Alan@officevision.co.uk (Alan Clarke, NTL account manager at Officevision).

Backup and Restore

The following slides will take you through how to use the AIMS built in backup and restore module. To access the module click on the Administration tab.

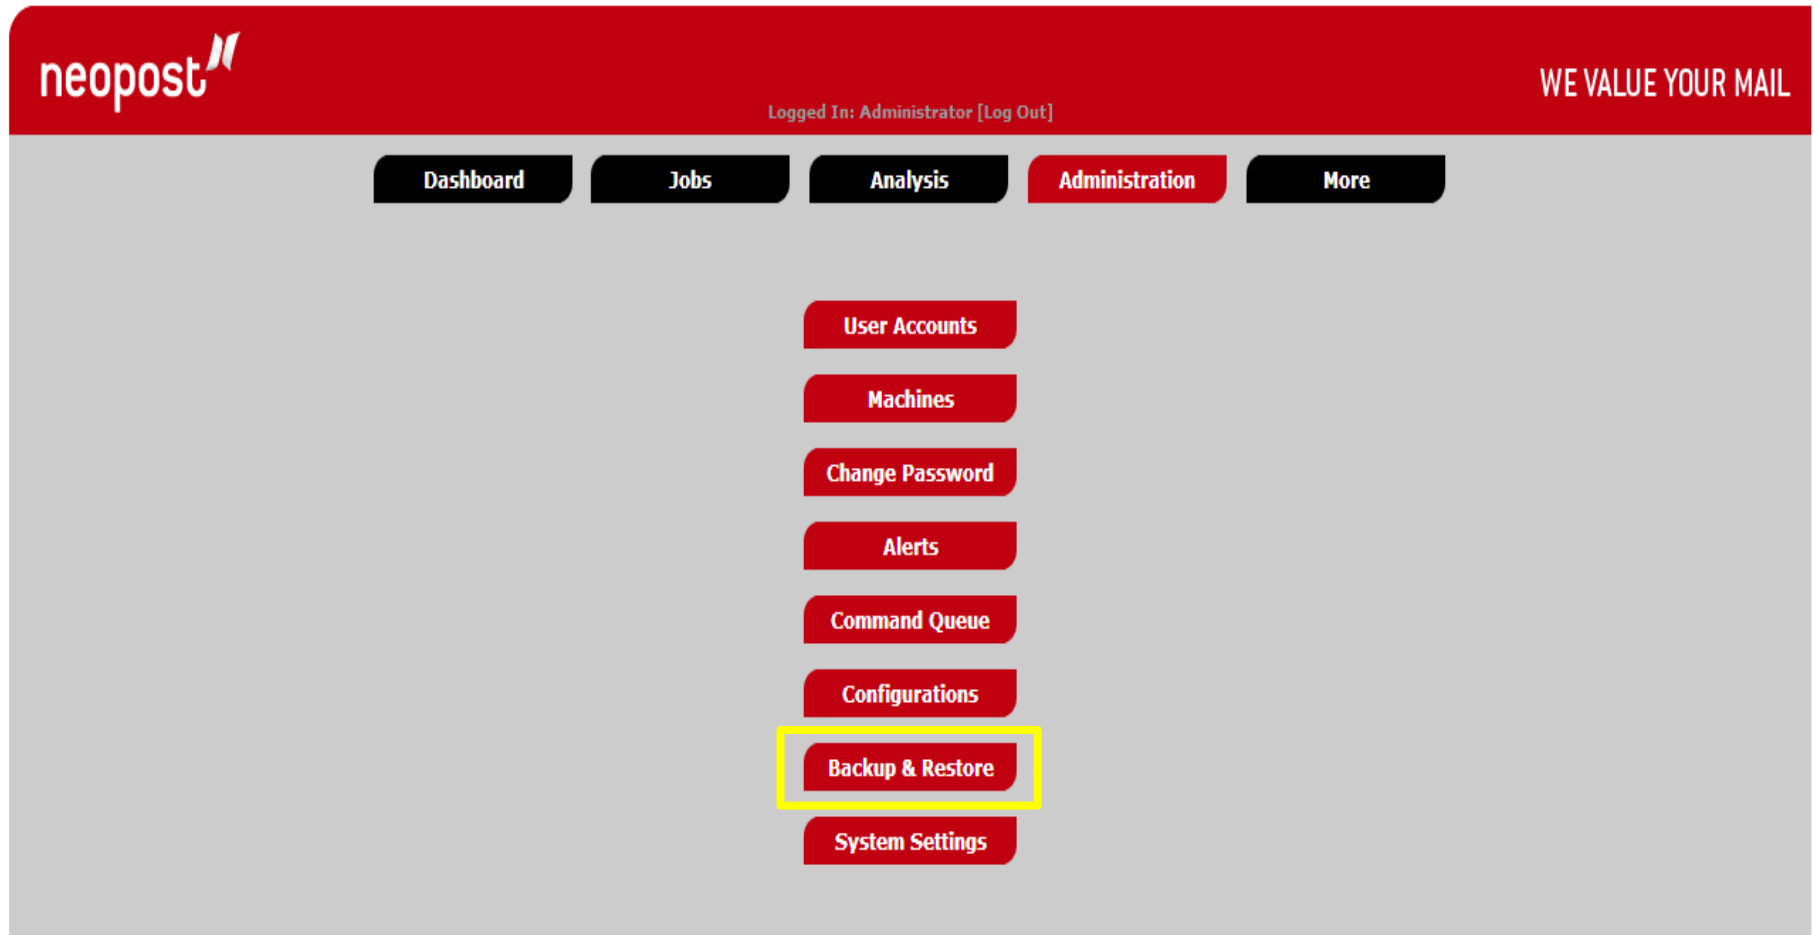

- I. To create a backup first a schedule needs to be created.
- II. To create a schedule click on the add schedule button.

neopost

Logged In: Administrator [Log Out]

WE VALUE YOUR MAIL

Dashboard

Jobs

Analysis

Administration

Backup & Restore

More

Add Schedule

View Backups

Schedule List - Record 0 to 0 of 0

Schedule Name↓↑	Owner↓↑	Last Backup↓↑	Next Backup↓↑	

Filter for Schedule: T

|<

<<

>>

>|

There are several options available when creating a backup schedule

neopost

Logged In: Administrator [Log Out]

WE VALUE YOUR MAIL

Dashboard

Jobs

Analysis

Administration

More

Backup & Restore

Schedule Name:

Schedule Created:

Owner:

Backup Location:

Backups Expire in (Days):

Schedule Period:

26/06/2013 11:33:11

Administrator

C:\Program Files (x86)\AIMS\Backup

0

-

+

Manual

>>

The schedule can be given a name to differentiate between multiple schedules.

Displays the date and time that the schedule was created.

Displays the user who created the schedule

Here the location that the backup will be saved to can be set.

Backups can be set to expire after a certain number of days.

There are 4 types of schedule that can be created.

Manual – Each backup will have to be started manually

Daily – Backups can be set to run at a certain time every day

Weekly - Backups can be set to run at a certain time every week

Monthly - Backups can be set to run at a certain time every month

When either Daily, Weekly or Monthly are selected additional options will be shown to allow you to set what time of the day, what day of the week/month the backup will run

Click this button to manually start a backup


Close

Save

Backup

If you are manually running a backup to check if the backup has finished click on the Administration tab and then click on the Command Queue.


The below image shows that the backup is currently running.

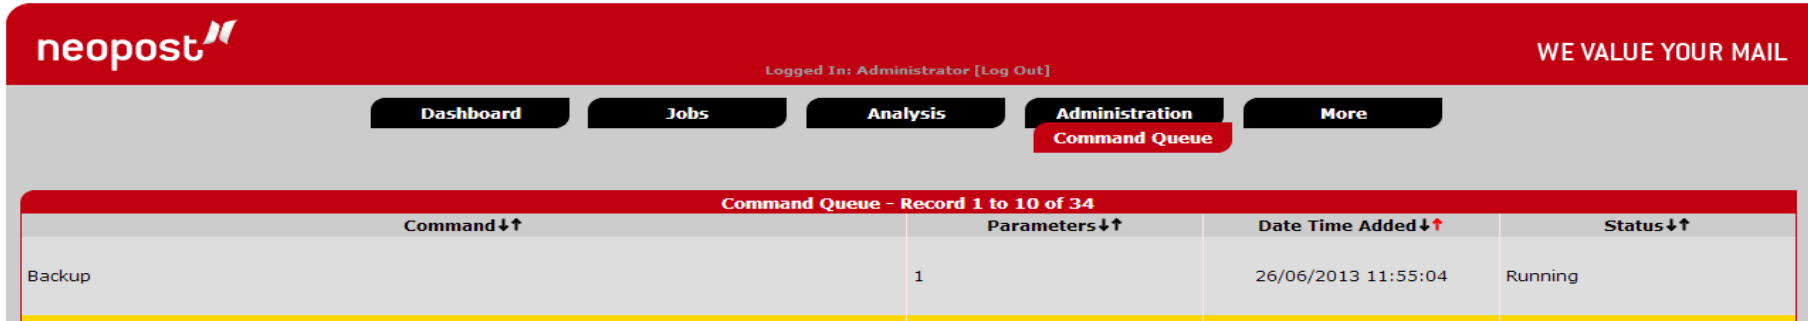

The screenshot shows the Neopost web interface. At the top, the Neopost logo is on the left, and "WE VALUE YOUR MAIL" is on the right. Below the logo, it says "Logged In: Administrator [Log Out]". A navigation bar contains buttons for "Dashboard", "Jobs", "Analysis", "Administration", and "More". The "Administration" button is highlighted, and a sub-menu shows "Command Queue" is selected. Below this, a table titled "Command Queue - Record 1 to 10 of 34" displays the following data:

Command↓↑	Parameters↓↑	Date Time Added↓↑	Status↓↑
Backup	1	26/06/2013 11:55:04	Running

The page will need to be refreshed to update that command queue just click on the command queue box again to refresh the list. When the backup has completed you will see the following entry in the command queue.

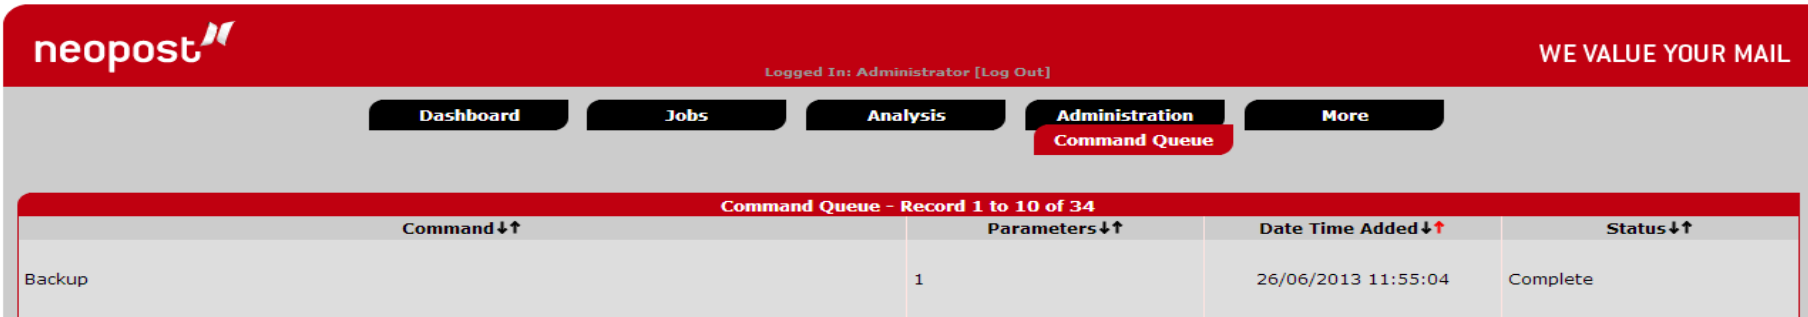

This screenshot is identical to the previous one, showing the Neopost web interface with the "Command Queue" selected. The table now shows the backup status as "Complete":

Command↓↑	Parameters↓↑	Date Time Added↓↑	Status↓↑
Backup	1	26/06/2013 11:55:04	Complete

A backup will not complete if there are any inserters connected to AIMS at the time the backup tried to start, also you will be unable to run any inserters with AIMS if a backup is in process.

To restore from a previous backup first go back to the main screen of the Backup and Restore module and click on “View Backups”

neopost

Logged In: Administrator [Log Out]

WE VALUE YOUR MAIL

Dashboard

Jobs

Analysis

Administration

Backup & Restore

More

Add Schedule

View Backups

Schedule List - Record 1 to 1 of 1

Schedule Name↓↑	Owner↓↑	Last Backup↓↑	Next Backup↓↑	
Test	Administrator	26/06/2013 11:55:05		

Filter for Schedule: T


|<

<<

>>

>|

You will see a list of all available backups, to restore click on the backup you want to restore from. Once you have clicked on the backup you will be shown the following screen.

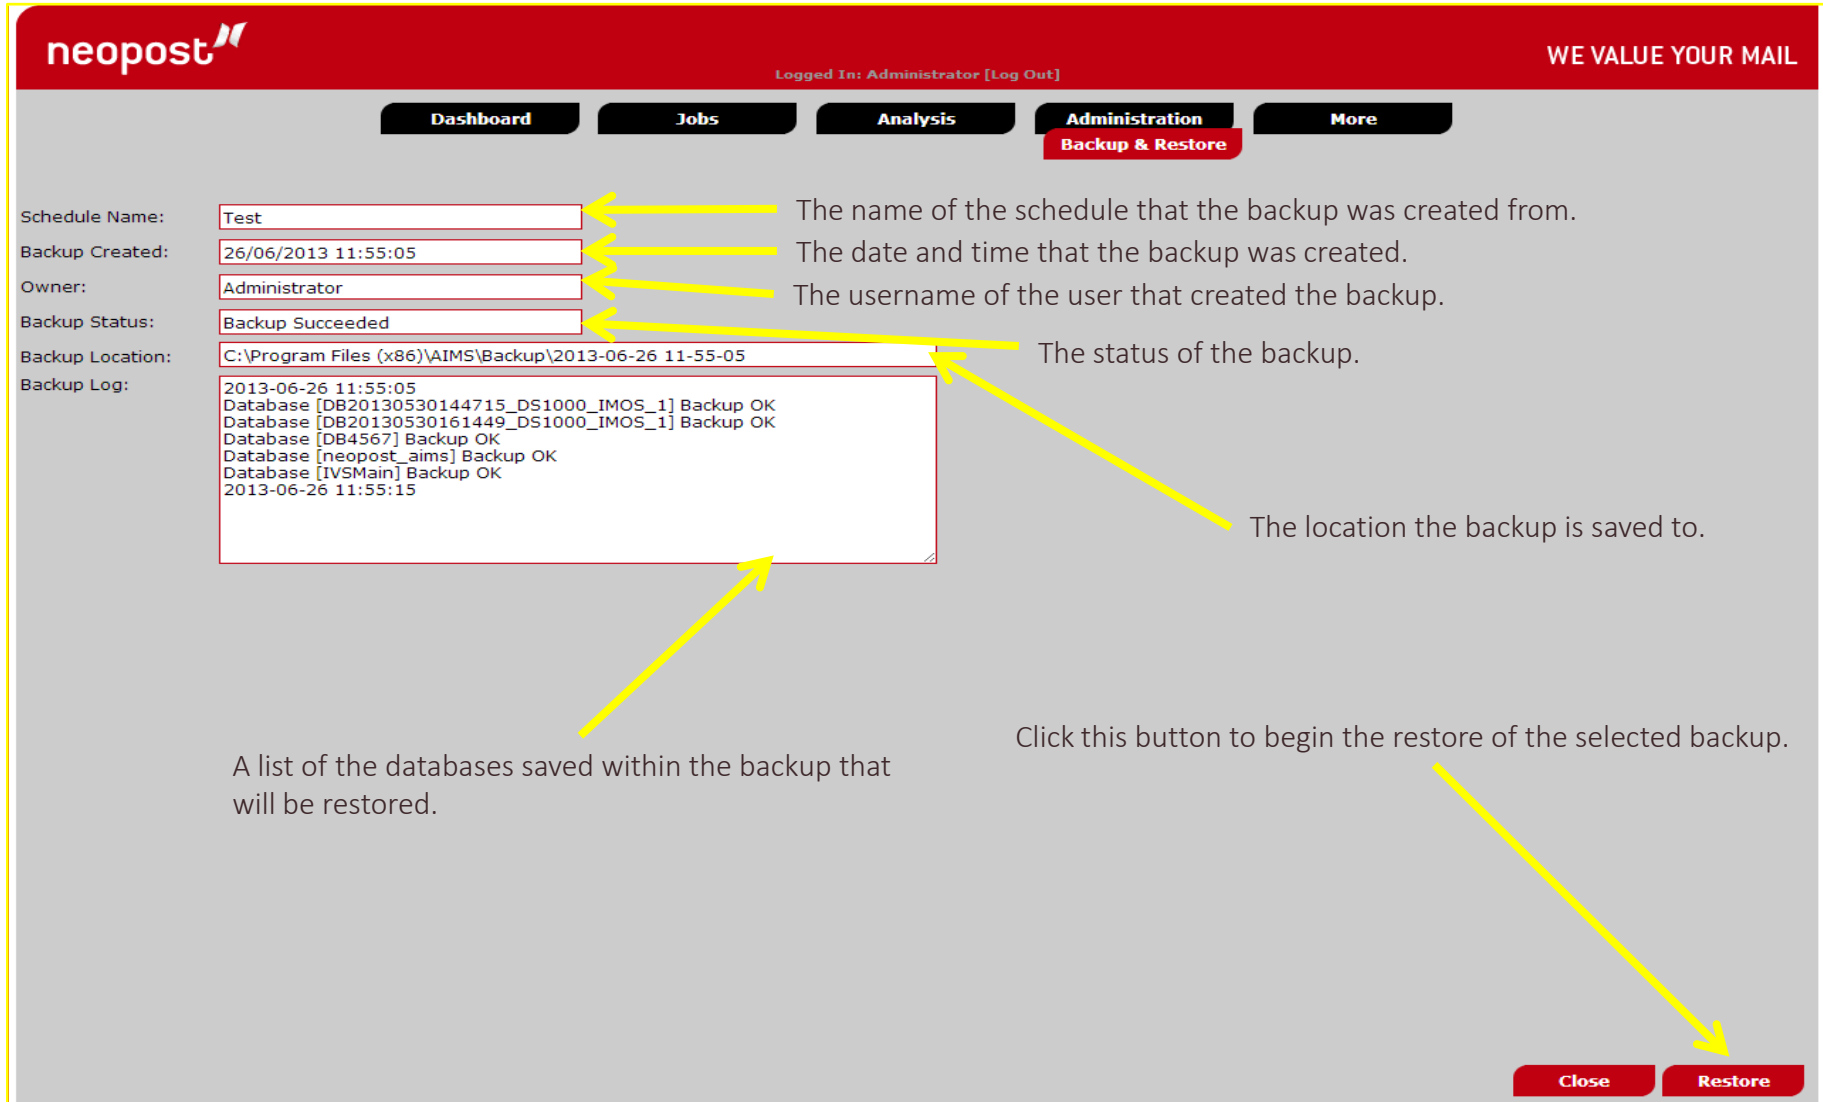

The screenshot shows the Neopost Backup & Restore interface. The top navigation bar includes 'Dashboard', 'Jobs', 'Analysis', 'Administration', and 'More'. The 'Backup & Restore' sub-menu is active. The interface displays the following information:

- Schedule Name:** Test
- Backup Created:** 26/06/2013 11:55:05
- Owner:** Administrator
- Backup Status:** Backup Succeeded
- Backup Location:** C:\Program Files (x86)\AIMS\Backup\2013-06-26 11-55-05
- Backup Log:**

```


2013-06-26 11:55:05
Database [DB20130530144715_DS1000_IMOS_1] Backup OK
Database [DB20130530161449_DS1000_IMOS_1] Backup OK
Database [DB4567] Backup OK
Database [neopost_aims] Backup OK
Database [IVSMMain] Backup OK
2013-06-26 11:55:15
                
```

Annotations with yellow arrows point to the following elements:


- The name of the schedule that the backup was created from.
- The date and time that the backup was created.
- The username of the user that created the backup.
- The status of the backup.
- The location the backup is saved to.
- A list of the databases saved within the backup that will be restored.
- Click this button to begin the restore of the selected backup.

At the bottom right, there are two buttons: 'Close' and 'Restore'.

The bellow image shows the status and progress of the restore.

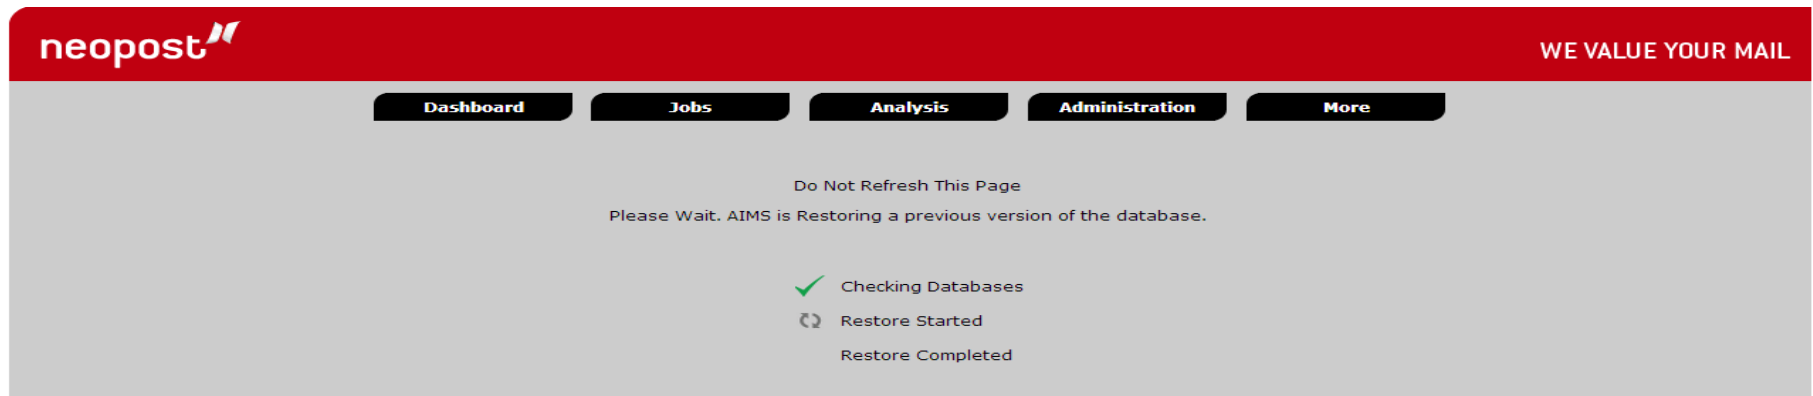

Once the restore is completed you should see the following summary of each database and a status to show if it been restored correctly.

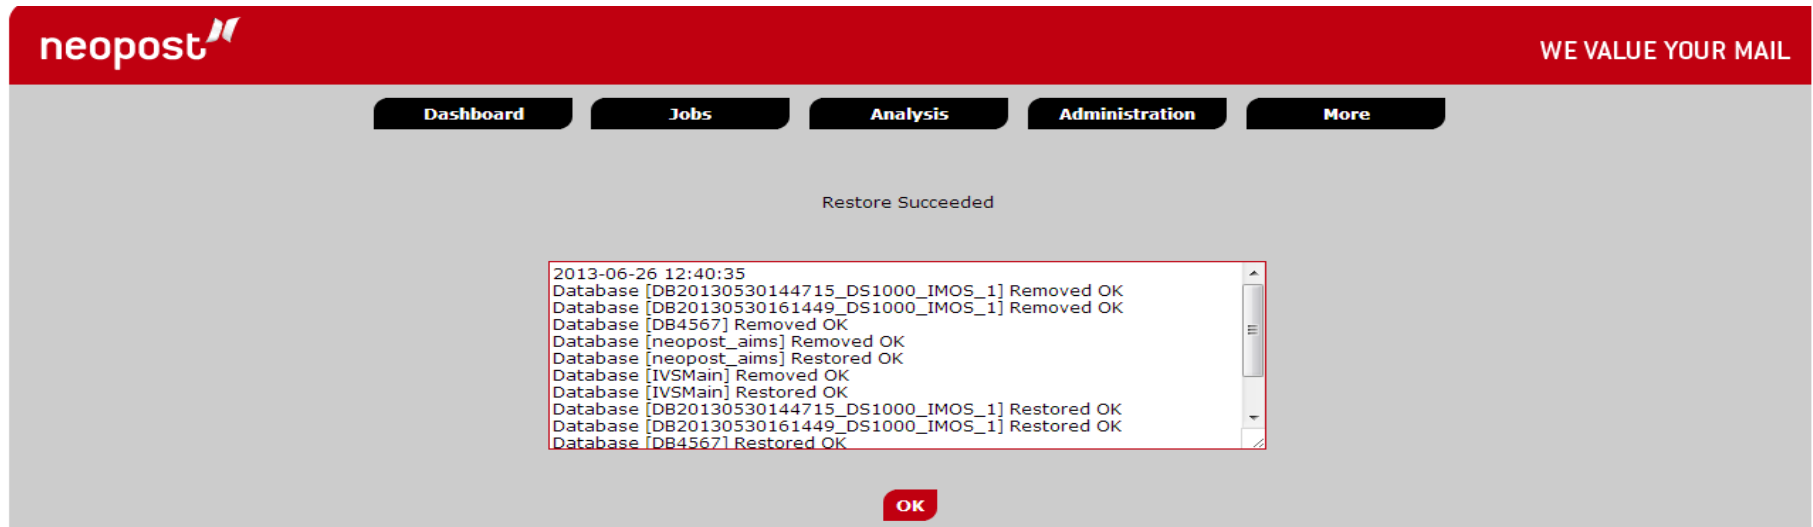

After you click ok you will be taken back to the login screen, log back in and AIMS can be used as normal.

DS-1xxx AIMS Specific Fault Codes and Recovery Information

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
27	Oversize Group Destination Not Compatible with AIMS	Change the destination for oversize groups in the IMOS configuration settings so that they are not sent to the output	N/A	N/A
28	FOG Document Needs to be Removed	Auto ending FOG documents with AIMS requires the next FOG to be removed at the completion of the job run	N/A	N/A
329	No Reply from AIMS	Remove all Documents from the collate upper conveyor. If Fault persists check all connections and check the AIMS Error log for more details	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
550	Duplicate Document in Sheet Divert Bin 1	Remove group from Divert 2 and manually correct	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run has been repeated.
551	Duplicate Document in Sheet Divert Bin 2	Remove group from Divert 1 and manually correct	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run has been repeated.

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
552	Invalid Piece ID on the Document in Sheet Divert Bin 1	Remove Documents from Divert 1 and manually correct	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run has been repeated.
553	Invalid Piece ID on the Document in Sheet Divert Bin 2	Remove Documents from Divert 2 and manually correct	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run has been repeated.
560	Piece ID Not Match	Remove ALL documents from the collate unit and manually check / correct	Check the material being processed is in the correct page sequence	Check the job is programmed correctly
613	Job number confirmation has failed	Document was a NO Read, so job number could not be confirmed. Remove Document and Press go to continue	Check the material being processed is for the correct job run.	Inform IT department or production department that a job run has been repeated.
1001	NACK Error	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1002	Error Timeout	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
1003	Error CMD NOT sent correctly	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1004	Cancelled by User	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1005	Duplicate Mail Piece	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run has been repeated.
1006	Cannot Connect To AIMS Possible TCP/IP Error	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1021	Data Received AIMS Error	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1022	Data Received Duplicate Document ID	Document ID read has already been processed. Remove ALL documents from the unit and manually correct documents	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run has been repeated.

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
1023	Data Received Invalid Job Number	Job Id has no Database on the server. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Check the material being processed is for the correct job run. Check to ensure that job has been copied to the AIMS server	Inform IT department or production department that a job run is not valid.
1024	Data Received Invalid Doc Number	Piece Id read is not in the Database. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Check the material being processed is for the correct job run. Also check with a supervisor that the job run has not been reprinted	Inform IT department or production department that a job run is corrupt.
1025	Data Received Invalid Data	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1026	Data Received Invalid Page Number	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1027	Data Received Invalid Process Type	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1028	Data Received Piece Removed	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1029	Data Received Piece Added	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
1030	Data Received Piece Removed Double	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1031	Data Received Piece Added Double	See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1040	Create Connection Failure. No Response from AIMS	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1041	Close Connection Failure	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1042	Watchdog Not Received	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1043	Critical Error	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
1044	General AIMS Error	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1051	Error Connection Already Live with different Parameters	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1052	Job ID is Not Valid	Job Id has no Database on the server. See AIMS and/or IMOS error log file for more details	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1053	Connection Already Open	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1054	Process Type is Not Valid	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1055	Create Connection Request Not Received	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1056	Invalid Number of Arguments in the Data Packet	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support

Error	Error Message	Recovery Information	Operator troubleshooting guide if fault persists	Engineer troubleshooting Guide if Fault persists
1057	Invalid Argument in the Data Packet	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1058	Invalid Packet or String Received	Check all connections and settings are correct. See AIMS and/or IMOS error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1997	AIMS Not Licenced For This product	See server error log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1998	Error Detected in Database	Check Last Few Mail Pieces Processed are correctly logged in AIMS. See AIMS log file for more details. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support
1999	Job Has Already Been Closed	This job has already been processed and been closed by AIMS. Check the correct job number is being processed. If fault persists contact NTL IPSS	Contact a supervisor or the IT department for support	Test network and server status. If network or server status is at fault contact your IT department for support

DS-200 AIMS Specific Fault Codes and Recovery Information

Error	Description	Action
2819	Bad Job Number length in label	Check job settings
2820	Job Number miss-match	Check paper stack
2821	Piece ID miss-match	Check stack
2822	Bad Job Number in label	Check job settings
2823	AIMS Job Number validation timeout	Check AIMS. Check job settings
2824	AIMS Job Number NAK received	Check job exists on AIMS. Check correct paper stack loaded
2825	AIMS manual job number mismatch	Check job number correctly entered at start of job. Check job number correctly programmed in barcode definition
2826	AIMS Mailpiece validation timeout	Check AIMS
2827	AIMS error	Check AIMS
4001	AIMS NAK Error	Please check AIMS and job configuration and try again
4002	AIMS timeout	Please check AIMS and job configuration and try again
4003	AIMS command transmission error	Please check AIMS and job configuration and try again
4004	AIMS user cancelled	Please check AIMS and job configuration and try again
4005	AIMS duplicate Mailpiece	Please check AIMS and job configuration and try again
4006	AIMS failed to connect	Please check AIMS and job configuration and try again
4021	AIMS error	Please check AIMS and job configuration and try again

Error	Description	Action
4022	AIMS duplicate document	Please check AIMS and job configuration and try again
4023	AIMS invalid Job Number	Database for Job not found in AIMS. Please check AIMS and job configuration and try again
4024	AIMS invalid Mailpiece	Mailpiece ID not found in database. Please check AIMS and job configuration and try again
4025	AIMS invalid data	Please check AIMS and job configuration and try again
4026	AIMS invalid page number	Please check AIMS and job configuration and try again
4027	AIMS invalid process type	Please check AIMS and job configuration and try again
4028	AIMS Mailpiece removed	Please check AIMS and job configuration and try again
4029	AIMS Mailpiece added	Please check AIMS and job configuration and try again
4030	AIMS double removed	Please check AIMS and job configuration and try again
4031	AIMS double added	Please check AIMS and job configuration and try again
4040	AIMS create connection failure	Please check AIMS and job configuration and try again
4041	AIMS close connection failure	Please check AIMS and job configuration and try again
4042	AIMS watchdog timeout	Please check AIMS and job configuration and try again
4043	AIMS critical error	Please check AIMS and job configuration and try again
4044	AIMS general error	Please check AIMS and job configuration and try again
4051	AIMS already connected with different parameters	Please check AIMS and job configuration and try again

Error	Description	Action
4052	AIMS invalid job	Action="Database missing for job in AIMS. Please check AIMS and job configuration and try again
4053	AIMS connection already open	Please check AIMS and job configuration and try again
4054	AIMS invalid process type	Please check AIMS and job configuration and try again
4055	AIMS create connection request not received	Please check AIMS and job configuration and try again
4056	AIMS invalid number of arguments in data packet	Please check AIMS and job configuration and try again
4057	AIMS invalid argument in data packet	Please check AIMS and job configuration and try again
4058	AIMS invalid data packet or string	Please check AIMS and job configuration and try again
4500	Unexpected document data at output	Please check envelope content is correct
4996	AIMS empty Mailpiece id field	Please check AIMS configuration
4997	AIMS not licenced for this product	Please check AIMS configuration
4998	AIMS error detected in database	Please check AIMS configuration
4999	AIMS job has already been closed	Please check job configuration for correct job number