




Instructions



Before starting


Remove the old connectors from the drawer, then clean up any debris or unevenness around the front plate screw holes, ensuring that the new connectors sit flush.

1

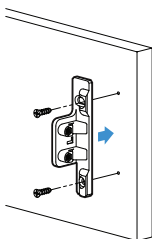


Loosely attach the new connectors in the front plate using the old screws. Do not tighten the screws, to allow for adjustments during the following steps;

2

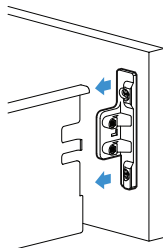


Position the front plate assembly by sliding it into the slots in the drawer's sides. Make sure that the connectors are pushed as far back into the drawer's sides as possible;

3

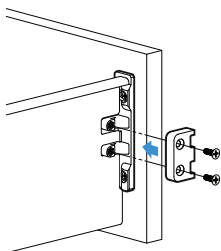

Loosely attach the clamps to the connectors using the provided screws. The hollowed out sides go toward the inside of the drawer. Make sure that the clamp is seated correctly on the protruding tab on the side of the drawer. The clamp should be sitting flush on the side of the drawer.

4

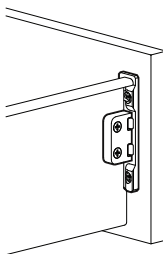

Make any positioning adjustment necessary then tighten the clamps screws, followed by the connectors screws.

DO NOT OVERTIGHTEN SCREWS

A good rule of thumb is to screw until all parts touch each other, then add an additional 1/8 turn.

If you encounter any issue with this product or need any precision, please contact us, we'll be very happy to help!