


MAX MOTIF · FIELD PLATE 07/12

# One painted. One natural.

The table gets a durable Whisper White finish. The bathroom cabinet stays natural, but its existing warp must be stabilized before any clear coat locks in the moisture imbalance.

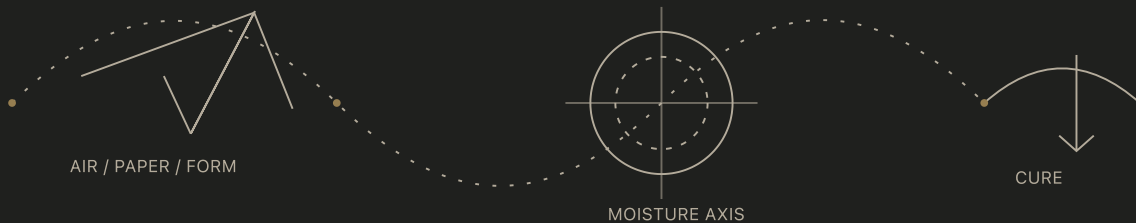

## THE CORRECT SPLIT

# Do not use the same finish on both.

You already own Rust-Oleum 2X colored spray paint, Minwax Dark Walnut stain, 120/220 paper and 99% isopropyl alcohol. The stain and alcohol are not part of this job.

### TABLE

#### Painted Whisper White


Clean, repair, scuff, prime, then apply two thin coats of exact color-matched cabinet/furniture enamel. For a large flat surface, a 4-inch cabinet roller will look more even than aerosol cans.

### BATHROOM CABINET

#### Natural wood, clear protected

First stabilize and assess the warp. Then sand carefully and apply three coats of clear, non-yellowing water-based topcoat. No Dark Walnut stain. No colored Rust-Oleum.

**STOP gate: if a cabinet piece rocks, twists, prevents the drawer from closing, or has swollen/soft plywood, do not finish it yet. Flatten, repair or replace first.**

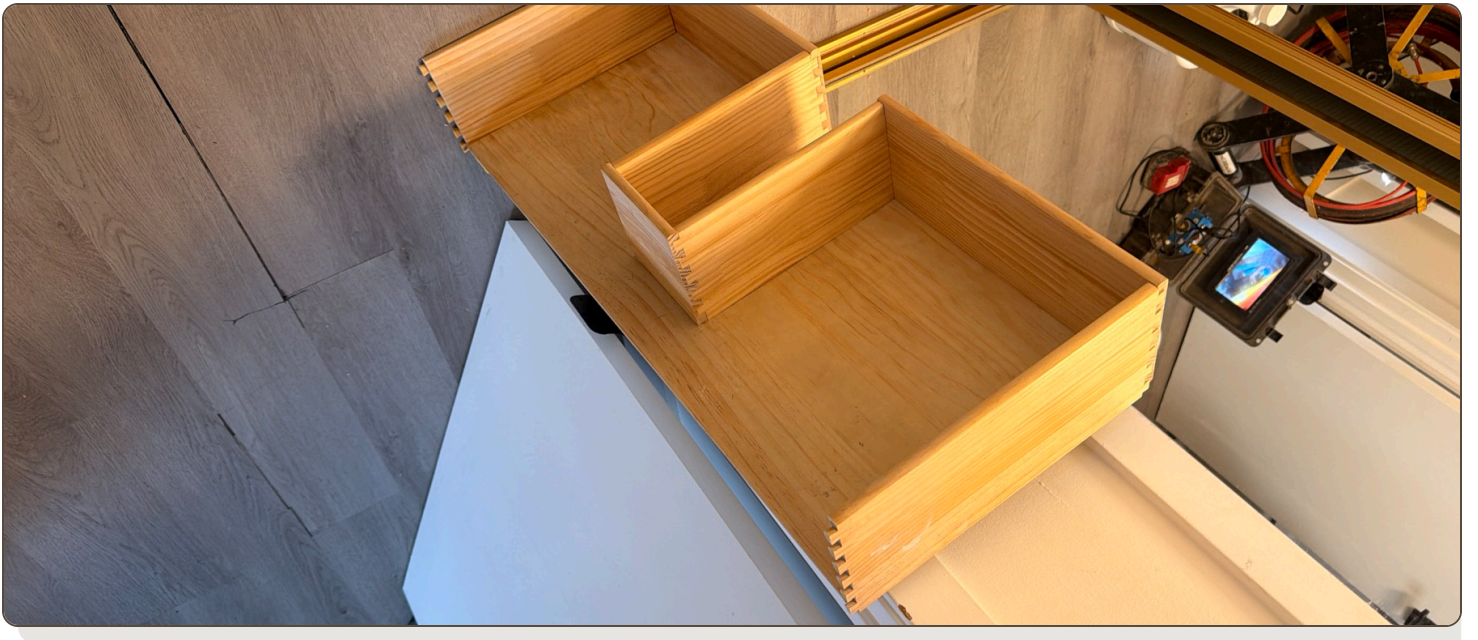

## PROJECT ONE

# Table → Whisper White

Clean



Repair



Scuff



Prime



2 coats



Cure

1

### Inspect before sanding

If the furniture or coating could date before 1978, test for lead before disturbing it. Remove hardware and label every part.

2

### Clean first

Use mild dish soap/water or TSP substitute, then a clean damp wipe. Let dry fully. Do not wipe the painted surface with 99% alcohol; it can soften or smear an unknown finish.

3

### Repair and feather

Fill chips/dents. Use 120 only on pronounced paint ridges or repairs. Scuff the full surface with 180; hand-sand corners and edges. Do not grind to bare wood.

4

### Remove dust

HEPA vacuum with brush attachment, then wipe with a barely damp microfiber cloth. Let dry. Dust left behind becomes permanent texture.

5

### Prime for an even white

Use a bonding/stain-blocking primer, especially over black areas and raw repairs. Apply with a 4-inch cabinet roller and 2-inch angled synthetic brush. Dry per label, then lightly sand 220.

6

### Apply exact Whisper White

Have the paint chip matched in satin cabinet/door/trim enamel. The Rust-Oleum Heirloom White can is not the same color unless you intentionally accept that change. Apply two thin coats; do not overwork paint after it begins to tack.

7

### Cure before assembly

Respect the product's recoat time. Handle gently after 24–48 hours and avoid clamping, stacking or hard use until fully cured—often 5–7 days.

### **If you choose Rust-Oleum 2X anyway**

Use outdoors/open garage at 50–90°F and below 65% humidity. Rust-Oleum's satin TDS says 10–16 inches away, two or more light overlapping coats, and recoat within 1 hour or after 48 hours. Bare wood benefits from dedicated primer. One 12 oz can covers roughly 8–12 sq ft at recommended film thickness; a large tabletop may take several cans and show striping.