Sesame real-to-sim marker sheet

Print at 100 % / actual size (not 'fit to page'). Then measure the bar below: it must be 100 mm.

100 mm scale bar (ticks every 10 mm)

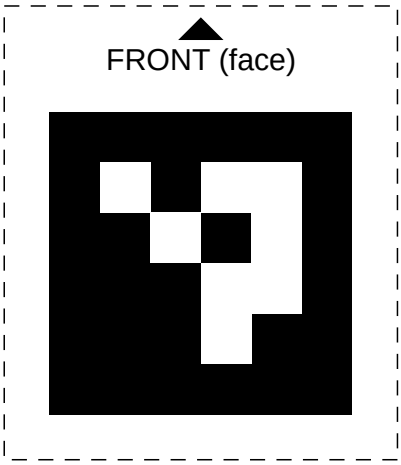

Head marker, 40 mm, id 0. Cut on the dashed line; stick it flat on the head lid, centred, FRONT arrow toward the face. Black square must be 40 mm.

Floor marker, 80 mm, id 1 (optional): tape it flat on the floor, in view, clear of the robot.

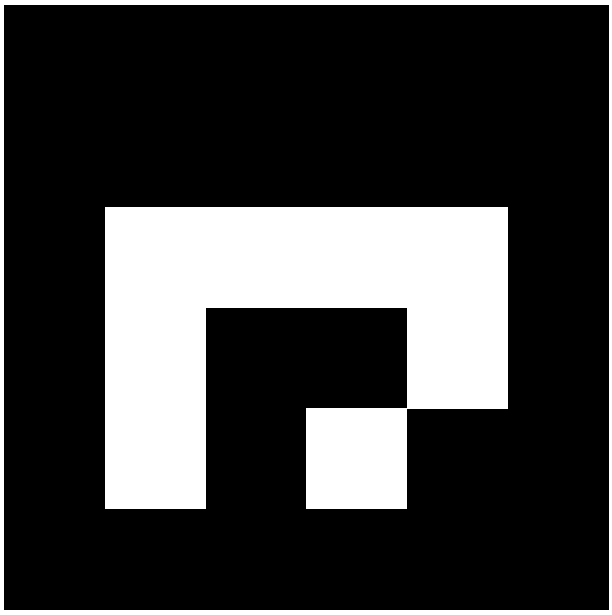

Keep the white margin around each marker. Matte paper; no tape over the black squares.

Generated by tools/real2sim.py sheet (OpenCV ArUco DICT_4X4_50). Nothing has been measured yet.

Camera calibration board (ChArUco 6 x 8, 25 mm squares)

Print at 100 %. Keep it flat (tape it to a book). Film it for 20 s from different angles and distances with the same camera mode used for the robot video.

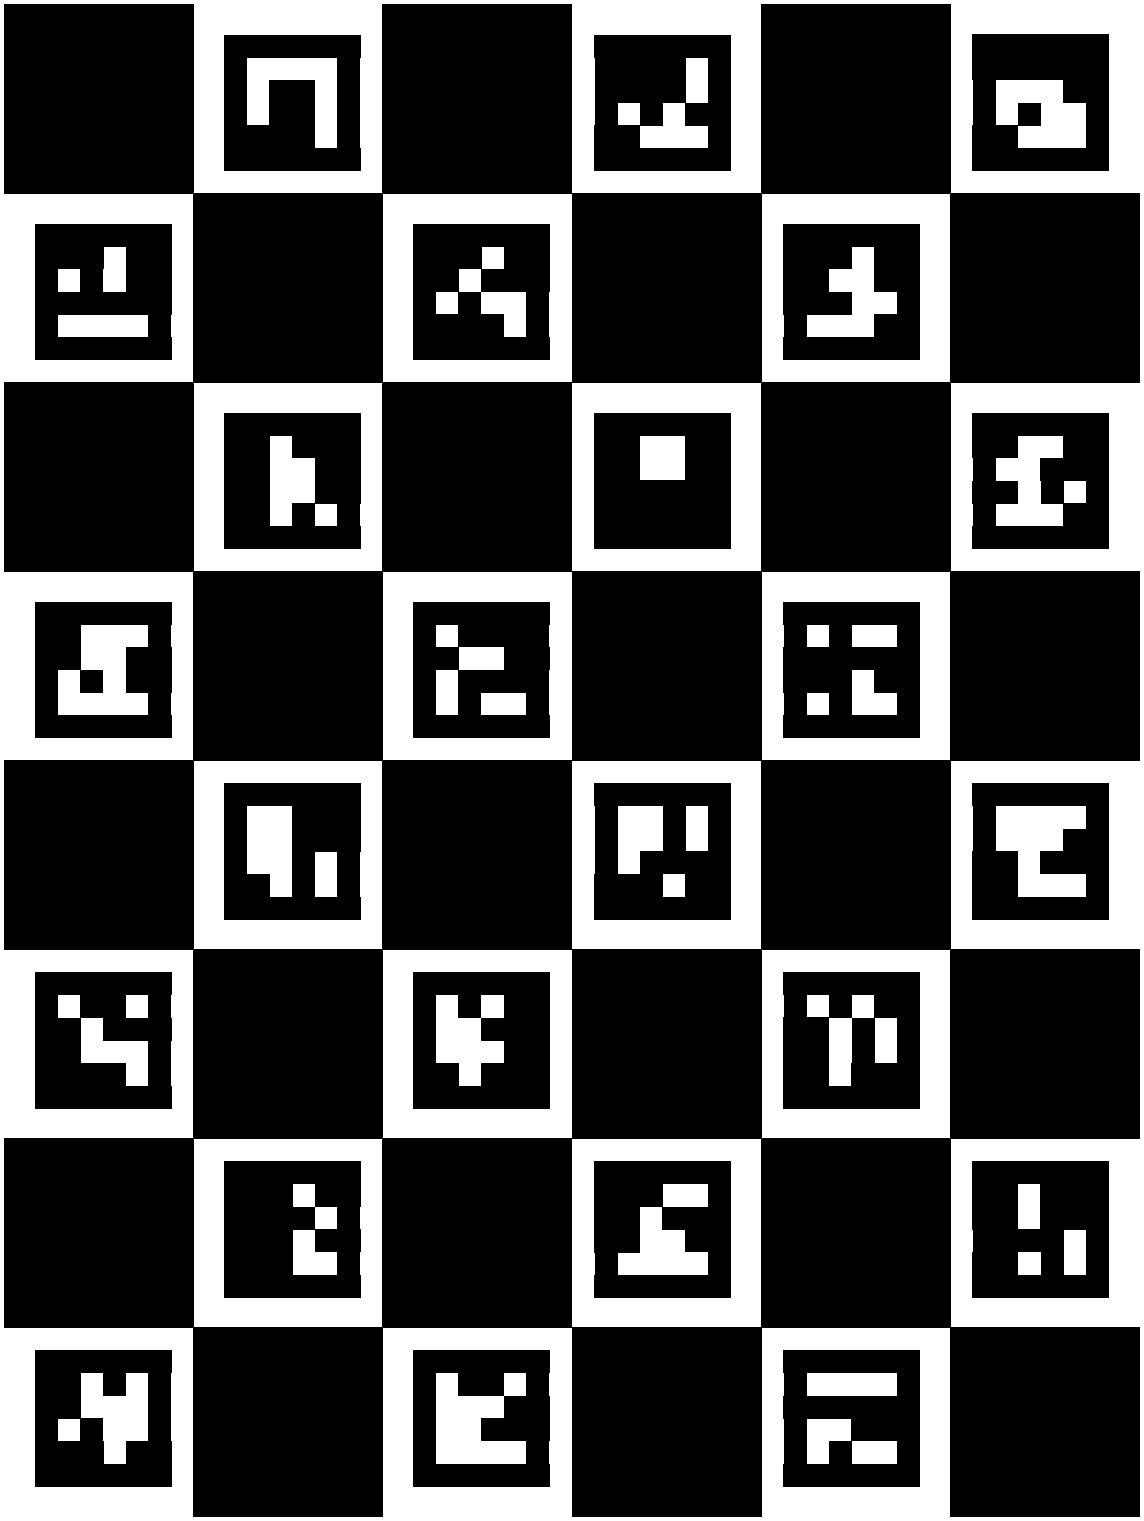

Squares must measure 25 mm. Board 150 x 200 mm.