11、新建CtApCanApp来管理Can报文发送和接收

卖家'漩涡遨游aa' 专属资料，非在漩涡遨游aa 购买资料，不提供答疑(一次购买仅提供有限次数10次答疑)

一、ComM_UserRequest重新调整位置

新建swc步骤可以参考第5节（5、Davinci新增Swc用作GPIO翻转测试）

新建swc CtApCanApp ,把10中的ComM_UserRequest的client port 放回到CtApCanApp

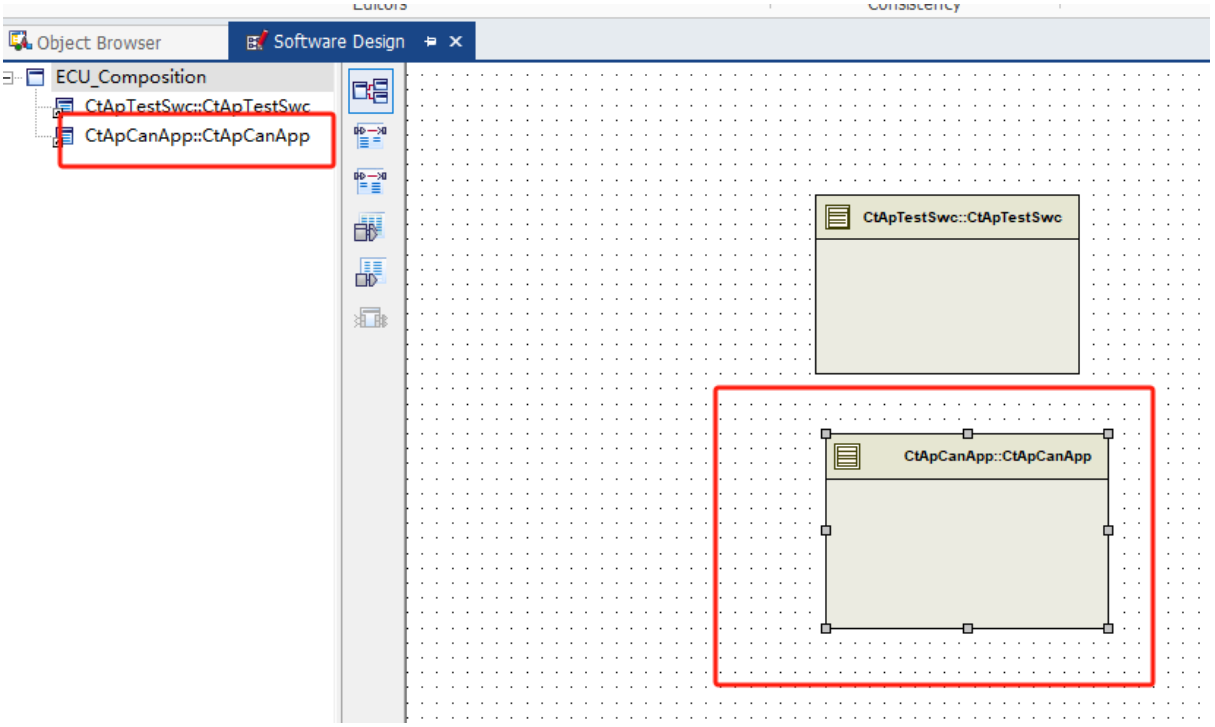

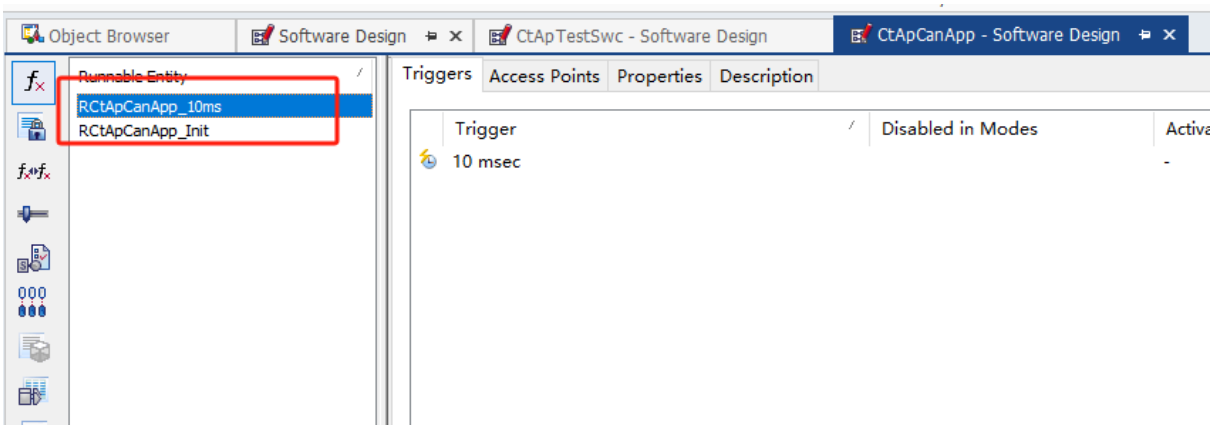

先断开原来CtApTestSwc

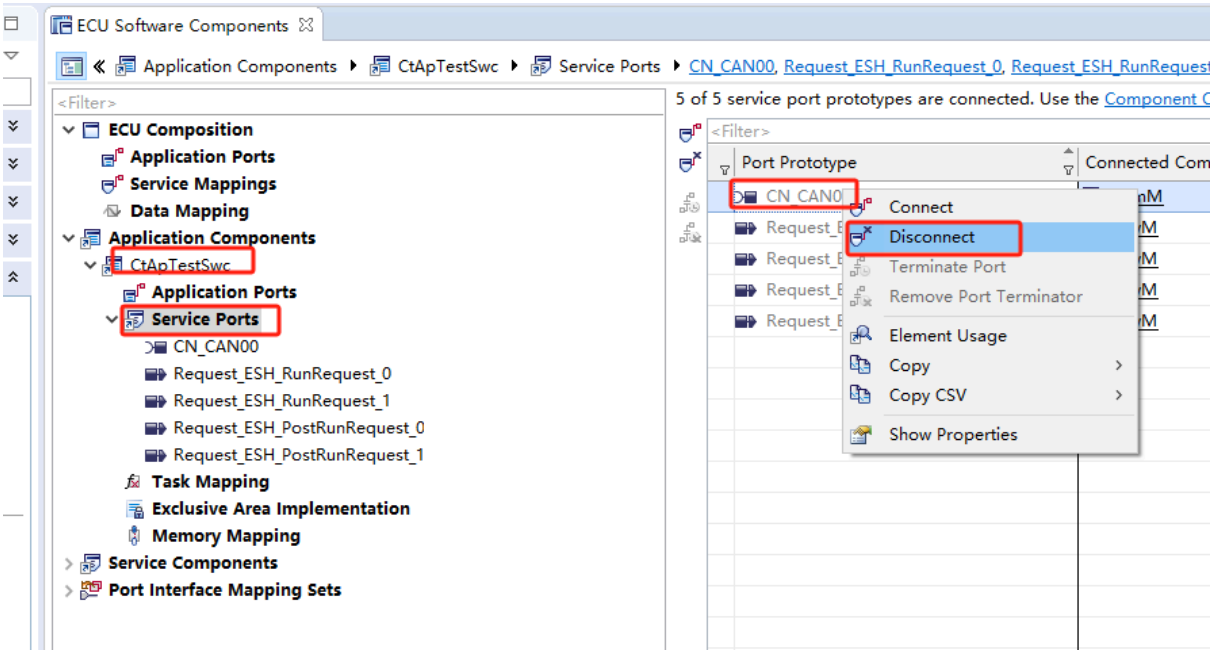

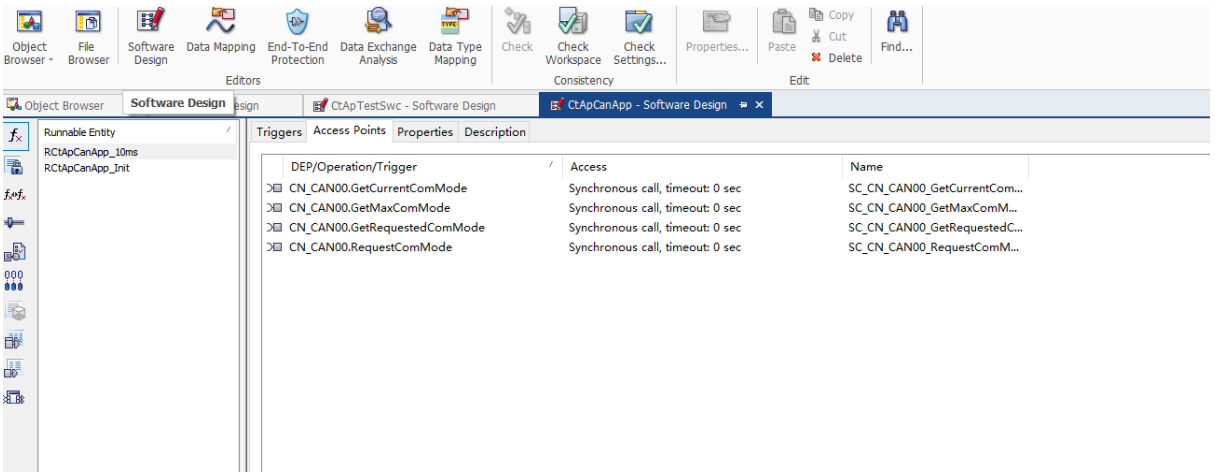

二、对信号接口data mapping

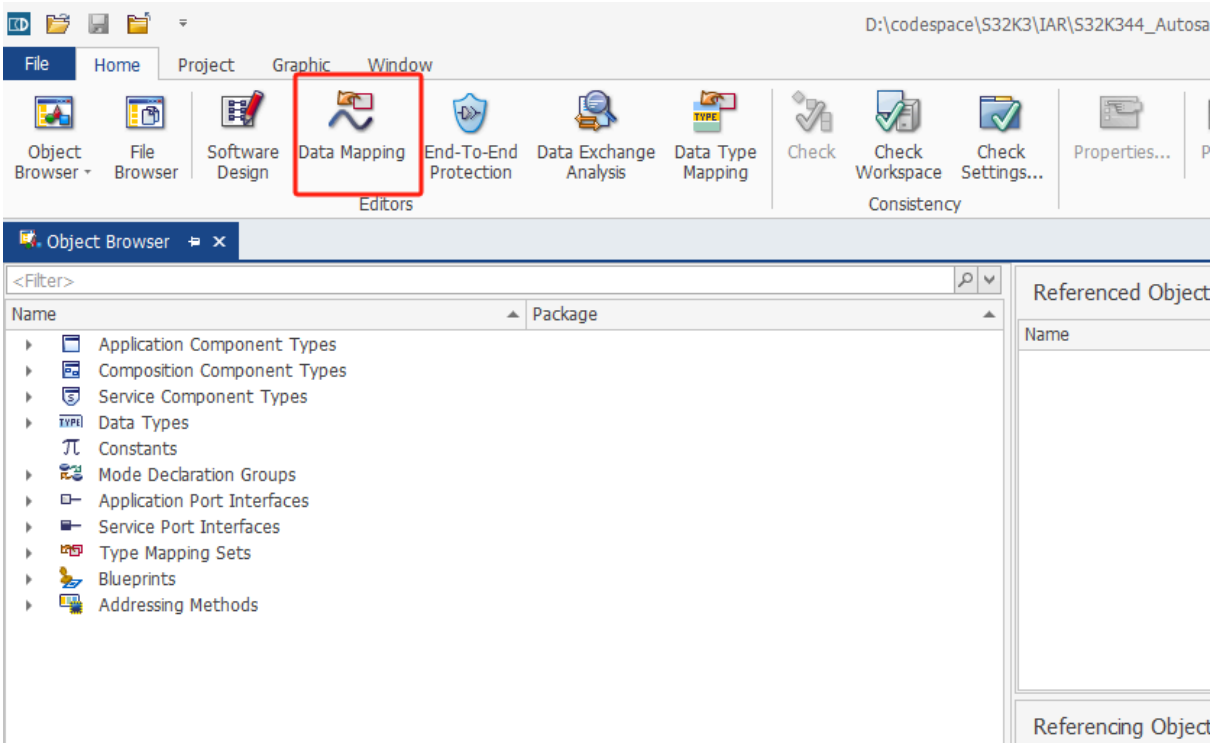

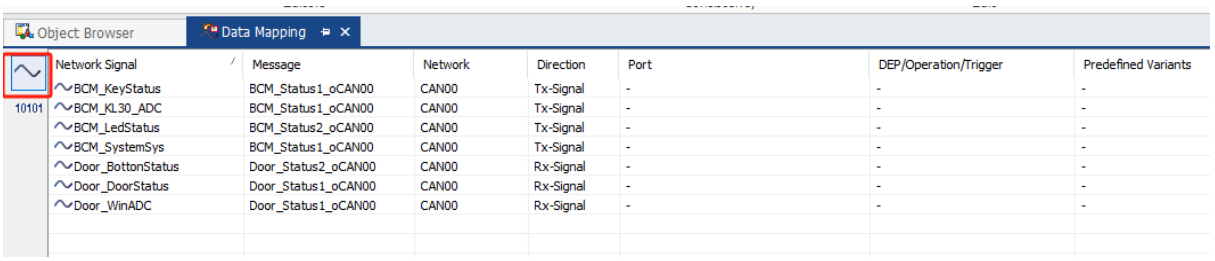

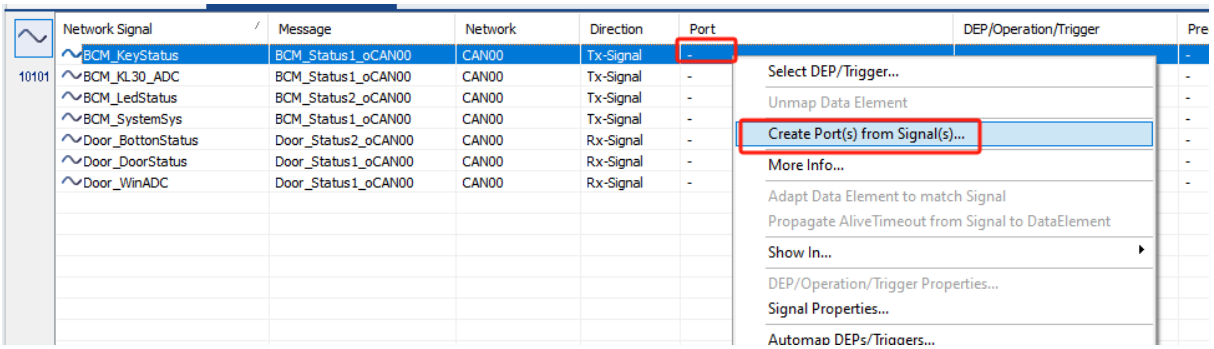

选择swc

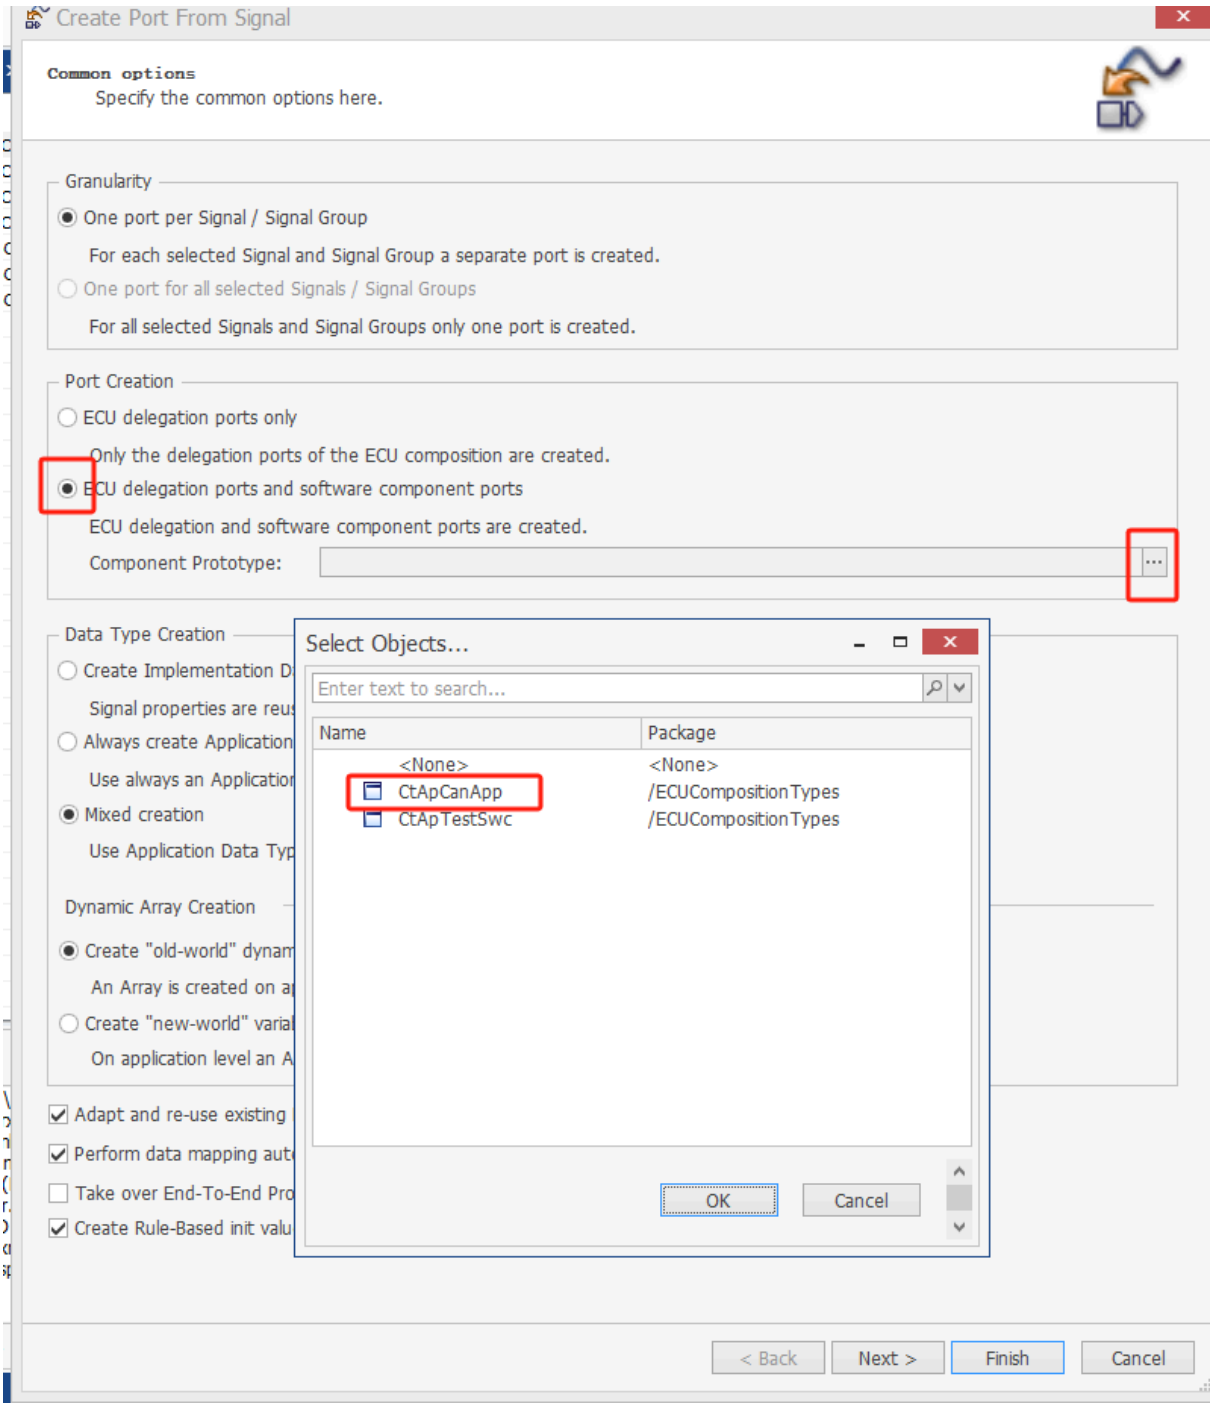

其余信号同样的操作

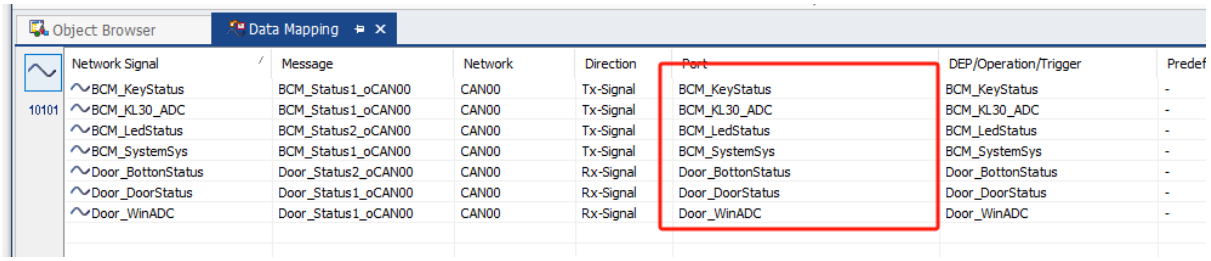

Object Browser | Data Mapping

Network Signal	Message	Network	Direction	Port	DEP/Operation/Trigger	Predef
BCM_KeyStatus	BCM_Status1_oCAN00	CAN00	Tx-Signal	BCM_KeyStatus	BCM_KeyStatus	-
BCM_KL30_ADC	BCM_Status1_oCAN00	CAN00	Tx-Signal	BCM_KL30_ADC	BCM_KL30_ADC	-
BCM_LedStatus	BCM_Status2_oCAN00	CAN00	Tx-Signal	BCM_LedStatus	BCM_LedStatus	-
BCM_SystemSys	BCM_Status1_oCAN00	CAN00	Tx-Signal	BCM_SystemSys	BCM_SystemSys	-
Door_BottonStatus	Door_Status2_oCAN00	CAN00	Rx-Signal	Door_BottonStatus	Door_BottonStatus	-
Door_DoorStatus	Door_Status1_oCAN00	CAN00	Rx-Signal	Door_DoorStatus	Door_DoorStatus	-
Door_WinADC	Door_Status1_oCAN00	CAN00	Rx-Signal	Door_WinADC	Door_WinADC	-

映射后就有信号连线了

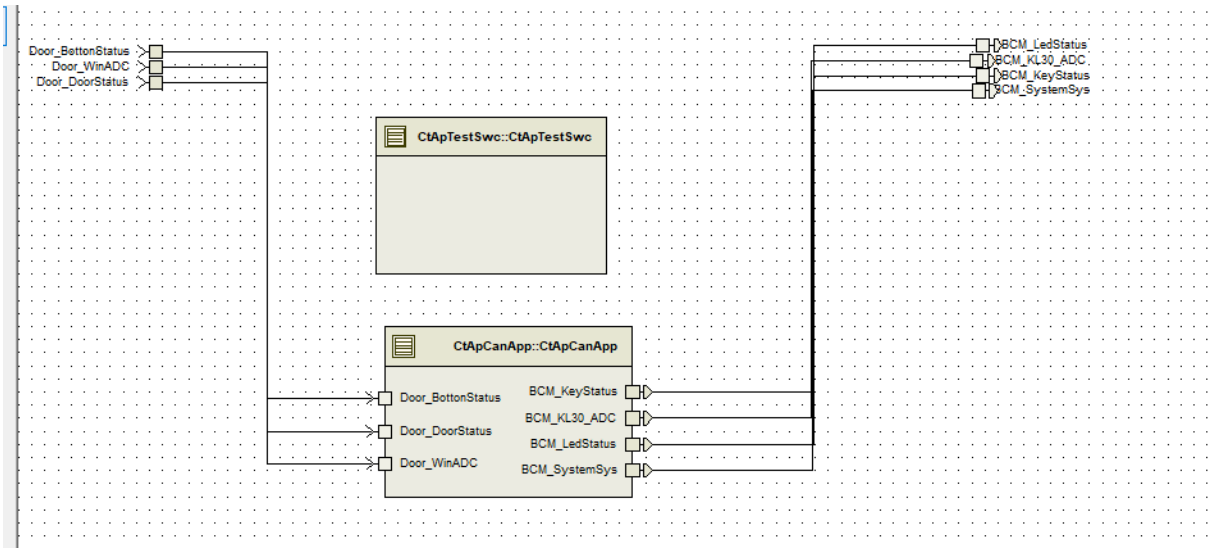

三、swc中添加发送接收信号的接口

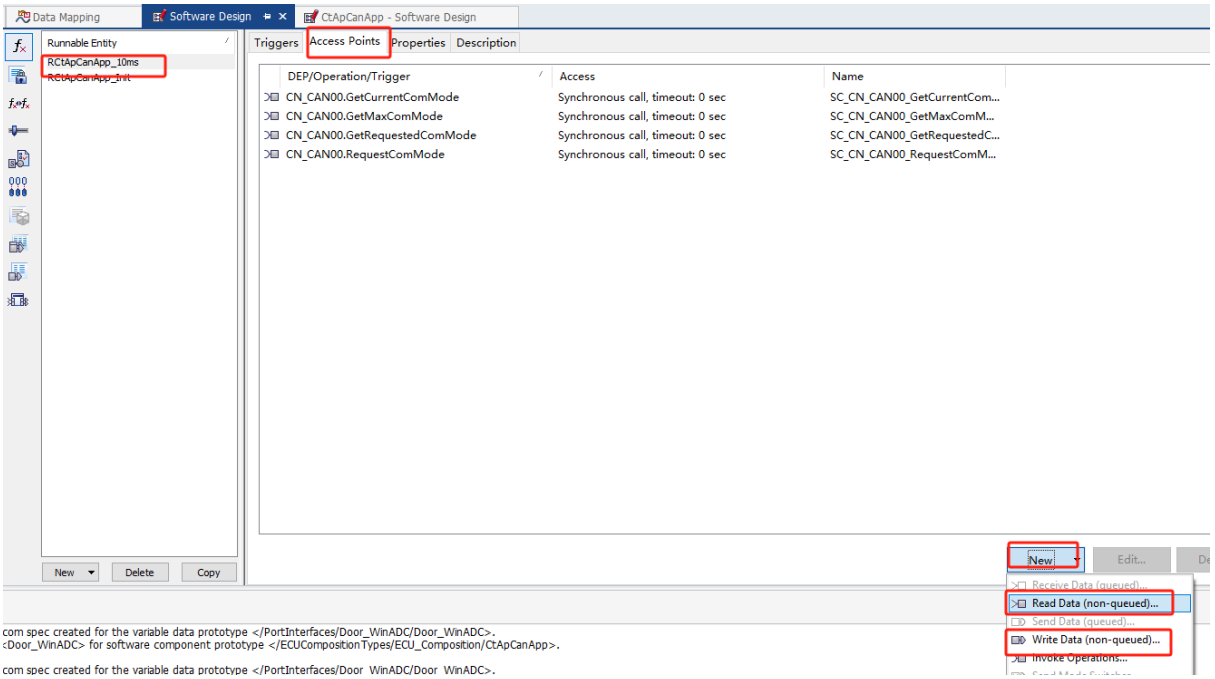

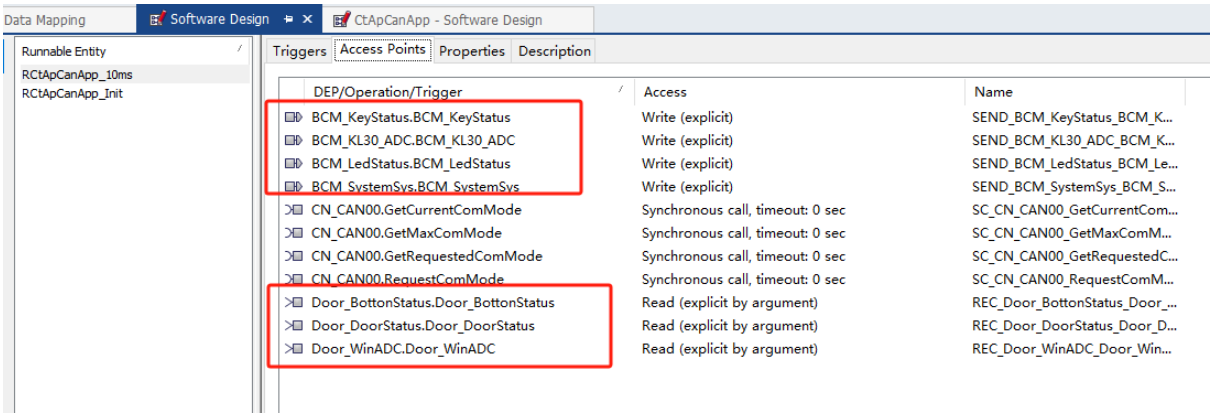

四、同步到davinci

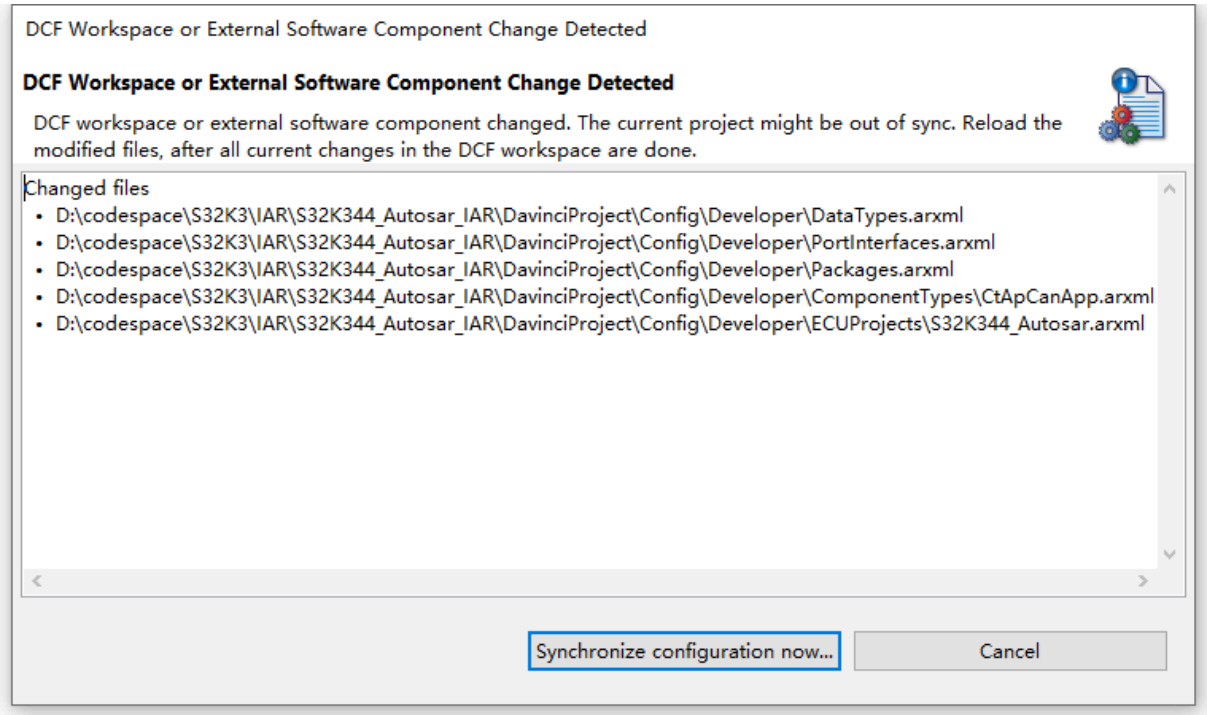

五、生成rte/os,生成swc代码

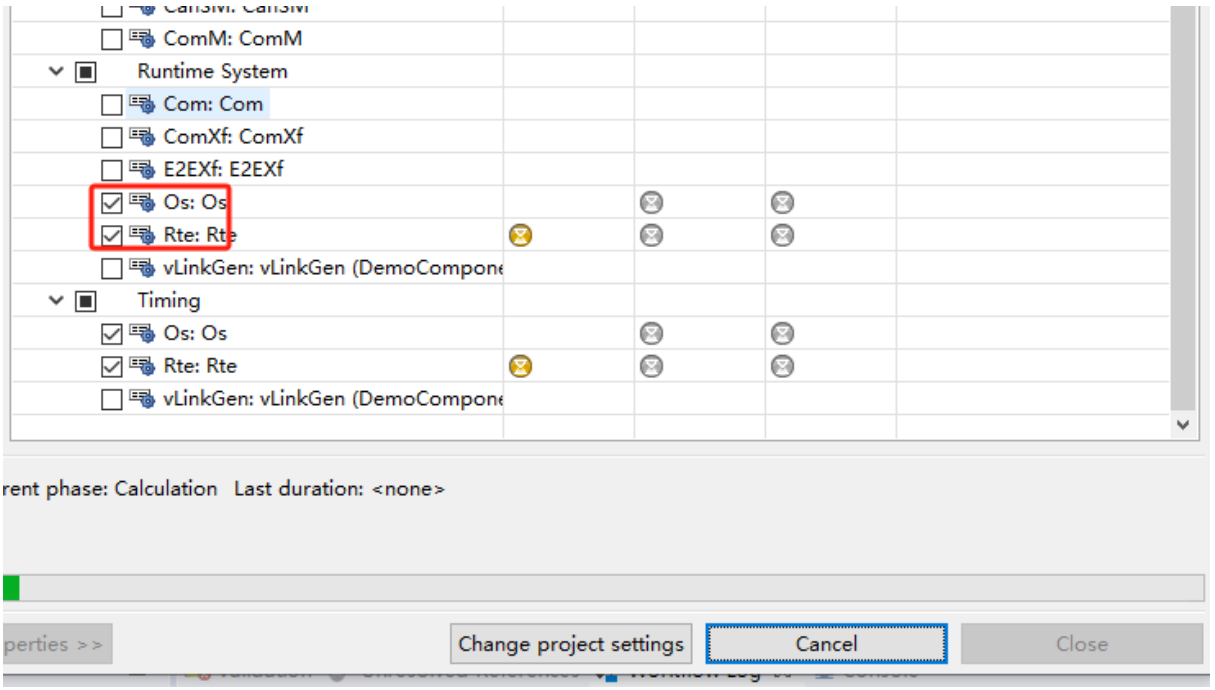

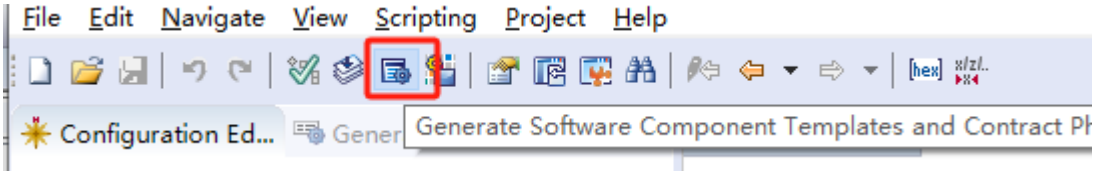

六、IAR编译和添加代码

添加生成的CtApCanApp.c

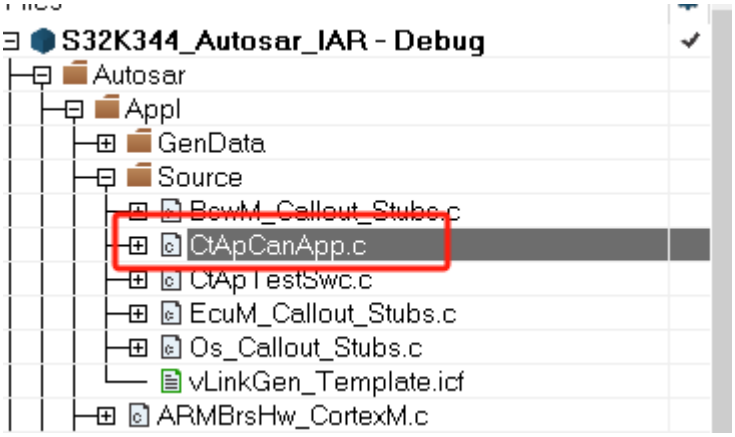

生成的swc 会有相关接口注释

```
 *
 * Input Interfaces:
 * =================
 *   Explicit S/R API:
 *   -----------------
 *   Std_ReturnType Rte_Read_Door_BottonStatus_Door_BottonStatus(Door_BottonStatus *data)
 *   Std_ReturnType Rte_Read_Door_DoorStatus_Door_DoorStatus(Door_DoorStatus *data)
 *   Std_ReturnType Rte_Read_Door_WinADC_Door_WinADC(Door_WinADC *data)
 *
 * Output Interfaces:
 * ==================
 *   Explicit S/R API:
 *   -----------------
 *   Std_ReturnType Rte_Write_BCM_KL30_ADC_BCM_KL30_ADC(BCM_KL30_ADC data)
 *   Std_ReturnType Rte_Write_BCM_KeyStatus_BCM_KeyStatus(BCM_KeyStatus data)
 *   Std_ReturnType Rte_Write_BCM_LedStatus_BCM_LedStatus(BCM_LedStatus data)
 *   Std_ReturnType Rte_Write_BCM_SystemSys_BCM_SystemSys(BCM_SystemSys data)
 *
 * Service Calls:
 * ==============
 *   Service Invocation:
 *   -------------------
 *   Std_ReturnType Rte_Call_CN_CAN00_GetCurrentComMode(ComM_ModeType *ComMode)
 *     Synchronous Service Invocation. Timeout: None
 *     Returned Application Errors: RTE_E_ComM_UserRequest_E_NOT_OK
 *   Std_ReturnType Rte_Call_CN_CAN00_GetMaxComMode(ComM_ModeType *ComMode)
 *     Synchronous Service Invocation. Timeout: None
 *     Returned Application Errors: RTE_E_ComM_UserRequest_E_NOT_OK
 *   Std_ReturnType Rte_Call_CN_CAN00_GetRequestedComMode(ComM_ModeType *ComMode)
 *     Synchronous Service Invocation. Timeout: None
 *     Returned Application Errors: RTE_E_ComM_UserRequest_E_NOT_OK
 *   Std_ReturnType Rte_Call_CN_CAN00_RequestComMode(ComM_ModeType ComMode)
 *     Synchronous Service Invocation. Timeout: None
 *     Returned Application Errors: RTE_E_ComM_UserRequest_E_MODE_LIMITATION, RTE_E_ComM_UserRequest_E_NOT_OK
 *
 **********************************************************************************************************/
/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << Start of documentation area >>                DO NOT CHANGE THIS COMMENT!
 * Symbol: RCtApCanApp_10ms_doc
 **********************************************************************************************************/


/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << End of documentation area >>                  DO NOT CHANGE THIS COMMENT!
 **********************************************************************************************************/

FUNC(void, CtApCanApp_CODE) RCtApCanApp_10ms(void) /* PRQA S 0624, 3206 */ /* MD_Rte_0624, MD_Rte_3206 */
{
/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << Start of runnable implementation >>           DO NOT CHANGE THIS COMMENT!
```

我们调用代码测试

```
FUNC(void, CtApCanApp_CODE) RCtApCanApp_10ms(void) /* PRQA S 0624, 3206 */ /* MD_Rte_0624, MD_Rte_3206 */
{
/**********************************************************************************************************
 * DO NOT CHANGE THIS COMMENT!          << Start of runnable implementation >>           DO NOT CHANGE THIS COMMENT!
 * Symbol: RCtApCanApp_10ms
 **********************************************************************************************************/
  ComM_ModeType ComMode = 0;
  Rte_Call_CN_CAN00_GetCurrentComMode(&ComMode);
  if(ComMode != COMM_FULL_COMMUNICATION){
    Rte_Call_CN_CAN00_RequestComMode(COMM_FULL_COMMUNICATION);
  }
  static BCM_KL30_ADC K30data = 0;
  static BCM_LedStatus LedStatusdata = 0;
  static BCM_KeyStatus KeyStatusdata = 0;
  static BCM_SystemSys SysSdata = 0x55;
  Rte_Write_BCM_KL30_ADC_BCM_KL30_ADC(K30data++);

  Rte_Write_BCM_LedStatus_BCM_LedStatus(LedStatusdata++);
  Rte_Write_BCM_KeyStatus_BCM_KeyStatus(KeyStatusdata--);
  Rte_Write_BCM_SystemSys_BCM_SystemSys(SysSdata);

  Door_DoorStatus DoorStatusdata = 0;
  Door_BottonStatus Bottondata = 0;
  Door_WinADC Windata = 0;
  Rte_Read_Door_DoorStatus_Door_DoorStatus(&DoorStatusdata);
  Rte_Read_Door_BottonStatus_Door_BottonStatus(&Bottondata);
  Rte_Read_Door_WinADC_Door_WinADC(&Windata);
  printf("DoorStatusdata:%02x, Bottondata=%02x, Windata=%02x\r\n",DoorStatusdata,Bottondata,Windata);
```

发送报文数据填充

接收数据打印
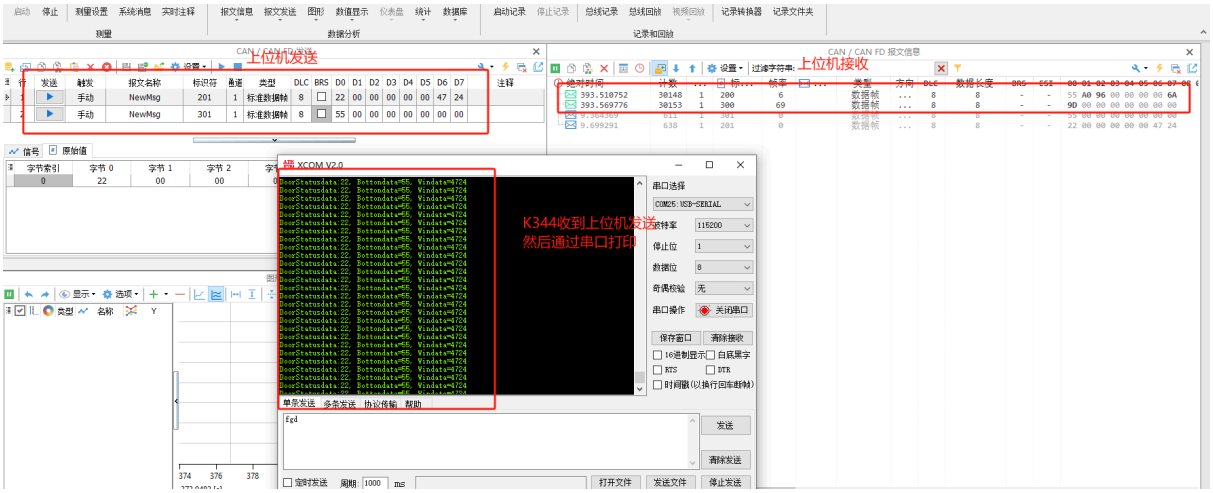
测试的收发正常