Chapter 2

Instructions: Language of the Computer




Instruction Set

- The repertoire of instructions of a computer
- Different computers have different instruction sets
 - But with many aspects in common
- Early computers had very simple instruction sets
 - Simplified implementation
- Many modern computers also have simple instruction sets

Key ISA Decisions

- Operations
 - how many?
 - which ones?
 - length?
- Operands
 - how many?
 - location
 - types
 - how to specify?
- Instruction format
 - size
 - how many formats?

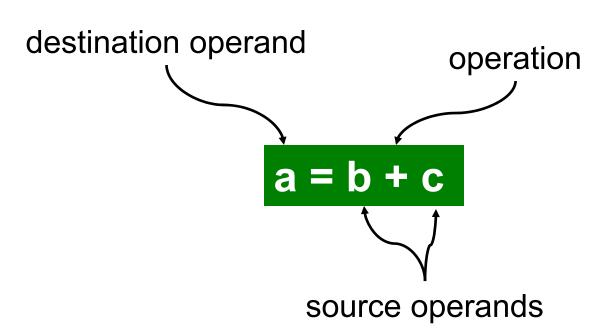

Main ISA Classes

- CISC ("Complex Instruction Set Computers")
 - Digital's VAX (1977) and Intel's x86 (1978)
 - large # of instructions
 - many specialized complex instructions
- RISC ("Reduced Instruction Set Computers")
 - almost all machines of 80's and 90's are RISC
 - MIPS, PowerPC, DEC Alpha, IA64
 - relatively fewer instructions
 - enable pipelining and parallelism

The MIPS Instruction Set

- Used as the example throughout the book
- Stanford MIPS commercialized by MIPS Technologies (<u>www.mips.com</u>)
- Large share of embedded core market
 - Applications in consumer electronics, network/storage equipment, cameras, printers, ...
- Typical of many modern ISAs
 - See MIPS Reference Data tear-out card, and Appendixes B and E

Arithmetic Operations

- Add and subtract, three operands
 - Two sources and one destination add a, b, c # a gets b + c
- All arithmetic operations have this form
- Design Principle 1: Simplicity favours regularity
 - Regularity makes implementation simpler
 - Simplicity enables higher performance at lower cost

Arithmetic Example

C code:

```
f = (g + h) - (i + j);
```

Compiled MIPS code:

```
add t0, g, h # temp t0 = g + h add t1, i, j # temp t1 = i + j sub f, t0, t1 # f = t0 - t1
```

Register Operands

- Arithmetic instructions use register operands
- MIPS has a 32 × 32-bit register file
 - Use for frequently accessed data
 - Numbered 0 to 31
 - 32-bit data called a "word"
- Assembler names
 - \$t0, \$t1, ..., \$t9 for temporary values
 - \$s0, \$s1, ..., \$s7 for saved variables
- Design Principle 2: Smaller is faster
 - c.f. main memory: millions of locations

Register Operand Example

C code:

```
f = (g + h) - (i + j);

• f, ..., j in $s0, ..., $s4
```

Compiled MIPS code:

```
add $t0, $s1, $s2
add $t1, $s3, $s4
sub $s0, $t0, $t1
```

Memory Operands

- Main memory used for composite data
 - Arrays, structures, dynamic data
- To apply arithmetic operations
 - Load values from memory into registers
 - Store result from register to memory
- Memory is byte addressed
 - Each address identifies an 8-bit byte
- Words are aligned in memory
 - Address must be a multiple of 4
- MIPS is Big Endian
 - Most-significant byte at least address of a word
 - c.f. Little Endian: least-significant byte at least address

Memory Operand Example 1

C code:

```
g = h + A[8];
```

- g in \$s1, h in \$s2, base address of A in \$s3
- Compiled MIPS code:
 - Index 8 requires offset of 32
 - 4 bytes per word

Memory Operand Example 2

C code:

```
A[12] = h + A[8];
```

- h in \$s2, base address of A in \$s3
- Compiled MIPS code:
 - Index 8 requires offset of 32

```
Iw $t0, 32($s3)  # Load word
add $t0, $s2, $t0
sw $t0, 48($s3)  # store word
```

Registers vs. Memory

- Registers are faster to access than memory
- Operating on memory data requires loads and stores
 - More instructions to be executed
- Compiler must use registers for variables as much as possible
 - Only spill to memory for less frequently used variables
 - Register optimization is important!

Chapter 2

Instructions: Language of the Computer



Immediate Operands

- Constant data specified in an instruction addi \$s3, \$s3, 4
- No subtract immediate instruction
 - Just use a negative constant addi \$s2, \$s1, -1
- Design Principle 3: Make the common case fast
 - Small constants are common
 - Immediate operand avoids a load instruction

The Constant Zero

- MIPS register 0 (\$zero) is the constant 0
 - Cannot be overwritten
- Useful for common operations
 - E.g., move between registers add \$t2, \$s1, \$zero

Unsigned Binary Integers

Given an n-bit number

$$x = x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: 0 to +2ⁿ 1
- Example
 - 0000 0000 0000 0000 0000 0000 0000 1011₂ = 0 + ... + $1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$ = 0 + ... + 8 + 0 + 2 + 1 = 11_{10}
- Using 32 bits
 - 0 to +4,294,967,295

2s-Complement Signed Integers

Given an n-bit number

$$x = -x_{n-1}2^{n-1} + x_{n-2}2^{n-2} + \dots + x_12^1 + x_02^0$$

- Range: -2^{n-1} to $+2^{n-1}-1$
- Example
- Using 32 bits
 - -2,147,483,648 to +2,147,483,647

2s-Complement Signed Integers

- Bit 31 is sign bit
 - 1 for negative numbers
 - 0 for non-negative numbers
- $-(-2^{n-1})$ can't be represented
- Non-negative numbers have the same unsigned and 2s-complement representation
- Some specific numbers
 - 0: 0000 0000 ... 0000
 - —1: 1111 1111 ... 1111
 - Most-negative: 1000 0000 ... 0000
 - Most-positive: 0111 1111 ... 1111

Signed Negation

- Complement and add 1
 - Complement means $1 \rightarrow 0$, $0 \rightarrow 1$

$$x + x = 1111...111_2 = -1$$

 $x + 1 = -x$

- Example: negate +2
 - $+2 = 0000 0000 \dots 0010_2$
 - $-2 = 1111 \ 1111 \ \dots \ 1101_2 + 1$ = 1111 \ 1111 \ \dots \ 1110_2

Sign Extension

- Representing a number using more bits
 - Preserve the numeric value
- In MIPS instruction set
 - addi : extend immediate value
 - I b, I h: extend loaded byte/halfword
 - beg, bne: extend the displacement
- Replicate the sign bit to the left
 - c.f. unsigned values: extend with 0s
- Examples: 8-bit to 16-bit
 - +2: 0000 0010 => 0000 0000 0000 0010
 - -2: 1111 1110 => 1111 1111 1111 1110

Chapter 2

Instructions: Language of the Computer



Representing Instructions

- Instructions are encoded in binary
 - Called machine code
- MIPS instructions
 - Encoded as 32-bit instruction words
 - Small number of formats encoding operation code (opcode), register numbers, ...
 - Regularity!
- Register numbers
 - \$t0 \$t7 are reg's 8 15
 - \$t8 \$t9 are reg's 24 25
 - \$s0 \$s7 are reg's 16 23

MIPS R-format Instructions

	op	rs	rt	rd	shamt	funct
_	6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

- Instruction fields
 - op: operation code (opcode)
 - rs: first source register number
 - rt: second source register number
 - rd: destination register number
 - shamt: shift amount (00000 for now)
 - funct: function code (extends opcode)

R-format Example

ор	rs	rt	rd	shamt	funct
6 bits	5 bits	5 bits	5 bits	5 bits	6 bits

add \$t0, \$s1, \$s2

special	\$s1	\$s2	\$tO	0	add
0	17	18	8	0	32
000000	10001	10010	01000	00000	100000

 $00000010001100100100000000100000_2 = 02324020_{16}$

Hexadecimal

- Base 16
 - Compact representation of bit strings
 - 4 bits per hex digit

0	0000	4	0100	8	1000	С	1100
1	0001	5	0101	9	1001	d	1101
2	0010	6	0110	а	1010	е	1110
3	0011	7	0111	b	1011	f	1111

- Example: eca8 6420
 - 1110 1100 1010 1000 0110 0100 0010 0000


MIPS I-format Instructions




- Immediate arithmetic and load/store instructions
 - rt: destination or source register number
 - Constant: -2¹⁵ to +2¹⁵ 1
 - Address: offset added to base address in rs
- Design Principle 4: Good design demands good compromises
 - Different formats complicate decoding, but allow 32-bit instructions uniformly
 - Keep formats as similar as possible

Stored Program Computers

The BIG Picture



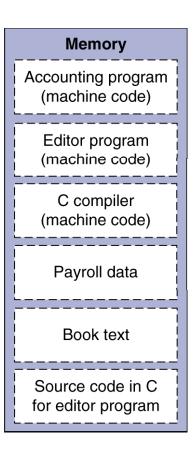

- Instructions represented in binary, just like data
- Instructions and data stored in memory
- Programs can operate on programs
 - e.g., compilers, linkers, ...
- Binary compatibility allows compiled programs to work on different computers
 - Standardized ISAs


Logical Operations

Instructions for bitwise manipulation

Operation	С	Java	MIPS	
Shift left	<<	<<	sH	
Shift right	>>	>>>	srl	
Bitwise AND	&	&	and, andi	
Bitwise OR			or, ori	
Bitwise NOT	~	~	nor	

 Useful for extracting and inserting groups of bits in a word

Shift Operations



- shamt: how many positions to shift
- Shift left logical
 - Shift left and fill with 0 bits
 - sI I by i bits multiplies by 2i
- Shift right logical
 - Shift right and fill with 0 bits
 - srl by i bits divides by 2i (unsigned only)

AND Operations

- Useful to mask bits in a word
 - Select some bits, clear others to 0

```
and $t0, $t1, $t2
```

```
$t2 | 0000 0000 0000 0000 01 01 1100 0000
```

OR Operations

- Useful to include bits in a word
 - Set some bits to 1, leave others unchanged

```
or $t0, $t1, $t2
```

NOT Operations

- Useful to invert bits in a word
 - Change 0 to 1, and 1 to 0
- MIPS has NOR 3-operand instruction
 - a NOR b == NOT (a OR b)

```
nor $t0, $t1, $zero ← ____
```

Register 0: always read as zero

- \$t1 | 0000 0000 0000 0001 1100 0000 0000
- \$t0 | 1111 1111 1111 1100 0011 1111 1111

Chapter 2

Instructions: Language of the Computer




Conditional Operations

- Branch to a labeled instruction if a condition is true
 - Otherwise, continue sequentially
- beq rs, rt, L1
 - if (rs == rt) branch to instruction labeled L1;
- bne rs, rt, L1
 - if (rs != rt) branch to instruction labeled L1;
- j L1
 - unconditional jump to instruction labeled L1

Compiling If Statements

C code:

- f, g, ... in \$s0, \$s1, ...
- Compiled MIPS code:

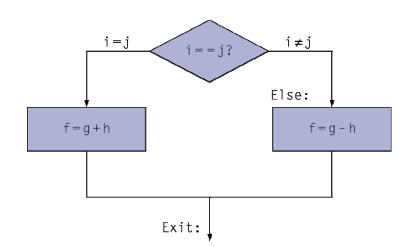

```
bne $s3, $s4, Else
add $s0, $s1, $s2
j Exit
```

Else: sub \$s0, \$s1, \$s2

Exi t: *...

Assembler calculates addresses

Compiling Loop Statements

C code:


```
while (save[i] == k) i += 1;
```

- i in \$s3, k in \$s5, address of save in \$s6
- Compiled MIPS code:

```
Loop: sll $t1, $s3, 2
add $t1, $t1, $s6
lw $t0, 0($t1)
bne $t0, $s5, Exit
addi $s3, $s3, 1
j Loop
```

Basic Blocks

- A basic block is a sequence of instructions with
 - No embedded branches (except at end)
 - No branch targets (except at beginning)

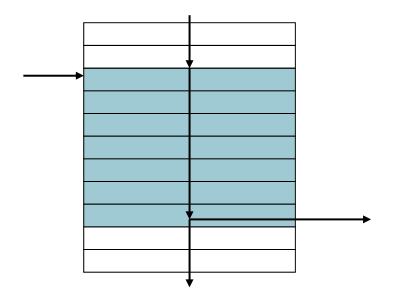

- A compiler identifies basic blocks for optimization
- An advanced processor can accelerate execution of basic blocks

More Conditional Operations

- Set result to 1 if a condition is true
 - Otherwise, set to 0
- slt rd, rs, rt
 - if (rs < rt) rd = 1; else rd = 0;
- slti rt, rs, constant
 - if (rs < constant) rt = 1; else rt = 0;</p>
- Use in combination with beq, bne

```
slt $t0, $s1, $s2 # if ($s1 < $s2)
bne $t0, $zero, L # branch to L
```

Branch Instruction Design

- Why not bl t, bge, etc?
- Hardware for <, ≥, ... slower than =, ≠</p>
 - Combining with branch involves more work per instruction, requiring a slower clock
 - All instructions penalized!
- beq and bne are the common case
- This is a good design compromise

Signed vs. Unsigned

- Signed comparison: sl t, sl ti
- Unsigned comparison: sl tu, sl tui
- Example

 - sl t \$t0, \$s0, \$s1 # signed ■ -1 < +1 \Rightarrow \$t0 = 1
 - sl tu \$t0, \$s0, \$s1 # unsi gned ■ +4,294,967,295 > +1 \Rightarrow \$t0 = 0

Chapter 2

Instructions: Language of the Computer



Procedure Calling

- Steps required
 - Place parameters in registers
 - 2. Transfer control to procedure
 - 3. Acquire storage for procedure
 - 4. Perform procedure's operations
 - 5. Place result in register for caller
 - 6. Return to place of call

Register Usage

- \$a0 \$a3: arguments (reg's 4 7)
- \$v0, \$v1: result values (reg's 2 and 3)
- \$t0 \$t9: temporaries
 - Can be overwritten by callee
- \$s0 \$s7: saved
 - Must be saved/restored by callee
- \$gp: global pointer for static data (reg 28)
- \$sp: stack pointer (reg 29)
- \$fp: frame pointer (reg 30)
- \$ra: return address (reg 31)

Procedure Call Instructions

- Procedure call: jump and link j al ProcedureLabel
 - Address of following instruction put in \$ra
 - Jumps to target address
- Procedure return: jump register j r \$ra
 - Copies \$ra to program counter
 - Can also be used for computed jumps
 - e.g., for case/switch statements

Leaf Procedure Example

C code:

```
int leaf_example (int g, h, i, j)
{ int f;
    f = (g + h) - (i + j);
    return f;
}
```

- Arguments g, ..., j in \$a0, ..., \$a3
- f in \$s0 (hence, need to save \$s0 on stack)
- Result in \$v0

Leaf Procedure Example

MIPS code:

leaf_example:						
addi	\$sp,	\$sp,	-4			
SW	\$s0,	0(\$s	0)			
add	\$t0,	\$a0,	\$a1			
add	\$t1,	\$a2,	\$a3			
sub	\$s0,	\$t0,	\$t1			
add	\$v0,	\$s0,	\$zero			
I w	\$s0,	0(\$s	0)			
addi	\$sp,	\$sp,	4			
jr	\$ra					

Save \$s0 on stack

Procedure body

Result

Restore \$s0

Return

Non-Leaf Procedures

- Procedures that call other procedures
- For nested call, caller needs to save on the stack:
 - Its return address
 - Any arguments and temporaries needed after the call
- Restore from the stack after the call

Non-Leaf Procedure Example

C code:

```
int fact (int n)
{
  if (n < 1) return f;
  else return n * fact(n - 1);
}</pre>
```


- Argument n in \$a0
- Result in \$v0

Non-Leaf Procedure Example

MIPS code:

```
fact:
   addi $sp, $sp, -8
                       # adjust stack for 2 items
   sw $ra, 4($sp)
                       # save return address
   sw $a0, 0($sp)
                       # save argument
   sl ti $t0, $a0, 1
                        \# test for n < 1
   beq $t0, $zero, L1
   addi $v0, $zero, 1
                       # if so, result is 1
   addi $sp, $sp, 8
                        # pop 2 items from stack
                        # and return
   jr $ra
L1: addi $a0, $a0, -1
                        # else decrement n
        fact
                        # recursive call
   i al
        $a0, 0($sp)
                       # restore original n
   l w
   lw $ra, 4($sp)
                        # and return address
   addi $sp, $sp, 8
                        # pop 2 items from stack
        $v0, $a0, $v0
                        # multiply to get result
   mul
   jr
                        # and return
        $ra
```

Local Data on the Stack

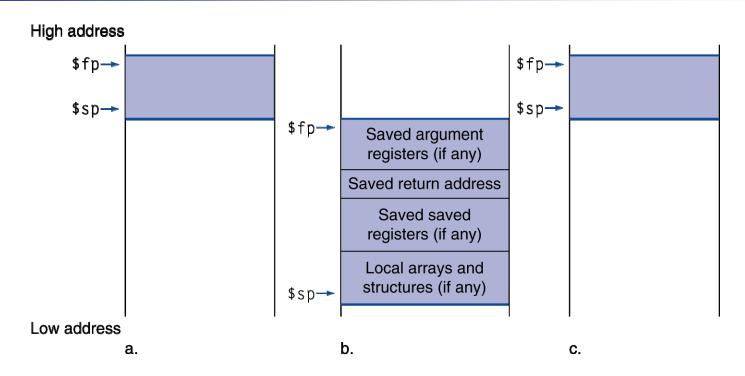

- Local data allocated by callee
 - e.g., C automatic variables
- Procedure frame (activation record)
 - Used by some compilers to manage stack storage


Chapter 2

Instructions: Language of the Computer



Memory Layout

- Text: program code
- Static data: global variables
 - e.g., static variables in C, constant arrays and strings
 - \$gp initialized to address allowing ±offsets into this segment
- Dynamic data: heap
 - E.g., malloc in C, new in Java
- Stack: automatic storage

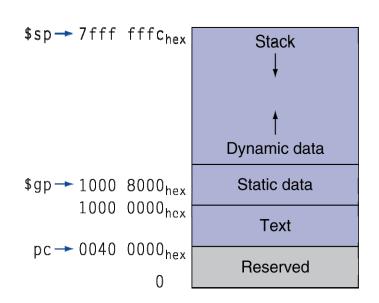

32-bit Constants

- Most constants are small
 - 16-bit immediate is sufficient
- For the occasional 32-bit constant lui rt, constant
 - Copies 16-bit constant to left 16 bits of rt
 - Clears right 16 bits of rt to 0

Branch Addressing

- Branch instructions specify
 - Opcode, two registers, target address
- Most branch targets are near branch
 - Forward or backward

ор	rs	rt	constant or address
6 bits	5 bits	5 bits	16 bits

- PC-relative addressing
 - Target address = PC + offset × 4
 - PC already incremented by 4 by this time

Jump Addressing

- Jump (j and j al) targets could be anywhere in text segment
 - Encode full address in instruction

ор	address
6 bits	26 bits

- (Pseudo)Direct jump addressing
 - Target address = PC_{31...28}: (address × 4)

Target Addressing Example

- Loop code from earlier example
 - Assume Loop at location 80000

Loop:	sH	\$t1,	\$s3,	2	80000	0	0	19	9	4	0
	add	\$t1,	\$t1,	\$ s6	80004	0	9	22	9	0	32
	I w	\$t0,	O(\$t1)		80008	35	9	8	0		
	bne	\$t0,	\$s5,	Exi t	80012	5	8	21	2		
	addi	\$s3,	\$s3,	1	80016	8	19	19	1		
	j	Loop			80020	2	20000				
Exi t:					80024	-					

Branching Far Away

- If branch target is too far to encode with 16-bit offset, assembler rewrites the code
- Example

```
beq $s0, $s1, L1

↓

bne $s0, $s1, L2

j L1

L2: ...
```

Addressing Mode Summary

