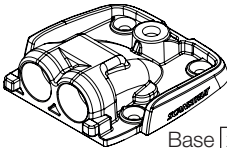
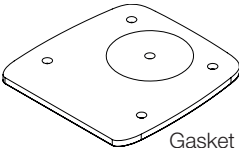



Parts List			
	Shell	x1	
	Base	x1	
	Gasket	x1	
	M5X10 Bolt - (Black)	x1	
	No. 6 X16 Self tapping screw	x4	
	2x Blank		
	2x 5mm		
	2x 6mm		
	Bungs	x6	

Tools Required	
	Pozi Screwdriver
	Silicone
	ø2.5mm (3/32") ø3mm (1/8") Drill Bit
	ø25mm (1") Hole Saw/Drill Bit


1

Choose bung closest to cable ø.

DE - Wähle Dichtung nahe dem Kabel ø.
IT - Scegliere il passafili adatto al ø del cavo.
ES - Elija el tapón con el diámetro más parecido al cable.
FR - Choisissez le joint le plus proche du diamètre du câble.

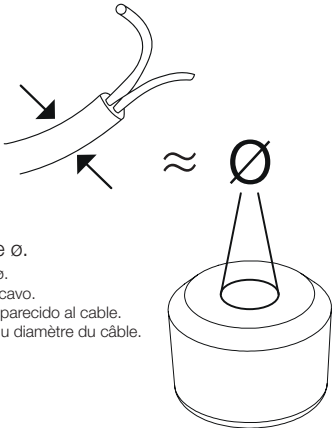


2

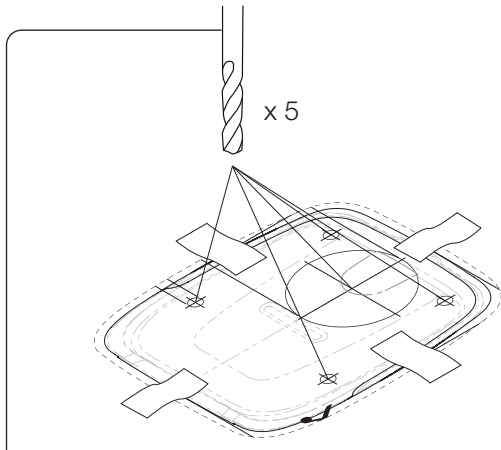


Material	Drill	Fixing
Soft Material e.g. plywood	2.5mm (3/32")	No.6 Screw (Included)
Hard Material e.g. fiberglass, hardwoods, acrylics	3mm (1/8")	
Metal e.g. Steel, aluminium	3mm (1/8")	Recommended >12mm x M3 Countersunk Bolt with washer and Nyloc (Not included)

3

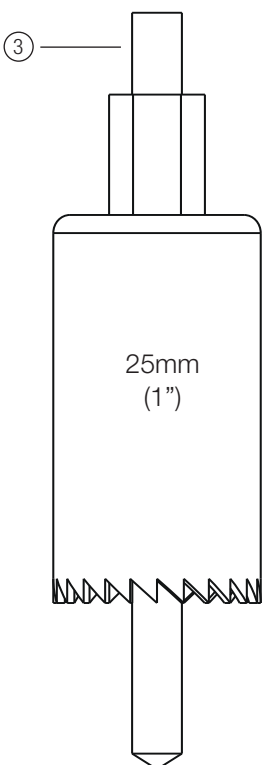


4


Deburr

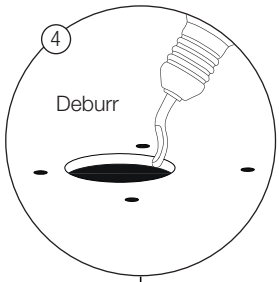

5

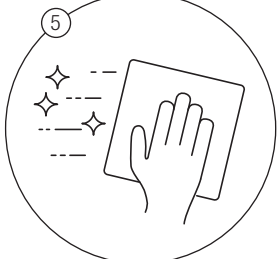

6


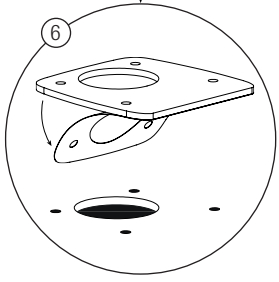


UK & International
+44 (0)1392531280
sales@scanstrut.com

For further installation
and warranty information
please visit:
www.scanstrut.com

USA
+1 860 308 1416
usasales@scanstrut.com



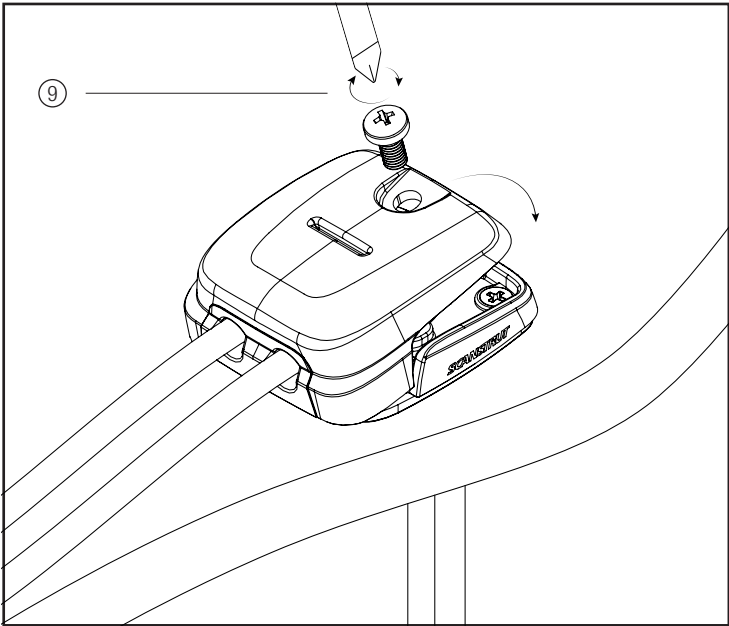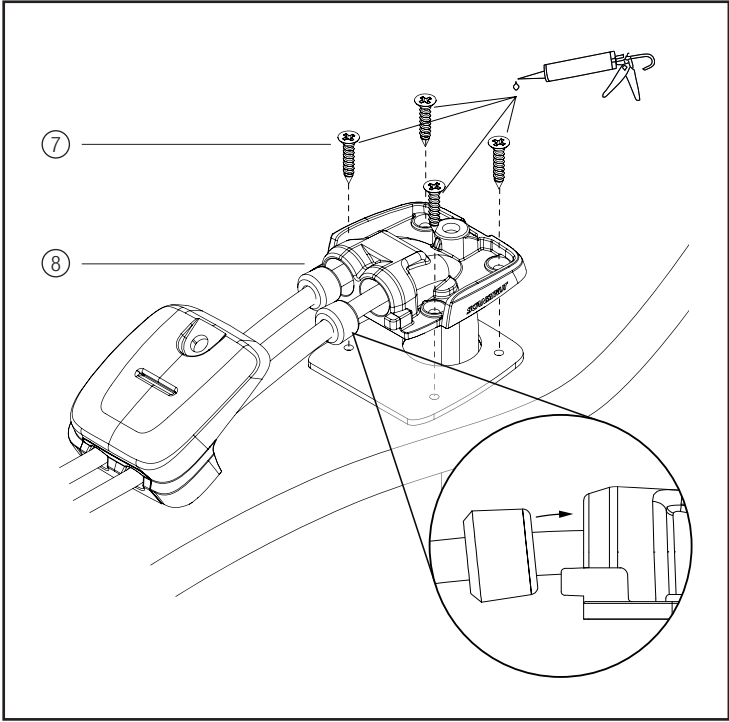

Cutting Template

Warning Check Scale

50 mm

2"

Print document 1:1 Scale
for correct cutting template size.

Share your installation with us.



UK & International
+44 (0)1392531280
sales@scanstrut.com

For further installation
and warranty information
please visit:
www.scanstrut.com

USA
+1 860 308 1416
usasales@scanstrut.com

