
maxon motor control	EPOS2 Positioning Controller
Cable Starting Set	Edition August 2010

# **EPOS2** 24/2

Positioning Controller

# Cable Starting Set

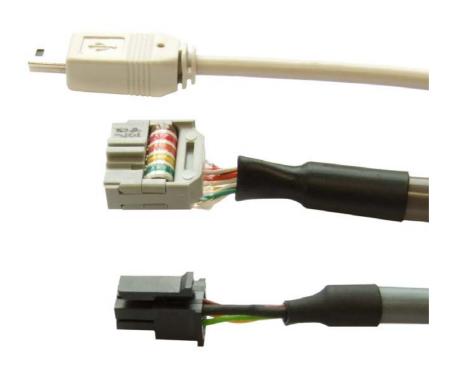

Document ID: rel1704

### PLEASE READ THIS FIRST



These instructions are intended for qualified technical personnel. Prior commencing with any activities ...

- · you must carefully read and understand this manual and
- you must follow the instructions given therein.

We have tried to provide you with all information necessary to install and commission the equipment in a **secure**, **safe** and **time-saving** manner. Our main focus is ...

- · to familiarize you with all relevant technical aspects,
- · to let you know the easiest way of doing,
- to alert you of any possibly dangerous situation you might encounter or that you might cause if you do not follow the description,
- to write as little and to say as much as possible and
- · not to bore you with things you already know.

Likewise, we tried to skip repetitive information! Thus, you will find things **mentioned just once**. If, for example, an earlier mentioned action fits other occasions you then will be directed to that text passage with a respective reference.



Follow any stated reference – observe respective information – then go back and continue with the task!

#### Prerequisites for Permission to commence Installation

The EPOS2 24/2 is considered as partly completed machinery according to EU's directive 2006/42/EC, Article 2, Clause (g) and therefore is intended to be incorporated into or assembled with other machinery or other partly completed machinery or equipment.



You must not put the device into service, ...

- unless you have made completely sure that the other machinery the surrounding system the device is intended to be incorporated to – fully complies with the requirements stated in the EU directive 2006/42/EC!
- unless the surrounding system fulfills all relevant health and safety aspects!
- unless all respective interfaces have been established and fulfill the stated requirements!

# **TABLE OF CONTENTS**

1	About this Do	ocument	5
2	Introduction		8
	2.1	Documentation Structure	8
	2.2	Safety Precautions	9
3	Cables	•	10
	3.1	Important Notice: Prerequisites for Permission to commence Installation	10
	3.2	Tools	10
	3.3	Cable Selector	11
	3.4	Cable Assemblies	12
		3.4.1 EPOS Encoder Cable (275934) – Connector J3	
		3.4.2 EPOS Encoder Cable (275934) – Connector J9	14
		3.4.3 EPOS Motor/Hall Sensor Cable (302948) – Connector J10	16
		3.4.4 EPOS DC Motor Cable (303490) – Connector J10	18
		3.4.5 EPOS Encoder Cable (275934) – Connector J11	19
		3.4.6 EPOS RS232-COM Cable (275900) – Connector J12	21
		3.4.7 EPOS CAN-COM Cable (275908) – Connector J13	22
		3.4.8 EPOS CAN-CAN Cable (275926) – Connector J13	23
		3.4.9 EPOS CAN-Y Cable (319471) – Connector J13	24
		3.4.10 EPOS Signal Cable 1 (275932) – Connector J14	25
		3.4.11 EPOS2 USB Type A-mini B Cable (370513) – Connector J15	27
	3.5	FPOS2 24/2 Connector Set (303807)	28

••page intentionally left blank••

# 1 About this Document

### 1.1 Intended Purpose

The purpose of the present document is to familiarize you with the described equipment and the tasks on safe and adequate installation and/or commissioning.

Observing the described instructions in this document will help you ...

- · to avoid dangerous situations,
- · to keep installation and/or commissioning time at a minimum and
- to increase reliability and service life of the described equipment.

Use for other and/or additional purposes is not permitted. maxon motor, the manufacturer of the equipment described, does not assume any liability for loss or damage that may arise from any other and/or additional use than the intended purpose.

### 1.2 Target Audience

This document is meant for trained and skilled personnel working with the equipment described. It conveys information on how to understand and fulfill the respective work and duties.

This document is a reference book. It does require particular knowledge and expertise specific to the equipment described.

#### 1.3 How to use

Take note of the following notations and codes which will be used throughout the document.

Notation	Explanation
(n)	referring to an item (such as order number, list item, etc.)
<b>→</b>	denotes "see", "see also", "take note of" or "go to"

Table 1-1 Notations used in this Document

### 1.4 Symbols and Signs

#### 1.4.1 Safety Alerts



Take note of when and why the alerts will be used and what the consequences are if you should fail to observe them!

Safety alerts are composed of...

- · a signal word,
- · a description of type and/or source of the danger,
- · the consequence if the alert is being ignored, and
- · explanations on how to avoid the hazard.

Following types will be used:

#### 1) DANGER

Indicates an **imminently hazardous situation**. If not avoided, the situation will result in death or serious injury.

#### 2) WARNING

Indicates a **potentially hazardous situation**. If not avoided, the situation **can** result in death or serious injury.

#### 3) CAUTION

Indicates a **probable hazardous situation** and is also used to alert against unsafe practices. If not avoided, the situation **may** result in minor or moderate injury.

#### Example:



#### **DANGER**

#### High Voltage and/or Electrical Shock

#### Touching live wires causes death or serious injuries!

- Make sure that neither end of cable is connected to life power!
- · Make sure that power source cannot be engaged while work is in process!
- Obey lock-out/tag-out procedures!
- Make sure to securely lock any power engaging equipment against unintentional engagement and tag with your name!

#### 1.4.2 Prohibited Actions and Mandatory Actions

The signs define prohibitive actions. So, you must not!

Examples:



Do not touch!



Do not operate!

The signs point out actions to avoid a hazard. So, you must!

Examples:



Unplug!



Tag before work!

#### 1.4.3 Informatory Signs



#### Requirement / Note / Remark

Indicates an action you must perform prior continuing or refers to information on a particular item.



#### **Best Practice**

Gives advice on the easiest and best way to proceed.



#### Material Damage

Points out information particular to potential damage of equipment.



#### Reference

Refers to particular information provided by other parties.

#### 1.5 Trademarks and Brand Names

For easier legibility, registered brand names are listed below and will not be further tagged with their respective trademark. It must be understood that the brands (the below list is not necessarily concluding) are protected by copyright and/or other intellectual property rights even if their legal trademarks are omitted in the later course of this document.

The brand name(s)	is/are a registered trademark(s) of
Micro-Fit <sup>™</sup> Mini-Fit Jr. <sup>™</sup>	© Molex, USA-Lisle, IL

Table 1-2 Brand Names and Trademark Owners

# 1.6 Copyright

© 2010 maxon motor. All rights reserved.

The present document – including all parts thereof – is protected by copyright. Any use (including reproduction, translation, microfilming and other means of electronic data processing) beyond the narrow restrictions of the copyright law without the prior approval of maxon motor ag, is not permitted and subject to persecution under the applicable law.

#### maxon motor ag

Brünigstrasse 220 P.O.Box 263 CH-6072 Sachseln Switzerland

Phone +41 (41) 666 15 00 Fax +41 (41) 666 16 50

www.maxonmotor.com

# 2 Introduction

The present document provides you with information on the wiring details for each cable which will be used with the EPOS2 24/2 hardware. It contains pictures, drawings, cable specification, pin assignment and detailed connector information. The included «Cable Selector» will help you to choose the correct cable for the setup you are using.

The EPOS2 24/2 Positioning Controller is available in different variants possessing an identical basic setup, however, their individual configuration varies slightly. The present document covers the entire scope on all variants, thus providing you with all relevant information regardless of the actual type of controller you are using.

Find the latest edition of the present document, as well as additional documentation and software to the EPOS2 24/2 Positioning Controller also on the internet:

- →www.maxonmotor.com category «Service & Downloads»
- →shop.maxonmotor.com

#### 2.1 Documentation Structure

The present document is part of a documentation set. Please find below an overview on the documentation hierarchy and the interrelationship of its individual parts:

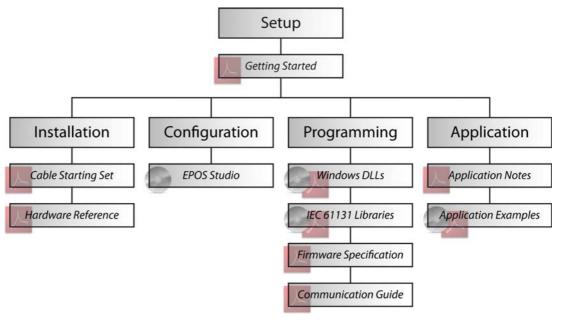


Figure 2-1 Documentation Structure

### 2.2 Safety Precautions

Prior continuing ...

- make sure you have read and understood chapter "PLEASE READ THIS FIRST" on page A-2,
- do not engage with any work unless you possess the stated skills (→chapter "1.2 Target Audience" on page 1-5,
- refer to chapter "1.4 Symbols and Signs" on page 1-5 to understand the subsequently used indicators,
- you must observe any regulation applicable in the country and/or at the site of implementation with regard to health and safety/accident prevention and/or environmental protection,
- take note of the subsequently used indicators and follow them at all times.



#### **DANGER**

#### High Voltage and/or Electrical Shock

Touching live wires causes death or serious injuries!

- Consider any power cable as connected to life power, unless having proven the opposite!
- Make sure that neither end of cable is connected to life power!
- Make sure that power source cannot be engaged while work is in process!
- · Obey lock-out/tag-out procedures!
- Make sure to securely lock any power engaging equipment against unintentional engagement and tag with your name!



#### Requirements

- Make sure that all associated devices and components are installed according to local regulations.
- Be aware that, by principle, an electronic apparatus can not be considered fail-safe. Therefore, you
  must make sure that any machine/apparatus has been fitted with independent monitoring and safety
  equipment. If the machine/apparatus should break down, if it is operated incorrectly, if the control unit
  breaks down or if the cables break or get disconnected, etc., the complete drive system must return –
  and be kept in a safe operating mode.
- Be aware that you are not entitled to perform any repair on components supplied by maxon motor.



#### Electrostatic Sensitive Device (ESD)

- Make sure to wear working cloth in compliance with ESD.
- · Handle device with extra care.

Cables

Important Notice: Prerequisites for Permission to commence Installation

# 3 Cables

# 3.1 Important Notice: Prerequisites for Permission to commence Installation

The EPOS2 24/2 is considered as partly completed machinery according to EU's directive 2006/42/EC, Article 2, Clause (g) and therefore is only intended to be incorporated into or assembled with other machinery or other partly completed machinery or equipment.



#### **WARNING**

#### Risk of Injury

Operating the device without the full compliance of the surrounding system with the EU directive 2006/42/EC may cause serious injuries!

- Do not operate the device, unless you have made sure that the other machinery fulfills the requirements stated in EU's directive!
- Do not operate the device, unless the surrounding system fulfills all relevant health and safety aspects!
- Do not operate the device, unless all respective interfaces have been established and fulfill the stated requirements!

#### 3.2 Tools

If you should decide not to use the ready-made cable assemblies, we strongly recommenced to employ the following hand tools.

Tools						
Crimper	Molex hand crimper (63819-0000)					
Chimper	Molex hand crimper (63819-0900)					

Table 3-3 Recommended Tools

# 3.3 Cable Selector

Use the following table to find the matching cables for the maxon motor variant and type of equipment you will be using:

Cable		EPOS2 24/2						Communication		
			390438	380264	390003			Communication		
Designation	Order #	Connector	DC motor with integrated motor/encoder ribbon cable	EC motor with integrated motor/Hall sensor cable	DC motor with separated encoder cable	DC motor with integrated motor/encoder ribbon cable	EC motor with separated Hall sensor & encoder cables	USB	RS232	CAN
	275934	J3	0							
EPOS Encoder Cable		J9		0						
		J11			0	0	0			
EPOS Motor/Hall Sensor Cable	302948	J10					Х			
EPOS DC Motor Cable	303490	J10			Х					
EPOS Signal Cable 1	275932	J14			Х	Х	Х			
EPOS RS232-COM Cable	275900	J12			0	0	0		Х	
EPOS CAN-COM Cable	275908	J13			0	0	0			Х
EPOS CAN-CAN Cable	275926	J13			0	0	0			0
EPOS CAN Y-Cable 319471		J13			0	0	0			0
EPOS2 USB type A-mini-B Cable	370513	J15	Х	Х	Х	Х	Х	Х		
Legend: X = required / O = optional										

X = required / O = optional

Table 3-4 Cable Selector

# 3.4 Cable Assemblies

# 3.4.1 EPOS Encoder Cable (275934) – Connector J3



Figure 3-2 EPOS Encoder Cable

Technical Data							
Cable cross-section	10 x AWG28, round-jacket, twisted pair flat cable, pitch 1.27 mm						
Length	3.20 m						
Head A	DIN 41651 female connector, pitch 2.54 mm, 10 poles, plug strain relief						
Head B	DIN 41651 Plug, pitch 2.54 mm, 10 poles, plug strain relief						

Table 3-5 EPOS Encoder Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
brown	1	1	1	Motor+	Motor terminal "+"
white	2	2		+5 VDC / 100 mA	Encoder supply voltage
red	3	3	2	GND	Ground
white	4	4	2	Motor-	Motor terminal "-"
orange	5	5	3	Channel A\	Channel A complement
white	6	6	3	Channel A	Channel A
yellow	7	7	4	Channel B\	Channel B complement
white	8	8	4	Channel B	Channel B
green	9	9	5	Channel I\	Index complement
white	10	10	3	Channel I	Index

Table 3-6 EPOS Encoder Cable – Pin Assignment, J3



#### Note

EPOS encoder cable head B. The pin out suits, for example:

• maxon digital MR Encoder type M, S (all with Line Driver)

### 3.4.2 EPOS Encoder Cable (275934) – Connector J9



Figure 3-3 EPOS Encoder Cable

Technical Data							
Cable cross-section	10 x AWG28, round-jacket, twisted pair flat cable, pitch 1.27 mm						
Length	3.20 m						
Head A	DIN 41651 female connector, pitch 2.54 mm, 10 poles, plug strain relief						
Head B	DIN 41651 Plug, pitch 2.54 mm, 10 poles, plug strain relief						

Table 3-7 EPOS Encoder Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
brown	1	1	1	not connected	-
white	2	2		+5 VDC / 100 mA	Encoder supply voltage
red	3	3	2	GND	Ground
white	4	4	2	not connected	-
orange	5	5	3	Channel A\	Channel A complement
white	6	6	3	Channel A	Channel A
yellow	7	7	4	Channel B\	Channel B complement
white	8	8	4	Channel B	Channel B
green	9	9	5	Channel I\	Index complement
white	10	10	3	Channel I	Index

Table 3-8 EPOS Encoder Cable – Pin Assignment, J9



#### Note

EPOS encoder cable head B. The pin out suits, for example:

- maxon digital MR-Encoder type L, M, ML (all with Line Driver)
- maxon digital encoder HEDL 55\_ (with Line Driver RS422)

### 3.4.3 EPOS Motor/Hall Sensor Cable (302948) – Connector J10

Head A Head B



Figure 3-4 EPOS Motor/Hall Sensor Cable

Technical Data							
Cable cross-section	Cable 1: 1 x 3 x 0.25 mm <sup>2</sup> , shielded Cable 2: 1 x 5 x 0.14 mm <sup>2</sup> , shielded						
Length	3 m						
Head A	Molex Micro-Fit 3.0 8 poles (430-25-0800) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx) Cable lug Ø3.2 mm (for M3 screws)						
Head B	Cable end sleeves 0.25 mm <sup>2</sup> Cable end sleeves 0.14 mm <sup>2</sup>						

Table 3-9 EPOS Motor/Hall Sensor Cable – Technical Data

#### **DC Motor**

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
white2	1		_	not connected	
brown2	2		_	not connected	_
green1	3		_	not connected	_
white1	4		_	Motor+	Motor terminal "+"
grey2	5		_	not connected	_
green2	6		_	not connected	_
yellow2	7		_	not connected	_
brown1	8		_	Motor-	Motor terminal "-"

Table 3-10 EPOS Motor/Hall Sensor Cable – Pin Assignment (DC Motor), J10

#### **EC Motor**

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
white2	1		_	Hall sensor 3	Hall sensor 3 input
brown2	2		_	Hall sensor 2	Hall sensor 2 input
green1	3		_	Motor winding 3	Winding 3
white1	4		_	Motor winding 1	Winding 1
grey2	5		_	+V <sub>Hall</sub>	Hall sensor supply voltage (+5 VDC / 30 mA)
green2	6		_	Hall sensor 1	Hall sensor 1 input
yellow2	7		_	GND	Ground
brown1	8		_	Motor winding 2	Winding 2

Table 3-11 EPOS Motor/Hall Sensor Cable – Pin Assignment (EC Motor), J10

### 3.4.4 EPOS DC Motor Cable (303490) – Connector J10



Figure 3-5 EPOS Motor/Hall Sensor Cable

Technical Data				
Cable cross-section	2 x 0.25 mm <sup>2</sup> , shielded			
Length	3 m			
Head A	Molex Micro-Fit 3.0 8 poles (430-25-0800) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx) Cable lug Ø3.2 mm (for M3 screws)			
Head B	Cable end sleeves 0.25 mm <sup>2</sup>			

Table 3-12 EPOS Motor/Hall Sensor Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
white	1		_	not connected	
brown	2		_	not connected	_
green	3		_	not connected	_
white	4		_	Motor+	Motor terminal "+"
grey	5		_	not connected	_
green	6		_	not connected	_
yellow	7		_	not connected	_
brown	8		_	Motor-	Motor terminal "-"

Table 3-13 EPOS Motor/Hall Sensor Cable – Pin Assignment, J10

### 3.4.5 EPOS Encoder Cable (275934) – Connector J11



Figure 3-6 EPOS Encoder Cable

Technical Data				
Cable cross-section	10 x AWG28, round-jacket, twisted pair flat cable, pitch 1.27 mm			
Length	3.20 m			
Head A	DIN 41651 female connector, pitch 2.54 mm, 10 poles, plug strain relief			
Head B	DIN 41651 Plug, pitch 2.54 mm, 10 poles, plug strain relief			

Table 3-14 EPOS Encoder Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
brown	1	1	1	Motor+	Motor terminal "+"
white	2	2	'	+5 VDC / 100 mA	Encoder supply voltage
red	3	3	2	GND	Ground
white	4	4	2	Motor-	Motor terminal "-"
orange	5	5	3	Channel A\	Channel A complement
white	6	6	J	Channel A	Channel A
yellow	7	7	4	Channel B\	Channel B complement
white	8	8	4	Channel B	Channel B
green	9	9	5	Channel I\	Index complement
white	10	10	3	Channel I	Index

Table 3-15 EPOS Encoder Cable – Pin Assignment, J11



### Note

EPOS encoder cable head B. The pin out suits, for example:

• maxon digital MR Encoder type M, S (all with Line Driver)

### 3.4.6 EPOS RS232-COM Cable (275900) – Connector J12



Figure 3-7 EPOS RS232-COM Cable

Technical Data				
Cable cross-section	2 x 2 x 0.14 mm <sup>2</sup> , twisted pair, shielded			
Length	3 m			
Head A	Molex Micro-Fit 3.0 6 poles (430-25-0600) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx)			
Head B	Female D-Sub connector DIN 41652, 9 poles, with mounting screws			

Table 3-16 EPOS RS232-COM Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
yellow	1	3	1	EPOS RxD	EPOS RS232 receive
white	2	2	2	EPOS TxD	EPOS RS232 transmit
green	4	5	1	GND	RS232 ground
brown	5	5	2	GND	RS232 ground
black	6	_	_	Shield	Cable shield
_	_	Housing	_	Shield	Cable shield, soldered to connector housing
Remark: pin assignment according to RS232 Standard					

Table 3-17 EPOS RS232-COM Cable – Pin Assignment, J12

### 3.4.7 EPOS CAN-COM Cable (275908) – Connector J13



Figure 3-8 EPOS CAN-COM Cable

Technical Data					
Cable cross-section	2 x 2 x 0.14 mm <sup>2</sup> , twisted pair, shielded				
Length	3 m				
Head A	Molex Micro-Fit 3.0 4 poles (430-25-0400) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx)				
Head B	Female D-Sub connector DIN 41652, 9 poles, with mounting screws				

Table 3-18 EPOS CAN-COM Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
yellow	1	7	1	CAN high	CAN high bus line
green	2	2	'	CAN low	CAN low bus line
brown	3	3	_	CAN GND	CAN ground
black	4	5	_	CAN shield	Cable shield
Remark: pin assignment according to CiA DS102-2					

Table 3-19 EPOS CAN-COM Cable – Pin Assignment, J13

### 3.4.8 EPOS CAN-CAN Cable (275926) – Connector J13



Figure 3-9 EPOS CAN-CAN Cable

Technical Data				
Cable cross-section 2 x 2 x 0.14 mm <sup>2</sup> , twisted pair, shielded				
Length	3 m			
Head A / Head B	Molex Micro-Fit 3.0 4 poles (430-25-0400) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx)			

Table 3-20 EPOS CAN-CAN Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
yellow	1	1	1	CAN high	CAN high bus line
green	2	2		CAN low	CAN low bus line
brown	3	3	_	CAN GND	CAN ground
black	4	4	_	CAN shield	Cable shield

Table 3-21 EPOS CAN-CAN Cable – Pin Assignment, J13

### 3.4.9 EPOS CAN-Y Cable (319471) – Connector J13

Head A Head B







Figure 3-10 EPOS CAN-Y Cable

Technical Data				
Cable cross-section	2 x 4 x 0.14 mm <sup>2</sup> , single wires			
Length	0.05 m			
Head A / Head B	Molex Micro-Fit 3.0 4 poles (430-25-0401) Molex Micro-Fit 3.0 male crimp terminals (43031-xxxx)			
Head C	Molex Micro-Fit 3.0 4 poles (430-25-0400) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx)			

Table 3-22 EPOS CAN-Y Cable – Technical Data

Wire	Head A Pin	Head B Pin	Head C Pin	Twisted Pair	Signal	Description
yellow	2	2	1	_	CAN high	CAN high bus line
green	1	1	2	1	CAN low	CAN low bus line
brown	4	4	3	_	CAN GND	CAN ground
black	3	3	4	_	CAN shield	Cable shield

Table 3-23 EPOS CAN-Y Cable – Pin Assignment, J13



#### Note

The EPOS CAN-Y Cable fits the other EPOS CAN cables.

# 3.4.10 EPOS Signal Cable 1 (275932) - Connector J14



Figure 3-11 EPOS Signal Cable 1

Technical Data			
Cable cross-section	16 x 0.14 mm <sup>2</sup>		
Length	3 m		
Head A	Molex Micro-Fit 3.0 16 poles (430-25-1600) Molex Micro-Fit 3.0 female crimp terminals (43030-xxxx)		
Head B	Cable end sleeves 0.14 mm <sup>2</sup>		

Table 3-24 EPOS Signal Cable 1 – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
white	1		_	D_Gnd	Digital signal ground
brown	2		_	D_Gnd	Digital signal ground
green	3		_	DigIN6	Digital input 6 "Negative Limit Switch"
yellow	4		_	DigIN5	Digital input 5 "Positive Limit Switch"
grey	5		_	DigIN4	Digital input 4 "Home Switch"
pink	6		_	DigIN3	Digital input 3 "General Purpose"
blue	7		_	DigIN2	Digital input 2 "General Purpose"
red	8		_	DigIN1	Digital input 1 "General Purpose"
black	9		_	+VOUT	Auxiliary supply voltage Output (+5 VDC / 10 mA)
violet	10		_	DigOUT4	Digital output 4 "General Purpose"
grey/ pink	11		_	DigOUT3	Digital output 3 "General Purpose"
red/blue	12		_	+VCC	Power supply voltage (+924 VDC)
white/ green	13		_	Power_Gnd	Power ground
brown/ green	14		_	A_Gnd	Analog signal ground
white/ yellow	15		_	AnIN2	Analog Input 2
yellow/ brown	16		_	AnIN1	Analog Input 1

Table 3-25 EPOS Signal Cable 1 – Pin Assignment, J14

### 3.4.11 EPOS2 USB Type A-mini B Cable (370513) – Connector J15



Figure 3-12 EPOS2 USB Type A-mini B Cable

Technical Data				
Cable cross-section	1 x 28 AWG non-twisted power pair / 1 x 28 AWG twisted data pair, aluminum-metallized polyester inner shield, 28 AWG stranded tinned copper drain wire, > 65%, tinned copper wire interwoven (braided) outer shield, PVC jacket			
Length	3 m			
Head A	USB Type mini B, male			
Head B	USB Type A, male			

Table 3-26 EPOS2 USB Type A-mini B Cable – Technical Data

Wire	Head A Pin	Head B Pin	Twisted Pair	Signal	Description
red	1	1	_	V <sub>BUS</sub>	USB BUS supply voltage input +5 VDC
white	2	2	1	D-	USB Data-
green	3	3		D+	USB Data+
_	4	_	-	ID	not connected
black	5	4	_	GND	USB_Ground
Jacket	Shield	Shield	_	Cable shield	Cable shield, soldered to connector housing
Remark: pin assignment according to USB 2.0 standard					

Table 3-27 EPOS2 USB Type A-mini B Cable – Pin Assignment, J15

Cables

EPOS2 24/2 Connector Set (303807)

# 3.5 EPOS2 24/2 Connector Set (303807)

If you decide not to use the ready-made cable assemblies, you can take advantage of a prepackaged set containing all required connectors. The set contains following items:

Connector	Specification	Quantity
J10	Molex Micro-Fit 3.0 8 poles (430-25-0800)	1
J12	Molex Micro-Fit 3.0 6 poles (430-25-0600)	1
J13	Molex Micro-Fit 3.0 4 poles (430-25-0400)	1
J14	Molex Micro-Fit 3.0 16 poles (430-25-1600)	1
	Molex Micro-Fit 3.0 female crimp terminal (43030-0010)	40
	Tyco C42334-A421-C42 (right), encoder clip right	1
	Tyco C42334-A421-C52 (left), encoder clip left	1

Table 3-28 EPOS2 24/2 Connector Set – Content



#### **Best Practice**

For best results use original manufacturer's tools (→chapter "3.2 Tools" on page 3-10).

# **LIST OF FIGURES**

Figure 2-1	Documentation Structure	8
Figure 3-2	EPOS Encoder Cable	.12
Figure 3-3	EPOS Encoder Cable	.14
Figure 3-4	EPOS Motor/Hall Sensor Cable	.16
Figure 3-5	EPOS Motor/Hall Sensor Cable	.18
Figure 3-6	EPOS Encoder Cable	.19
Figure 3-7	EPOS RS232-COM Cable	.21
Figure 3-8	EPOS CAN-COM Cable	.22
Figure 3-9	EPOS CAN-CAN Cable	.23
Figure 3-10	EPOS CAN-Y Cable	.24
Figure 3-11	EPOS Signal Cable 1	.25
Figure 3-12	EPOS2 USB Type A-mini B Cable	.27

# **LIST OF TABLES**

Table 1-1	Notations used in this Document	5
Table 1-2	Brand Names and Trademark Owners	7
Table 3-3	Recommended Tools	10
Table 3-4	Cable Selector	11
Table 3-5	EPOS Encoder Cable – Technical Data	12
Table 3-6	EPOS Encoder Cable – Pin Assignment, J3	13
Table 3-7	EPOS Encoder Cable – Technical Data	14
Table 3-8	EPOS Encoder Cable – Pin Assignment, J9	15
Table 3-9	EPOS Motor/Hall Sensor Cable – Technical Data	16
Table 3-10	EPOS Motor/Hall Sensor Cable – Pin Assignment (DC Motor), J10	16
Table 3-11	EPOS Motor/Hall Sensor Cable – Pin Assignment (EC Motor), J10	17
Table 3-12	EPOS Motor/Hall Sensor Cable – Technical Data	18
Table 3-13	EPOS Motor/Hall Sensor Cable – Pin Assignment, J10	18
Table 3-14	EPOS Encoder Cable – Technical Data	19
Table 3-15	EPOS Encoder Cable – Pin Assignment, J11	20
Table 3-16	EPOS RS232-COM Cable – Technical Data	21
Table 3-17	EPOS RS232-COM Cable – Pin Assignment, J12	21
Table 3-18	EPOS CAN-COM Cable – Technical Data	22
Table 3-19	EPOS CAN-COM Cable – Pin Assignment, J13	22
Table 3-20	EPOS CAN-CAN Cable – Technical Data	23
Table 3-21	EPOS CAN-CAN Cable – Pin Assignment, J13	23
Table 3-22	EPOS CAN-Y Cable – Technical Data	24
Table 3-23	EPOS CAN-Y Cable – Pin Assignment, J13	24
Table 3-24	EPOS Signal Cable 1 – Technical Data	25
Table 3-25	EPOS Signal Cable 1 – Pin Assignment, J14	26
Table 3-26	EPOS2 USB Type A-mini B Cable – Technical Data	27
Table 3-27	EPOS2 USB Type A-mini B Cable – Pin Assignment, J15	27
Table 3-28	EPOS2 24/2 Connector Set – Content	28

••page intentionally left blank••

© 2010 maxon motor. All rights reserved.

The present document – including all parts thereof – is protected by copyright. Any use (including reproduction, translation, microfilming and other means of electronic data processing) beyond the narrow restrictions of the copyright law without the prior approval of maxon motor ag, is not permitted and subject to persecution under the applicable law.

# maxon motor ag

Brünigstrasse 220 P.O.Box 263 CH-6072 Sachseln Switzerland

Phone +41 (41) 666 15 00 Fax +41 (41) 666 16 50

www.maxonmotor.com