Laboratory Exercise 11

Interrupts & IO programming

Goals

After this laboratory exercise, you should understand the basic principles of interrupts and how interrupts can be used for programming. You should also know the difference between polling and using interrupts and the relative merits of these methods.

Literature

■ Patterson and Hennessy: Chapter 2.7, 2.9, 2.10, 2.13, 5.7, Appendix A.6, A.7, A.10

Polling or Interrupts

A computer can react to external events either by polling or by using interrupts. One method is simpler, while the other one is more systematic and also more efficient. You will study the similarities and differences of these methods using a simple "toy" example program.

Each pheriperal device connects to the CPU via a few ports. CPU uses address to find out the respective port, and after that, CPU could read/write the new value to these port to get/control the device.


Preparation

Study literature and these home assignments before coming into the class.

Assignments at Home and at Lab

Home Assignment 1 - POOLING

Write a program using assembly language to detect key pressed in Digi Lab Sim and print the key number to console.

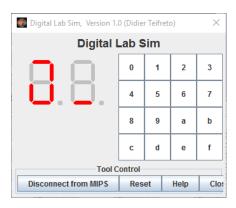


The program has a unlimited loop, to read the scan code of key button. This is POLLING.

In order to use the key matrix⁴, you should 1.assign experted row index into the byte at the address 0xFFFF0012

2.read byte at the address 0xFFFF0014, to detect which key button was pressed

⁴ Key matrix animation: http://hackyourmind.org/public/images/keypad12keys_anim.gif

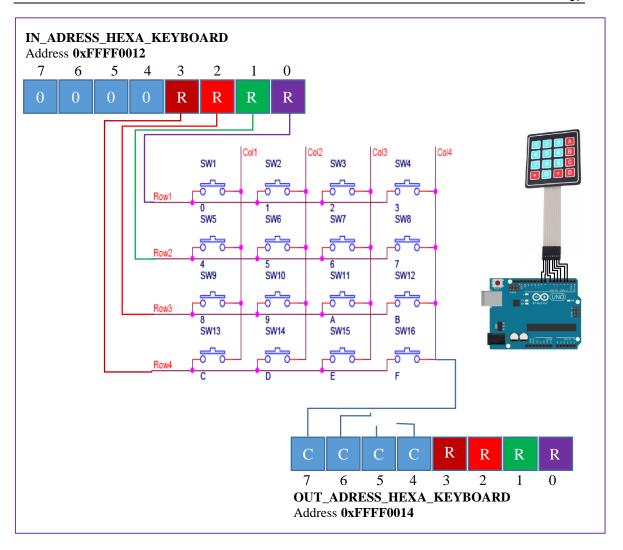

##					col 0x4				
#			COI OXI	COI UXZ	CO1 0X4	COI UXO			
#	row	0x1	0	1	2	3			
#			0x11	0x21	0x41	0x81			
#	row	0x2	4	5	6	7			
##			0x12	0x22	0x42	0x82			
#	row	0×4	8	9	a	b			
#			0x14	0x24	0×44	0x84			
#	row	0x8	С	d	е	f			
# # #			0x18	0x28	0x48	0x88			
# command row number of hexadecimal keyboard (bit 0 to 3) # Eg. assign 0x1, to get key button 0,1,2,3 # assign 0x2, to get key button 4,5,6,7 # NOTE must reassign value for this address before reading, # eventhough you only want to scan 1 row .eqv IN_ADRESS_HEXA_KEYBOARD 0xFFFF0012									
<pre># receive row and column of the key pressed, 0 if not key pressed # Eg. equal 0x11, means that key button 0 pressed. # Eg. equal 0x28, means that key button D pressedeqv OUT_ADRESS_HEXA_KEYBOARD 0xFFFF0014</pre>									

```
.text
                 li
                        $t1,
                               IN ADRESS HEXA KEYBOARD
main:
                               OUT ADRESS HEXA KEYBOARD
                 li
                        $t2,
                 li
                        $t3,
                                        # check row 4 with key C, D,
E, F
                               0($t1) # must reassign expected row
polling:
                 sb
                        $t3,
                               0($t2)
                                         # read scan code of key button
                 1b
                        $a0,
                 li
                        $v0,
                               34
                                         # print integer (hexa)
    print:
                 syscall
                        $a0,
                               100
                                         # sleep 100ms
    sleep:
                 li
                               32
                 li
                        $v0,
                 syscall
back to polling: j
                        polling
                                         # continue polling
```

Home Assignment 2 - INTERRUPT

Study the following assembly program, which waits for an interrupt from keyboard matrix, and prints out a simple message. Go over the code in detail and make sure that you understand everything, especially how to write and install an interrupt routine, how to enable an interrupt, and what happens when an interrupt is activated.

Vietnamese support:

Cũng như các bộ xử lý khác, MIPS có 3 service với cùng một nguyên lý, nhưng khác nhau về mục đích sử dụng

- Exception: xảy ra khi có lỗi trong quá trình chạy, chẳng hạn tham chiếu bộ nhớ không hợp lệ.
- Trap: xẩy ra bởi cách lệnh kiểm tra
- Interrupt: do các thiết bị bên ngoài kích hoạt

Cả 3 cơ chế trên đều được gọi chung là Exception.

Cách thức hoạt động: khi một exception xảy ra

- Khi có một Exception xảy ra, MIPS sẽ luôn nhảy tới địa chỉ cố định 0x80000180 để thực hiện chương trình con phục vụ ngắt. Để viết chương trình con phục vụ ngắt, sử dụng chỉ thị .ktext để viết code ở địa chỉ 0x80000180 nói trên.
- Bộ đồng xử lý C0, thanh ghi \$12 (status) sẽ bật bit 1
- Bộ đồng xử lý C0, thanh ghi \$13 (cause) sẽ thay đổi các bit 2~6 cho biết nguyên nhân gây ra ngắt
- Bộ đồng xử lý C0, thanh ghi \$14 (epc) sẽ chứa địa chỉ kế tiếp của chương trình chính, để quay trở về sau khi xử lý các đoạn mã Exception xong. (giống như thanh ghi \$ra)
- Trường hợp thanh ghi \$13 (cause) cho biết nguyên nhân làm tham chiếu địa chỉ bộ nhớ không hợp lệ, thanh ghi \$8 (vaddr) sẽ chứa địa chỉ lỗi đó.
- Nếu không có mã lệnh nào ở địa chỉ 0x80000180 (.ktext), chương trình sẽ hiện thông báo lỗi và tự kết thúc.
- Sau khi kết thúc chương trình con, sử dụng lệnh **eret** để quay trở lại chương btrình chính. Lệnh **eret** sẽ gán nội dung thanh ghi PC bằng giá trị trong thanh ghi \$14 (epc).

Tuy nhiên, lưu ý rằng, trong MARS, thanh ghi PC vẫn chứa địa chỉ của lệnh mà ngắt xảy ra, tức là lệnh đã thực hiện xong, chứ không chứa địa chỉ của lệnh kế tiếp. Bởi vây phải tự lập trình để tăng địa chỉ chứa trong thanh ghi epc bằng cách sử dụng 2 lệnh mfc0 (để đọc thanh ghi trong bộ đồng xử lý C0) và mtc0 (để ghi giá tri vào thanh ghi trong bộ đồng xử lý C0)

- Các bit 8-15 của thanh ghi Cause, \$13 được sử dụng để xác định nguyên nhân gây ra ngắt. Hãy đọc thanh ghi này, kết hợp với thông tin chi tiết trong hướng dẫn sử dụng của từng thiết bị giả lập để biết được nguồn gốc gây ra ngắt.

Cách thức viết chương trình phục vụ ngắt: để viết chương trình con phục vụ ngắt khi có sự kiện ngắt xảy ra, có thể dùng một trong các phương pháp sau:

- 1. Viết chương trình con phục vụ ngắt trong cùng một file nguồn
- 2. Viết chương trình con phục vụ ngắt trong file nguồn độc lập, và lưu trữ trong cùng một thư mục với chương trình chính. Sau đó, sử dụng tính năng trong mục Setting là "Assemble all files in directory"
- 3. Viết chương trình con phục vụ ngắt trong file nguồn độc lập, và lưu trữ trong cùng một thư mục bất kì. Sau đó, sử dụng tính năng trong mục Setting là "Exception Handler.."

BUG: Ghi nhận các lỗi của công cụ MARS

- 1. Giữa 2 lệnh syscall và lệnh jump, branch cần bổ sung thêm lệnh nop. Nếu không việc ghi nhận giá trị của thanh ghi PC vào EPC sẽ bị sai
- 2. Với các công cụ giả lập, nên bấm nút "Connect to MIPS" trước khi chạy giả lập. Nếu không, việc phát sinh sự kiện ngắt sẽ không xảy ra.

```
sb
       $t3, 0($t1)
    # No-end loop, main program, to demo the effective of
interrupt
Loop:
    nop
    nop
    nop
    nop
                 # Wait for interrupt
        Loop
end main:
# GENERAL INTERRUPT SERVED ROUTINE for all interrupts
.ktext 0x80000180
    # Processing
syscall
    # Evaluate the return address of main routine
    # epc <= epc + 4
return: eret
                  # Return from exception
```

Home Assignment 3 - INTERRUPT & STACK

Study the following assembly program, in which

- 1. Main program enables 1 interrupt: from key matrix in Data Lab Sim
- 2. Main program only print a sequence number to console
- 3. Connect Data Lab Sim. Whenever user press a key button C, D, E, or F, an interrupt raises and print key scan-code to console

```
# Loop an print sequence numbers
           $s0, $s0, $s0 # count = $s0 = 0
      xor
      addi $s0, $s0, 1 # count = count + 1
Loop:
prn_seq:addi $v0,$zero,1
      add
            $a0,$s0,$zero # print auto sequence number
      syscall
prn_eol:addi
            $v0,$zero,11
            $a0,'\n'
                        # print endofline
      li
      syscall
            $v0,$zero,32
sleep: addi
           $a0,300
                        # sleep 300 ms
      li
      syscall
                         # WARNING: nop is mandatory here.
      nop
                         # Loop
            Loop
end main:
# GENERAL INTERRUPT SERVED ROUTINE for all interrupts
.ktext 0x80000180
      #-----
      # SAVE the current REG FILE to stack
IntSR: addi $sp,$sp,4
                    # Save $ra because we may change it later
           $ra,0($sp)
      sw
      addi $sp,$sp,4
                    # Save $ra because we may change it later
      sw
           $at,0($sp)
      addi $sp,$sp,4
                    # Save $ra because we may change it later
      sw
           $v0,0($sp)
      addi $sp,$sp,4
                     # Save $a0, because we may change it later
           $a0,0($sp)
      SW
      addi $sp,$sp,4
                    # Save $t1, because we may change it later
           $t1,0($sp)
      SW
                    # Save $t3, because we may change it later
      addi $sp,$sp,4
          $t3,0($sp)
      SW
      # Processing
      #-----
prn_msg:addi $v0, $zero, 4
            $a0, Message
      la
      syscall
get_cod:li $t1, IN_ADRESS_HEXA_KEYBOARD
           $t3, 0x88 # check row 4 and re-enable bit 7
$t3, 0($t1) # must reassign expected row
      li
      sb
           $t1, OUT_ADRESS_HEXA KEYBOARD
      li
                  0($t1)
      1b
            $a0,
            $v0,34
prn cod:li
      syscall
      li
            $v0,11
      li
            $a0,'\n'
                      # print endofline
      #-----
      # Evaluate the return address of main routine
      # epc <= epc + 4
# RESTORE the REG FILE from STACK
```

```
$t3, 0($sp)
                              # Restore the registers from stack
restore: lw
       addi $sp,$sp,-4
             $t1, 0($sp)
                              # Restore the registers from stack
       lw
             $sp,$sp,-4
       addi
              $a0, 0($sp)
       lw
                              # Restore the registers from stack
       addi
             $sp,$sp,-4
             $v0, 0($sp)
                              # Restore the registers from stack
       lw
       addi
             $sp,$sp,-4
             $ra, 0($sp)
                              # Restore the registers from stack
       lw 
       addi
              $sp,$sp,-4
return: eret
                               # Return from exception
```

Home Assignment 4 - MULTI INTERRUPT

Vietnamese support:

Thanh ghi số 13, status trong bộ đồng xử lý C0, chứa các thiết lập về tình trạng ngắt.

1 1 0 1 0 0

·•														0
15	14	13	12	11	10			6	5	4	3	2	1	0
				KM	TC			Exception Code					K/U	IE
IE = 1 cho phép ngắt. $IE = 0$ vô hiệu hóa mọi hoạt động ngắt														
K/U=1 hoạt động ở chế độ Kernel. $K/U=0$ hoạt động ở chế độ User														
Ngoại lệ do syscall, overflow, lệnh tạo ngắt mềm như teq teqi														
Time Counter bộ đếm thời gian														
Key Matrix														
	15	15 14 K/U Ngoại	15 14 13 K/U=1 ho Ngoại lệ do	15	15	15	15	15	15	15	15 14 13 12 11 10 6 5 4 KM TC Exception IE = 1 cho phép ngắt. IE = 0 vô hiệu hỏ K/U=1 hoạt động ở chế độ Kernel. K/U=0 hoạt động Ngoại lệ do syscall, overflow, lệnh tạo ngắt mềm như te Time Counter bộ đếm thời gian	15 14 13 12 11 10 6 5 4 3 KM TC Exception Code Exception Code EX/U=1 hoạt động ở chế độ Kernel. K/U=0 hoạt động ở chế Ngoại lệ do syscall, overflow, lệnh tạo ngắt mềm như teq ted Time Counter bộ đếm thời gian	15 14 13 12 11 10 6 5 4 3 2 KM TC Exception Code IE = 1 cho phép ngắt. IE = 0 vô hiệu hóa mọi hoạ K/U=1 hoạt động ở chế độ Kernel. K/U=0 hoạt động ở chế độ Ngoại lệ do syscall, overflow, lệnh tạo ngắt mềm như teq teqi Time Counter bộ đếm thời gian	15

Study the following assembly program, in which

- 1. Main program enables 2 interrupts simultaneously: from key matrix and time counter in Data Lab Sim
- 2. Main program do nothing with a deadloop
- 3. Connect Data Lab Sim. Whenever user press any key or time interval reachs, an interrupt raises and print key scan-code to console.

```
.eqv IN ADRESS HEXA KEYBOARD 0xFFFF0012
.eqv COUNTER
                   0xFFFF0013 # Time Counter
.eqv MASK_CAUSE_COUNTER 0x00000400 # Bit 10: Counter interrupt
.eqv MASK CAUSE KEYMATRIX 0x00000800 # Bit 11: Key matrix
interrupt
.data
msg keypress: .asciiz "Someone has pressed a key!\n"
msg counter: .asciiz "Time inteval!\n"
# MAIN Procedure
.text
main:
       # Enable interrupts you expect
       # Enable the interrupt of Keyboard matrix 4x4 of Digital Lab
Sim
       li
             $t1, IN ADRESS HEXA KEYBOARD
       li
            $t3, 0x80
                            # bit 7 = 1 to enable
       sb $t3, 0($t1)
```

```
# Enable the interrupt of TimeCounter of Digital Lab Sim
        $t1, COUNTER
     sb $t1, 0($t1)
     # Loop an print sequence numbers
     nop
Loop:
     nop
     nop
sleep: addi $v0,$zero,32 # BUG: must sleep to wait for Time
Counter
     li
         $a0,200
                   # sleep 300 ms
     syscall
                    # WARNING: nop is mandatory here.
     nop
         Loop
end main:
# GENERAL INTERRUPT SERVED ROUTINE for all interrupts
.ktext 0x80000180
    #-----
IntSR:
     # Temporary disable interrupt
# no need to disable keyboard matrix interrupt
     # Processing
Counter..
     and $at, $t1,$t2
     beq $at,$t2, Counter Intr
        $t2, MASK CAUSE KEYMATRIX # if Cause value confirm Key..
IsKeyMa:li
     and $at, $t1,$t2
     beq $at,$t2, Keymatrix_Intr
                       # other cases
others: j end process
Keymatrix Intr: li $v0, 4
                       # Processing Key Matrix Interrupt
     $a0, msg_keypress
     syscall
     j end process
Counter_Intr: li $v0, 4 # Processing Counter Interrupt
     la $a0, msg counter
     syscall
     j end process
end_process:
     mtc0 $zero, $13
                      # Must clear cause req
en int: #-----
     # Re-enable interrupt
     li $t1, COUNTER
     sb $t1,
            0($t1)
     # Evaluate the return address of main routine
     # epc <= epc + 4
```

```
return: eret # Return from exception
```

Home Assignment 5 - KEYBOARD

Vietnamese support:

- Bộ xử lý MIPS cho phép tạo ra ngắt mềm, bằng lệnh teq, hoặc teqi
- Thiết bị Keyboard không tự động tạo ra ngắt khi có một phím được bấm, mà người lập trình phải tư tạo ngắt mềm.

```
.eqv KEY CODE 0xFFFF0004
                              # ASCII code from keyboard, 1 byte
.eqv KEY_READY 0xffff0000 # =1 if has a new keycode ?
                              # Auto clear after lw
.eqv DISPLAY_CODE     0xFFFFF000C  # ASCII code to show, 1 byte
.eqv DISPLAY_READY 0 \times FFFF0008 # =1 if the display has already to do
                              # Auto clear after sw
.eqv MASK CAUSE KEYBOARD 0x000034
                                      # Keyboard Cause
.text
            li $k0, KEY_CODE
li $k1, KEY_READY
            li $s0, DISPLAY CODE
           li $s1, DISPLAY READY
loop:
          nop
WaitForKey: lw $t1, 0($k1) # $t1 = [$k1] = KEY READY
          beq $t1, $zero, WaitForKey # if $t1 == 0 then Polling
MakeIntR: teqi \$t1, 1 # if \$t0 = 1 then raise an Interrupt
           j loop
# Interrupt subroutine
.ktext 0x80000180
get_caus: mfc0 $t1, $13 # $t1 = Coproc0.cause
IsCount: li $t2, MASK_CAUSE_KEYBOARD# if Cause value confirm
Keyboard..
          and $at, $t1,$t2
           beq $at,$t2, Counter_Keyboard
               end process
            j
Counter Keyboard:
ReadKey: lw $t0, 0($k0)
                                    # $t0 = [$k0] = KEY CODE
WaitForDis: lw $t2, 0($s1)
                                     # $t2 = [$s1] = DISPLAY READY
           beq $t2, $zero, WaitForDis # if $t2 == 0 then Polling
          addi $t0, $t0, 1
Encrypt:
                                   # change input key
ShowKey: sw $t0, 0($s0)
                                   # show key
end process:
           next_pc: mfc0
return: eret
```

Assignment 1

Create a new project, type in, and build the program of Home Assignment 1. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 2

Create a new project, type in, and build the program of Home Assignment 2. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 3

Create a new project, type in, and build the program of Home Assignment 3. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 4

Create a new project, type in, and build the program of Home Assignment 4. Upgrade the source code so that it could defect all 16 key buttons, from 0 to F.

Assignment 5

Create a new project, type in, and build the program of Home Assignment 5.

Conclusions

Before you finish the laboratory exercise, think about the questions below:

- What is polling?
- What are interrupts?
- What are interrupt routines?
- What are the advantages of polling?
- What are the advantages of using interrupts?
- What are the differences between interrupts, exceptions and traps?