

Parts needed to assemble the pedal tray and heel rest

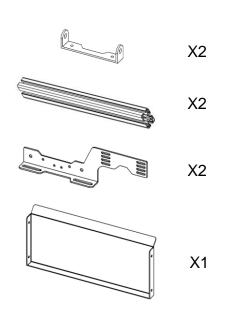


Step 1: Put the bolts in the U bracket


Don't tighten them yet, leave them loose for now.

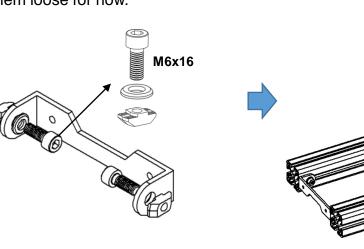


Step 2: Install the U brackets on the aluminum profiles

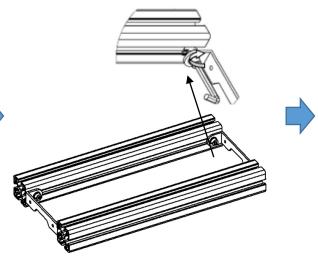


Step 3: Install the heel rest holders on the aluminum profiles

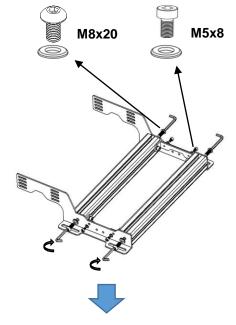


Step 7: Tighten the bolts with the included T nuts and washers

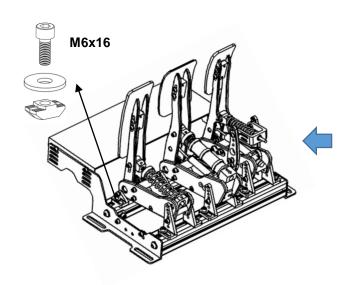

Step 6: Install your pedal units to the aluminum profile

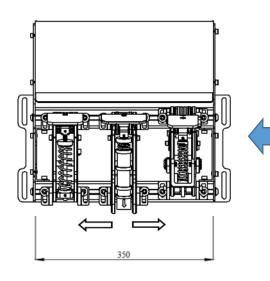

Step 5: Install the controller box:
You can either install it on the left

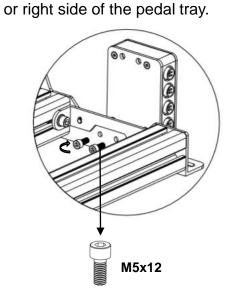

Step 4: Install the heel rest:

Choose the most comfortable height or recline for your seating position.

