SCOPE OF APPLICATION All Project/Engineering	HYUNDAI AutoEver	SHT/SHTS 1 / 16
Responsibility: 클래식오토사팀	AUTOSAR Crc User Manual	DOC. NO

AUTOSAR Cyclic Redundancy Check User Manual

Document Ch	Document Change Histroy			
Date (YYYY-MM- DD)	Ver.	Editor	Chap	내용(개정 전 -> 개정 후)
2015-03-30	1.0	CY Song		• Initial Creation
2015-11-25	1.1	CY Song	5.1.1	• Crc16Mode, Crc32Mode, Crc8Mode, Crc8H2FMode Category를 Changeable로 변경
2016-04-05	1.2	CY Song	4.3.1.1	• Change Log 추가
2016-11-23	1.3	CY Song	4.3.1.1	• Change Log 추가
2019-05-07	1.4	YJ Yun	4.3.1.1	• Change Log 추가
2019-10-17	1.5	YJ Yun	4.3.1.1	• Change Log 추가
2020-12-31	1.3.6.0	YJ Yun	4.3.1.1	• Change Log 추가
2021-01-18	1.3.7.0	YJ Yun	4.3.1.1	• Change Log 추가
2021-12-31	1.3.8.0	JH Lim	4.3.1.1	• Change Log 추가
2022-08-19	1.3.9.0	YJ Yun	4.3.1.1	• Change Log 추가
2023-04-14	1.3.9.1	YJ Yun	4.3.1.1	• Change Log 추가

11th Edition Date:	File Name	Creation	Check	Approval
14, 04, 2023	Crc_UM	YJ Yun	HM Kim	IW Kang
Document		2023/04/19	2023/04/19	2023/04/19
Management System				

Table of Contenets

1. OVERVIEW	. 4
2. REFERENCE	. 4
3. AUTOSAR SYSTEM	. 5
3.1 Overview of Software Layers	. 5
3.2.1 Sequence Diagrams	.5
3.2.2 Architecture (Library)	
4. PRODUCT RELEASE NOTES	
4.1 Overview	
4.2 Scope of the release	.7
4.3 Module release notes	
5. CONFIGURATION GUIDE1	10
5.1 Crc 모듈	
6. APPLICATION PROGRAMMING INTERFACE (API)1	10
6.1 Type Definitions1	10
6.2 Macro Constants	10
6.3 Functions	10 10 11 12 12
7. GENERATOR1	14
7.1 Generator Option1	14
7.2 Generator Error Message	

8. APPENDIX	16
8.1 Bswmd (Bsw Module Description)	
8.2 Exclusive Areas	16
8.3 Example	16
8.3.1 calculation of CRC8	16
8.3.2 calculation of CRC8H2F()	
8.3.3 calculation of CRC16()	
8.3.4 calculation of CRC32()	16



문서 번호 (DOC NO)

SHT/SHTS 4 / 16

1. Overview

본 문서는 CRC 사용을 위해 AUTOSAR 플랫폼 사용할 때, 사용자가 파라미터 설정 또는 시스템 설계를 할 때 주 의하거나 참고할 사항을 제공한다. 자세한 사항은 Reference 문서를 참고한다.

설정관련 Category 의 해석은 다음과 같다.

- Changeable (C): User 에 의해서 설정 가능한 항목
- Fixed (F): User 에 의한 변경이 불가한 항목
- NotSupported (N): 사용되지 않는 항목

2. Reference

SI. No.	Title	Version
1.	AUTOSAR_SWS_CRCLibrary.pdf	4.2.0
2.	AUTOSAR BSW Service API Guide.doc	1.0.0 or later


문서 번호 (DOC NO)

SHT/SHTS 5 / 16

3. AUTOSAR System

3.1 Overview of Software Layers


AUTOSAR 플랫폼의 CRC 관련 Layered Architecture 는 아래와 같다.

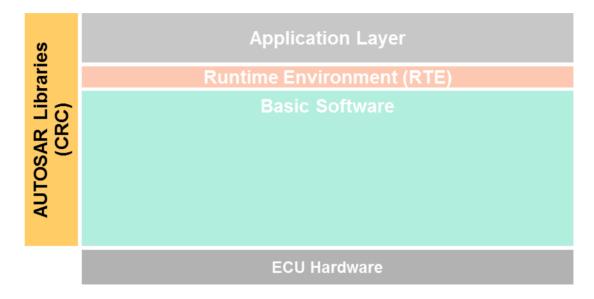


3.2 AUTOSAR CRC Library

3.2.1 Sequence Diagrams


3.2.1.1 CRC_CalculateCRC8()

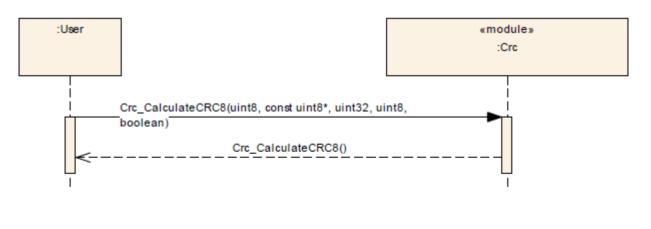


3.2.1.2 Crc_CalculateCRC8H2F ()

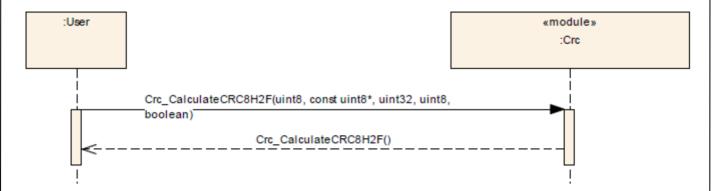

3.2.1.3 Crc_CalculateCRC16()

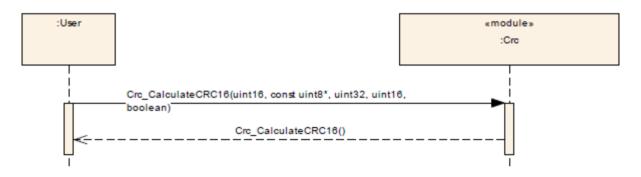

3.2.1.4 Crc_CalculateCRC32()

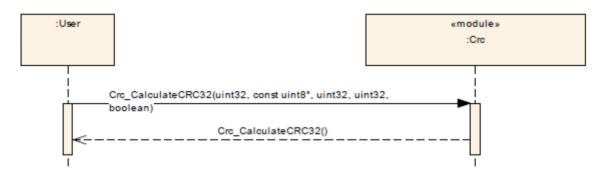

3.2.2 Architecture (Library)

- 3.2.2.1 Library can be called by BSW modules(that including the RTE), SW-Cs, libraries or integration code.
- 3.2.2.2 Library can be re-entrant.
- 3.2.2.3 Library does not require any initialization.
- 3.2.2.4 Library are synchronous (they do not have wait points)

4. Product Release Notes

4.1 Overview

이 Chapter 에서는, CRC Product 에 대한 release 관련 내용을 제공하는데 목적이 있으며, CRC product release version 에 대한, 제한사항 및 특이사항을 기술하고 있다.

4.2 Scope of the release

이 문서에 대한 모든 내용은, 다음의 CRC 모듈에 한정한다.

Module	Autosar version	SWS version	Module version
CRC	4.0.3	4.2.0	1.3.9

4.3 Module release notes

4.3.1 **CRC**

4.3.1.1 Change Log

- Version 1.3.9.1 (2023-04-14)
 - Improvements
 - 영문 매뉴얼 추가

원인	영문 매뉴얼 추가
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.9.0 (2022-08-20)
 - Improvements
 - UNECE Rule 적용

원인	UNECE Cyber Security 법규 대응을 위한 보안 코딩 개선
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.8.0 (2021-12-31)
 - Improvements
 - MISRA Rule 적용

원인	UNECE Cyber Security 법규 대응을 위한 보안 코딩 개선
동작 영향	없
설정 영향	없음
ASW 조치 사항	없음

문서 번호 (DOC NO)

SHT/SHTS 8 / 16

- Version 1.3.7.0 (2021-01-20)
 - Improvements
 - MISRA Rule 적용

원인	MISRA Rule 적용
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.6.0 (2020-12-31)
 - Improvements
 - MISRA Rule 적용

원인	MISRA Rule 적용
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.5.0 (2019-10-17)
 - Improvements
 - Source File Directory 구조 수정

원인	소스 코드 오픈
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.5 (2019-05-07)
 - Improvements
 - MISRA 2012 적용

원인	MISRA Rule 2012 적용
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.4 (2016-06-27)
 - Improvements
 - UserManual 수정

원인	UserManual 수정
동작 영향	없음
설정 영향	없음
ASW 조치 사항	없음

- Version 1.3.3 (2016-04-05)
 - DeliveryBox 에 User Manual 추가

4.3.1.2 Limitations

4.3.1.2.1 설정항목중 CRC_16_HARDWARE, CRC_32_HARDWARE, CRC_8_HARDWARE, CRC_8H2F_HARDWARE 는 H/W 가 지원해야하는 것으로 현 CRC 모듈에서는 미지원 기능임.

4.3.1.3 Deviation

None

문서 번호 (DOC NO)

SHT/SHTS 10 / 16

5. Configuration Guide

5.1 Crc 모듈

5.1.1 CrcGeneral Container

다음 설정을 참고한다.

Parameter Name	Value	Categor
Crc16Mode	CRC_16_RUNTIME	С
Crc32Mode	CRC_32_RUNTIME	С
Crc8H2FMode	CRC_8H2F_RUNTIME	С
Crc8Mode	CRC_8_RUNTIME	С

6. Application Programming Interface (API)

6.1 Type Definitions

None

6.2 Macro Constants

None

6.3 Functions

6.3.1 Initialization/Deinitialization Related Api

None

6.3.2 Calcutation of 8bit CRC

Function Name	Crc_CalculateCRC8			
Syntax	FUNC(uint8, CRC_CODE)	Crc_CalculateCRC8 (P2CONST(uint8,		
	CRC_CONST, CRC_APPL_CONST	CRC_CONST, CRC_APPL_CONST)Crc_DataPtr, uint32 Crc_Length, uint8		
	Crc_StartValue8, boolean Crc_Is	Crc_StartValue8, boolean Crc_IsFirstCall)		
Service ID	0x01	0x01		
Sync/Async	Synchronous			
Reentrancy	Reentrant			
	Crc_DataPtr	Pointer to the start address of the		
	data block to be calculated.			
Parameters (In)	Crc_Length			
	calculated in bytes.			
	Crc_StartValue8	Initial value when algorithm starts.		

	Crc_lsFirstCall	TRUE: First call in a sequence or	
		individual CRC calculation; start	
		from initial value, ignore	
		Crc_StartValue8.	
		FALSE: Subsequent call in a call	
		sequence;	
	Crc_StartValue8 is interpreted be the return value of the previous		
		function call.	
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	uint8 8 bit result of CRC calculation.		
	Calculates CRC (8 bit) using CRC-SAE-J1850 standards by runtime based		
Description	method. This service makes a CRC8 calculation on Crc_Length data		
	bytes.		
Preconditions	None		
Configuration Dependency	This function shall be configurable with any one of the available CRC8		
Configuration Dependency	calculation methods by the configuration parameter : CRC_8_MODE		

6.3.3 Calculation of 8bit CRC with 0X2F polynomial

Function Name	Crc_CalculateCRC8H2F		
Syntax	FUNC(uint8, CRC_CODE) Crc_CalculateCRC8H2F (P2CONST(uint8, CRC_CONST, CRC_APPL_CONST)Crc_DataPtr, uint32 Crc_Length, uint8 Crc_StartValue8H2F, boolean Crc_IsFirstCall)		
Service ID	0x05		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
	Crc_DataPtr	Pointer to the start address of the data block to be calculated.	
	Crc_Length	Length of the data block to calculated in bytes.	
	Crc_StartValue8H2F	Initial value when algorithm starts.	
Parameters (In)	Crc_IsFirstCall	TRUE: First call in a sequence or individual CRC calculation; start from initial value, ignore Crc_StartValue8H2F. FALSE: Subsequent call in a call sequence; Crc_StartValue8H2F is interpreted to be the return value of the previous function call.	
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	uint8 8 bit result of CRC calculation.		
Description	Calculates CRC (8 bit) using 0x2F polynomial by runtime based method. This service makes a CRC8 calculation with 0x2F polynomial on		

	Crc_Length data bytes.		
Preconditions	None		
Configuration Dependency	This function shall be configurable with any one of the available CRC8H2F calculation methods by the configuration parameter : CRC_8H2F_MODE		

6.3.4 Calculation of 16bit CRC

Function Name	Crc_CalculateCRC16		
Syntax	FUNC(uint16, CRC_CODE) Crc_CalculateCRC16 (P2CONST(uint8,		
	CRC_CONST, CRC_APPL_CONST)Crc_DataPtr, uint32 Crc_Length, uint16		
	Crc_StartValue16, boolean Crc_IsFirstCall)		
Service ID	0x02		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
	Crc_DataPtr	Pointer to the start address of the	
		data block to be calculated.	
	Crc_Length	Length of the data block to	
		calculated in bytes.	
	Crc_StartValue16	Initial value when algorithm starts.	
	Crc_lsFirstCall	TRUE: First call in a sequence or	
Parameters (In)		individual CRC calculation; start	
r arameters (m)		from initial value, ignore	
		Crc_StartValue16.	
		FALSE: Subsequent call in a call	
		sequence;	
		Crc_StartValue16 is interpreted to	
		be the return value of the previous	
		function call.	
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	uint16 16 bit result of CRC calculation.		
Calculates CRC (16 bit) using CRC-CCITT standards		-CCITT standards by runtime based	
Description	method. This service makes a CRC16 calculation on Crc_Lengt		
	bytes.		
Preconditions	None		
Configuration Dependency This function shall be configurable with any one of the available with a specific with		with any one of the available CRC16	
Comigulation Dependency	calculation methods by the configuration parameter : CRC_16_MODE		

6.3.5 Calculation of 32bit CRC

Function Name	Crc_CalculateCRC32		
Syntax	FUNC(uint32, CRC_CODE) Crc_CalculateCRC32 (P2CONST(uint8,		
	CRC_CONST, CRC_APPL_CONST)Crc_DataPtr, uint32 Crc_Length, uint32		
	Crc_StartValue32, boolean Crc_IsFirstCall)		
Service ID	0x03		

Sync/Async	Synchronous		
Reentrancy	Reentrant		
	Crc_DataPtr	Pointer to the start address of the data block to be calculated	
	Crc_Length	Length of the data block to calculated in bytes.	
	Crc_StartValue32	Initial value when algorithm starts	
	Crc_lsFirstCall	TRUE: First call in a sequence or	
Parameters (In)		individual CRC calculation; start	
rarameters (m)		from initial value, ignore	
		Crc_StartValue32.	
		FALSE: Subsequent call in a call	
		sequence;	
		Crc_StartValue32 is interpreted to	
		be the return value of the previous	
		function call.	
Parameters (Inout)	None		
Parameters (Out)	None		
Return Value	uint32 32 bit result of CRC calculation.		
Calculates CRC (32 bit) using CRC-IEEE		C-IEEE 802.3 standards by runtime	
Description	based method. This service makes	. This service makes a CRC32 calculation on Crc_Length	
	data bytes.		
Preconditions	None		
Configuration Deposits	This function shall be configurable with any one of the available CRC32		
Configuration Dependency calculation methods by the configurat		uration parameter : CRC_32_MODE	

6.3.6 GetVersion Information

Function Name	Crc_GetVersionInfo		
Syntax	FUNC(void, CRC_CODE)		Crc_GetVersionInfo
	(P2VAR(Std_VersionInfoType,	AUTOMATIC,	CRC_APPL_DATA)
	Versioninfo)		
Service ID	0x04		
Sync/Async	Synchronous		
Reentrancy	Reentrant		
Parameters (In)	None		
Parameters (Inout)	None		
Parameters (Out)	Versioninfo	-	resents where the mation of this module
, ,		needs to be s	stored
Return Value	None		
	This function returns the version information of the module, which		
Description	includes Vendorld, Moduleld and Vendor Specific Version numbers. If		
	Versioninfo is a NULL pointer then this service will simply return.		
Preconditions	None		
Configuration Dependency	None		

문서 번호 (DOC NO)

SHT/SHTS 14 / 16

7. Generator

7.1 Generator Option

None

7.2 Generator Error Message

7.2.1 Crc

7.2.1.1 Error Messages

- 1) ERR201003: 'Component Name' Component is not present in the input file(s).
 - This error occurs, if 'Crc' component is not present in any of the input ECU Configuration Description File(s).
- 2) ERR201005: The parameter 'Parameter Name' in the container 'Container Name' should be configured.
 - This error occurs, if any of the mandatory configuration parameters mentioned below are not configured in ECU Configuration Description File.

Container Name	Parameter Name
BSW-IMPLEMENTATION	AR-RELEASE-VERSION
	VENDOR-ID
	SW-VERSION
BSW-MODULE-DESCRIPTION	MODULE-ID

- 3) ERR201006: The value configured for the parameter 'Parameter Name' in the container 'Container Name' should follow the pattern: 〈Pattern〉
 - This error occurs, when the parameter 'Parameter Name' is not configured as per the pattern.

Parameter Name	Container Name	Pattern	Example
AR-RELEASE-VERSION	BSW-IMPLEMENTATION	<4.[0-9]+.[0-9]+>	4.0.3
SW-VERSION			

7.2.1.2 Warning Messages

None

7.2.1.3 Information Messages

1) INF201015: AUTOSAR Release version (value of the element AR-RELEASE-VERSION) configured for the parameter 'AR-RELEASE-VERSION' in provided MDT file is not correct. AUTOSAR Release version should be one of the following: 4.0.3.



문서 번호 (DOC NO)

SHT/SHTS 15 / 16

- This information occurs, if the value of the element AR-RELEASE-VERSION present in the BSW Module Description template is configured other than 4.0.3.
- 2) INF201051: Value of the parameter 'Parameter Name' of the container 'CrcGeneral' is configured as 'Enumeration Literal', hence Generation Tool resets the value of the parameter to 'Reset Value'.
 - This information occurs, if the below mentioned parameters are configured as 'Enumeration Literal'.

Parameter Name	Enumeration Literal	Reset Value
Crc16Mode	CRC_16_HARDWARE	CRC_16_RUNTIME
Crc32Mode	CRC_32_HARDWARE	CRC_32_RUNTIME
Crc8H2FMode	CRC_8H2F_HARDWARE	CRC_8H2F_RUNTIME
Crc8Mode	CRC_8_HARDWARE	CRC_8_RUNTIME

8. Appendix

AutoEver

HYUNDAI

8.1 Bswmd (Bsw Module Description)

8.1.1 Bsw 모듈 version 설정

각 모듈을 컴파일할 때, version 정보가 맞지 않으면 Compile 에서 Error를 발생시킨다. 이때는 Bswmd 의 다음과 같이 BswImplementation Container 에서 version 정보를 수정해야 한다.



8.2 Exclusive Areas

None

8.3 Example

8.3.1 calculation of CRC8

8.3.1.1 Data bytes 01h 02h 03h 04h 05h 06h 07h 08h: start value FFh:

Result = Crc_CalculateCRC8(&Array12345678[0], 8, 0xFF, TRUE);

8.3.2 calculation of CRC8H2F()

8.3.2.1 Data bytes 01h 02h 03h 04h 05h 06h 07h 08h: start value FFh:

Result = Crc_CalculateCRC8H2F(&Array12345678[0], 8, 0xFF, TRUE);

8.3.3 calculation of CRC16()

8.3.3.1 Data bytes 01h 02h 03h 04h 05h 06h 07h 08h: start value FFFFh:

Result = Crc_CalculateCRC16(&Array12345678[0], 8, 0xFFFF, TRUE);

8.3.4 calculation of CRC32()

8.3.4.1 Data bytes 01h 02h 03h 04h 05h 06h 07h 08h: start value FFFFFFFh:

Result = Crc_CalculateCRC32(&Array12345678[0], 8, 0xFFFFFFFF, TRUE);