



DRAFT

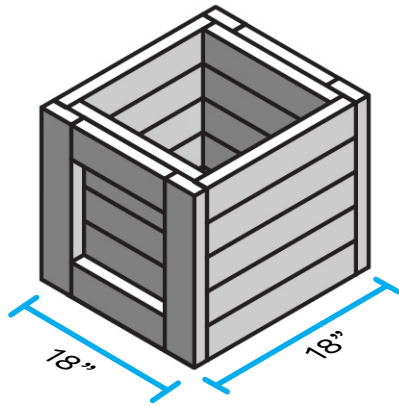

18"x18"
ASSEMBLY

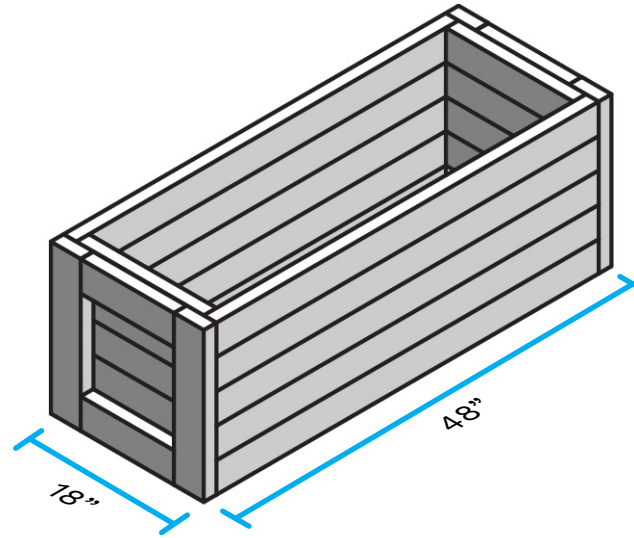

18"x48"
ASSEMBLY

18" PLANTER BOX ASSEMBLY INSTRUCTIONS

BEFORE YOU BEGIN

1. This document includes recommendations for do-it-yourself (DIY) construction of a 18" planter box. As a DIY project, the Owner, or the Owner's Contractor, is required to procure, fabricate, assemble, install, and maintain all project materials. These are recommendations only and any material, assembly, and construction must be tailored to specific project requirements.
2. These recommendations are based on common best practices associated with standard DIY home-improvement and/or landscape construction. These best practices may include working knowledge and experience with manual and power tools, hardware, fasteners, lumber, concrete footings, and associated techniques of assembly and construction. Prior working knowledge of these best practices is required so as to avoid harm or personal injury to self or others, or to property.
3. This document includes recommendations for the sequence and assembly of planter box components. Locate your planter boxes in your plan you created in the 'Dream' workbook to find the proposed location and dimension of all planter boxes. This plan must be tailored to the specific conditions of the project site, including property lines, existing features- such as walls, trees, etc- and any other existing site conditions that may limit or otherwise influence the installation. Use your cost estimation spreadsheet to determine the quantity needed for all your planter boxes.
4. Before using any power equipment (such as drills, saws, augers, or other), review all manufacturer safety requirements. While handling or operating any power equipment, follow all manufacturer safety requirements. Do not allow others who have not reviewed and/or follow manufacturer safety requirements to handle or utilize power equipment.
5. The owner is solely responsible for any work required to secure, and comply with, all necessary building and safety codes, permits, and regulatory approvals.
6. These recommendations assume that the project site has been sufficiently prepared for construction. This includes, but is not limited to: identification of utilities that may interfere or otherwise impact installation; the removal of trash, hazards, unwanted structures; or other conditions that may inhibit safe construction.
7. Before construction, review the project site conditions to identify any potential limitations to assembly and installation. This includes determining advance notification by the Owner of utility companies so as to determine the location of all above and below ground utilities.
8. All persons associated with building and construction should sign a volunteer waiver.

LEGAL NOTICE:

The recommendations included herein are based on standard practices of fabrication and construction of garden furnishings. In no event shall Thomas Jefferson University (TJU), TJU's Lab For Social Innovation, Park-in-a-Truck, and/or its faculty, staff or affiliates be liable for any damages or injury to person or property damages arising out of the use of these recommendations. Thomas Jefferson University (TJU), TJU's Lab For Social Innovation, Park-in-a-Truck, or its faculty, staff and/or affiliates make no warranties, expressed or implied, and hereby disclaims and negates all other warranties, including without limitation, implied warranties or conditions of merchantability, fitness for a particular purpose, or non-infringement of intellectual property or other violation of rights. Further, Thomas Jefferson University (TJU), TJU's Lab For Social Innovation, Park-in-a-Truck, and/or its faculty, staff or affiliates do not warrant or make any representations concerning the accuracy, likely results, or reliability of the use of these recommendations. The use of these recommendations constitutes your acknowledgment of the aforementioned.

18" PLANTER BOX

ASSEMBLY INSTRUCTIONS

COMMON LUMBER SELECTIONS \

WESTERN RED CEDAR:

PRO: NATURALLY WEATHER/ROT RESISTANT LUMBER WITH AESTHETICALLY PLEASING RED TONES AND PLEASANT AROMAS, THAT IS EASY TO WORK WITH. NO PRESERVATION TREATMENTS ARE NECESSARY AS THE SURFACES WILL GRADUALLY DEVELOP A LOVELY GRAY PATINA. IT IS EASILY RECYCLABLE AT THE END OF ITS PRIMARY USE.

CON: COST, BE SURE TO SPECIFY 'KNOTTY' (STK) GRADE WHICH IS MUCH MORE AFFORDABLE THAN 'CLEAR' GRADE.

DOUGLAS FIR:

PRO: MODERATELY WEATHER/ROT RESISTANT AND STRONG LUMBER. IT IS ALSO EASY TO WORK WITH AT A LOWER COST THAN CEDAR. IT IS EASILY RECYCLABLE AT THE END OF ITS PRIMARY USE.

CON: IT WILL NOT STAND THE TEST OF TIME AS WELL AS CEDAR, BUT A GREAT CHOICE ESPECIALLY IF YOU PLAN TO PAINT IT.

PRESSURE TREATED:

PRO: WEATHER/ROT RESISTANT LUMBER AT A LOW COST.

CON: LUMBER IS OFTEN OF VARIABLE POOR QUALITY AND SATURATED WITH CHEMICAL TREATMENT MAKING IT DIFFICULT TO WORK WITH LEADING TO INCONSISTENT RESULTS. NEEDS 1-4 MONTHS OF AIR DRYING BEFORE PAINTING. NOT EASILY RECYCLABLE AND OFTEN ENDS UP IN LANDFILLS AT THE END OF ITS PRIMARY USE. NOT RECOMMENDED FOR USE IN AREAS WHERE VEGETABLES ARE GROWN.

GENERAL NOTES:

1. WHEN ORDERING LARGE QUANTITIES, ORDER AT LEAST 5% MORE LUMBER. TO ALLOW FOR SOME VARIABLE LUMBER QUALITY AND INCORRECT CUTS.

2. EXTERIOR WOOD TREATMENT CAN PROLONG THE LIFE OF YOUR PARK ELEMENTS. HOWEVER, IT IS NOT NECESSARY TO BRING MANY YEARS OF ENJOYMENT. ANY TREATMENTS MUST BE APPLIED AND MAINTAINED PROPERLY WHICH IS A LABOR INTENSIVE PROCESS. ONE SHOULD DECIDE IF THIS IS PRACTICAL OR NOT FOR THEIR PARK. THE PARK ELEMENTS ARE LOW COST, DURABLE, AND EASY TO BUILD BY DESIGN AND IT MAY BE MORE PRACTICAL TO SIMPLY HAVE THE NEXT GENERATION REBUILD THE ELEMENTS WHEN DEEMED NECESSARY. BELOW ARE RESOURCES/ LINKS FOR CONSIDERATION IF INTERESTED IN EXTERIOR WOOD TREATMENTS.

<https://www.rockler.com/learn/choosing-the-best-finish-for-outdoor-projects>

<https://www.realmilkpaint.com/blog/tips/best-finish-outdoor-wood/>

<https://vermontnaturalcoatings.com/product-category/exterior/>

PLANTER BOX \

TOOLS:

10" OR 12" MITER SAW (or appropriate hand saw)

IMPACT DRIVER for self drilling exterior wood screws

STAPLE GUN

SANDPAPER 120 GRIT

CARPENTERS SQUARE

SAFETY GOOGLES + MASK

MATERIALS:

GEOTEXTILE FABRIC

(112) 2.5" SELF DRIVING EXTERIOR WOOD SCREWS

LUMBER:

18" x 18" ASSEMBLY:

(6) 2" x 4" x 8'

18" x 48" ASSEMBLY:

(10) 2" x 4" x 8'


1 STEP

1. MARK, LABEL AND CUT LUMBER IN ORDER OF P-1 TO P-3 TO THE FOLLOWING LENGTHS:

NOTE: CHECK EACH PIECE OF LUMBER IMPERFECTIONS SUCH AS CRACKS, WARPING, OR UNEVEN MILLING. DISCARD THESE PORTIONS OF LUMBER.


18" x 18" ASSEMBLY

- P-1: (4)** 2 x 4 x 17.5"
PLANTER END, FACE, & BOTTOM
- P-2: (24)** 2 x 4 x 15"
PLANTER END, FACE, & BOTTOM
- P-3: (4)** 2 x 4 x 11"
PLANTER END

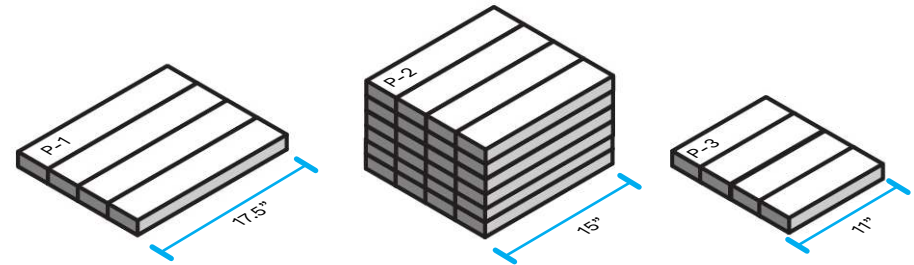

18" x 48" ASSEMBLY

- P-1A: (14)** 2 x 4 x 45"
PLANTER FACE & BOTTOM
- P-1: (4)** 2 x 4 x 17.5"
PLANTER END
- P-2: (10)** 2 x 4 x 15"
PLANTER END
- P-3: (4)** 2 x 4 x 11"

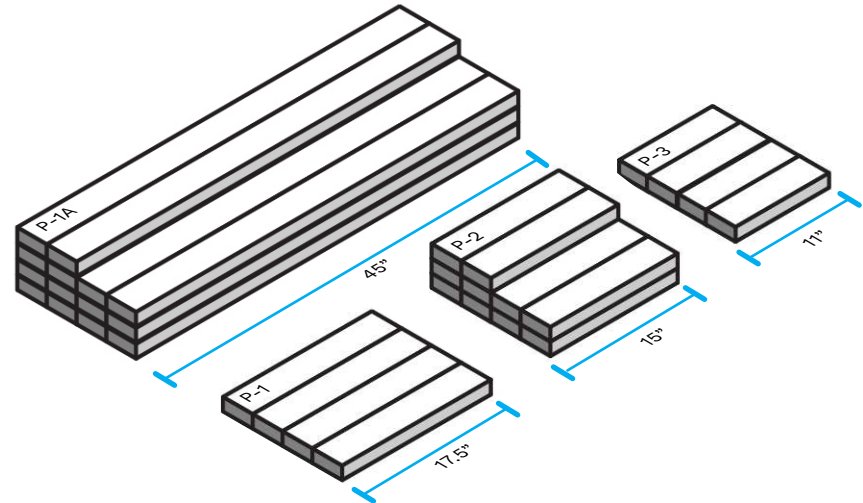

TIPS:

- LABEL EACH PIECE OF LUMBER AS YOU ARE MEASURING/CUTTING
- HAVE A PILE OF LUMBER FOR P-1 TO P-3, AS SHOWN
- LIGHTLY SANDING CUT EDGES TO REMOVE SPLINTERS WILL ALSO HELP WITH ASSEMBLY.
- IF BUILDING MULTIPLE PLANTER BOXES, CREATING A STOP FOR YOUR MITER SAW ENSURES ALL PIECES ARE CUT TO THE SAME LENGTH

2 STEP


1. PLACE (2) P-3 PIECES ON FLAT SURFACE.
2. PLACE (2) P-1 PIECES ON EITHER SIDE OF THE P-3 PIECES, ALIGNING THE EDGES AS SHOWN IN THE IMAGE.
3. REPEAT STEPS 1-2.

NOTE: UTILIZE A CARPENTERS SQUARE TO ENSURE A RIGHT ANGLE IS FORMED IN EACH CORNER. IF THE RIGHT ANGLE IS FAR OFF, CHECK THAT YOUR MEASUREMENTS OF EACH BOARD ARE CORRECT.




TIP: BUILDING A 90 DEGREE JIG CAN HELP WITH ASSEMBLY OF THE NEXT TWO STEPS.

18"x18" ASSEMBLY

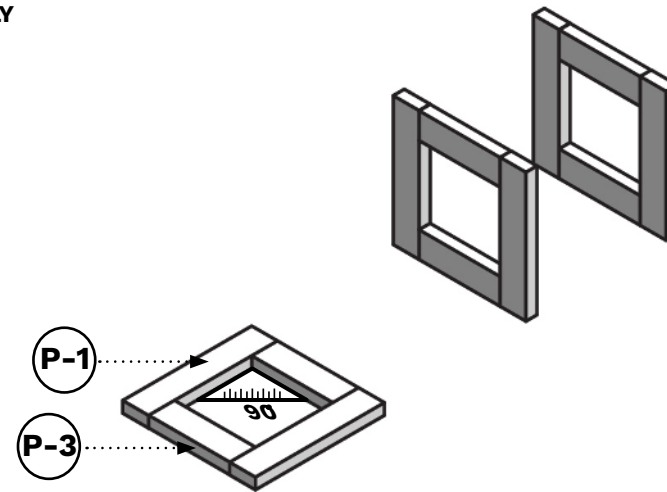


18"x48" ASSEMBLY

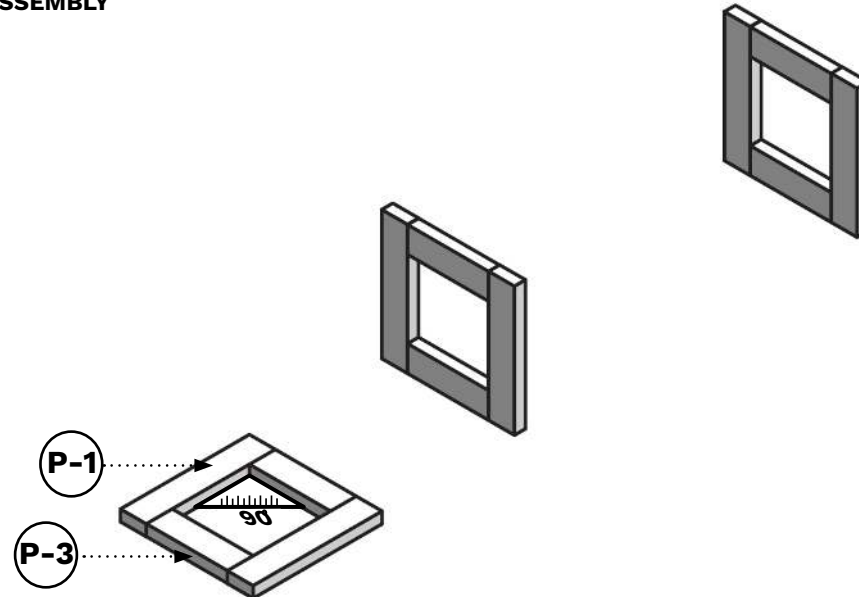

3 STEP

1. PLACE (5) P-2 PIECES ON TOP OF THE FRAME CREATED IN STEP THREE. ENSURE THERE IS A 1.5" GAP ON BOTH SIDES

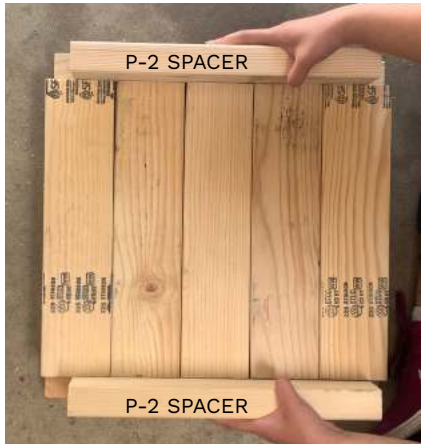


TIP: USE AN EXTRA P-3 PIECE OF LUMBER ON END AS A SPACER TO ENSURE A 1.5" GAP.

2. USE THE PRE-DRILLING GUIDE AT THE END OF THE PACKET TO PRE-DRILL YOUR SCREW HOLES


3. SECURE LUMBER INTO THE P-2 PIECES BY USING AN IMPACT DRIVER WITH (20) 2.5" SELF DRIVING EXTERIOR WOOD SCREWS.

4. REPEAT STEPS 1-2 ON THE OTHER LEG, AND STAND THE LEGS UP FOR THE NEXT STEP.

18"x18" ASSEMBLY

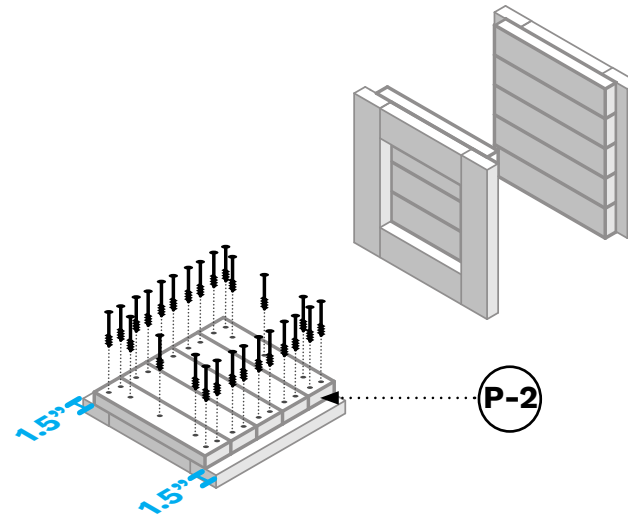

18"x48" ASSEMBLY

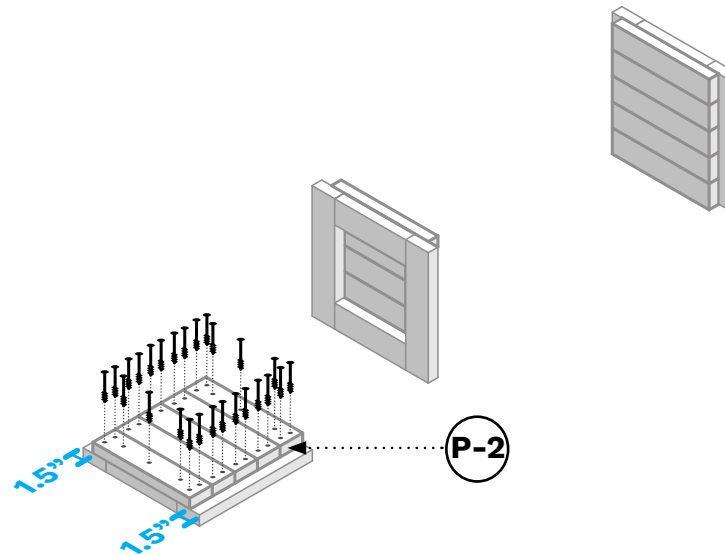

4 STEP

1. PLACE (5) P-2 PIECES OR (5) P-1A PIECES IN BETWEEN THE TWO ENDS OF THE PLANTER BOX.


TIP: SIMULTANEOUSLY BEGIN FROM THE BOTTOM ON BOTH SIDES AND HAVE A HELPER ENSURE THE SIDE STAYS 90 DEGREES.

2. SECURE P-2 OR P-1A LUMBER ON EACH SIDE INTO THE SIDE PIECES BY USING AN IMPACT DRIVER WITH (20) 2.5" SELF DRIVING EXTERIOR WOOD SCREWS.


3. REPEAT STEPS 1-2 ON THE BACK SIDE OF THE PLANTER BOX.



18"x18" ASSEMBLY

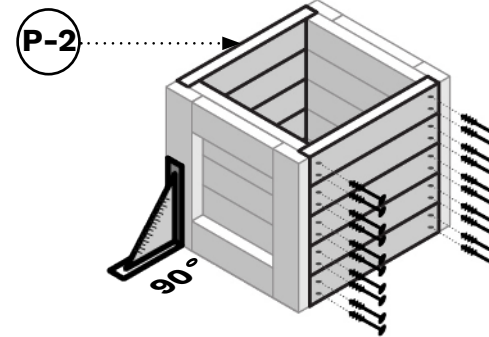

18"x48" ASSEMBLY

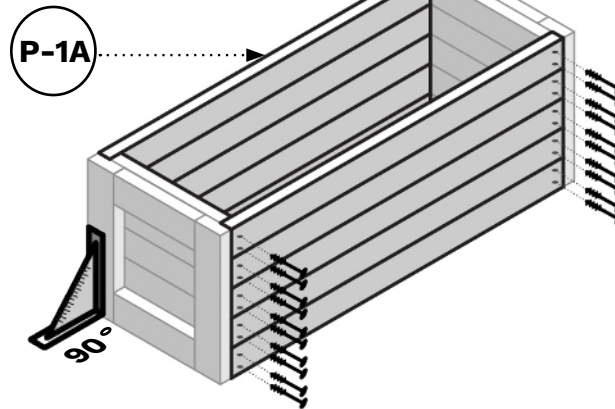


5 STEP

1. PLACE (4) P-2 OR (4) P-1A PIECES ON THE BOTTOM OF THE PLANTER BOX FRAME, LEAVING A 1/4" GAP BETWEEN EACH LUMBER PIECE TO ALLOW FOR WATER DRAINAGE.


2. SECURE P-2 OR P-1A LUMBER ON EACH SIDE INTO THE SIDE PIECES BY USING AN IMPACT DRIVER WITH (16) 2.5" SELF DRIVING EXTERIOR WOOD SCREWS.



**18"x18"
ASSEMBLY**

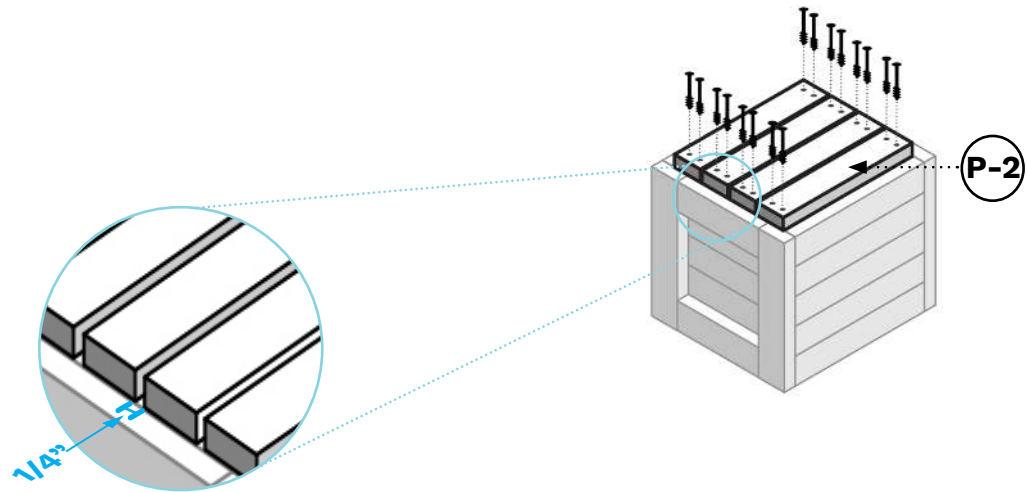

**18"x48"
ASSEMBLY**

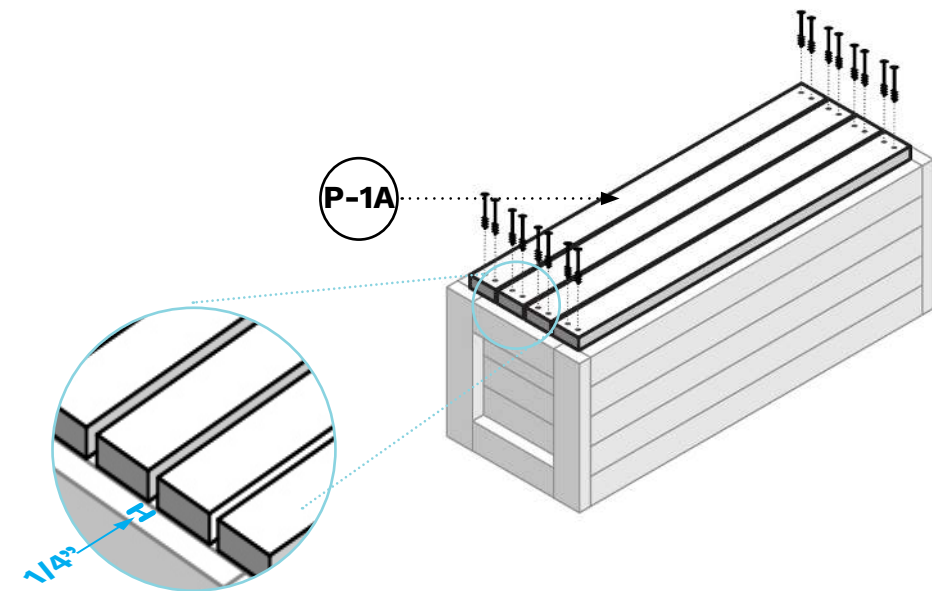



6 STEP

1. FLIP THE PLANTER BOX FRAME RIGHT SIDE UP.
2. CUT A 18" x 54" PIECE OF GEOTEXTILE FABRIC OR CUT A 48" x 54" PIECE OF GEOTEXTILE FABRIC.
3. CUT A 18" x 54" PIECE OF GEOTEXTILE FABRIC OR CUT A 96" x 18" PIECE OF GEOTEXTILE FABRIC.
4. USE A STAPLE GUN TO SECURE THE OVERLAPPING GEOTEXTILE FABRICS INSIDE THE PLANTER BOX.

NOTE: FOLD FABRIC A MINIMUM OF 1" BELOW THE TOP EDGE OF THE PLANTER BEFORE STAPLING. FOCUS STAPLING THE FABRIC "ALONG THE TOP AND DOWN THE CORNERS TO ENSURE AN OPTIMAL SEAL.

5. LIGHTLY SAND THE ROUGH EDGES OF THE PLANTER BOX.


READY TO GO! NEXT MOVE TO DESIRED LOCATION, THEN FILL WITH POTTING SOIL AND PLANT!

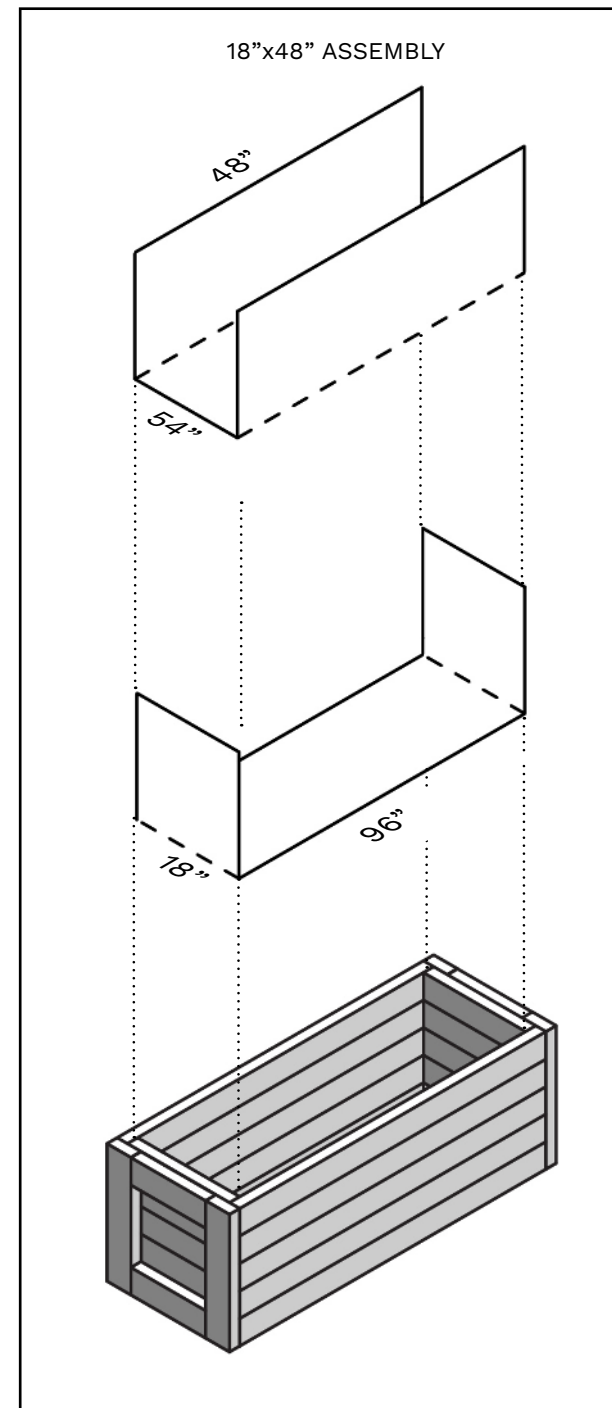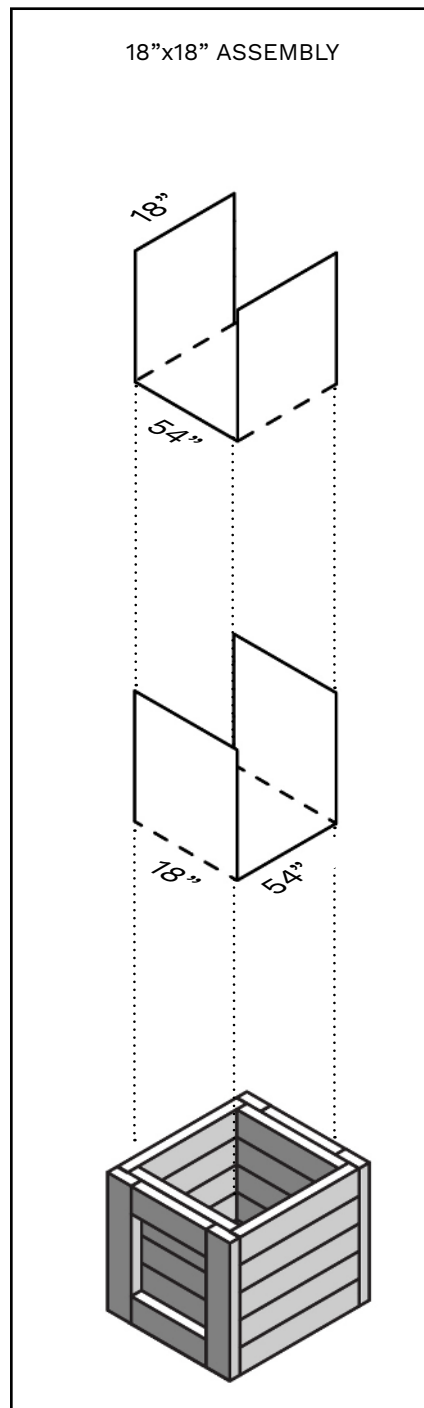




1. CUT OUT PRE-DRILLING HOLE GUIDE ALONG DOTTED LINES


2. WHEN DRILLING, ENSURE THAT YOU PROPERLY **ALIGN THE EDGE OF THE TEMPLATE WITH OUTSIDE EDGE OF THE LUMBER** BEFORE PRE-DRILLING

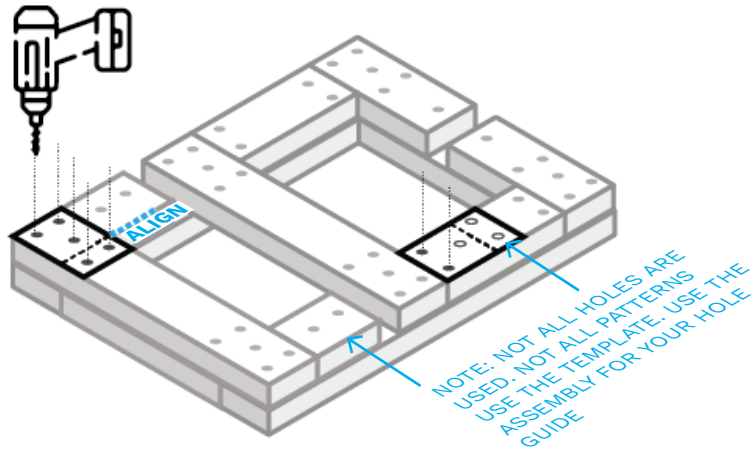

3. ENSURE ALL HOLES ARE ABOUT A **THUMB IN WIDTH FROM THE EDGE (~1")** EVEN HOLES THAT DON'T USE THIS TEMPLATE

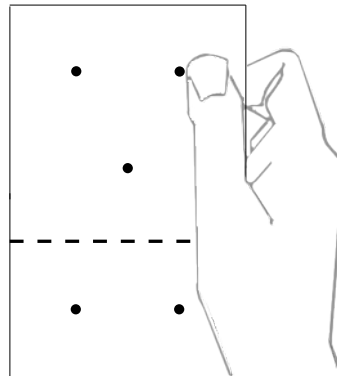

PRE-DRILLING HOLE GUIDE

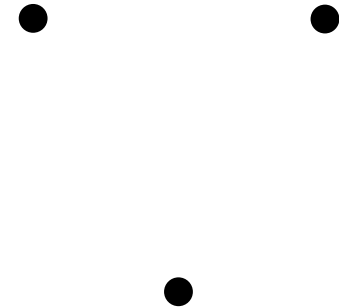

ALIGN DASHED LINE WITH INSIDE EDGE OF LUMBER



CUT ALONG THE DOTTED LINES

