

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

1.0 Purpose

The purpose of this overview is to provide information on overview aspects of the processes being carried out by the Next Generation Pack Machine 1 and the products being used and manufactured by them.

2.0 Scope

This is an information document and applies to the processes carried out by the Next Generation Pack Machine and the products / raw materials being used by their processes

3.0 Definitions

NGP1 – Next Generation Pack Machine 1

WIP – Work in Progress

70% IPA – 70% Isopropyl Alcohol

4.0 References

5.0 Roles and Responsibilities

Production representatives for the Next Generation Pack Machine 1 ensures that the information in this document is current.

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

Next Generation Pack Machine 1 (NGP1)

This machine is a two (2) person operation.


The operator(s) load punched and coated catheters into the manual infeed's, the robot will insert mandrels to move the catheters into position to be packaged. Another function when needed is the application of the gripper which happens prior to the robot placing the mandrels into the catheter before moving to the belt to be packaged.

When 5 catheters are placed on the belt and in position they are fed through the following processes of packaging, the top and bottom film will be applied along with adding the solution, the packages will be sealed and cut, Finger hole punched out, label will be applied to the pack and sent out to SP1.

Prior to the packaging being sealed the top web will go through the printers to apply the variable print and information of the product being packed.

Once the catheters are packaged they will be sent out to SP1. The in-process quality checks will be performed in this area, at regular intervals through out the shift as per the document 75CLR00636_Att3.

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

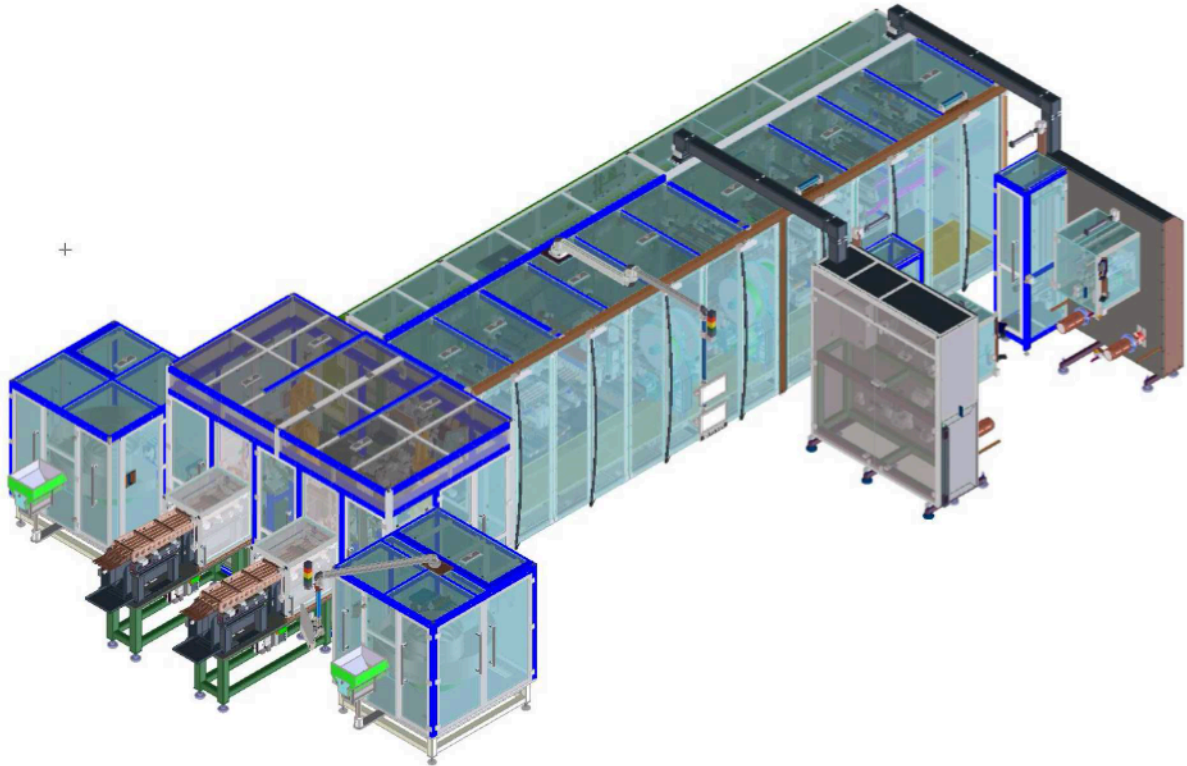

EMERGENCY STOP

In the event of an emergency push this button to STOP the machine.

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

INTRODUCTION

Suppliers		Operation		Customers
VaPro Coating Line 6		Next Generation Pack Machine 1		SP1

Responsibilities:

Team Leader and Training Coordinators:	Manufacturing Instruction Implementation.
Operators:	Adherence to the Manufacturing Instruction.

Learning Objectives:

At the end of this training activity the Trainee will be able to:

- Operate the Next Generation Pack Machine in conjunction with the Work order in a safe and efficient manner.
- Operate the machine to produce a minimum target set by the Team Leader

Training Method:	Equipment:
Training Method will involve: • Job Talk • Practical Demonstration • Stamina Development	Listed below are the equipment requirements necessary for this operation: • Next Generation Pack Machine • Gloves • Safety Glasses • Isopropanol 70% • Lint free wipes • Scissors

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MATERIALS FOR NEXT GENERATION PACK MACHINE 1 (NGP1)

Catheters

Are received from VCL 6 line where they are coated. Catheters used on VCL 6 are different catheters used in other machines as they are non PVC catheters with non PVC funnels more commonly known as TPE. Ensure to scan WIP ticket into machine and SAP to ensure correct catheters are used.

Each tote box has a WIP Ticket attached which contains the relevant details i.e. part number, machine number, Lot number, the date, shift and the quantity made.

Note: Materials status is clearly marked by a red “QA acceptance” Stamp. Only materials with this stamp may be used.

Catheter Subs are in different diameters and lengths.



Family	Charrier Size and Length	Funnel Colour	Comment
Onli	Ch14-17cm	Green	
	Ch10-40cm	Black	
	Ch12-40cm	Green	
	Ch14-40cm	Green	
Infyna	Ch12-17cm	Pastel White	Pastel White Funnel
	Ch14-17cm	Pastel Green	Pastel Green Funnel
	Ch12-40cm	Green	
	Ch14-40cm	Green	
Onli Tiemann / Coude	Ch12-40cm	Green	
	Ch14-40cm	Green	
	Ch16-40cm	Yellow	

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MATERIALS FOR NEXT GENERATION PACK MACHINE 1 (NGP1)
Mandrels

Mandrels are located in the pickup position ST.1013 and ST.1015

There are 4 different types of mandrels used for the robotic arm and they are stored in the specified location. 2 male and 2 female

During a product changeover where the mandrels have to be changed according to the new recipe selected, the mandrels must be removed from the area and the new mandrels replaced accordingly.

Station 9 & 11 also have mandrels in the gripper attachment station to allow for docking of the gripper to male catheters

Throughout the shift the mandrels must be regularly checked for bent mandrels.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MATERIALS FOR NEXT GENERATION PACK MACHINE 1 (NGP1)

Hydration Solution (H2)

H2 Hydration Solution – is stored in-grey 250L IBC's and is transported to the Next Generation Packaging Machine via the material pass-

Hollister H2 Hydration solution consists of predominately water with small amounts of surfactant & other ingredients to enhance hydration of the coating.

Check Hydration Solution 2 label is present on the drum before use.

Ensure the label contains the expiry date.



Hydration Solution 2

Schlötter
Chemical Technology
Schlotter Ireland DAC
5 Pine Road,
Naam Enterprise Park,
Naam, Co. Kildare
Ireland
W91 KH08
Tel: +353 45 447400
Fax: +353 45 447478
www.schlottier.ie

Product No.: 148199-250

Hollister Part no. 406501

not regulated

IBC # C-1

Batch No.
2407-6608

Contents
250kgs

Use By (DDMM/YYYY)
28/01/2025

Sample Only

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MATERIALS FOR NEXT GENERATION PACK MACHINE 1 (NGP1)

Grippers

The grippers are fed into a vibrating hopper and in turn fed into the conveyer bowl.

Ensure the hopper is regularly checked and topped up.

The HMI will display a warning when the level of grippers are running low or empty.

Grippers are fed down the linear conveyer with the aid of blow air nozzles. Mandrels are inserted into the catheters and grippers are applied.

Film Roll

The top web does not contain a pattern and therefore is the only roll for the top web

There are two different rolls of film used for the bottom web with different patterns.

One for Male format (Dark grey design throughout) and one for female (Very light grey design throughout).


Bottom web is loaded on dereeling station 154 and top web station 152

The roll of film is fed through the machine using various rollers that are labelled with numbers and directional arrows.

Remember to scan the MRP number against the current production work order.



Top Web Roll
No Pattern

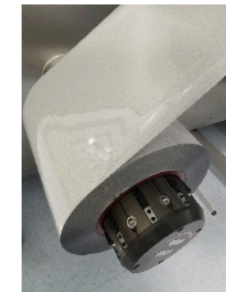

Bottom Web Roll
Female
(Light Grey pattern)



Bottom Web Roll
Male
(Dark Grey pattern)

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MATERIALS FOR NEXT GENERATION PACK MACHINE 1 (NGP1)

Labels



Labels are applied to the packaging after the catheter is sealed. Roll of labels must be checked throughout the shift to avoid running out.

The HMI will display a warning when the level of labels at the label station are running low or empty.

There are different labels for male and female formats and for different product SKU's (Onli or Infyna). Important to confirm on workorder that correct labels are loaded on the machine

This label contains the information for the customer that it is Hollister product and the catheter that is inside.

Remember to scan the MRP number against the current production work order.

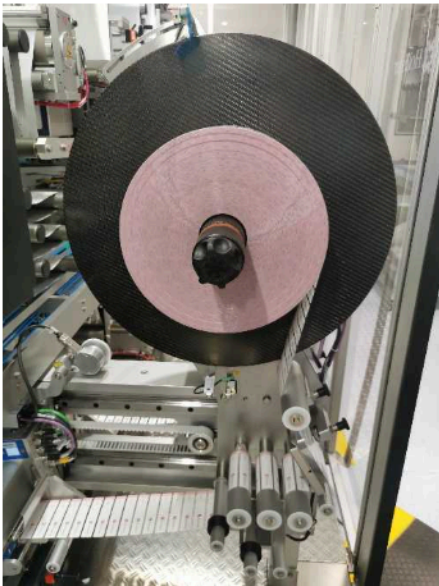

Infyna, Onli and Onli
Tiemann/Coude Label for
Male

Infyna and Onli Label for Female

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MATERIALS FOR NEXT GENERATION PACK MACHINE 1 (NGP1)

Print Ribbon


Print ribbon is also used to apply the fixed print to the packaging and the film tracking mark to the foil. When ribbon is running low the status will be displayed on the HMI. If the ribbon runs out the machine will stop immediately and an alarm message will be raised on the HMI. For the fixed and variable print, there are 2 stations. The left hand printer applies the print to lanes 2&4, and the right hand printer applied the print to lanes 1,3 & 5. Station 35 variable print (55mm). Station 37 fixed print (110mm). Station 32 print mark (22mm).

Remember to scan the MRP number against the current production work order.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

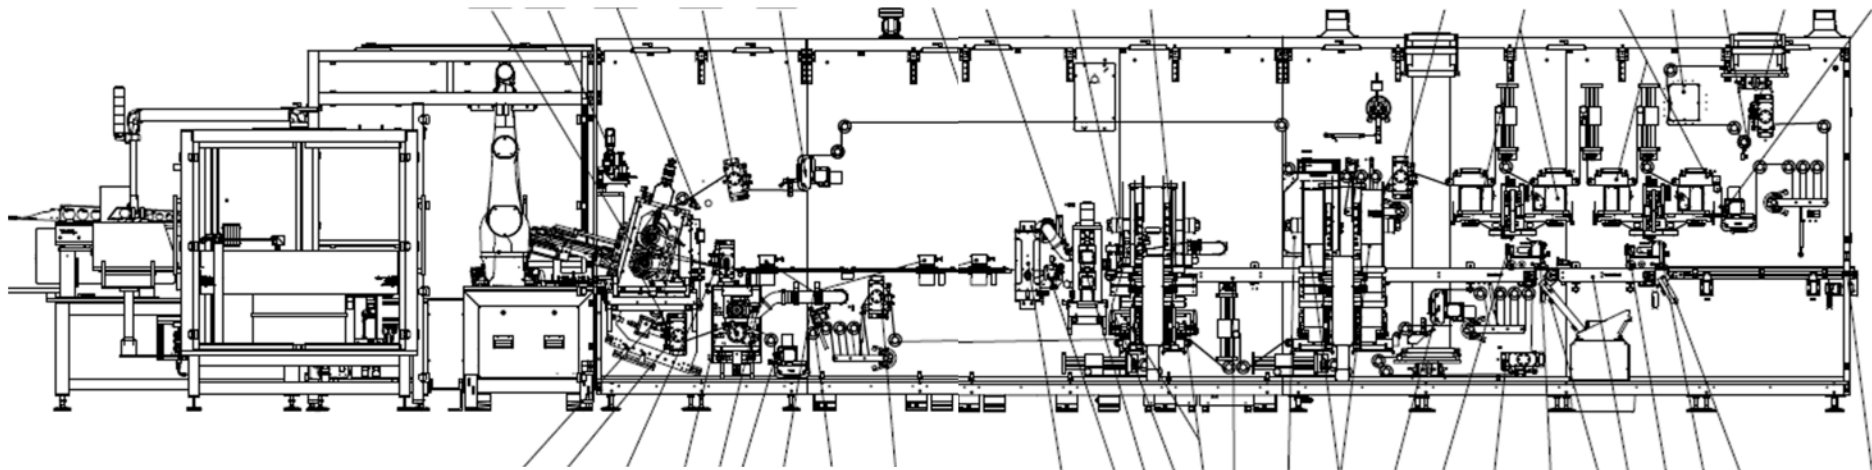


Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Gripper Feeding Rear (St.1001) and Gripper Feeding Front (St.1003)

The gripper components are pre-sorted manually through a sorting bowl and fed via linear track to the machine. The filling level of the sorting bowl is checked by a sensor.

The filling level of the products in the linear infeed is checked by means of minimum and maximum sensors. Grippers are replenished through the hopper reservoirs at the back of the machine, one on the left and one the right

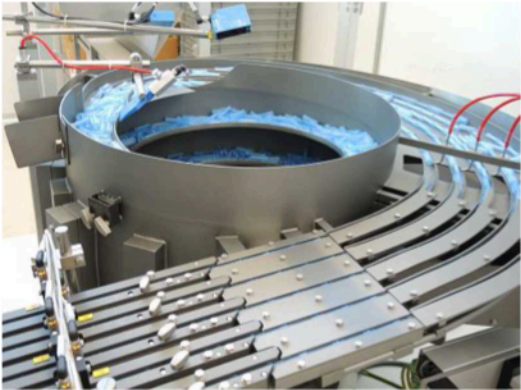

Catheter Feeding Rear (St.1005) and Catheter Feeding Front (1007)

Catheters are loaded on to 5 individual vibratory tracks.

The catheters are transported to the end of the tracks. Once in position, the catheters are automatically transferred on to the robot loading turret.

Sensors on the tracks detect when catheter levels are low on the feed tracks. When the low level is reached a warning is raised on the machine HMI.

If catheters are not added to the tracks the machine will alarm and stop for continual low level on the catheter feed track



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Gripper Assembly Rear (St.1009) and Gripper Assembly Front (St.1011)

Grippers are feed horizontally using vibratory feeders. The grippers are singulated into a rotary device. The grippers are then rotated through 90 degrees and are then presented to the male catheters. Once the catheters are in position the mandrel guide and centring pins move downwards. Once in the fully downward position the grippers are clamped and then docked to the catheters. As the gripper is docked to the catheters, the mandrel guides and cantering are retracted from the catheters.

Robot Rear (St.1013) Robot Front (St.1015)

The catheters are presented to the 2 machine robots on the rotary turret. The position rake stabilises the robot mandrels prior to insertion into the catheters on the turret. As the robot inserts the mandrels into the catheters the rake opens to allow the catheter to fully dock to the robot head. When fully docked the turret grippers open and the robot transfers the catheters to the place position in station 17.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Catheter Introduction (St.1017)

The catheters are stripped from the robot tool and inserted in the rotation sealing station 1057 by means of two linear axes. The catheters are fed in at an offset between the lanes 1, 3, 5 and lanes 2 and 4.

2 and 4 are leading lanes

Once the catheters are inserted, the catheter guide is moved back against the machine direction. The catheters are taken off and remain in the slots.

Dosing Direct (St. 1019)

A pump supplies solution to the consumption tank on the machine.

The dosing plungers draw in the solution and inject it into the dosing tubes, which are located on the dosing unit.

The speed and the motion will be pre – set. From there a set amount of the solution is injected into the three – sided sealed pouch in lanes 1-3-5 and/or 2-4.

There are separate controls for dosing lanes 2/4 and lanes 1/3/5



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Rotary Sealing (St.1057)

This station is a rotating format sealing station that welds together two foils in non-stop operation. The station consists of 2 replaceable format sealing cylinders that are each mounted on a heated drum. The cylinders turn in opposite direction to the foil. The complete station is designed as an interchange station to facilitate a quick format change.


This is a high temperature region on the machine and the sealing cylinders must not be contacted unless you are using the correct PPE

Splice Detection Top Foil (St.1026) and Bottom Foil (St.1056)

Sensors detect a splice on the top and bottom of the foil web. Products near the splices are marked as bad parts in the shift register and are individually ejected at a later stage.

Top Foil Permeable Film Pull Rolls (St.1029)

The station is used to transport the top machine web into the sealing station. The speed of the material is monitored by the rotary encoder and adjusted as necessary.

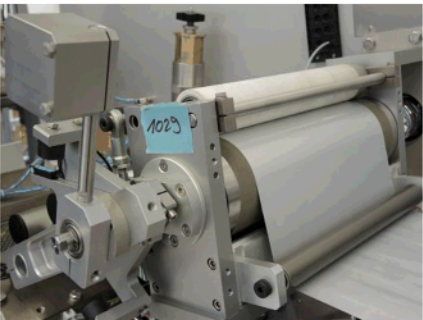

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Top Foil Pull Rollers (St.1039) and Bottom Foil Pull Rollers (St.1051) (St.1055)

The station is used to ensure transport of the top and bottom film into the next station.

Vision System Printing (St.1041)


During each machine index 5 packs are produced. On each pack variable and fixed product information is printed, The camera inspects the variable and fixed printed applied to the packs and confirms the information is correct and legible

Variable print contains: BATCH number, Expiry Date, Production Date, Data Matrix Code, GTIN. Fixed print contains product handling and manufacturing site information

Variable Printing (St.1035)

Two thermotransfer printers are mounted perpendicular to the direction of pouch film flow. They print variable data on the pouch material. Two printers are required due to the offset from lane 1, 3, 5 to lane 2 and 4.

The lefthand printer, prints the information on lanes 2/4 and the right hand printer prints the information on lanes 1/3/5

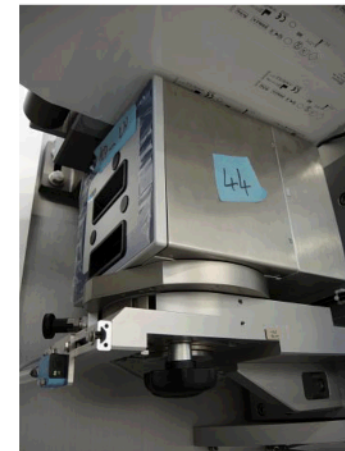

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Fixed Printing (St.1037)

Two thermotransfer printers are mounted perpendicular to the direction of pouch film flow. They print fixed data on the pouch material. Two printers are required due to the offset from lane 1, 3, 5 to lane 2 and 4.

The lefthand printer, prints the information on lanes 2/4 and the right hand printer prints the information on lanes 1/3/5

Print Mark Printing (St.1032)

The thermal transfer printer adds printmarks to the pouch material. The printmarks are printed continously on the pouch material.

The print mark is used to control the position of the web as it is transported through the machine.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Web Guiding Top Foil (St.1105) and (St.1107)



The web edge controller (St.1105) is used to control the path of the top packaging material foil to the target position in the following station – **1035 – Fixed Printing.**

The web edge controller (St.1107) is used to control the path of the top packaging material foil to the target position in the following station – **1029 – Top Foil Pull Rolls**

Web Guiding Bottom Foil (St.1109) and (St.1111)

The web edge controller (St.1109) is used to control the path of the bottom foil packaging material to the target position in the following station – **1045 – Brand Label Application.**

The web edge controller (St.1111) is used to rectify the path of the bottom foil to the top to the target position in the following station – **1053 – Thumb Hole Punching**

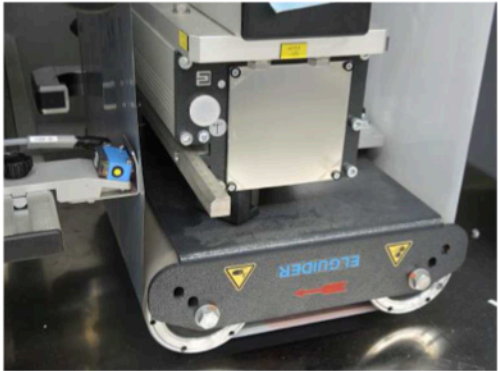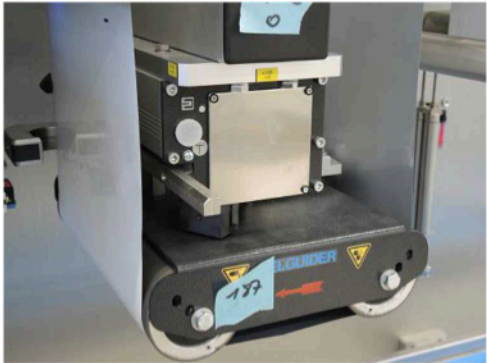

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW


Bottom Foil Unwind (St.1154) and Top Foil Unwind (St.1152)

The station consists of two pneumatic easy glide expansion shafts that are driven via servo motors with hollow shaft gearing, an automatic splicing device and a magazine. The web is continually unwound from one of the two winding shafts. The stations consist of: Unwinder, Automatic splicing device, Magazine, advance station for web advance, 90 degrees deflection.




Thumb Hole Punching(St.1053)

The station is configured to cut a thumbhole. It consists of a cutting module with a blade pipe on the upper side and a counter pressure cylinder in the underside.

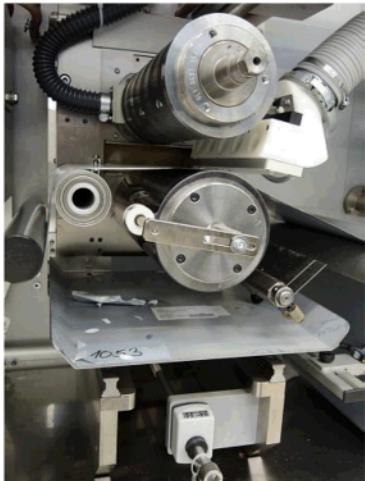

Thumb Hole Waste Detection (St.1054)

The waste from station 1053 – thumbhole punching is removed by the vacuum extractor. One nozzle for each pack position.

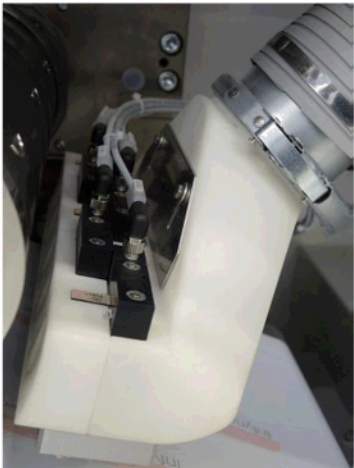


Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Brand Label Application (St.1045)

Two labelling units are mounted perpendicular to the direction of pouch film flow. They affix the brand label on the pouch material. Two printers are required due to the offset from lane 1, 3, 5 to lane 2 and 4. The right unit dispenses on lane 1,3, 5 and the left unit dispenses on lanes 2 and 4.

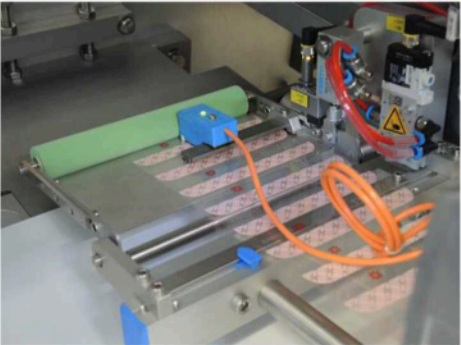

Label Presence Check (St.1049)

The presence of the brand labels are checked by measuring sensors. A roller lever is triggered for each position on the web when a label is present on the bottom web..



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Pack Pull Rollers (St.1059)


Located on the outfeed from the sealing station. The station consists of a pair of rollers. The upper roller is cooled, while the bottom roller has rubber inserts. The rollers only contact the side seals on the sealed web in between the individual pack seals. There is no contact on the 2 outer liner seal positions.

The station is closed while the machine is running and provides a constant tension to pull the web from the sealing station.



Pack Pull Rollers (St.1063)

The station is used for transportation of the sealed package through the pouch area of the machine. The speed of the sealed package is monitored by the machine and readjusted if necessary.

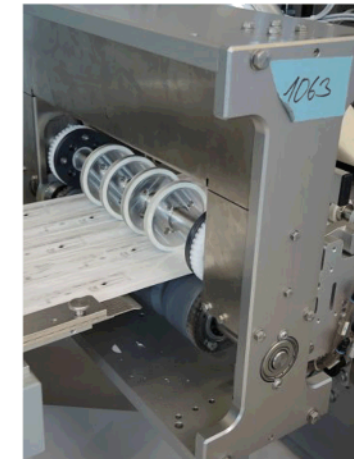

Pack Cooling (St.1061)

In this station, the sealed pouch foil is cooled with an air flow. The upper cooling unit can be moved upwards by hand.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Catheter Presence Check (St.1062)


The presence of the products at the infeed of the 1062 station is indicated by sensors, one for each lane. This station consists of rollers that detects the presence of catheters. Station 62 individually checks for the presence of catheters in each of the machine lanes using sensors connected to rollers. If a catheter is not present the roller will not lift to trigger the sensor and the pack is rejected automatically at the product reject station.

Pack Advance (St.1065)

The distance between the pack pull rollers and the subsequent **St.1067 – Pack Contour Cut** is bridged by the advance roll extension. The sealed packs are controlled by this station for entry into the pack contour cut

Slug Detection (St.1087)

The waste form **St.1067 – Pack Contour Cut** is removed by the vacuum extractor. One nozzle for each web. The waste sensor is mounted at the nozzle. It checks whether the waste from station 1067 passes through the nozzle of the extractor.

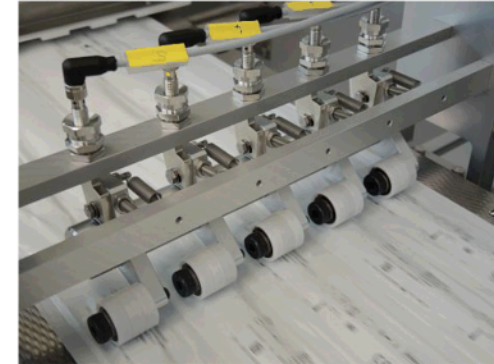

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Waste Grid Pull Rolls (St.1043)


The station consists of pull rollers for the waste grid created during the pack contour cut. Friction rollers pull the waste grid generated during the contour cutting operation free from the sealed packs.

Waste Grid Detection (St.1068)

The waste grid foil is checked for tears/breakages with the aid of rotating drums and sensors. The waste grid is fed over rollers, when the machine is running the waste grid creates rotational movement of the rollers. Sensors detect whether or not the rolls are moving by means of permanent signal change. If no movement is detected the machine will alarm and stop for waste grid fault. The waste grid is extracted via a vacuum suction.

Pack Contour Cut (St.1067)

The station consists of a cutting module with a contour cutting cylinder which includes a thumb hole cutting feature. The thumb hole punch outs are removed from the web with suction holes which are ejected into station 1087 at a specific point in the cutting tool rotation. The lower portion of the cutting station consists of a plain counter cylinder. The pouches are cut to a pre-set length. The individual pouches are then transferred to Station **1069 – Outfeed Belt 1**.

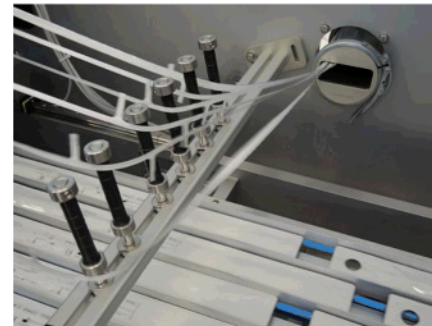

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Outfeed Belt 1 (St.1069) Outfeed Belt 2 (St.1077)

The station is situated between the pack contour cut and pack reject. The discharge belt receives the separated pouches from the contour cutting station and the pouches are segregated into five lanes.

Pack Presence Check Infeed (St.1070) and Pack Presence Check Before Reject (St.1071)

The presence of the products at the infeed of station 1069 is checked with sensors, one for each lane.

The station checks the presence of products before **St.1073 – Pack Reject**

Pack Reject (St.1073) and Pack Presence Check in Reject (St.1075)

If a bad part is detected by the machine, the product is marked as a reject in machine register and rejected at station 1073. The station can individually reject a pack from any machine lane. The reject products make their way out of the machine via a belt. The operator must manually remove the reject pack from the belt.

If a product is not detected when expected by the sensors located in St 1075, the machine will stop and alarm for a missing reject pack



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

MACHINE OVERVIEW

Pack Presence Check Before IPC (St.1079)

The station checks the presence of produce before St.1081 – IPC.

IPC (St.1081) and Pack Presence Check in IPC (1083)

On request, a set number of products can be requested for sampling. When a product is requested, the product is ejected with aid of gates; one for each lane. The products are sent down a slide into a collection hopper. The station (1083) checks the presence of products that pass via the slide of St.1081 – IPC by means of sensors.

Outfeed Belt (St.1085)

The belt conveyer transports the products out of the machine and into SP1.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

HMI Overview

NGP1 has 2 HMI screens, one at the manual infeed station and one located in the middle of the machine which can move as needed.

Each HMI can control the whole machine

- 1) **Emergency Stop Button** – This button stops the entire machine in the event of danger. The entire machine stops immediately.
- 2) **Reset Button** – Button acknowledges information or error messages, by pressing the reset button error messages are acknowledged
- 3) **Start Button** – Button starts the machine and flashes in the start and stop phase.
- 4) **Stop Button** – When pressed the machine will stop and remain in the home position.
- 5) **Touchscreen** - The Panel View and HMI is used for operating and monitoring the machine.



Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

HMI Overview
Updating Lot Number

The lot/number update needs to be completed at 7:59am. If the operators do not complete the print update the machine will not start. An alarm will appear on the HMI stating that the print data needs to be updated.

- 1. Press the stations button on the HMI (Figure 1)
- 2. Press the general button (Figure 2)
- 3. Press the Print Data 035 Tab on the bottom of the screen of the HMI (Figure 3)

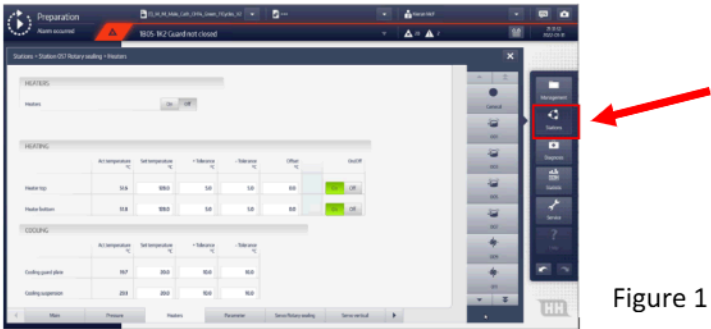


Figure 1

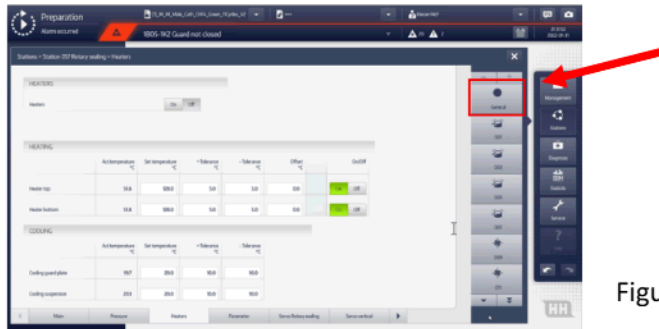


Figure 2

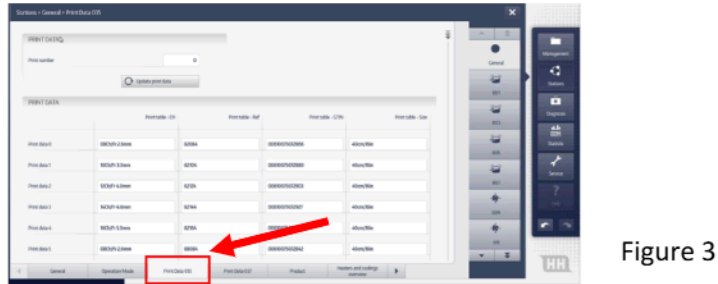


Figure 3

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

HMI Overview
Updating Lot Number

- 4. Press the update data button (Figure 4)
- 5. Print data is now updated to the correct manufacturing date
- 6. Confirm print data on the packaging

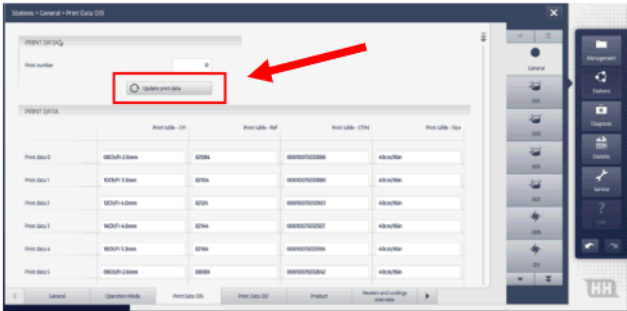


Figure 4

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

HMI Overview
Checking Counter

- 1. Press the statistic button on the HMI (Figure 5)
- 2. Press the counter button (Figure 6)
- 3. Total parts, Good parts and Bad parts will be displayed on this page. (Figure 7)



Figure 5

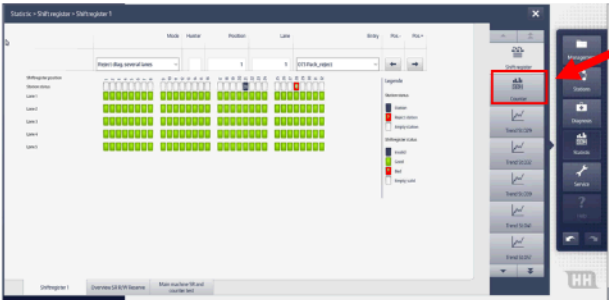


Figure 6

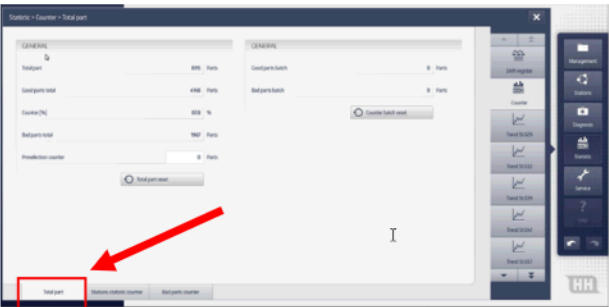


Figure 7

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

HMI Overview
Recipe Change

1. Press the management button on the HMI to change the machine recipe. (Figure 8)
2. Select the recipe as per work order (Figure 9)
3. Press the load button (Figure 10)
The format will then load automatically

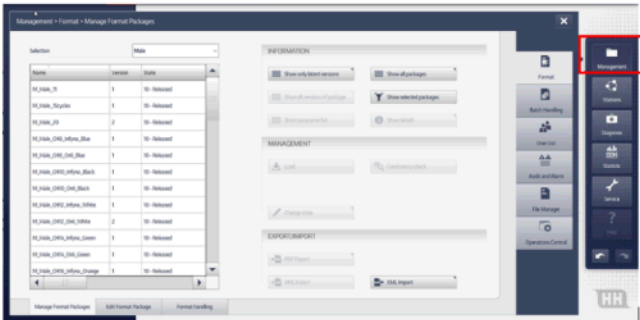


Figure 8

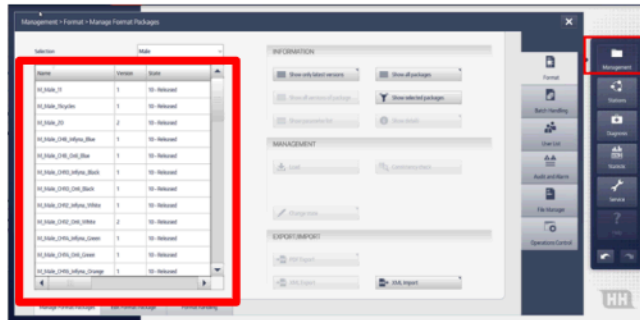


Figure 9

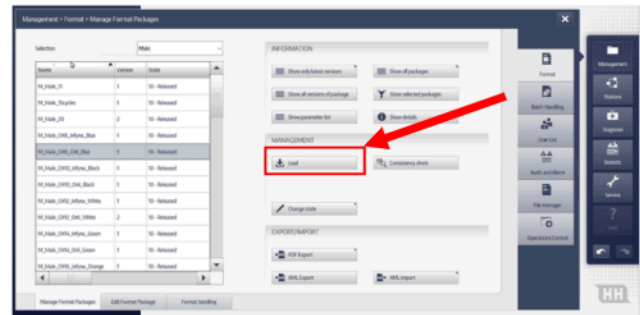


Figure 10

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

END OF SHIFT

- At the end of each shift, the operator must fill in the relevant details to complete the production/process/parameter sheets and place them on the Group Leader's desk.
- At the end of the shift, the operator must ensure to report the product count and the amount of calculated waste from the screen into the Hand Held Terminal (HHT) (See how to report goods in the SAP – Training Guide for Production Operators 75GEN00060_Att6). The operator must also ensure to complete the relevant parameter checks on the parameter check sheet and place it on the Group Leader's desk.
- The machine must be kept neat and tidy at all times.

Note: All surfaces of the Next Generation Pack Machine and associated work benches must be cleaned with 70% IPA 2 times per shift as per 75CLR00001. A record of this cleaning must be recorded in the Production Sheet **75CLR00634_Att1**.

To ensure that cleaning is carried out in the correct manner please follow the guidelines below;

- always wear gloves to protect your skin before using IPA
- always spray IPA onto the wipe, not the surface being cleaned - this will prevent IPA being sprayed into the eyes
- always ensure that you use enough IPA to wet the surface being cleaned

Number (version)	75CLR00634_Att4 (5.0)
Title	NGP1 General Overview

CHANGEOVERS

When a changeover has occurred, the operator must ensure that the area is cleared of all components and the assemblies not required are removed to the racks or the holding areas.

When changing from one SKU to another the operator must select the new SKU recipe which will dump the present packs before St.73. Operators need to remove the catheters from the infeed vibratory track, strip catheters from the mandrel robot, manually remove all packs from the machine after ST.73, The operator must complete a physical check to ensure no other product from current SKU is remaining in the machine.

Confirm against the work order that the correct Labels and Foil are loaded into the machine.

To prevent cross contamination, a line clearance must be performed prior to a changeover.

The Line Clearance for Next Generation Pack (NGP1) consists of:

1. Operator must check each pack for LOT number at Start Up.
2. Checking each compartment/station for rogue catheters, correct labels etc.
3. Check the load stations for rogue catheters, assemblies etc.
4. Operator must check each pack for correct Print SKU at Start Up.

A record of the Line Clearance must be recorded in the production sheet 75CLR00634_Att1. for Next Generation Pack Machine

Note: When a work order has been finished, the operator must ensure that Start Up line Clearance, Verification Check and End of Procedure sections are filled out correctly on the work order sheet before placing it on the Team Leaders (TL) desk.

Note: All materials that are removed from the machine must have the original WIP (Work In Progress) ticket reapplied. If the original WIP ticket is not available inform the CTL or GL immediately. If a material is removed at any other time it must have the original WIP ticket reapplied.