






U2
LM361N/NOPB
U5
LM361N/NOPB
U1
LM361N/NOPB
U7A
LM6172
U7B
LM6172
U6A
LM6172
U10A
LM6172
U4A
LM6172
U4B
LM6172
U8A
LM6172
U8B
LM6172
U10B
LM6172
U6B
LM6172
U3A
LM6172
U3B
LM6172
U9
CD4070
U7C
LM6172
U4C
LM6172
U8C
LM6172
U6C
LM6172
U3C
LM6172
U10C
LM6172
XN7
AltOutputs
XN5
Outputs
XN6
Switches
XN4
Thresholds
XN1
DC
XN2
Inputs
Offsets
XN3
Rev D: OFFSET wiper filter C35–C37 100p C0G, OFF12/22/32 to GND
Rev D: R21/R22/R42 4.99K -> 499R (pairs with 1K OFFSET pots RV4–RV6)
Fixes OFFSET chatter band at noon and keeps the CV null at video rate
Sheet: /
File: Hard3Main Rev D.kicad_sch
Title: HARD3 Main
Size: A4
Date: 2026-10-27
Rev: D
KiCad E.D.A. 9.0.7
Id: 1/1



J1
Key1
KEY1
R1
100K
J2
Key2
KEY2
R2
100K
J3
Key3
KEY3
R3
100K
J4
CV1
CV1
R4
100K
J5
CV2
CV2
R5
100K
J6
CV3
CV3
R6
100K
RV4
1K
OFF11
OFF12
RV5
1K
OFF21
OFF22
RV6
1K
OFF31
OFF32
R10
75R
OUT1A
J10
Out1a
R11
75R
OUT2A
J11
Out2a
R12
75R
OUT3A
J12
Out3a
+2V5
RV1
10K
THRESH11
+2V5
RV2
10K
THRESH21
+2V5
RV3
10K
THRESH31
OUT1B
SW1
XOR1
SWITCH1A
SWITCH1B
R9
75R
J7
Out1b
OUT2B
SW2
XNOR1
SWITCH2A
SWITCH2B
R8
75R
J8
Out2b
OUT3B
SW3
XOR2
SWITCH3A
SWITCH3B
R7
75R
J9
Out3b
XN6
Switches
SWITCH1A
SWITCH2A
SWITCH3A
SWITCH1B
SWITCH2B
SWITCH3B
XN7
AltOutputs
XOR1
XOR2
XNOR1
+12V
-12V
+2V5
+5V
5V_1C
5V_2C
5V_3C
XN1
DC
KEY1
KEY2
KEY3
CV1
CV2
CV3
XN2
Inputs
XN3
Offsets
OFF11
OFF21
OFF31
OFF12
OFF22
OFF32
THRESH11
THRESH21
THRESH31
THRESH12
THRESH22
THRESH32
XN4
Thresholds
XN5
Outputs
OUT1A
OUT2A
OUT3A
OUT1B
OUT2B
OUT3B
Rev D: OFFSET pots RV4–RV6 10K -> 1K linear (pair with 499R R21/R22/R42 on main)
Sheet: /
File: Hard3Ctrl Rev D.kicad_sch
Title: HARD3 Ctrl
Size: A4
Date: 2026-10-27
Rev: D
KiCad E.D.A. 9.0.7
Id: 1/1

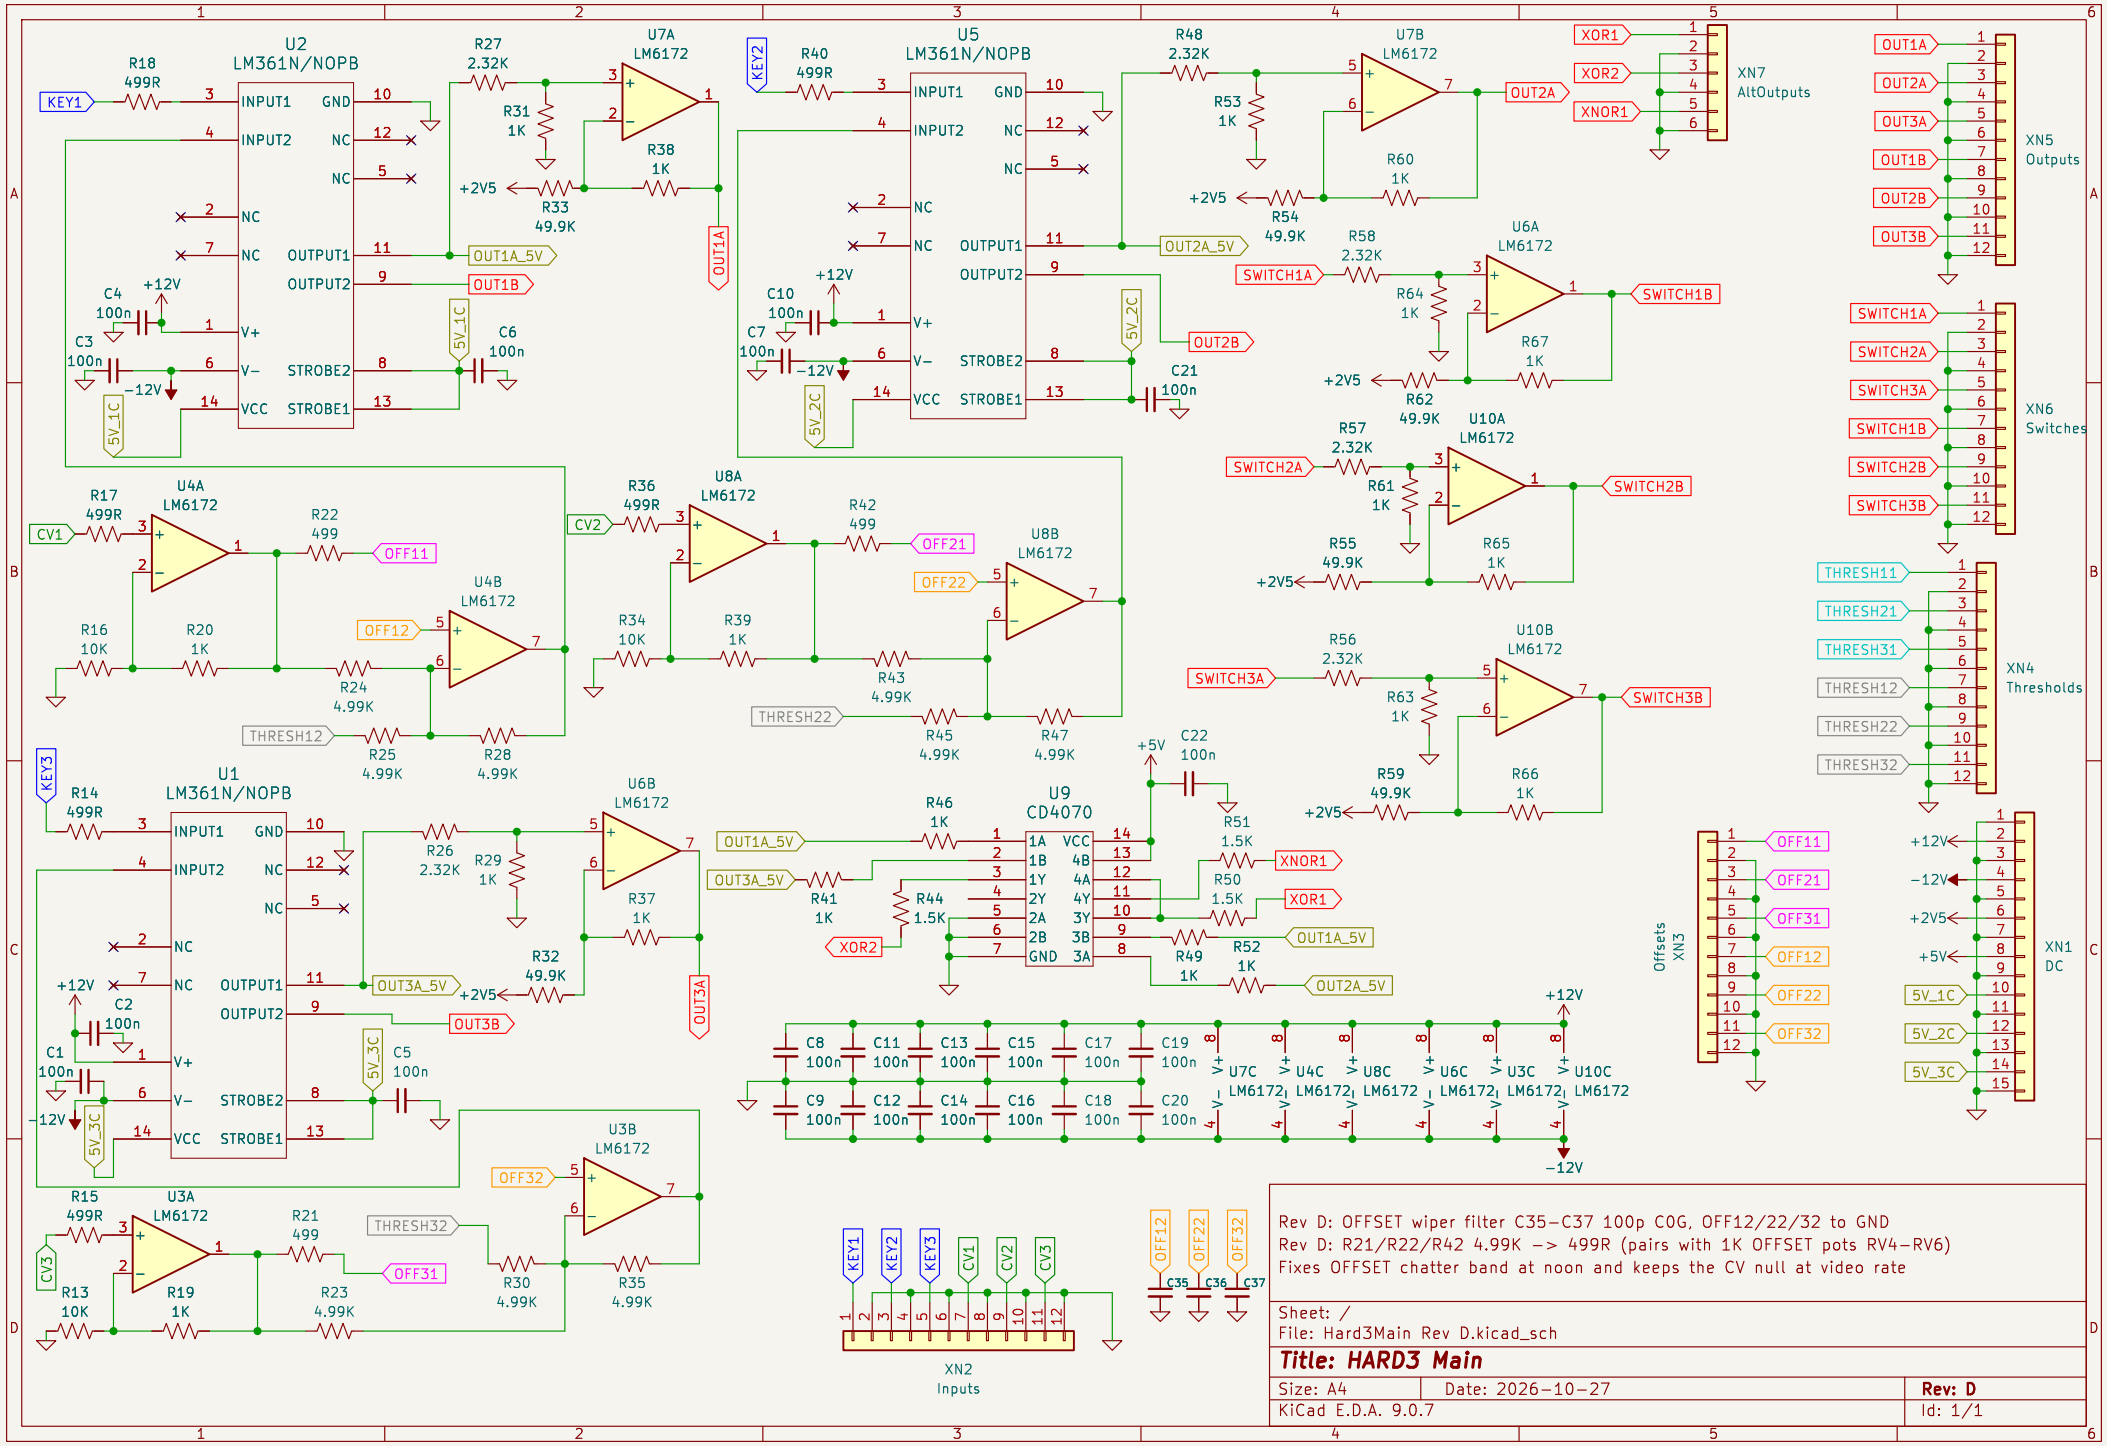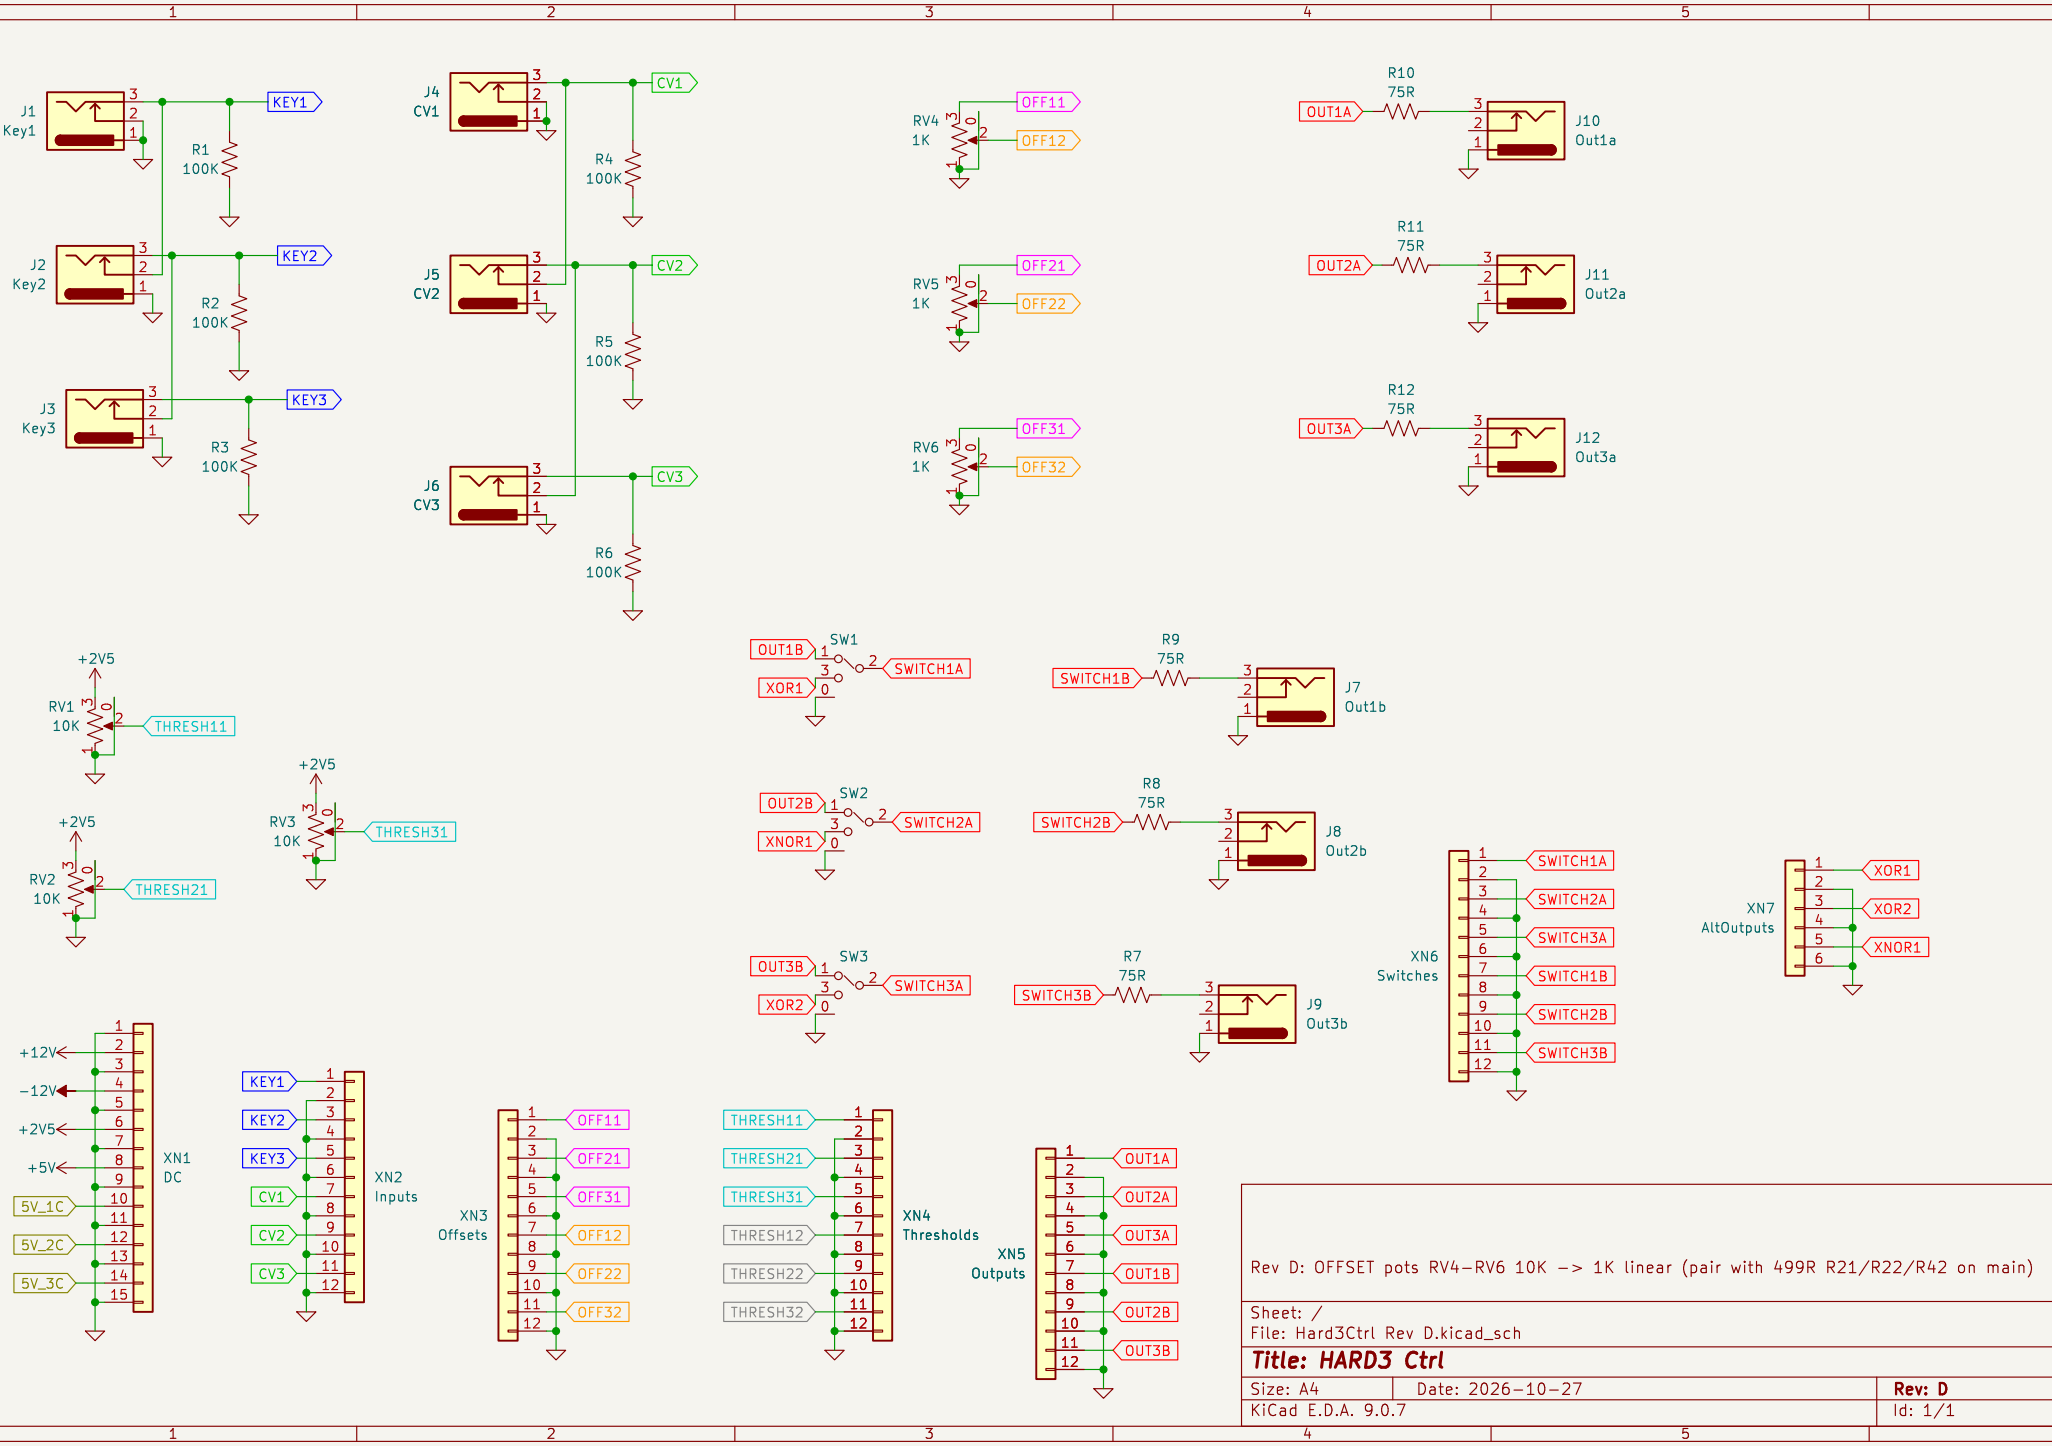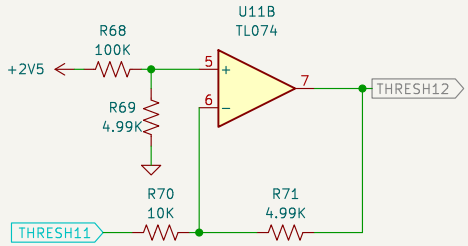


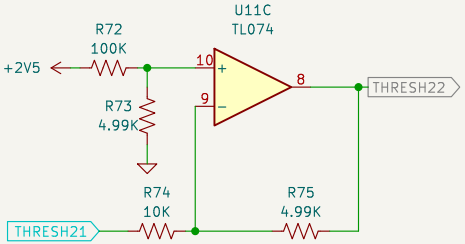


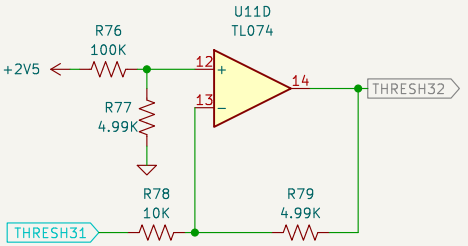


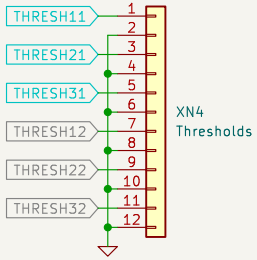


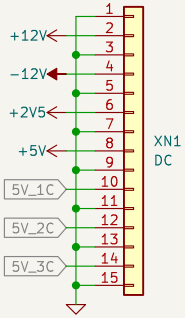


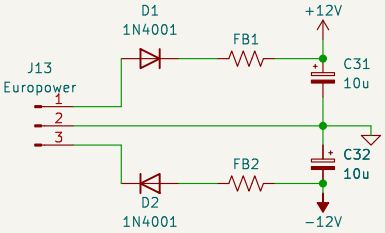


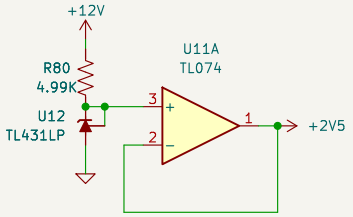




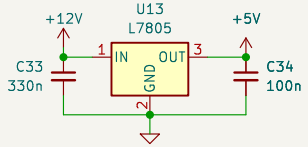



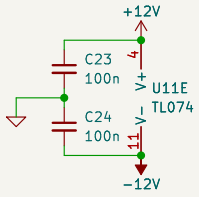



Sheet: /
File: Hard3Pwr Rev B.kicad_sch

Title:

Size: A4	Date:	**Rev:**
KiCad E.D.A. 9.0.7		Id: 1/1