آشنایی با زبان اسمبلی AVR

مدهای آدرس دهی

Dr. Aref Karimiafshar A.karimiafshar@ec.iut.ac.ir



	_	

مدهای آدرس دهی

- CPU can access data in various ways
 - These various ways of accessing data are called addressing mode
- Addressing mode of a microprocessor are determined when it is designed
- Addressing mode in AVR:
 - 1. Single-Register (Immediate)
 - 2. Register
 - 3. Direct
 - 4. Register indirect
 - 5. Flash Direct
 - Flash Indirect

cpu از طریق مختلفی می تونه به داده های مورد نیاز خودش دستیابی پیدا بکنه به اون روش های مختلفی که این داده در اختیار cpu قرار میگیره میگیم addressing mode

مد ادرس دهی کاملا وابسته به نوع طراحی اون میکروپروسسور است

به صورت خاص در avr ما 5 دسته کلی از مدهای ادرس دهی رو داریم:

یا مد ادرس دهی

که توی اسلاید است

Single-register (Immediate) addressing mode

In this addressing mode, the operand is a register.

```
NEG R18 ;negate the contents of R18
COM R19 ;complement the contents of R19
INC R20 ;increment R20
DEC R21 ;decrement R21
ROR R22 ;rotate right R22
```

In some of the instructions there is also a constant value with the register operand.

```
LDI R19,0x25 ;load 0x25 into R19
SUBI R19,0x6 ;subtract 0x6 from R19
ANDI R19,0b01000000 ;AND R19 with 0x40
```

اولین روش ادرس دهی که Single-register است در این روش اون عملیاتی که قراره انجام بشه روی یک رجیستر خاص انجام میشه مثلاً دستور com اون عملوند ما میاد و توی یک رجیستر خاصی قرار میگیره و عملیات روی اون انجام میشه


پس داده از طریق یک رجیستر مشخصی میاد و در آختیار پرداز شگر ما قرار میگیره

خود Immediate addressing mode رو می تونیم به دو نوع تقسیم بکنیم:
1- دستوراتی مثل com, inc ... که مستقیما روی کل عملوندهای خودشون رو از طریق همین رجیستر روبه روی دستور به دست میارن پس دستوراتی که به عنوان عملوند فقط یک رجیستر

ر جیستر روبه روی دستور به دست میاری پس دستورانی که به عنوان عملوند فقط یک رجیسر دارند

2- دستوراتی مثل LDI, ... این نوع از دستورات روی یک رجیستر انجام میشه و زیرمجموعه Immediate addressing mode است و اینجا در کنار یک رجیستر که محور کار است در کنار اون می تونند یک عدد ثابت رو هم داشته باشند

Single-register (Immediate) addressing mode

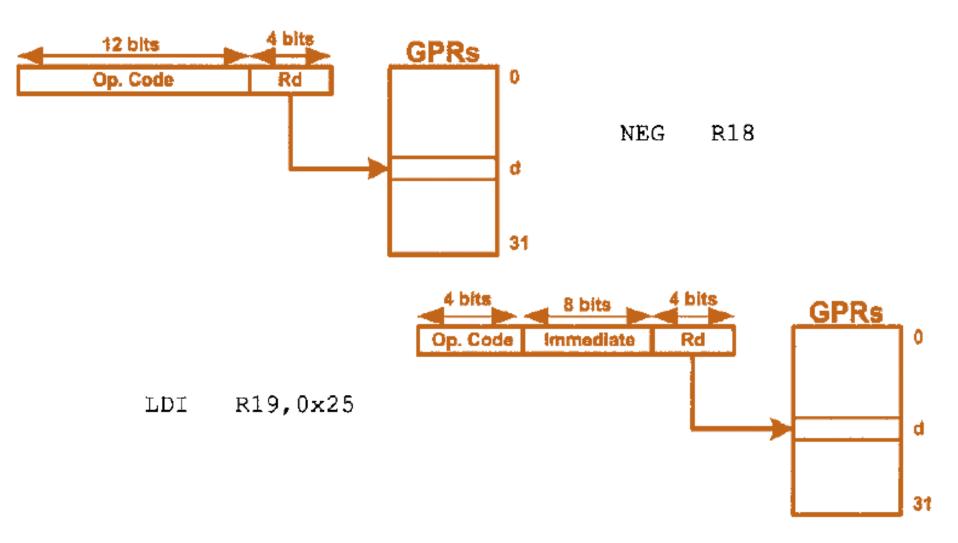

به صورت ساختاری: ما یکسری عملیات داریم که نیاز به یک رجیستر دارند که این رجیستر می تونه یکی از اون 32

رجیستر همه منظوره باشه و همین تنها عملوند این ها محسوب میشه


در کنار این ها دستوراتی داریم مثل LDI که میتونه روی یک رجیستر عملیات انجام بده ولی در

کنار اون یک عدد ثابت رو هم به عنوان بخشی از عملوندهای خودش داشته باشه

Two-register addressing mode

Two-register addressing mode involves the use of two registers to hold the data to be manipulated.

```
ADD R20,R23 ;add R23 to R20
SUB R29,R20 ;subtract R20 from R29
AND R16,R17 ;AND R16 with 0x40
MOV R23,R19 ;copy the contents of R19 to R23
```

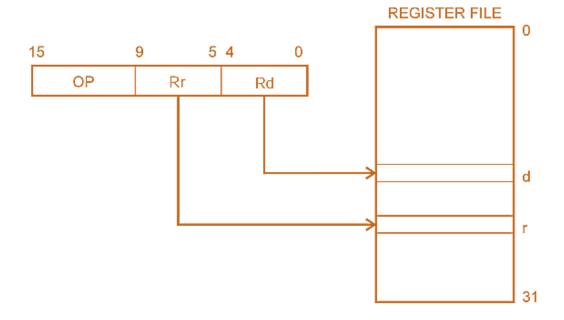

Two-register addressing mode : ینی عملیاتی که قراره انجام بشه به دو رجیستر نیاز داره و ما محتوای دو رجیستر رو میام و روش یک عملیات خاصی انجام میدیم مثال هاشو زده مثل ADD و این یک دستوری هستش که میاد محتوای دو رجیستر رو با هم

جمع میکنه و در یکی از اون دو رجیستر قرار میده


پس کلا این عملیات نیاز به دو رجیستر داره و با این می تونه کل کارهایی که نیاز داره رو انجام

بده

Direct Data addressing mode

In direct addressing mode, the operand data is in a RAM memory location whose address is known, and this address is given as a part of the instruction.

```
LDS R19,0x560 ;load R19 with the contents of memory loc $560 STS 0x40,R19 ;store R19 to data space location 0x40
```

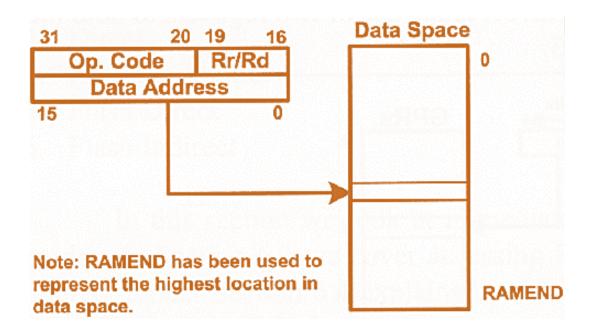

Direct Data addressing mode: توى اين حالت اپرند در يک خونه از حافظه قرار داره و ما مستقیما ادرس اون رو به کار میگیریم مثل LDS و ..

در LDS ما میایم محتوای یک خونه از حافظه رو که ادرسش رو میدونیم داخل یک رجیستر قرار

میدیم مثلا اینجا میاد محتوای خونه 560 حافظه رو توی رجیستر R19 قرار میده


پس به صورت ساختاری ما یک اپکد داریم و یک رجیستری که مشخص میکنیم که به عنوان بخشی از عملوندهای ما باشه و یک ادرس مستقیم از حافظه که قراره روی اون به عنوان بخشی دیگری از

عملوندها این عملیات رو انجام بدیم

I/O Direct addressing mode

The I/O direct addressing mode can address only the standard I/O registers. The IN and OUT instructions use this addressing mode.

```
IN R18,0x16; R18 = contents of location $16 (PINB) OUT 0x15,R18; PORTC (location $15) = R18
```

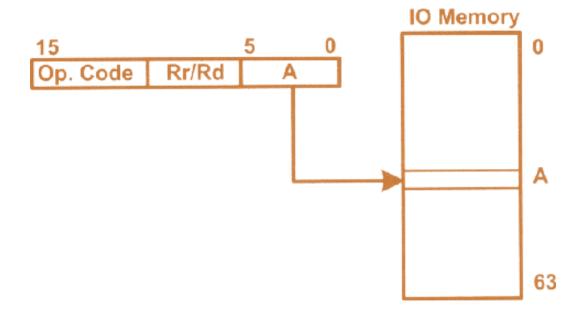

I/O Direct addressing mode: برای عملیات های ورودی و روی رجیستر های ورودی عملیات رو انجام میده

توی این فضای این مستقیم مستقیما ادرس اون خونه از فضای این مشخص میکنیم و میگیم

محتوای اون رجیستر بیاد توی اون خونه قرار بگیره

مثلاً توى دستور IN R18, 0X16 يني محتواى خونه 16 كه پين B هستش بياد و ريخته بشه

توی رجیستر شماره 18

I/O Direct addressing mode

Selected ATmega32 I/O Register Addresses

Symbol	Name	I/O Address	Data Memory Addr.
PIND	Port D input pins	\$10	\$30
DDRD	Data Direction, Port D	\$11	\$31
PORTD	Port D data register	\$12	\$32
PINC	Port C input pins	\$13	\$33
DDRC	Data Direction, Port C	\$14	\$34
PORTC	Port C data register	\$15	\$35
PINB	Port B input pins	\$16	\$36
DDRB	Data Direction, Port B	\$17	\$37
PORTB	Port B data register	\$18	\$38
PINA	Port A input pins	\$19	\$39
DDRA	Data Direction, Port A	\$1A	\$3A
PORTA	Port A data register	\$1B	\$3B
SPL	Stack Pointer, Low byte	\$3D	\$5D
SPH	Stack Pointer, High byte	\$3E	\$5E

	_	

I/O Direct addressing mode

Some AVRs have less than 64 I/O registers. So, some locations of the standard I/O memory are not used by the I/O registers. The unused locations are reserved and must not be used by the AVR programmer.

Some AVRs have more than 64 I/O registers. The extra I/O registers are located above the data memory address \$5F. The data memory allocated to the extra I/O registers is called *extended I/O memory*.

I/O direct addressing mode, the address field is a 6-bit address and can take values from \$00-\$3F, which is from 00 to 63 in decimal. So, it can address only the standard I/O register memory, and it cannot be used for addressing the extended I/O memory. For example, the following instruction causes an error, since the I/O address must be between 0 and \$3F:

;illegal as the address is above \$3F

نکته ای درباره اعضای مختلف خانواده avr: میدونیم همه تراشه های Avr امکانات یکسانی ندارند

توی مواردی که ما تراشه های avr داریم که کمتر از 64 تا رجیستر ۱/۵ دارند اون لوکیشن هایی که استفاده نشده به عنوان رزرو شده محسوب میشه و نباید توسط برنامه نویس مورد استفاده قرار بگیره پس اگر از میکروکنترلر AVR داریم استفاده میکنیم که فضای I/O اش کمتر از 64 بایت

هستش باید مراقب باشیم از اون خونه هایی که تعریف شده نیستند توی فضای ۱/٥ استفاده نکنیم

در کنار این ها ما تراشه هایی داریم که بیشتر از 64 تا رجیستر ۱/۵ نیاز دارند و این ها تحت عنوان extended I/O memory دسته بندی میشن : توی استفاده از این فضا باید دقت بکنیم که

وقتی میخوایم از دستوراتی مثل in, out استفاده بکنیم این دستورات قابل ادرس دهی نیستند. دستورات in, out فقط می تونن اون فضای استاندار د I/O مموری رو ادرس دهی بکنند

پس اگر ما یک خانه ای خارج از این فضا رو بخوایم توسط این دستورات ادرس دهی بکنیم با خطا

روبه رو می شیم

ادامش صفحه بعدى...

I/O Direct addressing mode

To access the extended I/O registers we can use the direct addressing mode. For example, in ATmega128, PORTF has the memory address of 0x62. So, the following instruction stores the contents of R20 in PORTF.

STS 0×62 , R20 ; FORTF = R20

The I/O registers can have different addresses in different AVR microcontrollers. For example, the I/O address \$2 is assigned to TWAR in the ATmega32, while the same address is assigned to DDRE in ATmega128. This means that in ATmega32, the instruction "out ox2,R20" copies the contents of R20 to TWAR, while the same instruction, in ATmega128, copies the contents of R20 to DDRE. In other words, the same instruction can have different meanings in different AVR microcontrollers. This can cause problems if you want to run programs written for one AVR on another AVR. For example, if you have written a code for ATmega32 and you want to run it on an ATmega128, it might be necessary to change some register locations before loading it into the ATmega128.

برای این جور موارد که ما فضای O/I توسعه یافته شده داریم میایم و از همون دستورات استاندار د کار با حافظه مثل STS, LDS استفاده میکنیم نکته: یک ادرس مشخص در یک میکروکنترلر می تونه به یک نام یک پورت مجزا و متفاوتی

نسبت به یک تراشه دیگر داشته باشه مثلا وقتی داریم با atmega128 کار میکنیم و میایم ادرس دهی میکنیم این متفاوت خواهد بود نسبت به دهی میکنیم این ادرس هایی که توی فضای ۱/۵ هست این متفاوت خواهد بود نسبت به انچه که ما در atmega32 داریم پس اگر یک برنامه ای نوشتیم و برای یک تراشه خاصی مثل atmega32 است و اگر قراره اینو منتقل بکنیم به یک تراشه دیگری مثل atmega128 باید مراقب این ادرس هایی که استفاده کردیم باشیم برای همین هستش که معمولا گفته میشه که بهتر است نام های این پورت ها استفاده بکنیم

Register Indirect addressing mode

In the register indirect addressing mode, a register is used as a pointer to the data memory location. In the AVR, three registers are used for this purpose: X, Y, and Z. These are 16-bit registers allowing access to the entire 65,536 bytes of data memory space in the AVR.

	15	XH		XL	0
X - register :	7		0 7		0
, og.oto		R27		R26	
Y – register :	15	YH		YL	0
	7		0 7		0
3		R29		R28	
	15	ZH		ZL	0
Z – register :	7		0 7		0
		R31		R30	

Register Indirect addressing mode: توى اين روش مياد و ادرس اون خونه اى از حافظه که قراره ما داده ی مرتبط با اون عملیات مارو فراهم بکنه در یک رجیستر قرار میگیره

قبلا گفتیم یکسری رجیستر داریم تحت عنوان X,Y,Z که این ها 16 بیتی بودند: ما از این


ر جیستر های 16 بیتی استفاده میکنیم و یک نوع دیگری از ادرس دهی رو می تونیم داشته باشیم

تحت عنوان Register Indirect addressing mode

که صفحه بعدی بیشتر گفته...

Register Indirect addressing mode

```
;load R26 (the low byte of X) with 0x30
      XL, 0x30
LDT
                   ;load R27 (the high byte of X) with 0x1
LDI XH, 0x01
                   ; copy the contents of location 0x130 to R18
      R18. X
LD
                   ; load 0x9F into the low byte of Z
      ZL, 0x9F
LDI
                   ;load 0x13 into the high byte of Z (Z=0x139F)
    ZH, 0x13
LDI
                   ;store the contents of location 0x139F in R23
ST
```

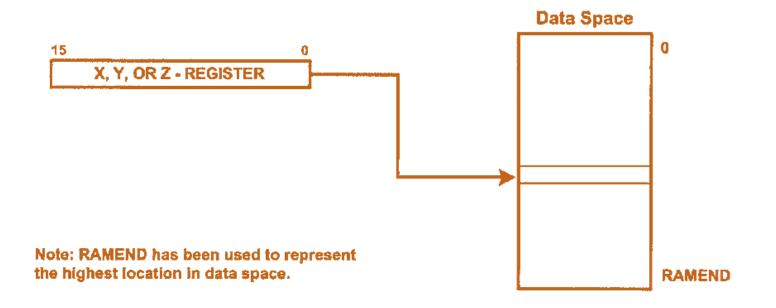

به صورت خاص دستوری که اینجا وجود داره تحت عنوان LD هستش اتفاقى كه مى افته ابنه كه:

خونه ای که Z داره بهش اشاره میکنه ینی 139F هگز

بخش کم ارزشش رو می ریزیم توی XL و بخش پرارزشش هم می ریزیم توی XH و بعد میتونیم دستور LD رو داشته باشیم در نهایت این X ما داره به اون خونه مورد نظر که 130 هگز است

داره اشاره میکنه و اون خونه از حافظه میاد و توی رجیستر R18 قرار میگیره

دستور ST: ما می تونیم قسمت پر ارزش و کم ارزش Z رو پر بکنیم و بعد این اشاره میکنه به اون

خونه ای که ما قراره دادمون رو توش ذخیره بکنیم ینی محتوای R23 میاد ریخته میشه توی اون

Register Indirect addressing mode

One of the advantages of register indirect addressing mode is that it makes accessing data dynamic rather than static, as with direct addressing mode.

```
LDI R16,0x5 ;R16 = 5 (R16 for counter)

LDI R20,0x55 ;load R20 with value 0x55 (value to be copied)

LDI YL,0x40 ;load YL with value 0x40

LDI YH,0x1 ;load YH with value 0x1

ST Y,R20 ;copy R20 to memory pointed to by Y

INC YL ;increment the pointer

DEC R16 ;decrement the counter

BRNE L1 ;loop while counter is not zero
```

نکته: یکی از ویژگی های خوب این نوع از ادرس دهی ینی Register Indirect addressing mode اینه که داینامیک سیتی به ما میده و می تونیم از این ویژگی استفاده بکنیم

Register Indirect addressing mode

Because the pointer registers (X, Y, and Z) are 16-bit registers, they can go from \$0000 to \$FFFF, which covers the entire 64K memory space of the AVR. Using the "INC ZL" instruction to increment the pointer can cause a problem when an address such as \$5FF is incremented. The instruction "INC ZL" will not propagate the carry into the ZH register. The AVR gives us the options of auto-increment and auto-decrement for pointer registers to overcome this problem.


AVR Auto-Increment/Decrement of Pointer Registers for LD Instruction				
Instru	etion	Function		
LD	Rn,X	After loading location pointed to by X, the X stays the same.		
LD	Rn,X+	After loading location pointed to by X, the X is incremented.		
LD	Rn,-X	The X is decremented, then the location pointed to by X is loaded.		
LD	Rn,Y	After loading location pointed to by Y, the Y stays the same.		
LD	Rn,Y+	After loading location pointed to by Y, the Y is incremented.		
LD	Rn,-Y	The Y is decremented, then the location pointed to by Y is loaded.		
LDD	Rn,Y+q	After loading location pointed to by Y+q, the Y stays the same.		
LD	Rn,Z	After loading location pointed to by Z, the Z stays the same.		
LD	Rn,Z+	After loading location pointed to by Z, the Z is incremented.		
LD	Rn,-Z	The Z is decremented, then the location pointed to by Z is loaded.		
LDD	Rn,Z+q	After loading location pointed to by Z+q, the Z stays the same.		

اتفاقى كه اينجا مى افته اينه كه ما مى تونيم حلقه داشته باشيم اما یک اتفاق بد می تونه اینجا بیوفته وقتی که داریم اینو افزایش میدیم ممکنه برسیم به عدد 5FF هگز و اگر از این عدد بخوایم افزایش پیدا بکنیم یک کری داریم که INC دیگه نمیتونه اینو متوجه

کردن

بشه و منتقلش بكنه به قسمت high پس برای اینكه این امكان رو داشته باشیم و بتونیم حلقه هایی تعریف بکنیم و یکسری کارها رو انجام بدیم اومدن خود دستور LD مارو در چند نمونه تعریف

Register Indirect addressing mode

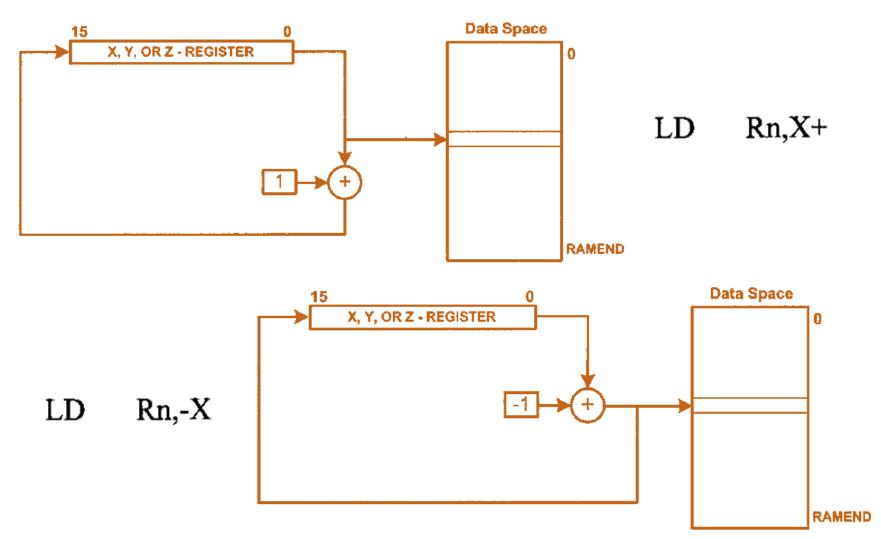


دستور LD میاد اون خونه از حافظه که الان رجیستر X داره به اون اشاره میکنه رو میاد داخل Rn می ریزه و بعد از اجرای این دستور یک واحد افزایش پیدا میکنه محتوای رجیستر X

محتوای اون خونه ای از حافظه که X داره بهش اشاره میکنه رو میاد می ریزه توی رجیستر Rn

و بعد از اجرای این دستور از این محتوا یکی کم میشه و توی رجیستر ریخته میشه

Register Indirect with Displacement addressing mode

In this addressing mode a fixed number is added to the Z register. For example, if we want to read from the location that is 5 bytes after the location to which Z points, we can write the following instruction:

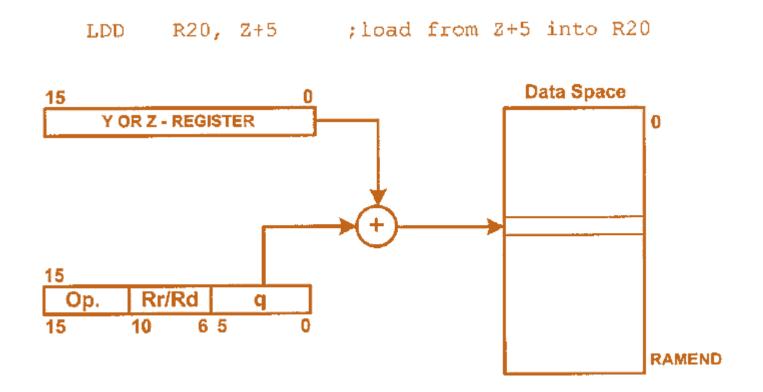

Register Indirect with Displacement addressing mode: اتفاقی که می افته اینجا اینه که زمانی که داریم محتوای یک خونه از حافظه رو باهاش کار میکنیم در یک عملیاتی بعد از اجرای اون محتوا به اندازه یک عددی که مشخص کردیم می تونه جلو بره و یا جابه جا بشه و می

تونیم از این طریق اون گام پرش رو مشخص بکنیم


این دستور LDD رو می تونیم روی رجیستر Z, Y تعریف کنیم اینجا Z رو به اضافه اون مقداری کر دیم که تعریف کر دیم که اینجا مثلا 5 است که این دستور میگه که اون خونه ای که محتوای Z داره بهش اشاره میکنه و توی R20 ریخته شد بعد اون ادر س 5 واحد افزایش پیدا می کنه و می ره توی اون خونه ای که 5 واحد جلوتره و بعد قراره این عملیات

توی خونه انجام بشه

Register Indirect Flash addressing mode

AVR Table Read Instructions

Instruction	Function	Description
LPM Rn,Z	Load from Program Memory	After read, Z stays the same
LPM Rn,Z+	Load from Program Memory with post-inc.	Reads and increments Z

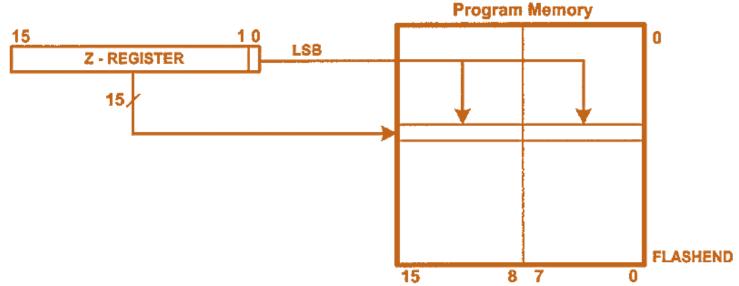


Note: If LSB = 0, the low byte is selected; if LSB = 1, the high byte is selected. Bits 15 through 1 are for word address.

	_	

Register Indirect Flash addressing mode

Using the "INC ZL" instruction to increment the pointer can cause a problem when an address such as \$5FF is incremented. The carry will not propagate into ZH. The AVR gives us the option of LPM Rn, Z+ (load program memory with post-increment).

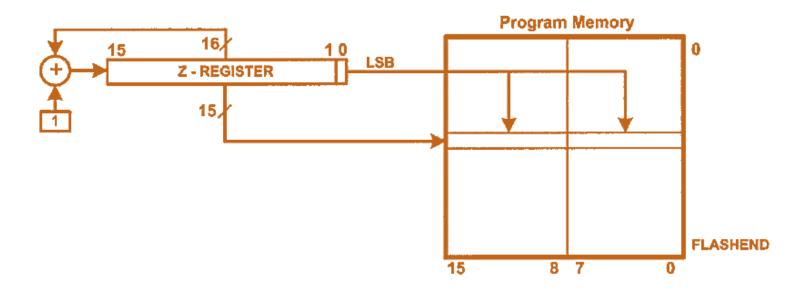

Look-up Table

Assume that the lower three bits of Port C are connected to three switches. Write a program to send the following ASCII characters to Port D based on the status of the switches.

000	.0,
001	'1'
010	'2'
011	'3'
100	'4'
101	' 5'
110	'6'
111	'7'

LPM - Load Program Memory

 Loads one byte pointed to by the Z-register into the destination register Rd.

\sim							
()	n /	٠,	_	11/	$\overline{}$		
О	U	-1	a	ш	J	ш.	_
	_	-			_		•

(i)
$$R0 \leftarrow (Z)$$

(ii)
$$Rd \leftarrow (Z)$$

(iii)
$$Rd \leftarrow (Z) Z \leftarrow Z + 1$$

Comment:

Operands:

$$0 \le d \le 31$$

$$0 \le d \le 31$$

Program Counter:

LPM - Load Program Memory

16-bit Opcode:

(i)	1001	0101	1100	1000
(ii)	1001	000d	dddd	0100
(iii)	1001	000d	dddd	0101

Status Register (SREG) and Boolean Formula

I	Т	Н	S	V	N	Z	С
_	_	_	_	_	-	_	_

Words 1 (2 bytes)


Cycles 3

Look-up Table

```
000 '0'
001 '1'
010 '2'
011 '3'
100 '4'
101 '5'
110 '6'
111 '7'
```

```
.ORG 0
.INCLUDE "M32DEF.INC"
         R16,0x0
     LDI
                                     ; DDRC = 0x00 (port C as input)
     OUT
         DDRC,R16
         R16,0xFF
      LDI
                                     ; DDRD = 0xFF (port D as output)
      OUT
         DDRD, R16
            ZH, HIGH (ASCII_TABLE<<1)
                                     ; ZH = high byte of addr.
      LDI
                                     ; read from port C into R16
            R16, PINC
BEGIN: IN
                                     ;mask upper 5 bits
            R16,0b00000111
      ANDI
            ZL, LOW (ASCII TABLE << 1)
                                     ; ZL = the low byte of addr.
     LDI
                                     ;add PINC to the addr
         ZL, R16
      ADD
                                     ; get ASCII from look-up table
          R17, Z
      LPM
      OUT
          PORTD, R17
      RJMP
            BEGIN
;look-up table for ASCII numbers 0-7
.ORG 0x20
ASCII TABLE:
      .DB '0', '1', '2', '3', '4', '5', '6', '7'
```

I/O Port Programming

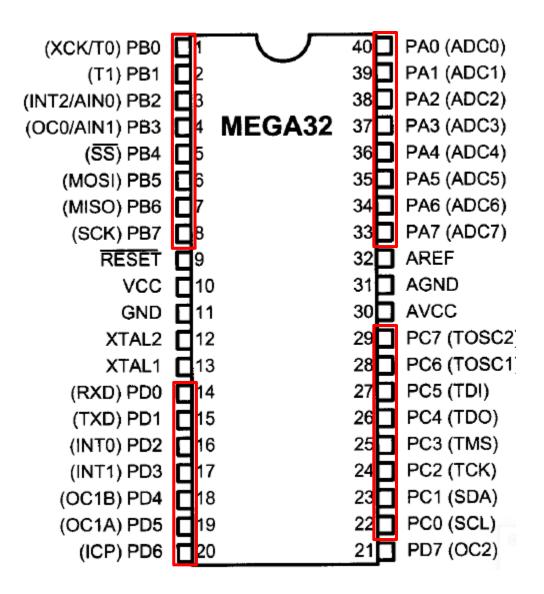

I/O Port Programming

Number of Ports in Some AVR Family Members

Pins	8-pin	28-pin	40-pin	64-pin	100-pin
Chip	ATtiny25/45/85	ATmega8/48/88	ATmega32/16	ATmega64/128	ATmega1280
Port A			X	X	X
Port B	6 bits	X	X	X	X
Port C		7 bits	X	X	X
Port D	l	X	X	X	X
Port E				X	X
Port F				X	X
Port G	1			5 bits	6 bits
Port H					X
Port J					X
Port K					X
Port L					X

Note: X indicates that the port is available.

I/O Port Programming

To use any of these ports as an input or output port, it must be programmed.

Each port has three I/O registers

PORTx, DDRx, and PINx.

PORTB, DDRB, and PINB.

			 			 		l I
DDRx:	7	6	5	4	3	2	1	0
PORTx:	7	6	5	4	3	2	1	0
PINx:	7	6	5	4	3	2	1	0
							11	П
	Px7	Px6	Px5	Px4	Px3	Px2	Px1	Px0

Address	Usage
\$3B	output
\$3A	direction
\$39	input
\$38	output
\$37	direction
\$36	input
\$35	output
\$34	direction
\$33	input
\$32	output
\$31	direction
\$30	input
	\$3B \$3A \$39 \$38 \$37 \$36 \$35 \$34 \$33 \$32 \$31

DDR Register Role

Each of the ports A-D in the ATmega32 can be used for input or output. The DDRx I/O register is used solely for the purpose of making a given port an input or output port. For example, to make a port an output, we write 1s to the DDRx register. In other words, to output data to all of the pins of the Port B, we must first put 0b11111111 into the DDRB register to make all of the pins output.

To make a port an input port, we must first put 0s into the DDRx register for that port, and then bring in (read) the data present at the pins. As an aid for remembering that the port is input when the DDR bits are 0s, imagine a person who has 0 dollars. The person can only get money, not give it. Similarly, when DDR contains 0s, the port gets data.


Notice that upon reset, all ports have the value 0x00 in their DDR registers. This means that all ports are configured as input.

DDR Register Role

Each of the ports A-D in the ATmega32 can be used for input or output. The DDRx I/O register is used solely for the purpose of making a given port an input or output port. For example, to make a port an output, we write 1s to the DDRx register. In other words, to output data to all of the pins of the Port B, we must first put 0b11111111 into the DDRB register to make all of the pins output.

To make a port an input port, we must first put 0s into the DDRx register for that port, and then bring in (read) the data present at the pins. As an aid for remembering that the port is input when the DDR bits are 0s, imagine a person who has 0 dollars. The person can only get money, not give it. Similarly, when DDR contains 0s, the port gets data.

Notice that upon reset, all ports have the value 0x00 in their DDR registers. This means that all ports are configured as input.

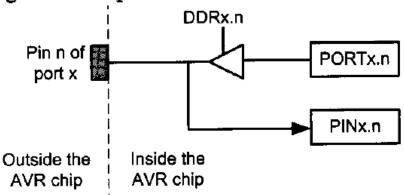


Port Register Role

To read the data present at the pins, we should read the PIN register. It must be noted that to bring data into CPU from pins we read the contents of the PINx register, whereas to send data out to pins we use the PORTx register.

There is a pull-up resistor for each of the AVR pins. If we put 1s into bits of the PORTx register, the pull-up resistors are activated. In cases in which nothing is connected to the pin or the connected devices have high impedance, the resistor pulls up the pin.

If we put 0s into the bits of the PORTx register, the pull-up resistor is inactive.

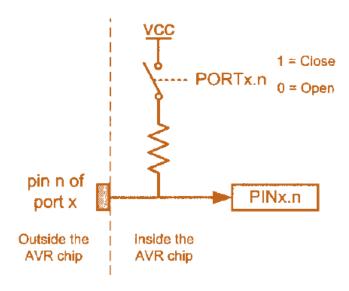

Port Register Role

The pins of the AVR microcontrollers can be in four different states according to the values of PORTx and DDRx.

PORTx	0	· 1		
0	Input & high impedance	Out 0		
1	Input & pull-up	Out 1		

پایان

موفق و پیروز باشید