

Nonlinear Solid Mechanics

A COMPILATION OF
NOTES, NOTATIONS, AND
ILLUSTRATIONS

C.B. HOVEY
2017

© Copyright 2017 by C.B. Hovey
All Rights Reserved

Abstract

Put abstract here.

Acknowledgements

Put acknowledgements here.

Contents

Abstract	i
Acknowledgements	ii
List of Tables	vii
List of Figures	viii
1 Introduction	1
1.1 Purpose and Scope	1
2 Formulation	3
2.1 Elastodynamics	4
2.2 Thermodynamics	4
2.2.1 Properties	4
2.2.2 First Law of Thermodynamics	6
2.2.3 Second Law of Thermodynamics	7
2.2.4 First and Second Laws Combined	7
2.2.5 Thermodynamic Potentials	7
2.2.6 Maxwell Equations	8
2.3 Shock	8
2.3.1 Introduction	8
2.3.2 An Ideal Fluid	8
2.3.3 Definition of a Shock	8
2.3.4 Conservation Laws for a Single Shock	8
2.3.5 PV Diagram	13
2.3.6 Pu_P Diagram	14

3 Implementation**15**

List of Tables

List of Figures

2.1	Thermodynamic properties categorized as intrinsic, extrinsic, and specific.	5
2.2	Piston moving left-to-right along the x -axis, with piston speed u_P , causing shock with shock speed U_S	9
2.3	Pressure as a function of volume for the shock Hugoniot locus of thermodynamic equilibrium states.	14

Chapter 1

Introduction

1.1 Purpose and Scope

- The purpose of this manuscript is to memorialize the theories of solid dynamics used for the implementation of a finite element code in Python.
- The scope is simply to include a listing of variables, equations, and methods used. It is not intended to be a substitute for textbooks on continuum mechanics and the finite element method.
- This manuscript was written by Dorival Piedade Neto and Chad Brian Hovey.

Chapter 2

Formulation

2.1 Elastodynamics

The bulk modulus B , a measure of local compressibility of a substance, is defined as the ratio of infinitesimal change in pressure dP caused by an infinitesimal change in volume dV , at a given volume V

$$B \triangleq -V \frac{dP}{dV}. \quad (2.1)$$

We require $B > 0$, and since $V > 0$, then $dP/dV < 0$. This results in behaviors observed physically, namely that, all else being equal,

- increases in pressures cause decreases in volumes (and vice versa), and
- increases in volumes cause decreases in pressure (and vice versa).

Using the definition of density $\rho \triangleq m/V$,

$$\frac{d\rho}{dV} = \frac{-m}{V^2}, \quad (2.2)$$

and

$$\frac{dP}{dV} = \frac{dP}{d\rho} \frac{d\rho}{dV}, \quad (2.3)$$

the bulk modulus B may also be written as

$$B = \rho \frac{dP}{d\rho}. \quad (2.4)$$

Since $B > 0$ and $\rho > 0$, then $dP/d\rho > 0$. This result physically means that, all else being equal,

- increases in pressure cause increases in density (and vice versa), and
- increases in density cause increases in pressure (and vice versa).

2.2 Thermodynamics

2.2.1 Properties

Thermodynamics properties can be divided into two categories: **intrinsic** and **extrinsic**. Intrinsic properties are

- independent of, and therefore not proportional to, the size or sample of the material,
- also known as *intensive* properties, and
- also known as *bulk* properties.

In contrast, extrinsic properties are

- dependent on, and therefore proportional to, the size or sample of the material, and
- also known as *extensive* properties.

Figure 2.1 demonstrates the independence of intrinsic properties and the dependence of extrinsic properties on the control volume, designated with the dashed lines. The original control volume, on the left side of the figure, is halved into two equal-sized control volumes on the right side of the figure. The intrinsic properties do not depend on the size of the control volume. The extrinsic properties, however, are now scaled by a factor of $\frac{1}{2}$. It is often convenient to speak of extrinsic properties

Intrinsic (intensive, bulk) pressure, density, temperature	P, ρ, T	P, ρ, T	P, ρ, T
Extrinsic (extensive) mass, volume, energy	m, V, E	$\frac{m}{2}, \frac{V}{2}, \frac{E}{2}$	$\frac{m}{2}, \frac{V}{2}, \frac{E}{2}$
Specific (extrinsic/mass) specific volume, specific energy	$\mathcal{V}, \mathcal{E}$	$\mathcal{V}, \mathcal{E}$	$\mathcal{V}, \mathcal{E}$

Figure 2.1: Thermodynamic properties categorized as intrinsic, extrinsic, and specific.

that are *independent* of size or sample of the material. To achieve this, the extrinsic properties are divided by the mass of the sample, referred to as specific extrinsic properties. Two common examples of specific properties are the **specific volume** and **specific energy**, defined as

$$\mathcal{V} \triangleq \frac{V}{m} = \frac{1}{\rho}, \quad (2.5)$$

and

$$\mathcal{E} \triangleq \frac{E}{m}. \quad (2.6)$$

2.2.2 First Law of Thermodynamics

The first law for a closed system states the change in internal energy ΔIE is equal to the net energy Q added to the system as heat less the net work W done **by** the system.

$$\Delta IE = Q - W. \quad (2.7)$$

This is the sign convention used by Joule and Clausius. A different sign convention, used by Max Planck, stated that the change in internal energy ΔIE is equal to the net energy Q added to the system as heat plus the net work done **on** the system.

$$\Delta IE = Q + W. \quad (2.8)$$

Thus, all net transfers **to** the system are **positive**. In contrast, all net transfers **from** the system are **negative**.

Then, the conservation of energy principle for open systems can be written as

$$\Delta E = \Delta(KE + IE + PE) = Q + W, \quad (2.9)$$

where the total energy E is the sum of the kinetic energy KE , the internal energy IE , and the potential energy PE . The change in total energy is equal to the net energy Q added to the system as heat plus the net work W done **on** the system.

Next, we introduce

- $d(\cdot)$ as the **exact differential**, which does not depend on the path taken through space of the thermodynamic parameters and depends only on the initial states, and
- $\delta(\cdot)$ as the **inexact differential**, which depends on the path taken through space of thermodynamic parameters.

The balance law then states

$$dE = \delta Q + \delta W. \quad (2.10)$$

2.2.3 Second Law of Thermodynamics

The Second Law states that the infinitesimal increment of entropy dS of a system from an infinitesimal transfer of heat δQ , divided by the common temperature of the system and the surrounding that supplies the heat, satisfies

$$dS \geq \frac{\delta Q}{T}. \quad (2.11)$$

For a reversible process,

$$dS = \frac{\delta Q}{T}. \quad (2.12)$$

For an irreversible process,

$$dS > \frac{\delta Q}{T}. \quad (2.13)$$

2.2.4 First and Second Laws Combined

For a reversible process, the first and second laws can be combined as

$$\boxed{dE = TdS + \delta W, \quad \text{(1st and 2nd Law, Reversible Form)}}. \quad (2.14)$$

2.2.5 Thermodynamic Potentials

Variables

P	pressure	(units to come)
V	volume	
T	temperature	
S	entropy	

Potentials

E	internal energy	Joules
F	Helmholtz free energy	Joules
G	Gibbs free energy	Joules
H	enthalpy	Joules

Differential Forms of Potentials

$$\begin{aligned}
dE &= T dS - P dV && \text{to come} \\
dF &= -P dV - S dT && \text{xx} \\
dG &= -S dT + V dP && \text{xx} \\
dH &= V dP + T dS && \text{xx}
\end{aligned}$$

2.2.6 Maxwell Equations

$$\left(\frac{\partial E}{\partial S}\right)_V = T \quad \left(\frac{\partial E}{\partial V}\right)_S = -P \quad (2.15)$$

$$\left(\frac{\partial F}{\partial V}\right)_T = -P \quad \left(\frac{\partial F}{\partial T}\right)_V = -S \quad (2.16)$$

$$\left(\frac{\partial G}{\partial T}\right)_P = -S \quad \left(\frac{\partial G}{\partial P}\right)_T = V \quad (2.17)$$

$$\left(\frac{\partial H}{\partial P}\right)_S = V \quad \left(\frac{\partial H}{\partial S}\right)_P = T \quad (2.18)$$

2.3 Shock**2.3.1 Introduction****2.3.2 An Ideal Fluid****2.3.3 Definition of a Shock****2.3.4 Conservation Laws for a Single Shock****Laboratory Fixed Coordinate Frame**

The derivation that follows assumes a **laboratory-fixed reference frame**,¹ as shown in Fig. 2.2. Consider a rigid tube containing a rigid piston and an ideal fluid at ambient density ρ_0 and ambient pressure P_0 at time $t = t_0$.

¹A shock-fixed reference frame derivation is developed in a subsequent section.

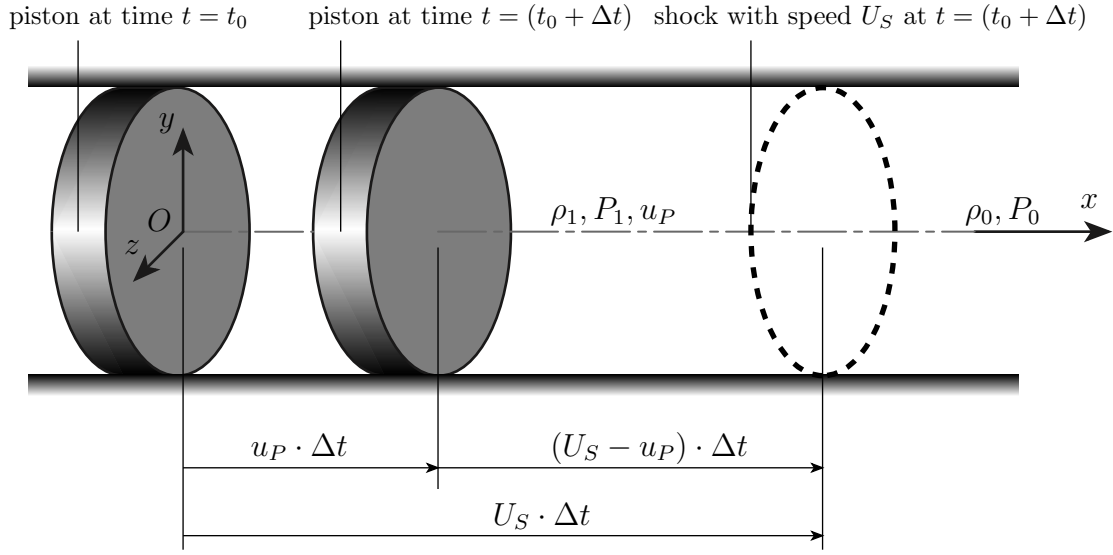


Figure 2.2: Piston moving left-to-right along the x -axis, with piston speed u_P , causing shock with shock speed U_S .

Assume at time $t = (t_0 + \Delta t)$, the piston moves left-to-right along the x -axis with speed u_P , measured in the fixed laboratory reference frame. Assume the piston speed u_P causes a shock to propagate through the material with speed U_S . We require the following:

$$0 < u_P < +\infty \quad (2.19)$$

$$0 < U_S < +\infty \quad (2.20)$$

$$u_P < U_S \quad (2.21)$$

From these considerations, we conclude that the material to the left of the shock wave in Fig. 2.2 moves to the right at speed u_P . The material to the right of the shock wave remains at rest.²

Since the piston compresses the material in the tube, we know

- $\rho_1 > \rho_0$,

²Furthermore, we assume the material throughout the tube and for all time is inviscid, non-diffusive, and non-reacting. We assume an adiabatic boundary, thus no heat conduction occurs through the boundary of the tube walls or piston. We assume no heat transfer from radiation occurs across the shock. Finally, we assume body forces from gravity and electromagnetism are negligible.

where ρ_1 is the density of the material to the left of the shock.

Allow some time interval Δt to elapse, as illustrated in Fig. 2.2. Consider the distances along the x -axis, written as a multiplication of speeds and elapsed time. In the time interval Δt , the piston moves along the x -axis a distance of $u_P \cdot \Delta t$. In the same time interval, the shock wave moves along the x -axis a distance of $U_S \cdot \Delta t$. Thus, the control volume at $t = (t_0 + \Delta t)$ has an axial length of $(U_S - u_P) \cdot \Delta t$.

From these axial lengths and piston cross-sectional area A , we can write the following relationships:

- volume

$$\begin{aligned} V_0 &= V|_{t=t_0} = A \cdot U_S \cdot \Delta t, \\ V_1 &= V|_{t=(t_0+\Delta t)} = A \cdot (U_S - u_P) \cdot \Delta t, \end{aligned}$$

- density

$$\begin{aligned} \rho_0 &= \rho|_{t=t_0}, \\ \rho_1 &= \rho|_{t=(t_0+\Delta t)}, \end{aligned}$$

- mass

$$\begin{aligned} \rho_0 V_0 &= \rho_0 \cdot A \cdot U_S \cdot \Delta t, \\ \rho_1 V_1 &= \rho_1 \cdot A \cdot (U_S - u_P) \cdot \Delta t. \end{aligned}$$

Conservation of Mass

Conservation of mass within the control volume requires that mass at time $t = (t_0 + \Delta t)$ be unchanged from mass at time $t = t_0$. Thus

$$\rho_0 \cdot \mathcal{A} \cdot U_S \cdot \Delta t = \rho_1 \cdot \mathcal{A} \cdot (U_S - u_P) \cdot \Delta t, \quad (2.22)$$

or

$$\boxed{\rho_0 U_S = \rho_1 (U_S - u_P), \quad \textbf{(Conservation of Mass).}} \quad (2.23)$$

Using specific volume (2.5), conservation of mass be rewritten as

$$\mathcal{V}_1 = \mathcal{V}_0 \left(1 - \frac{u_P}{U_S} \right), \quad (2.24)$$

or

$$\mathcal{V}_1 - \mathcal{V}_0 = \frac{-v_0 u_P}{U_S}, \quad \text{(Conservation of Mass, Volume Form).} \quad (2.25)$$

From (2.19)–(2.21), we know $\mathcal{V}_1 < \mathcal{V}_0$, which makes sense since we are compressing the material and generally have the understanding that increased pressures causes decreased volumes.

Conservation of Momentum

The net driving force from the piston on the material is $(P_1 - P_0) \cdot A$. Conservation of momentum requires $F = d(ma)/dt$. Written over the time interval Δt and for constant mass, conservation of momentum can be written

$$F \cdot \Delta t = m \cdot \Delta U. \quad (2.26)$$

Rewriting this expression in terms of pressures and densities, we have

$$(P_1 - P_0) \cdot \mathcal{A} \cdot \Delta t = (\rho_0 \cdot \mathcal{A} \cdot U_S \cdot \Delta t) (u_P - 0) \quad (2.27)$$

which gives

$$P_1 - P_0 = \rho_0 U_S u_P, \quad \text{(Conservation of Momentum).} \quad (2.28)$$

Using (2.5), (2.28) can be rewritten as

$$P_1 - P_0 = \frac{U_S u_P}{\mathcal{V}_0}, \quad \text{(Conservation of Momentum, Volume Form).} \quad (2.29)$$

Conservation of Energy

The work done on the control volume by the piston moving left-to-right is given by

$$W_P = \underbrace{P_1 \cdot A}_{\text{force}} \cdot \underbrace{u_P \cdot \Delta t}_{\text{disp.}}. \quad (2.30)$$

Note that the right boundary of the control volume, located at the shock location, does not move, so the work across this boundary is identically zero.

The kinetic energy increase of the control volume is simply the one-half times the mass times the square of the change in velocity, thus

$$KE = \frac{1}{2} \underbrace{(\rho_0 \cdot A \cdot U_S \cdot \Delta t)}_{\text{mass}} \underbrace{(u_P - 0)^2}_{\text{velocity}}. \quad (2.31)$$

Finally, the increase in internal energy is just the internal energy **per unit mass**, $\mathcal{E}$, multiplied by the mass,

$$IE = (\mathcal{E}_1 - \mathcal{E}_0) \underbrace{(\rho_0 \cdot A \cdot U_S \cdot \Delta t)}_{\text{mass}}. \quad (2.32)$$

Equating these quantities gives

$$P_1 \cdot \mathcal{A} \cdot u_P \cdot \Delta t = \frac{1}{2} \rho_0 \cdot \mathcal{A} \cdot U_S \cdot \Delta t \cdot u_P^2 + (\mathcal{E}_1 - \mathcal{E}_0) \rho_0 \cdot \mathcal{A} \cdot U_S \cdot \Delta t \quad (2.33)$$

or simply

$$\boxed{P_1 u_P = \rho_0 U_S \left(\frac{u_P^2}{2} + \mathcal{E}_1 - \mathcal{E}_0 \right), \quad \text{(Conservation of Energy)}. \quad (2.34)}$$

The foregoing equation can be written without kinematic variables U_S and u_P . Next, note that conservation of mass can be rewritten as

$$\frac{u_P}{U_S} = 1 - \frac{\rho_0}{\rho_1}. \quad (2.35)$$

Then, with (2.34),

$$P_1 u_P \stackrel{(2.28)}{=} (P_1 - P_0) \frac{u_P}{2} + \rho_0 U_S (\mathcal{E}_1 - \mathcal{E}_0), \quad (2.36)$$

$$= -P_0 u_P + 2 \rho_0 U_S (\mathcal{E}_1 - \mathcal{E}_0), \quad (2.37)$$

$$(\mathcal{E}_1 - \mathcal{E}_0) = \frac{u_P (P_1 + P_0)}{2 \rho_0 U_S}, \quad (2.38)$$

$$\stackrel{(2.35)}{=} \left(\frac{P_1 + P_0}{2 \rho_0} \right) \left(1 - \frac{\rho_0}{\rho_1} \right), \quad (2.39)$$

$$\stackrel{(2.5)}{=} \left(\frac{P_1 + P_0}{2/\mathcal{V}_0} \right) \left(1 - \frac{\mathcal{V}_1}{\mathcal{V}_0} \right), \quad (2.40)$$

which simplifies to

$$\boxed{\mathcal{E}_1 - \mathcal{E}_0 = \frac{-1}{2} (P_1 + P_0) (\mathcal{V}_1 - \mathcal{V}_0), \quad \text{(Rankine-Hugoniot curve)}. \quad (2.41)}$$

The Rankine-Hugoniot equation is the Conservation of Energy jump condition with state variables alone; there are no kinematic variables in the equation. To plot the Rankine-Hugoniot relationship in the $P\mathcal{V}$ plane with $\mathcal{E}_1 > \mathcal{E}_0$, the initial state $(\mathcal{V}_0, P_0)$ must be known.

Speed-Volume-Pressure Relationships

The alternative forms for mass conservation (2.25) and momentum conservation (2.29), when multiplied together or divided by one another, readily allow for the shock speed U_S and particle speed u_P to be written in terms of volume and pressure. These relationships are found to be

$$U_S = \mathcal{V}_0 \sqrt{\frac{P_1 - P_0}{-(\mathcal{V}_1 - \mathcal{V}_0)}} = \mathcal{V}_0 \sqrt{\frac{\Delta P}{-\Delta \mathcal{V}}}, \quad (2.42)$$

and

$$u_P = \sqrt{-(P_1 - P_0)(\mathcal{V}_1 - \mathcal{V}_0)} = \sqrt{-\Delta P \Delta \mathcal{V}}. \quad (2.43)$$

Alternative Formulations

Now we develop the shock-fixed reference frame equations for mass, momentum, and energy conservation. (To come.)

2.3.5 $P\mathcal{V}$ Diagram

The $P\mathcal{V}$ diagram shows pressure P as a function of specific volume $\mathcal{V}$. Thus, the state variables P and $\mathcal{V}$ are considered in isolation from the other state and kinematic variables. The initial laboratory state is denoted $(\mathcal{V}_0, P_0)$. A large compressive pressure P_1 is applied to the material, which causes the volume to shrink to $\mathcal{V}_1$. If this applied pressure P_1 causes a shock, we record the pressure and volume state, and then repeat the experiment at a different pressure, e.g., P_2 . Several compression experiments are run, and the $P\mathcal{V}$ states that created a shock in the material are recorded in the $P\mathcal{V}$ diagram.

For concreteness, we show four experiments with applied pressures $P_1 \dots P_4$ and resultant volumes $\mathcal{V}_1 \dots \mathcal{V}_4$, shown in Fig. 2.3. Note that all experiments start from the same initial pressure P_0 and initial specific volume $\mathcal{V}_0$.

These four thermodynamic states lie on a locus of all possible thermodynamic states that can exist in the material behind a shock. This locus is referred to as the **shock Hugoniot**. The curve connecting the locus is the **Rankine-Hugoniot curve**. The line connecting two end states is the **Rayleigh line**.

It is important to emphasize that the Rankine-Hugoniot curve **is not** the path taken by the material between two thermodynamic states.

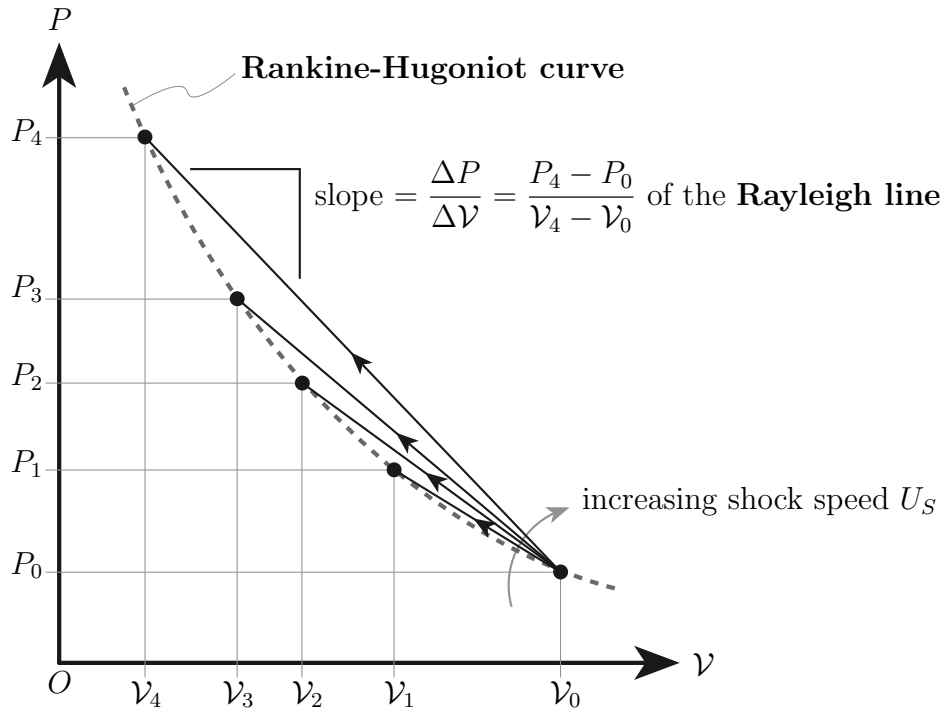


Figure 2.3: Pressure as a function of volume for the shock Hugoniot locus of thermodynamic equilibrium states.

Note that (2.42) describes the mathematical increase in shock speed with increasing slope of the Hugoniot, indicated in Fig. 2.3. Specifically, the slope of the Hugoniot goes as the negative squared value of the shock speed U_S per initial specific volume v_0 , or

$$\frac{\Delta P}{\Delta v} = - \left(\frac{U_S}{v_0} \right)^2. \quad (2.44)$$

2.3.6 Pu_P Diagram

Chapter 3

Implementation