


HOW TO USE

SABELT SIM FOAM PRO KIT **SEAT** AND **BACKREST**

**VIDEO
TUTORIAL**




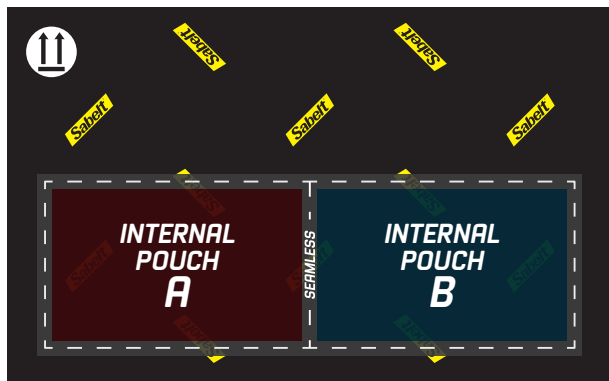

KEEP A TIMER NEAR

01


PLACE SABELT SIM FOAM PRO KIT ON FLAT SURFACE AND IDENTIFY THE "SIDE UP" SYMBOL

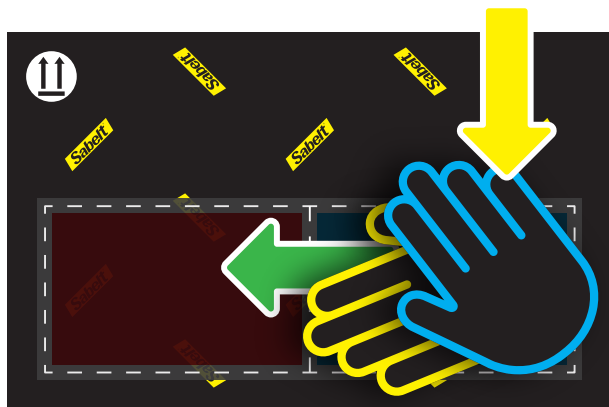

02

**↓ ARMS VERTICAL PRESSURE
HAND PROTECTION OF
THE UPPER WELDING
← DIRECTION OF THE FORCE TO
OPEN THE CENTRAL WELDING**

**PUT YOUR HAND IN A
DIAGONAL POSITION ON ONE
OF THE INTERNAL POUCH
AND APPLY FIRM PRESSURE
TO BREAK THE CENTRAL SEAL**

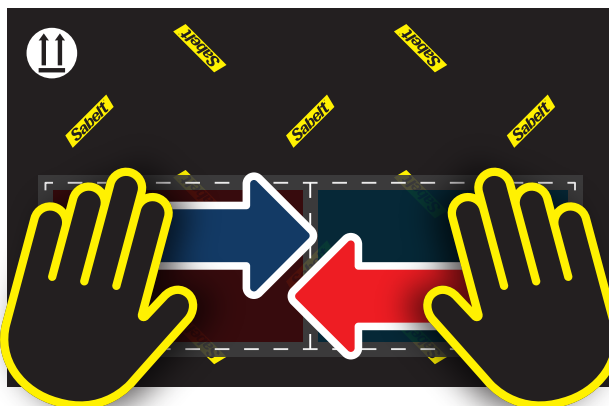

03


**MIX VIGOROUSLY TO SHIFT
THE TWO COMPONENTS
FROM ONE SIDE TO OTHER**

**KEEP THE SAME HIGH
SPEED OF MIXING**



04

ONCE THE INNER
POUCHES ARE SWOLLEN,
WAIT FOR IT TO "POP"
OPEN AUTONOMOUSLY
START THE TIMER AFTER THE POP
IT CAN BE A CLEAR POP OR YOU
CAN FEEL A LOSS OF PRESSURE,
IN THAT CASE PUSH HARD
TO HELP THE FOAM GET OUT
OF THE INTERNAL POUCHES

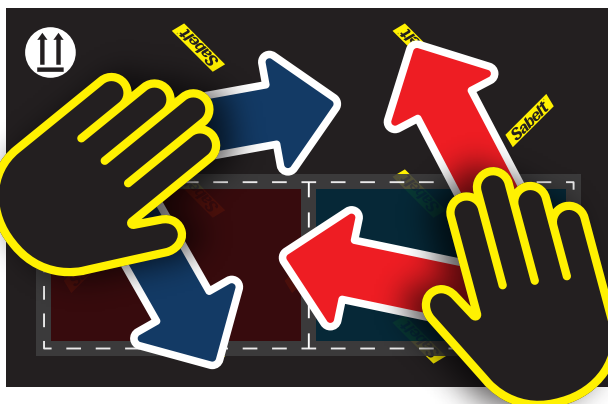

05

AFTER THE "POP" REMOVE
COMPLETELY THE FOAM
FROM THE POUCHES AND
SPREAD THE FOAM IN THE
CENTRAL PART OF THE INSERT,
IT WILL BE PUSHED TOWARDS
THE OUTSIDE ONCE THE DRIVER
GETS ON THE SEAT
PUSH A BIT OF FOAM OVER THE
INTERNAL BAGS, TO NOT FEEL
THEM AFTER THE REALISATION





IMPORTANT

ONLY FOR THE BACKREST

IF YOU ARE USING THE BACK REST INSERT,
MAKE SURE, AFTER THE "POP", TO PLACE MORE
FOAM MATERIAL ON THE LOWER PART (LOWER BACK)
TO GET THE MOST COMFORTABLE RESULT.


YOU DO NOT NEED TO HAVE A LOT OF MATERIAL
ON THE UPPER SIDE OF YOUR BACK
(CLOSE TO SHOULDERS) WHILE IS SUPER IMPORTANT
TO GET THE RIGHT SUPPORT ON THE LUMBAR"

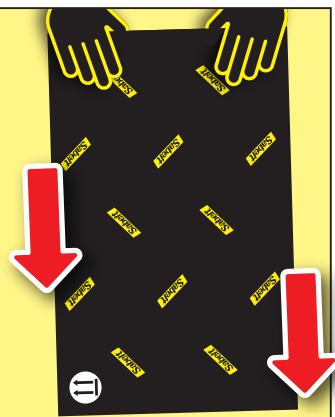

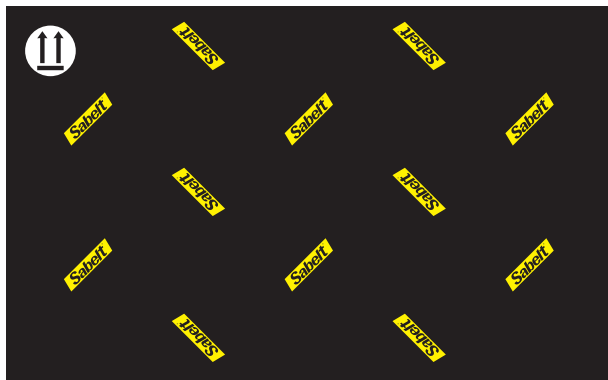

06

AFTER 50 TOTAL SECONDS FROM THE POP, PLACE THE INSERT ON YOUR SEAT, GET ON IT TRYING TO KEEP IT AS STRETCHED AS POSSIBLE (TO MAKE IT AS SMOOTH AS POSSIBLE) YOU STILL HAVE 15/20 SECONDS TO ADJUST THE POSITIONING OF THE INSERT OR YOU CAN ALSO MOVE A BIT THE FOAM WITH YOUR HAND WHERE NEEDED.

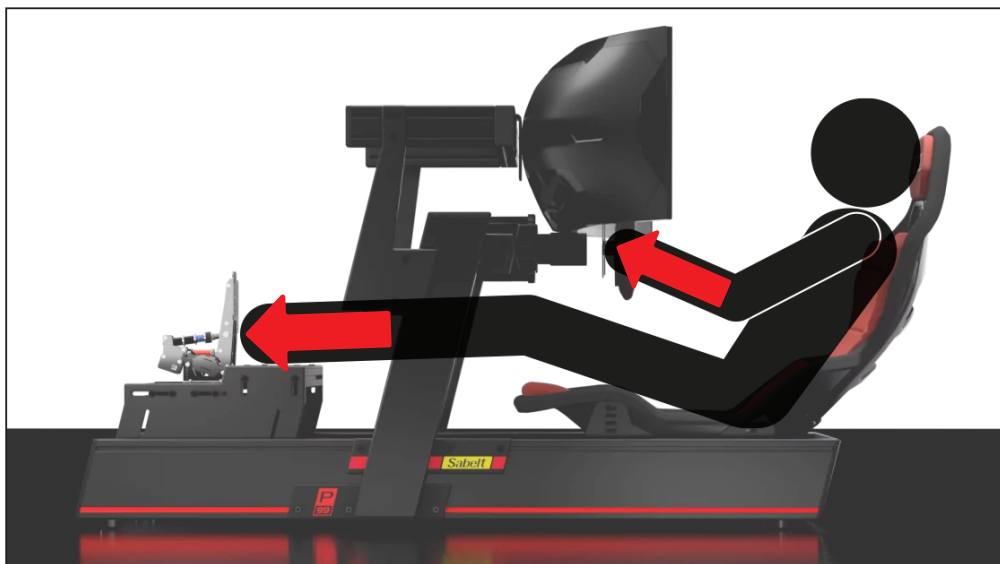

07

MAKE SURE TO STAY IN RACING POSITION, PUSH YOUR SELF TOWARD THE SEAT FROM YOUR STEERING WHEEL, AND PRESS THE BRAKE (A GOOD AMOUNT OF PRESSURE) IN ORDER TO LET THE FOAM TAKE YOUR SHAPE WHILE IN BRAKING CONDITION/POSITION. DURING THIS PHASE, THE INSERT WILL GET WARM, DON'T WORRY, IT WILL COOL DOWN SOON.

ONCE THE SOLIDIFICATION PROCESS IS COMPLETE: IF NEEDED, YOU CAN LEVEL THE INSERT WITH A RUBBER Mallet WHERE YOU FEEL SPIKY POINTS.