CHAPTER

31

INDICATING / RECORDING SYSTEMS

CHAPTER 31
INDICATING / RECORDING SYSTEMS

CH-SE-SU	Schem	Page	Sheet	Date
31-EFFECTIVE PAGES				
		1 thru 2		Nov 14/2025
31-CONTENTS				
		1		Apr 23/2025
		2		Apr 23/2025
R		3		Nov 14/2025
		4		Apr 23/2025
		5		Apr 23/2025
		6		BLANK
31-ALPHABETICAL INDEX				
		1		May 15/2024
		2		May 15/2024
31-31-11				
		1		May 15/2024
31-31-13				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
31-31-14				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
31-31-15				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
31-31-16				
		1		May 15/2024
31-31-17				
		1		May 15/2024
31-32-15				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
		1.1	1	Apr 23/2025
			2	Apr 23/2025
			3	Apr 23/2025
			4	Apr 23/2025
		1.2	1	Apr 23/2025
31-32-15 (cont)				
			2	Apr 23/2025
			3	Apr 23/2025
			4	Apr 23/2025
31-33-01				
		1		May 15/2024
31-35-01				
		1		May 15/2024
31-35-02				
		1		May 15/2024
31-35-04				
		1		May 15/2024
31-35-05				
		1		May 15/2024
31-35-07				
		1	1	May 15/2024
			2	May 15/2024
31-35-08				
		1		May 15/2024
31-35-09				
		1		May 15/2024
31-51-11				
		1		May 15/2024
31-52-11				
		1	1	May 15/2024
			2	May 15/2024
31-52-21				
		1		May 15/2024
31-52-25				
		1		May 15/2024
31-52-31				
		1		May 15/2024
31-52-32				
		1		May 15/2024
31-52-35				
		1		May 15/2024
31-52-41				
		1		May 15/2024
31-52-45				
		1		May 15/2024
31-52-51				
R		1		Nov 14/2025
31-52-52				
		1		May 15/2024
31-52-55				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

CH-SE-SU	Schem	Page	Sheet	Date
31-52-56				
		1		May 15/2024
31-52-61				
		1		May 15/2024
31-52-65				
		1		May 15/2024
31-52-71				
		1		May 15/2024
31-52-75				
		1		May 15/2024
31-53-11				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
31-65-11				
		1	1	May 15/2024
			2	May 15/2024
31-65-12				
		1		May 15/2024
31-65-13				
		1		May 15/2024
31-65-14				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
31-65-15				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
			5	May 15/2024
31-65-16				
		1		May 15/2024
31-65-21				
		1	1	May 15/2024
			2	May 15/2024
31-65-22				
		1		May 15/2024
31-65-23				
		1		May 15/2024
31-65-24				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
31-65-25				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024
			5	May 15/2024
31-65-26				
		1		May 15/2024
31-65-41				
		1		May 15/2024
31-65-42				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
FLIGHT DATA RECORDER SYSTEM						
DIGITAL FLIGHT DATA RECORDER SYSTEM - INTERFACE	31-31-11		1		May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM - DIGITAL INTERFACE	31-31-13		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM - ANALOG INTERFACE	31-31-14		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM DISCRETE INTERFACE	31-31-15		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM AIRPLANE CODING	31-31-16		1		May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM MANDATORY OPTIONS	31-31-17		1		May 15/2024	ALL
DATA LOADING AND RECORDING SYSTEM						
DATA LOADER INTERFACE	31-32-15		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
			1.1	1	Apr 23/2025	1A313
				2	Apr 23/2025	1A313
				3	Apr 23/2025	1A313
				4	Apr 23/2025	1A313
			1.2	1	Apr 23/2025	1A314
				2	Apr 23/2025	1A314

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
DATA LOADER INTERFACE (cont.)	31-32-15			3	Apr 23/2025	1A314
				4	Apr 23/2025	1A314
FLIGHT COMPARTMENT PRINTING						
PRINTER INTERFACE	31-33-01		1		May 15/2024	ALL
AIRCRAFT INTEGRATED DATA SYSTEM						
DIGITAL FLIGHT DATA RECORDER SYSTEM - DATA LOADER INTERFACE	31-35-01		1		May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM - ACMS INTERFACE	31-35-02		1		May 15/2024	ALL
DIGITAL FLIGHT DATA RECORDER SYSTEM - ACMS INTERFACE	31-35-04		1		May 15/2024	ALL
ACMS PARAMETERS - ANALOG INTERFACE	31-35-05		1		May 15/2024	ALL
ACMS DIGITAL INTERFACE GROUP 2	31-35-07		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ACMS DISCRETE INTERFACE GROUP 2	31-35-08		1		May 15/2024	ALL
ACMS NFS INTERFACE	31-35-09		1		May 15/2024	ALL
AURAL WARNING SYSTEM						
AURAL WARNING SYSTEM	31-51-11		1		May 15/2024	ALL
MASTER CAUTION						
MASTER CAUTION SYSTEM-POWER & CONTROL	31-52-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
MASTER CAUTION SYSTEM - HYDRAULIC CONTROL	31-52-21		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - FLIGHT CONTROLS	31-52-25		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - ELECTRICAL CONTROL, GENERATOR	31-52-31		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
MASTER CAUTION SYSTEM - ELECTRICAL CONTROL, POWER BUS	31-52-32		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - APU CONTROL	31-52-35		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - FUEL CONTROL	31-52-41		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - OVERHEAT DETECTION	31-52-45		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - AIR CONDITIONG CONTROL, PACK & TEMP	31-52-51		1		Nov 14/2025	ALL
MASTER CAUTION SYSTEM - AIR CONDITIONG CONTROL, BLEED AIR	31-52-52		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - ANTI-ICE CONTROL, PITOT HEAT	31-52-55		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - ANTI-ICE CONTROL, WINDOW/COWL HEAT	31-52-56		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - ENGINE CONTROL	31-52-61		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - DOOR WARNING	31-52-65		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - IRS CONTROL	31-52-71		1		May 15/2024	ALL
MASTER CAUTION SYSTEM - OVERHEAD CONTROL	31-52-75		1		May 15/2024	ALL
AURAL WARNING - TAKEOFF WARNING						
AURAL WARNING - TAKEOFF WARNING	31-53-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
MULTIFUNCTION CONTROL DISPLAY SYSTEM						
MDS - POWER DISTRIBUTION AND BRIGHTNESS CONTROL CAPTAIN	31-65-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
MDS - DPC 1 FIBER OPTIC INTERFACE AND DISPLAY UNIT STATUS	31-65-12		1		May 15/2024	ALL
MDS - EFIS CONTROL PANEL INTERFACES - CAPTAIN	31-65-13		1		May 15/2024	ALL
MDS - DPC 1 ENGINE, SYSTEM PAGE AND SYNOPTIC INTERFACES	31-65-14		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
MDS - DPC 1 AVIONICS INTERFACES	31-65-15		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
				5	May 15/2024	ALL
MDS - AUX O/B FORMAT & MFP INTERFACES CAPTAIN	31-65-16		1		May 15/2024	ALL
MDS - POWER DISTRIBUTION AND BRIGHTNESS CONTROL FIRST OFFICER	31-65-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
MDS - DPC 2 FIBER OPTIC INTERFACE AND DISPLAY UNIT STATUS	31-65-22		1		May 15/2024	ALL
MDS - EFIS CONTROL PANEL INTERFACES - FIRST OFFICER	31-65-23		1		May 15/2024	ALL
MDS - DPC 2 ENGINE, SYSTEM PAGE AND SYNOPTIC INTERFACES	31-65-24		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
MDS - DPC 2 AVIONICS INTERFACES	31-65-25		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL
				5	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
MDS - AUX O/B FORMAT & MFP INTERFACES FIRST OFFICER	31-65-26		1		May 15/2024	ALL
MDS - HDG REF SW, CHIME, BRAKE TEMPERATURE AND PROGRAM PINS	31-65-41		1		May 15/2024	ALL
MDS - VIDEO MONITORING INTERFACES	31-65-42		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

CH-SE-SU	Title
31-35-07	ACMS DIGITAL INTERFACE GROUP 2
31-35-08	ACMS DISCRETE INTERFACE GROUP 2
31-35-09	ACMS NFS INTERFACE
31-35-05	ACMS PARAMETERS - ANALOG INTERFACE
31-53-11	AURAL WARNING - TAKEOFF WARNING
31-51-11	AURAL WARNING SYSTEM
31-32-15	DATA LOADER INTERFACE
31-35-02	DIGITAL FLIGHT DATA RECORDER SYSTEM - ACMS INTERFACE
31-35-04	DIGITAL FLIGHT DATA RECORDER SYSTEM - ACMS INTERFACE
31-31-14	DIGITAL FLIGHT DATA RECORDER SYSTEM - ANALOG INTERFACE
31-35-01	DIGITAL FLIGHT DATA RECORDER SYSTEM - DATA LOADER INTERFACE
31-31-13	DIGITAL FLIGHT DATA RECORDER SYSTEM - DIGITAL INTERFACE
31-31-11	DIGITAL FLIGHT DATA RECORDER SYSTEM - INTERFACE
31-31-16	DIGITAL FLIGHT DATA RECORDER SYSTEM AIRPLANE CODING
31-31-15	DIGITAL FLIGHT DATA RECORDER SYSTEM DISCRETE INTERFACE
31-31-17	DIGITAL FLIGHT DATA RECORDER SYSTEM MANDATORY OPTIONS
31-52-52	MASTER CAUTION SYSTEM - AIR CONDITIONG CONTROL, BLEED AIR
31-52-51	MASTER CAUTION SYSTEM - AIR CONDITIONG CONTROL, PACK & TEMP
31-52-55	MASTER CAUTION SYSTEM - ANTI-ICE CONTROL, PITOT HEAT
31-52-56	MASTER CAUTION SYSTEM - ANTI-ICE CONTROL, WINDOW/COWL HEAT
31-52-35	MASTER CAUTION SYSTEM - APU CONTROL
31-52-65	MASTER CAUTION SYSTEM - DOOR WARNING
31-52-31	MASTER CAUTION SYSTEM - ELECTRICAL CONTROL, GENERATOR
31-52-32	MASTER CAUTION SYSTEM - ELECTRICAL CONTROL, POWER BUS
31-52-61	MASTER CAUTION SYSTEM - ENGINE CONTROL
31-52-25	MASTER CAUTION SYSTEM - FLIGHT CONTROLS
31-52-41	MASTER CAUTION SYSTEM - FUEL CONTROL
31-52-21	MASTER CAUTION SYSTEM - HYDRAULIC CONTROL
31-52-71	MASTER CAUTION SYSTEM - IRS CONTROL
31-52-75	MASTER CAUTION SYSTEM - OVERHEAD CONTROL
31-52-45	MASTER CAUTION SYSTEM - OVERHEAT DETECTION
31-52-11	MASTER CAUTION SYSTEM- POWER & CONTROL
31-65-16	MDS - AUX O/B FORMAT & MFP INTERFACES CAPTAIN
31-65-26	MDS - AUX O/B FORMAT & MFP INTERFACES FIRST OFFICER
31-65-15	MDS - DPC 1 AVIONICS INTERFACES
31-65-14	MDS - DPC 1 ENGINE, SYSTEM PAGE AND SYNOPTIC INTERFACES
31-65-12	MDS - DPC 1 FIBER OPTIC INTERFACE AND DISPLAY UNIT STATUS
31-65-25	MDS - DPC 2 AVIONICS INTERFACES


31-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 31
INDICATING / RECORDING SYSTEMS

CH-SE-SU	Title
31-65-24	MDS - DPC 2 ENGINE, SYSTEM PAGE AND SYNOPTIC INTERFACES
31-65-22	MDS - DPC 2 FIBER OPTIC INTERFACE AND DISPLAY UNIT STATUS
31-65-13	MDS - EFIS CONTROL PANEL INTERFACES - CAPTAIN
31-65-23	MDS - EFIS CONTROL PANEL INTERFACES - FIRST OFFICER
31-65-41	MDS - HDG REF SW, CHIME, BRAKE TEMPERATURE AND PROGRAM PINS
31-65-11	MDS - POWER DISTRIBUTION AND BRIGHTNESS CONTROL CAPTAIN
31-65-21	MDS - POWER DISTRIBUTION AND BRIGHTNESS CONTROL FIRST OFFICER
31-65-42	MDS - VIDEO MONITORING INTERFACES
31-33-01	PRINTER INTERFACE

ECCN 9E991 BOEING PROPRIETARY - See title page for details

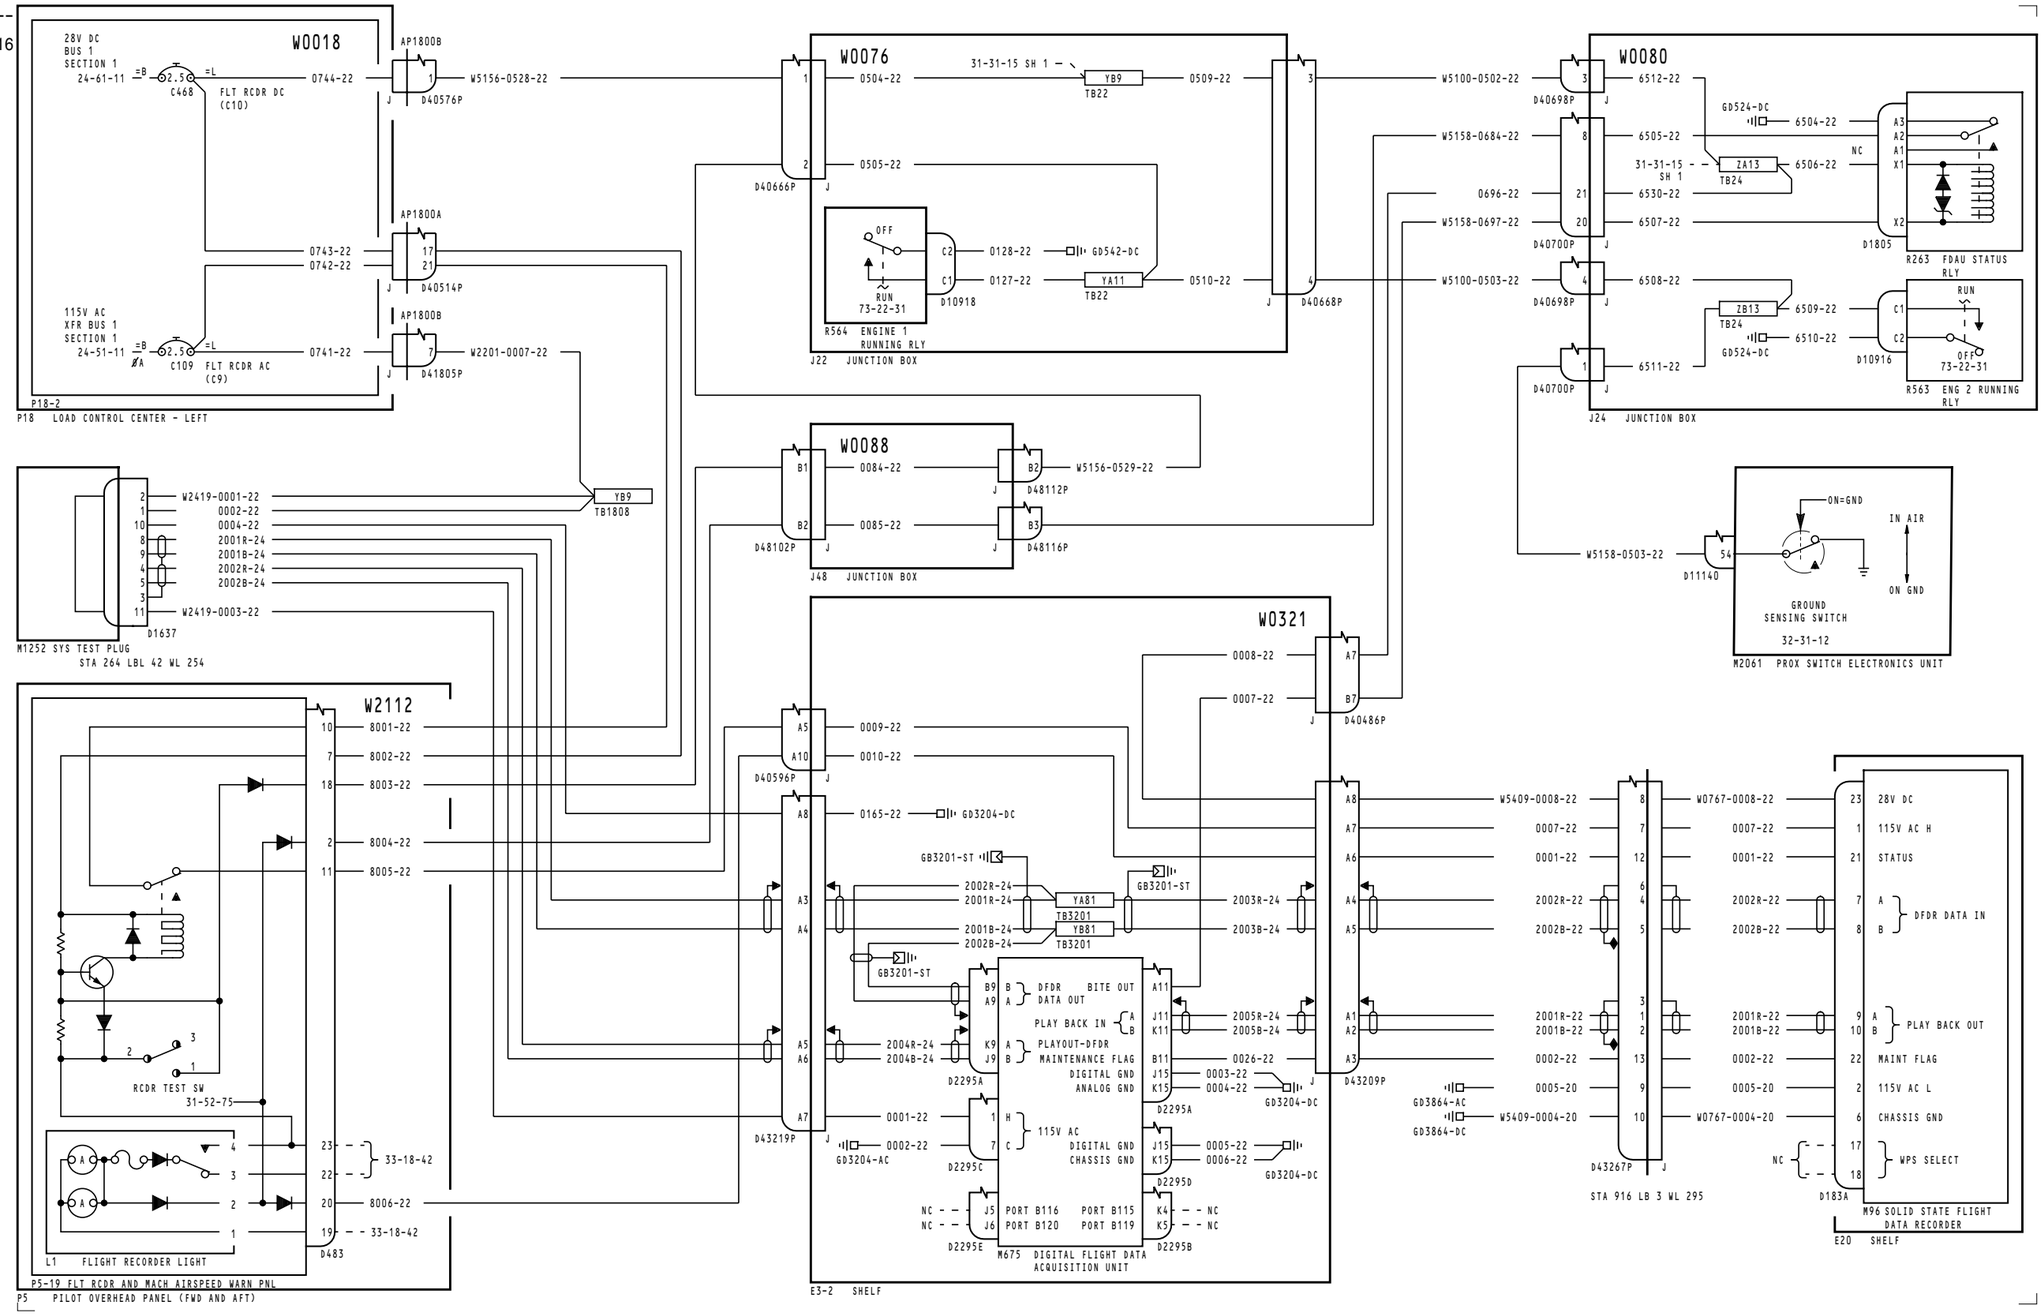

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-31-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
13

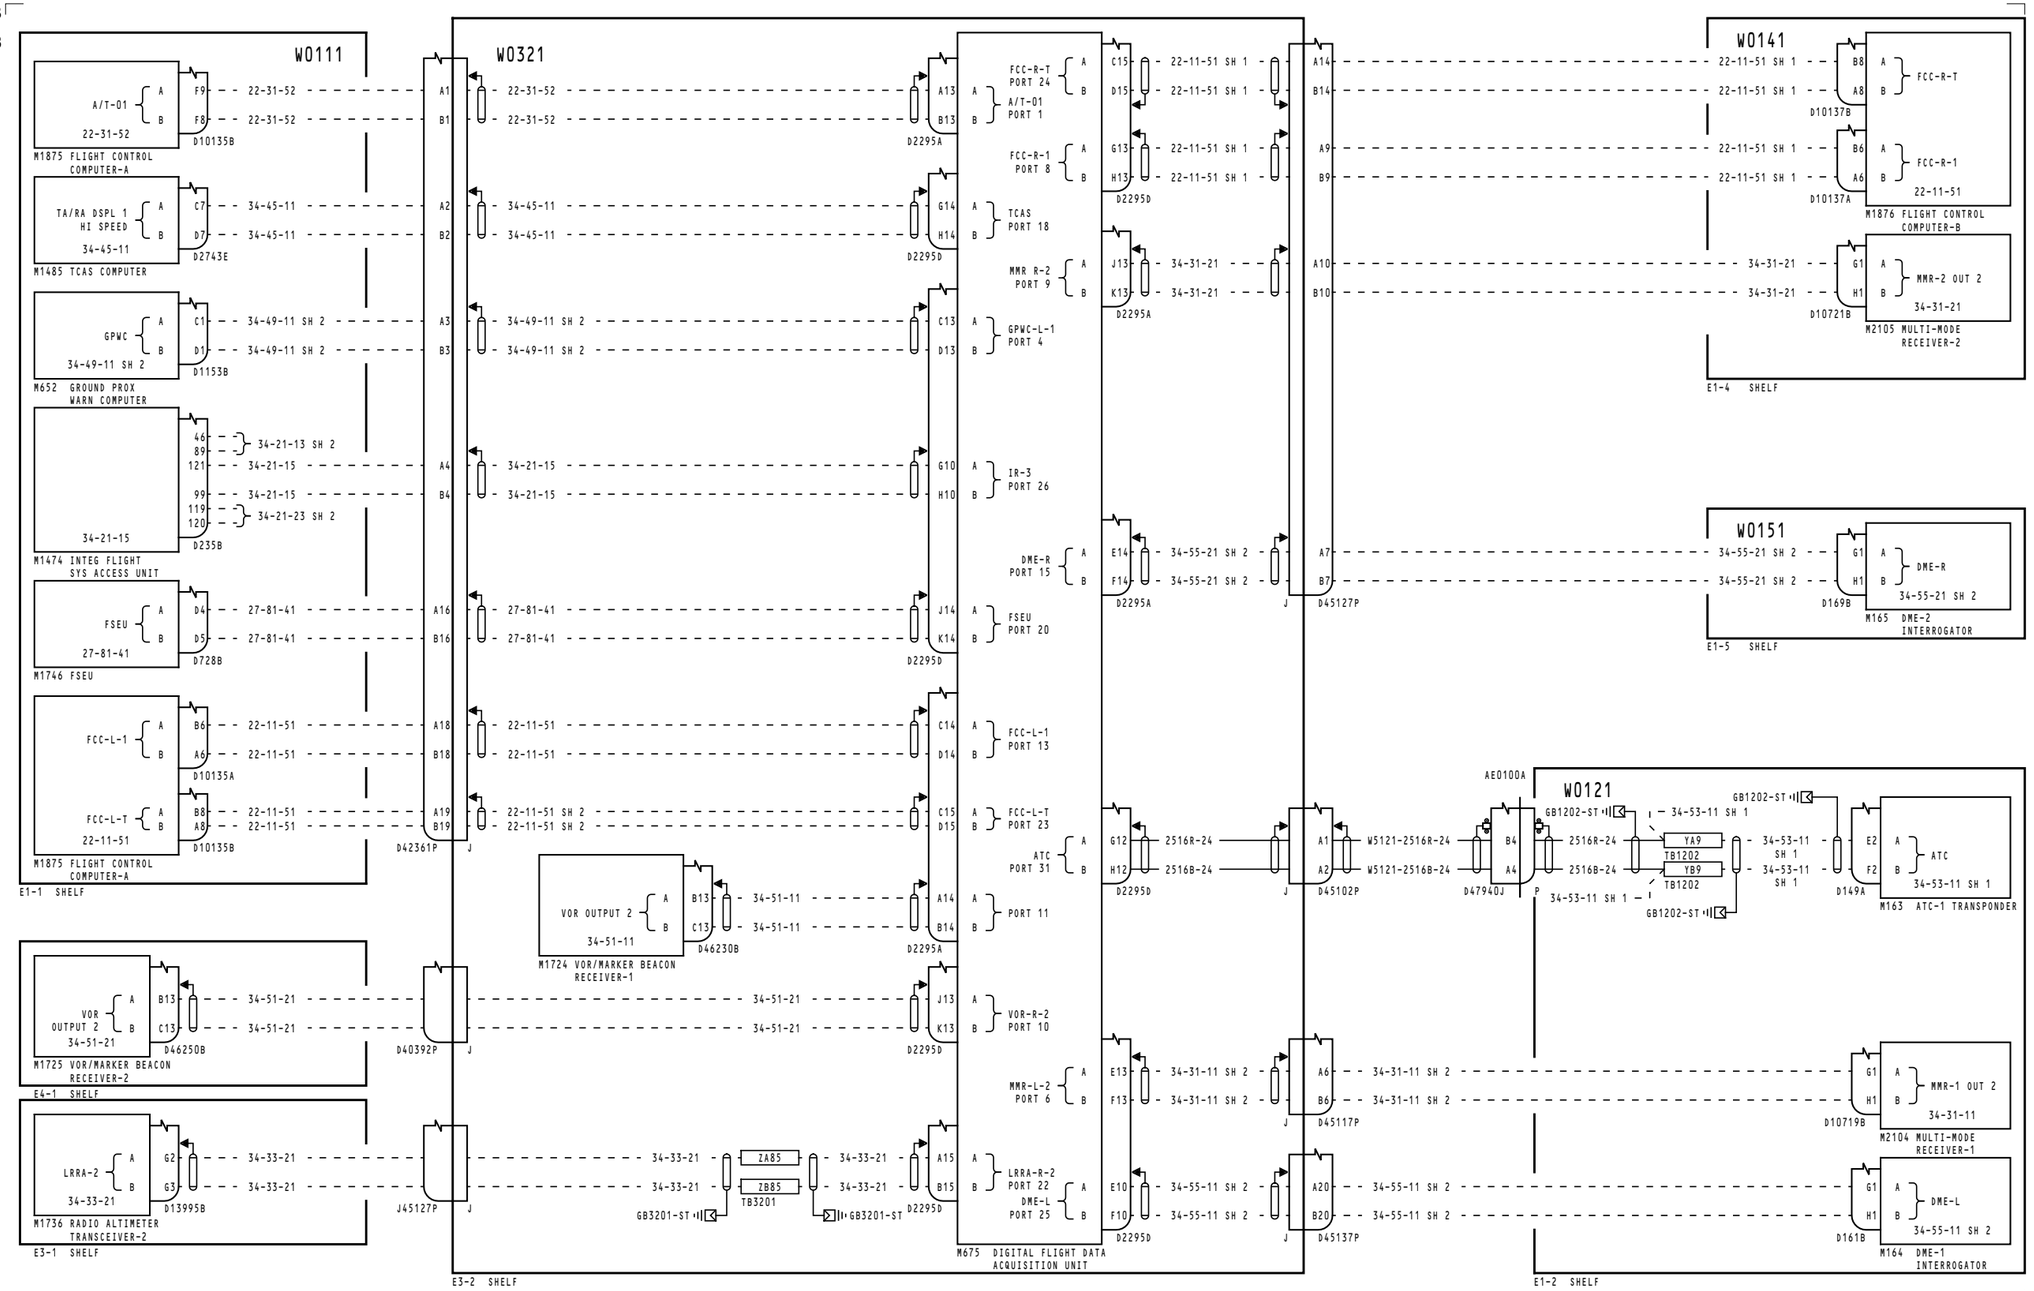


ALL	DIGITAL FLIGHT DATA RECORDER SYSTEM - DIGITAL INTERFACE D280AM1215	31-31-13 Page 1 Sheet 1 May 15/2024

31-31-13
Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

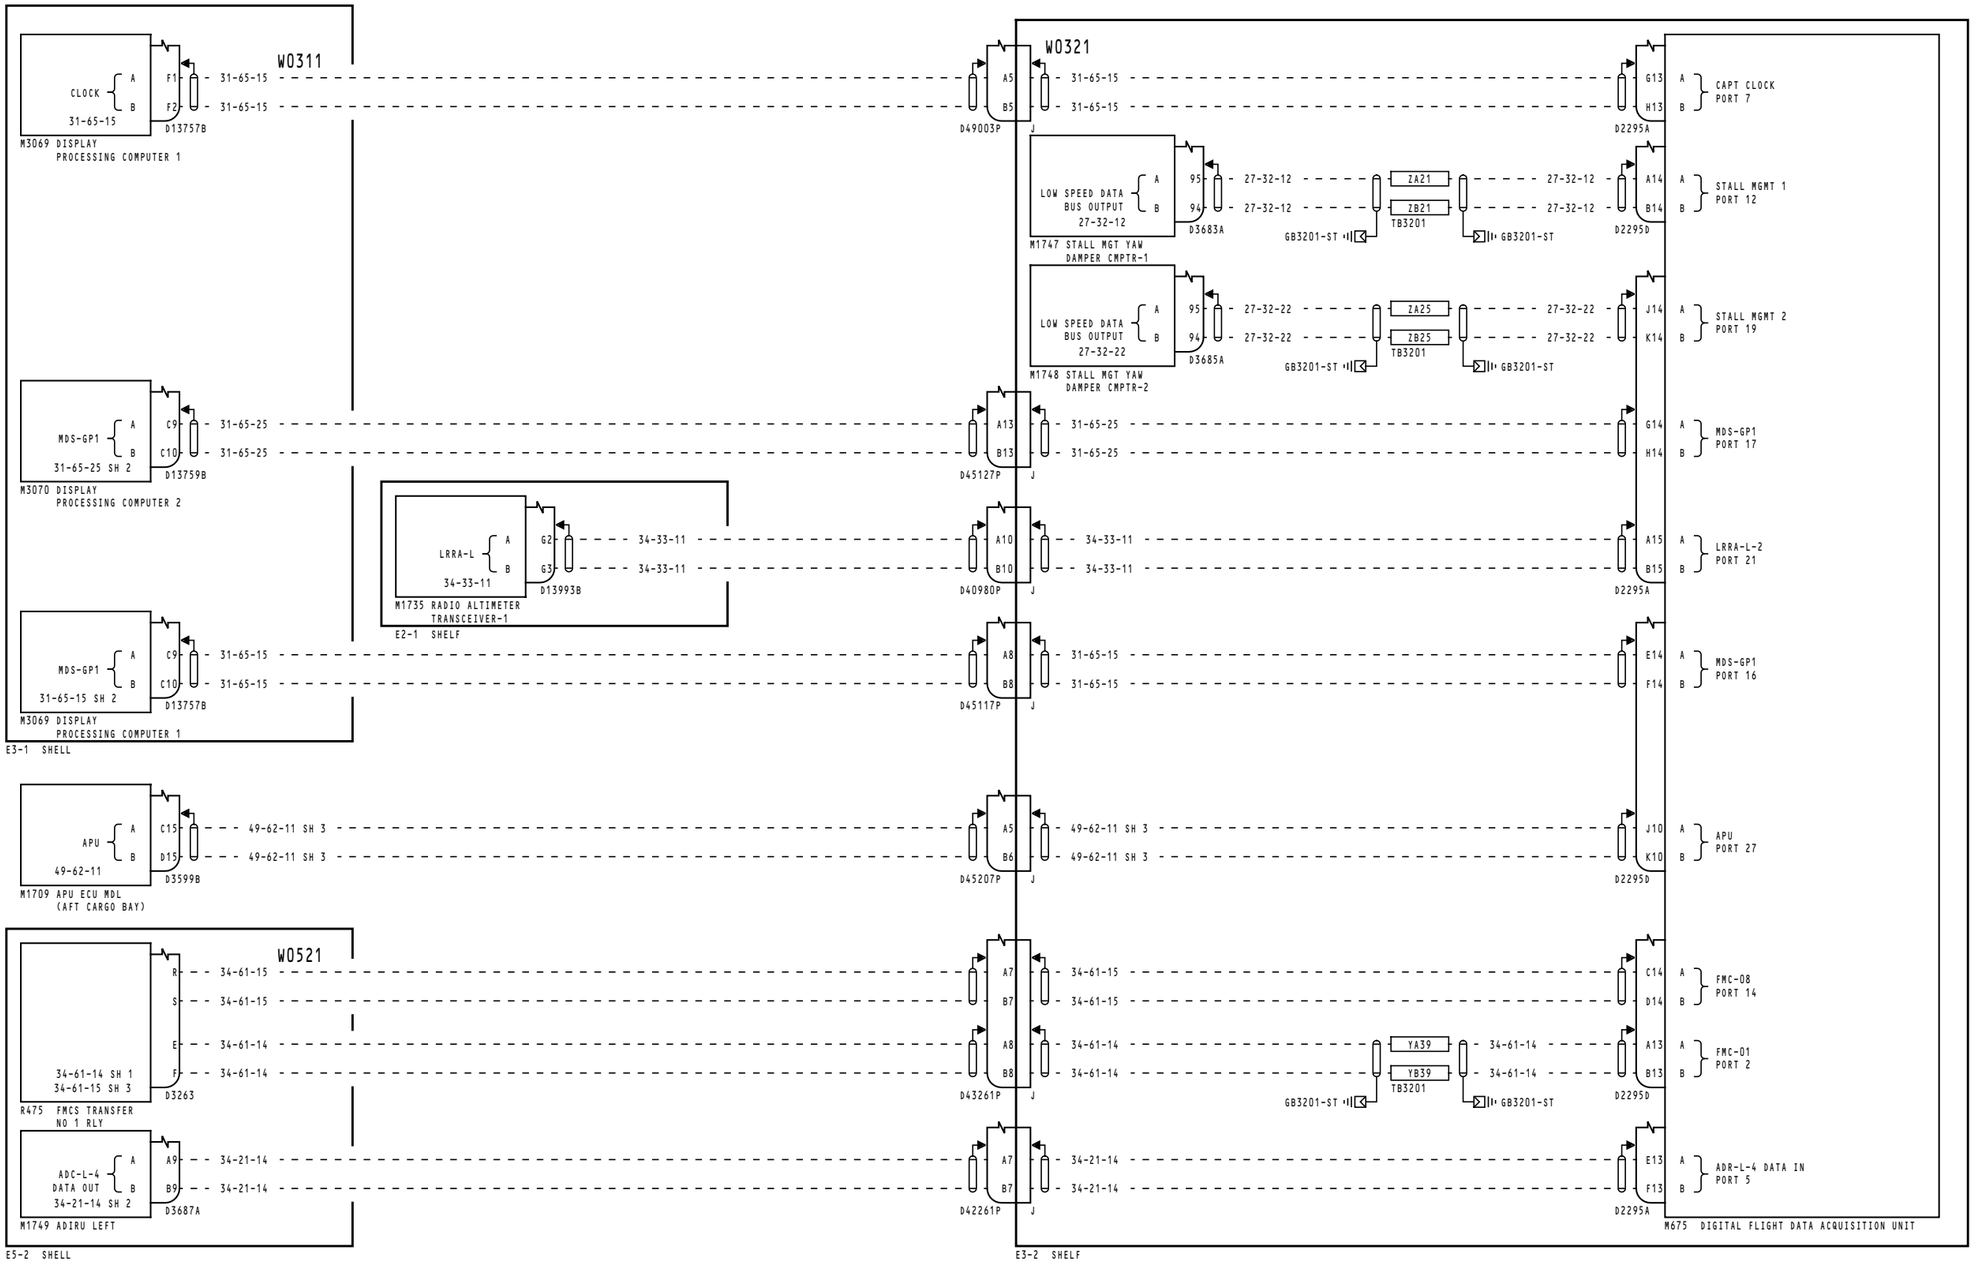


31-31-13

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

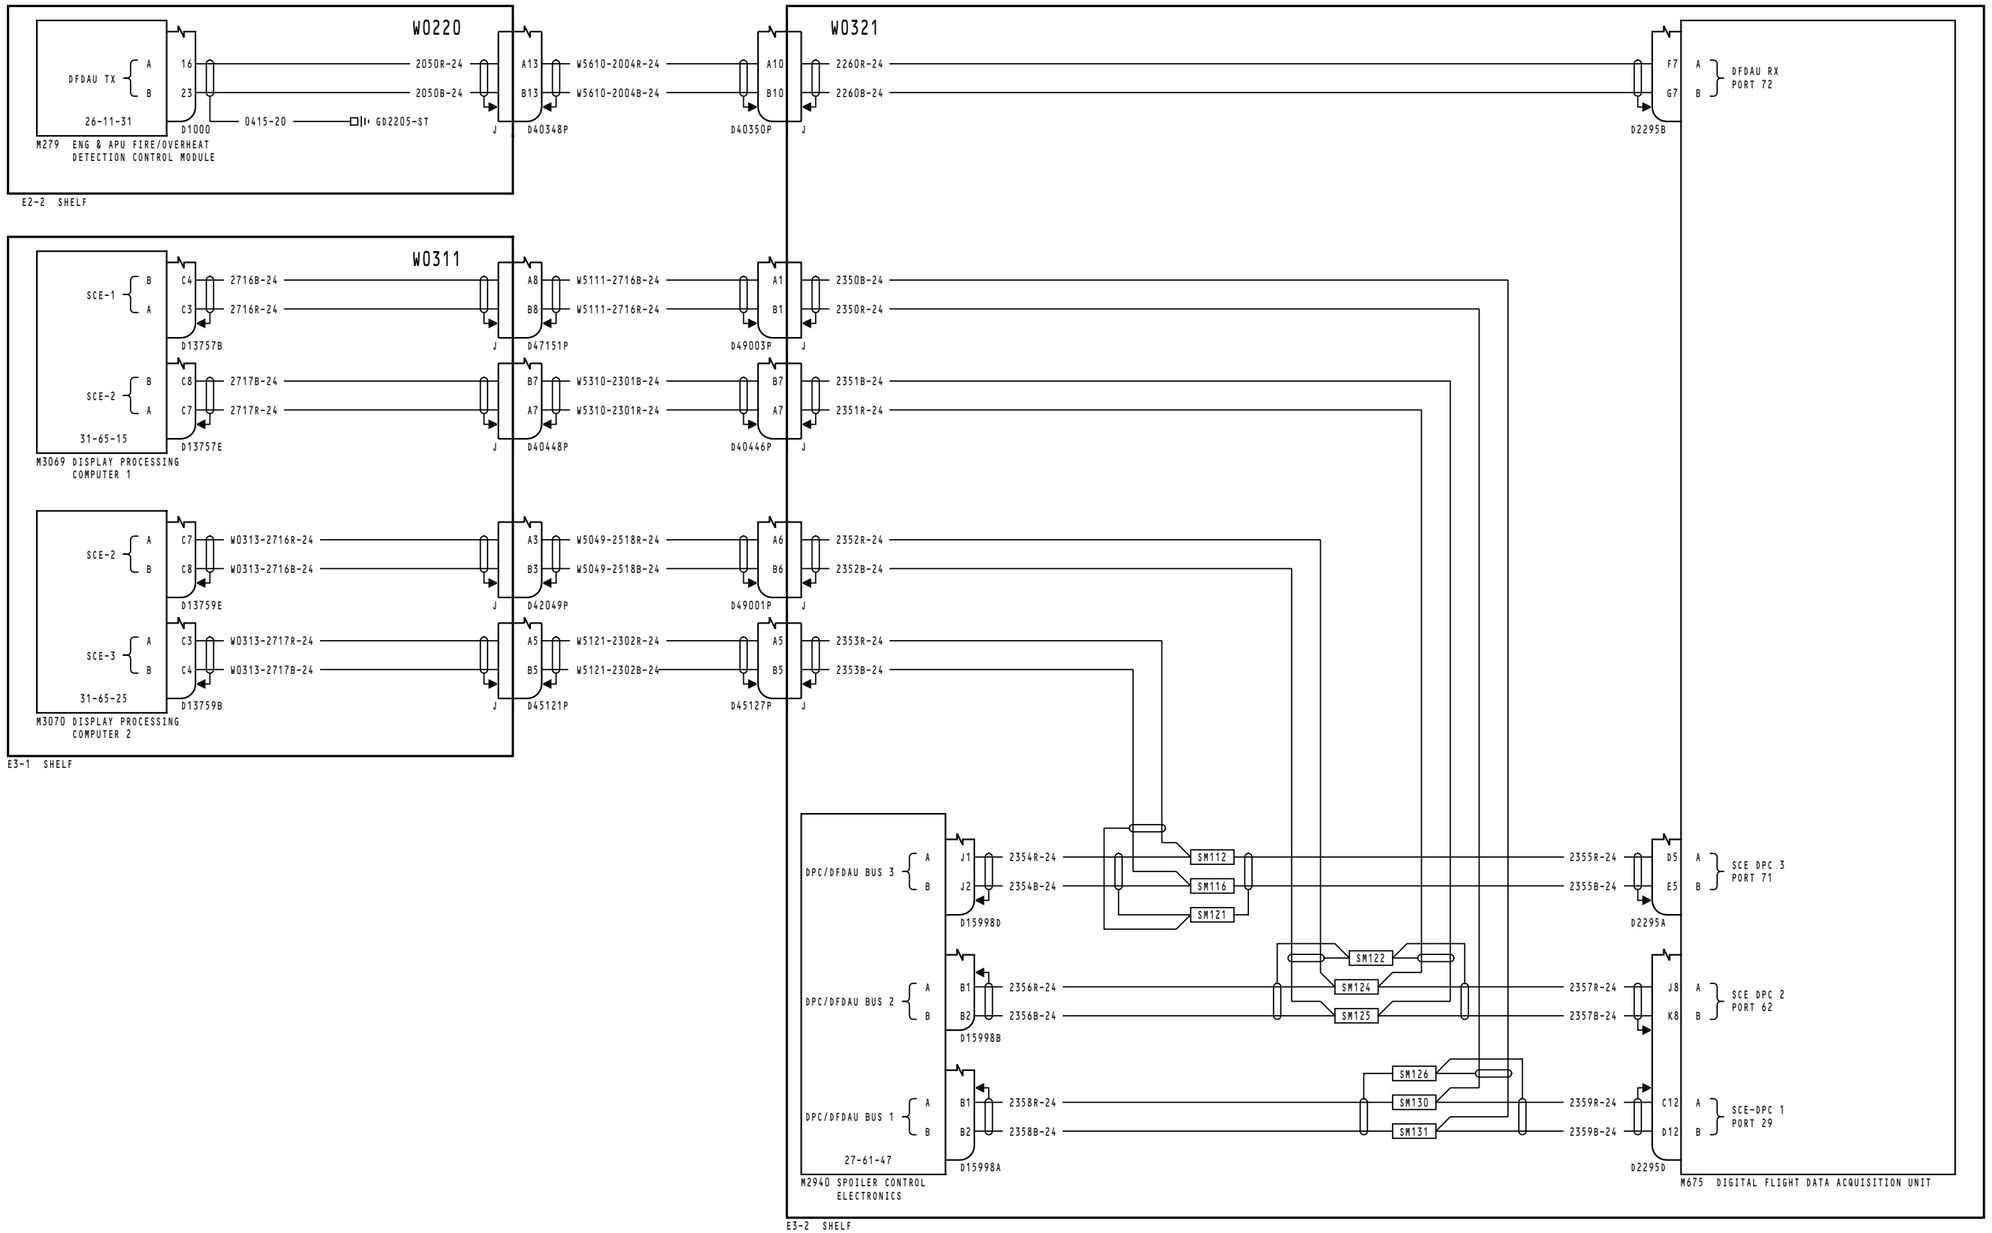


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-31-13

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

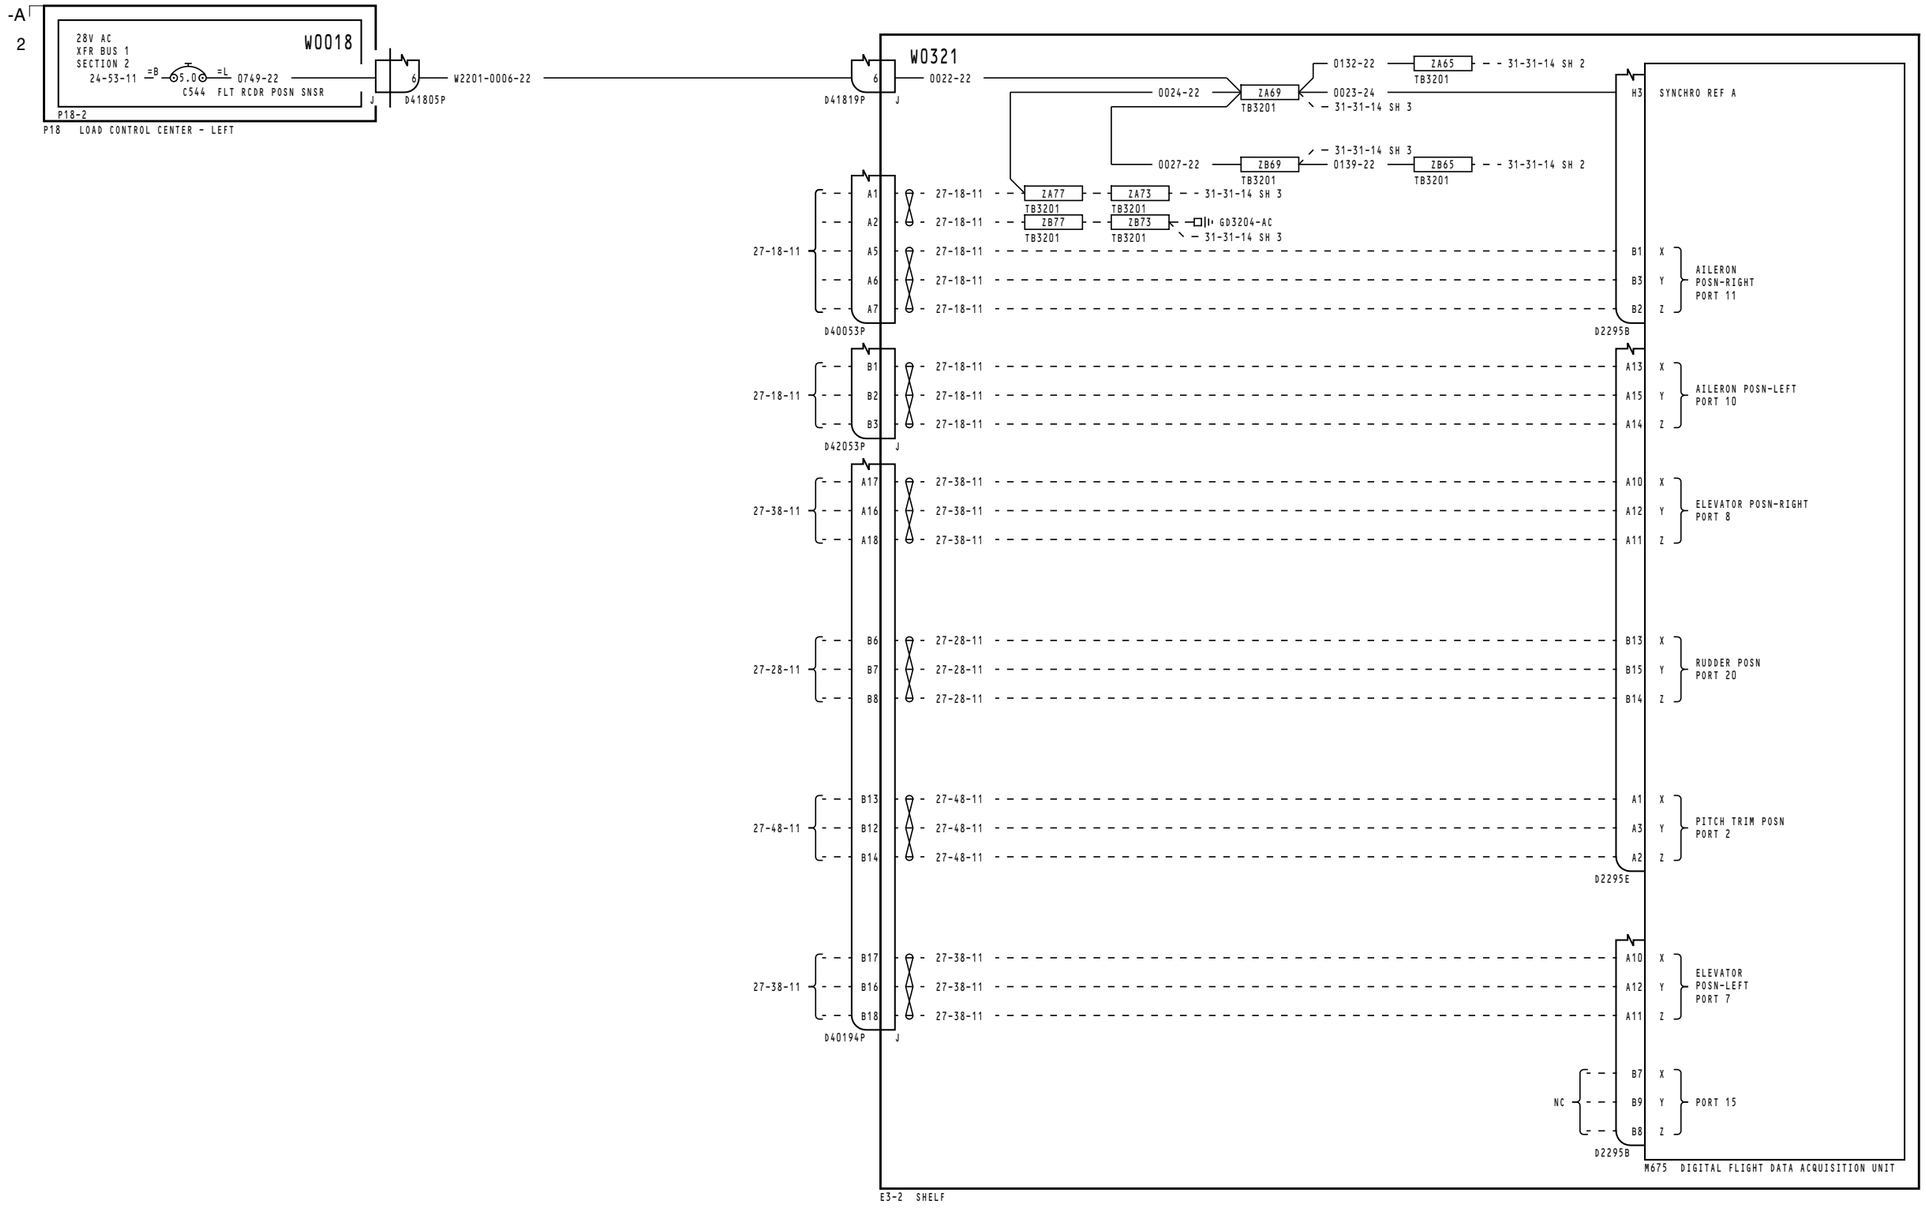

ALL

DIGITAL FLIGHT DATA RECORDER SYSTEM - ANALOG INTERFACE

D280AM1215

31-31-14

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-31-14

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL


10

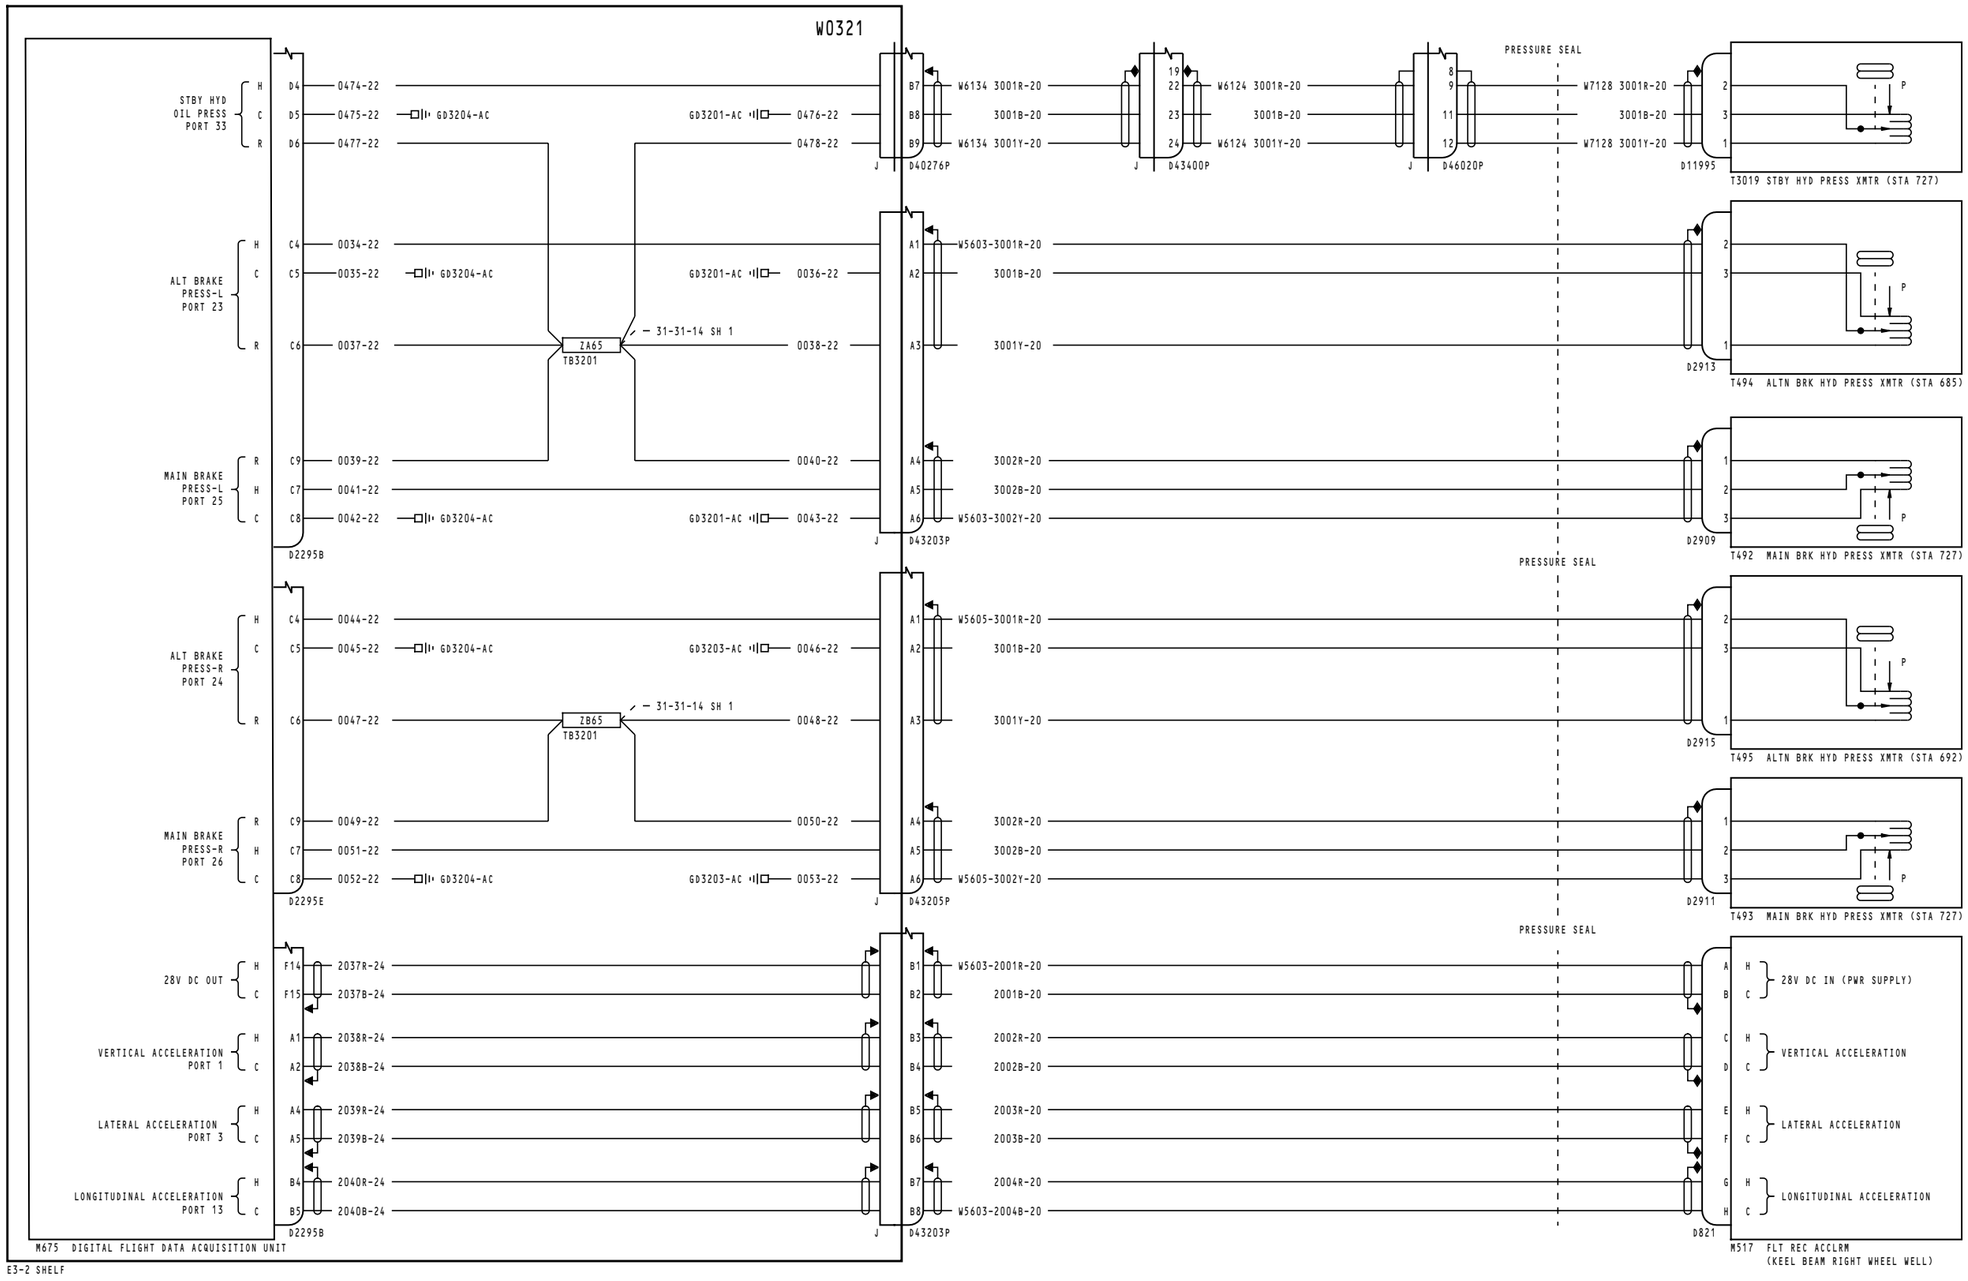

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-31-14


Page 1
Sheet 2
May 15/2024

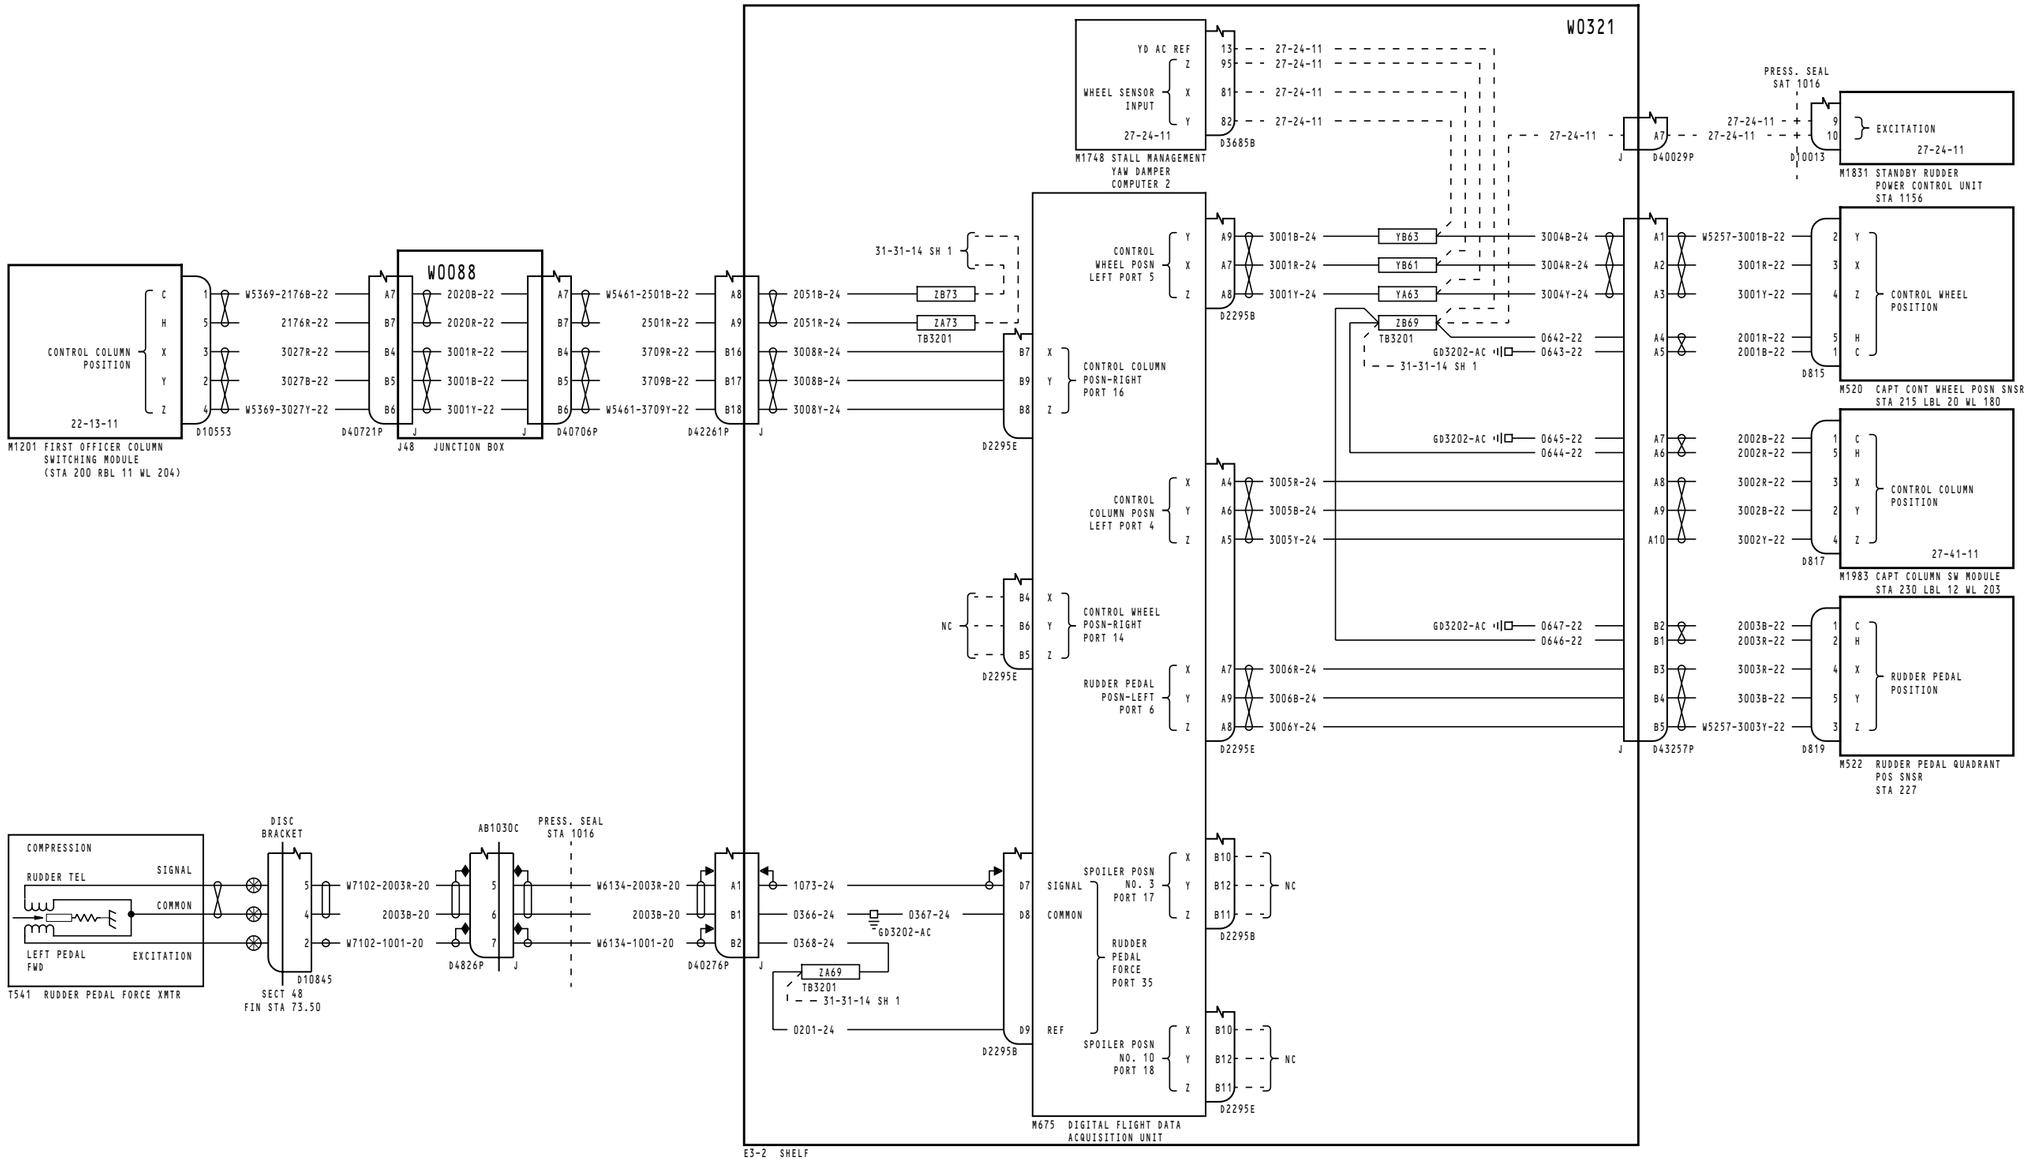

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-31-14

Page 1
Sheet 3
May 15/2024

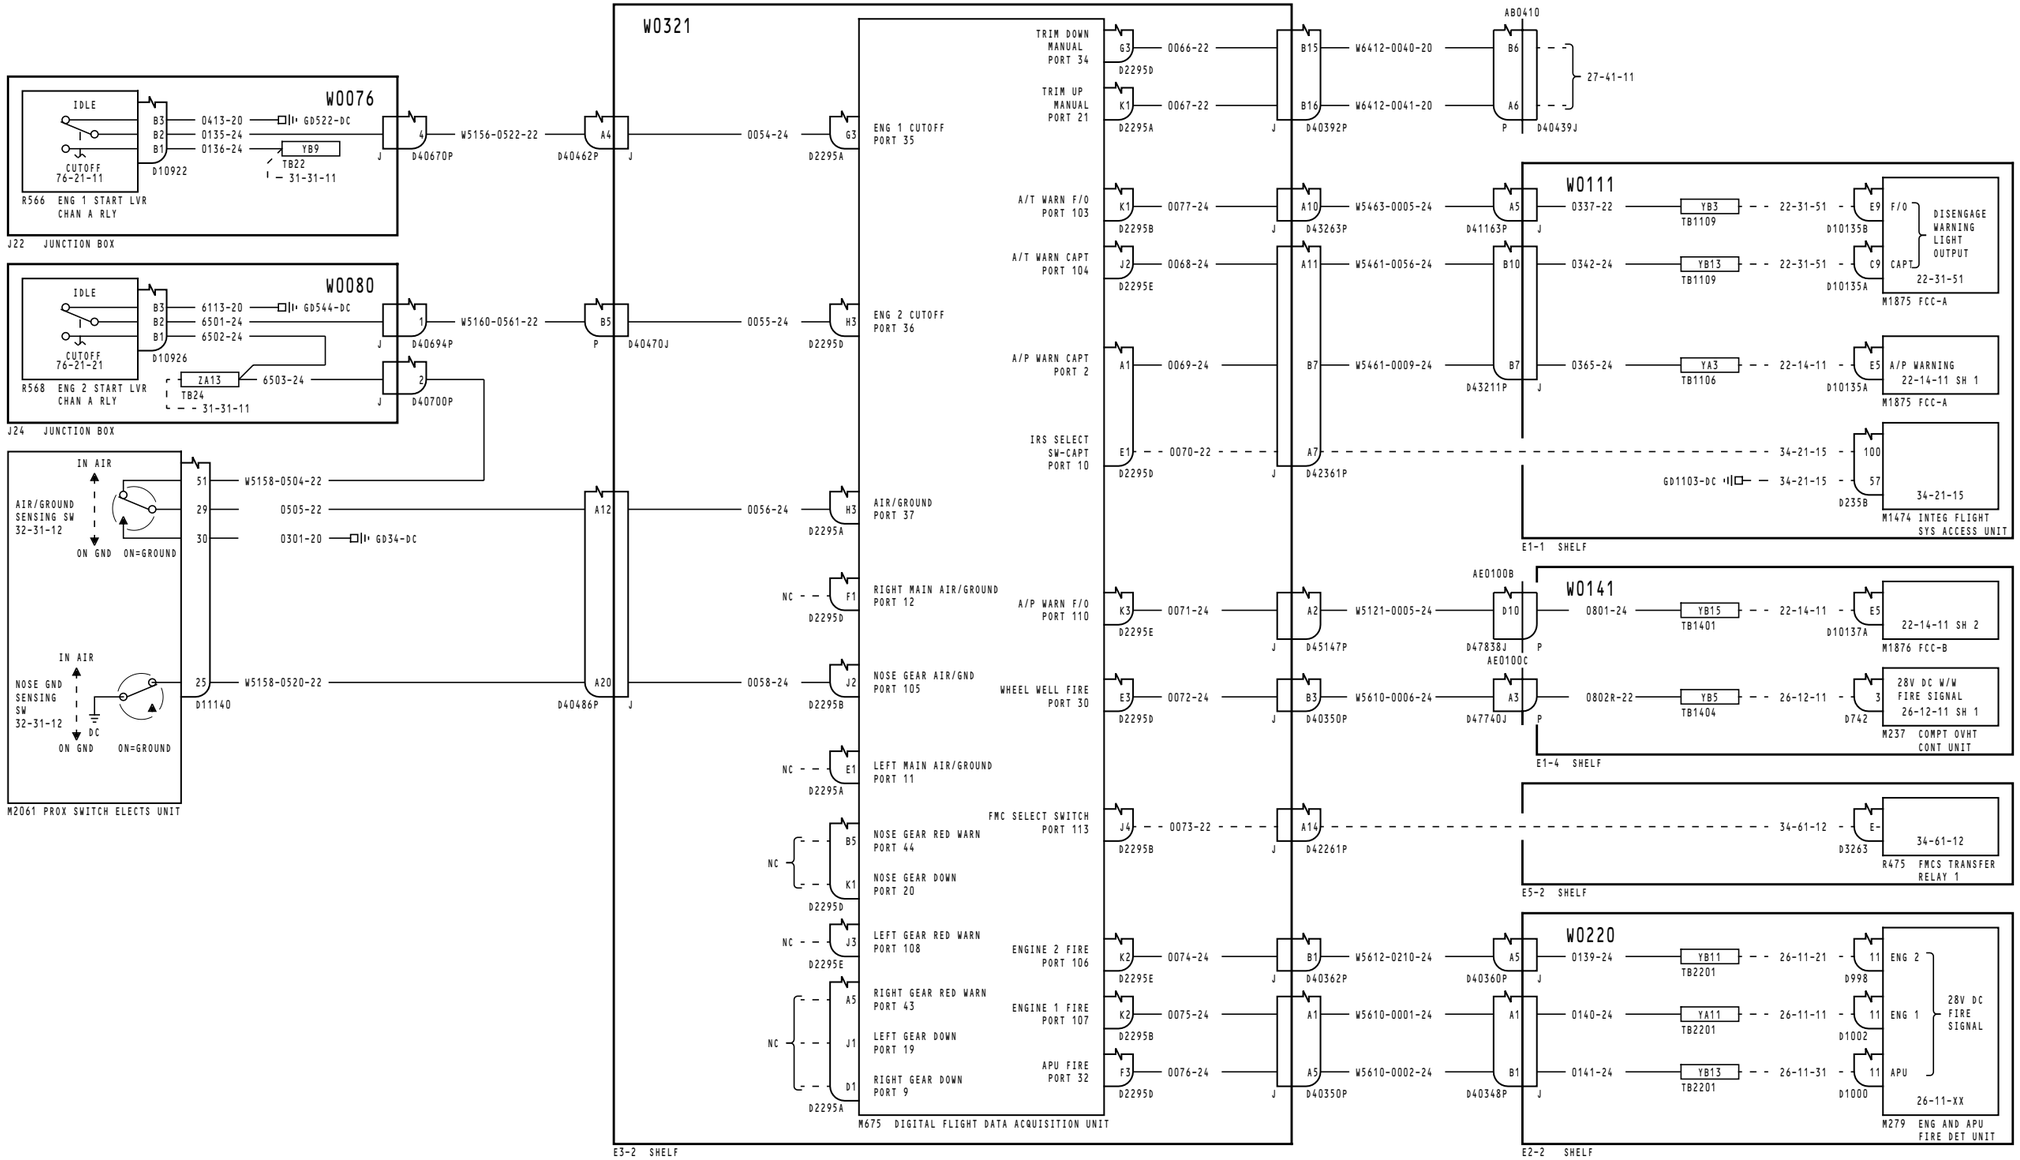

NOTES: EMC TYPE 1* WIRES MAY BE ROUTED NO MORE THAN 50 FEET WITH TYPE 2 WIRES.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

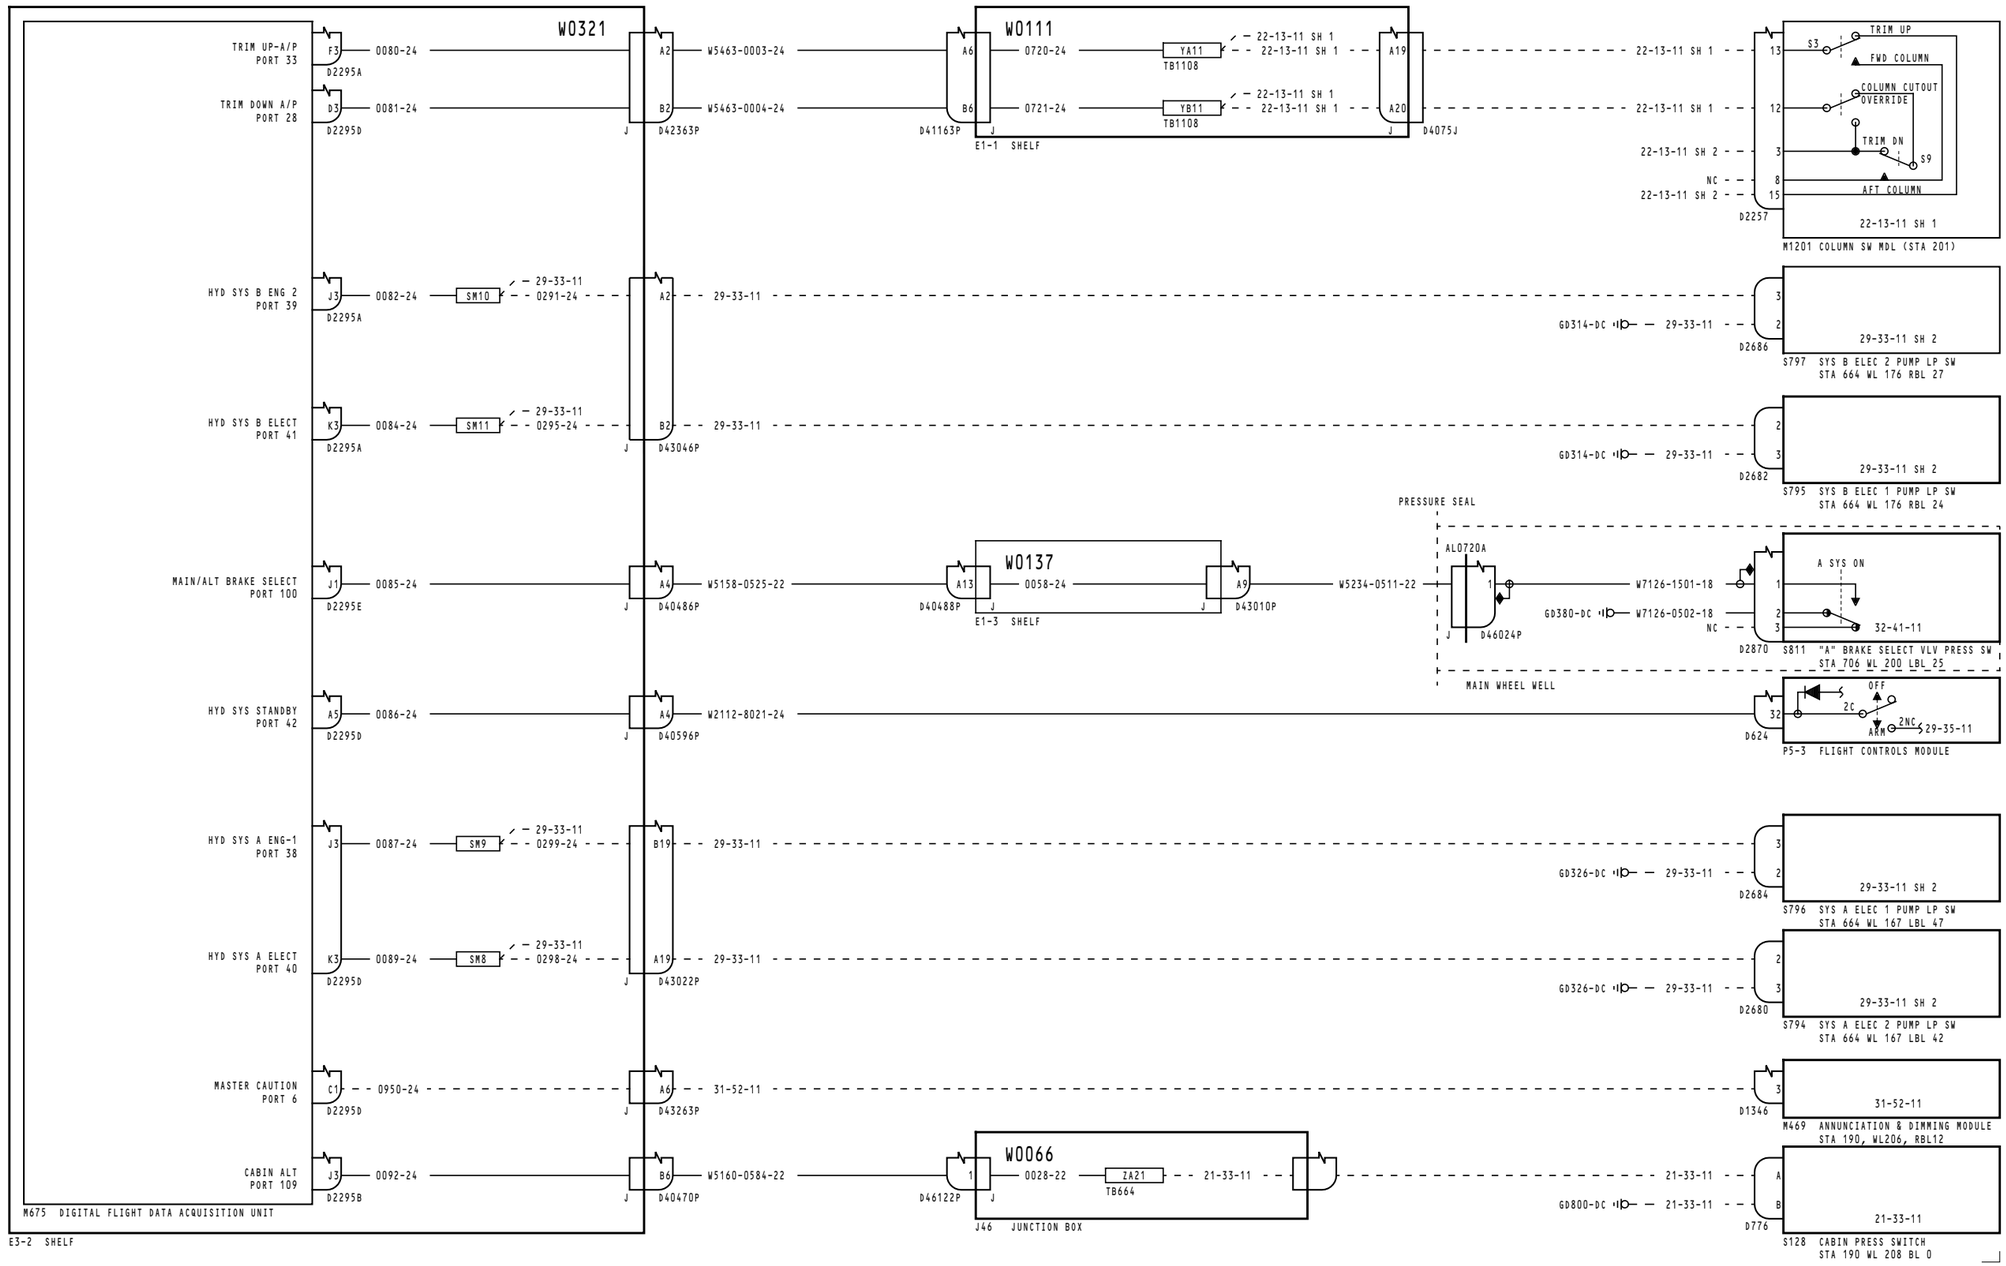

ALL

DIGITAL FLIGHT DATA RECORDER SYSTEM DISCRETE INTERFACE

D280AM1215

31-31-15


Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-31-15

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

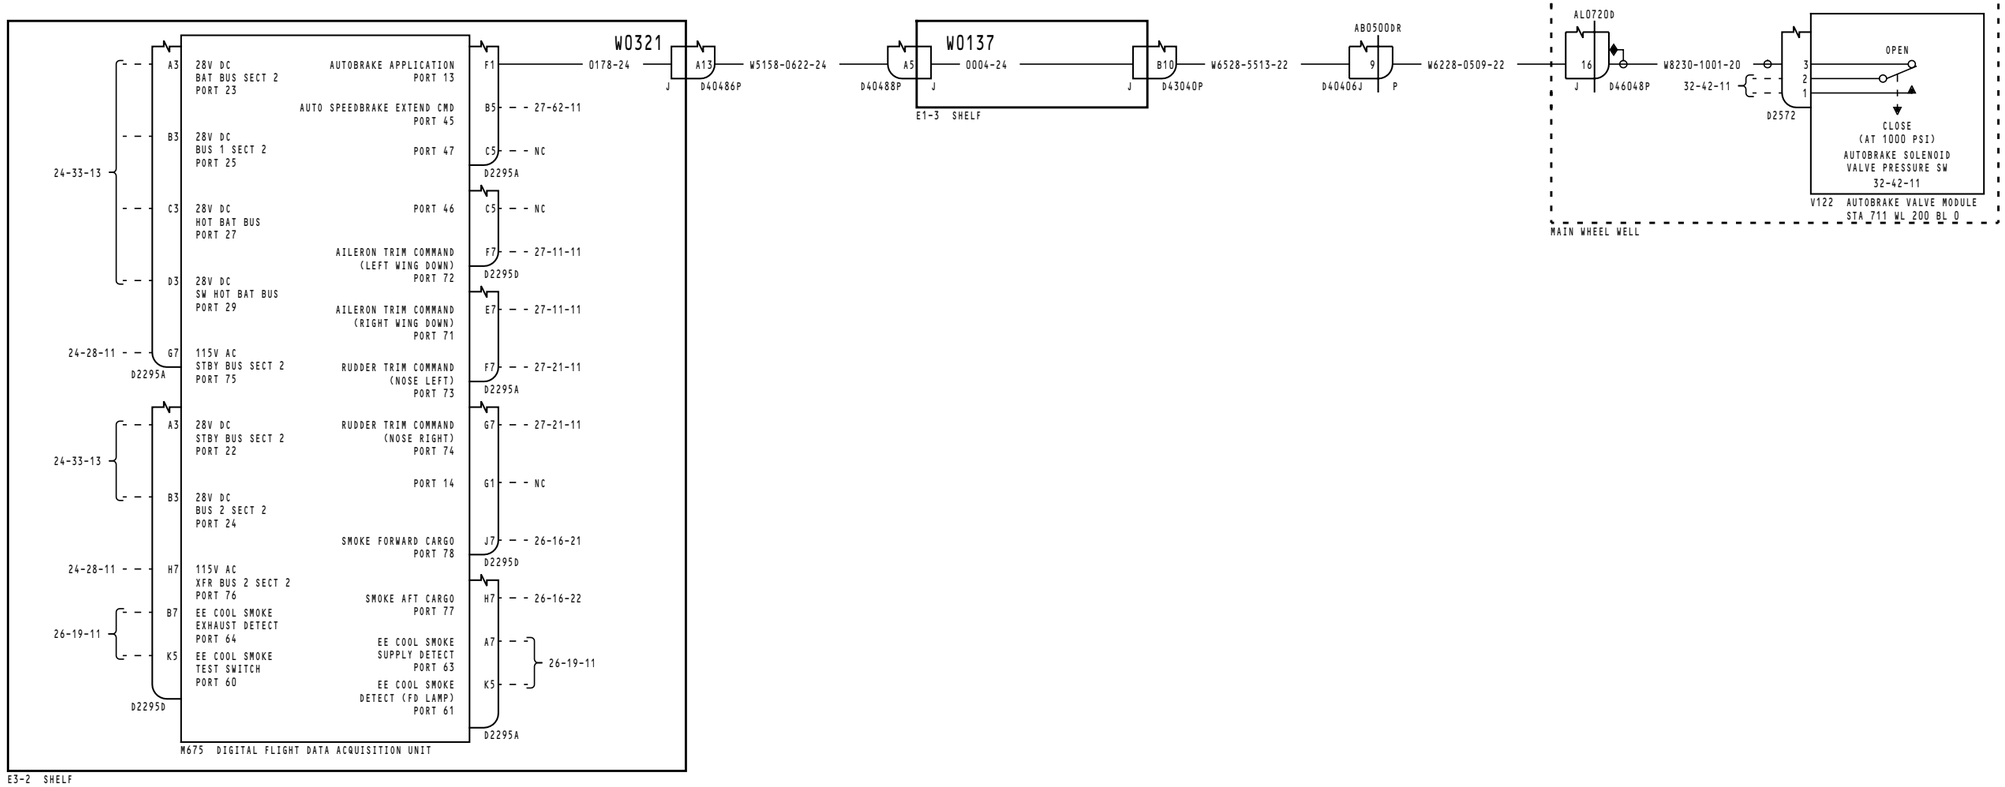


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-31-15

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

8

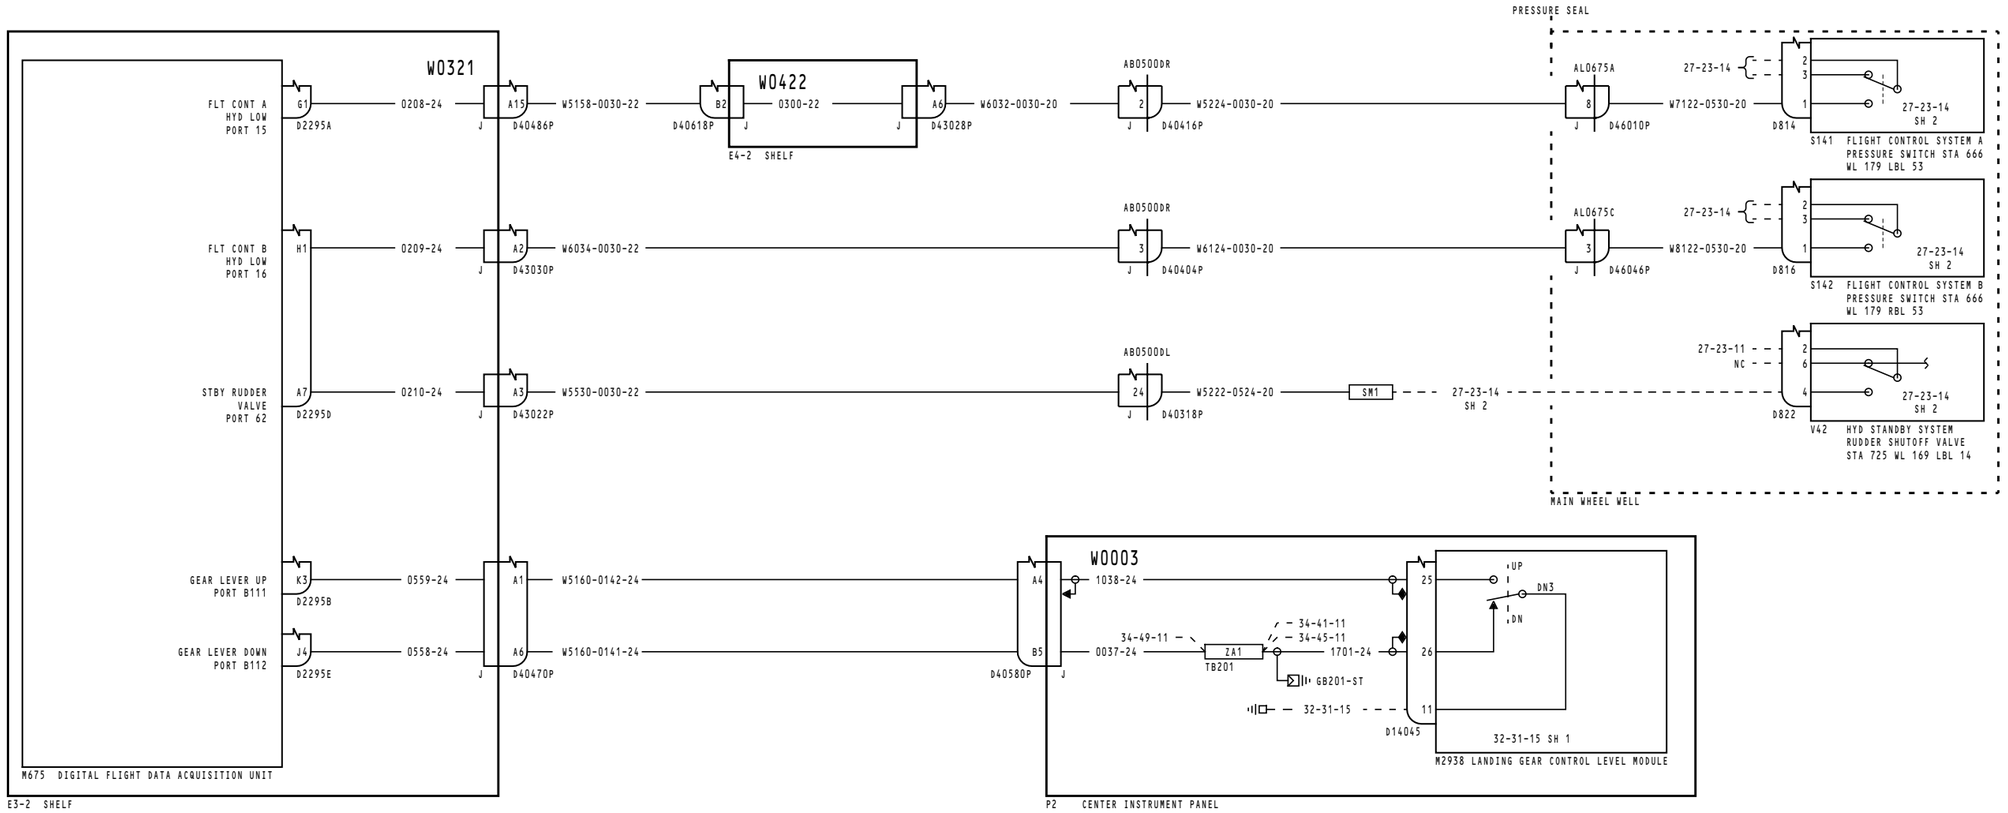

NOTES: * EMC TYPE 1* WIRES MAY BE ROUTED NO MORE THAN 80 FEET WITH TYPE 2 WIRES.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-31-15

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C

370

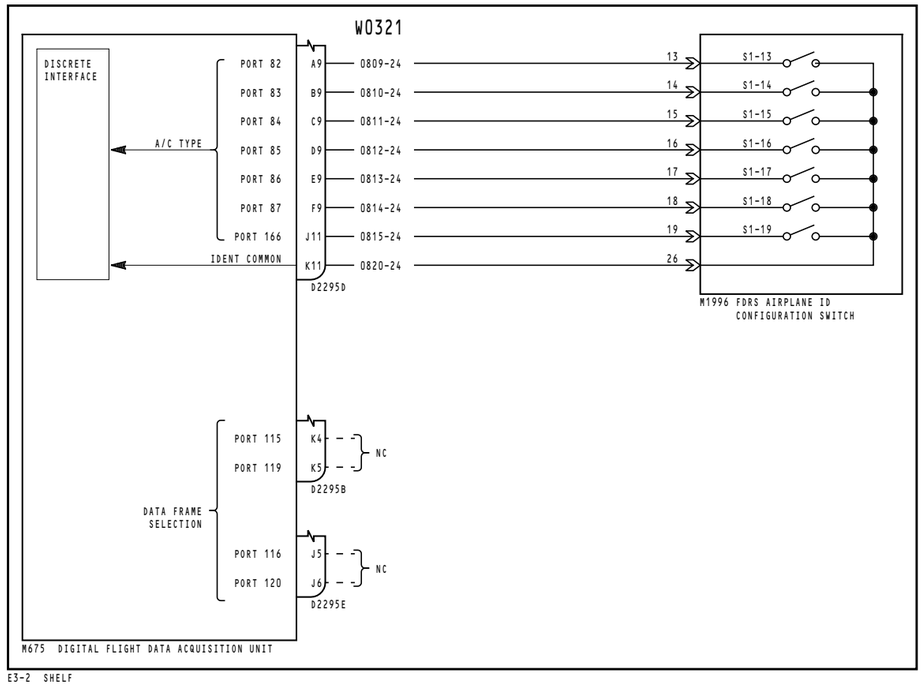

A

AIRCRAFT ID							
AIRCRAFT	IDENTIFICATION DISCRETE PORT						
	166	87	86	85	84	83	82
737 MAX	1	1	0	0	0	0	1
LOGIC 1 = M1996 SELECTED TO "ON/CLOSED" LOGIC 0 = M1996 SELECTED TO "OFF/OPEN"							

DFDAU DATA FRAME SELECT					
DATA FRAME	CONFIGURATION	PORT 115	PORT 116	PORT 119	PORT 120
737-8	737 MAX	OPEN	OPEN	OPEN	OPEN

NOTES:

SEE ADDRESS CODE SELECTION CHART
FOR SETTING SWITCH POSITION:

LOGIC 0 = OFF/OPEN
LOGIC 1 = ON/CLOSED


A ALL UNUSED PINS IN THE M1996 CONFIGURATION SWITCH ARE SET TO OFF (PINS 1-12 AND 20-24)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-31-16

Page 1

May 15/2024

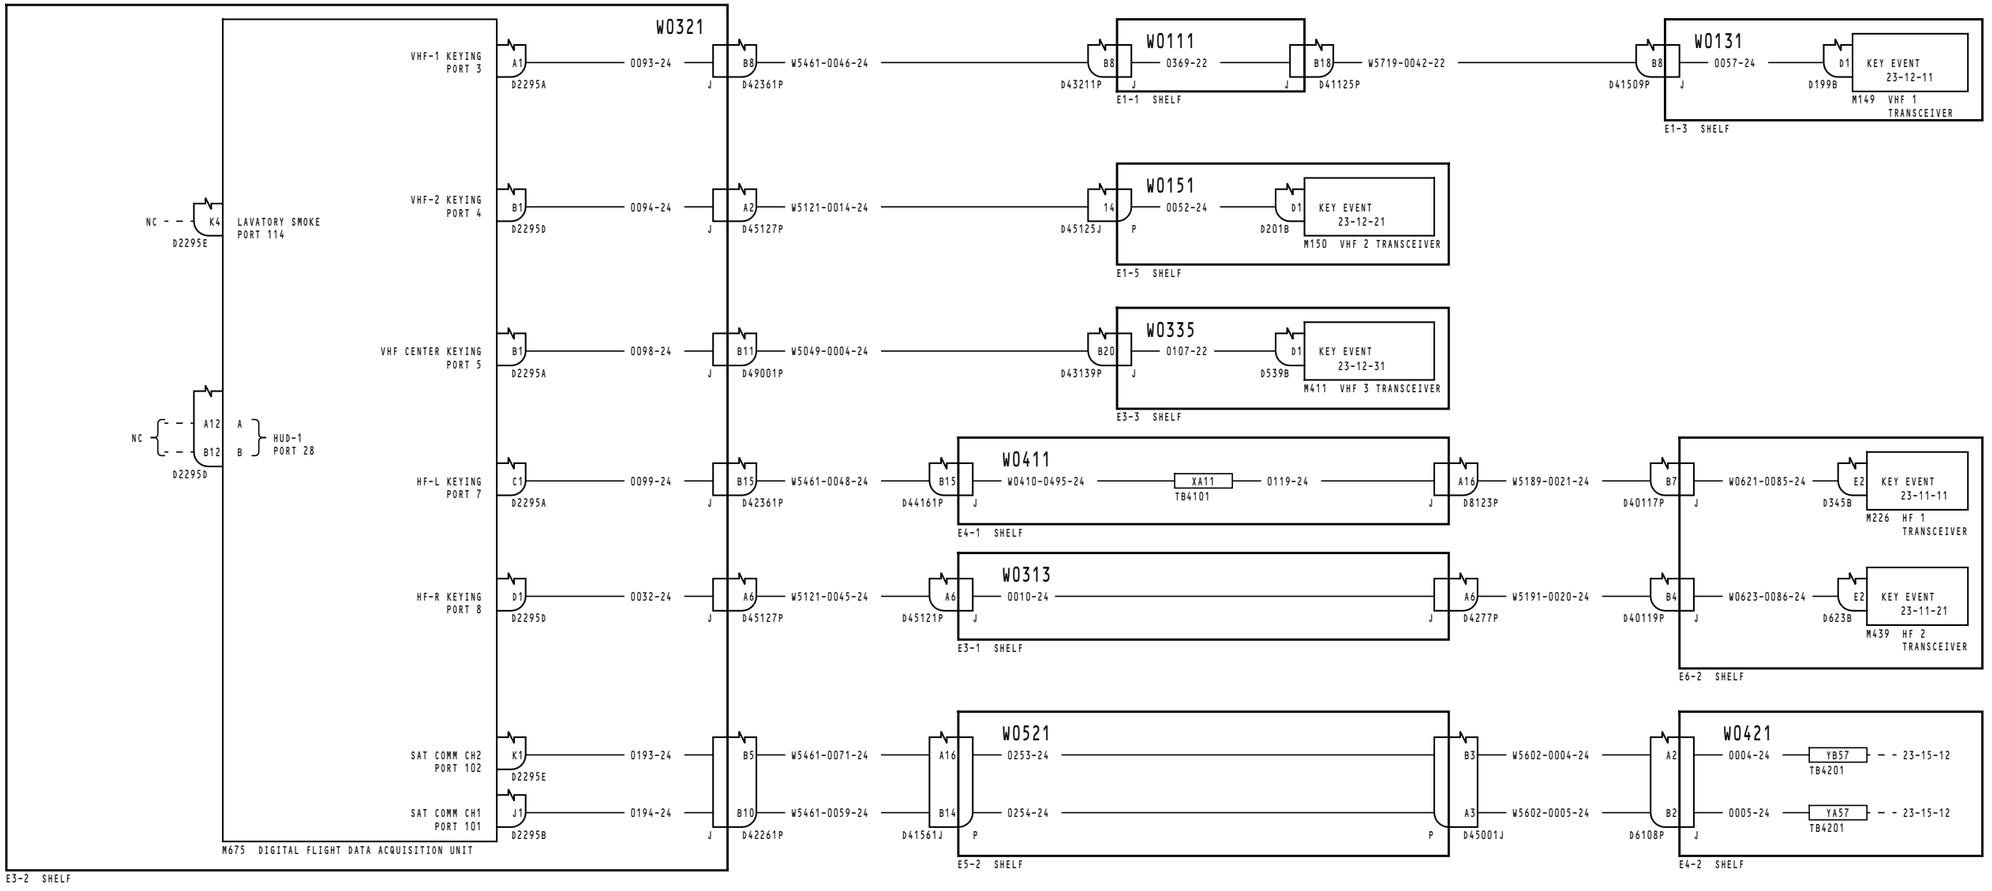

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-31-17

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
289

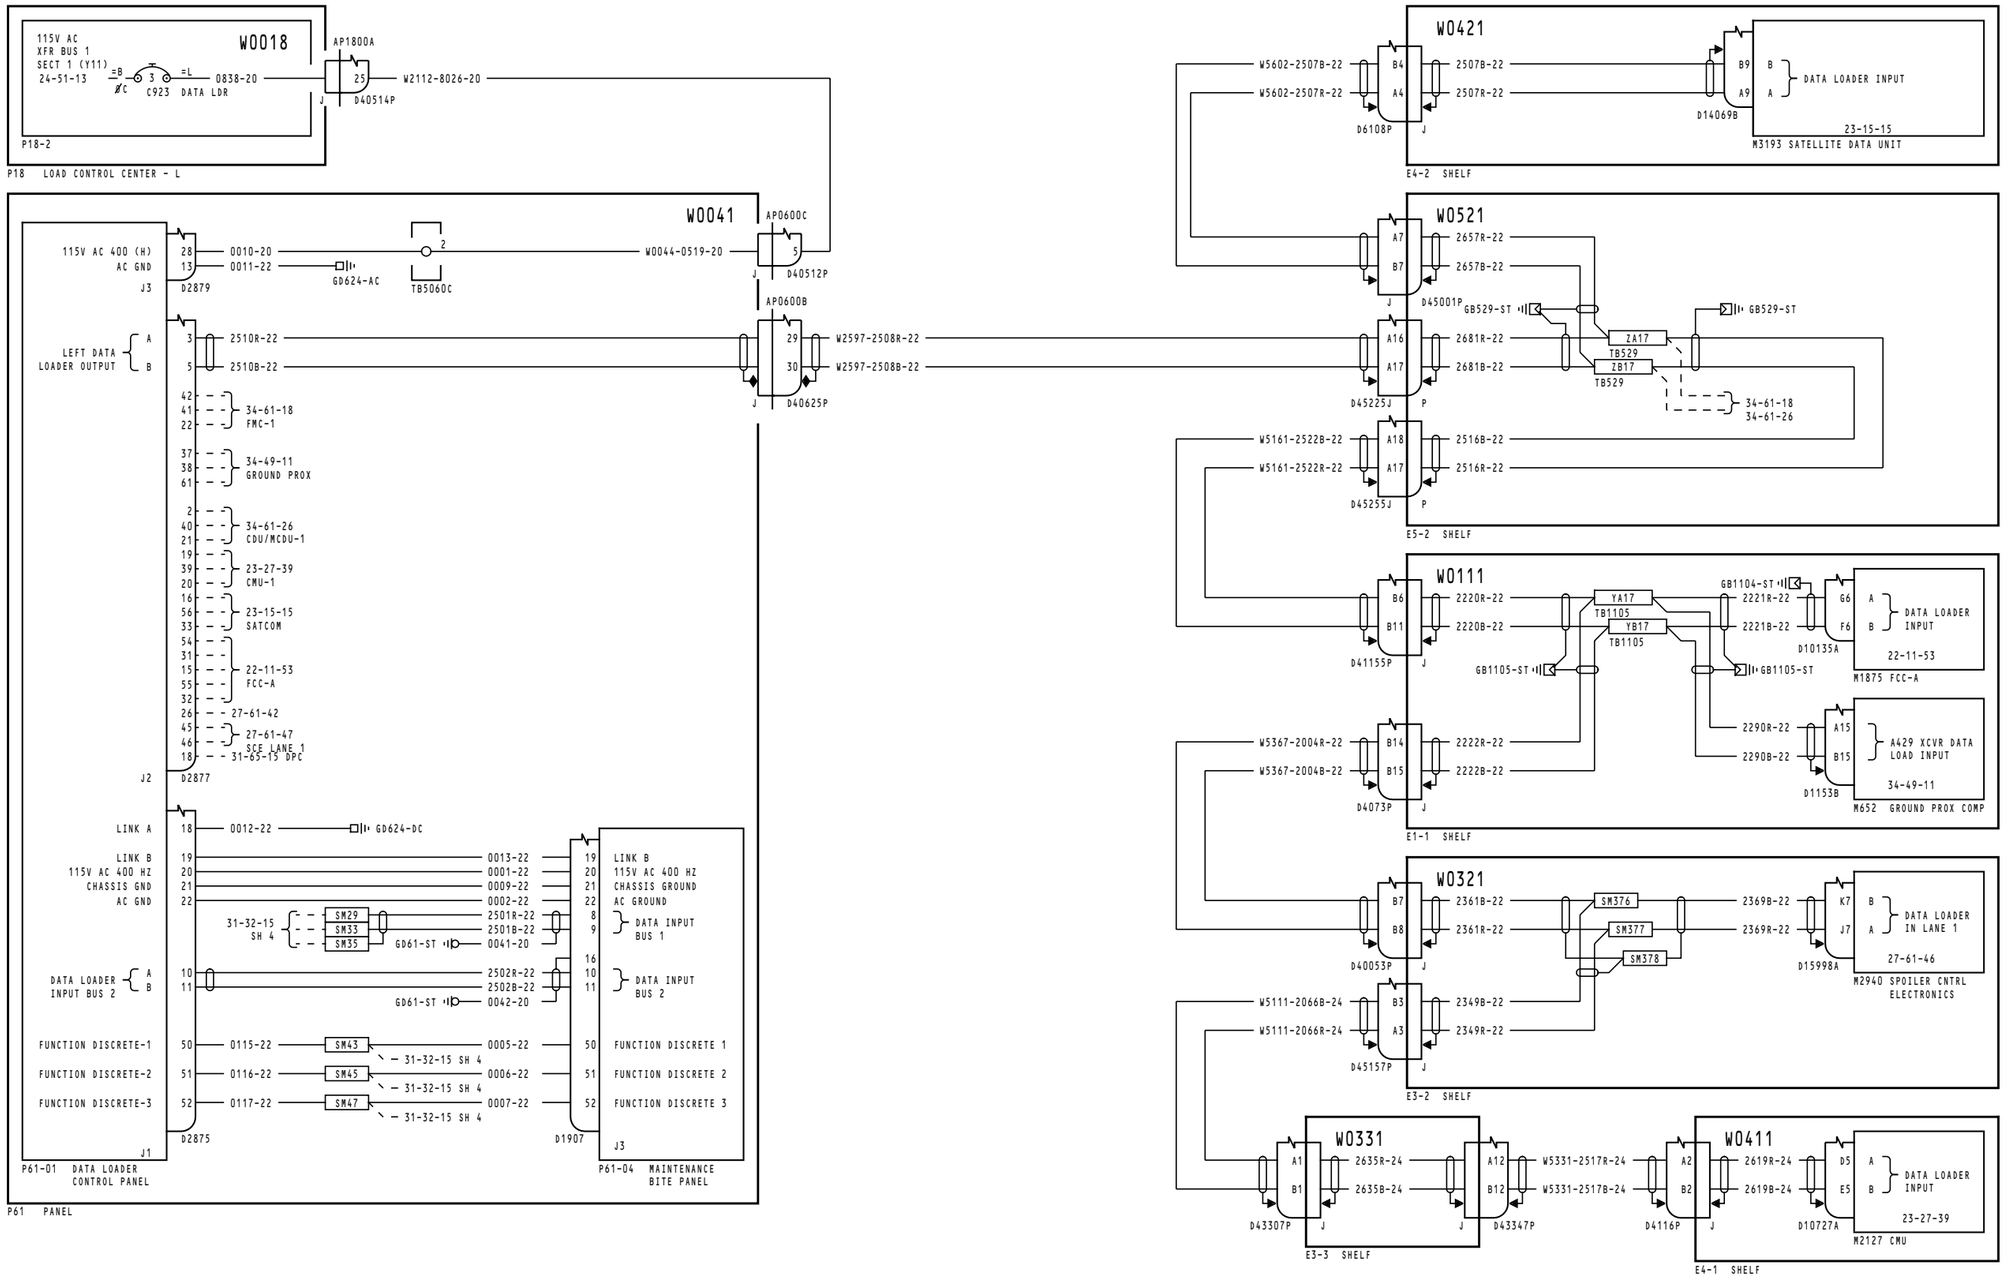

ALL

DATA LOADER INTERFACE

D280AM1215

31-32-15

Page 1
Sheet 1
May 15/2024


31-32-15

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

78

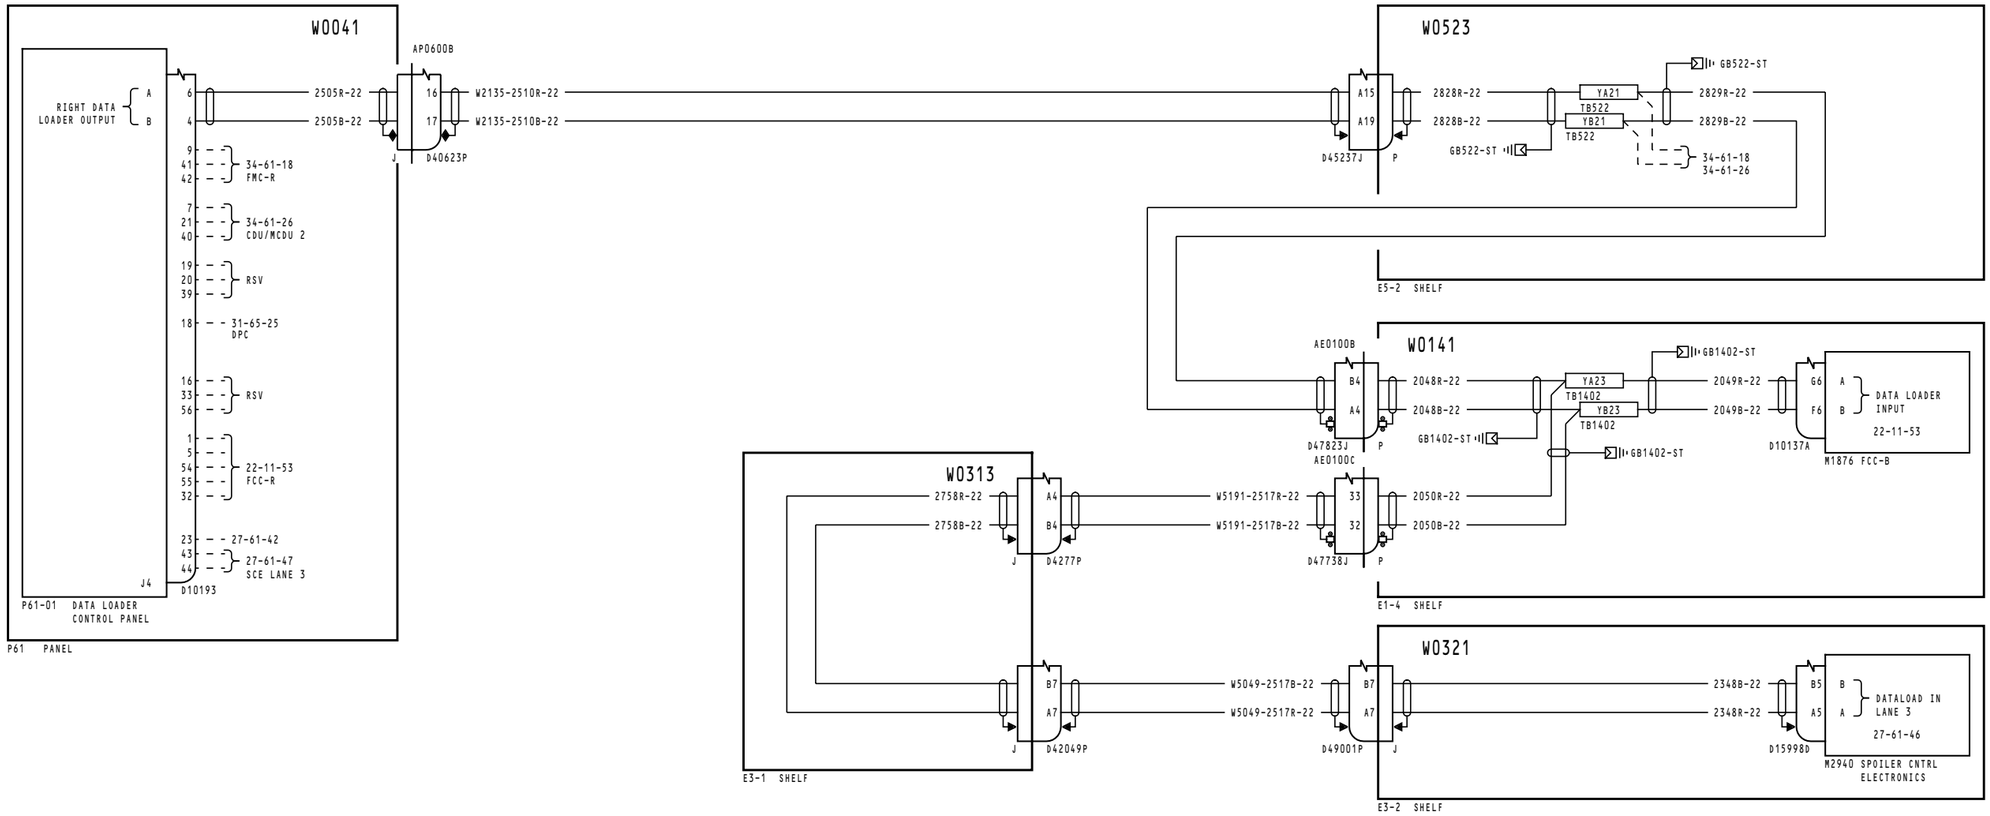


31-32-15

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B
24

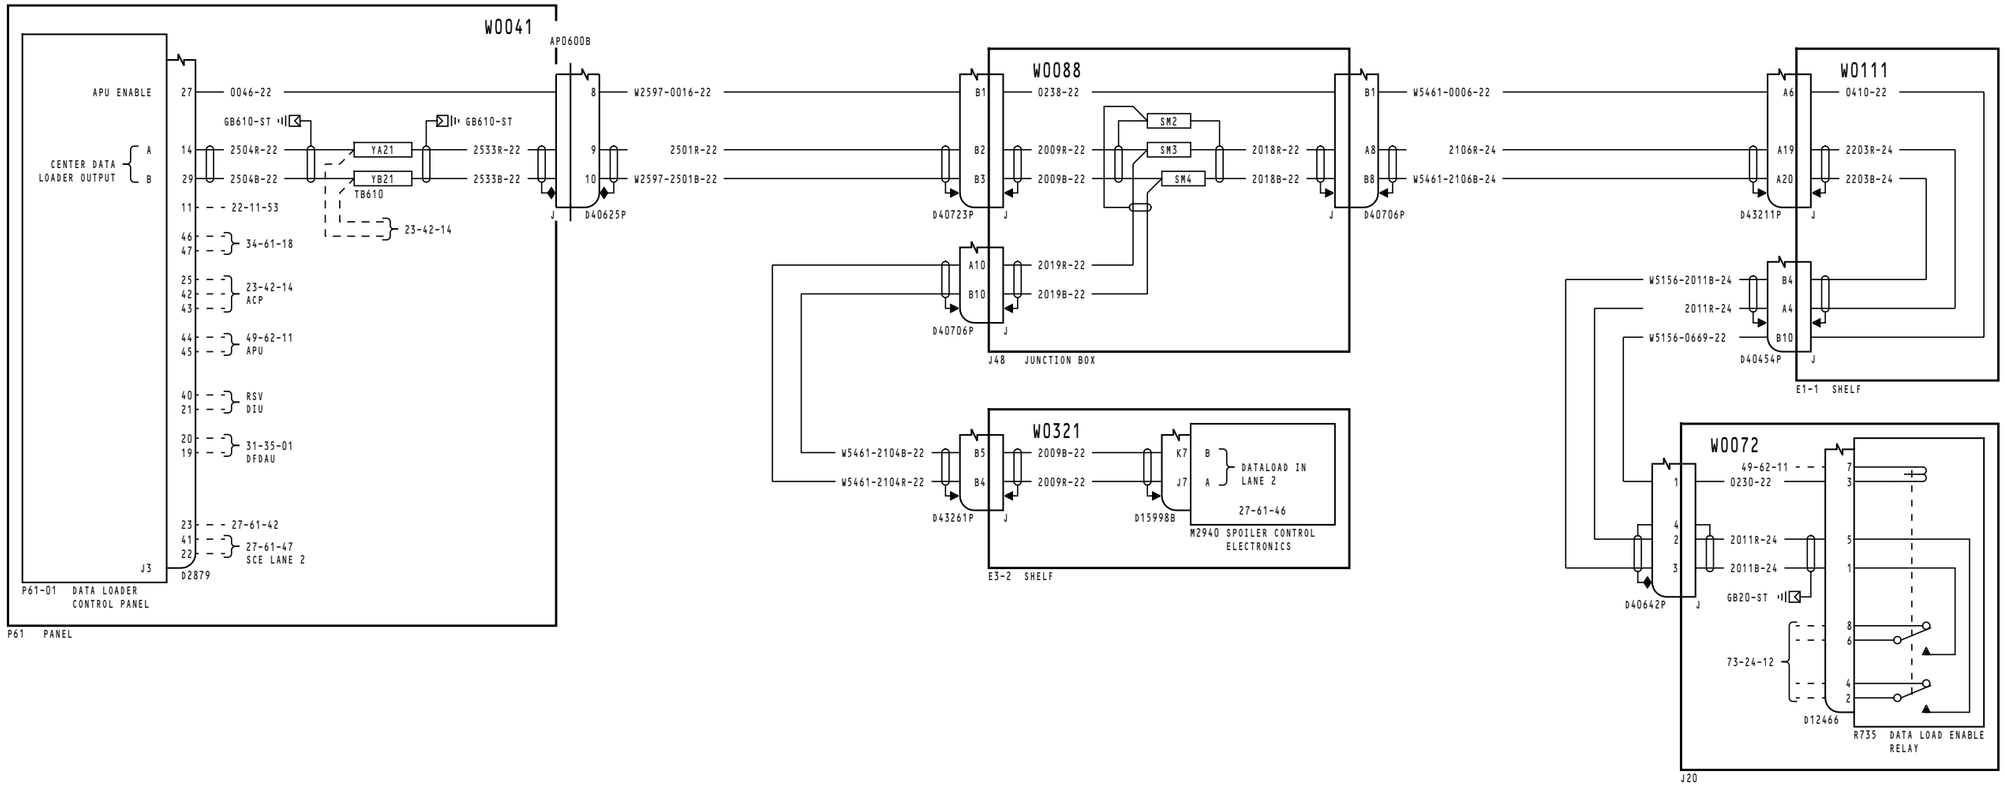


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-32-15

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
205

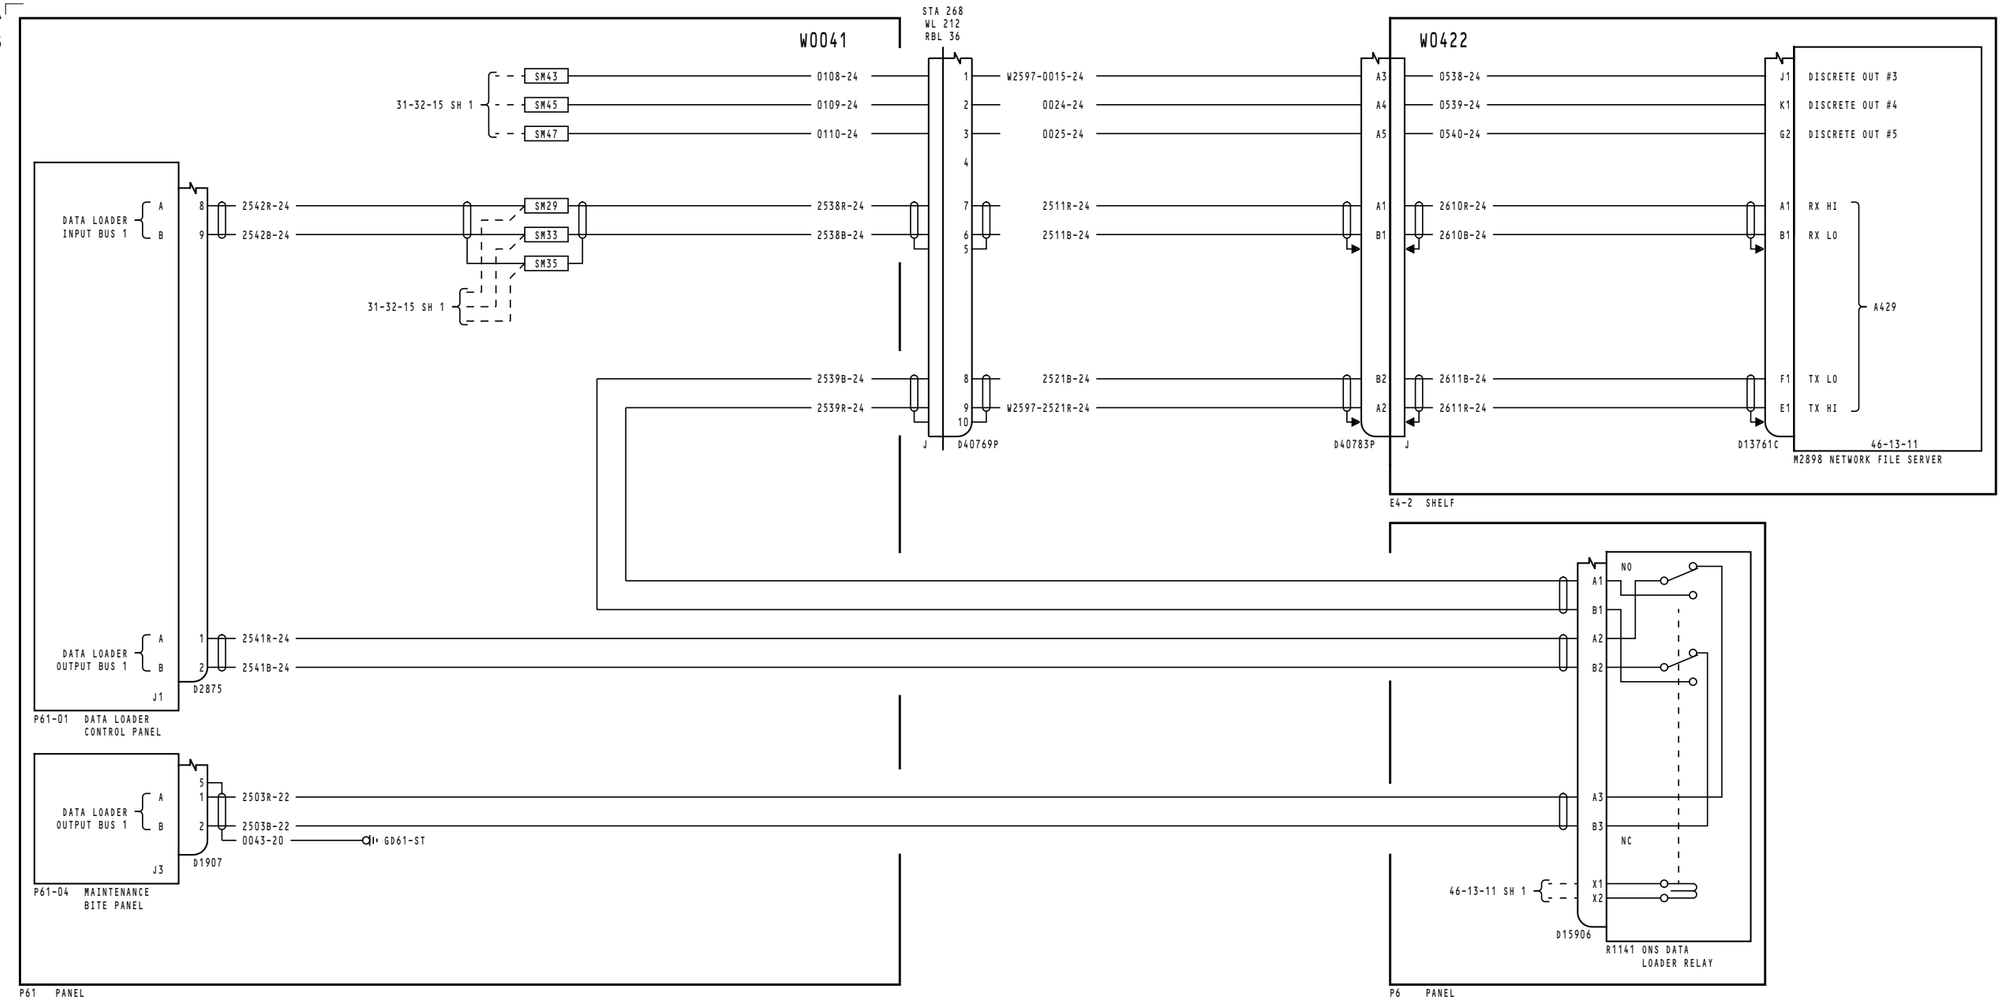


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-32-15

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
476

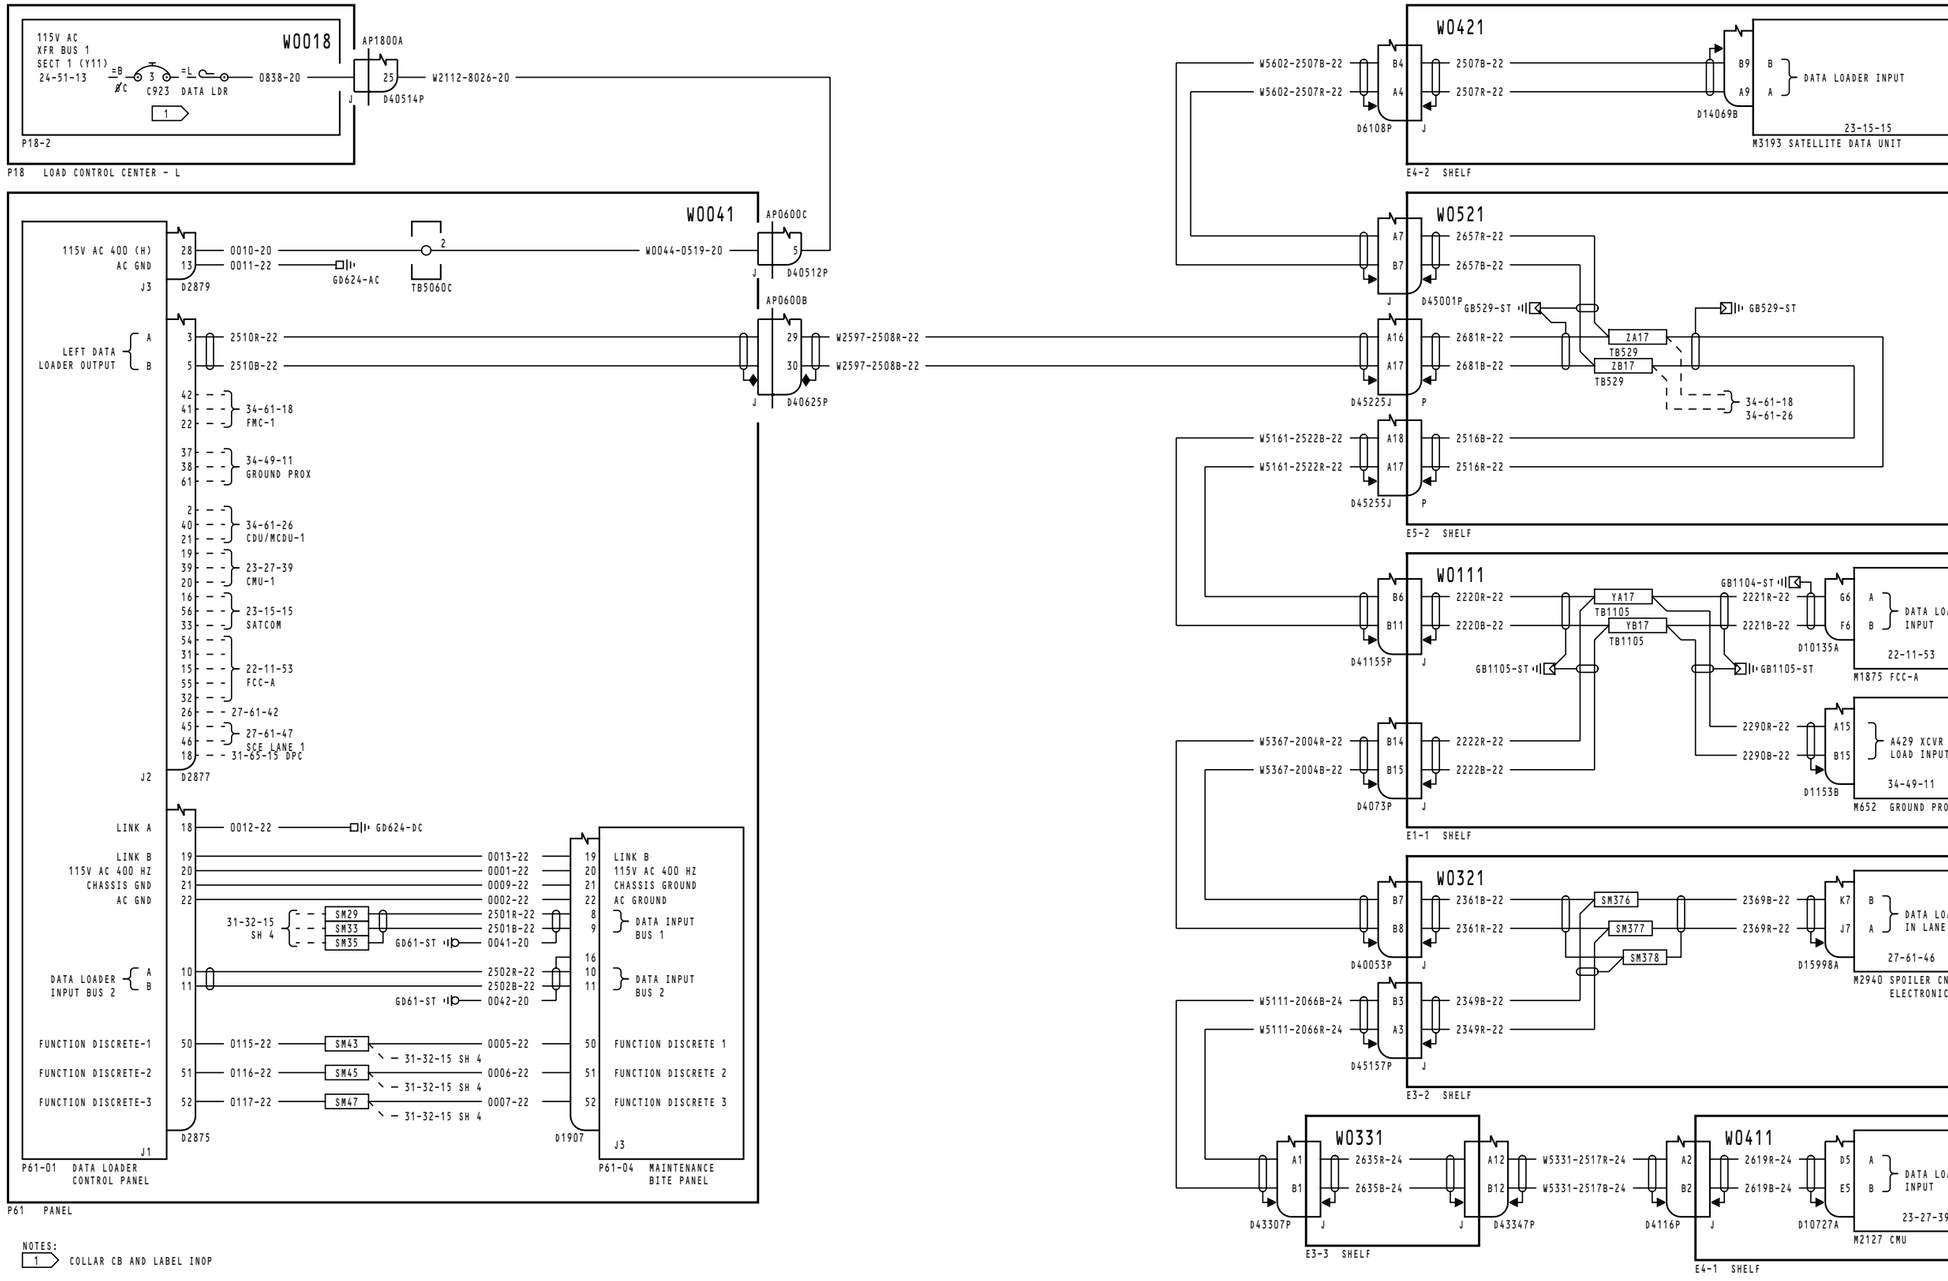

Incorporates SB
46-1029 R04, 46-1068


31-32-15

Page 1.1
Sheet 1
Apr 23/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

78

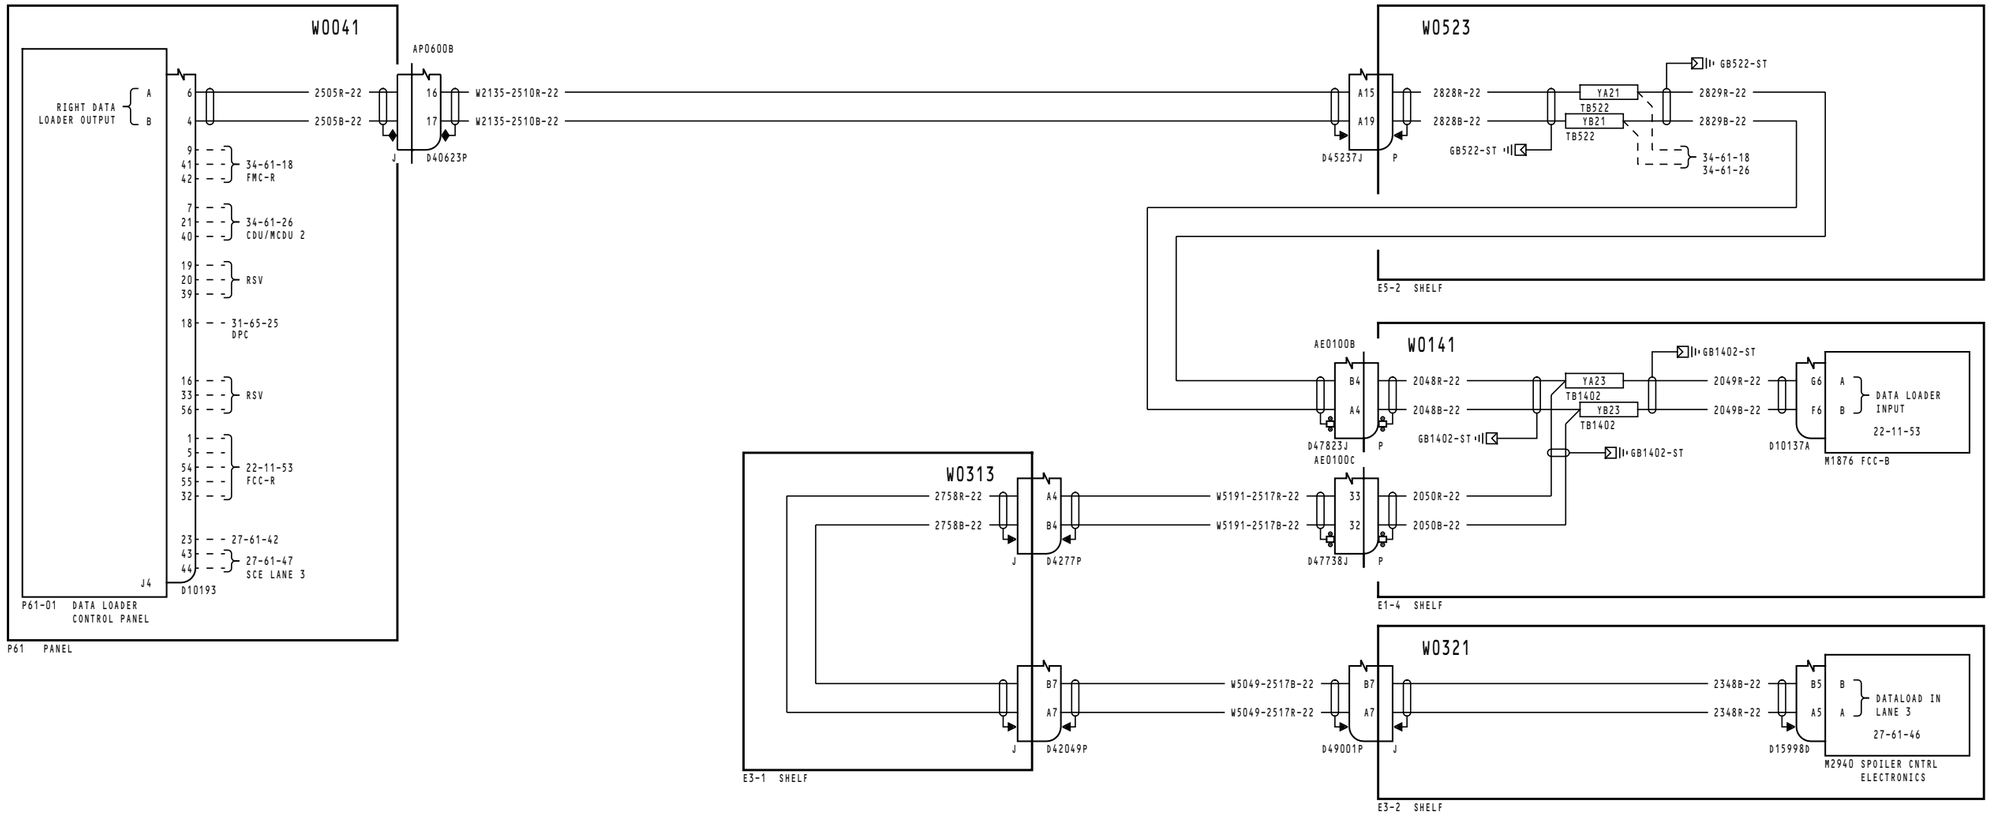


31-32-15

Page 1.1
Sheet 2
Apr 23/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

58

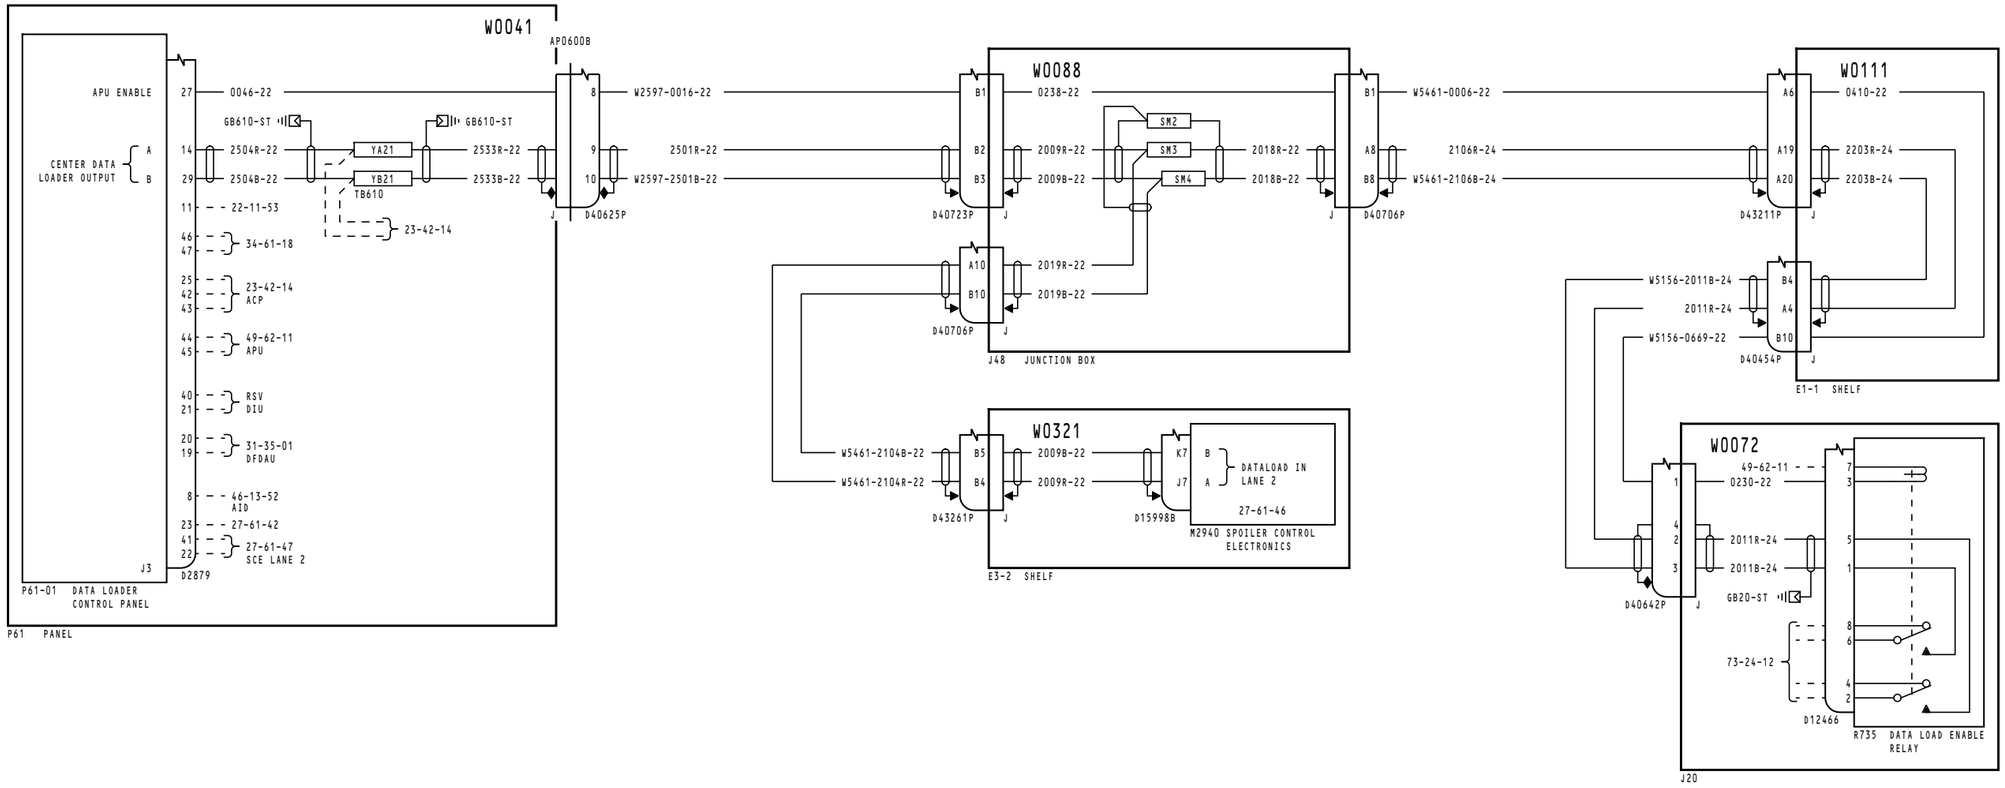

Incorporates SB
46-1068


31-32-15

Page 1.1
Sheet 3
Apr 23/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

215

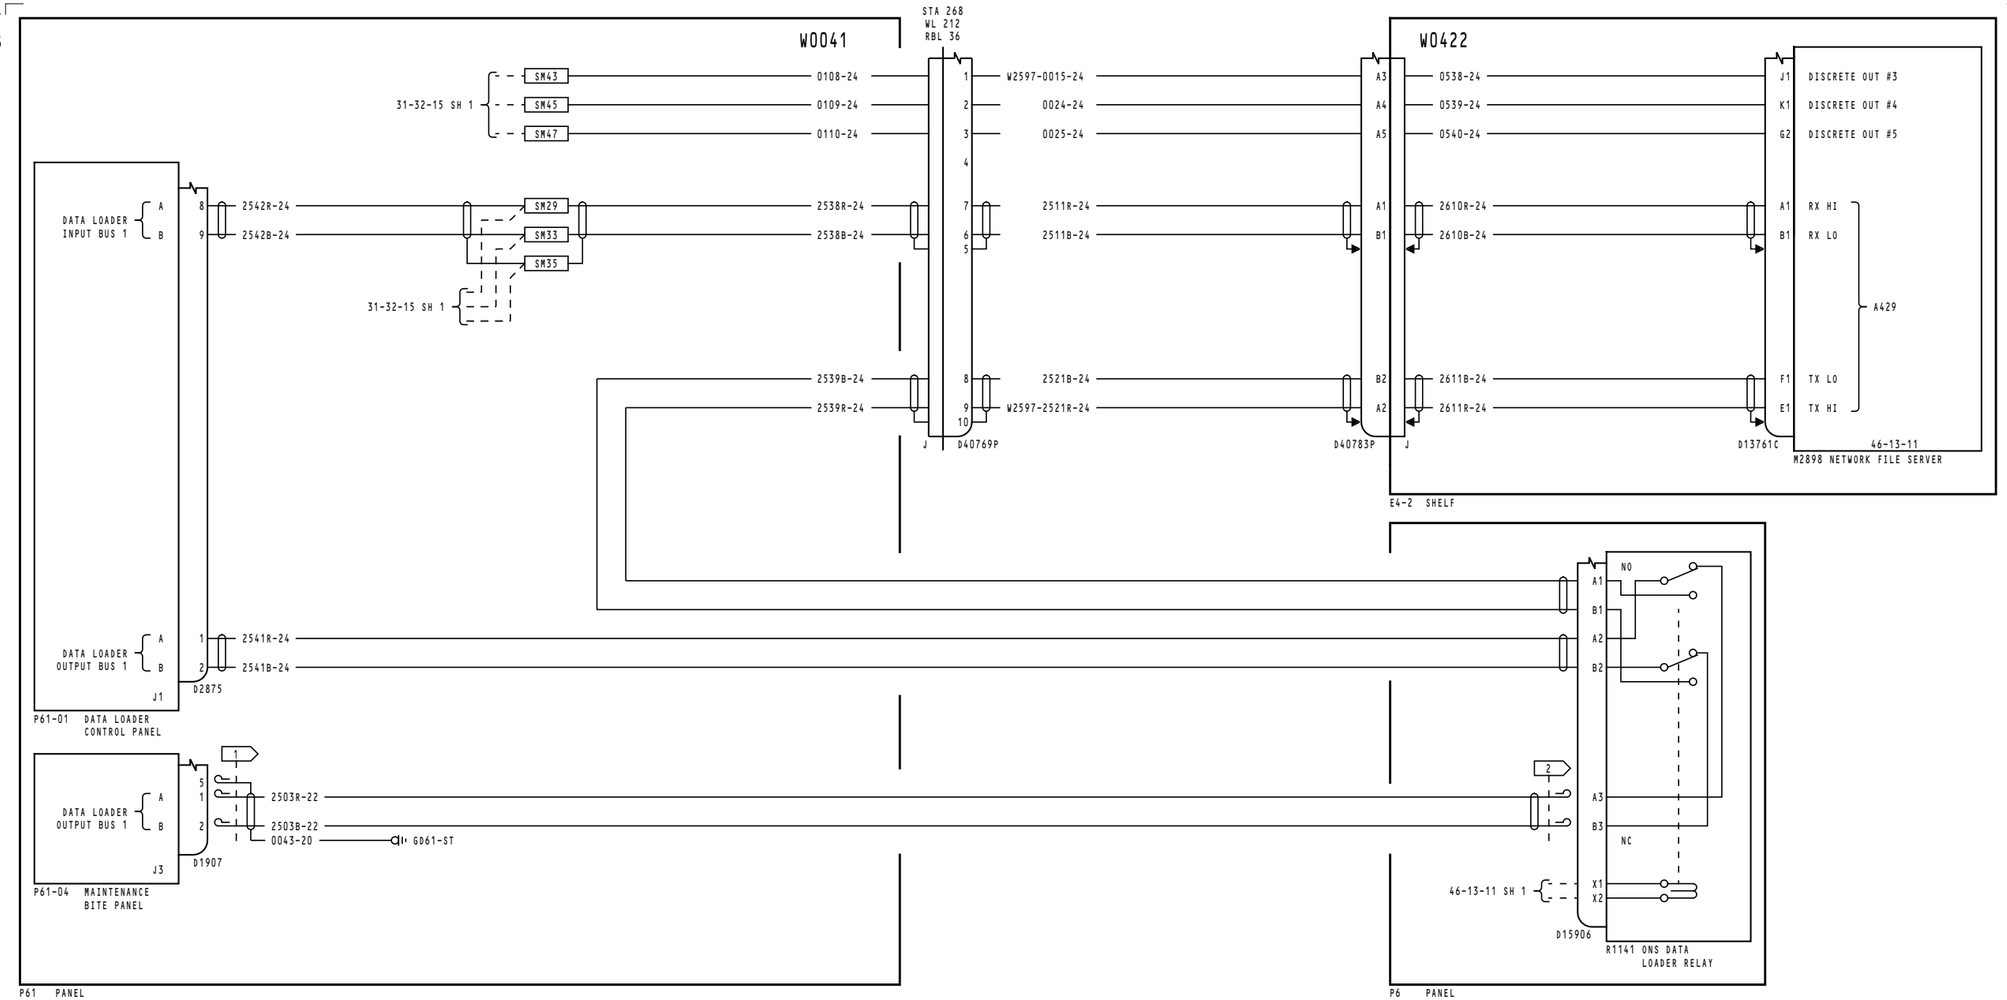

NOTES:
1. CAP & STOW NEAR D1907
2. CAP & STOW NEAR D15906


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-32-15

Page 1.1
Sheet 4
Apr 23/2025

737-8 WIRING DIAGRAM MANUAL

-A
476

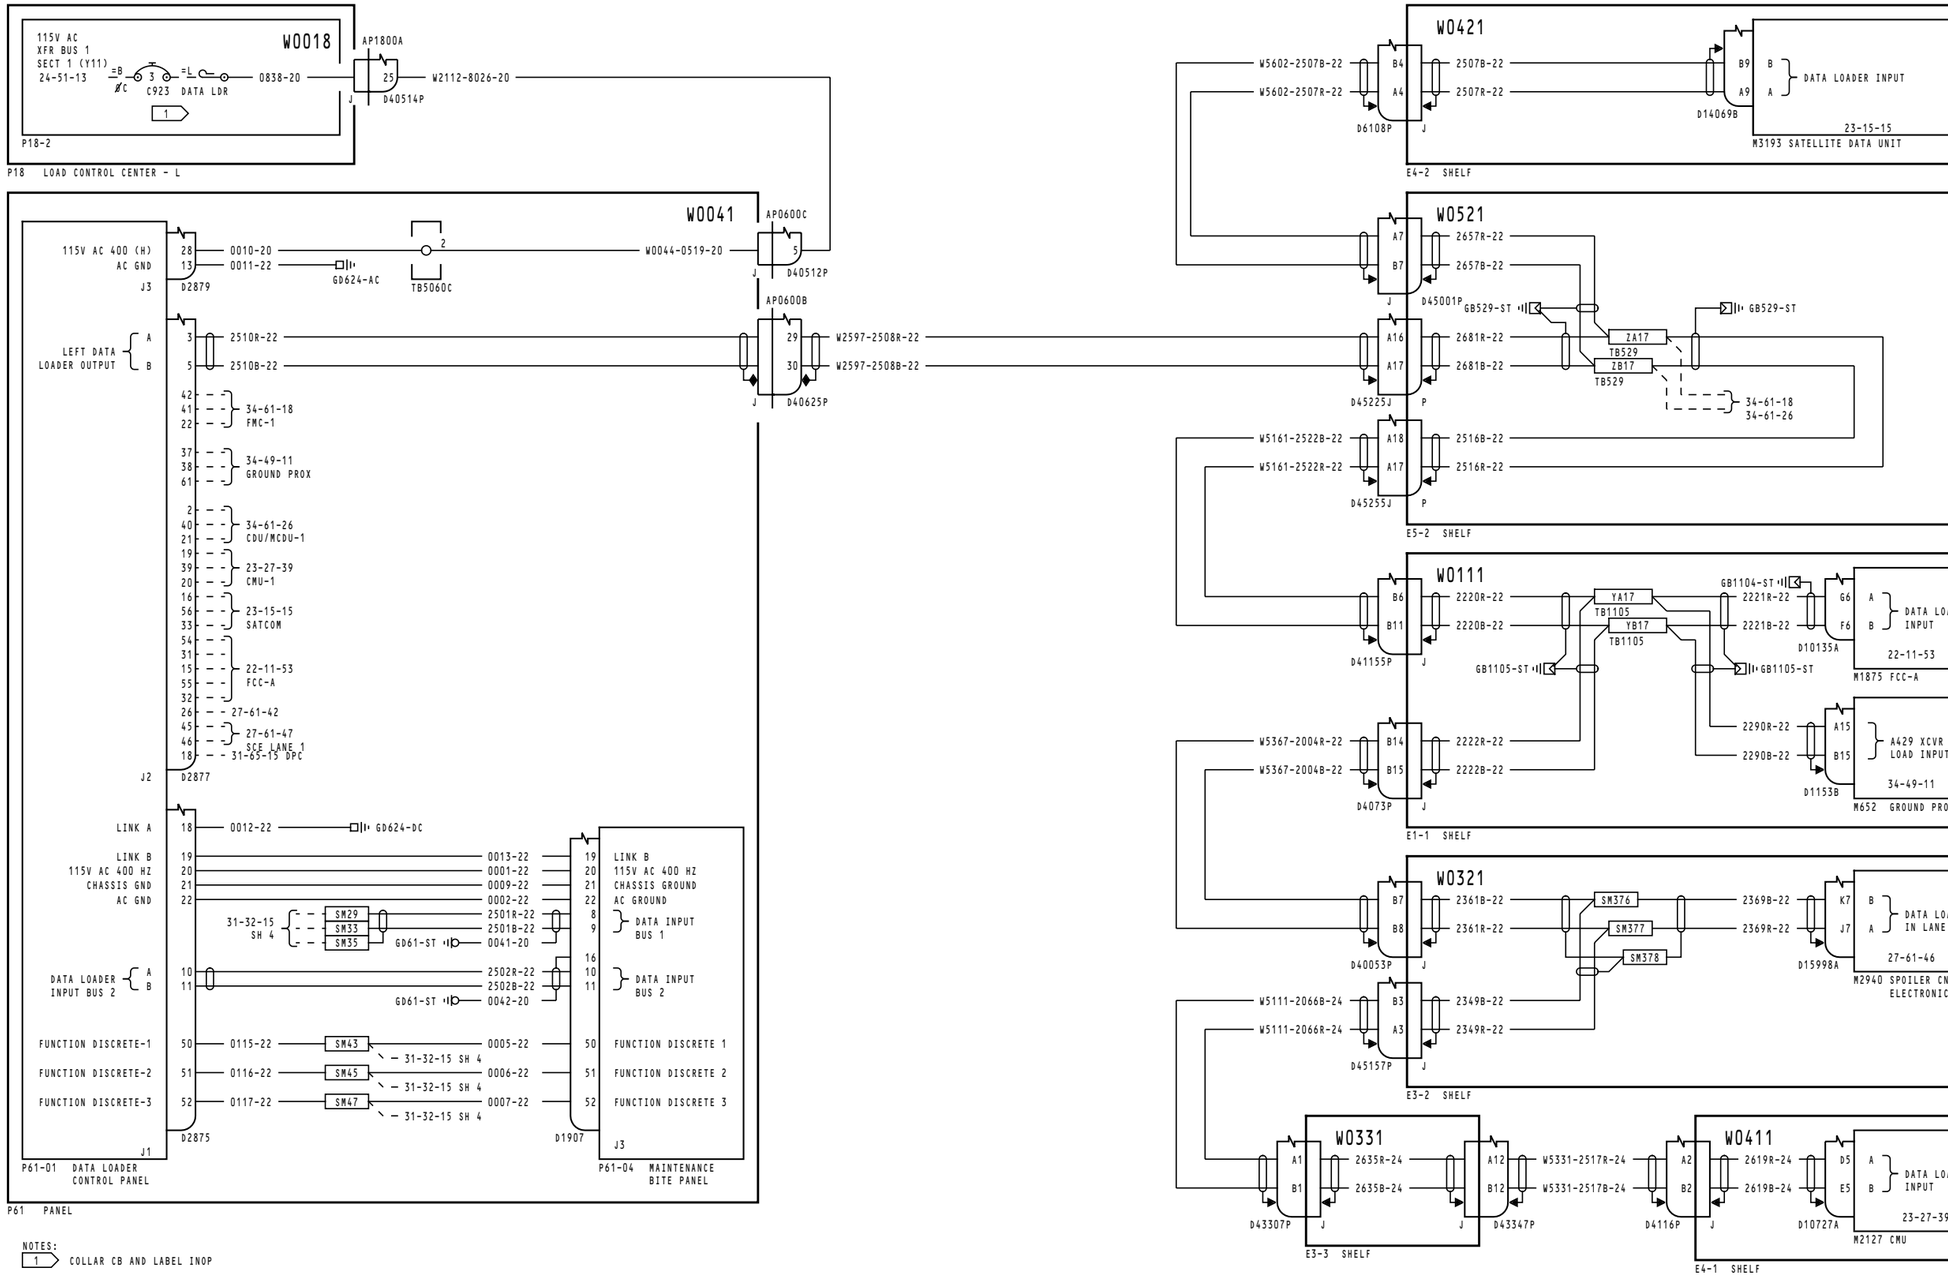


31-32-15

Page 1.2
Sheet 1
Apr 23/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

78

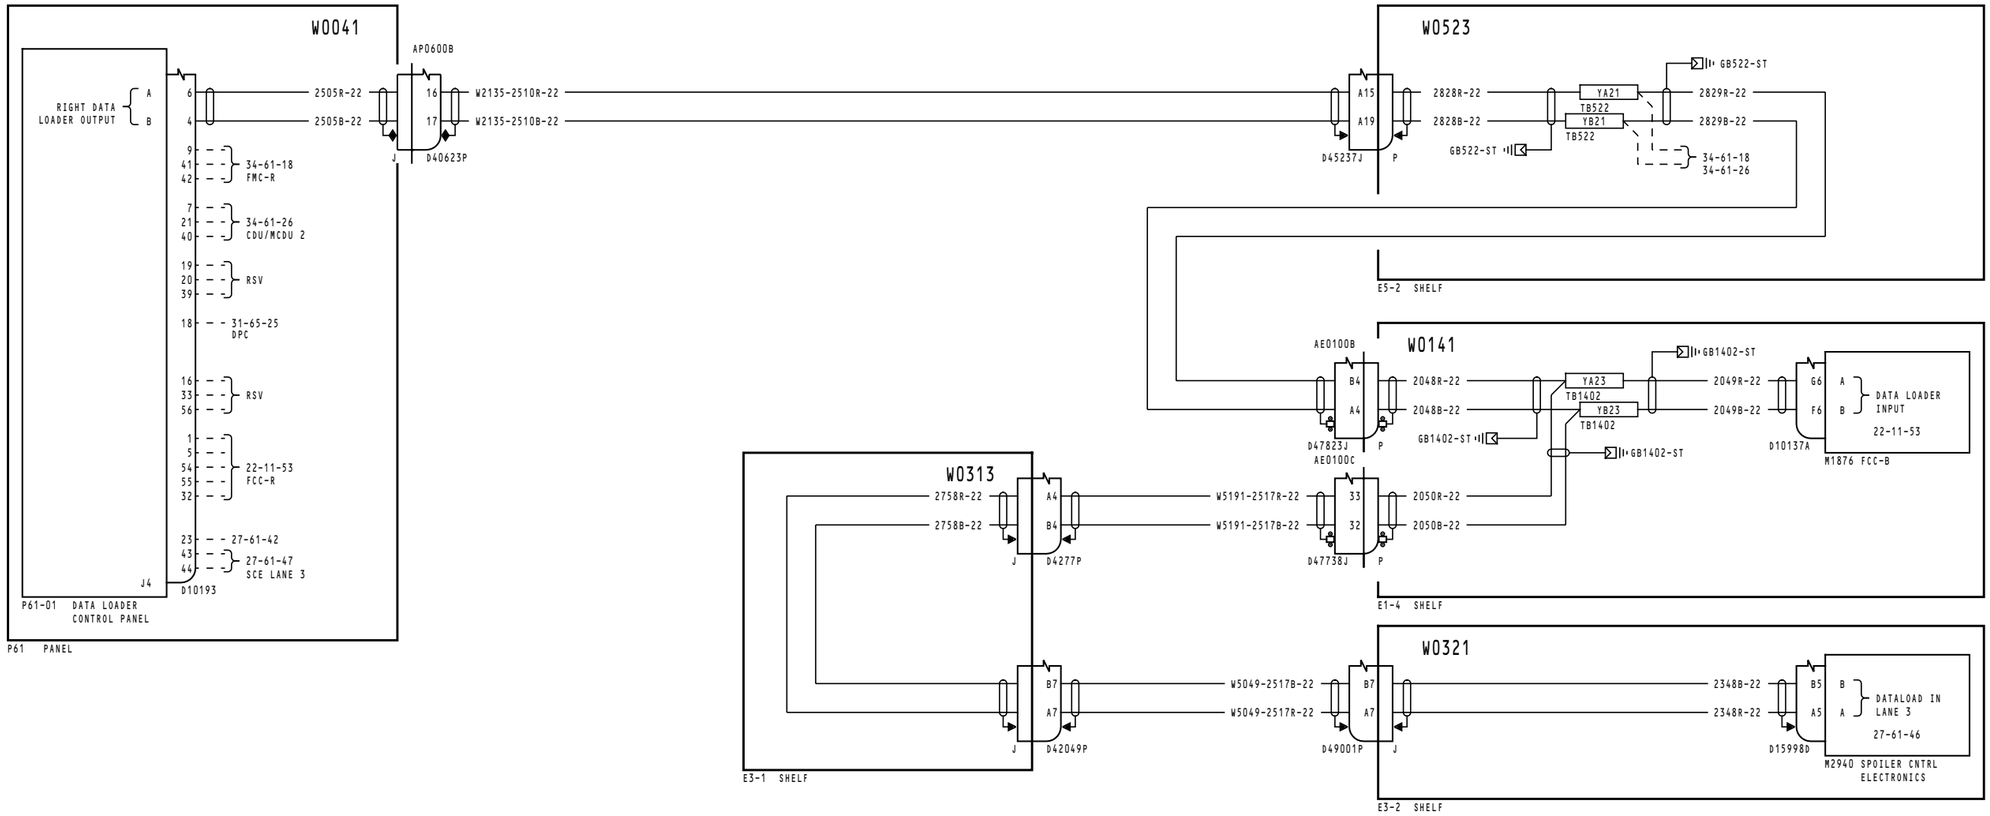


31-32-15

Page 1.2
Sheet 2
Apr 23/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

58

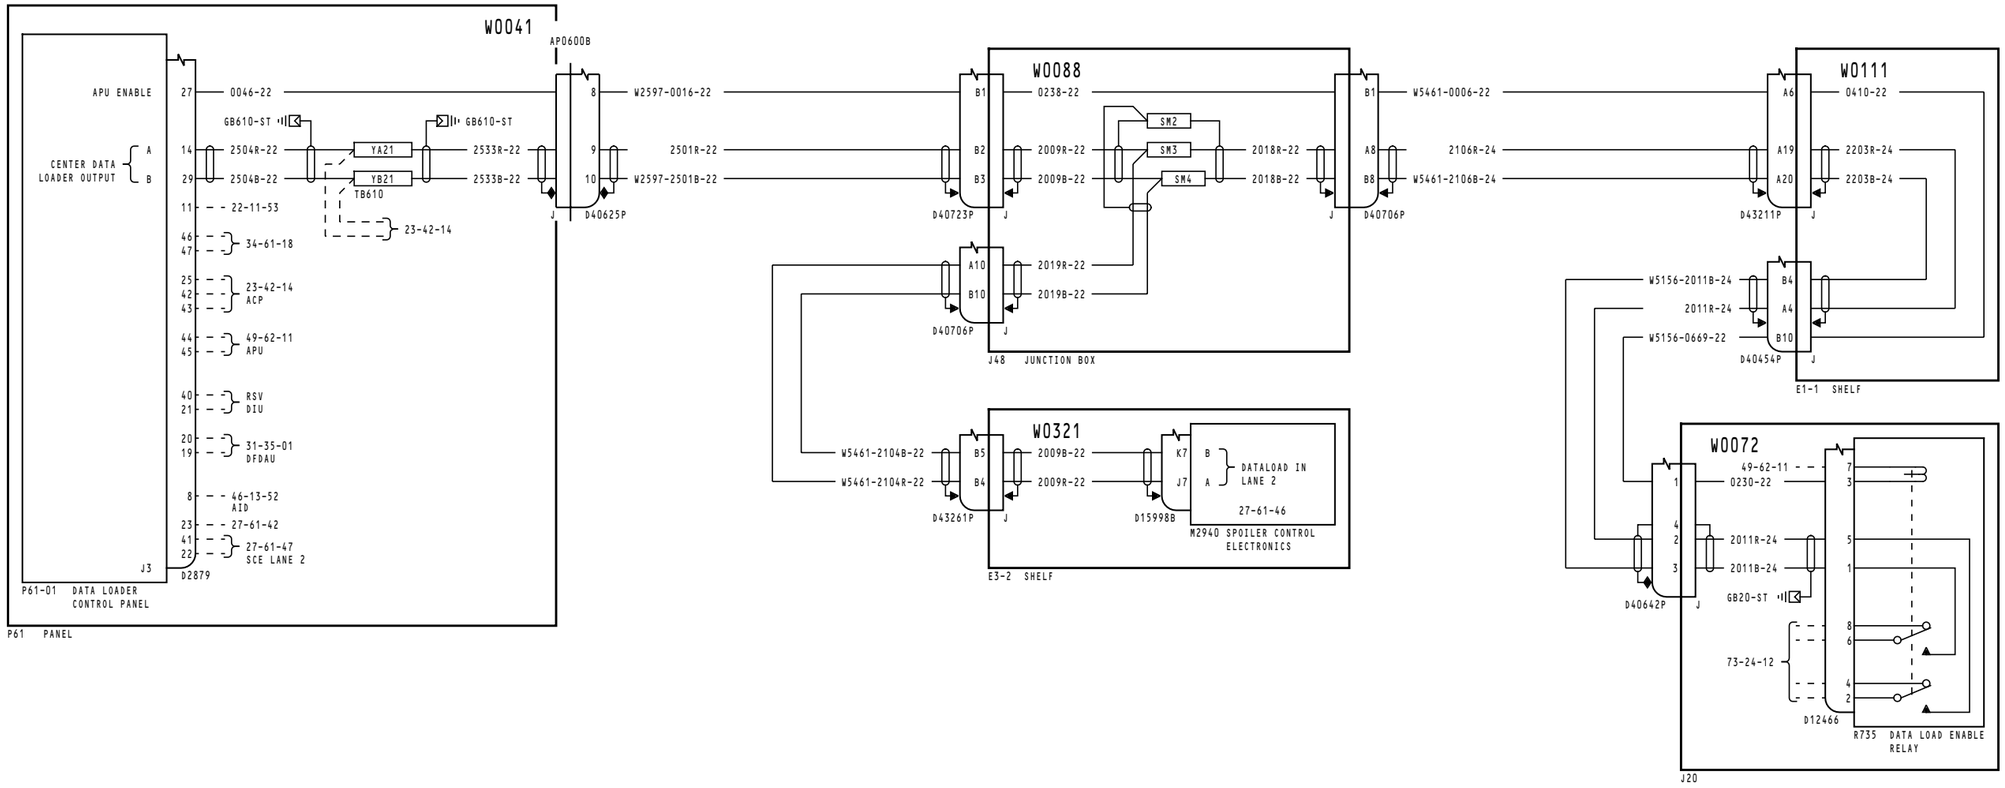

Incorporates SB
46-1068


31-32-15

Page 1.2
Sheet 3
Apr 23/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

215

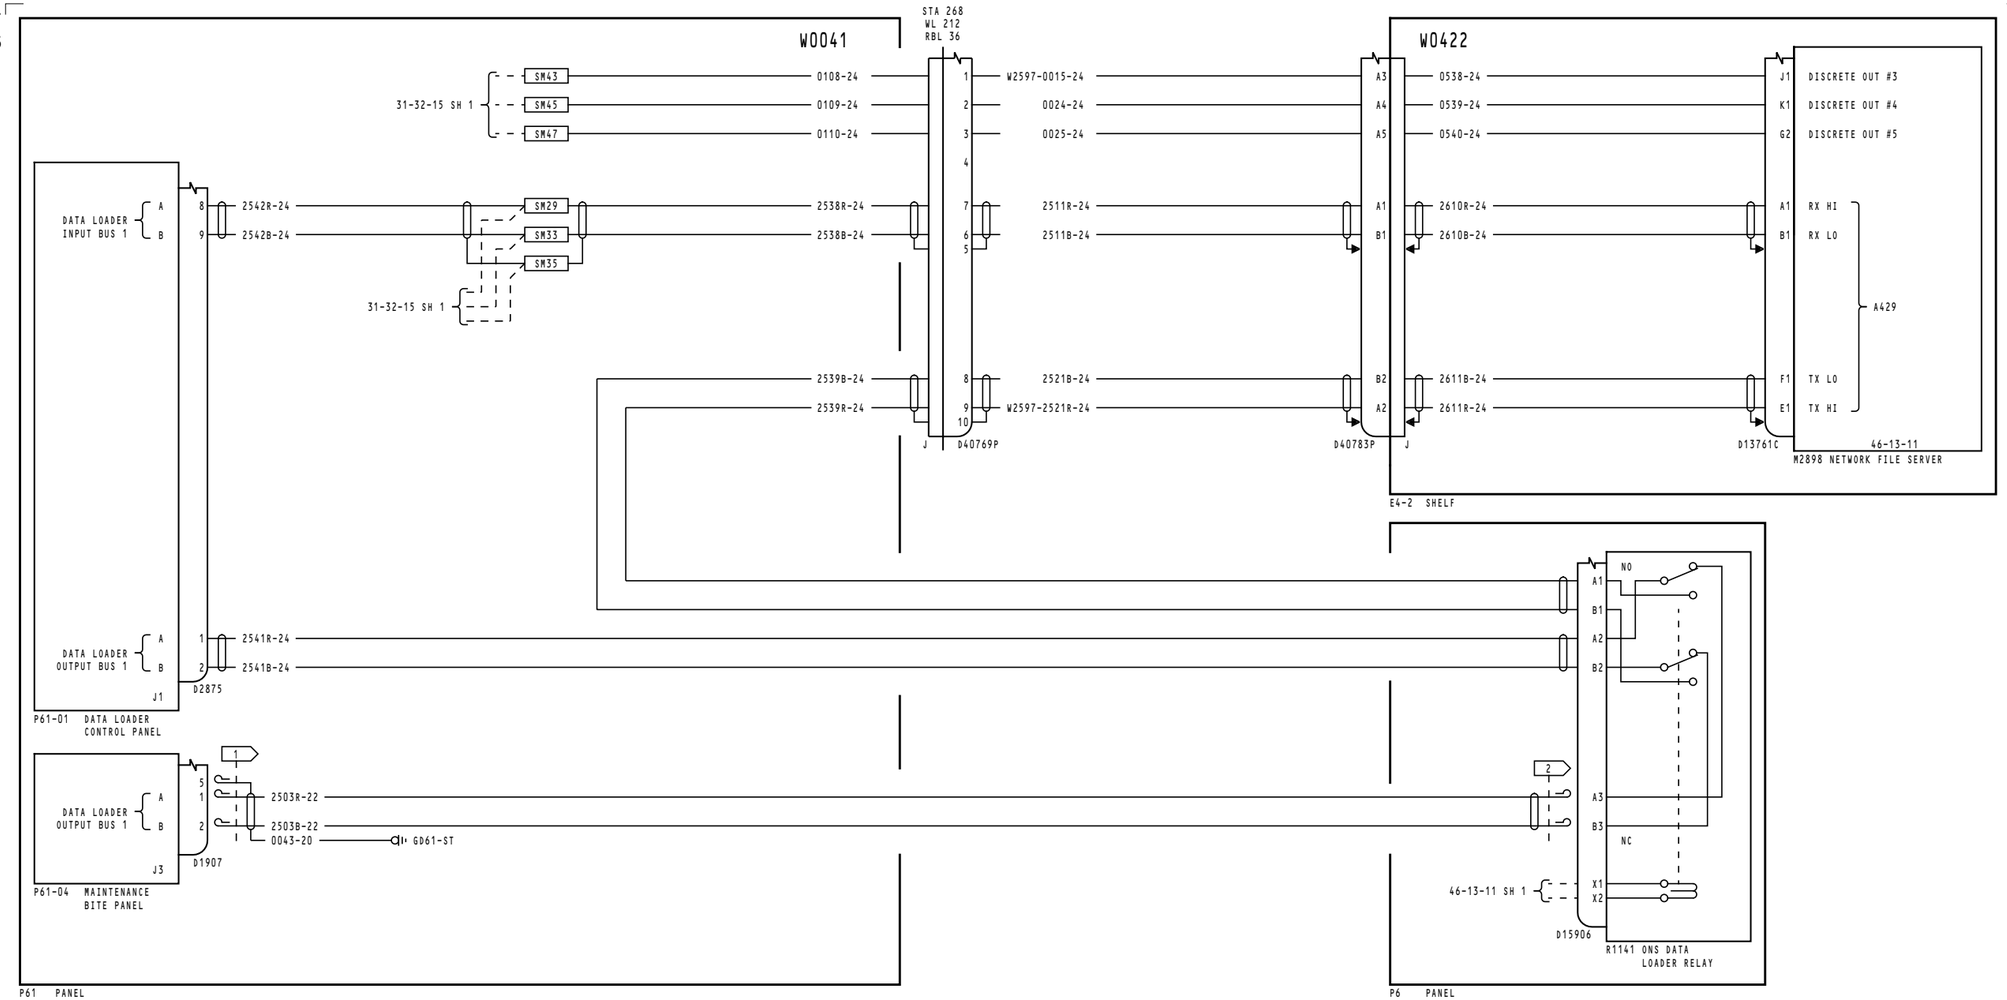

NOTES:
1. CAP & STOW NEAR D1907
2. CAP & STOW NEAR D15906


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-32-15

Page 1.2
Sheet 4
Apr 23/2025

737-8 WIRING DIAGRAM MANUAL

545

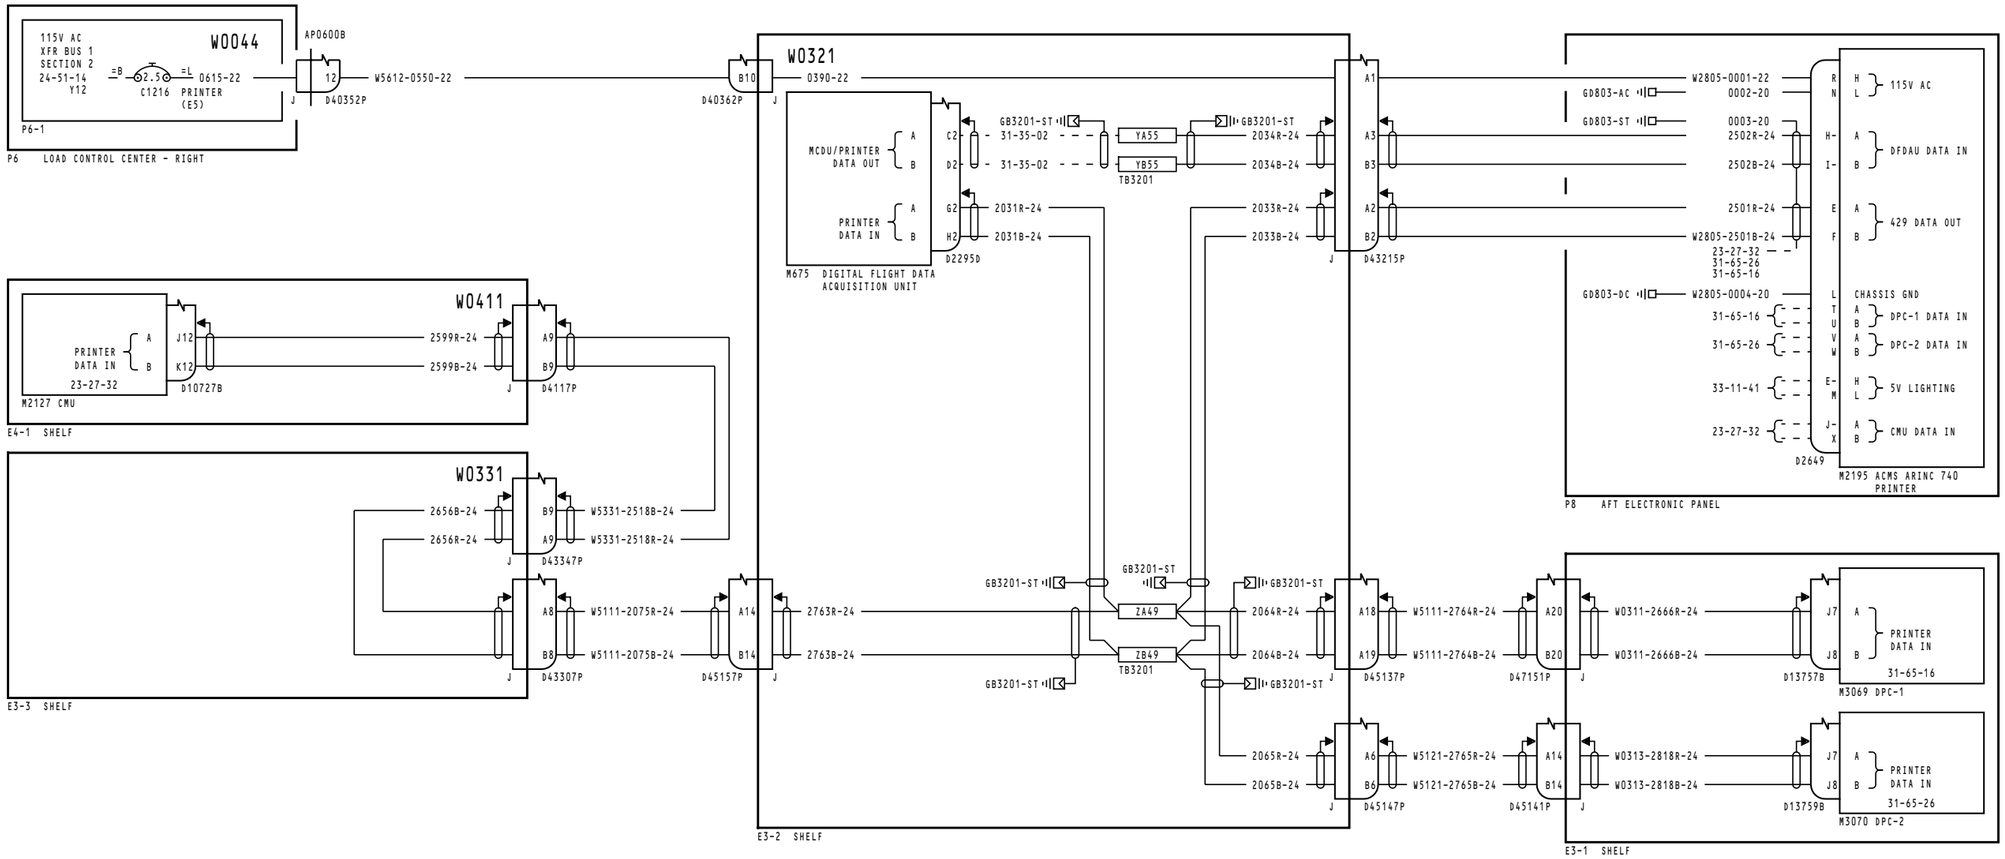


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-33-01

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

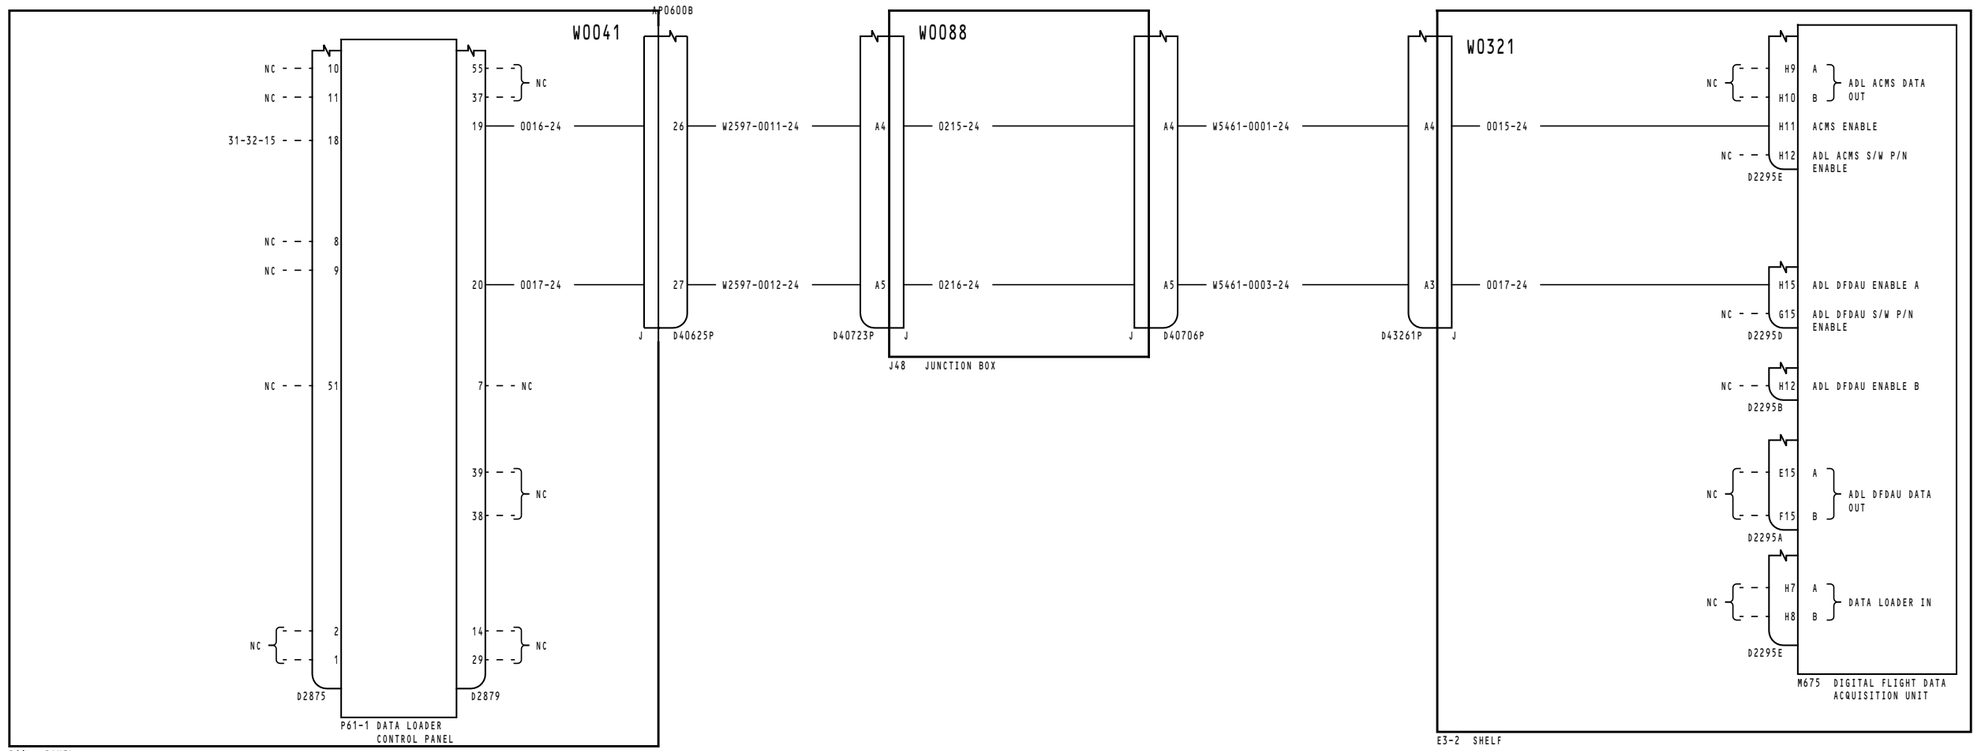

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-35-01

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
299

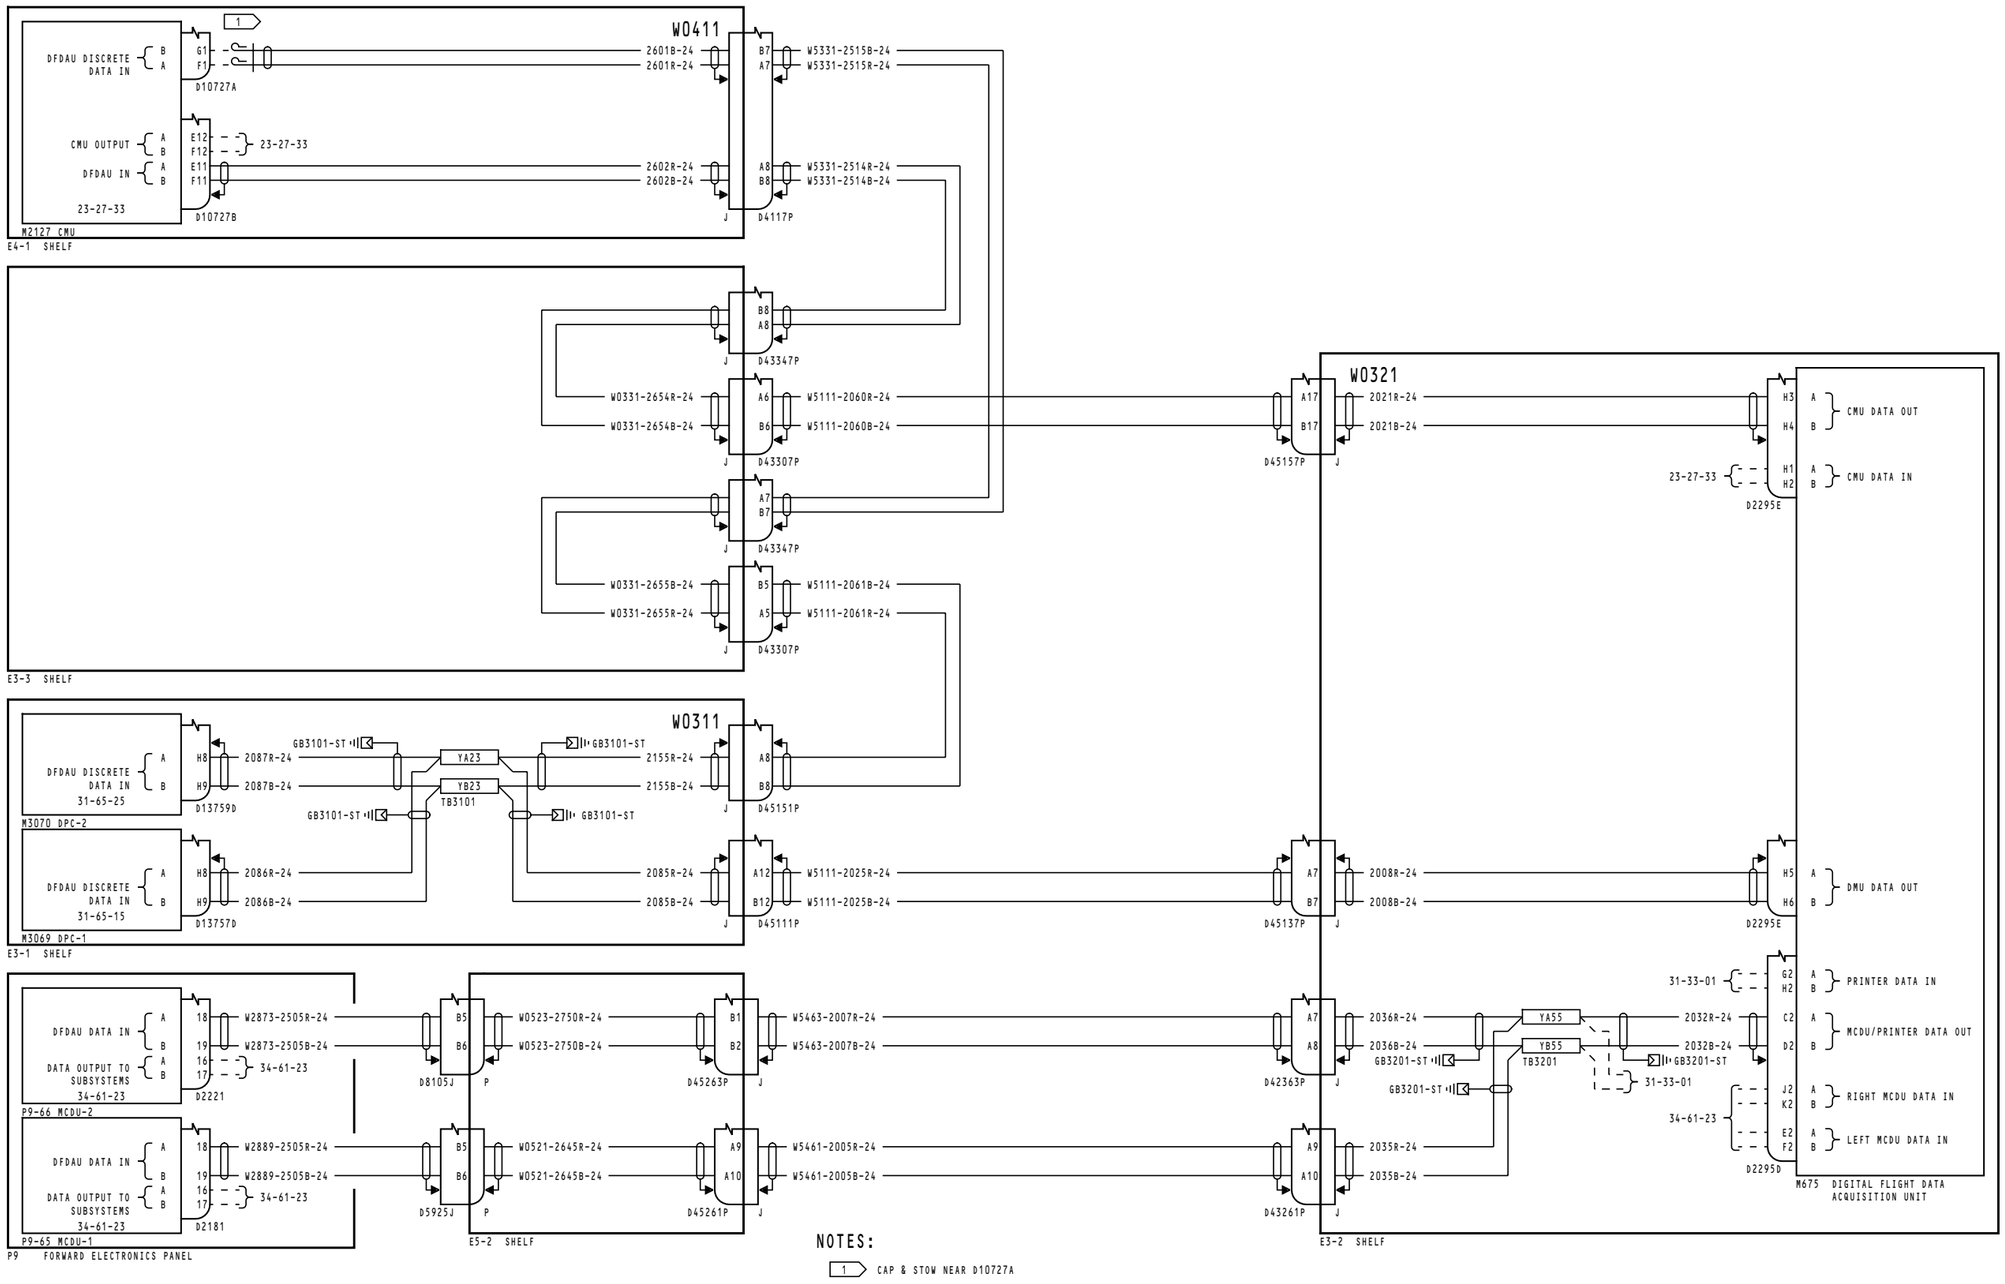

NOTES:

1 CAP & STOW NEAR D10727A

31-35-02


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

55

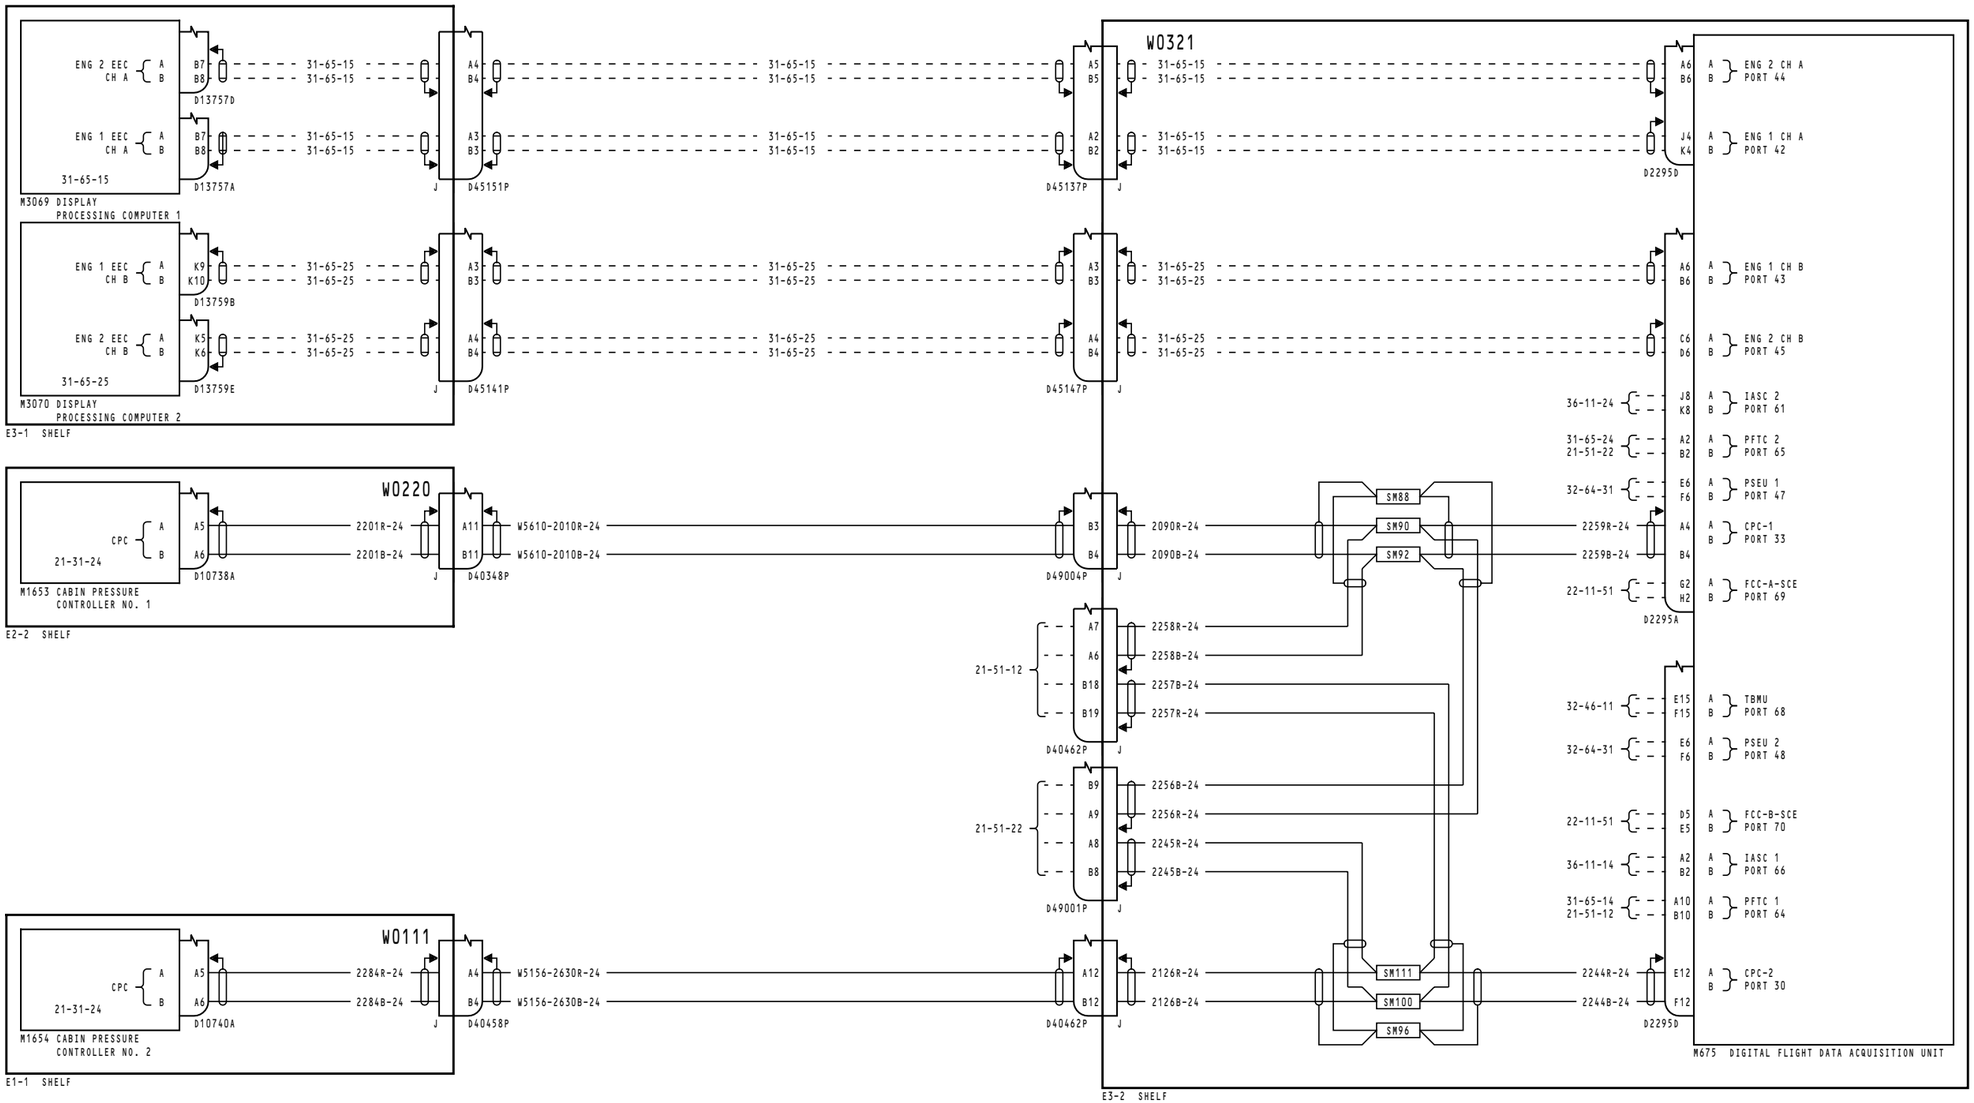

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-35-04

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

38

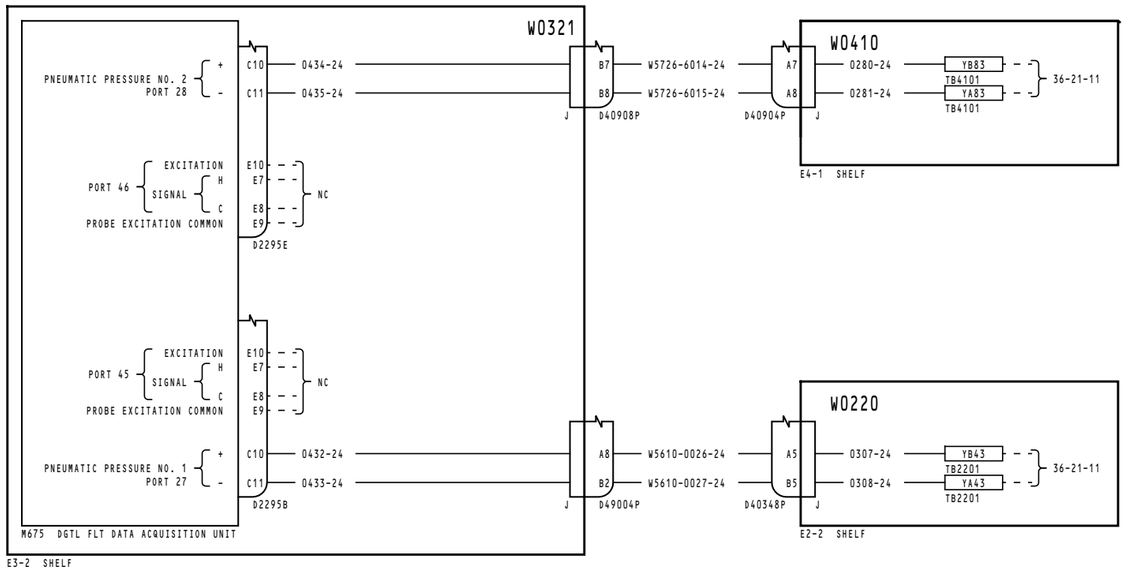


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-35-05

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

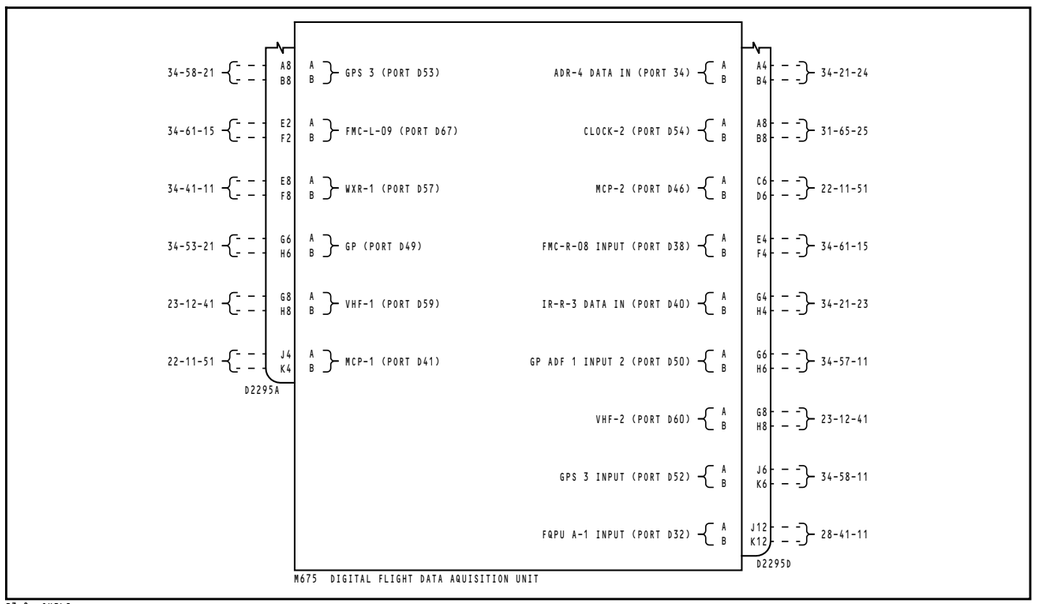

ALL

ACMS DIGITAL INTERFACE GROUP
2

D280AM1215

31-35-07


Page 1
Sheet 1
May 15/2024

31-35-07

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


737-8 WIRING DIAGRAM MANUAL

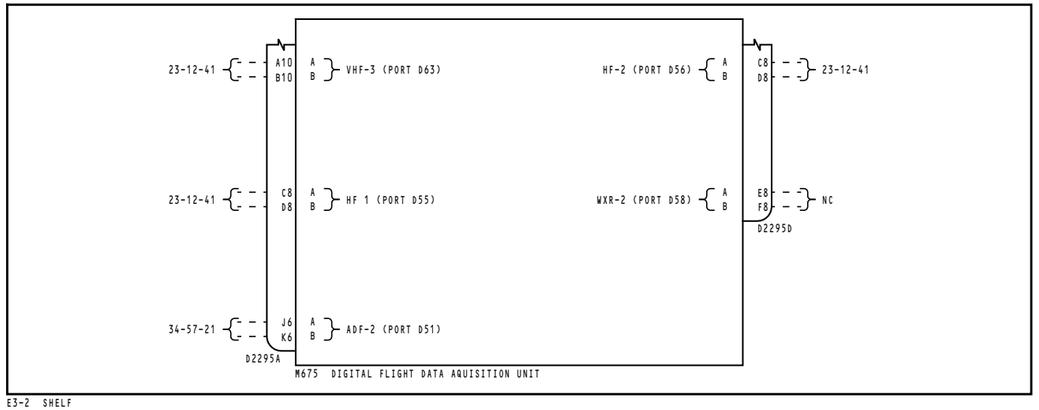

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-35-07

Page 1
Sheet 2
May 15/2024

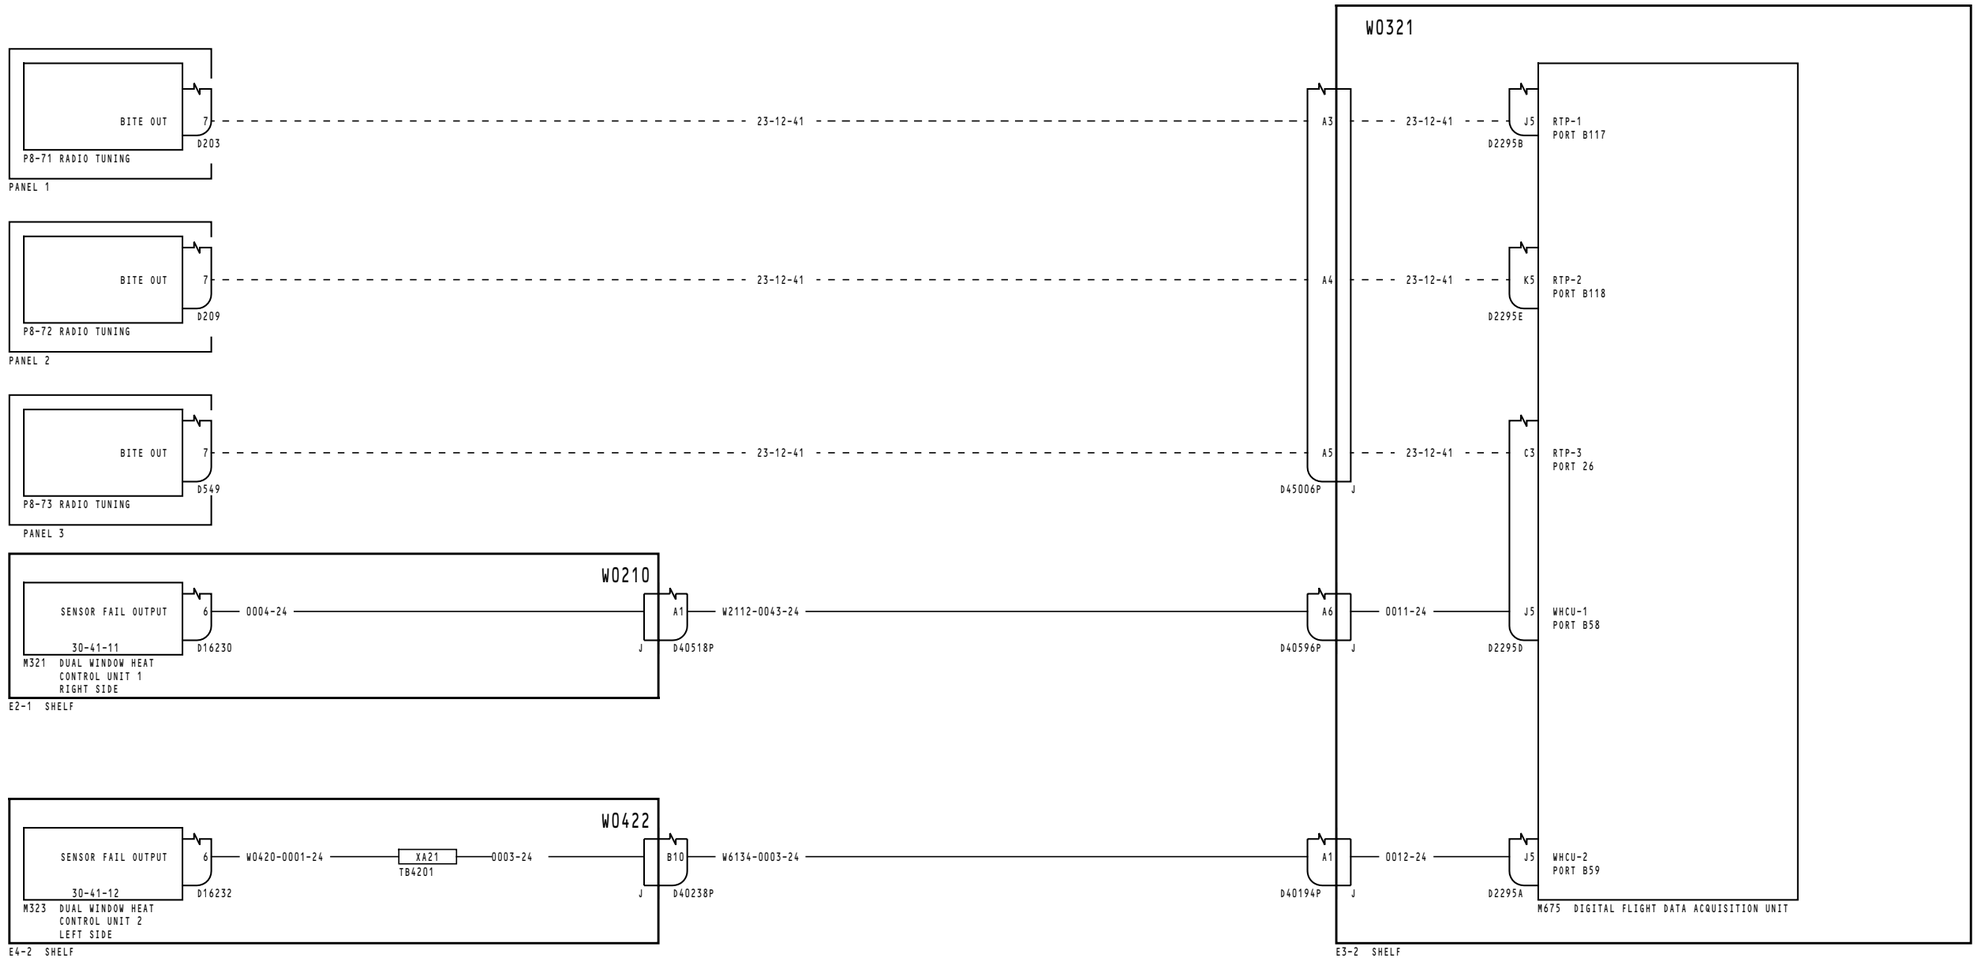

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-35-08

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
13

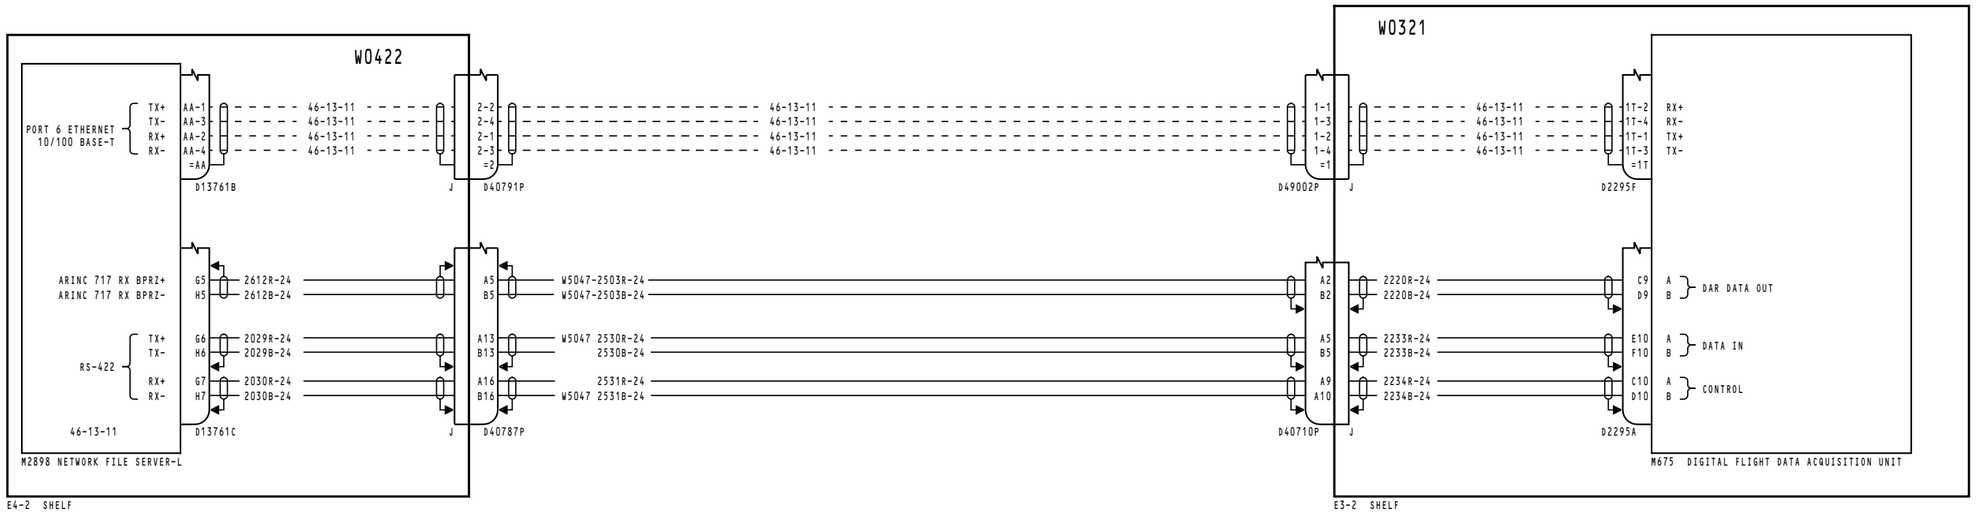

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-35-09

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
117

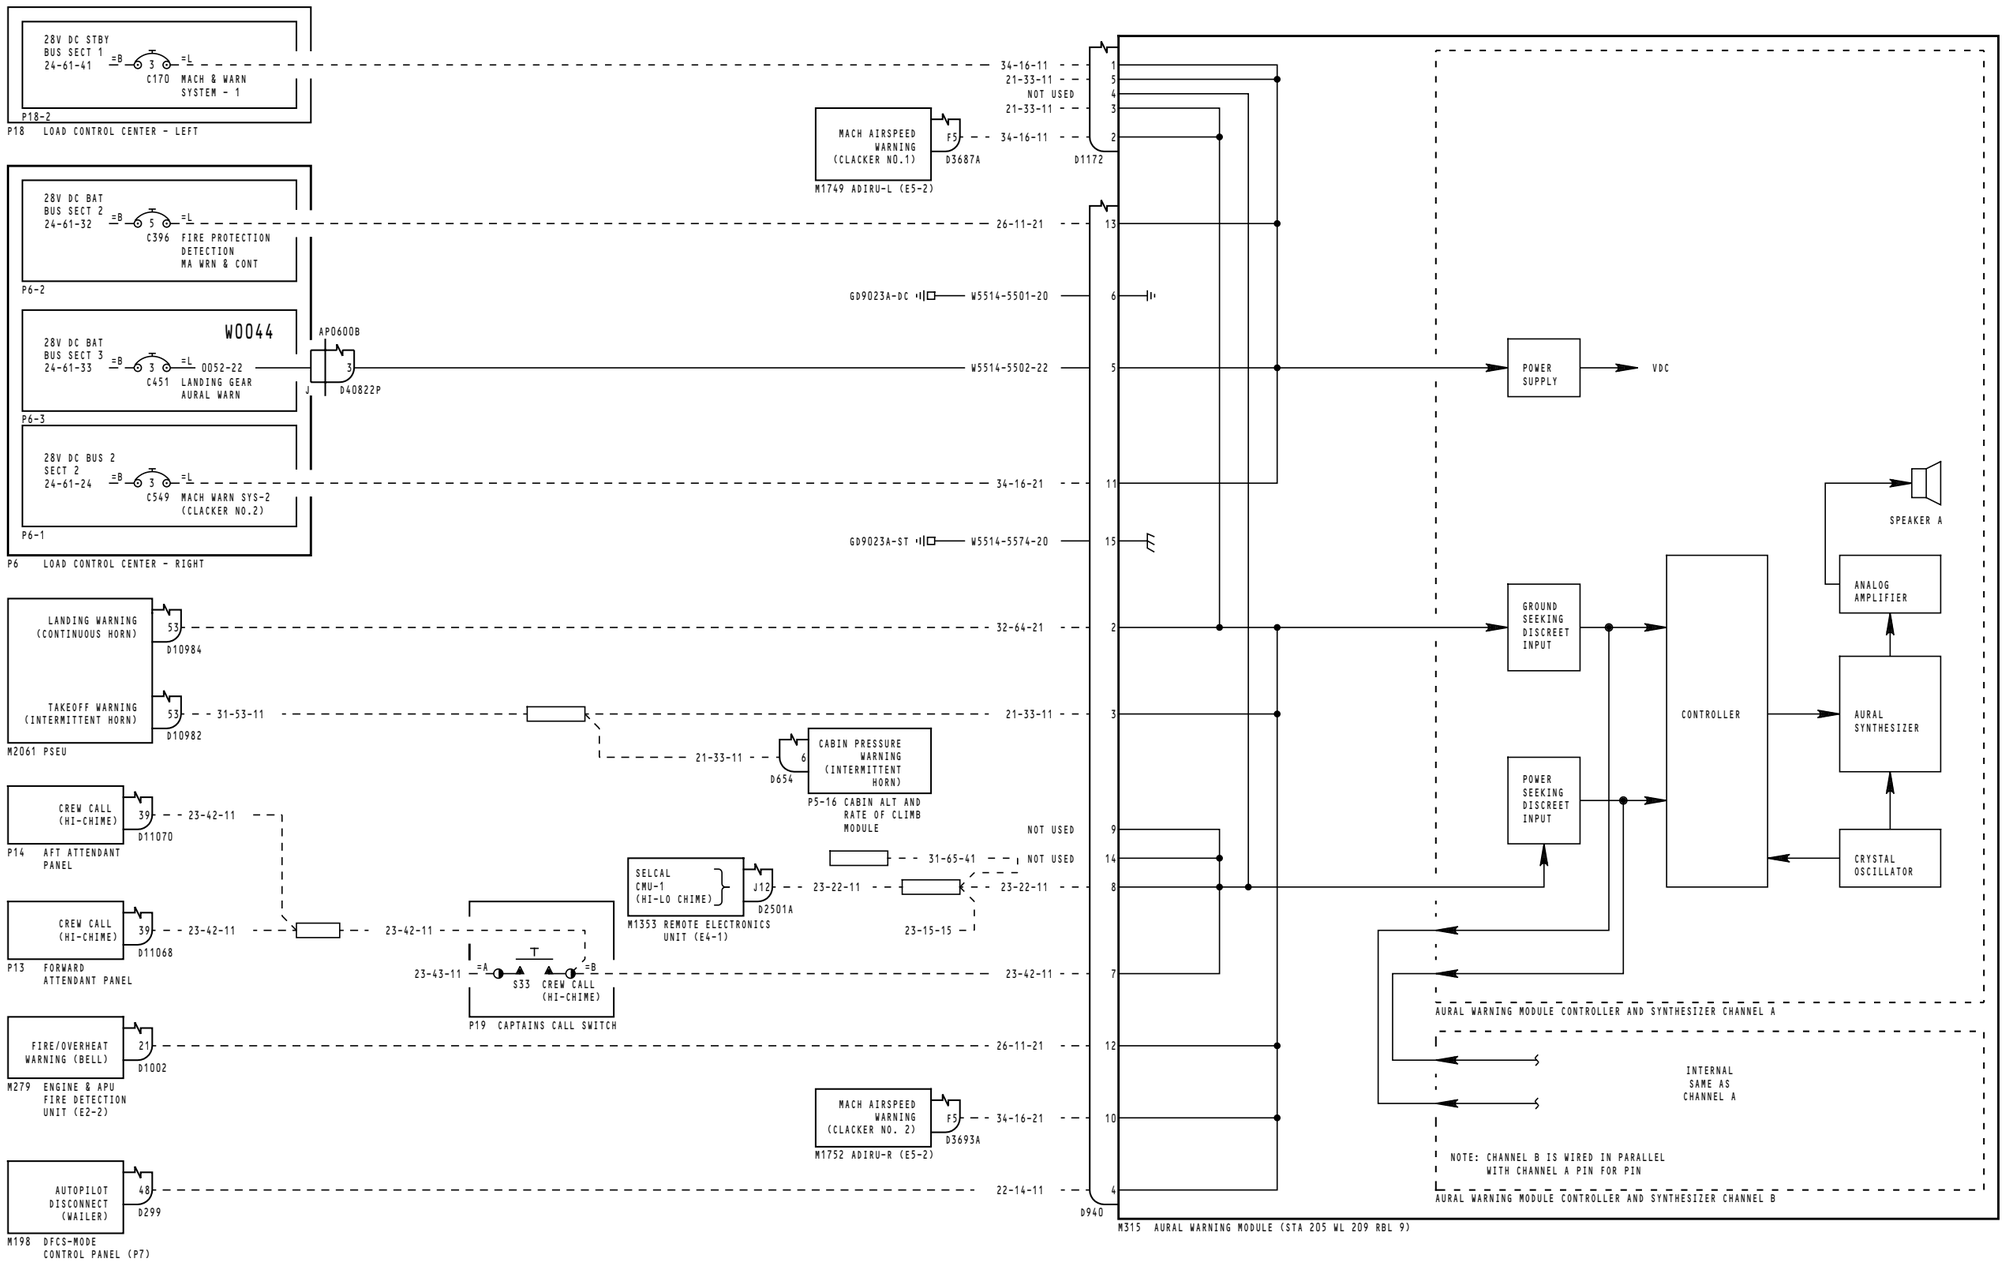

31-51-11


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

23

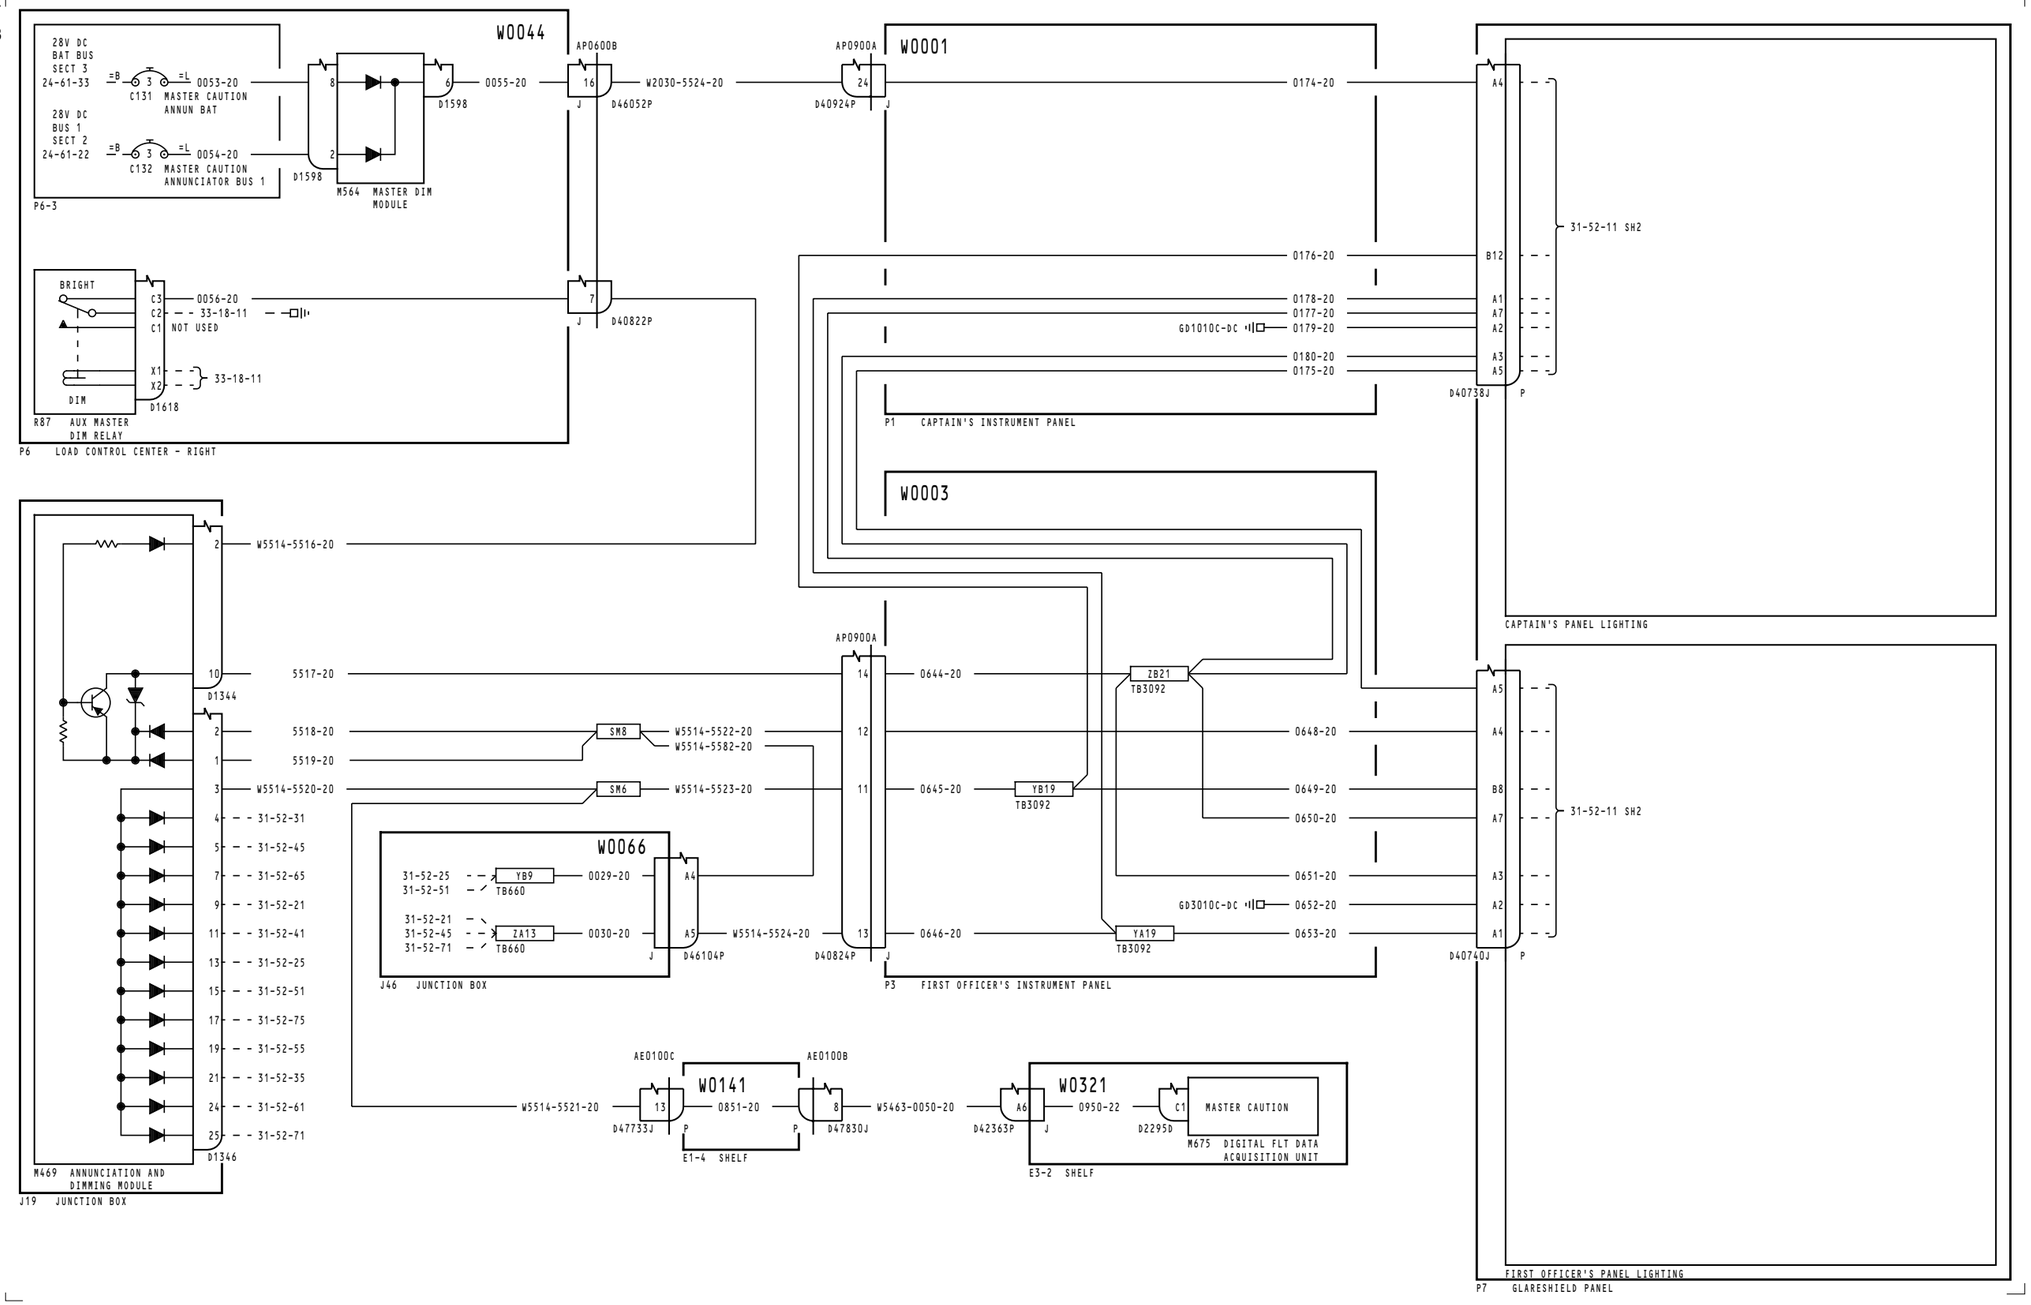


ALL	MASTER CAUTION SYSTEM- POWER & CONTROL D280AM1215	31-52-11 Page 1 Sheet 1 May 15/2024

31-52-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

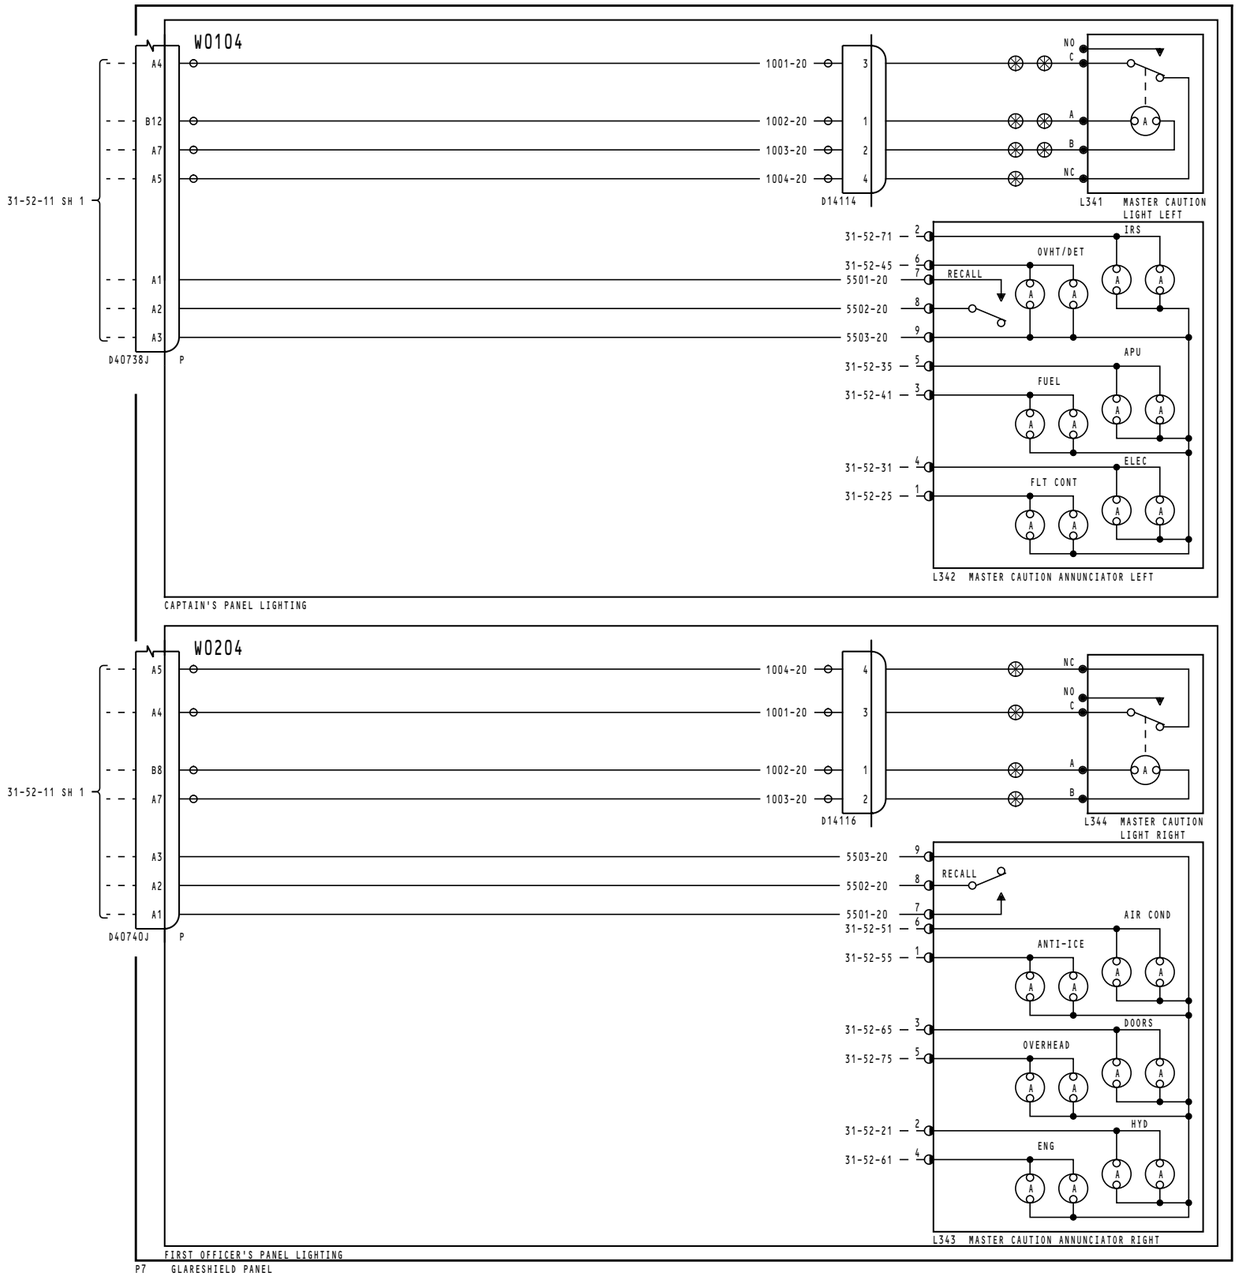


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

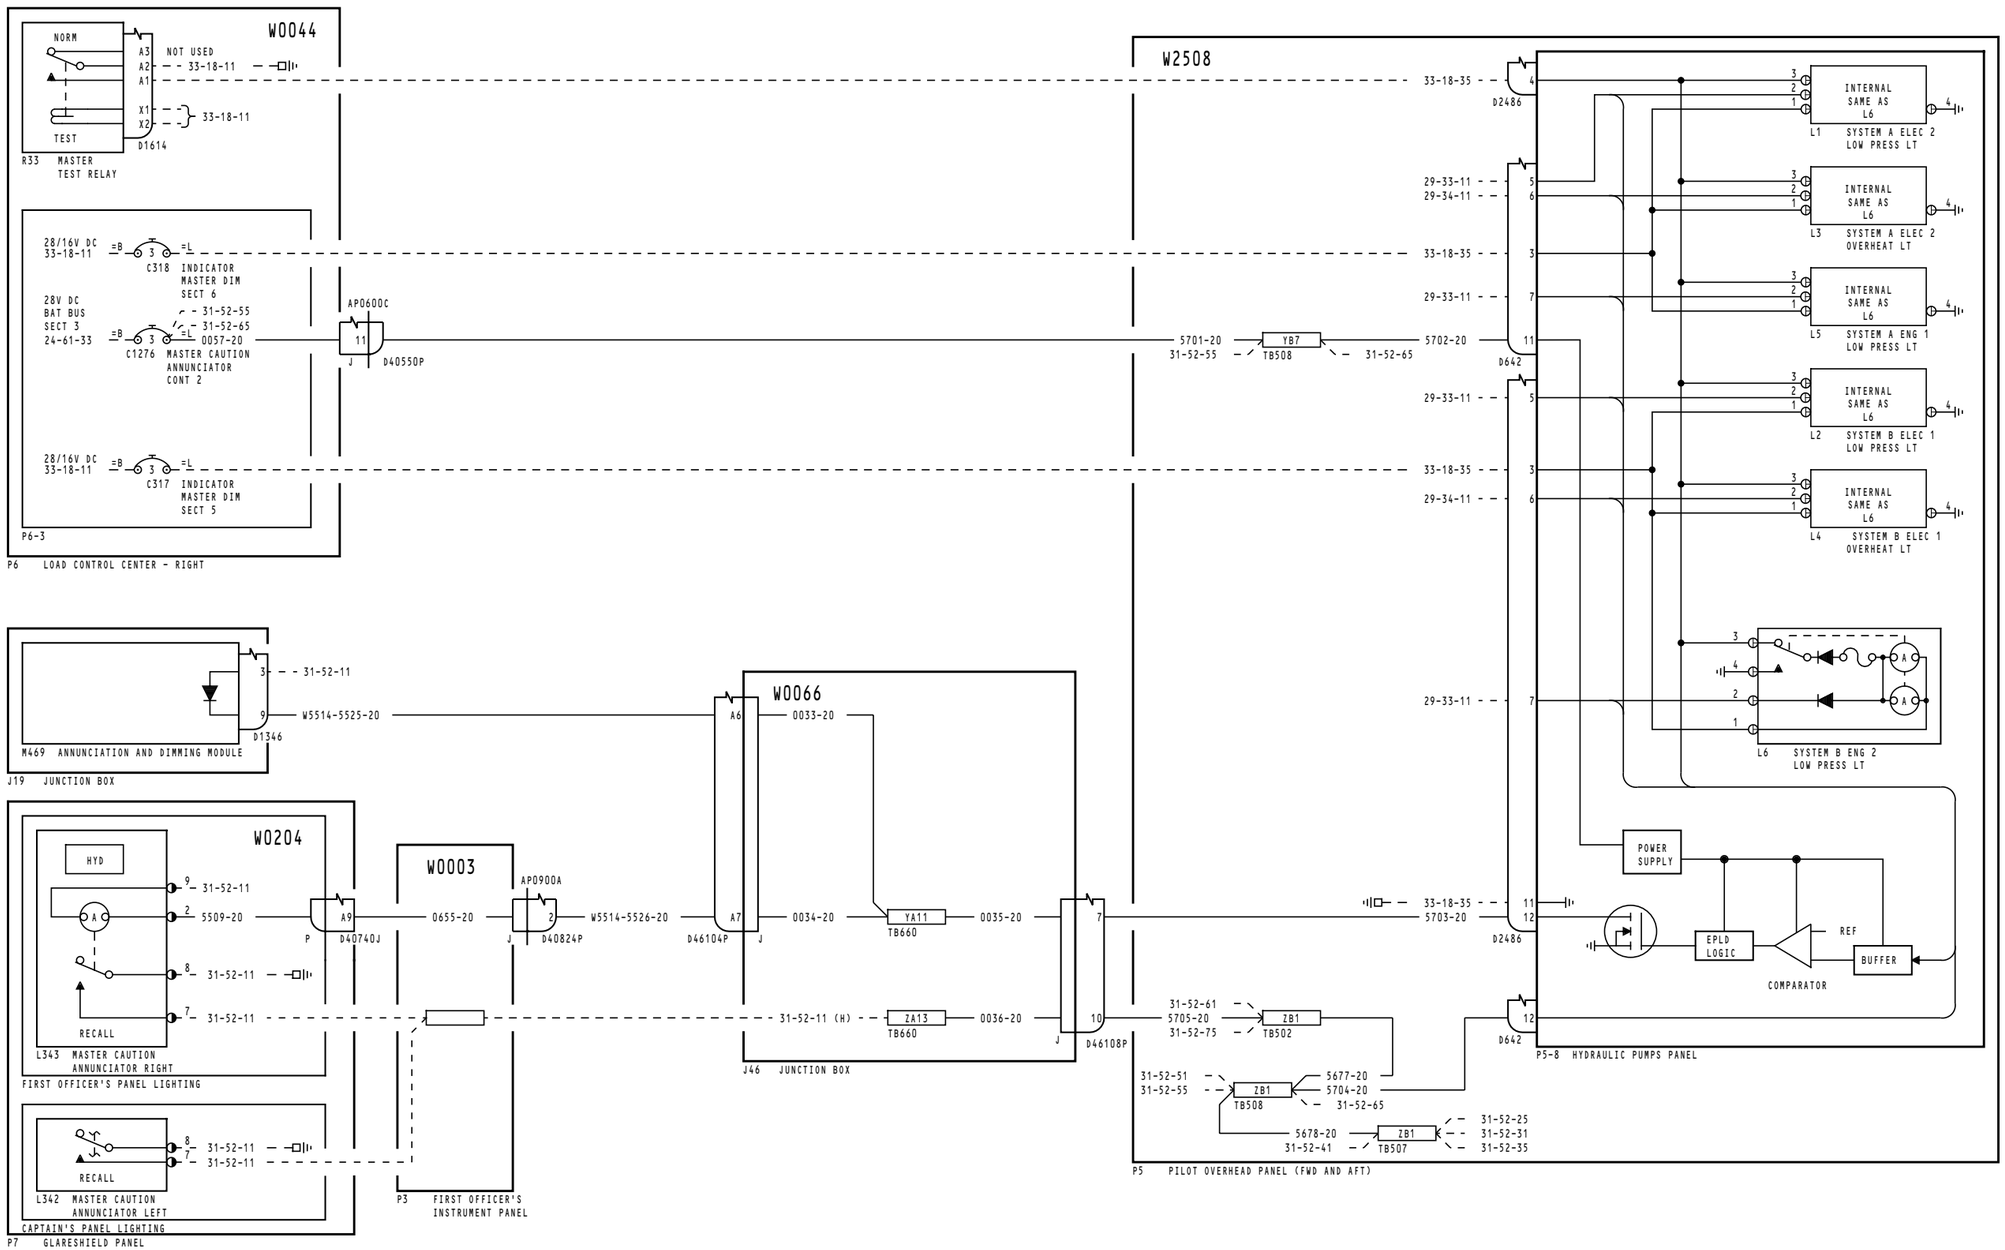


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

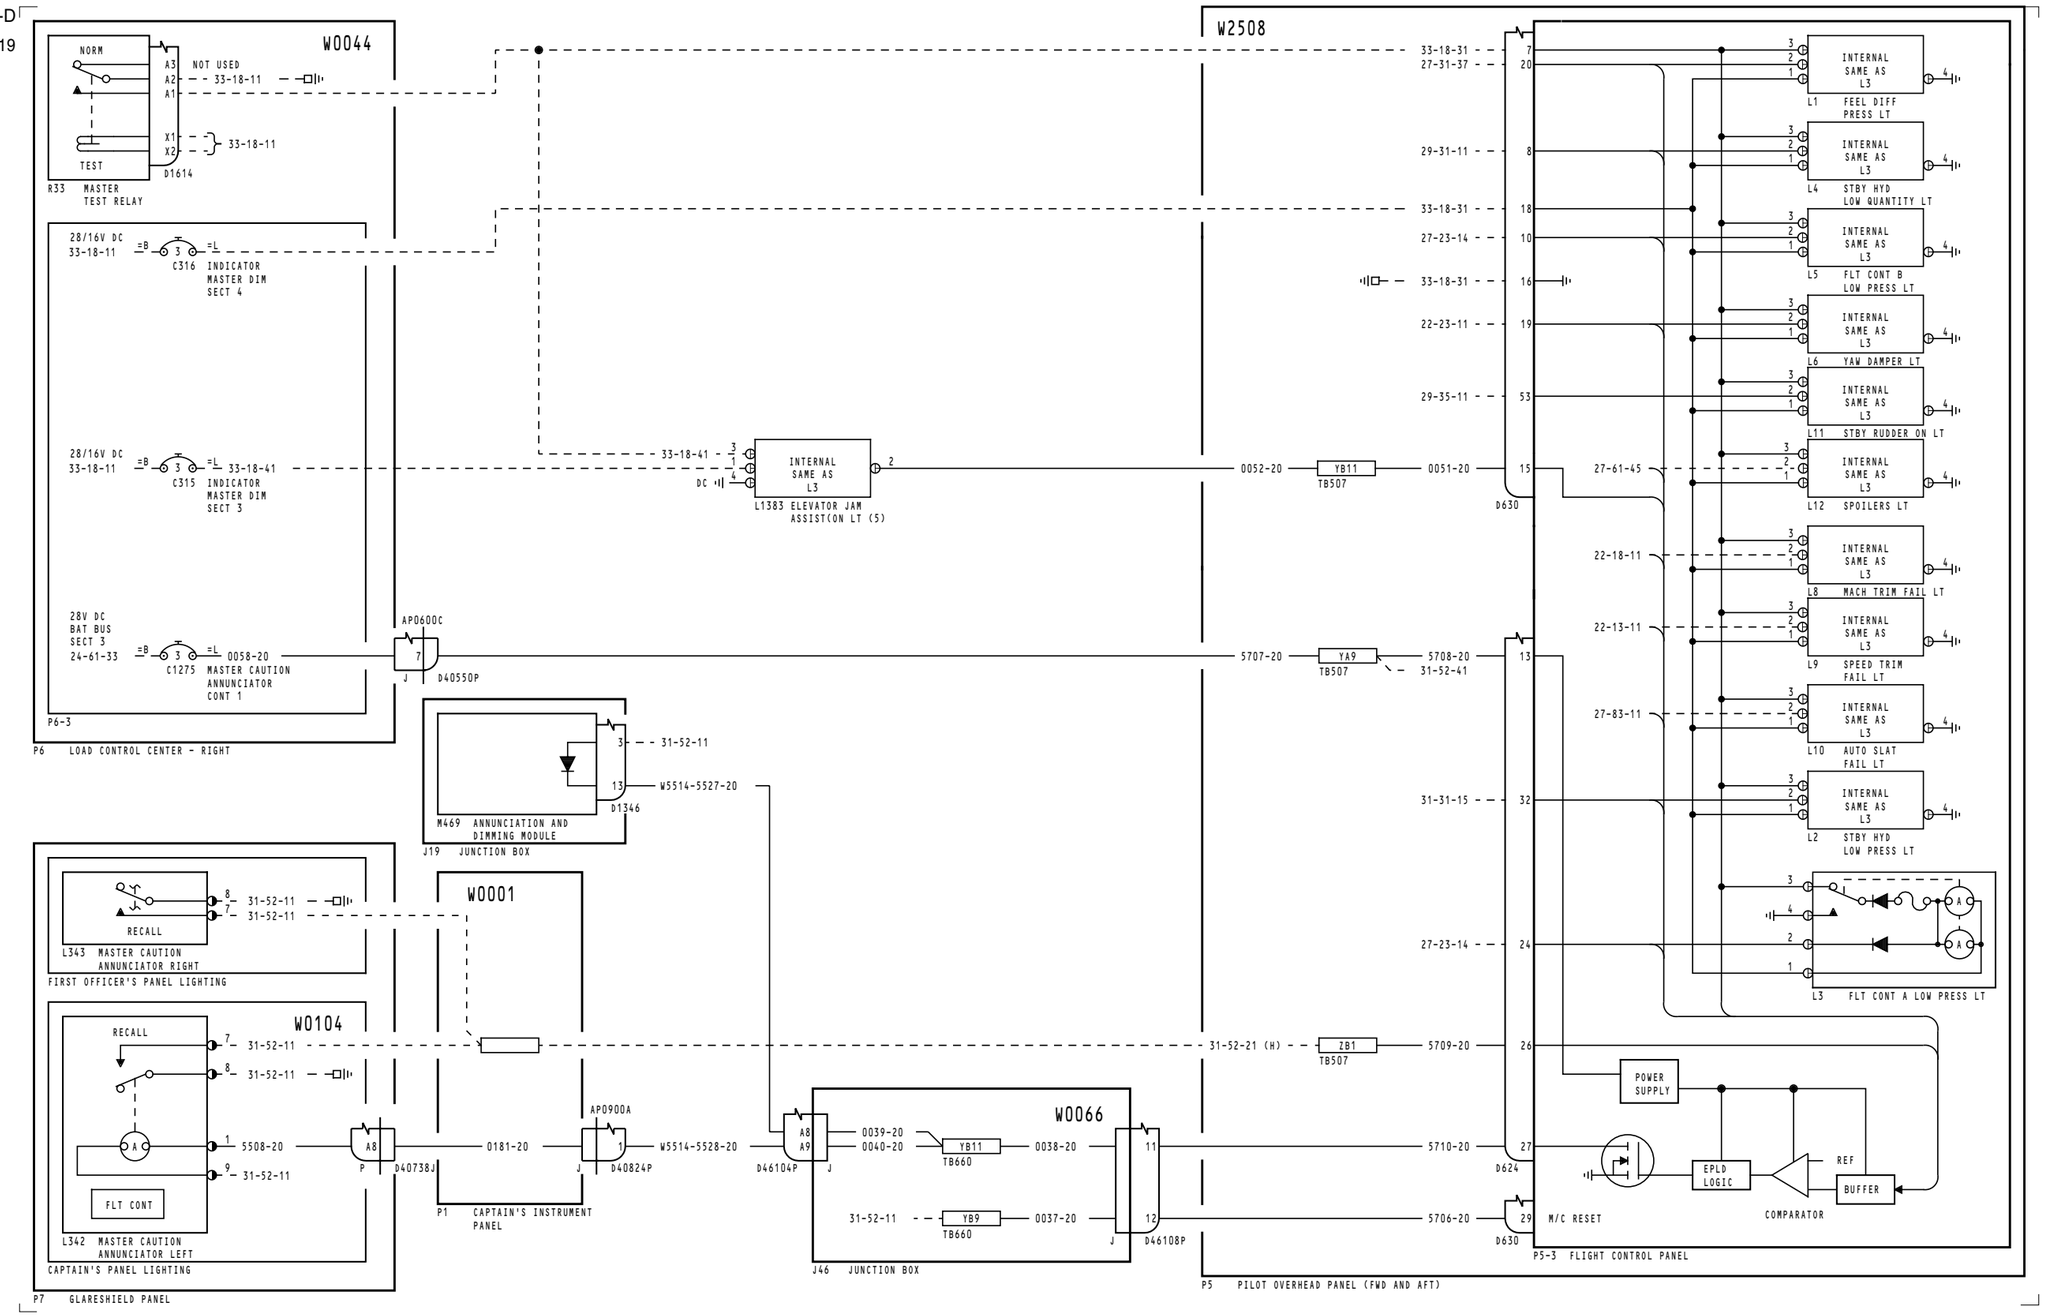


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-25

Page 1

May 15/2024

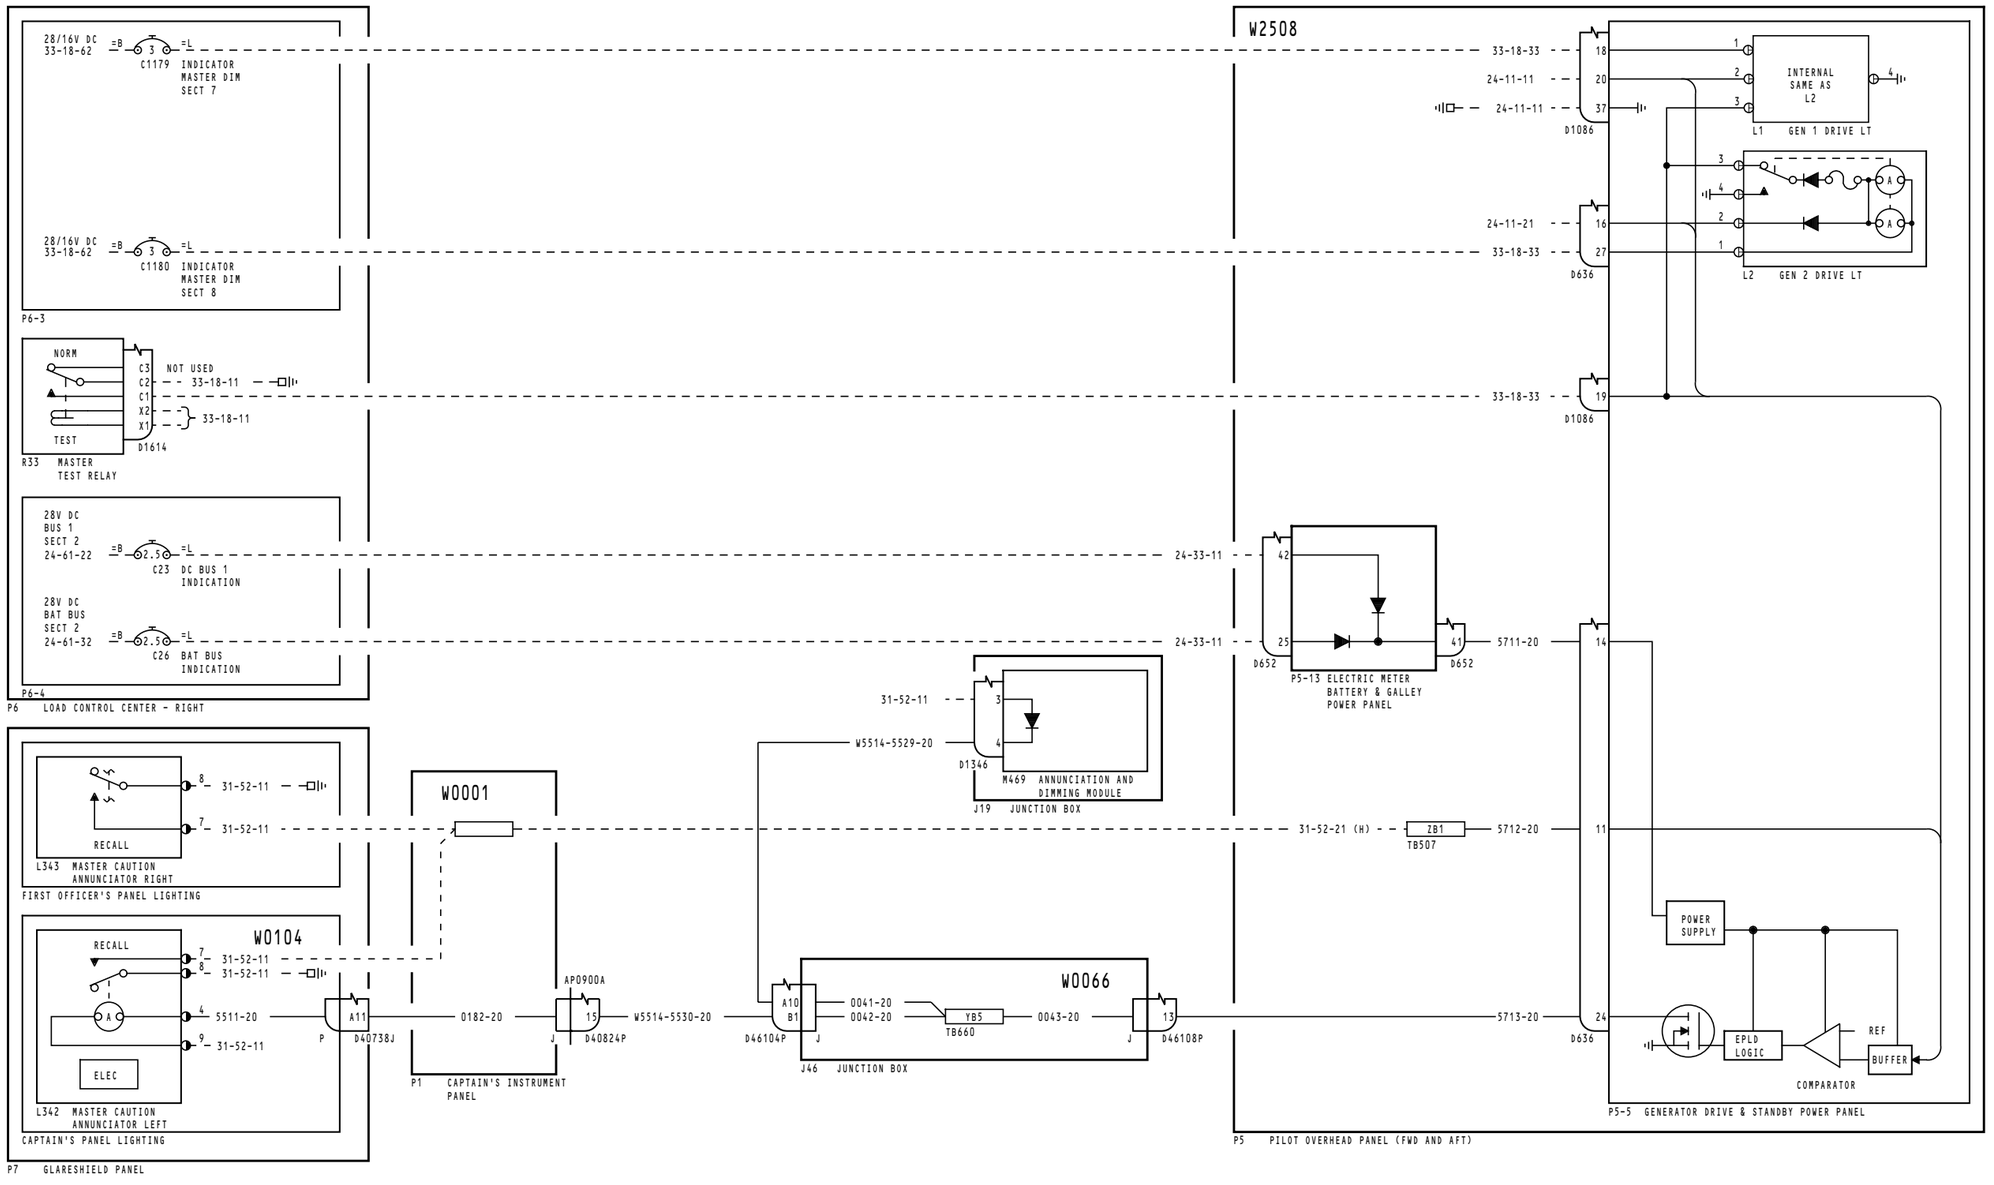


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

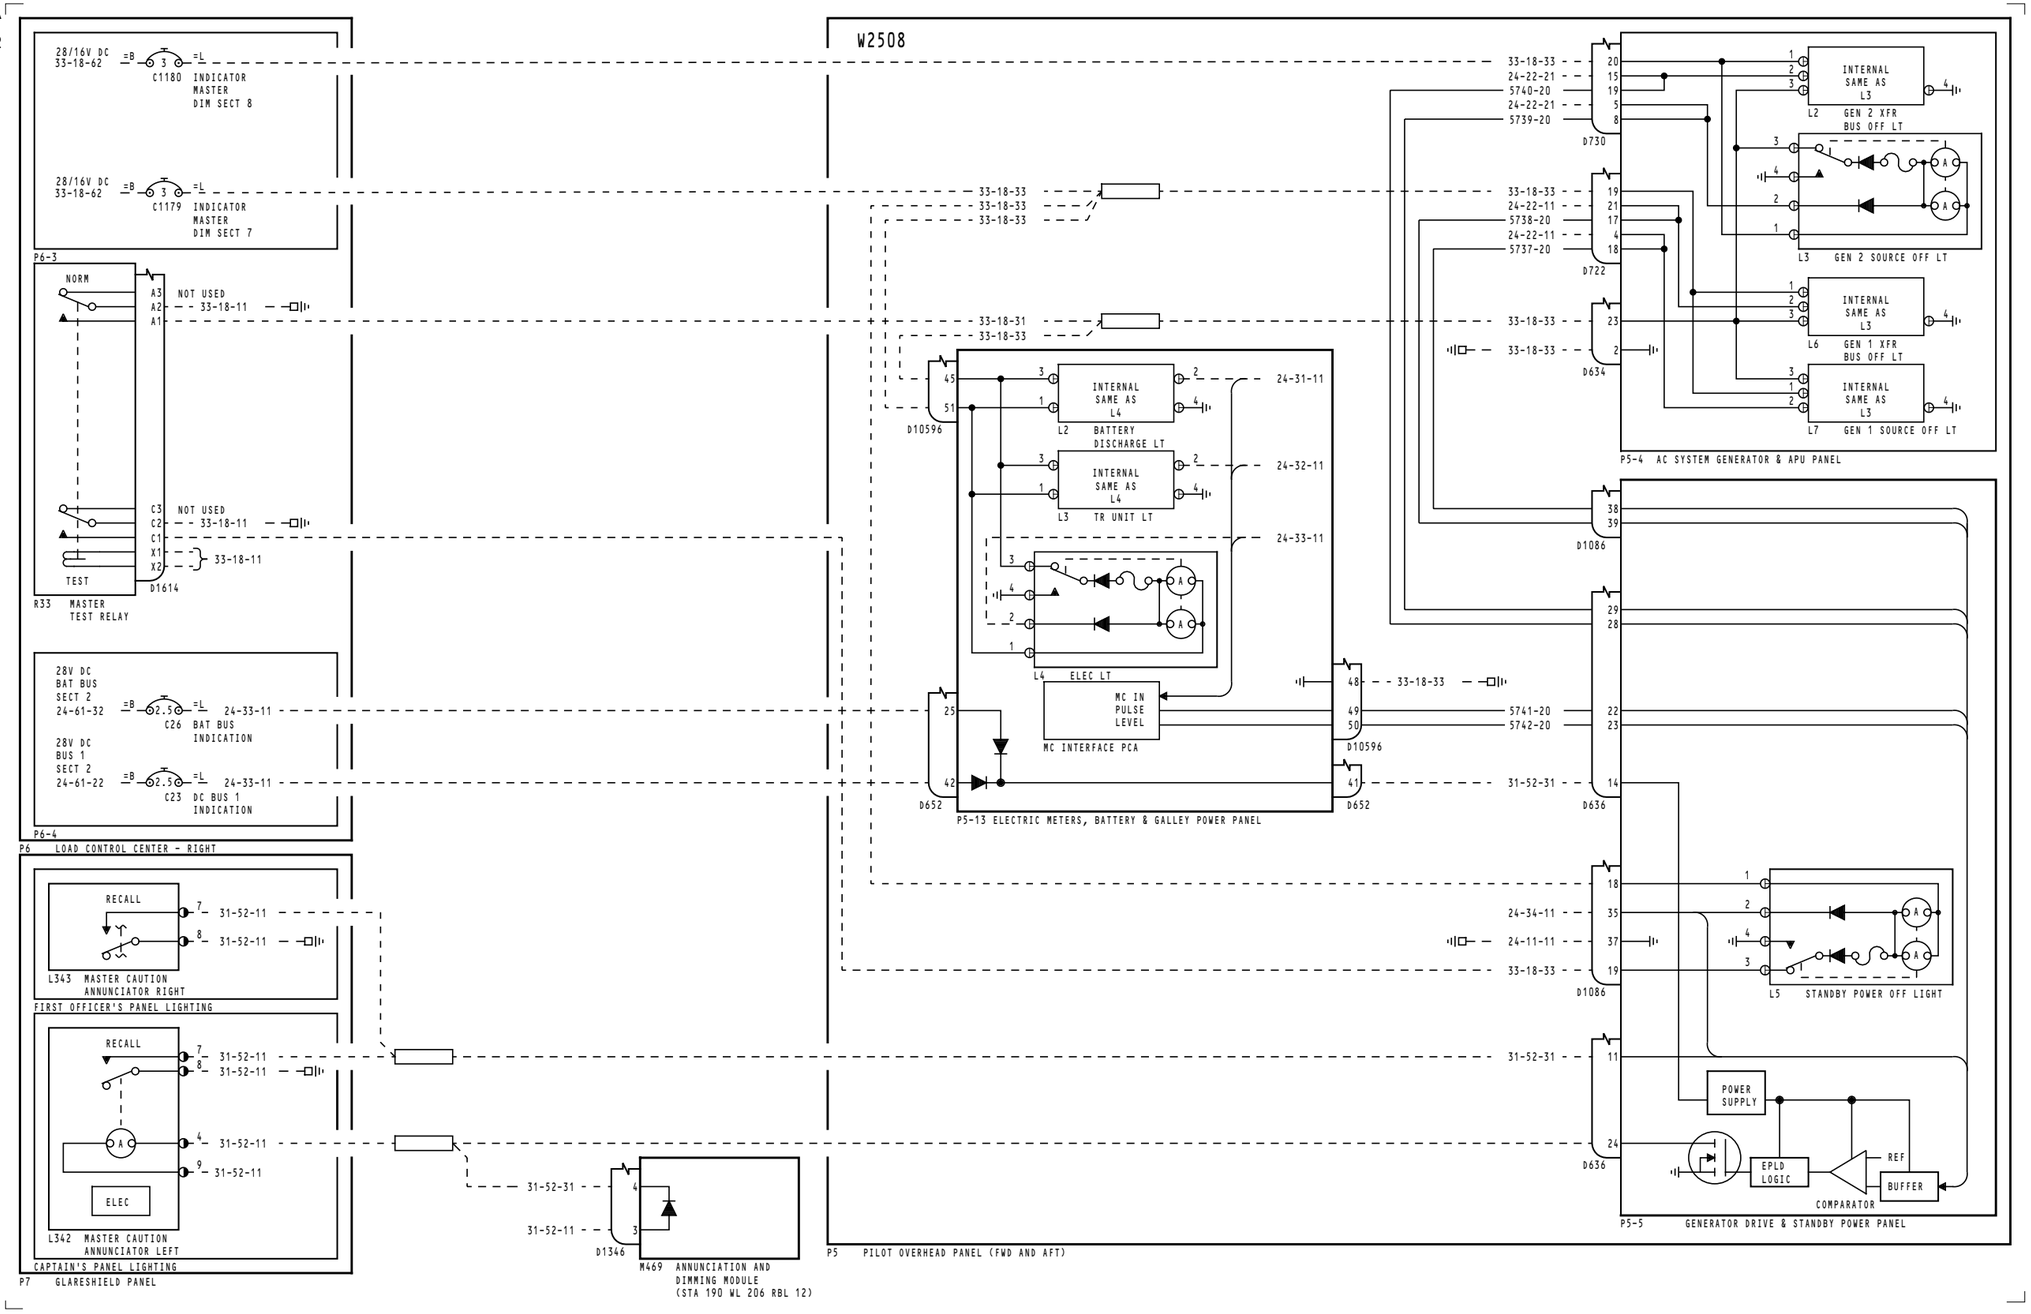

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-52-32

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
7

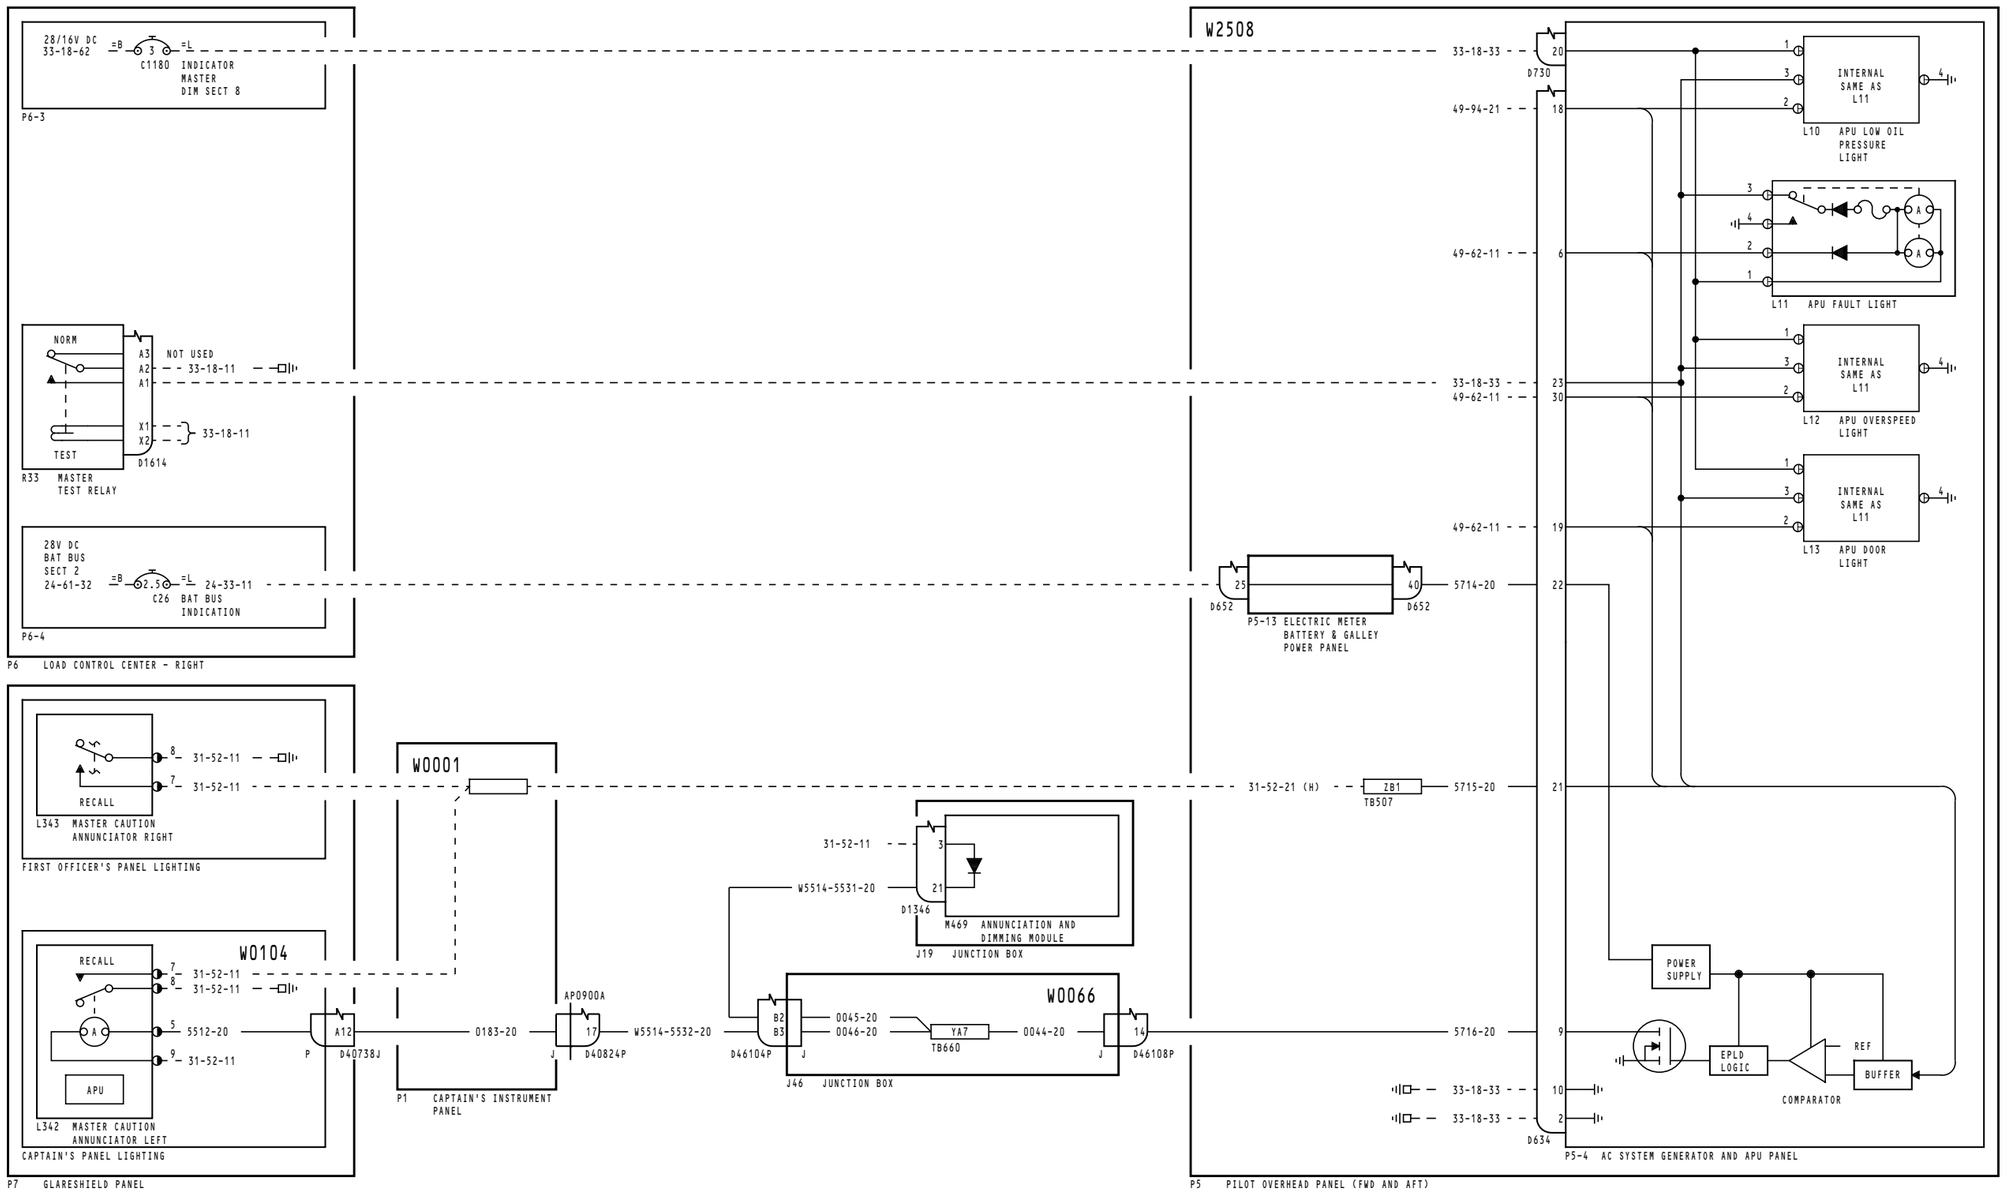


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-35

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

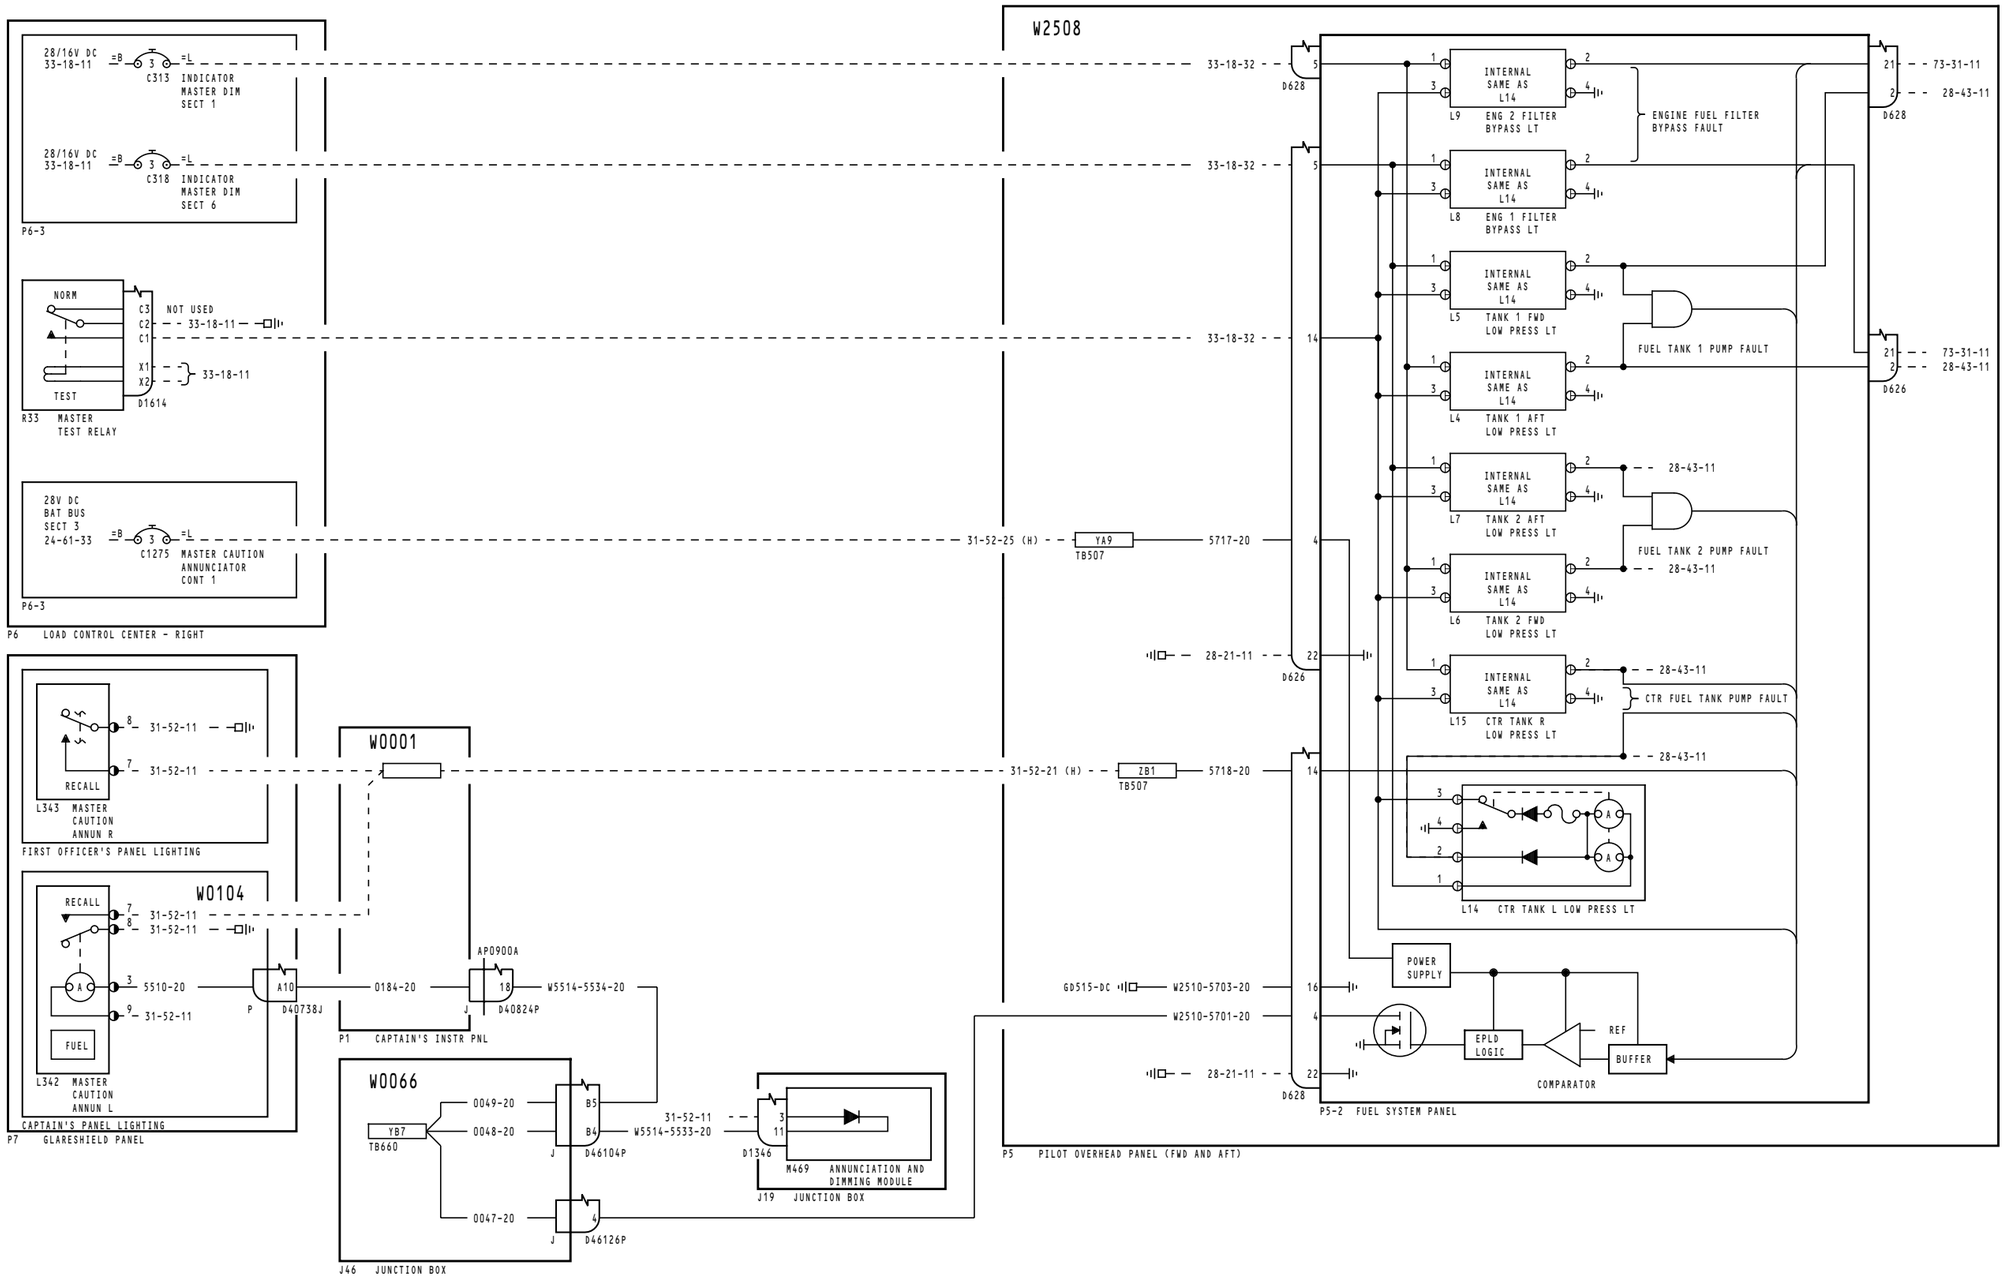


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-41

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

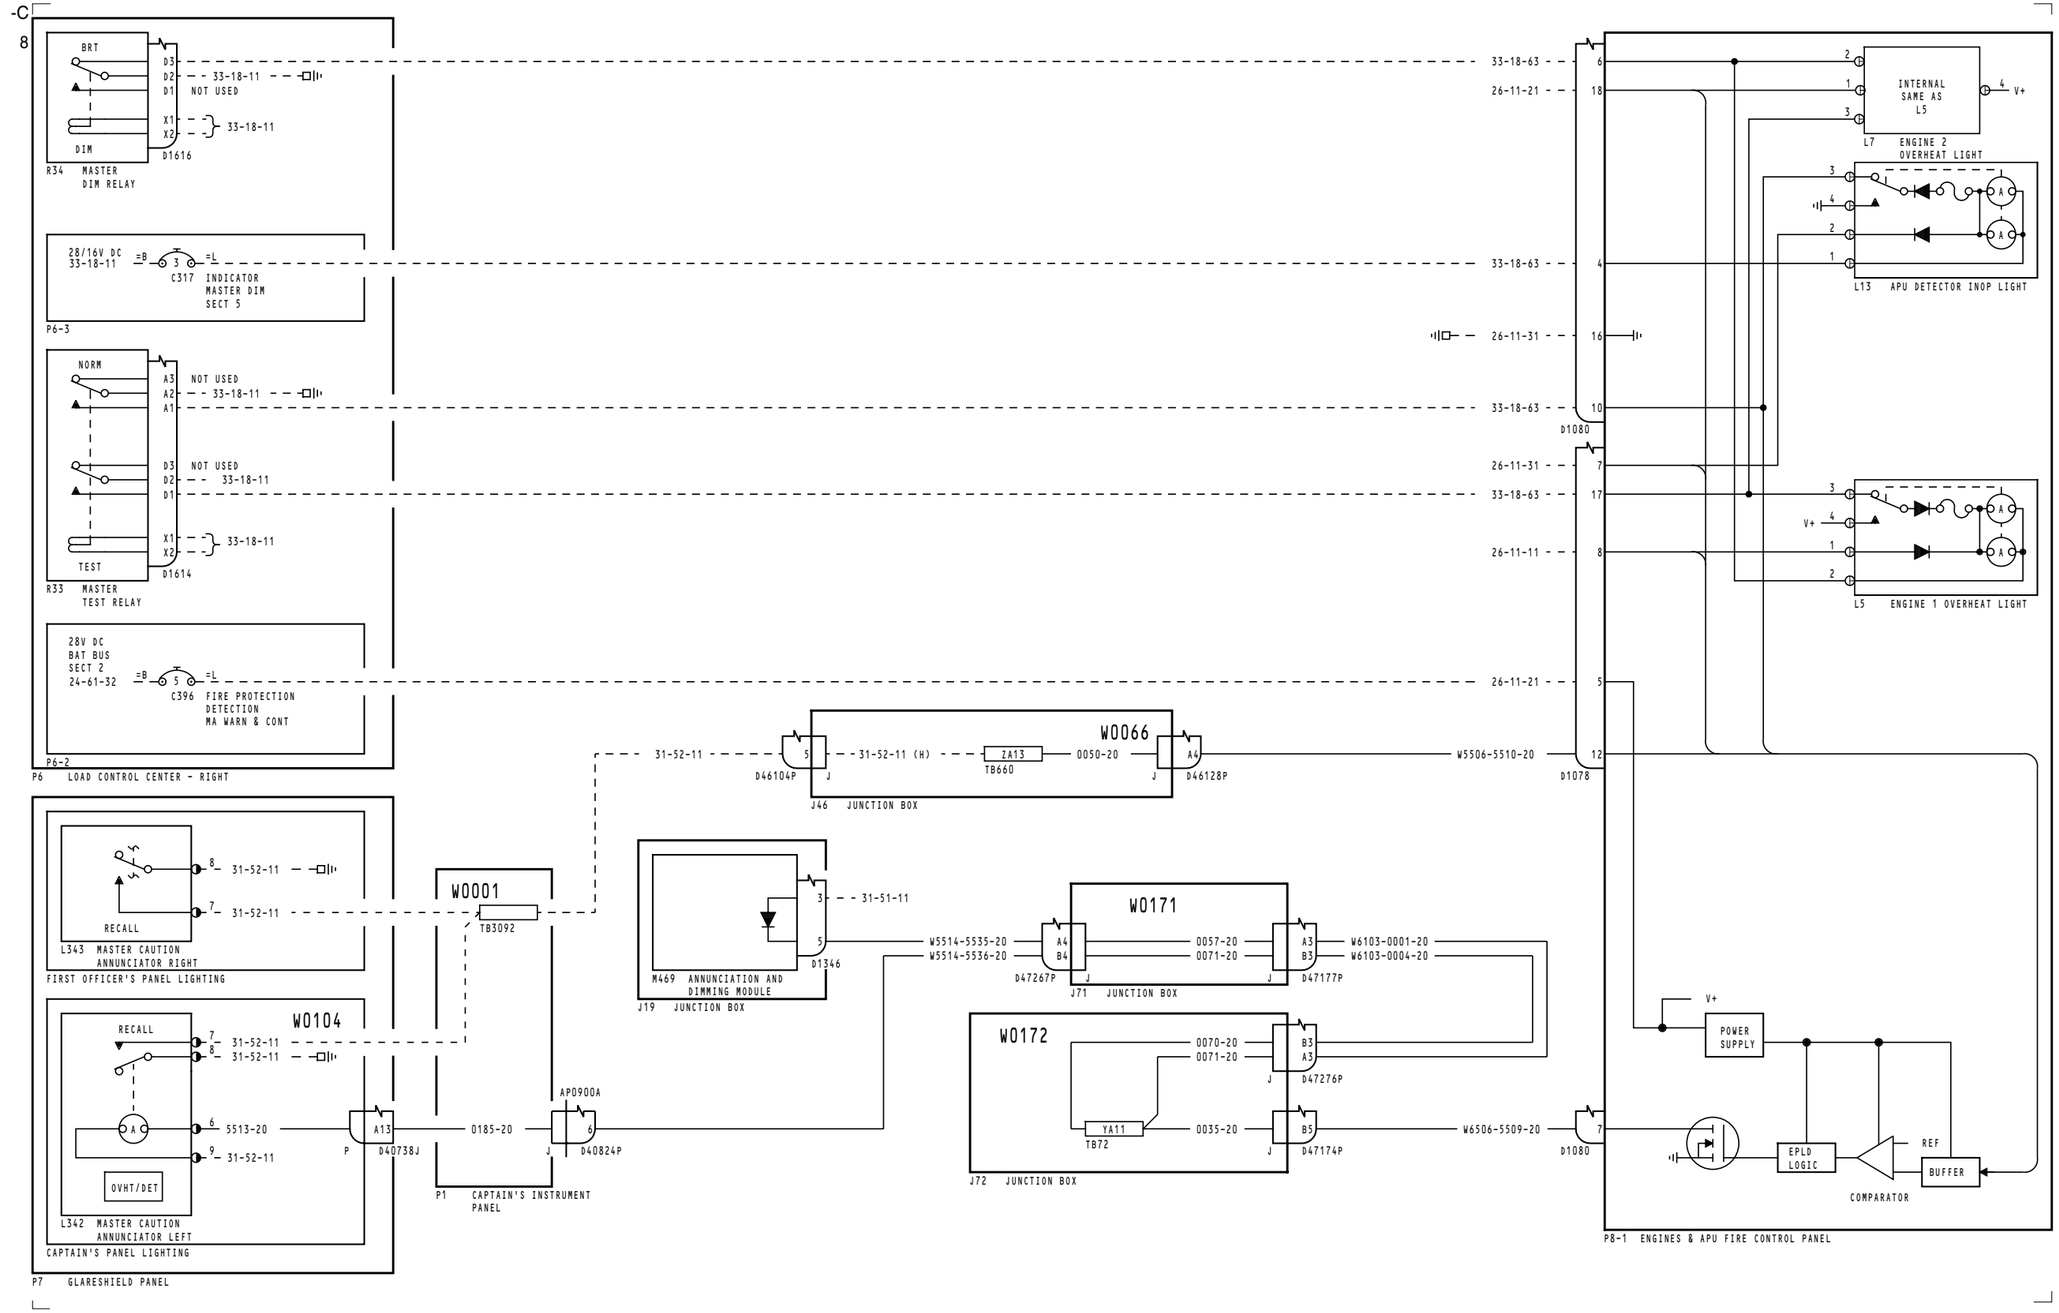

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-52-45

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-D
22

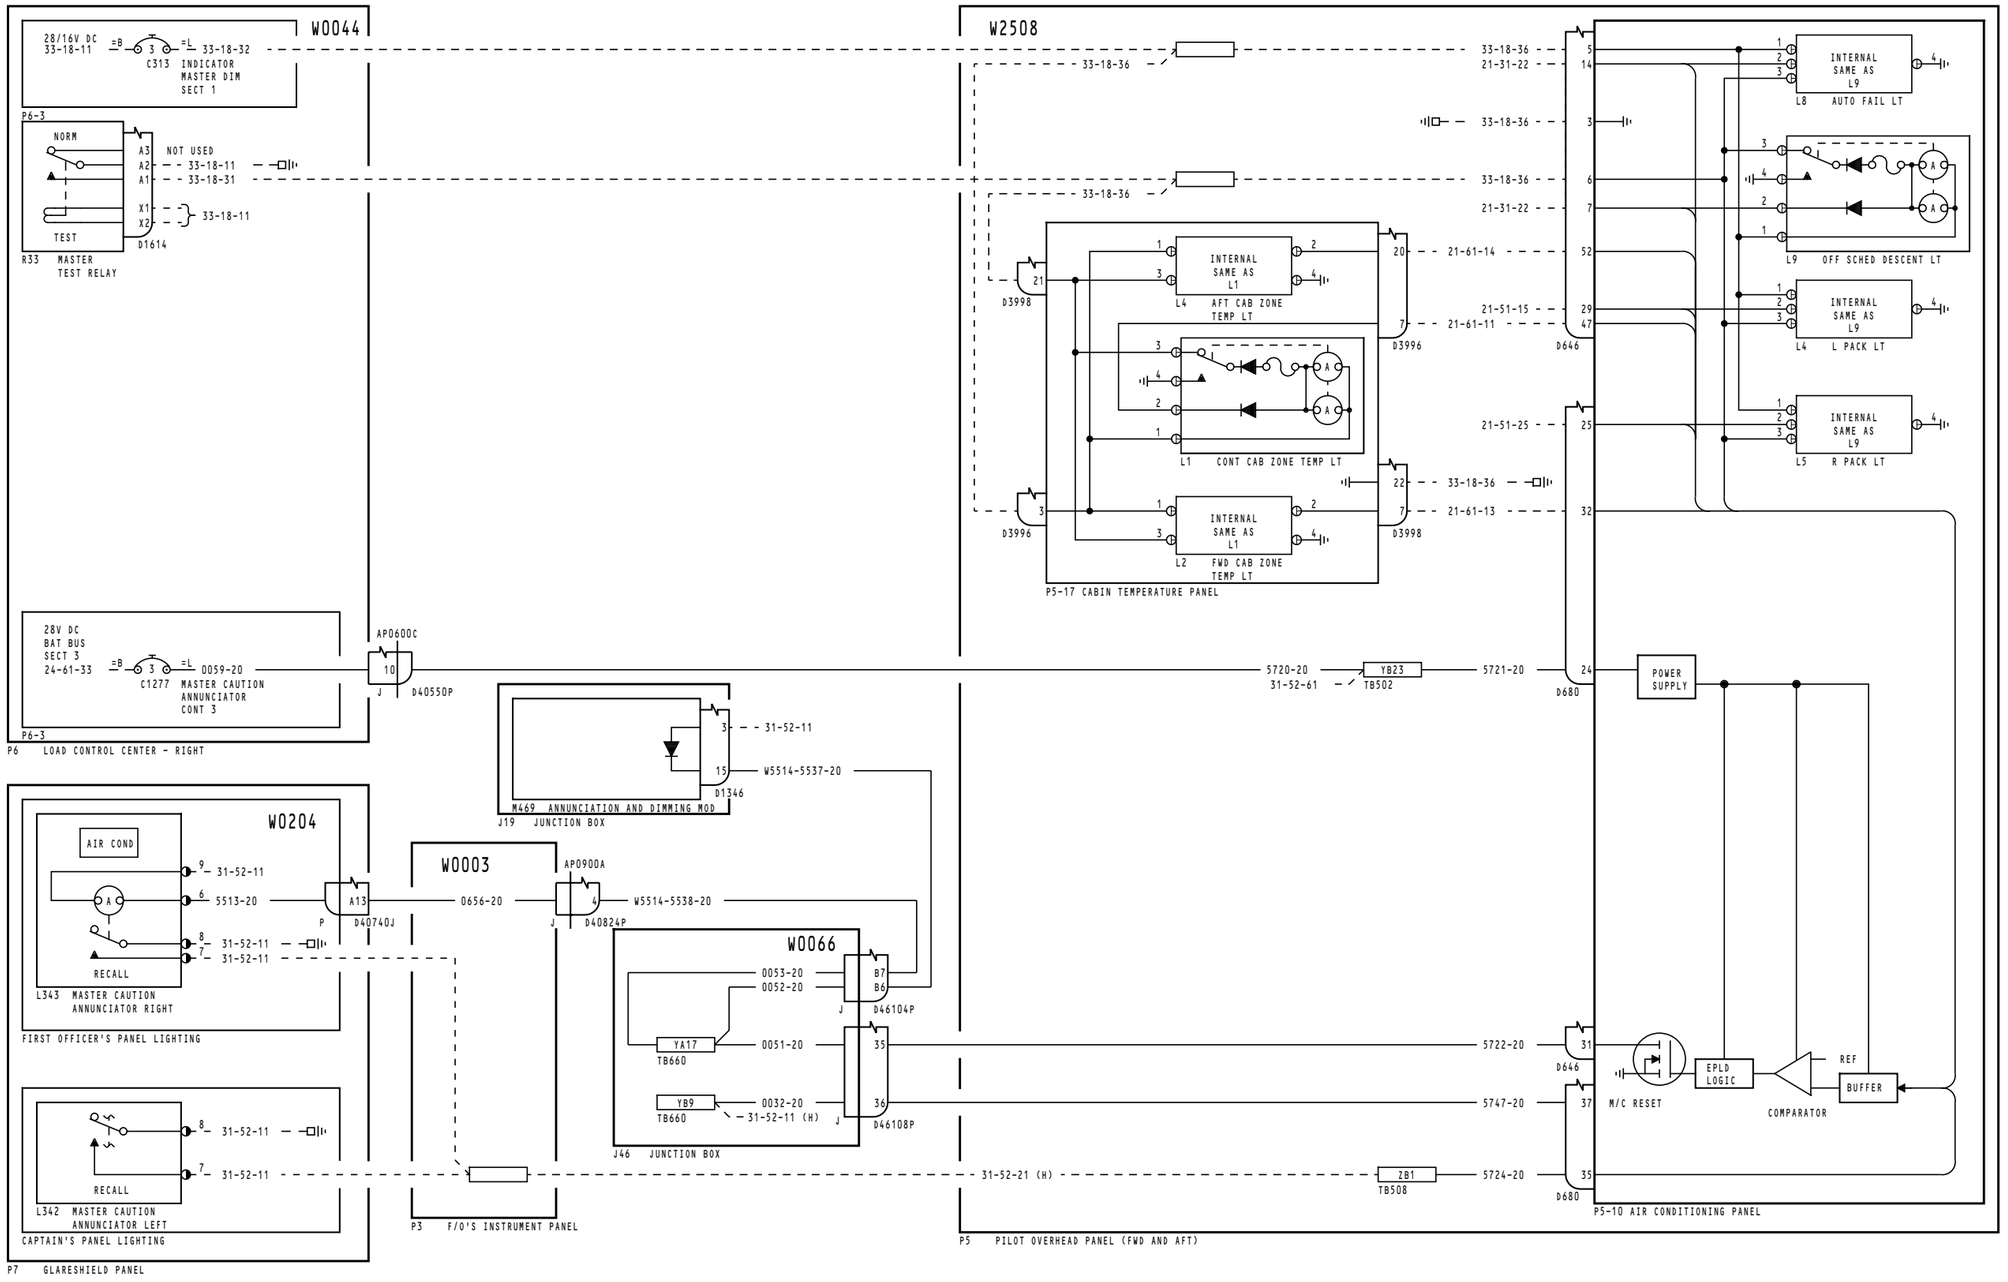


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-51

Page 1

Nov 14/2025

737-8 WIRING DIAGRAM MANUAL

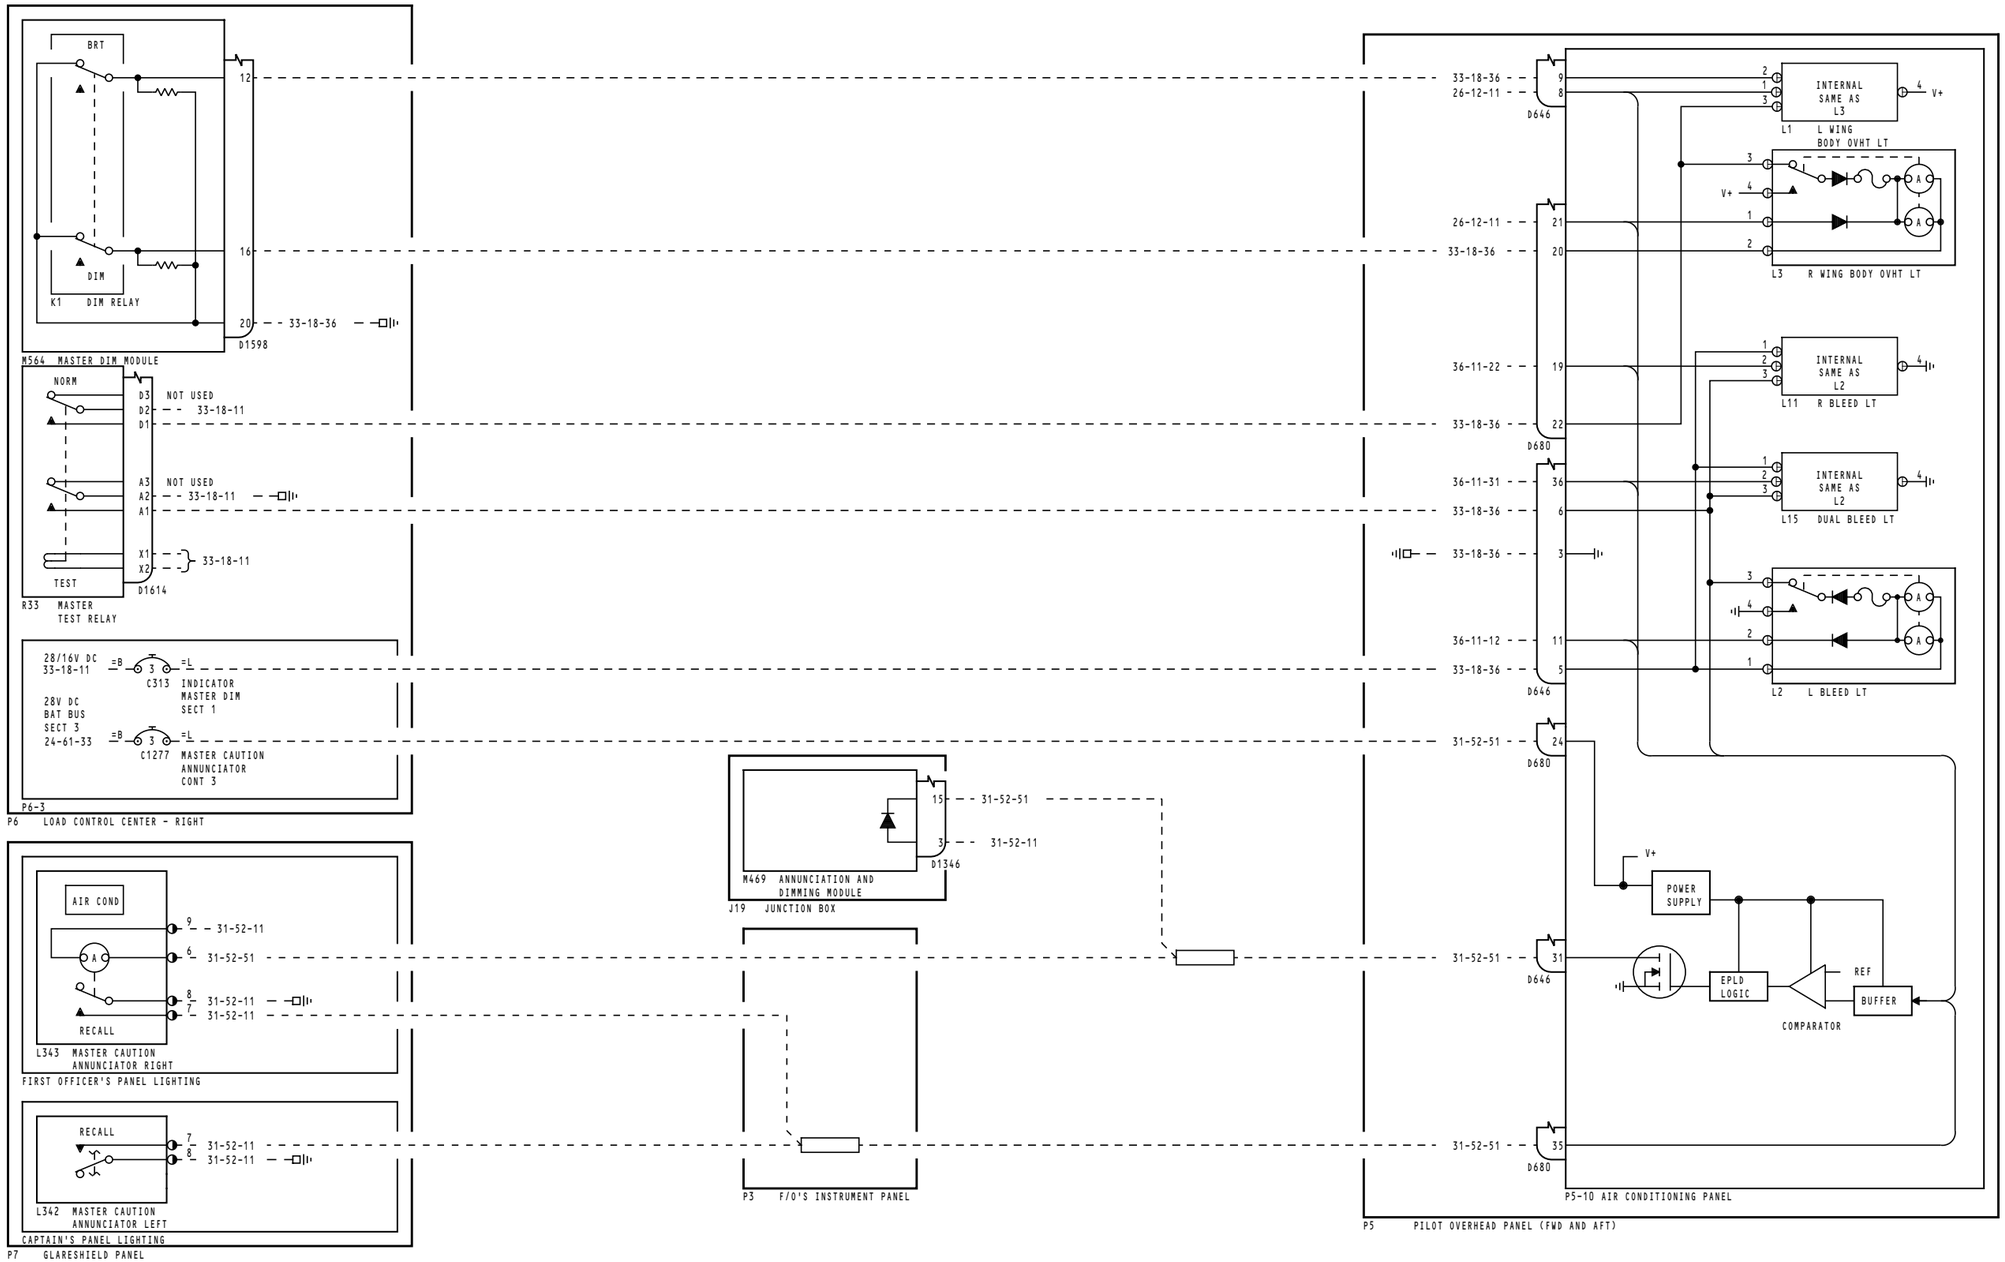


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-52

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

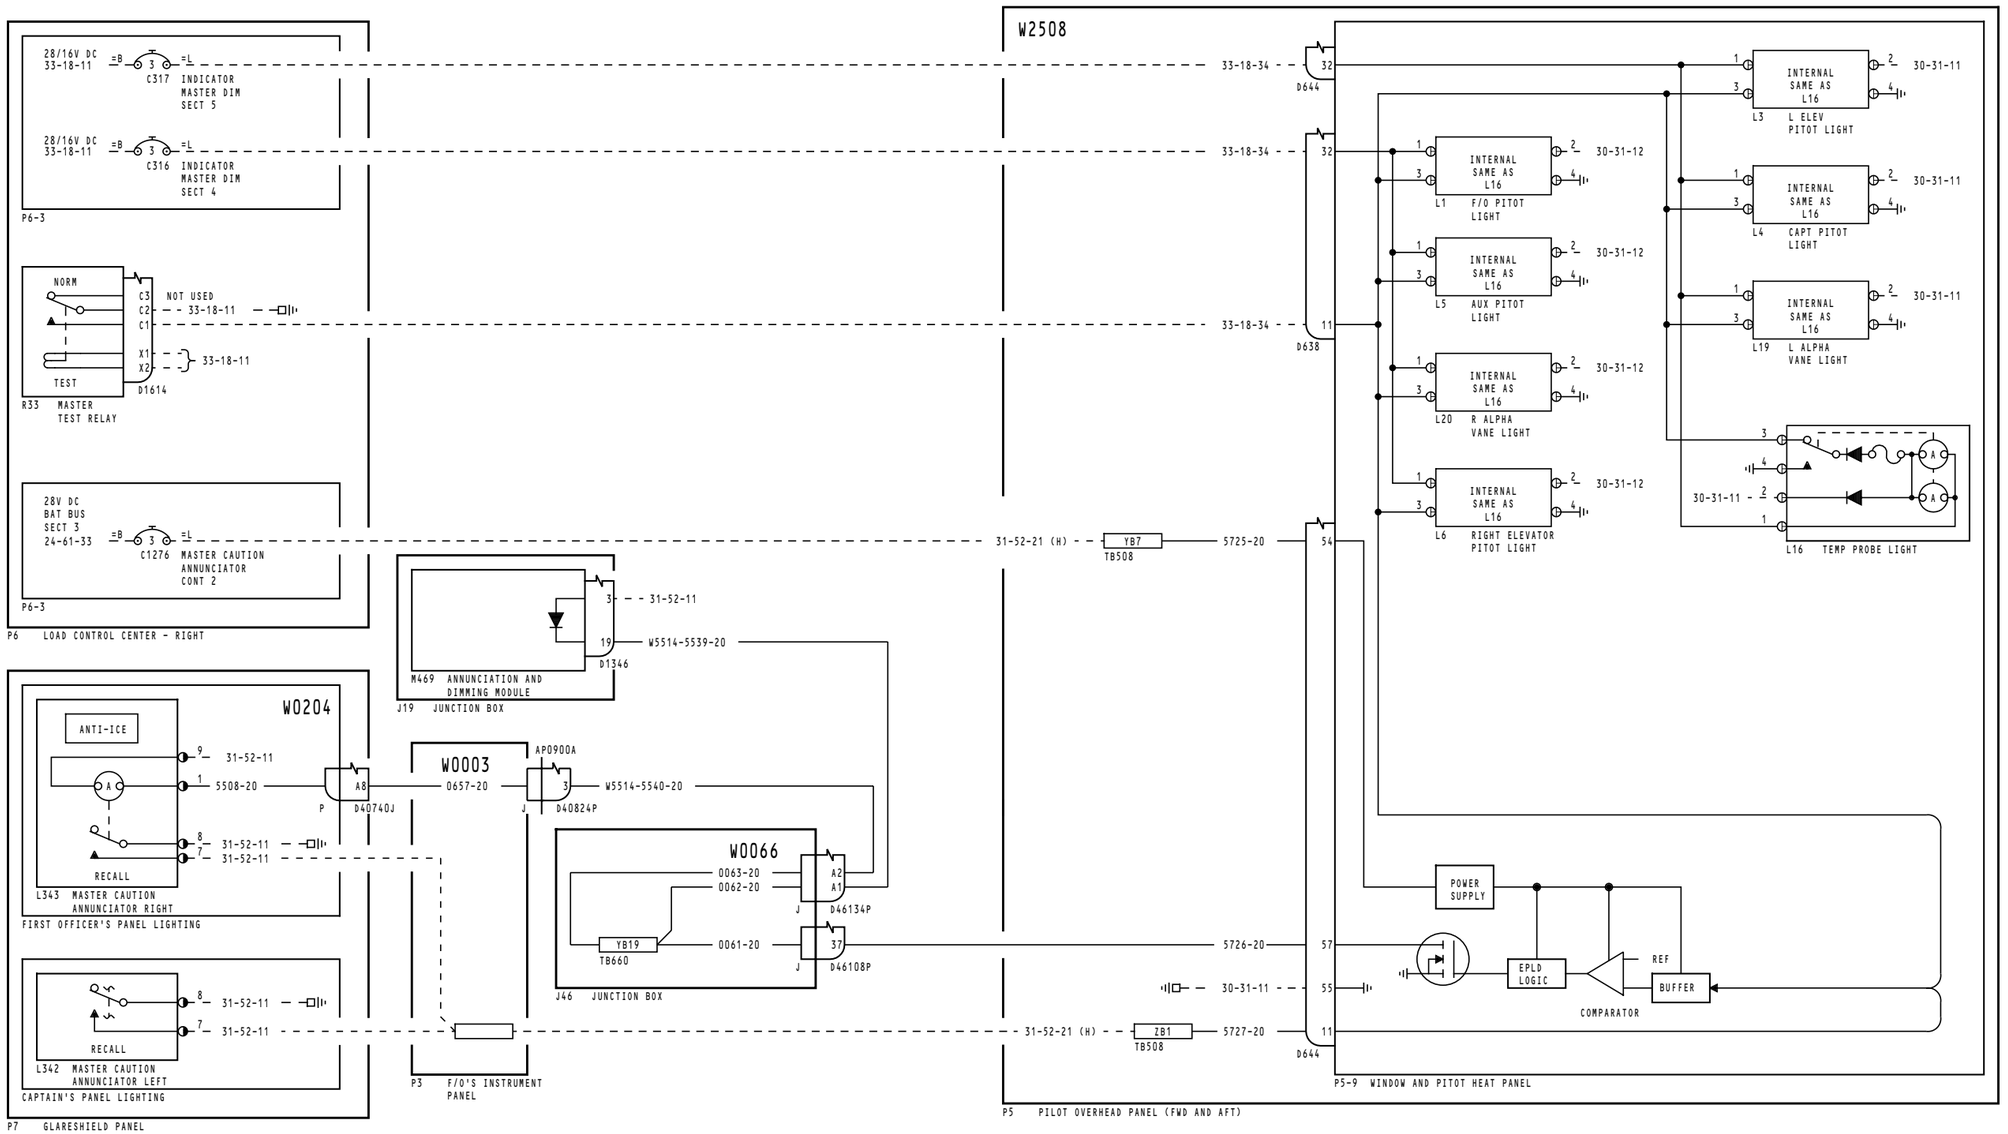

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-52-55

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
6

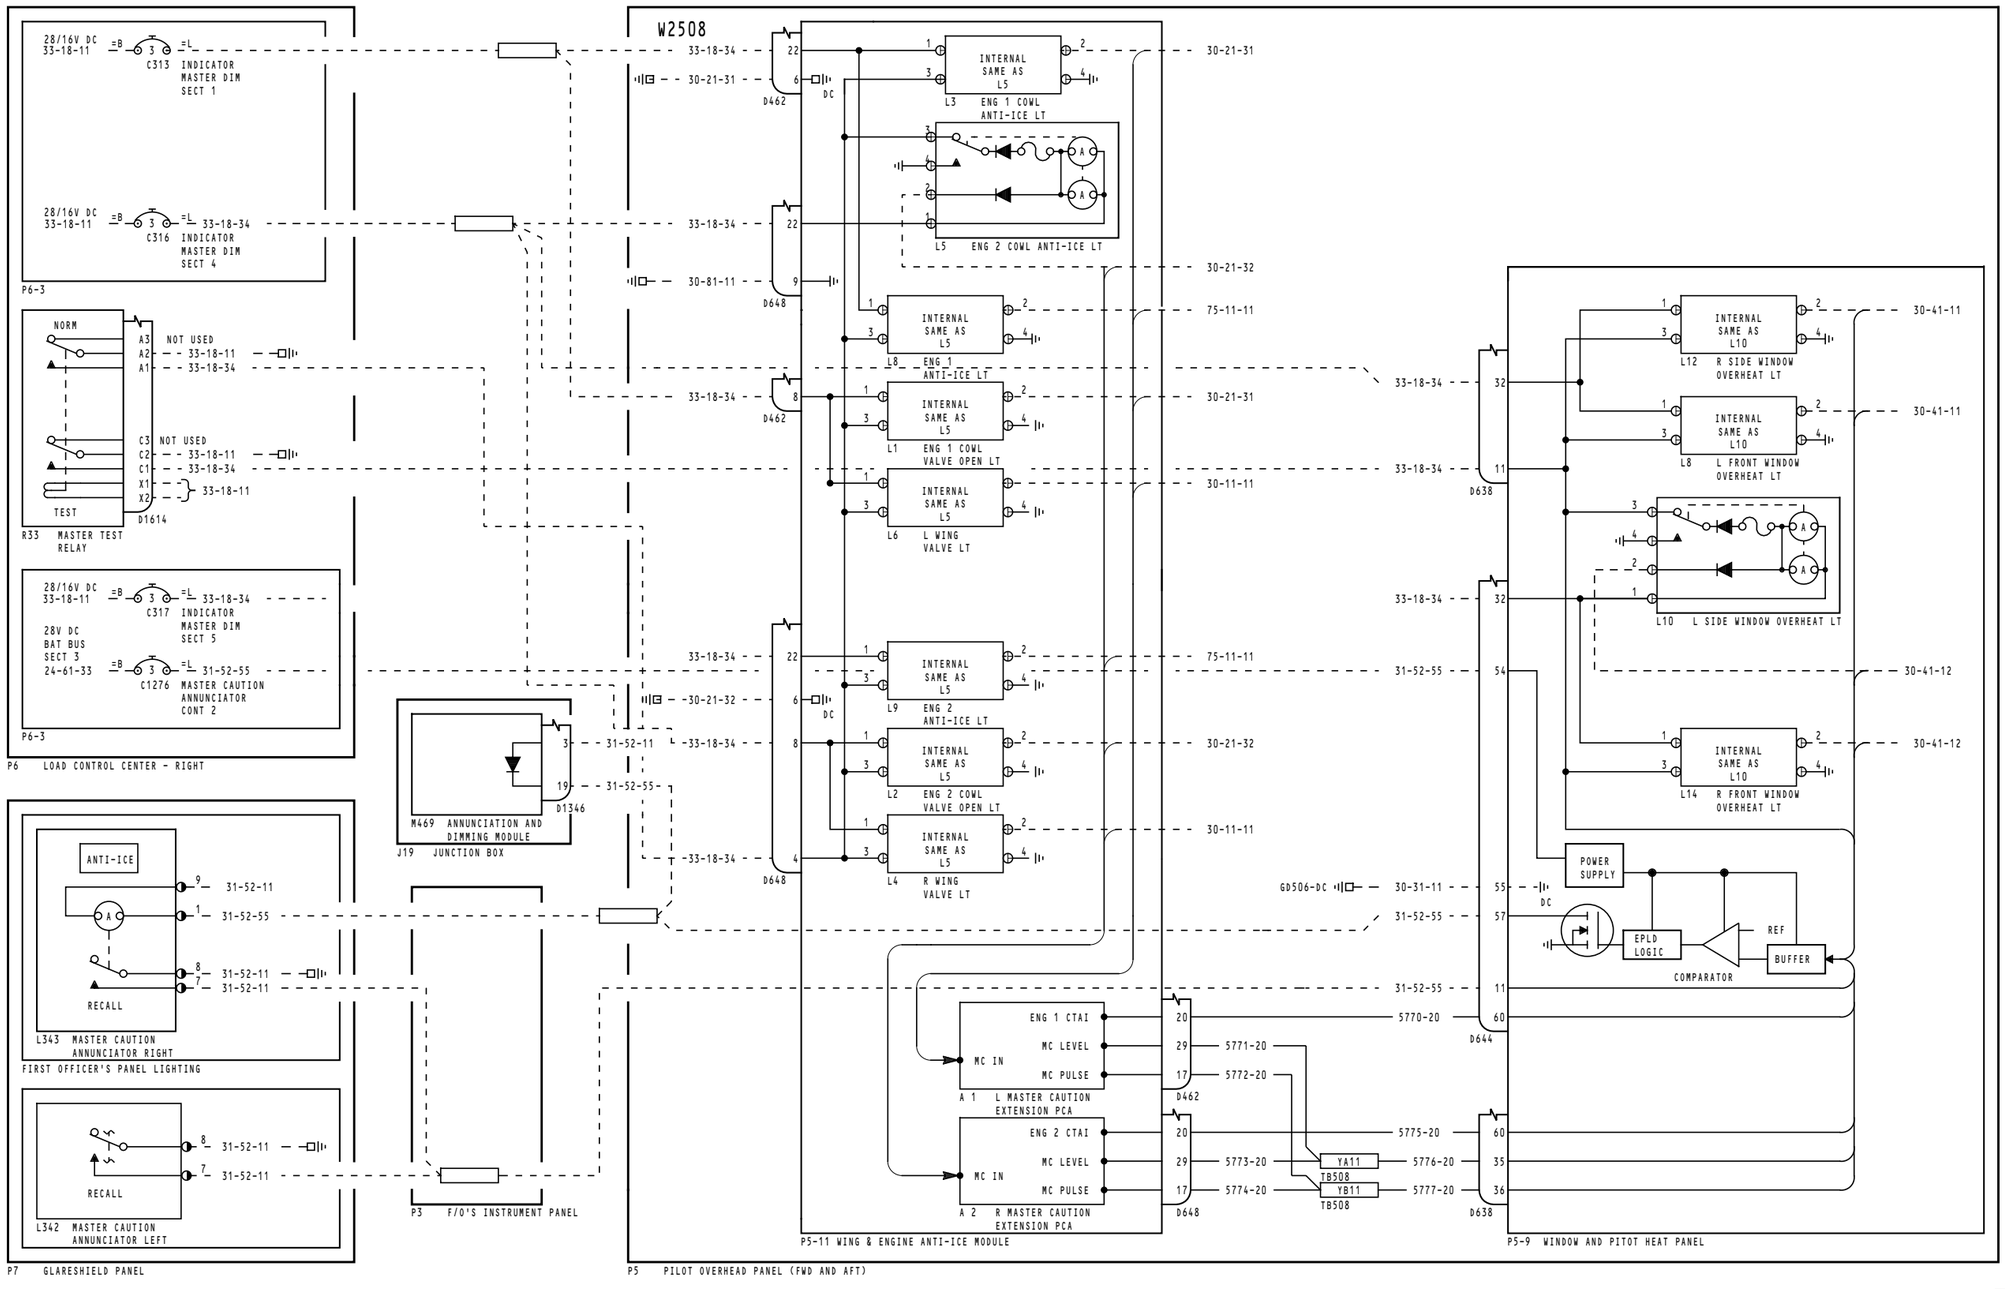

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-52-56

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
7

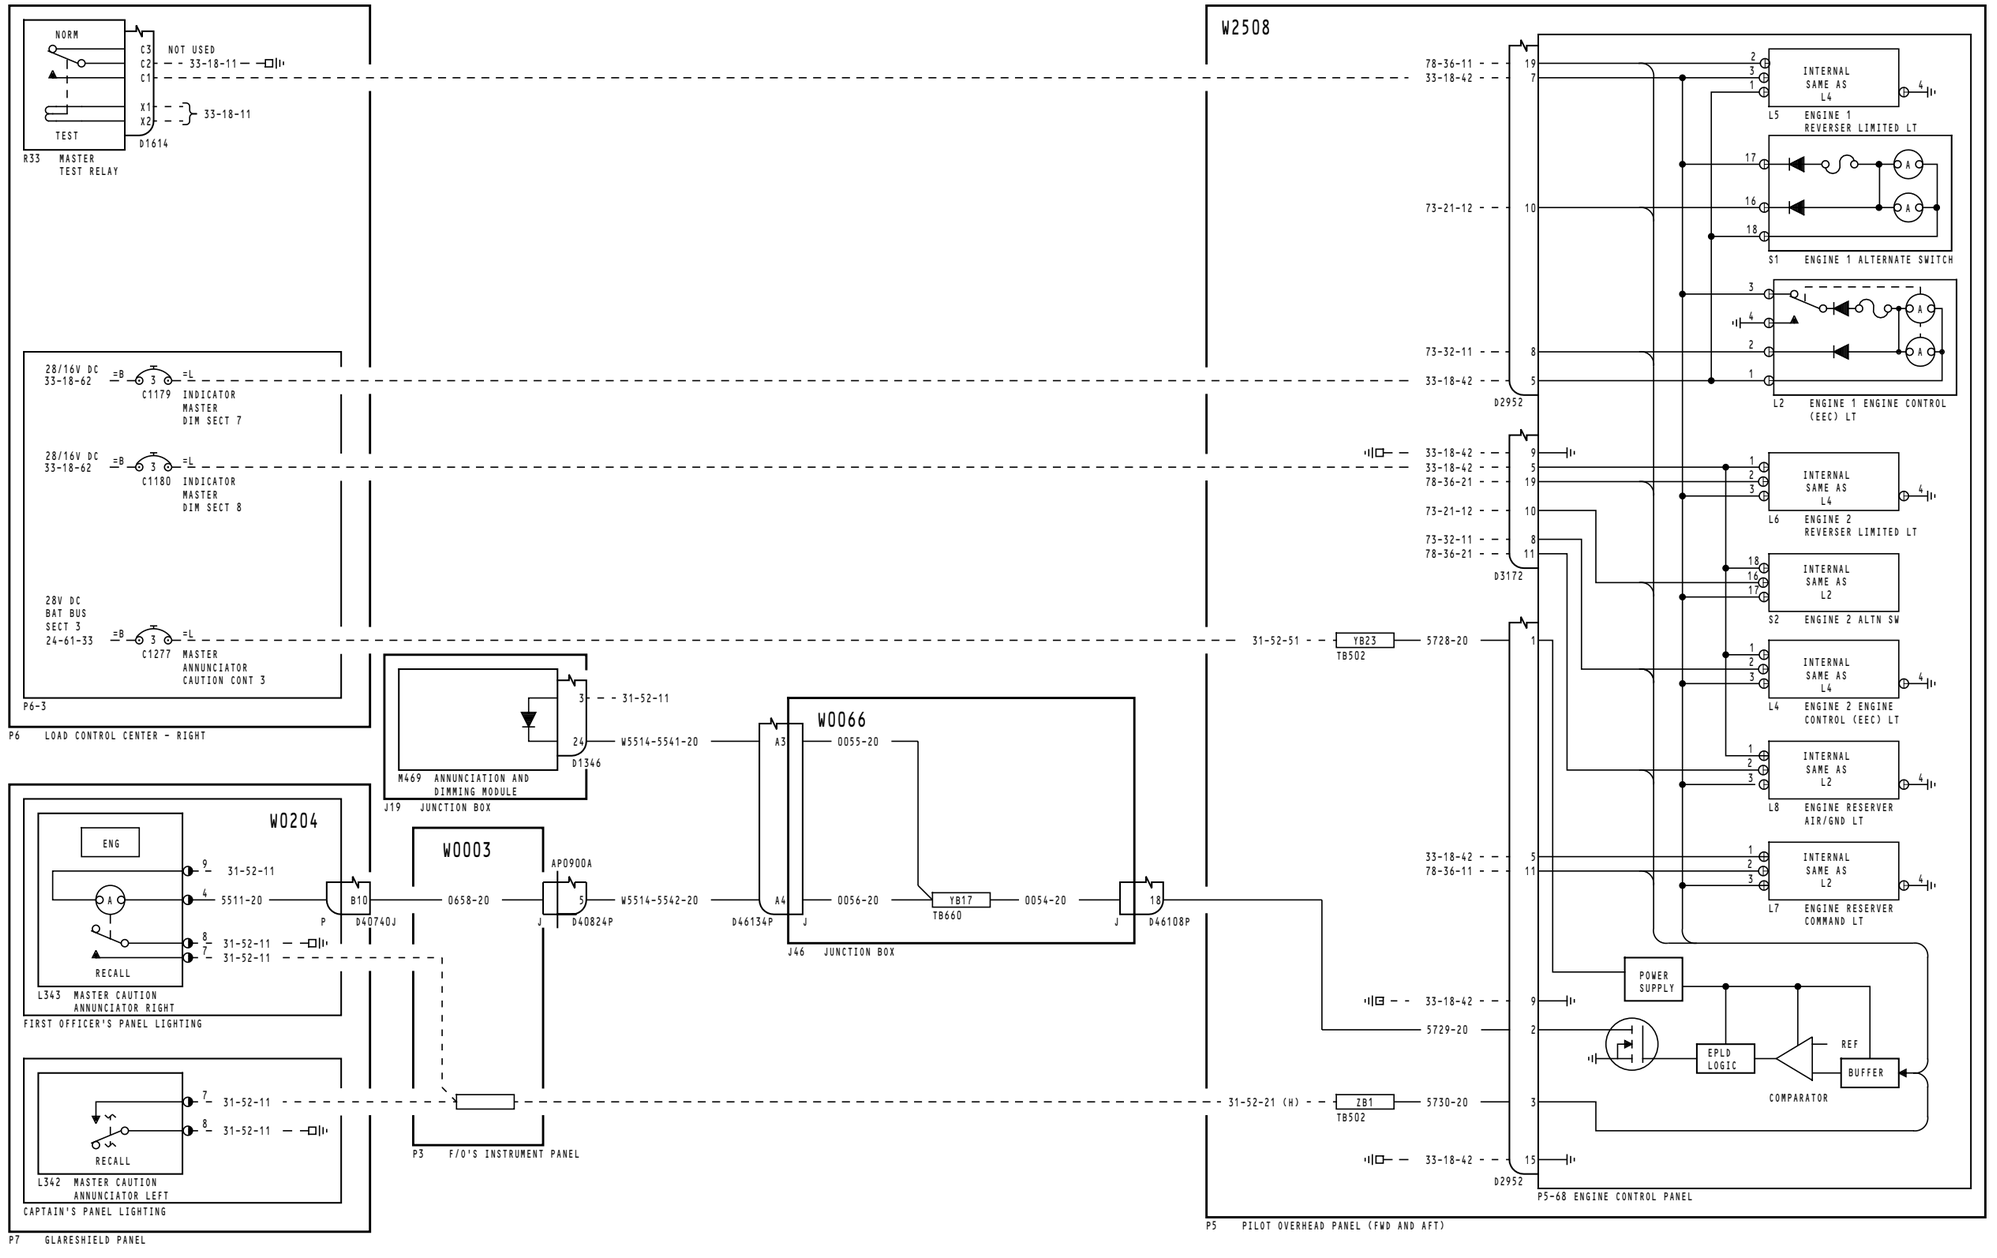


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-61

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

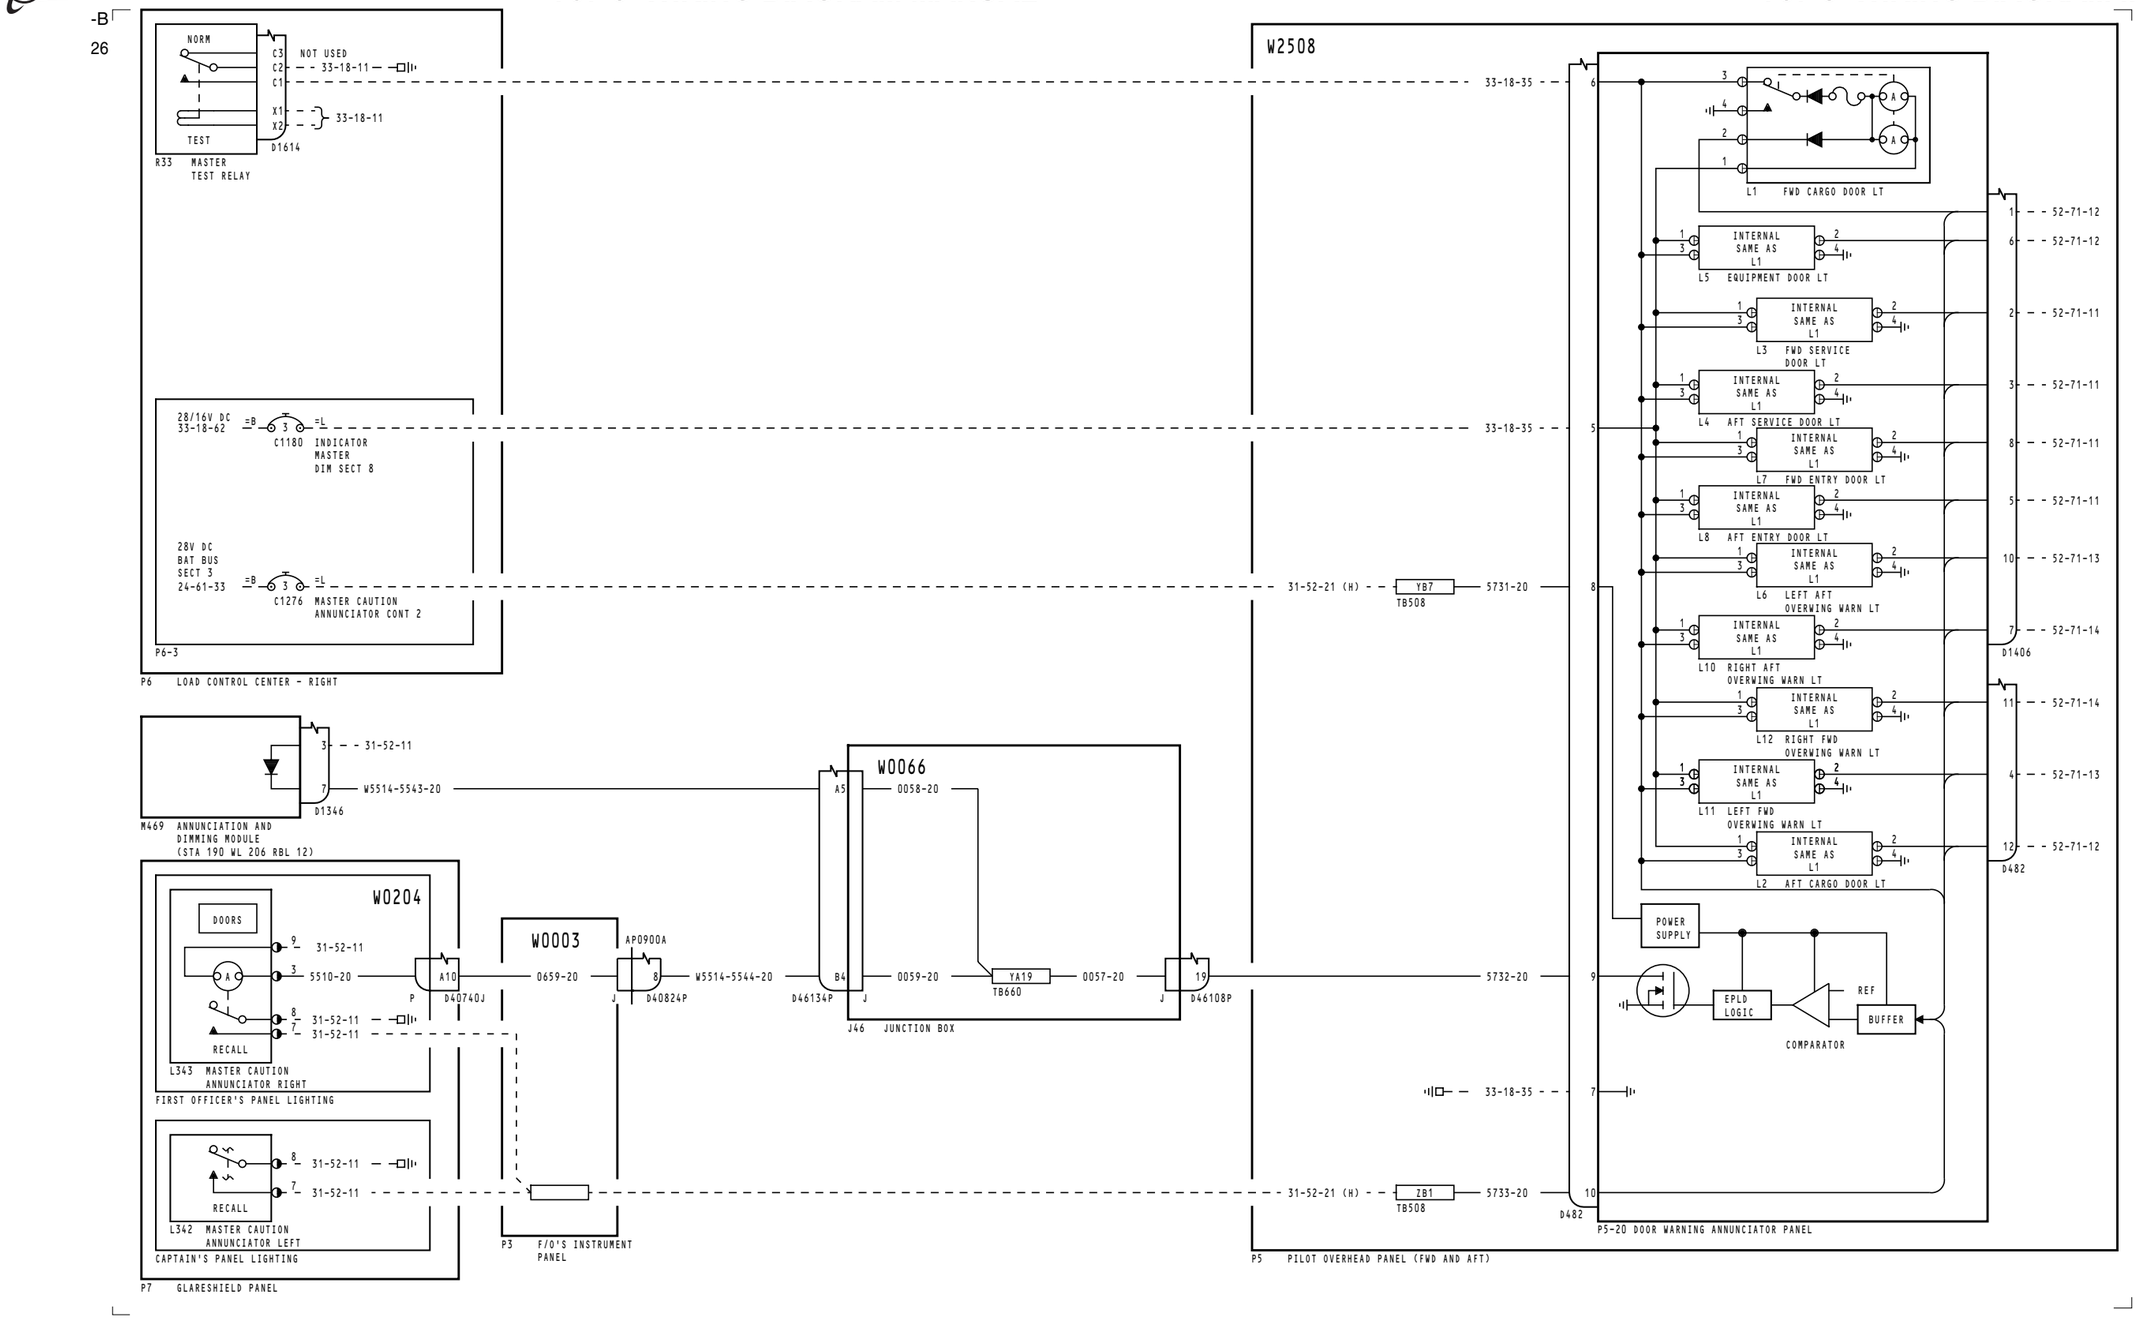

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-52-65

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
23

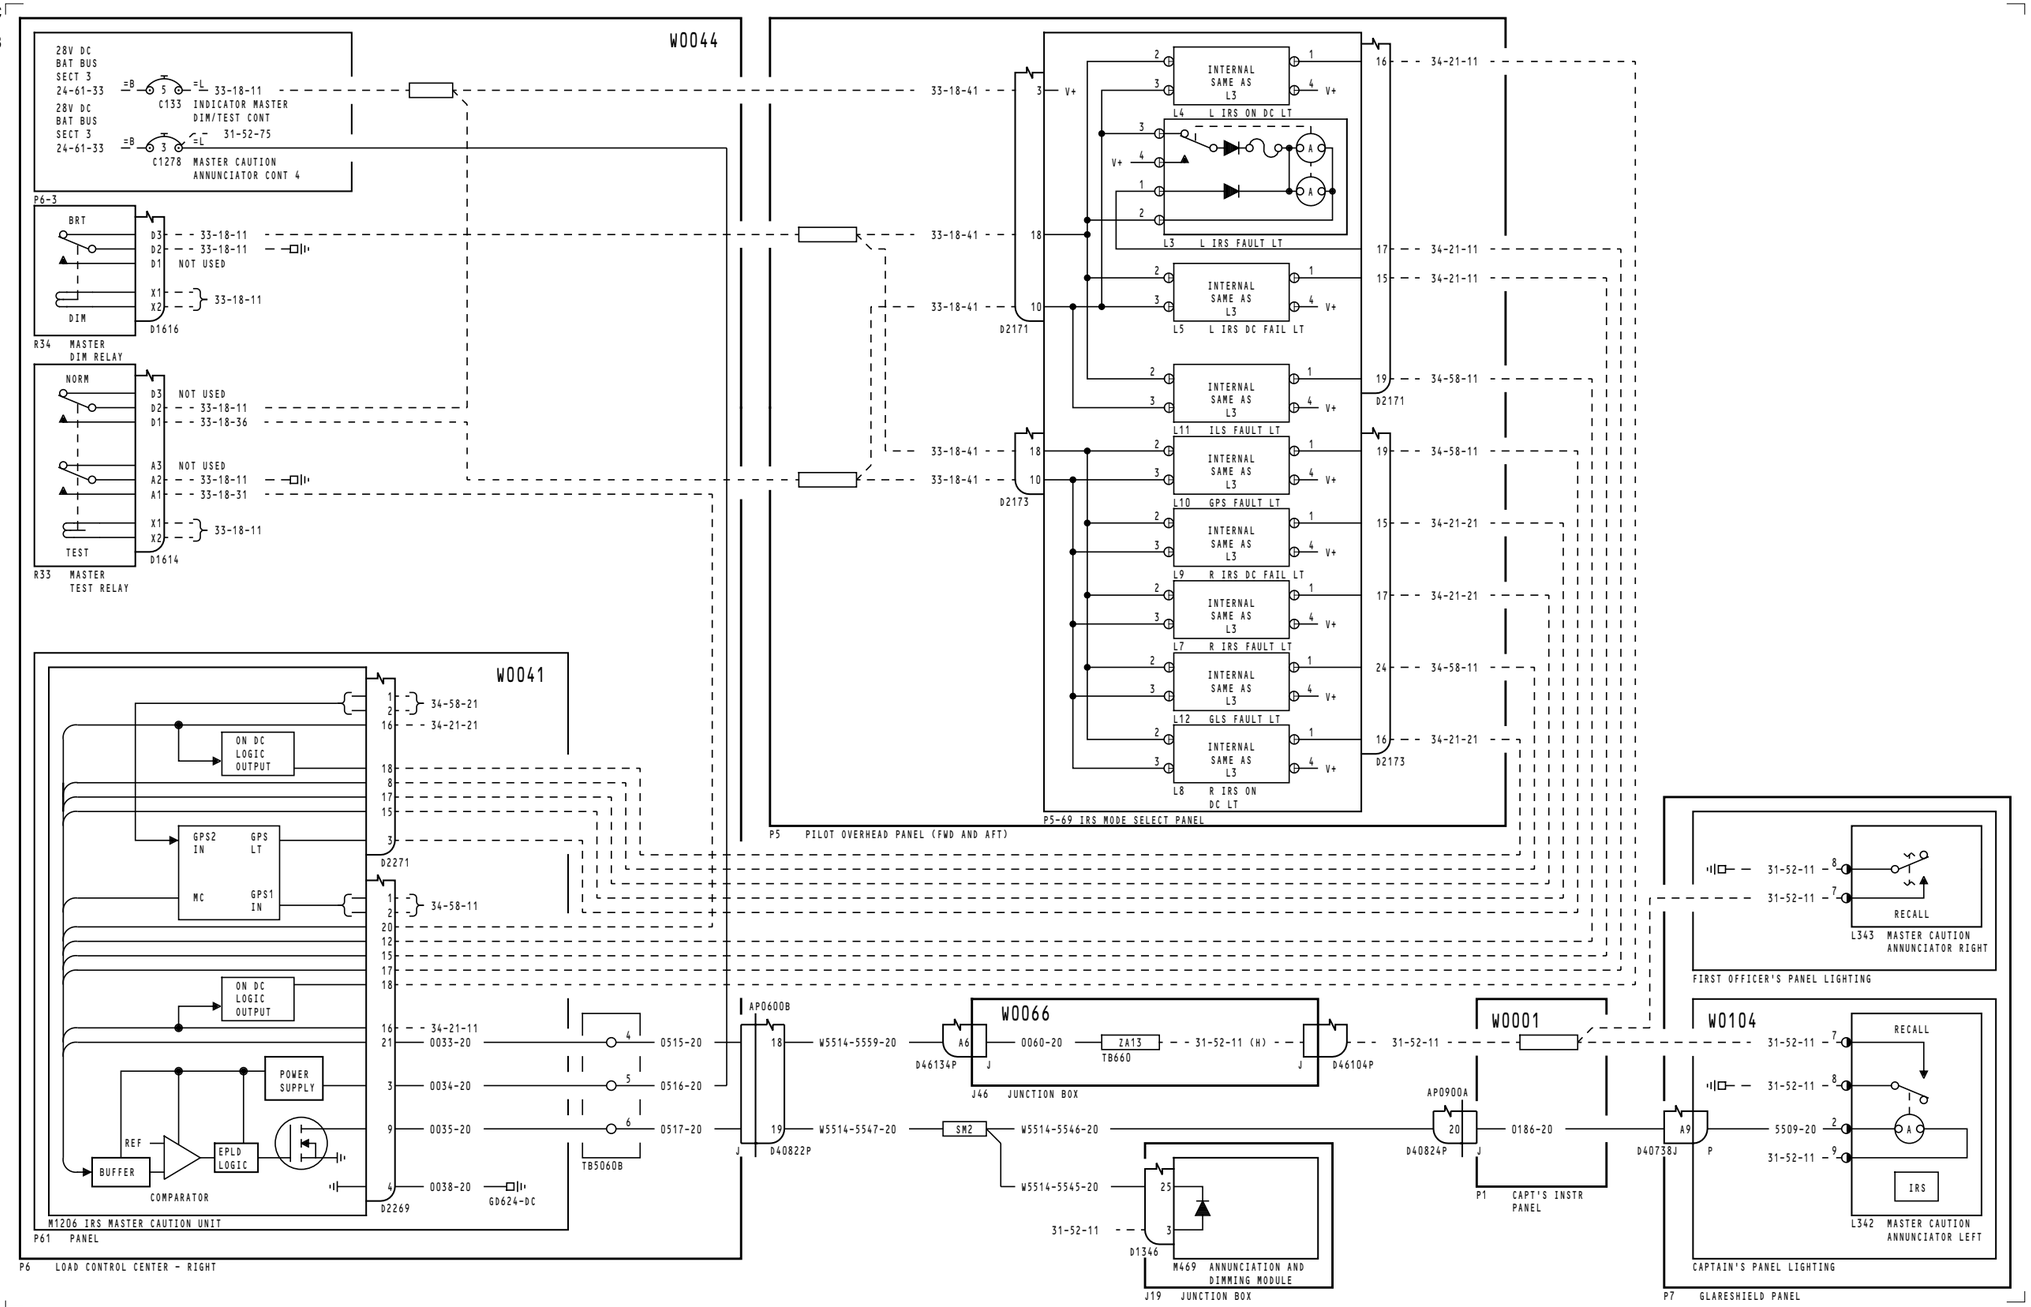


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-52-71

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

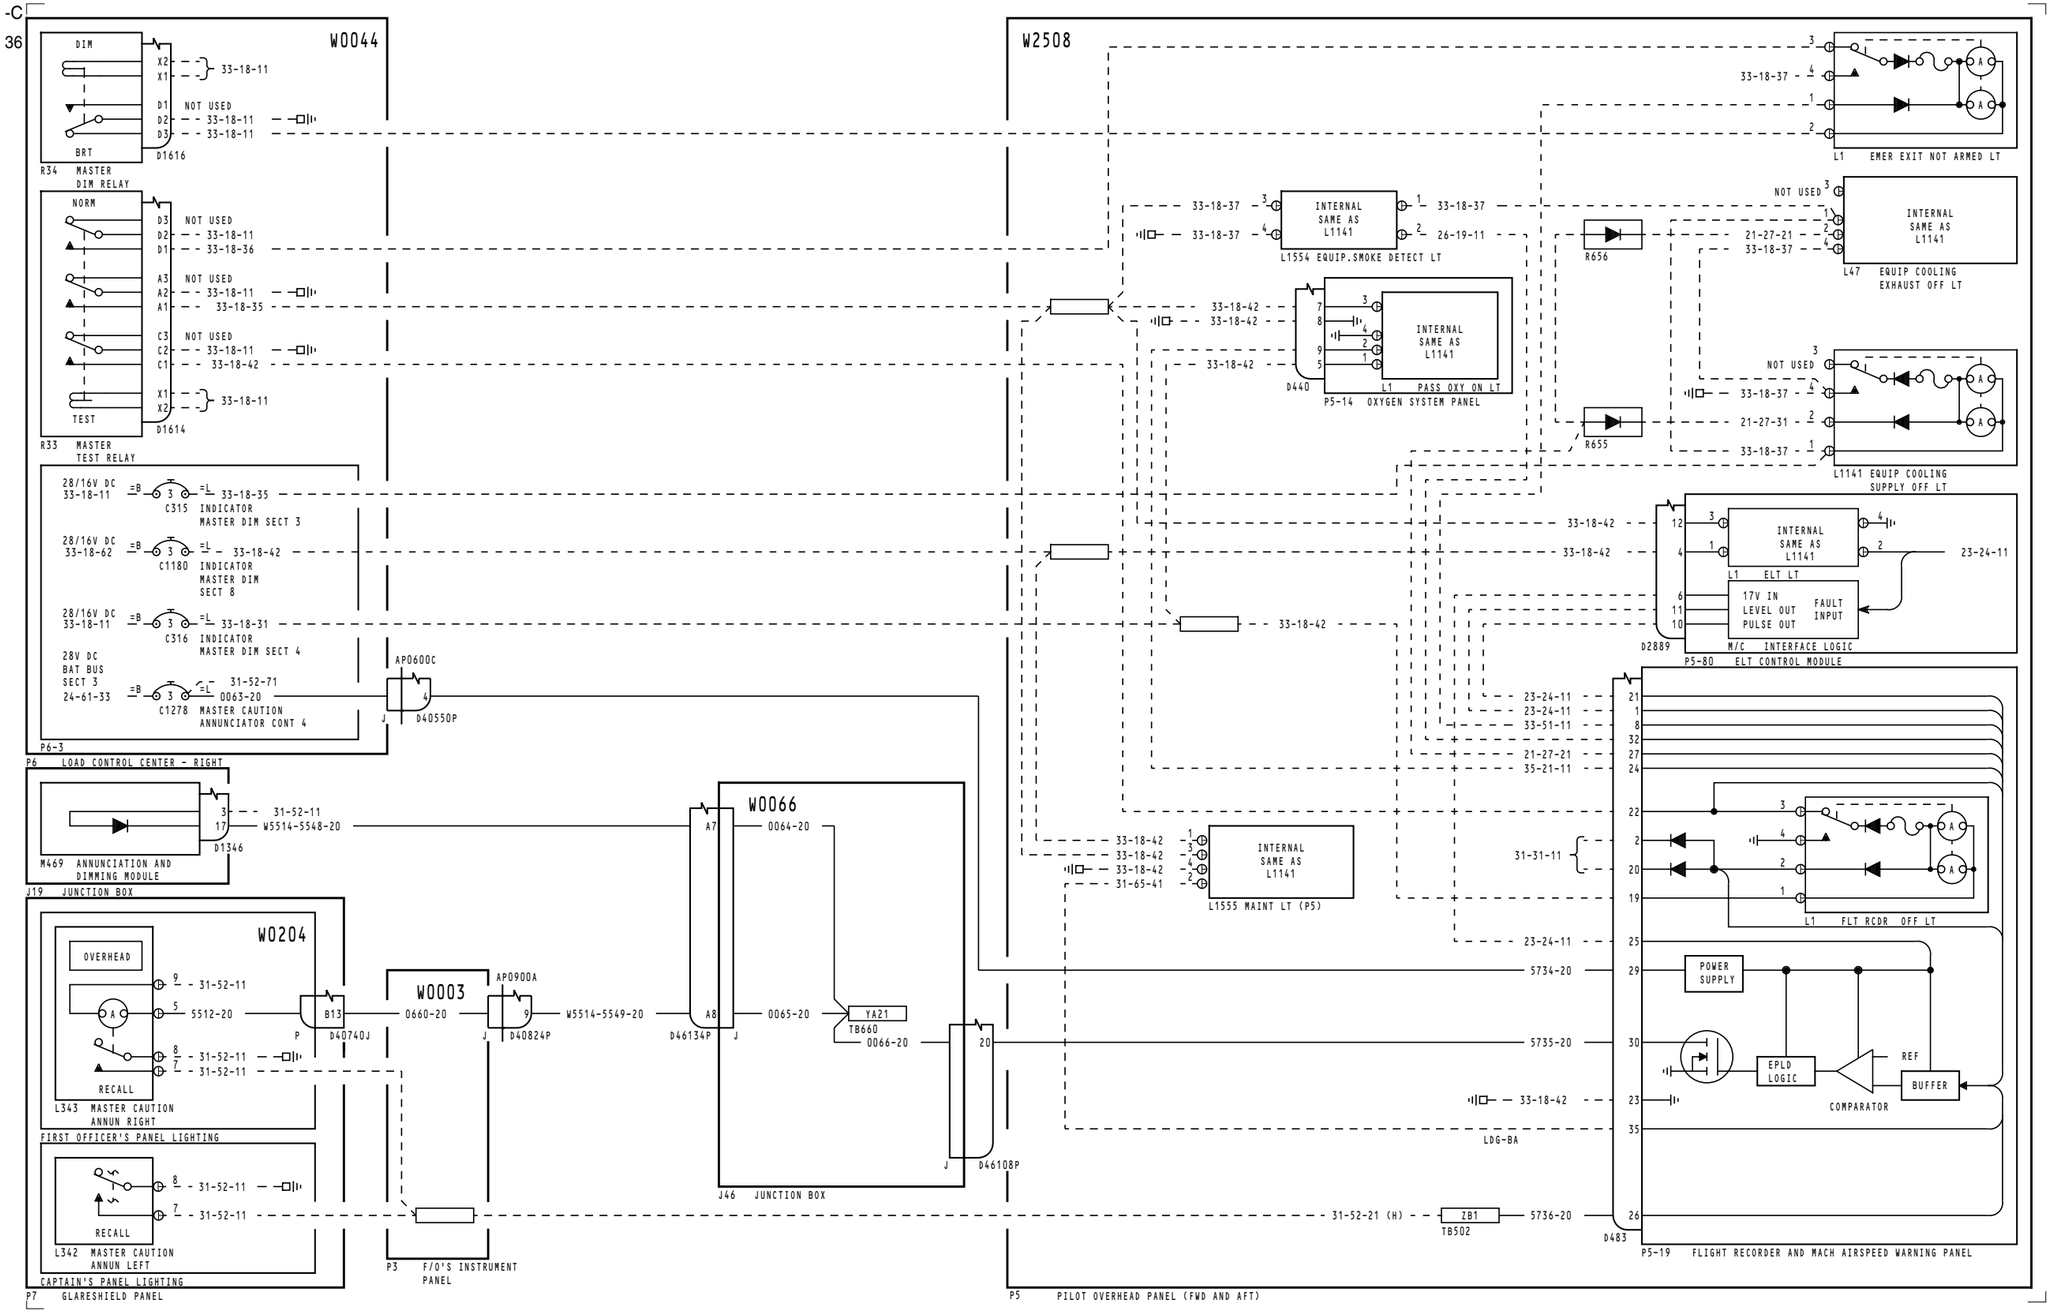

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-52-75

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
74

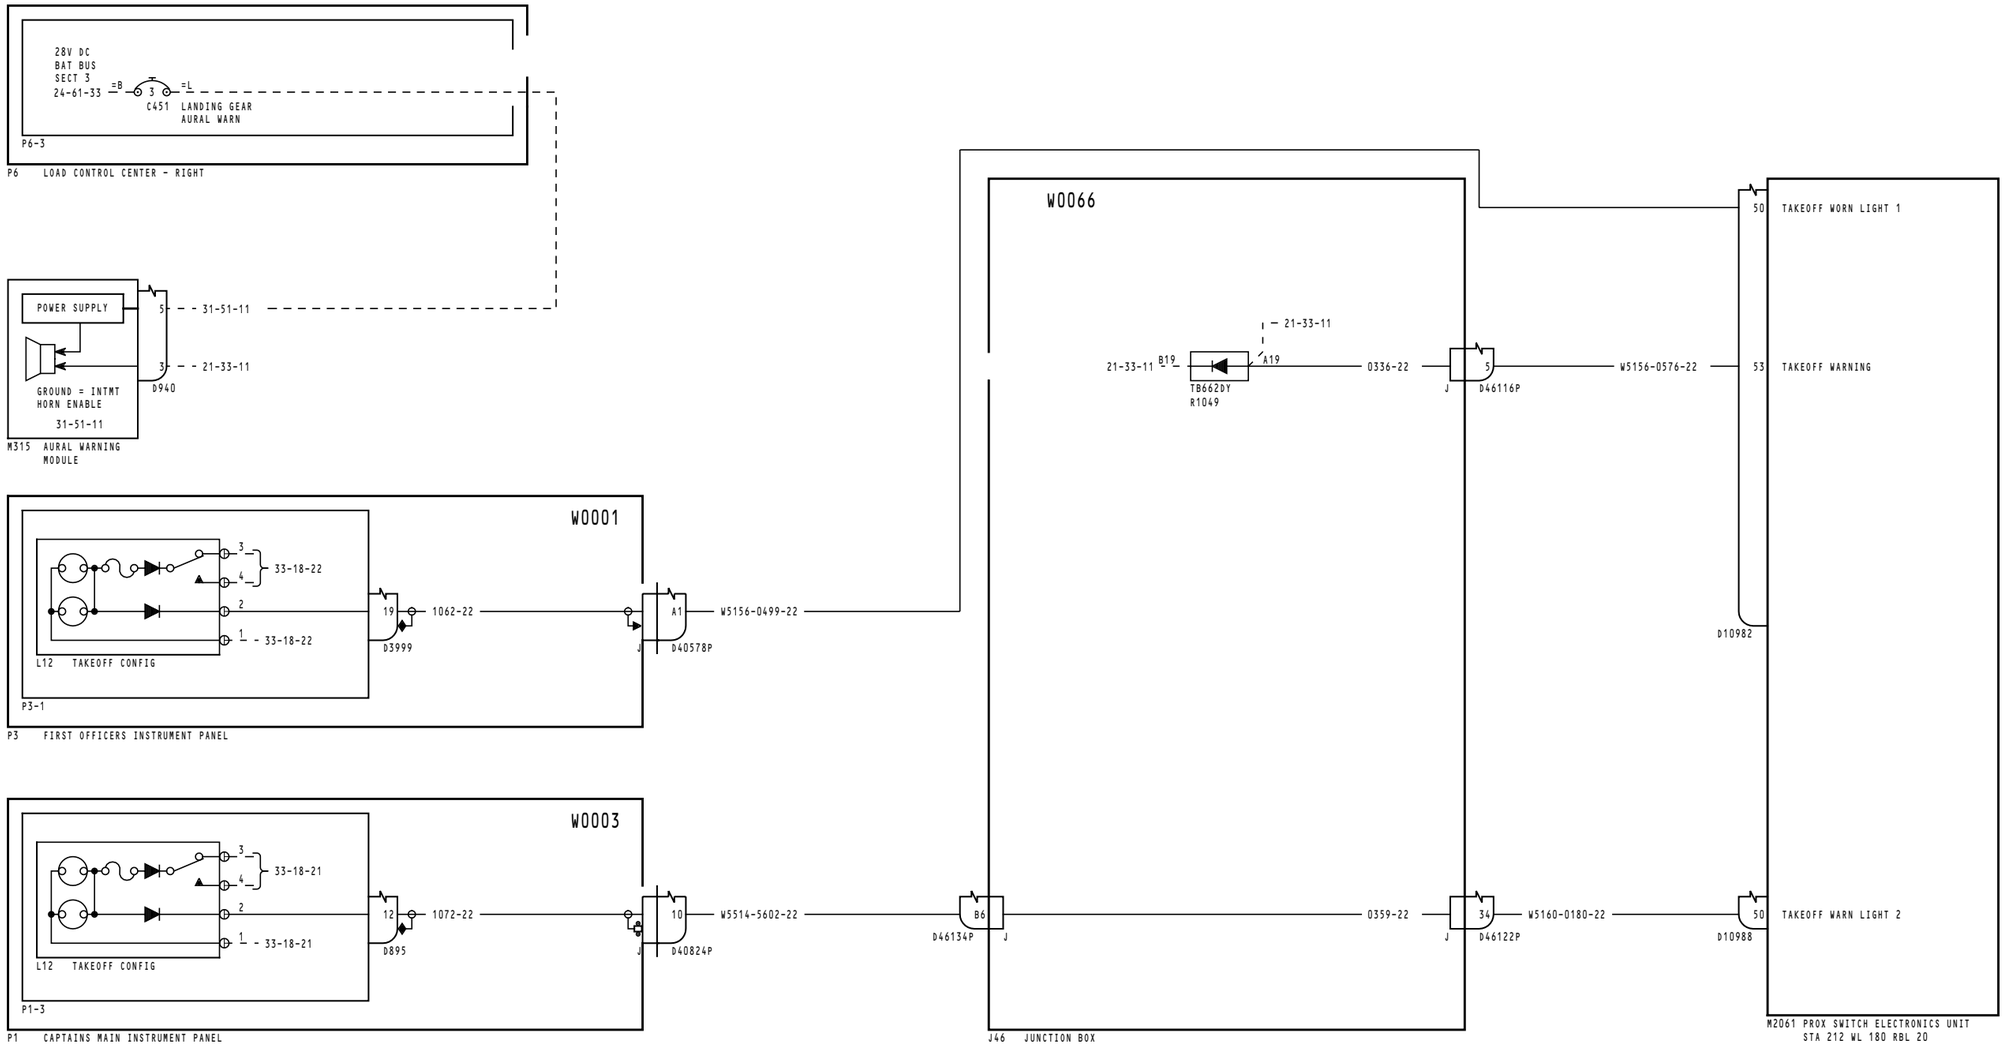


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-53-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
17

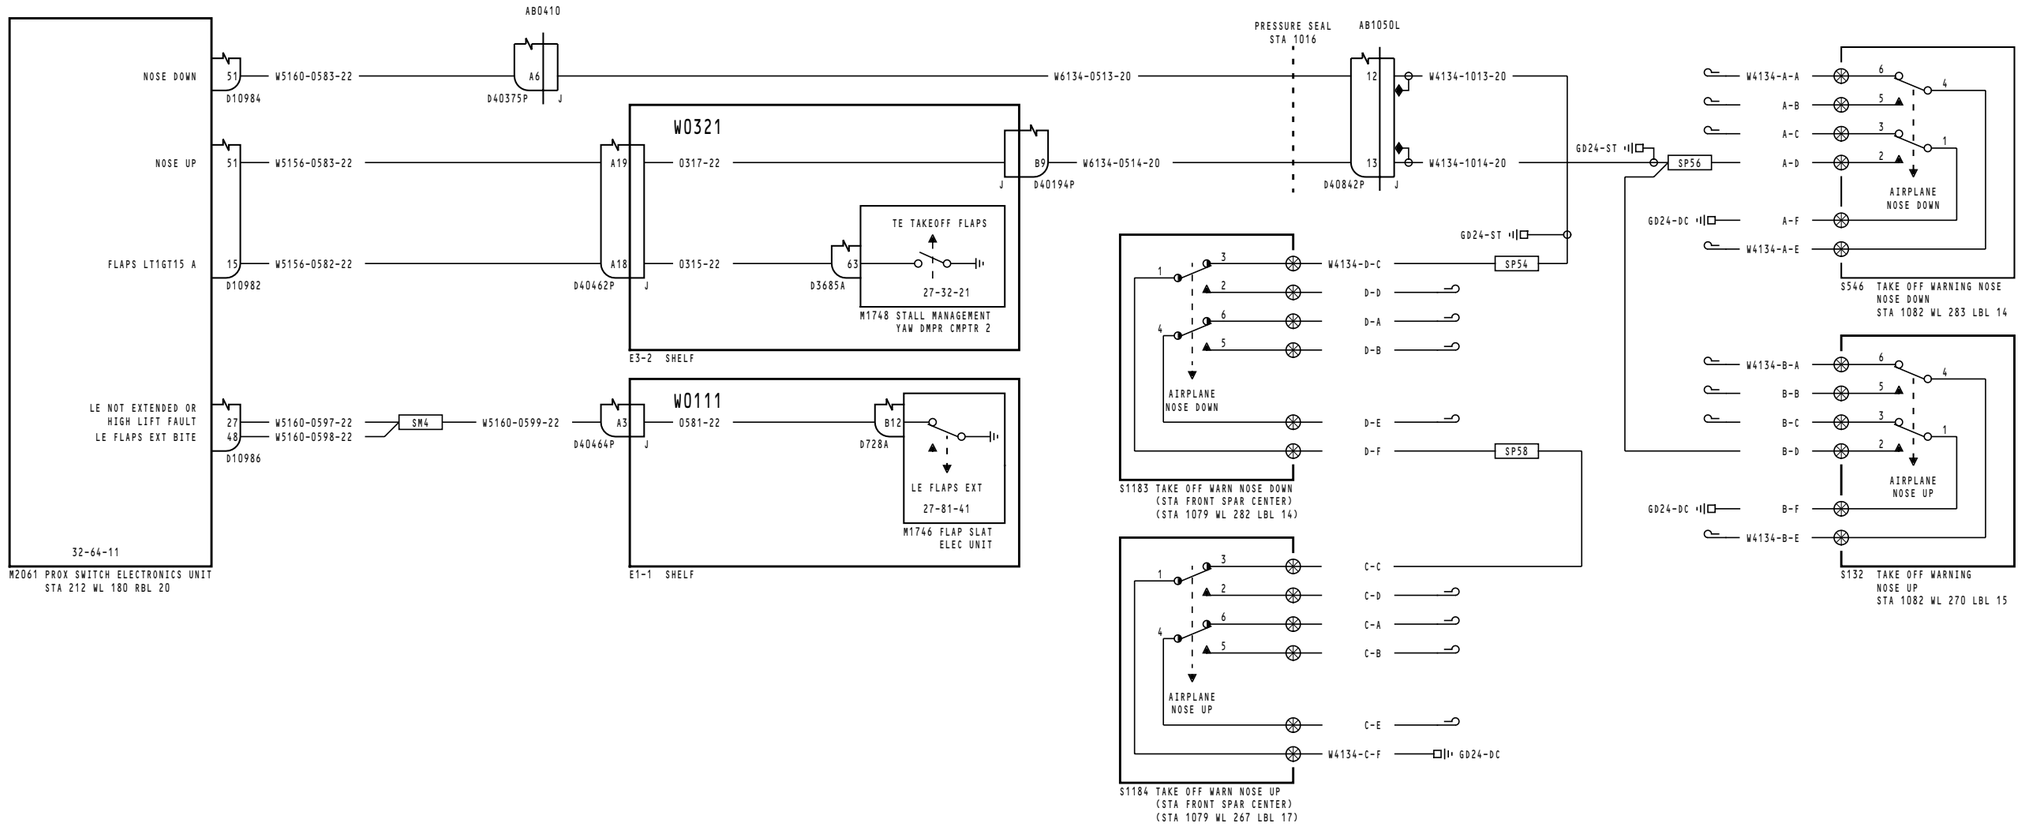


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-53-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
54

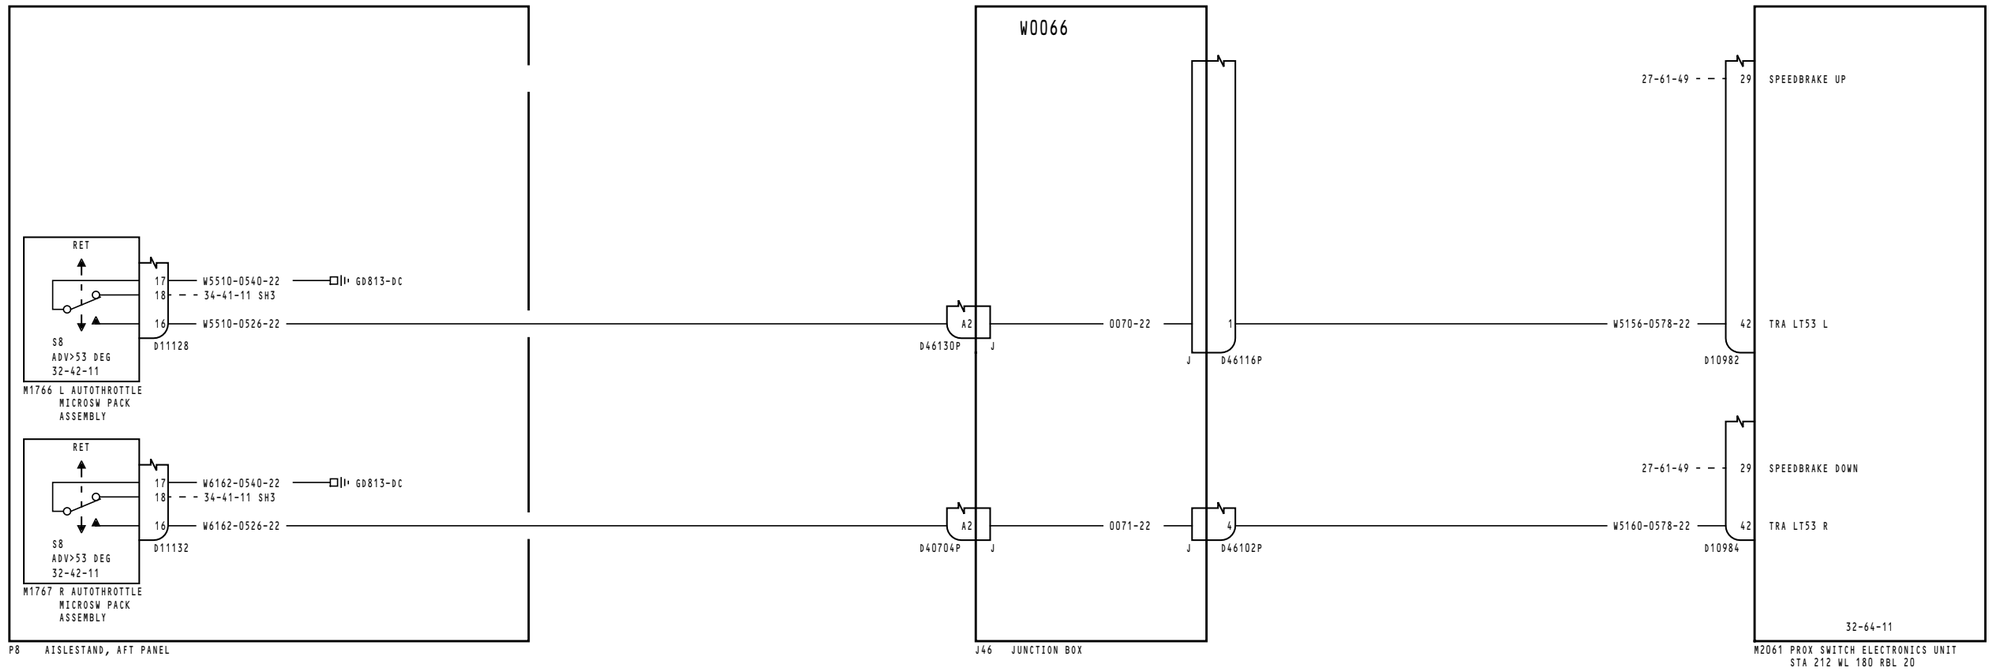


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-53-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

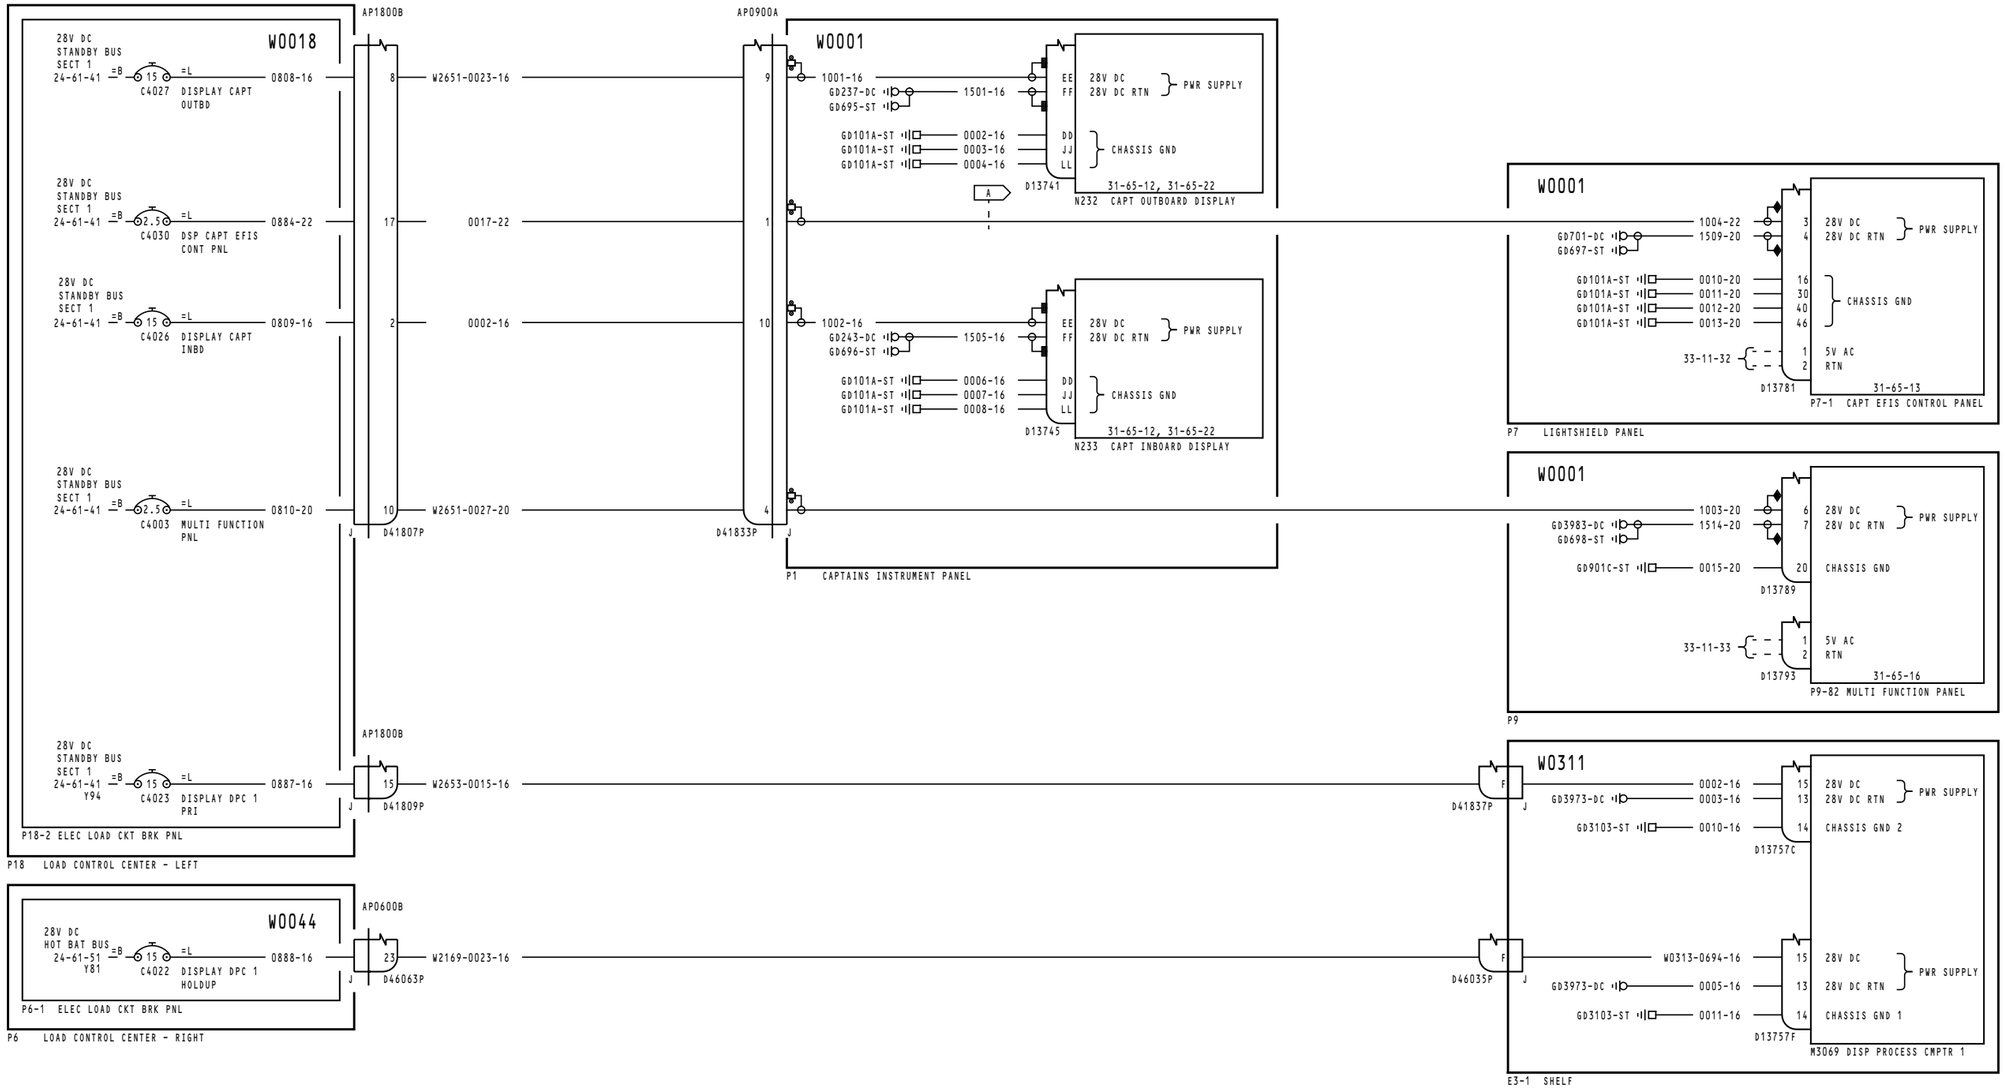

NOTES:


A P7-1 CAPT EFIS CONTROL PANEL - PART OF A CRITICAL SYSTEM - WITHIN 12" OF WINDOW - EMI PROTECTION REQUIRED. SHIELD ALL WIRES TO/FROM EFIS CONNECTOR EXCEPT FOR WIRES TERMINATING WITHIN 12" OF CONNECTOR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

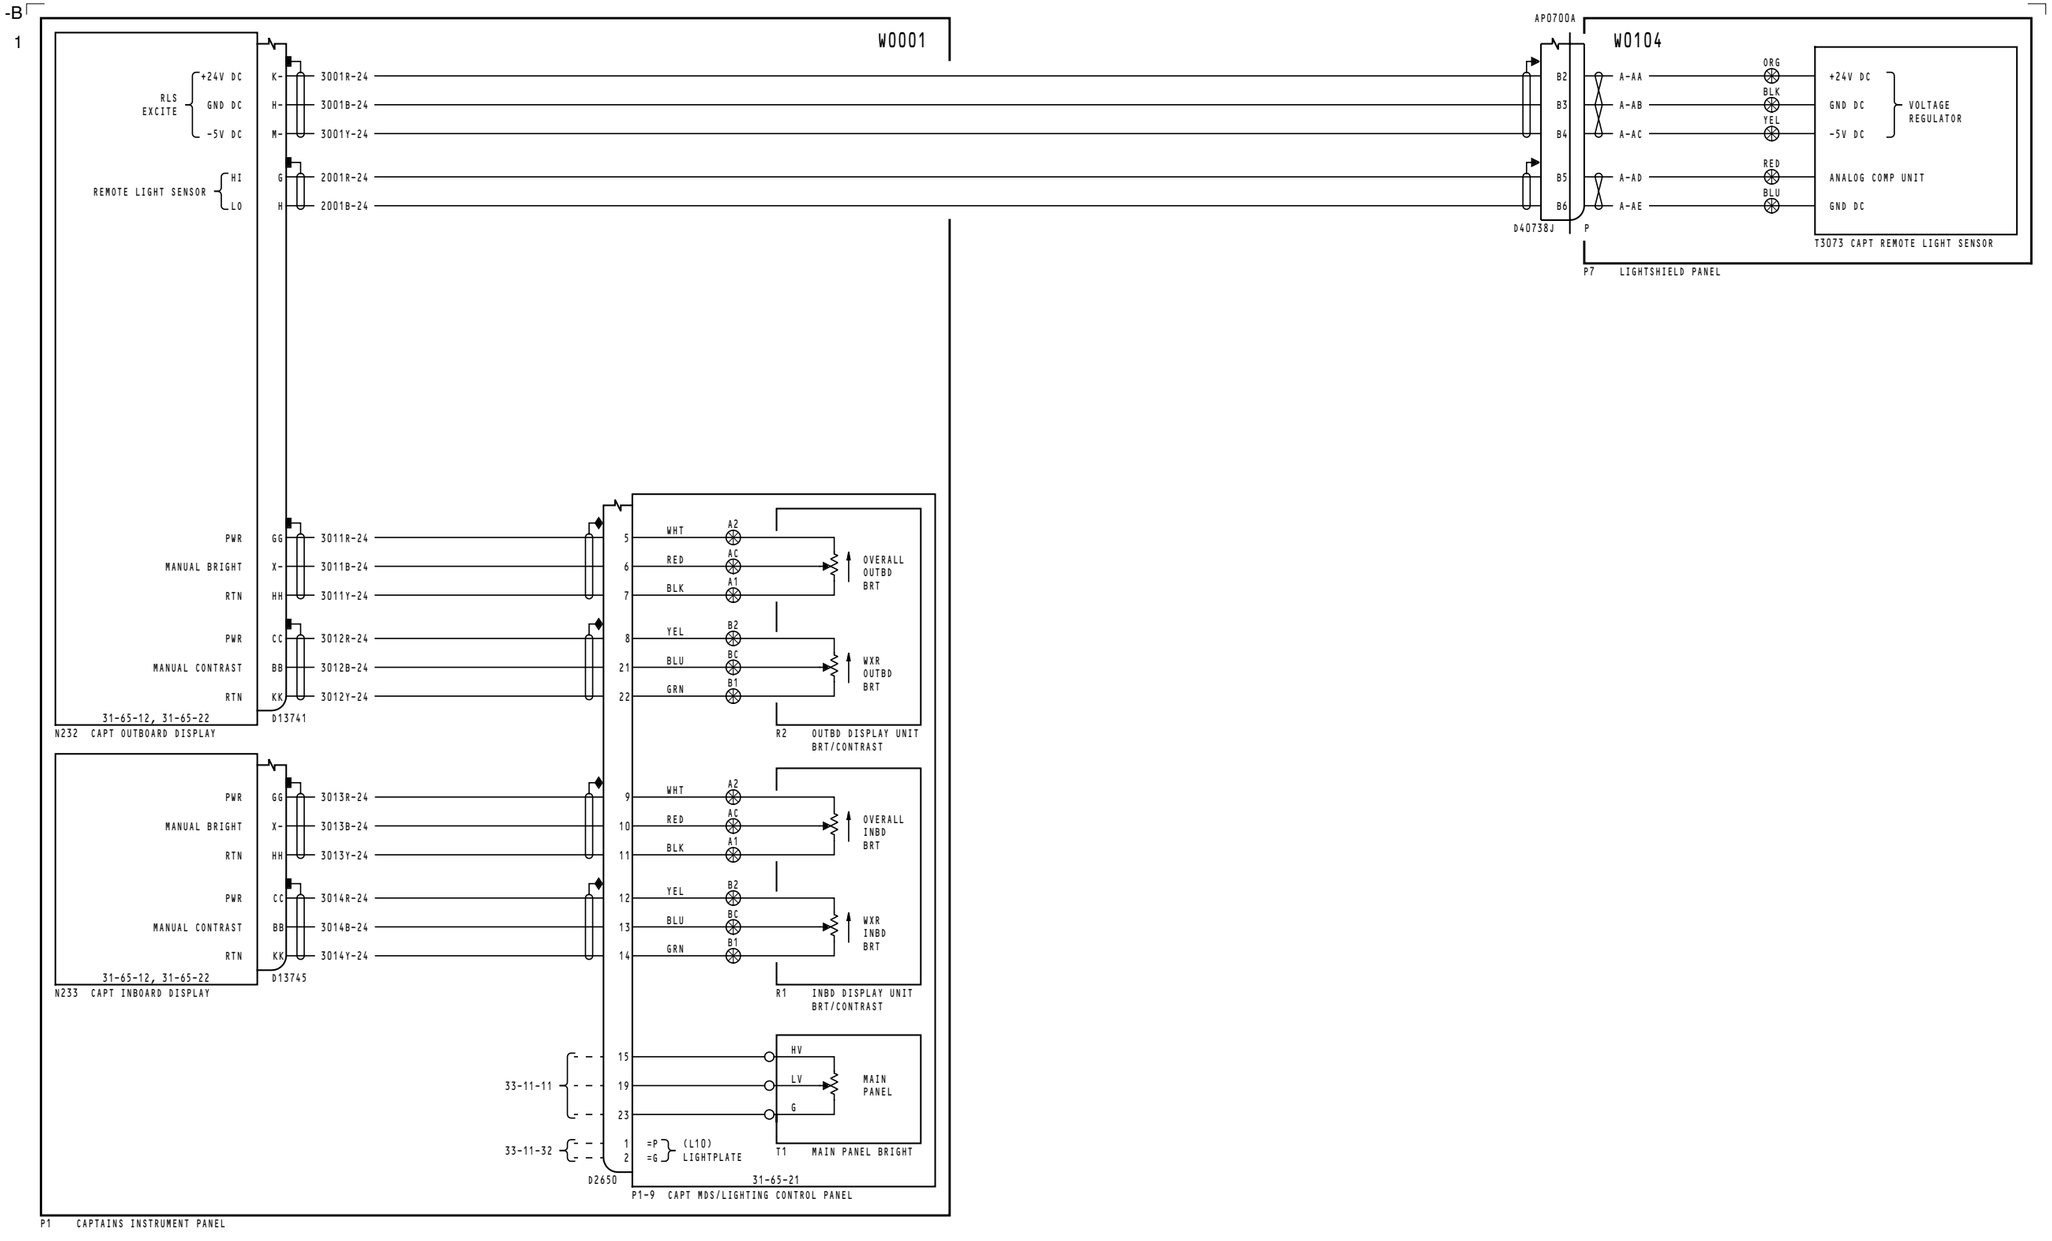


31-65-11

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

4

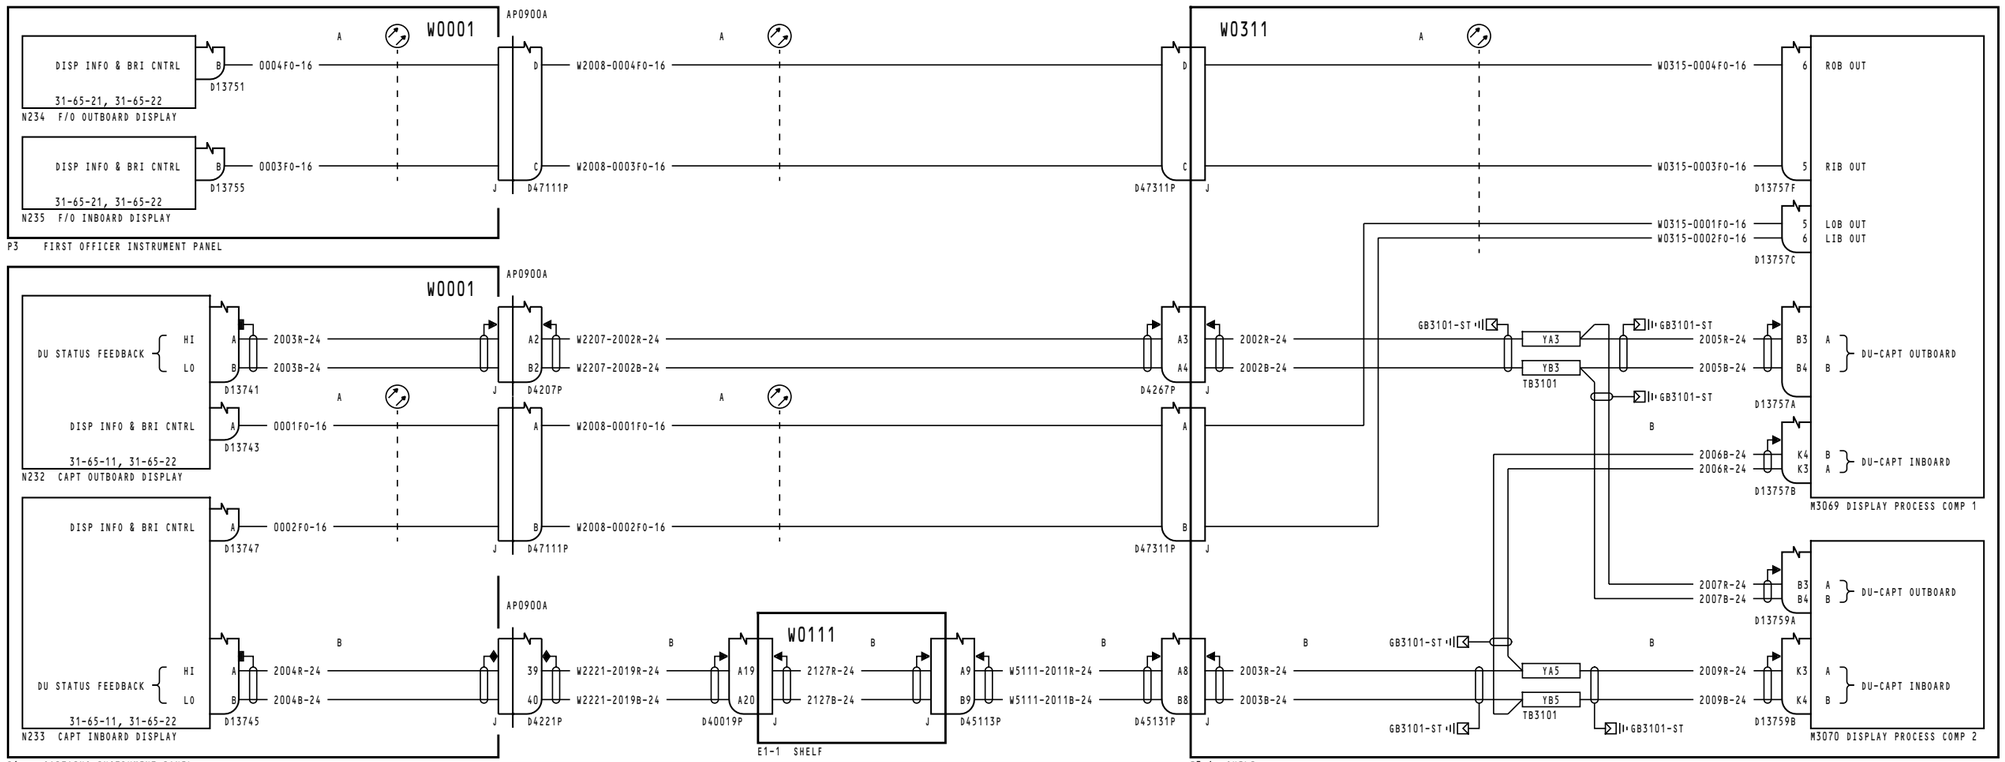

USE BMS13-71TO8C01GA, WIRE TERM TYPE = F4

NA2* - PROVIDE SEPARATE NA2 ROUTING TO THE MDC DPC 1 & 2, D/N = BJD-BA
MAY BE ROUTED TOGETHER ON E3-1 SHELF AND BEHIND P3 PANEL.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

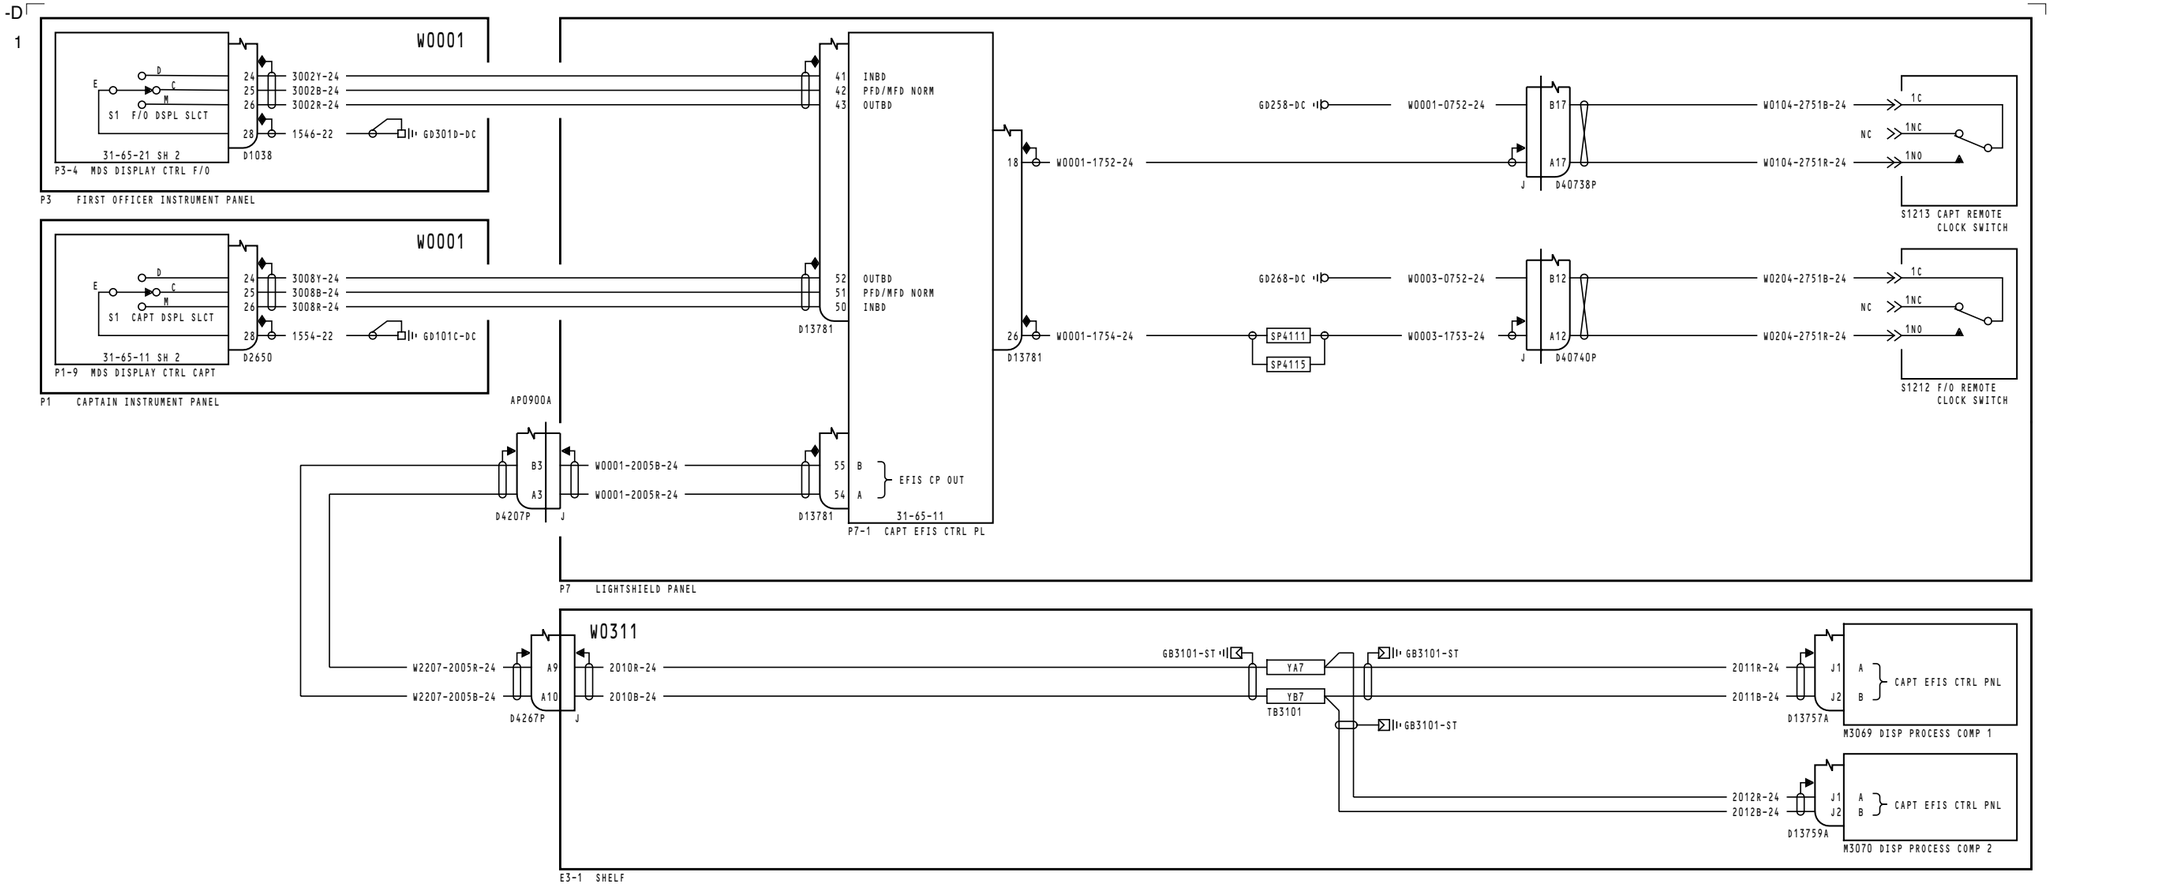

31-65-13

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B


1

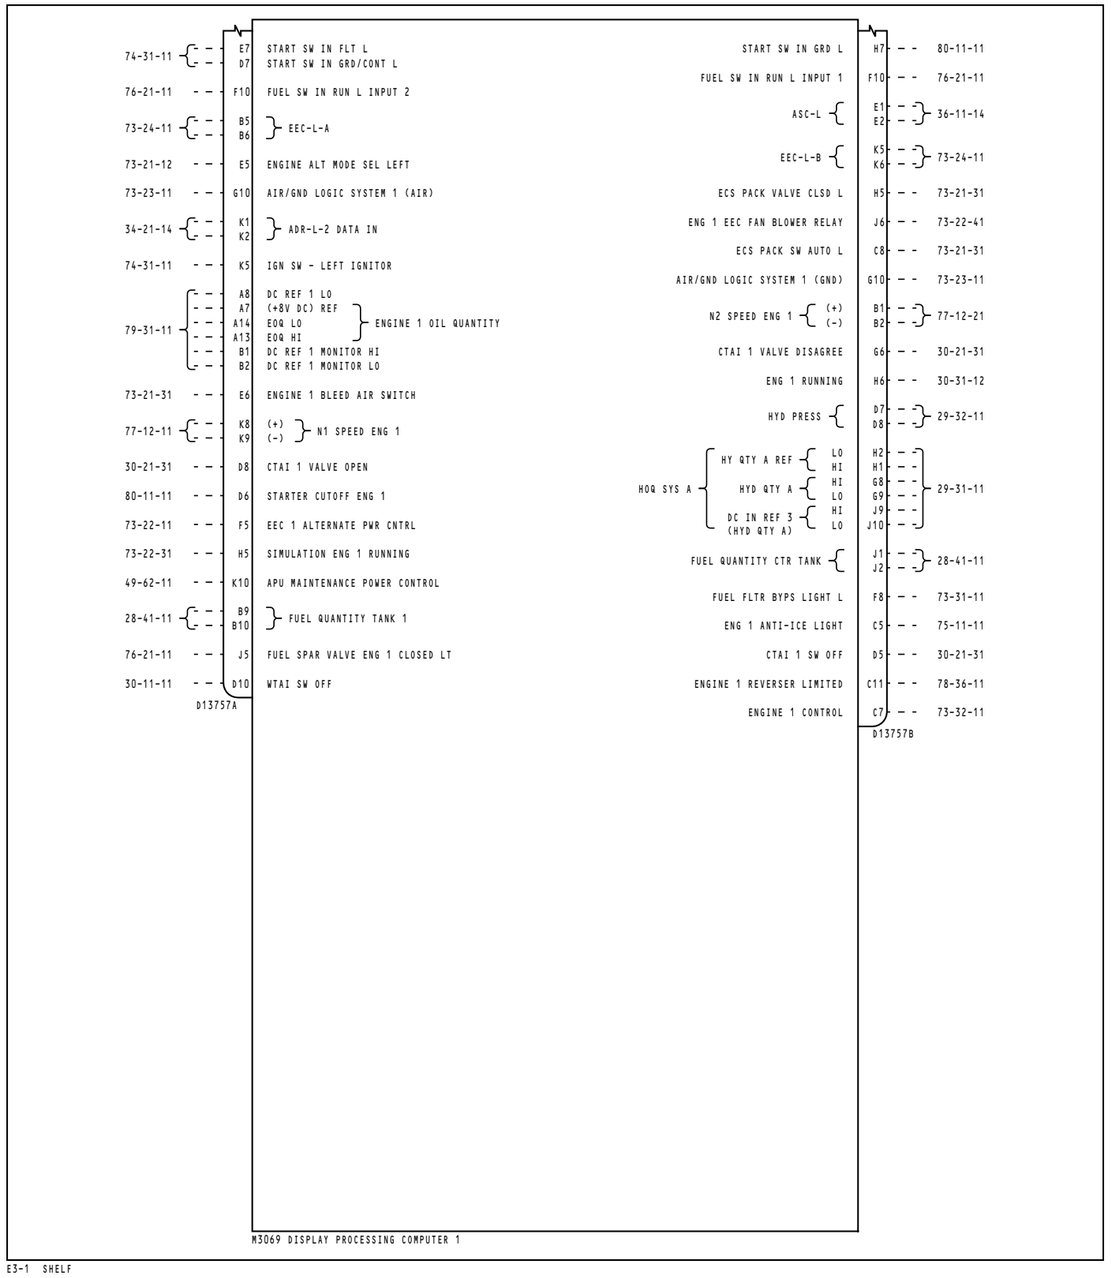

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-14

Page 1
Sheet 1
May 15/2024

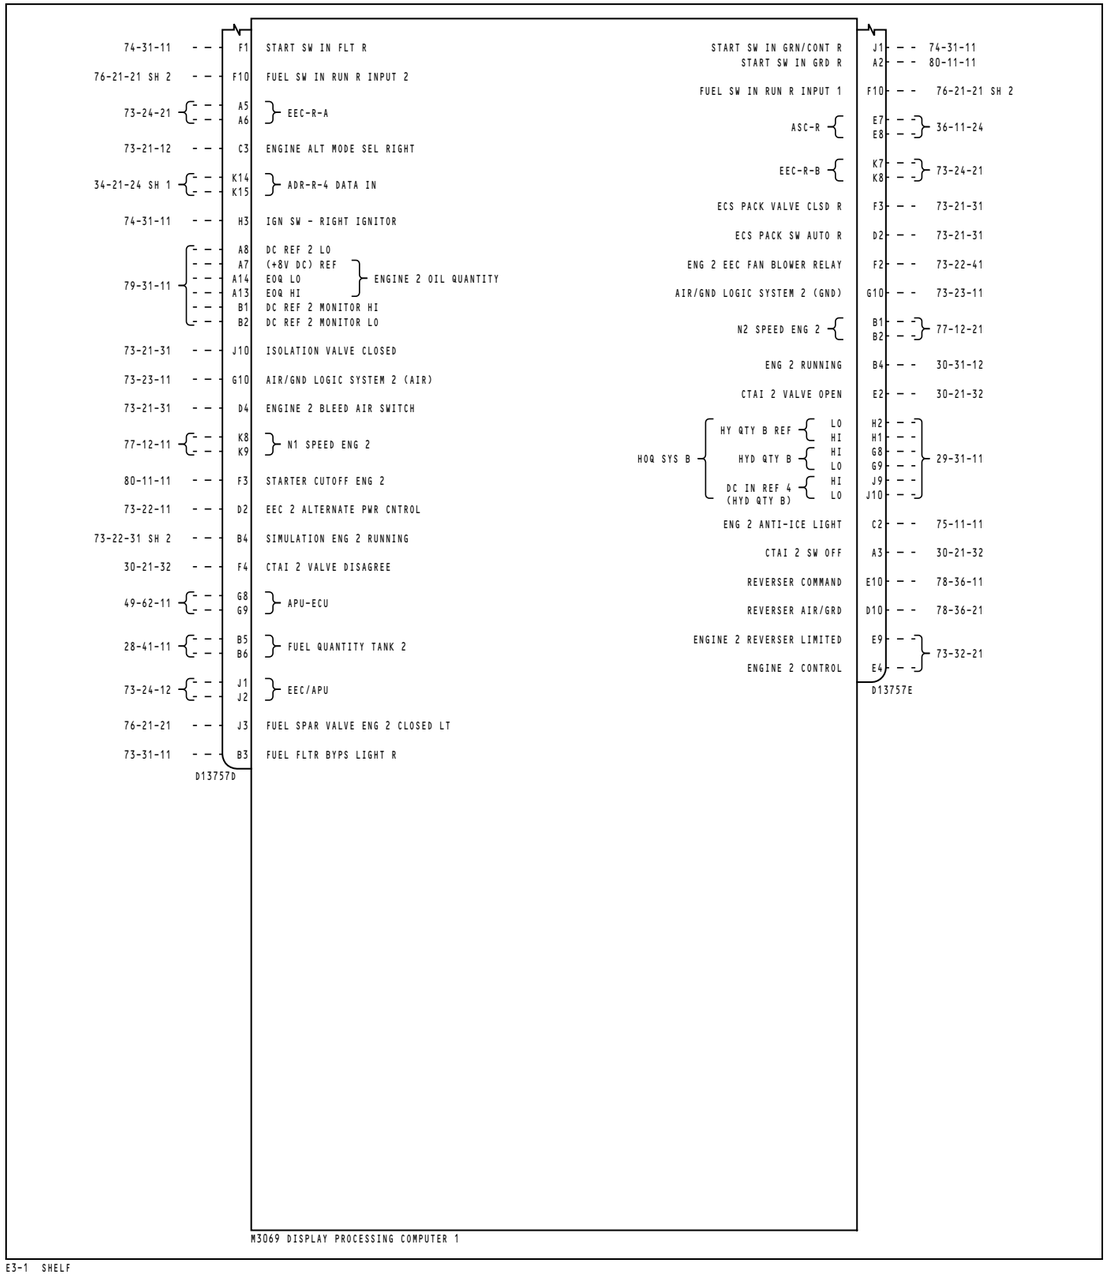


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-14

Page 1
Sheet 2
May 15/2024


737-8 WIRING DIAGRAM MANUAL

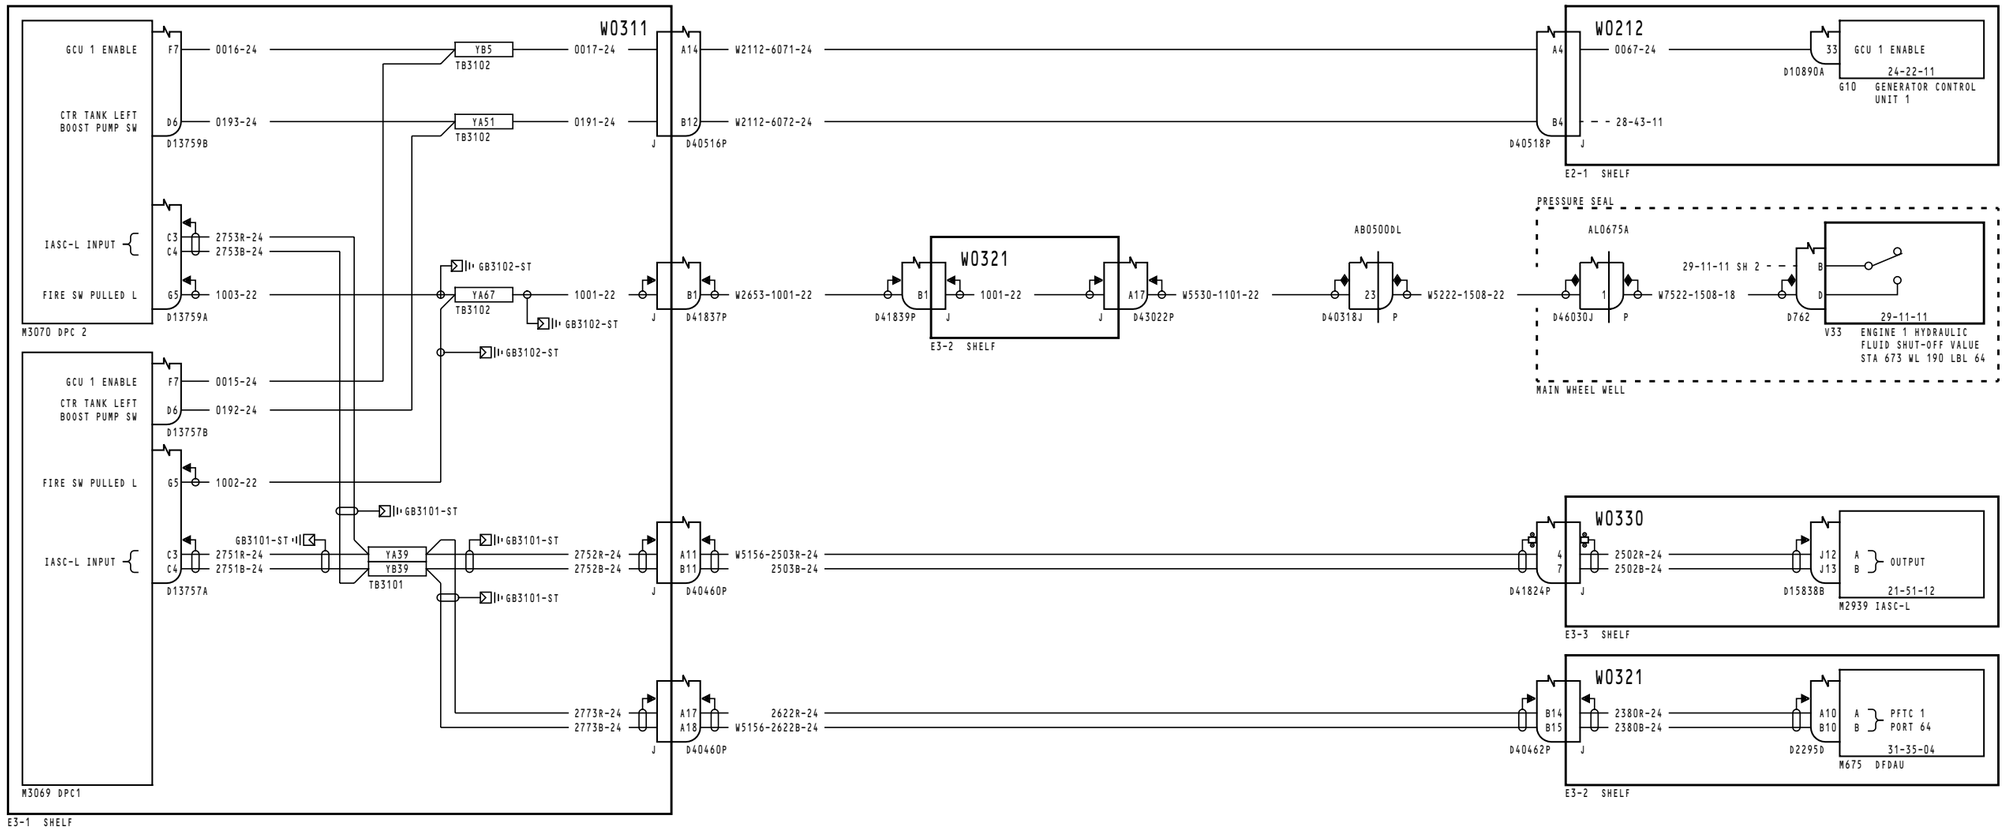

31-65-14

Page 1
Sheet 3
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

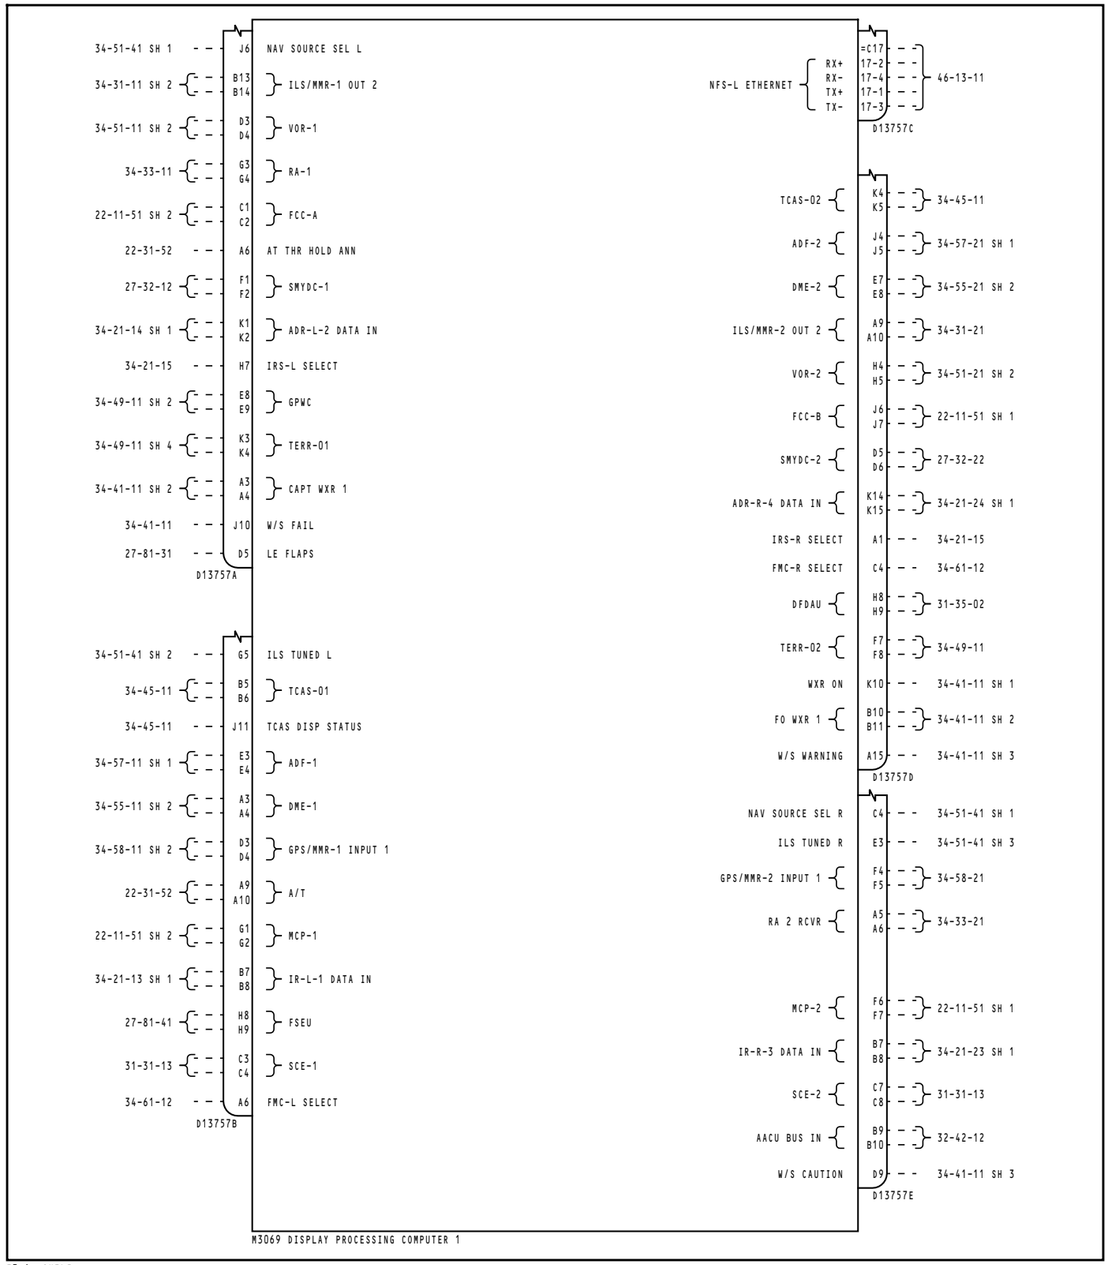

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-65-15

Page 1
Sheet 1
May 15/2024

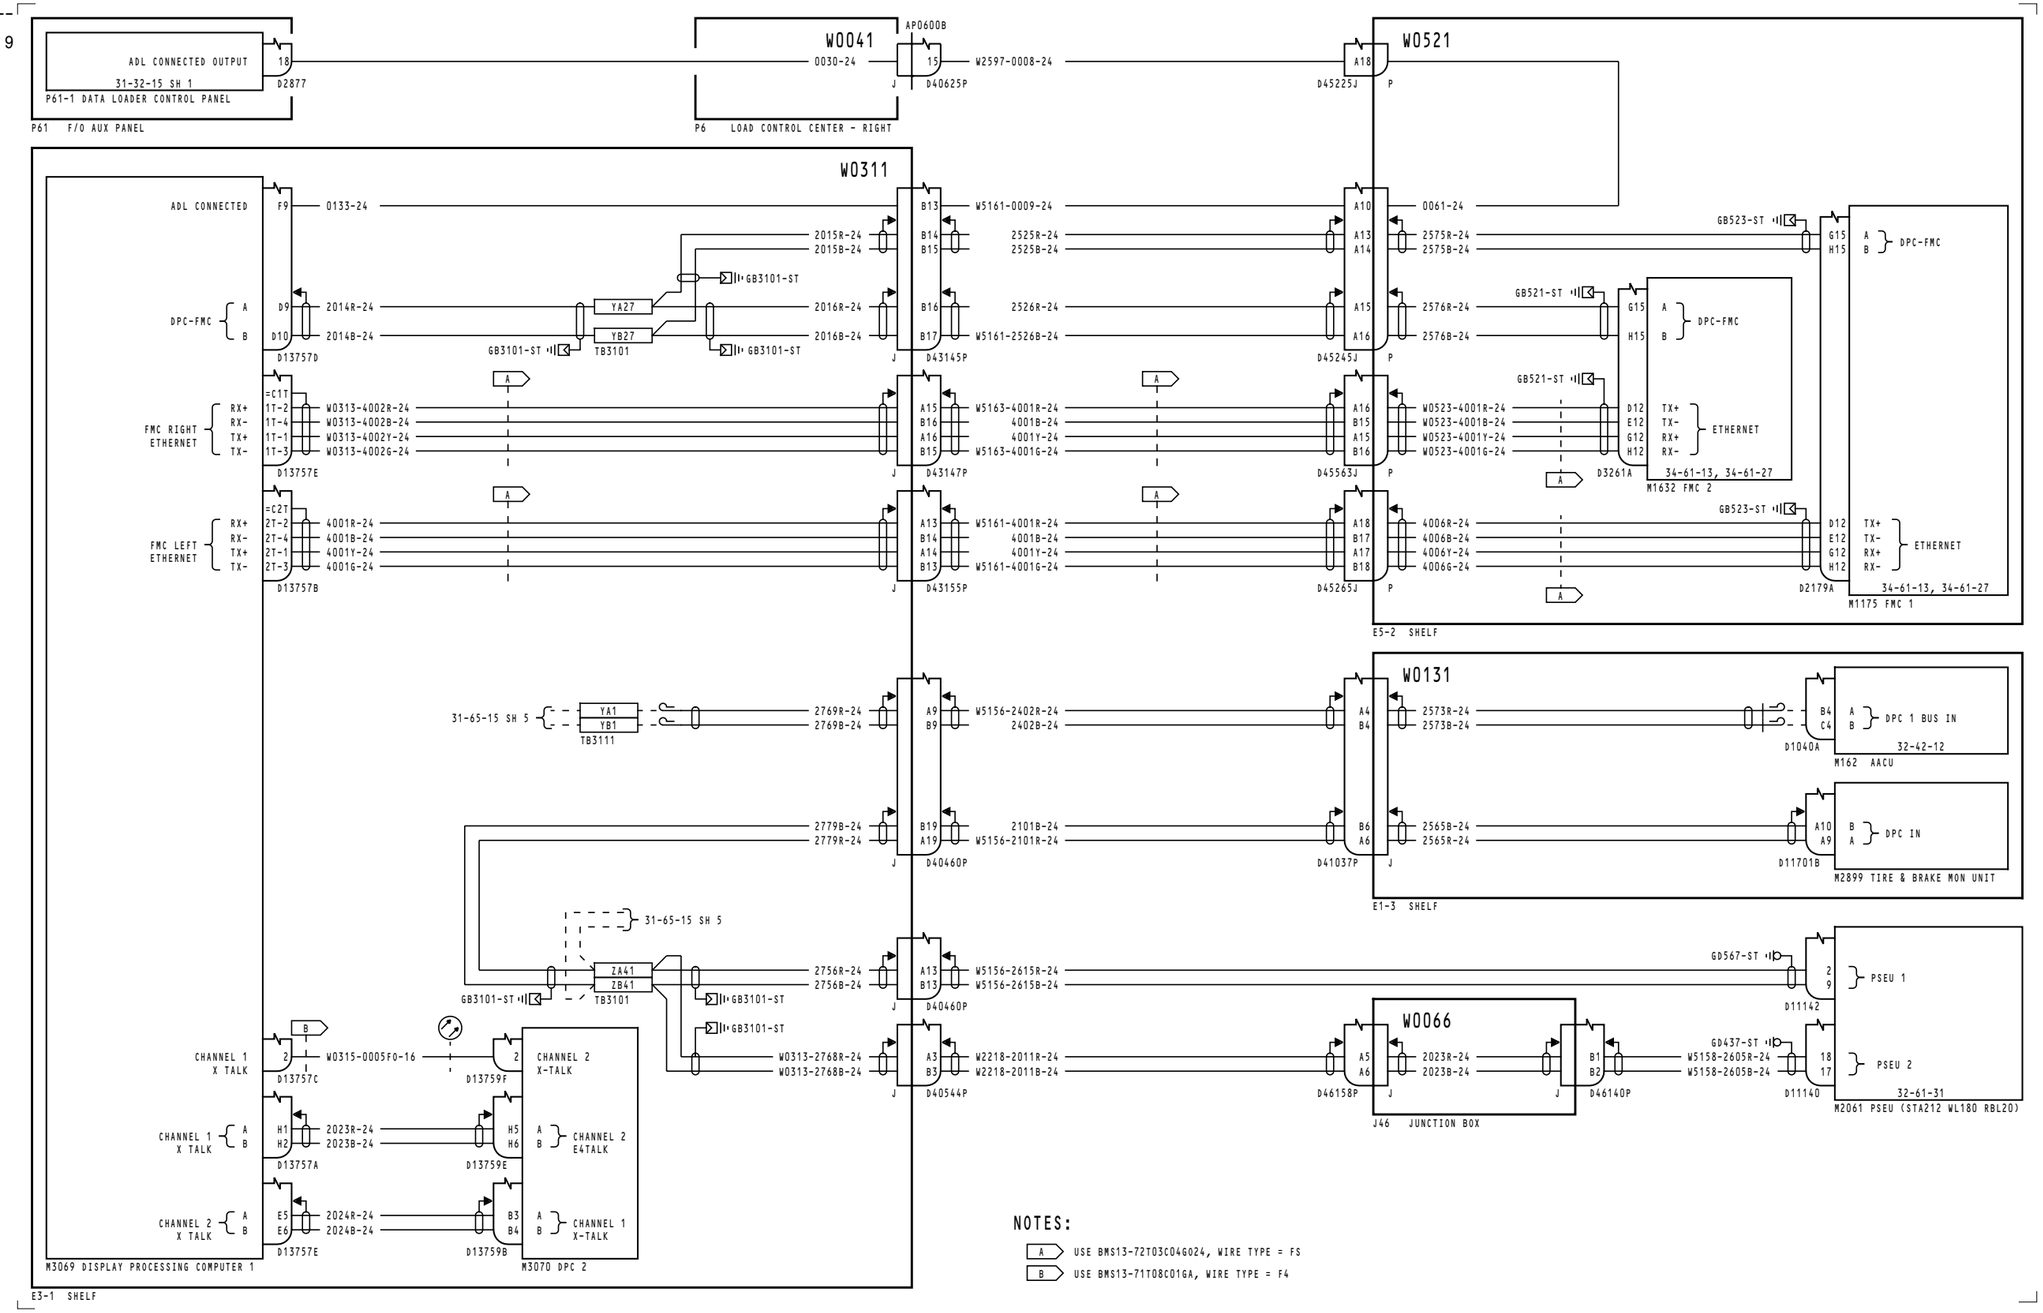

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

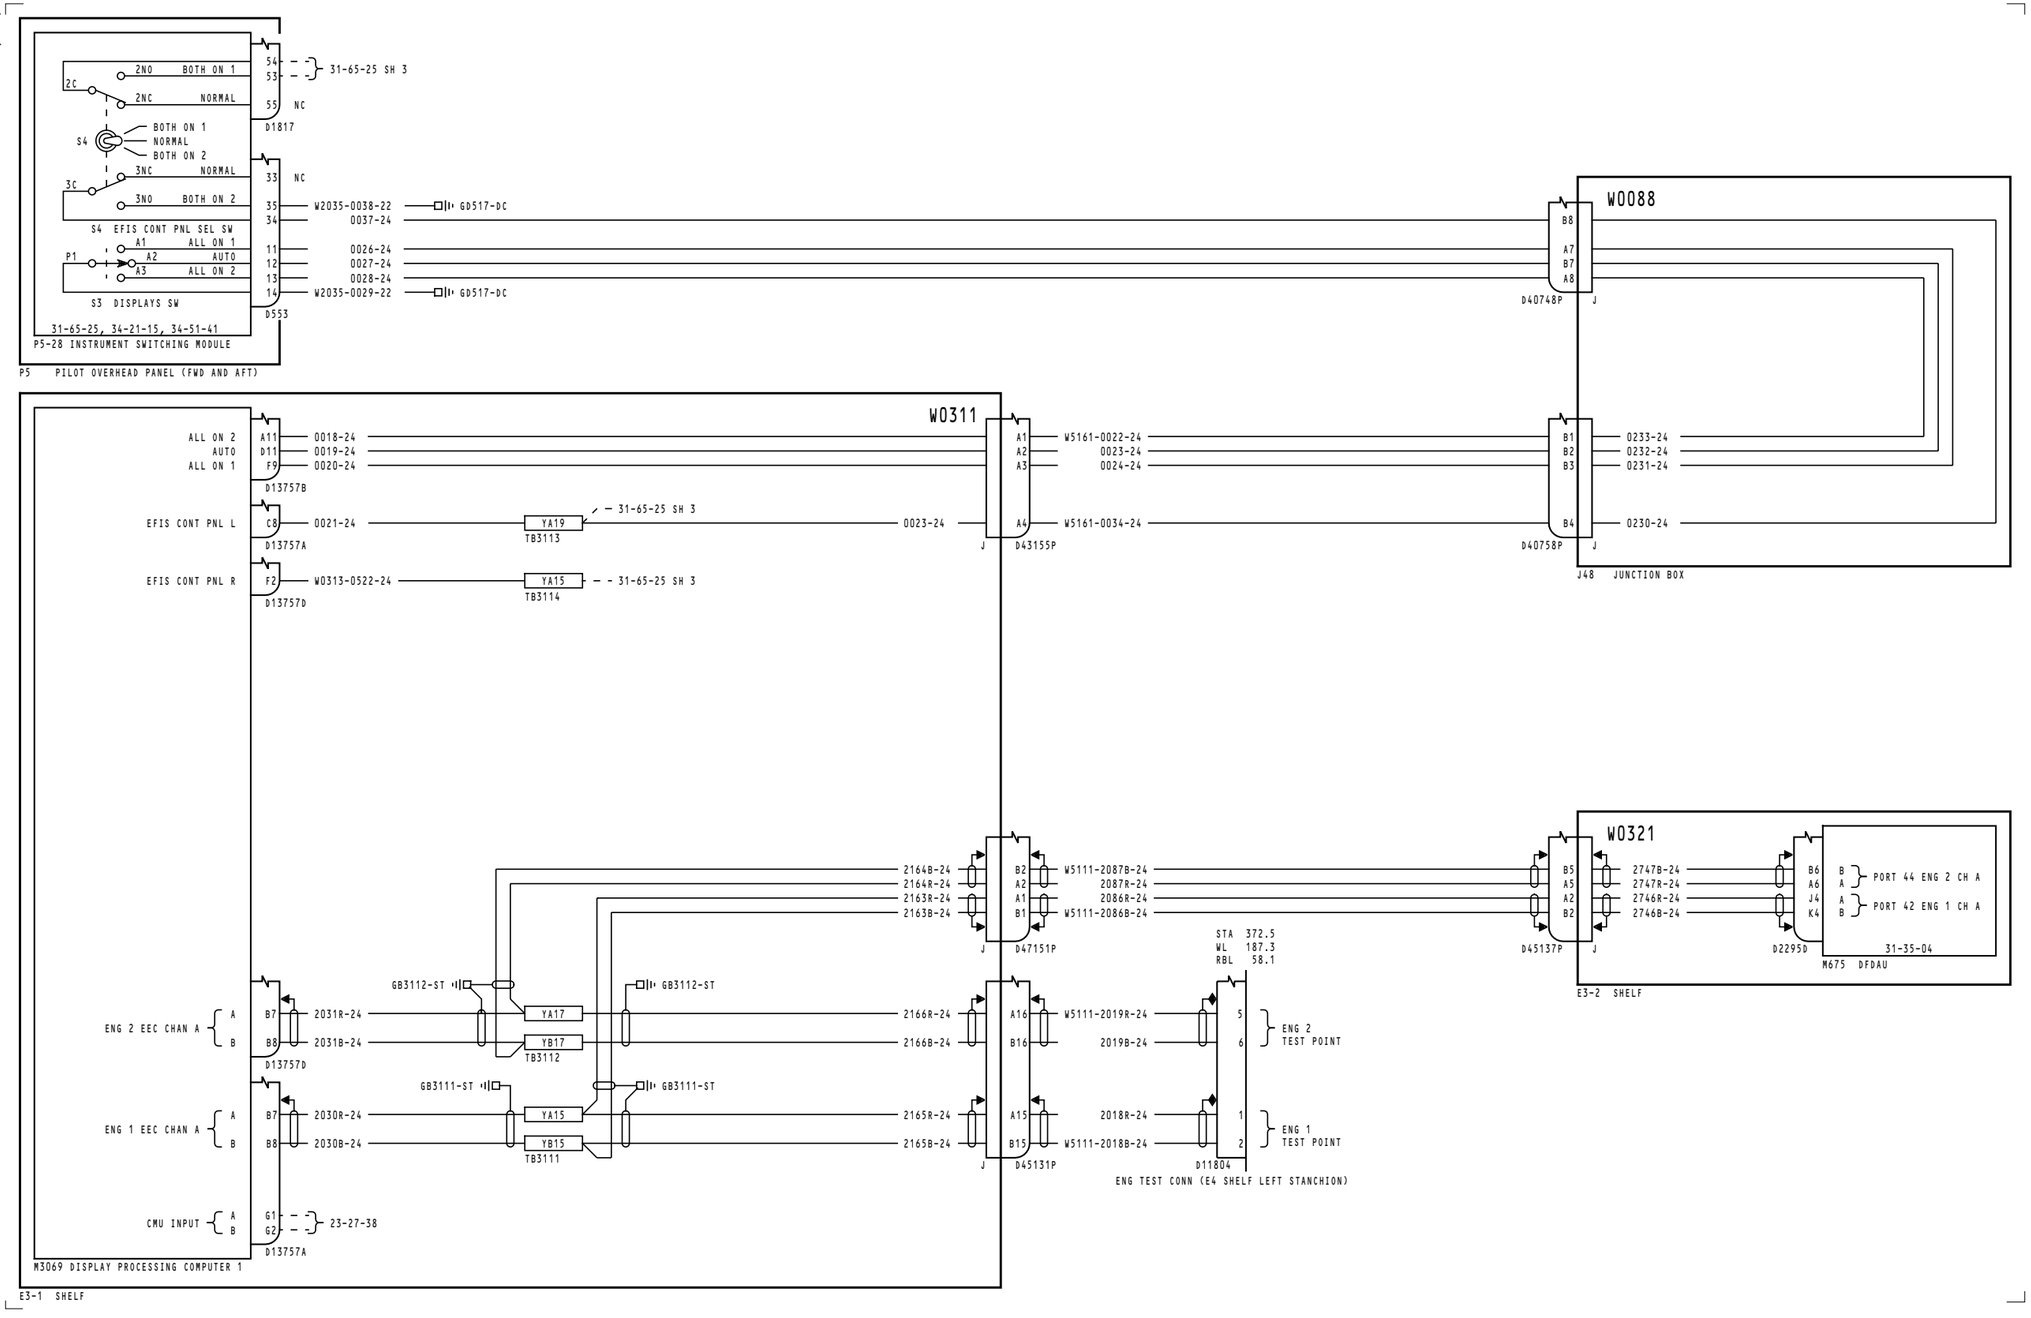

ALL

MDS - DPC 1 AVIONICS INTERFACES

D280AM1215

31-65-15

Page 1
Sheet 3
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-15

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

20

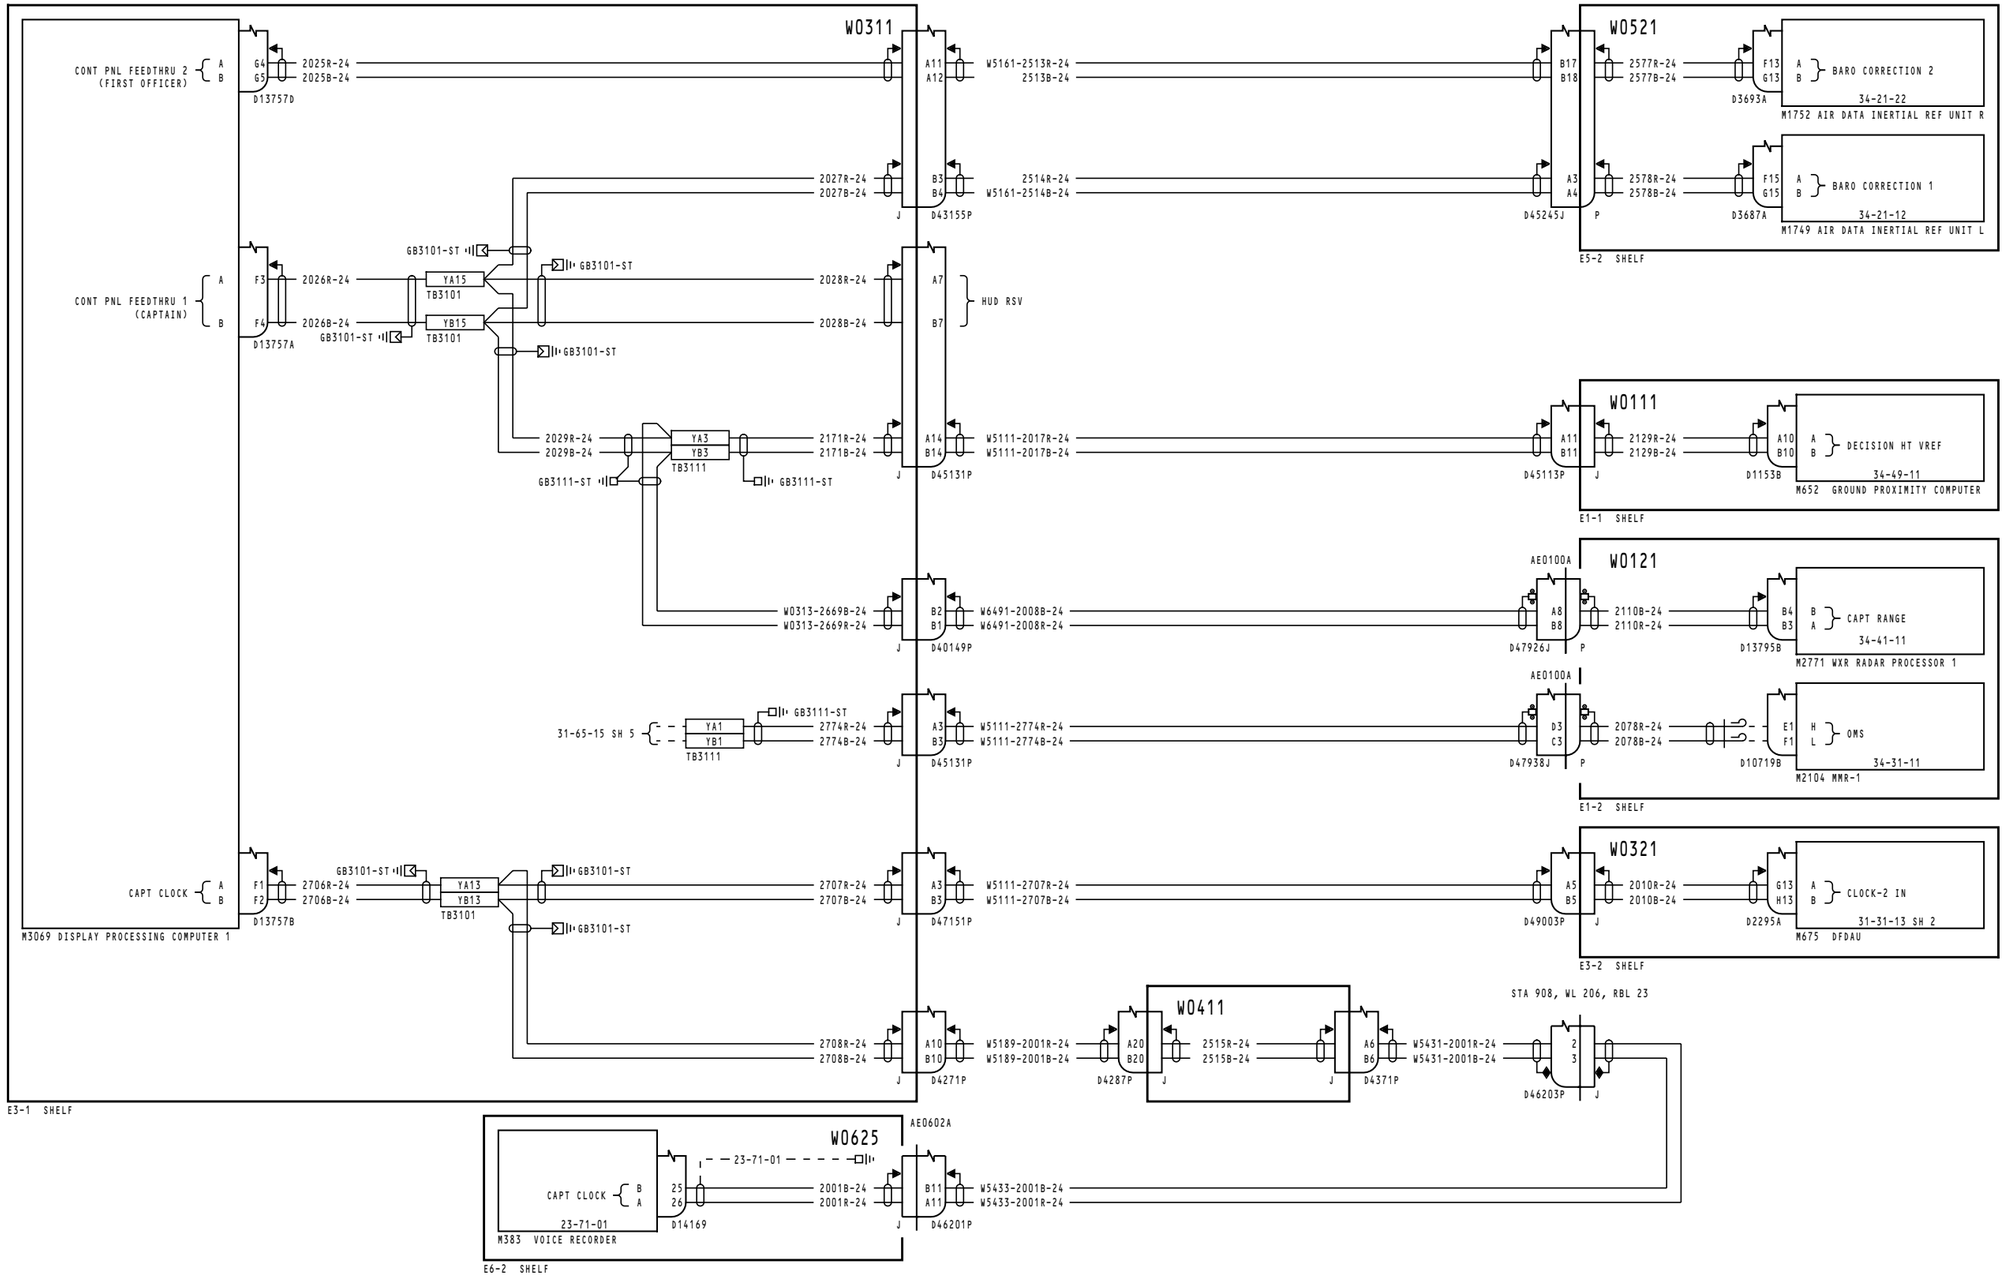

ECCN 9E991 BOEING PROPRIETARY - See title page for details


31-65-15

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A

5

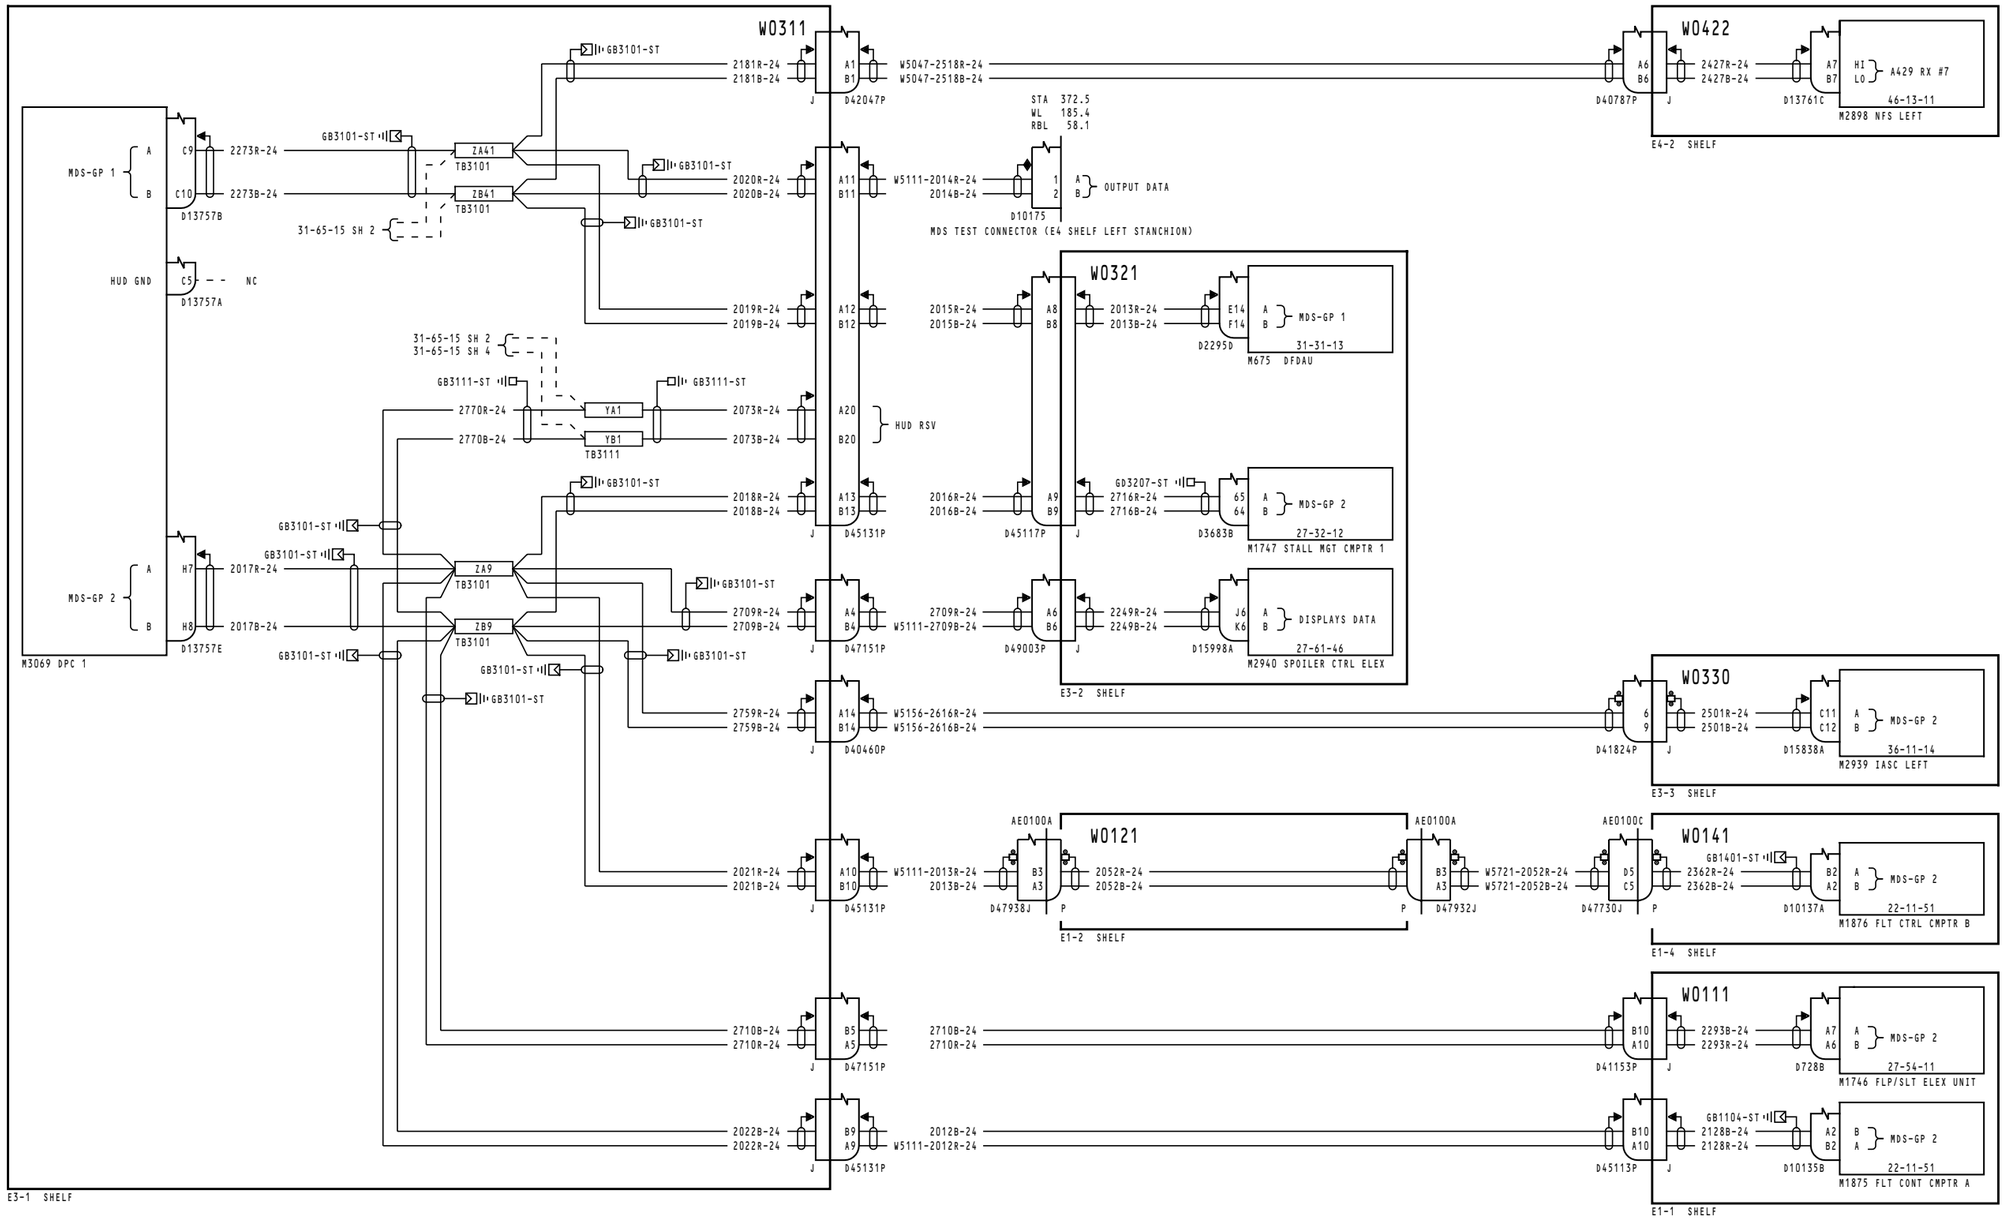


31-65-15

Page 1
Sheet 5
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

4

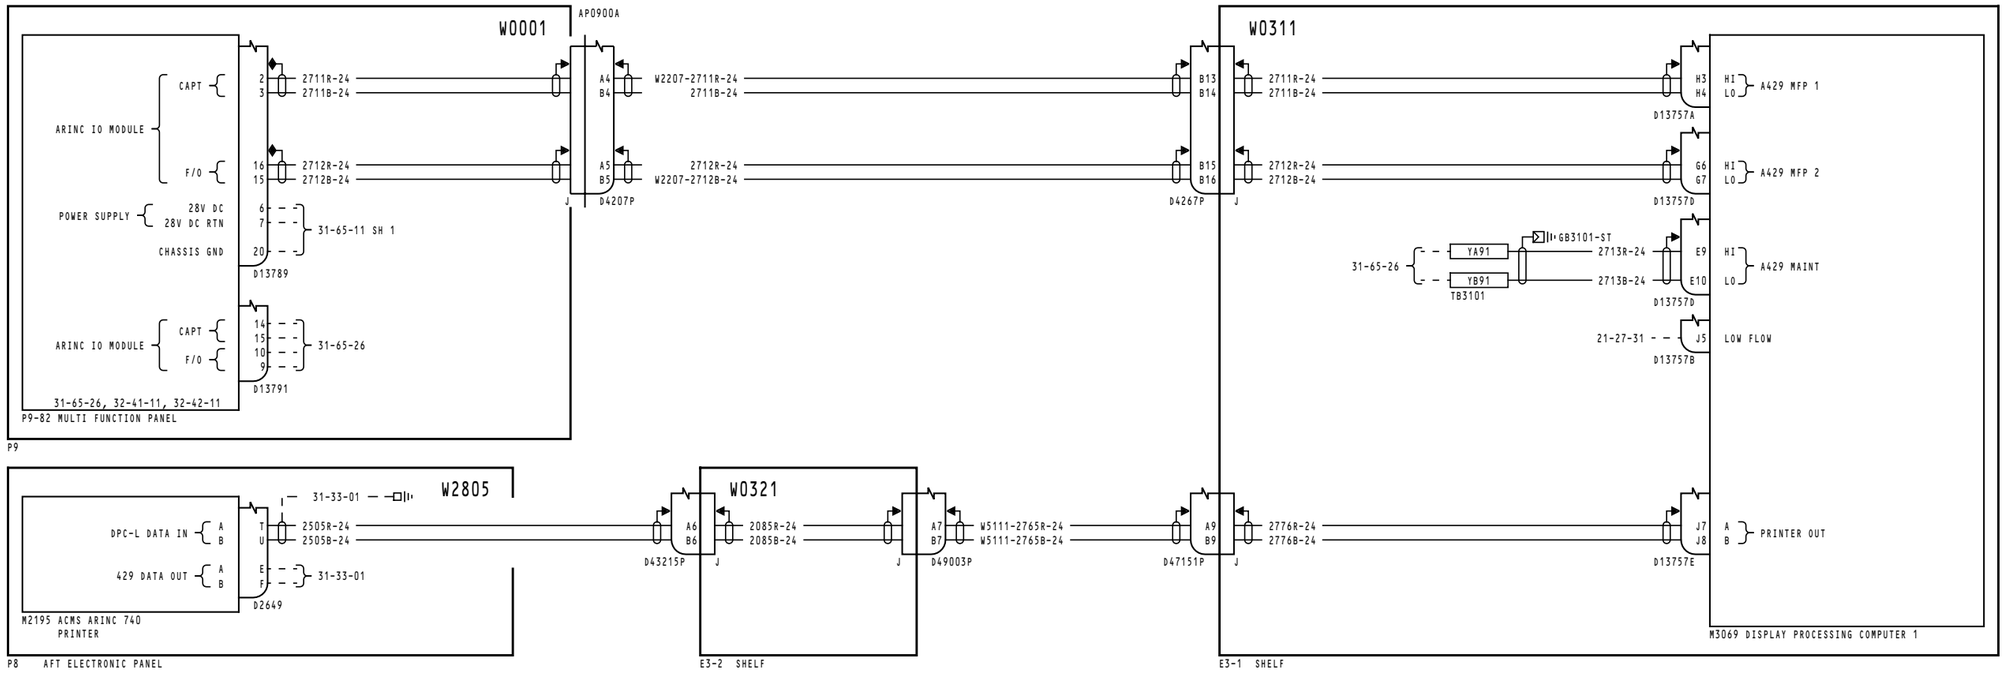


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-16

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

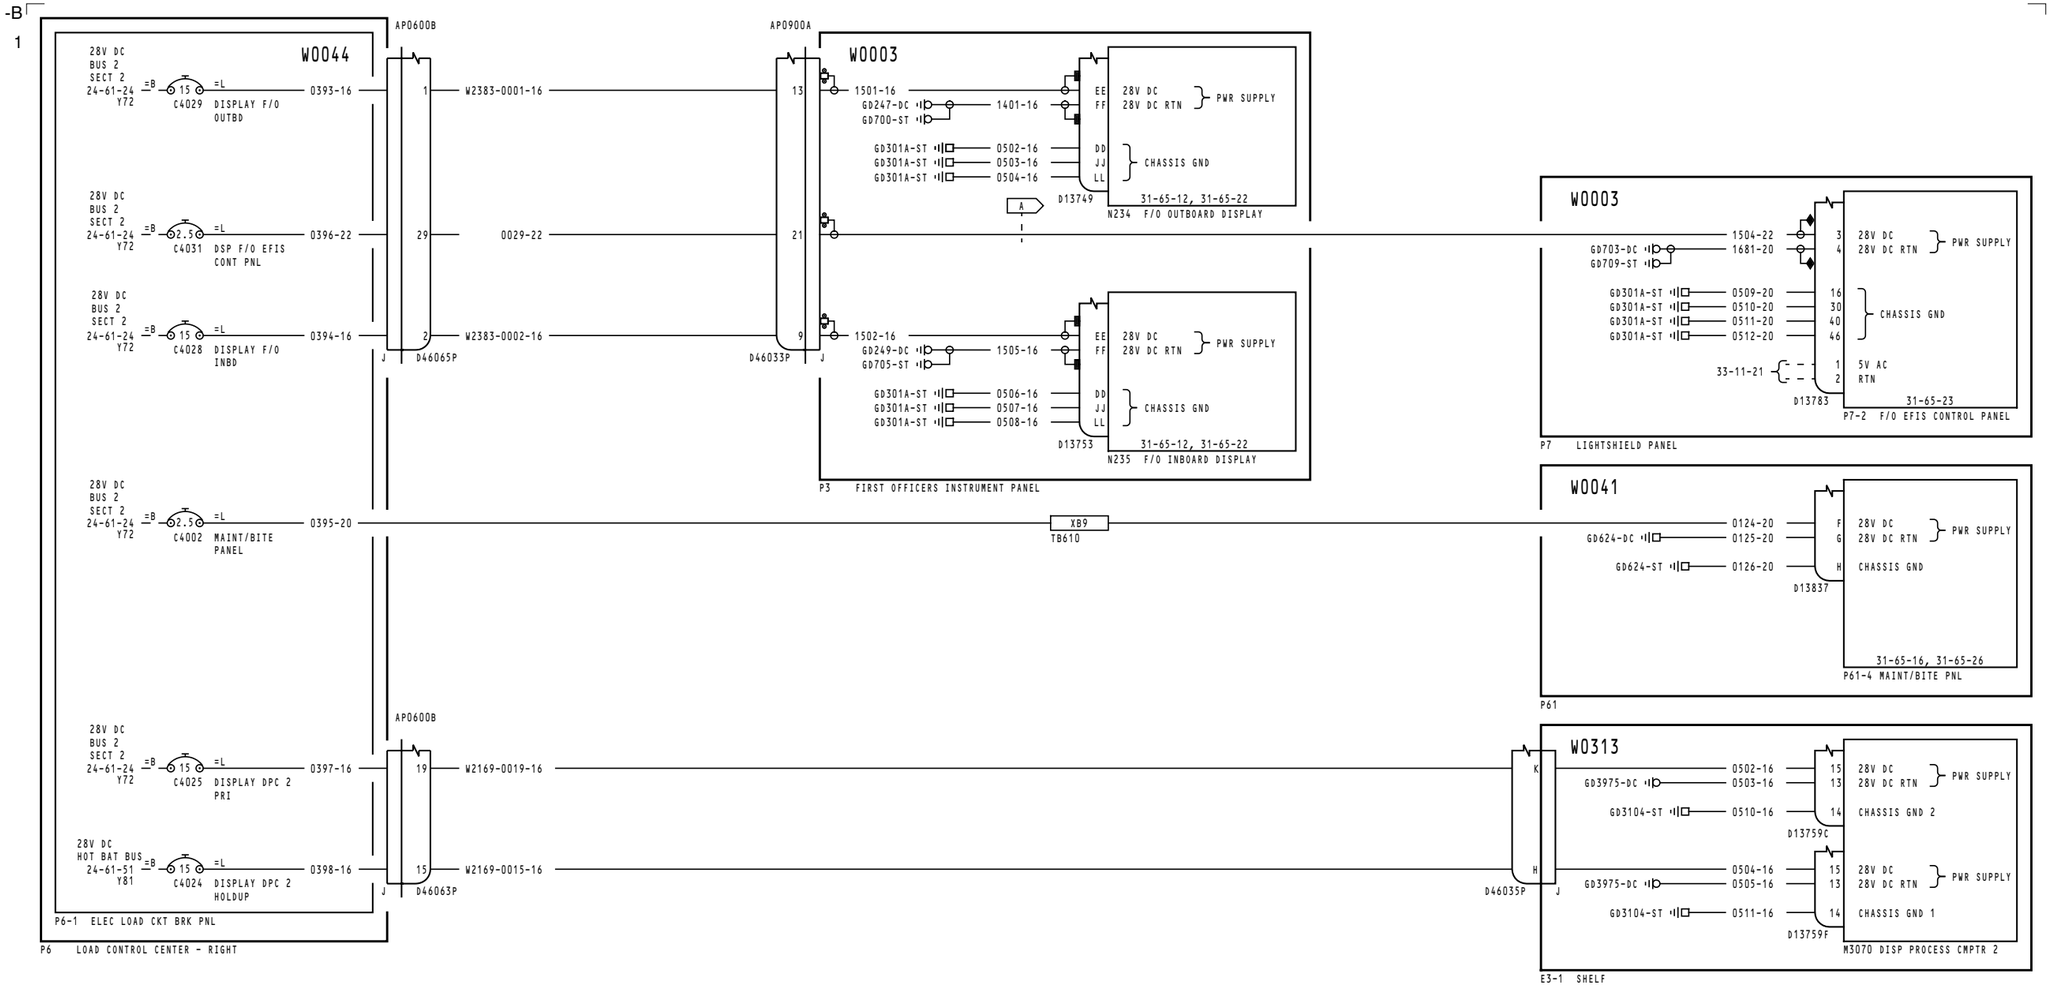

NOTES:


A P7-2 F/O EFIS CONTROL PANEL - PART OF A CRITICAL SYSTEM - WITHIN 12" OF WINDOW - EMI PROTECTION REQUIRED. SHIELD ALL WIRES TO/FROM EFIS CONNECTOR EXCEPT FOR WIRES TERMINATING WITHIN 12" OF CONNECTOR.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-21

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

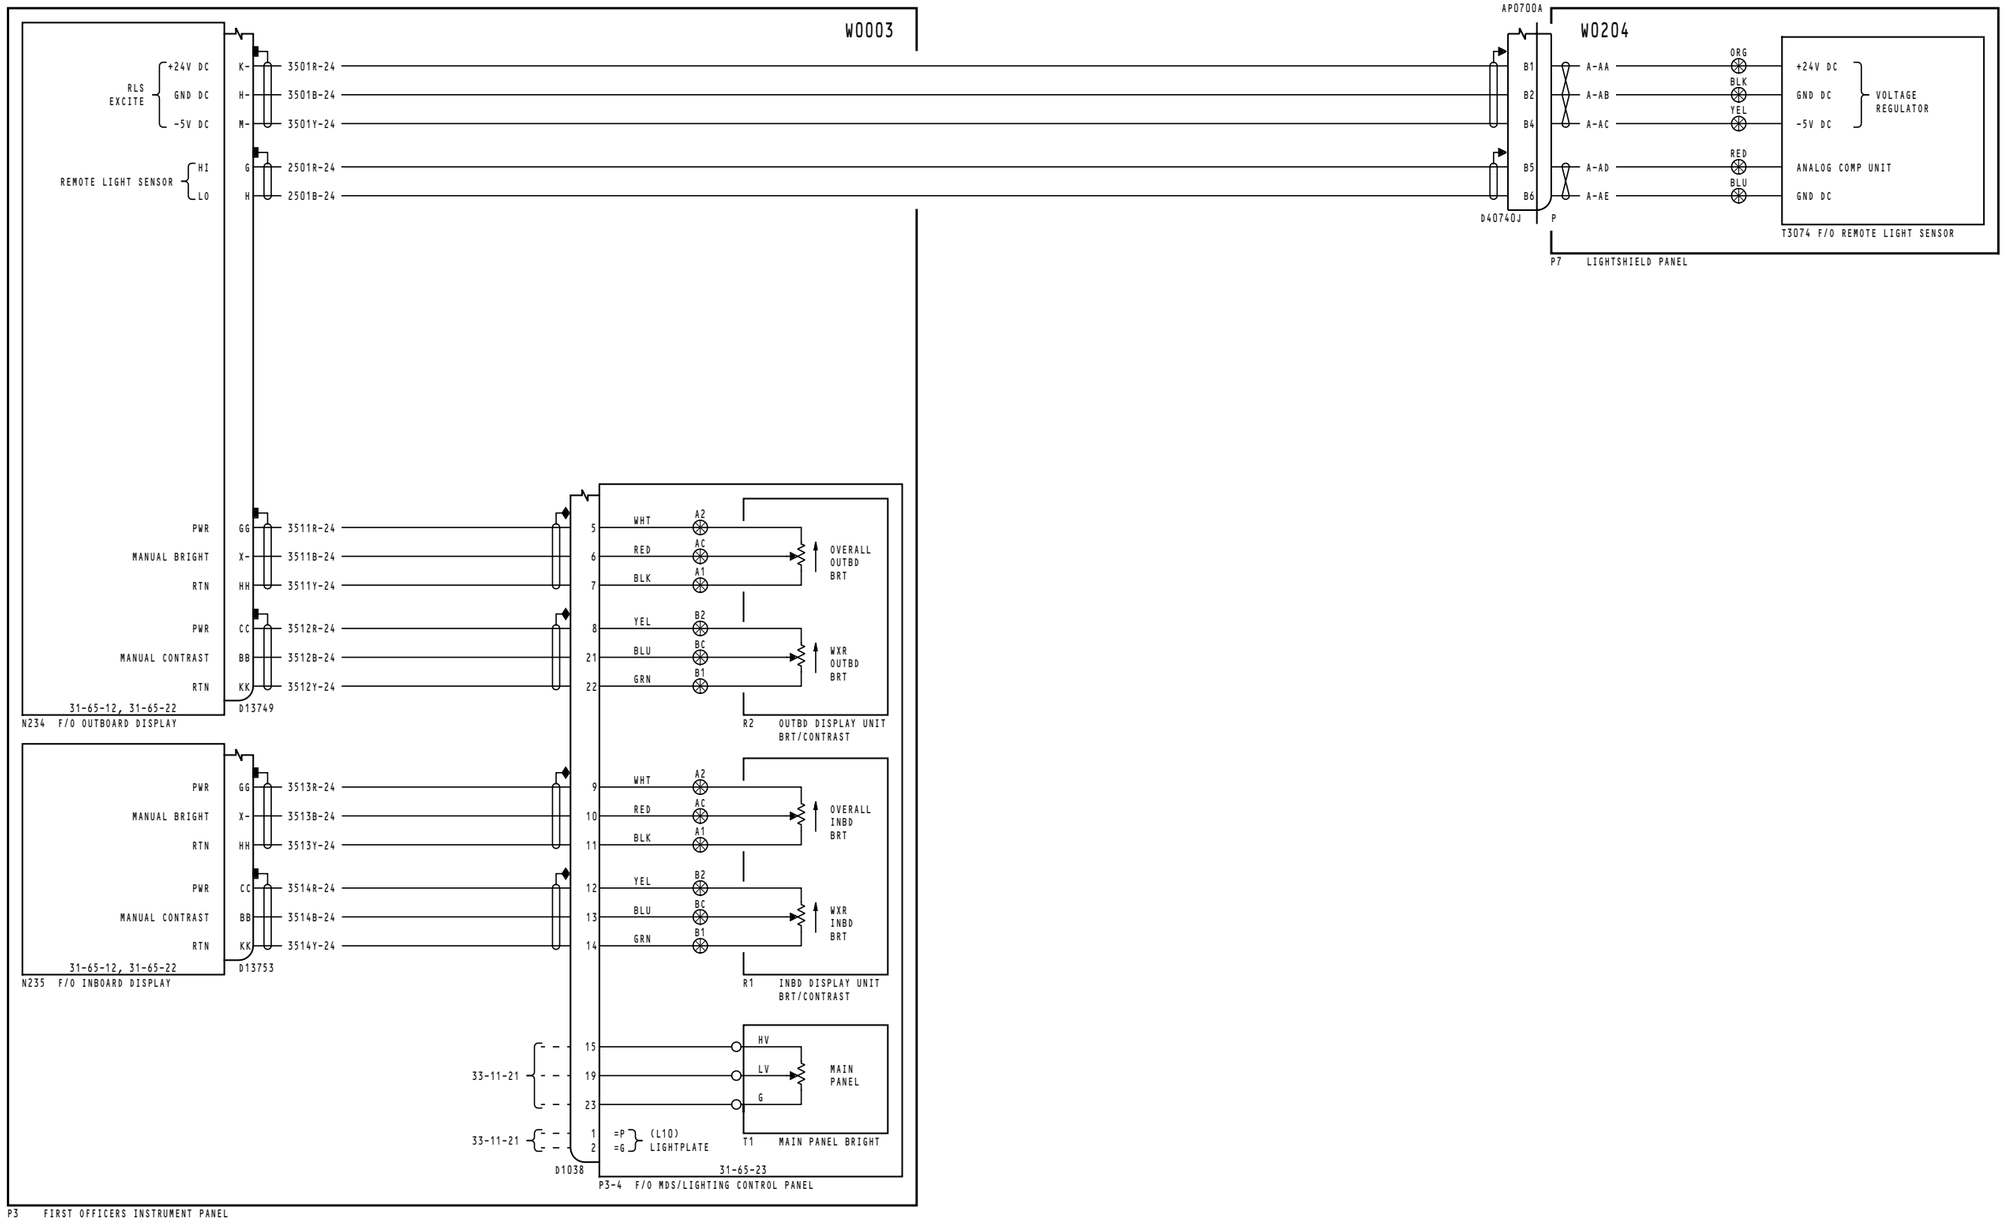


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
6

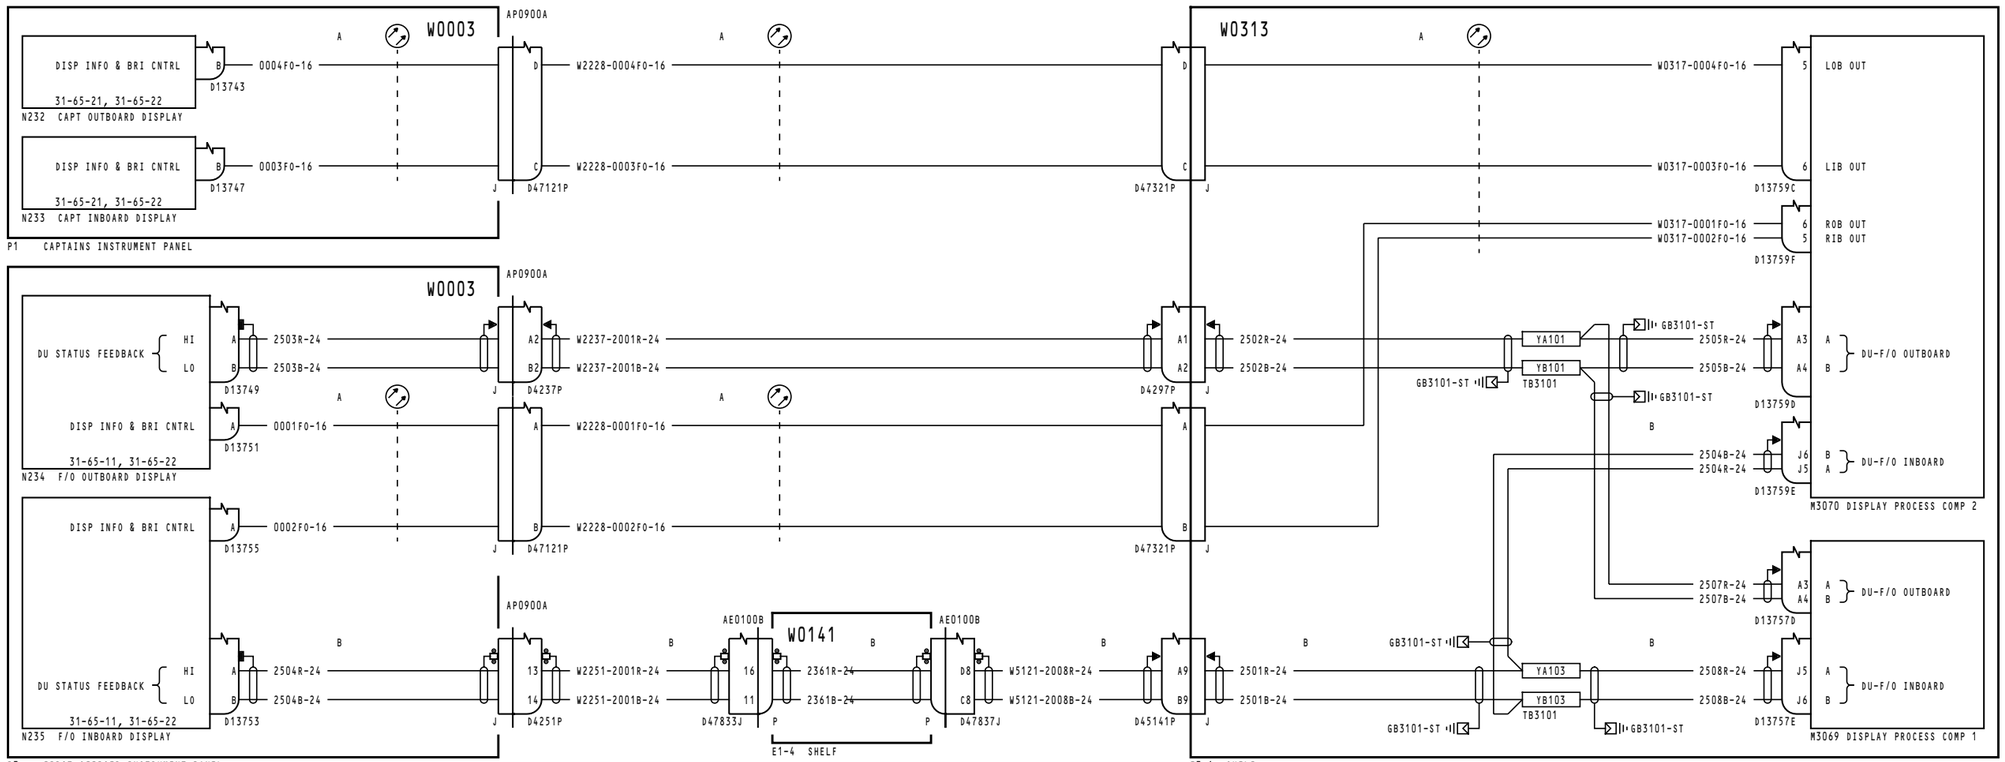

USE BMS13-71T08C01GA, WIRE TYPE = F4

NB2+ - PROVIDE SEPARATE NB2 ROUTING TO THE MDC DPC 1 & 2, D/N BJE-BA
MAY BE ROUTED TOGETHER ON E3-1 SHELF AND BEHIND P3 PANEL


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-22

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

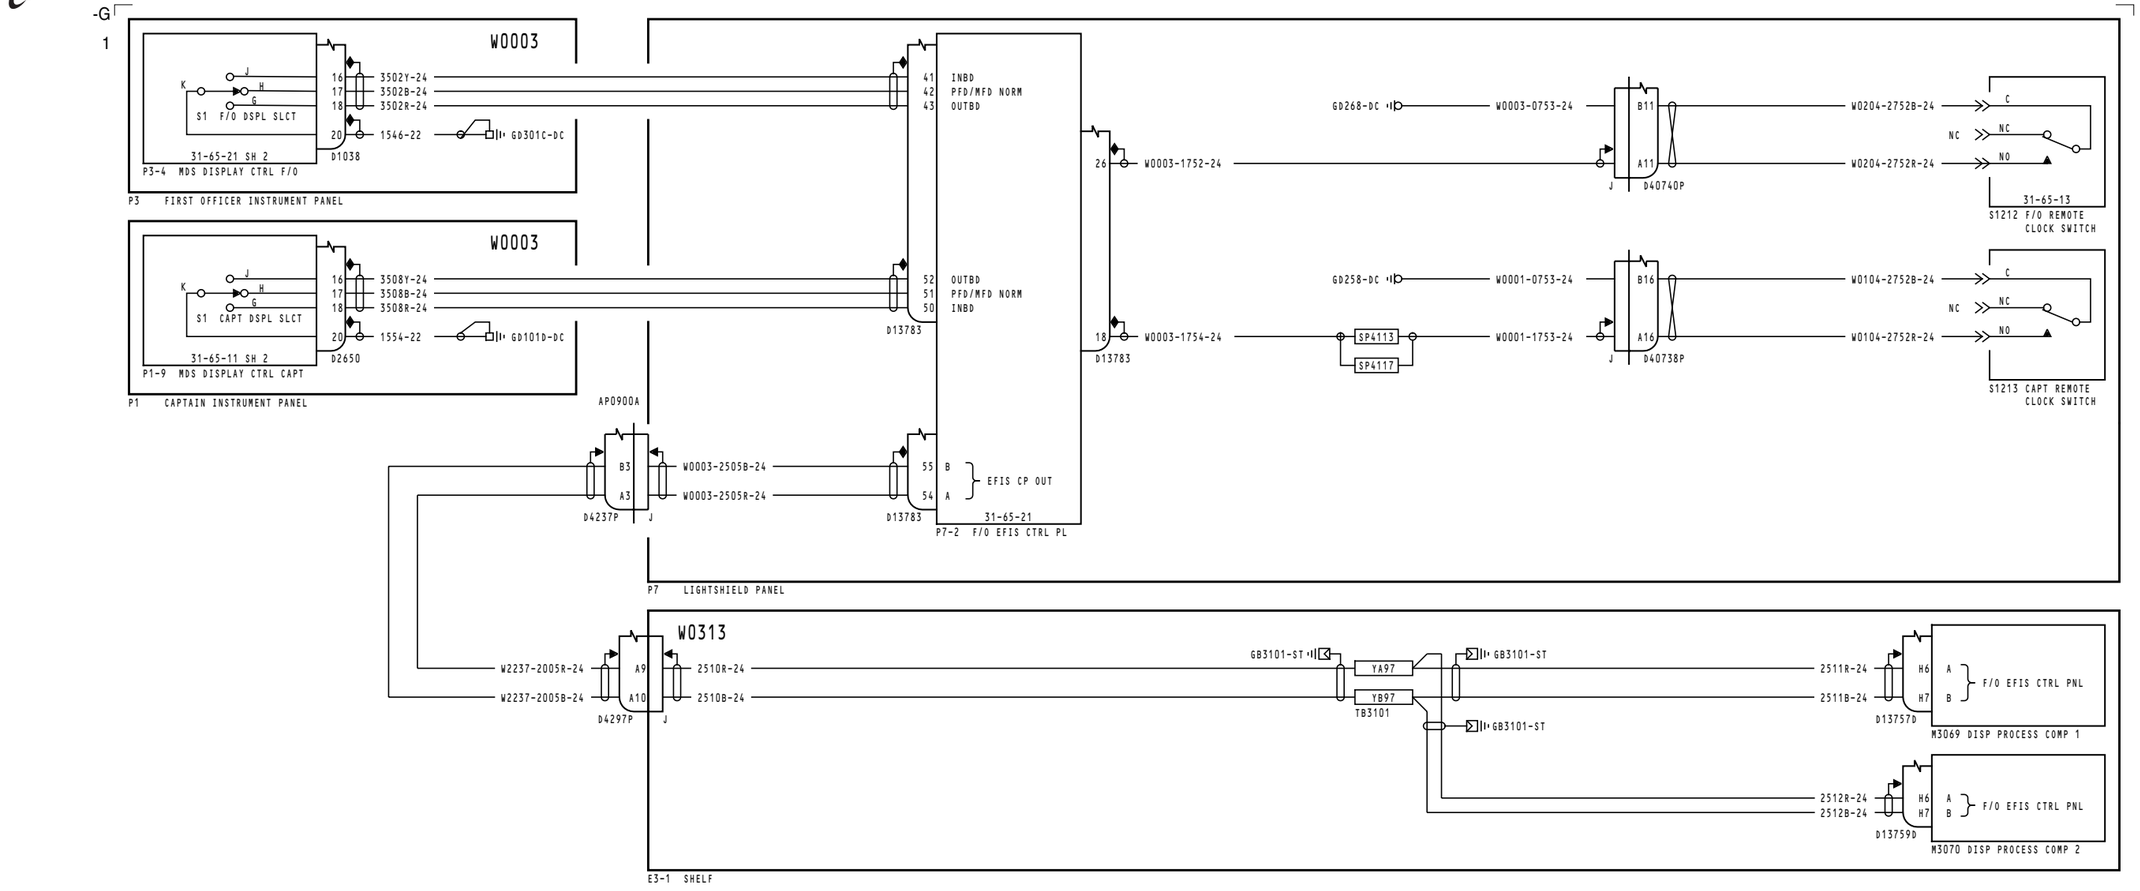


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-23

Page 1

May 15/2024

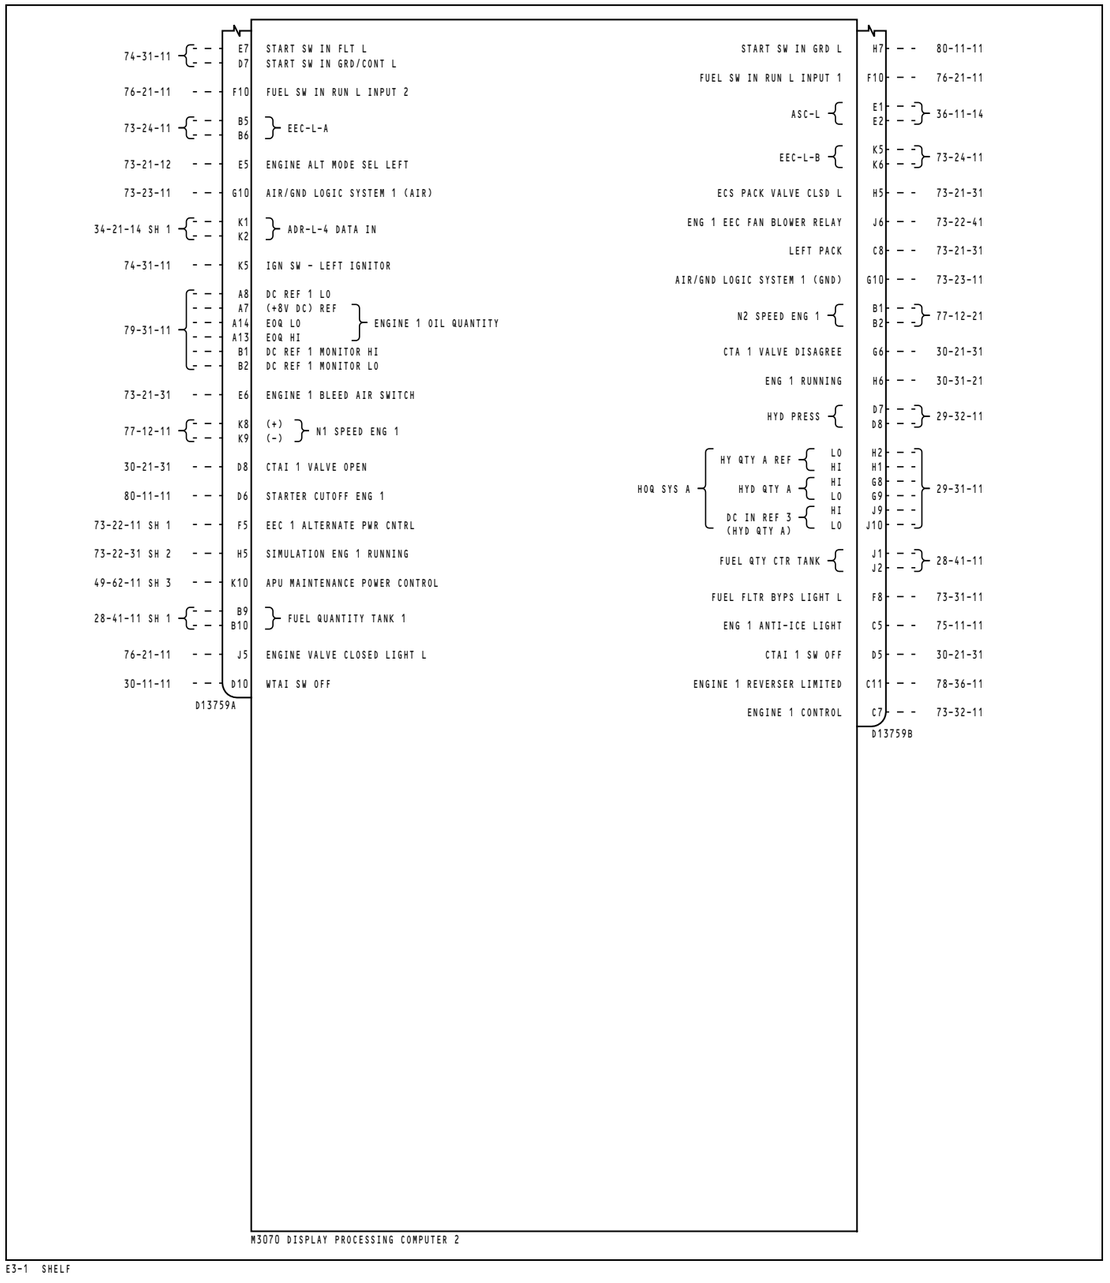


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-24

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

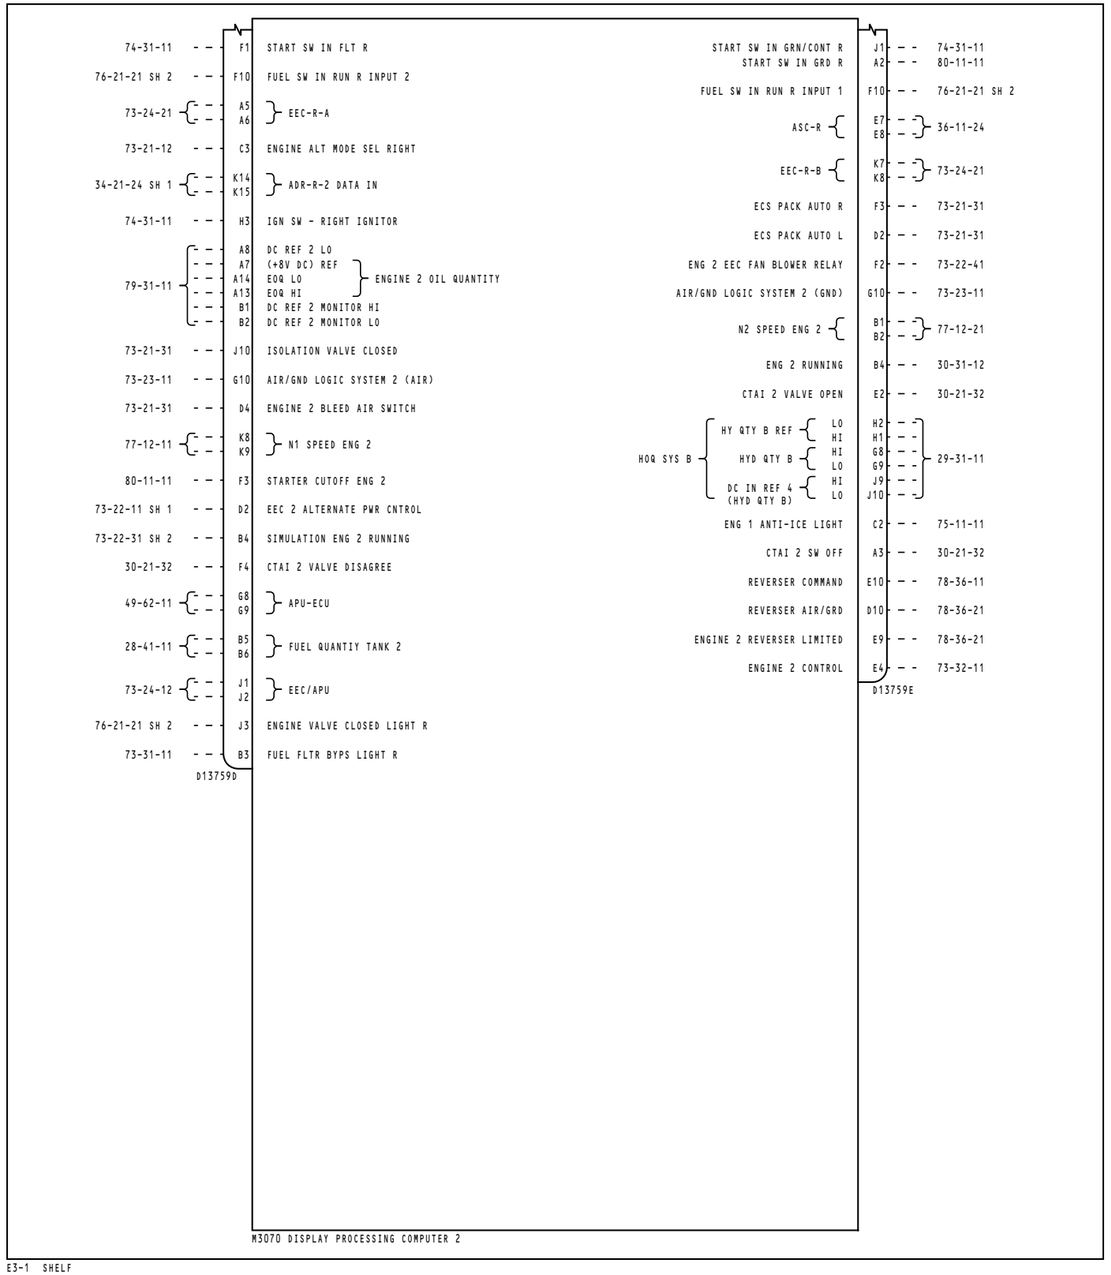


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-24

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-H
1

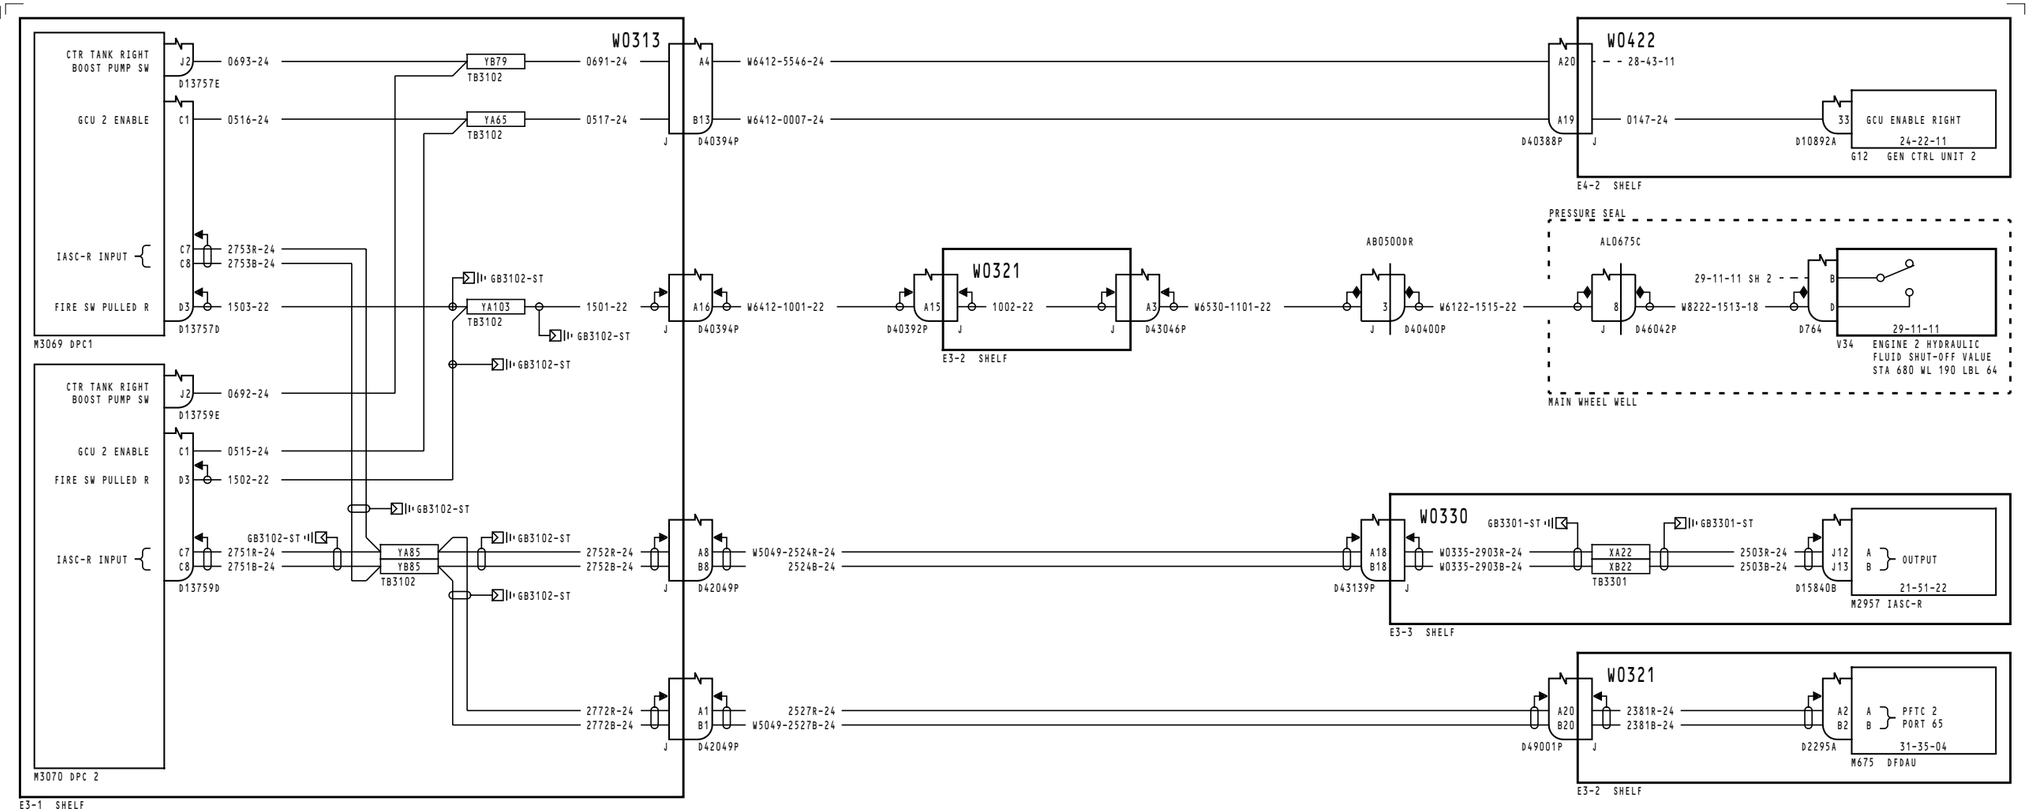


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-24

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

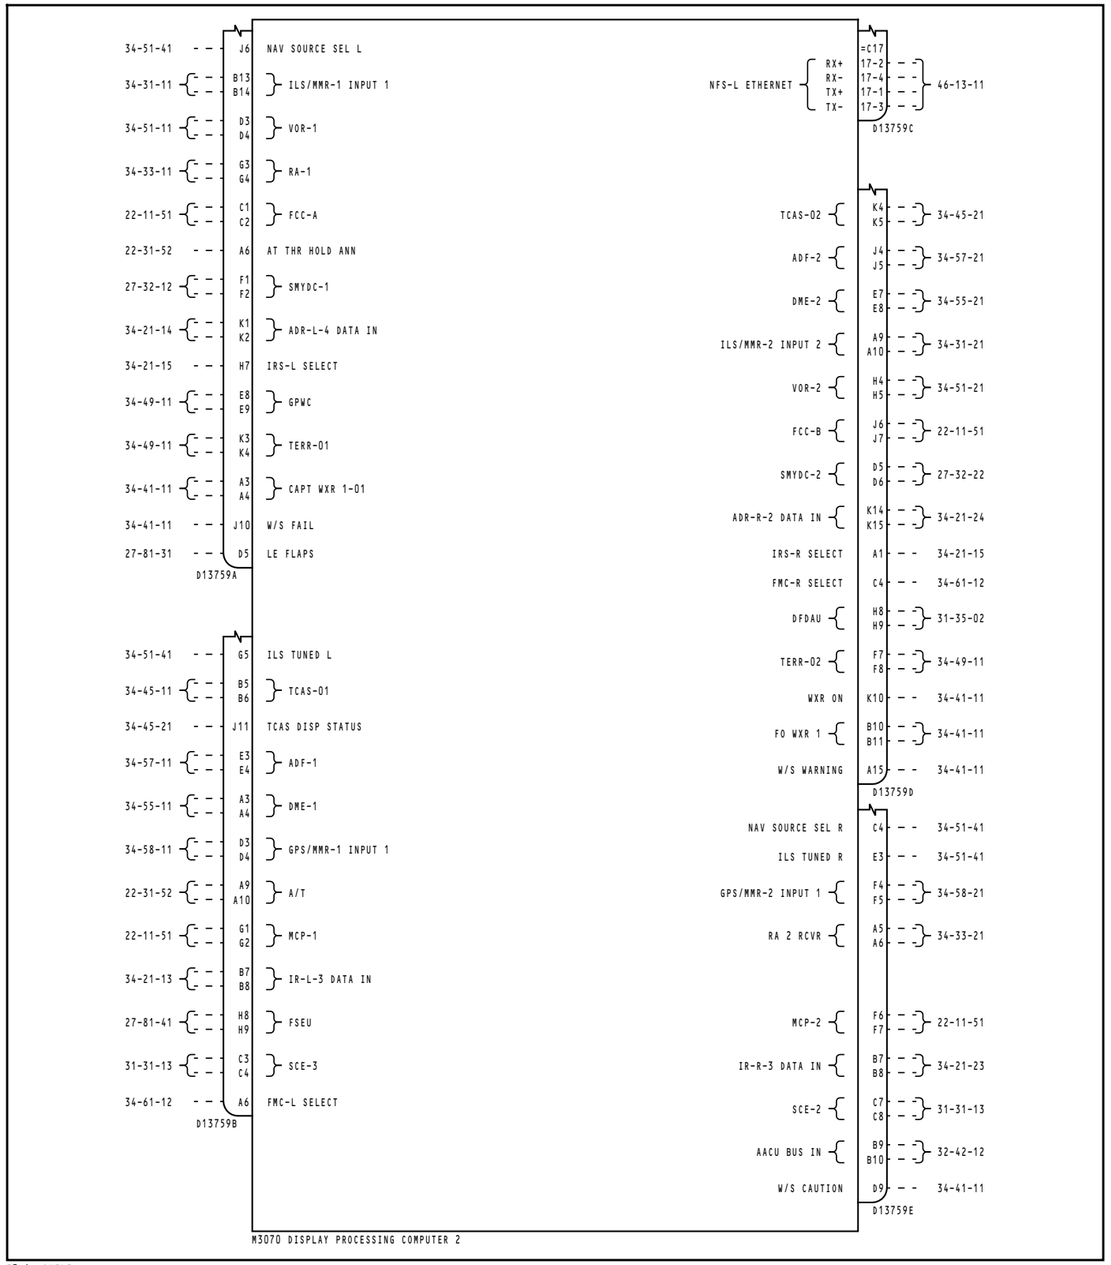


E3-1 SHELF

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-25

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

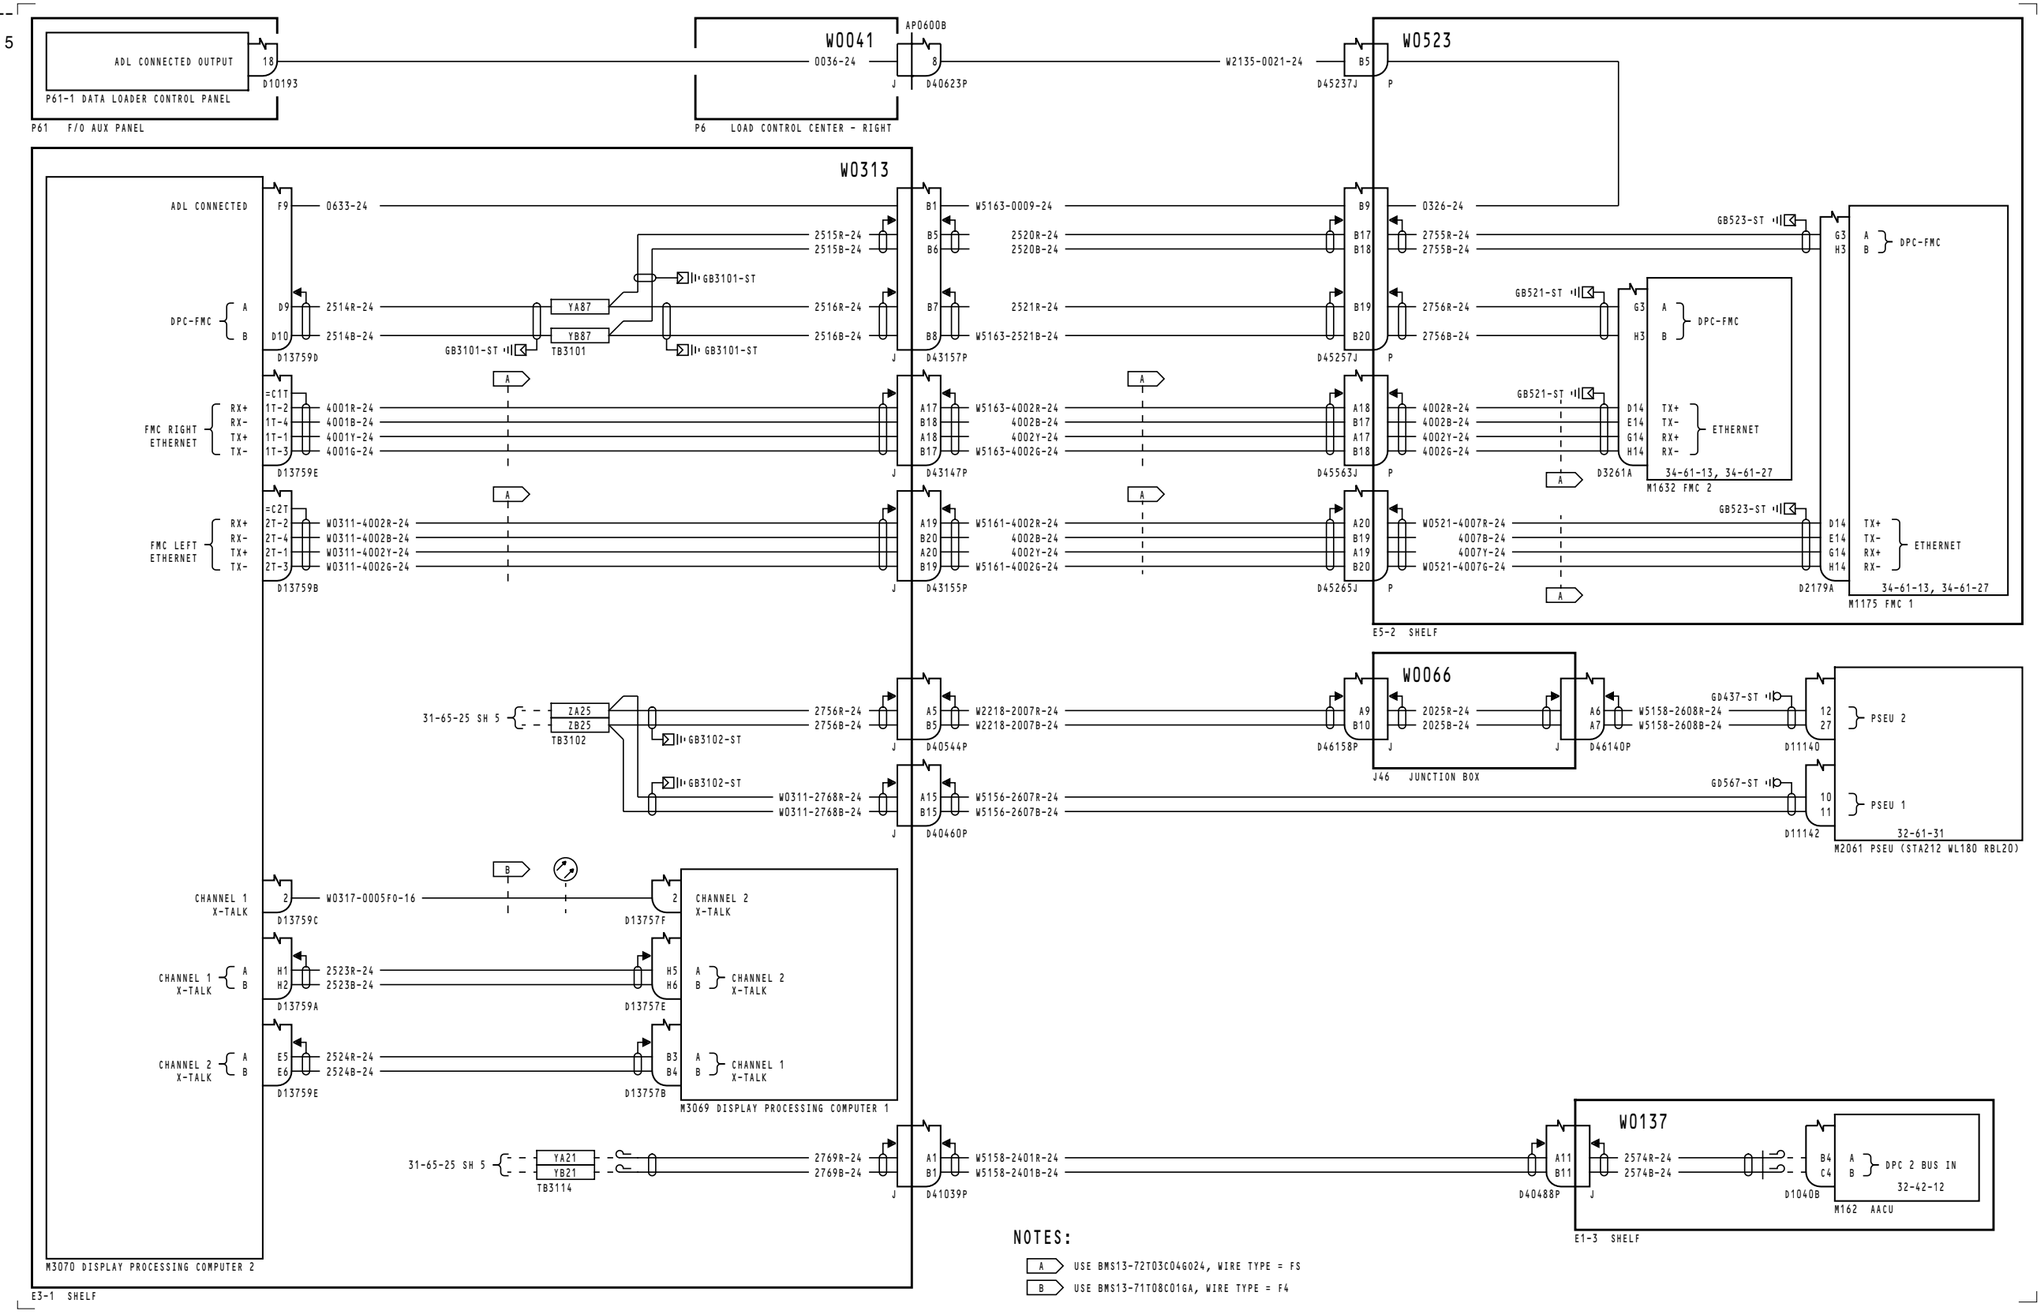


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-25

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
4

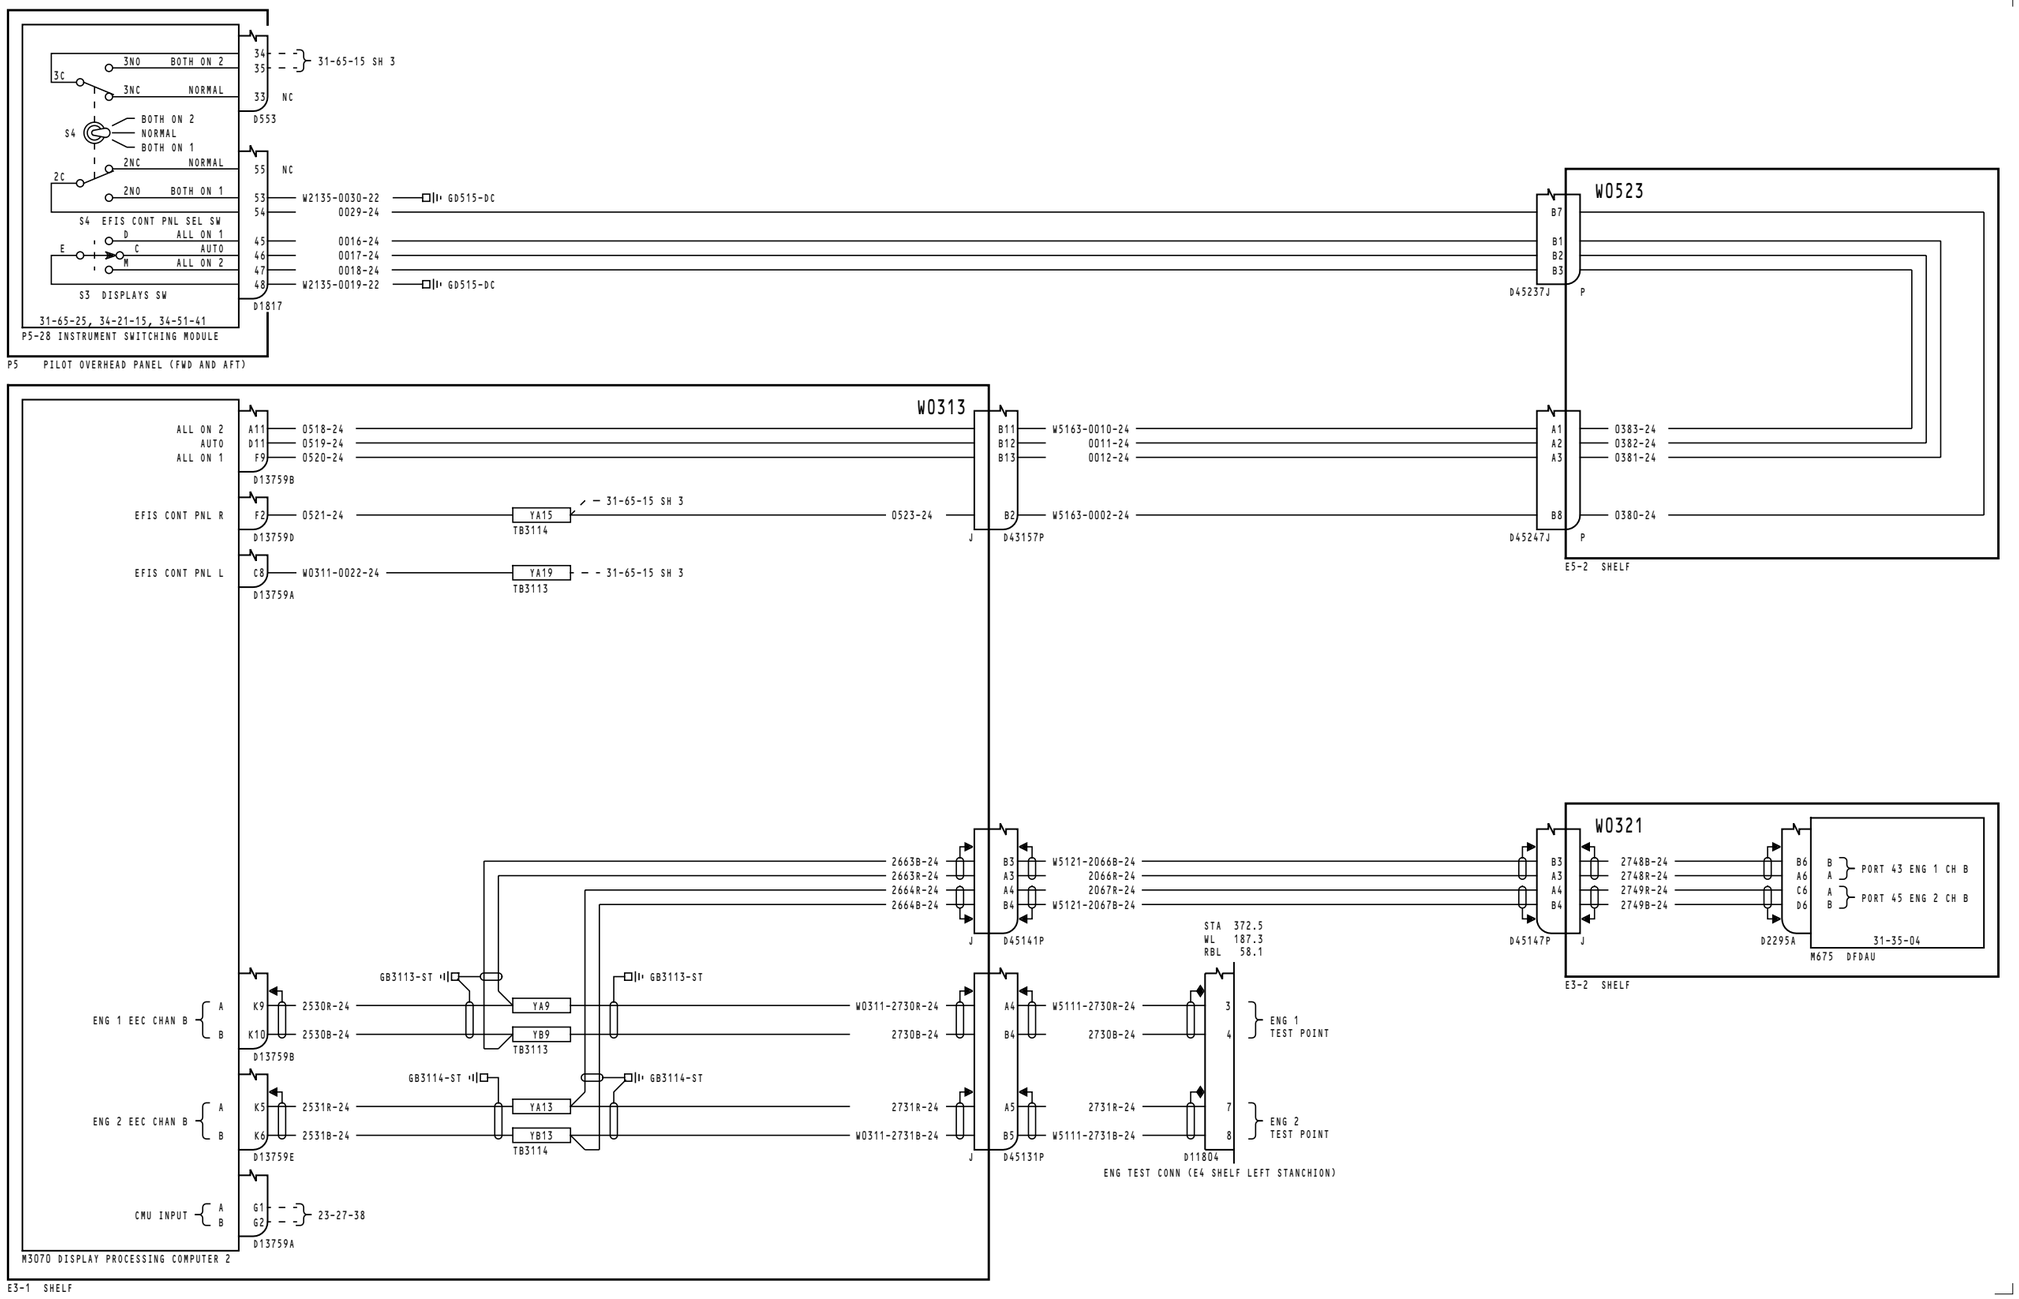


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-25

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

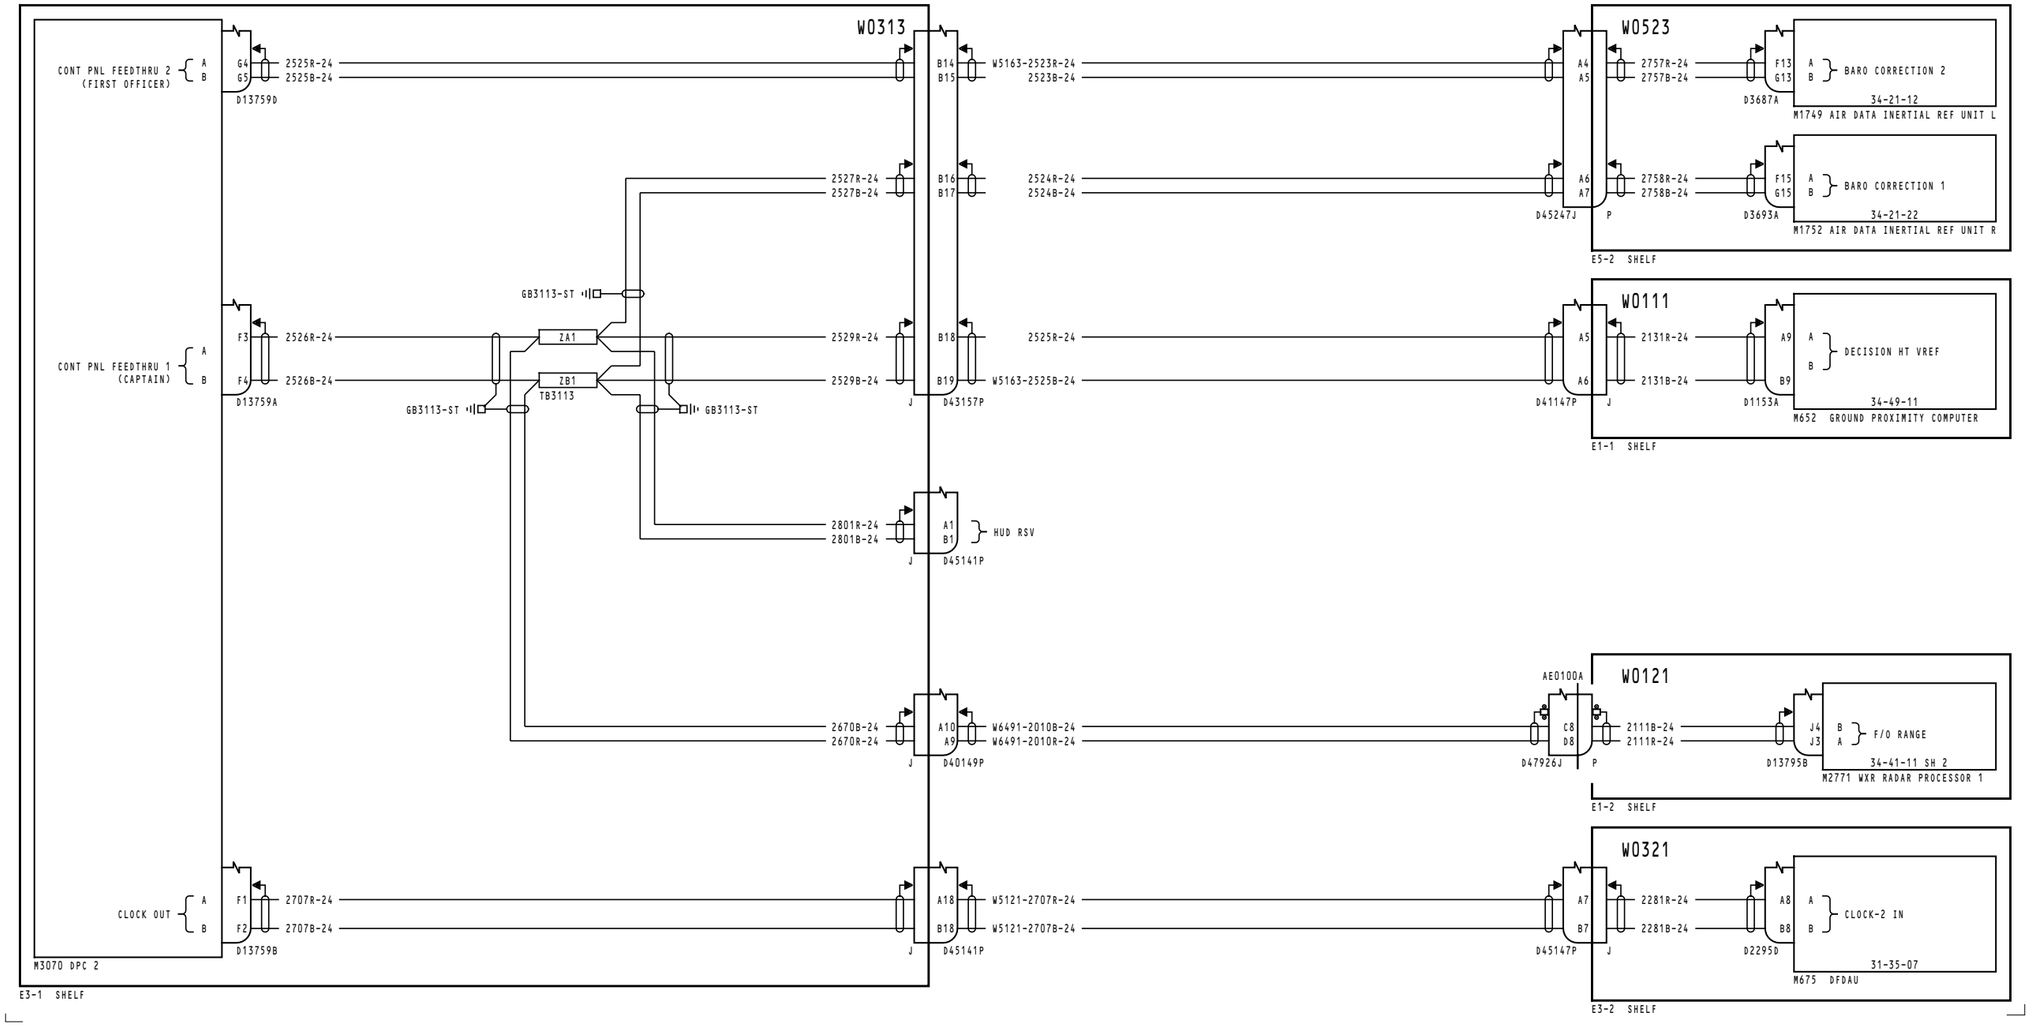


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-25

Page 1
Sheet 4
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
9

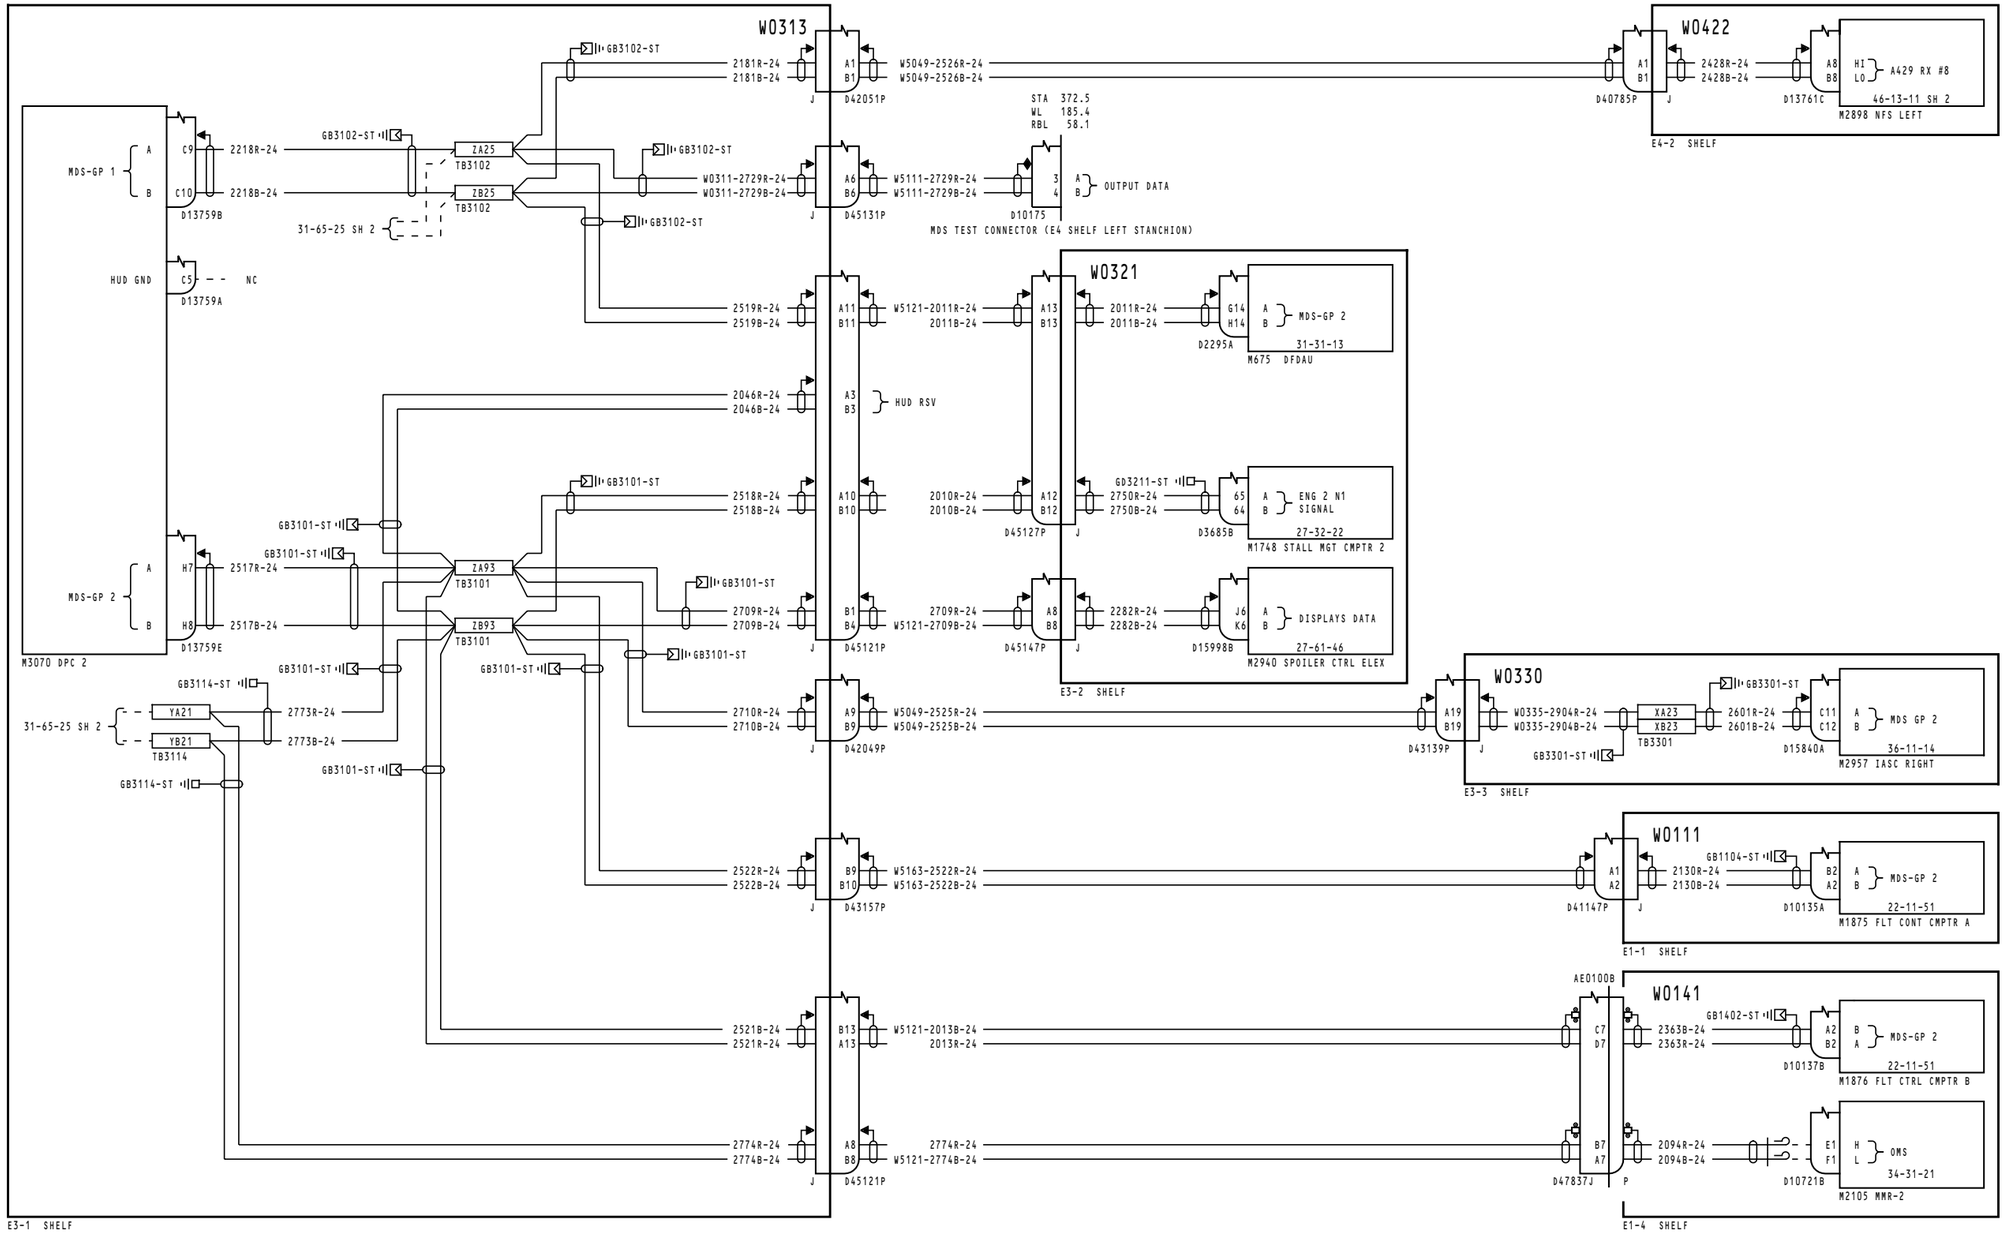


31-65-25

Page 1
Sheet 5
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

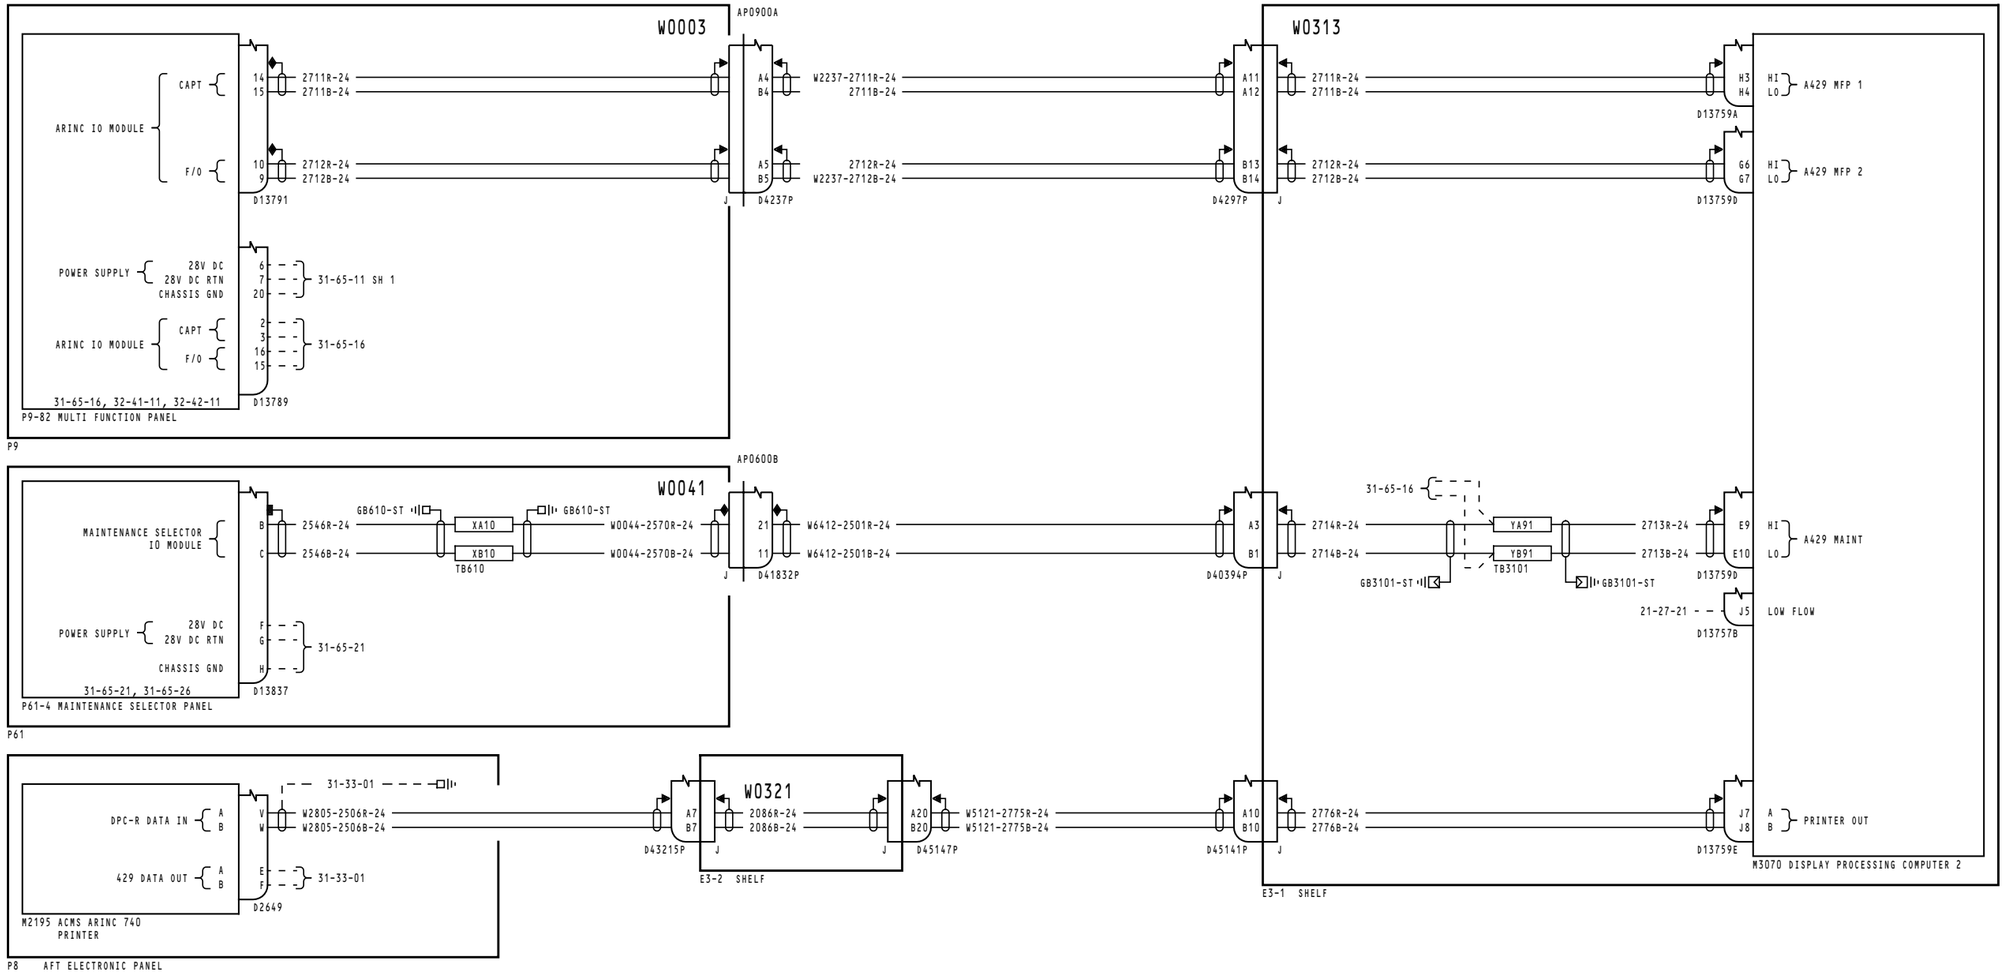


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-26

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

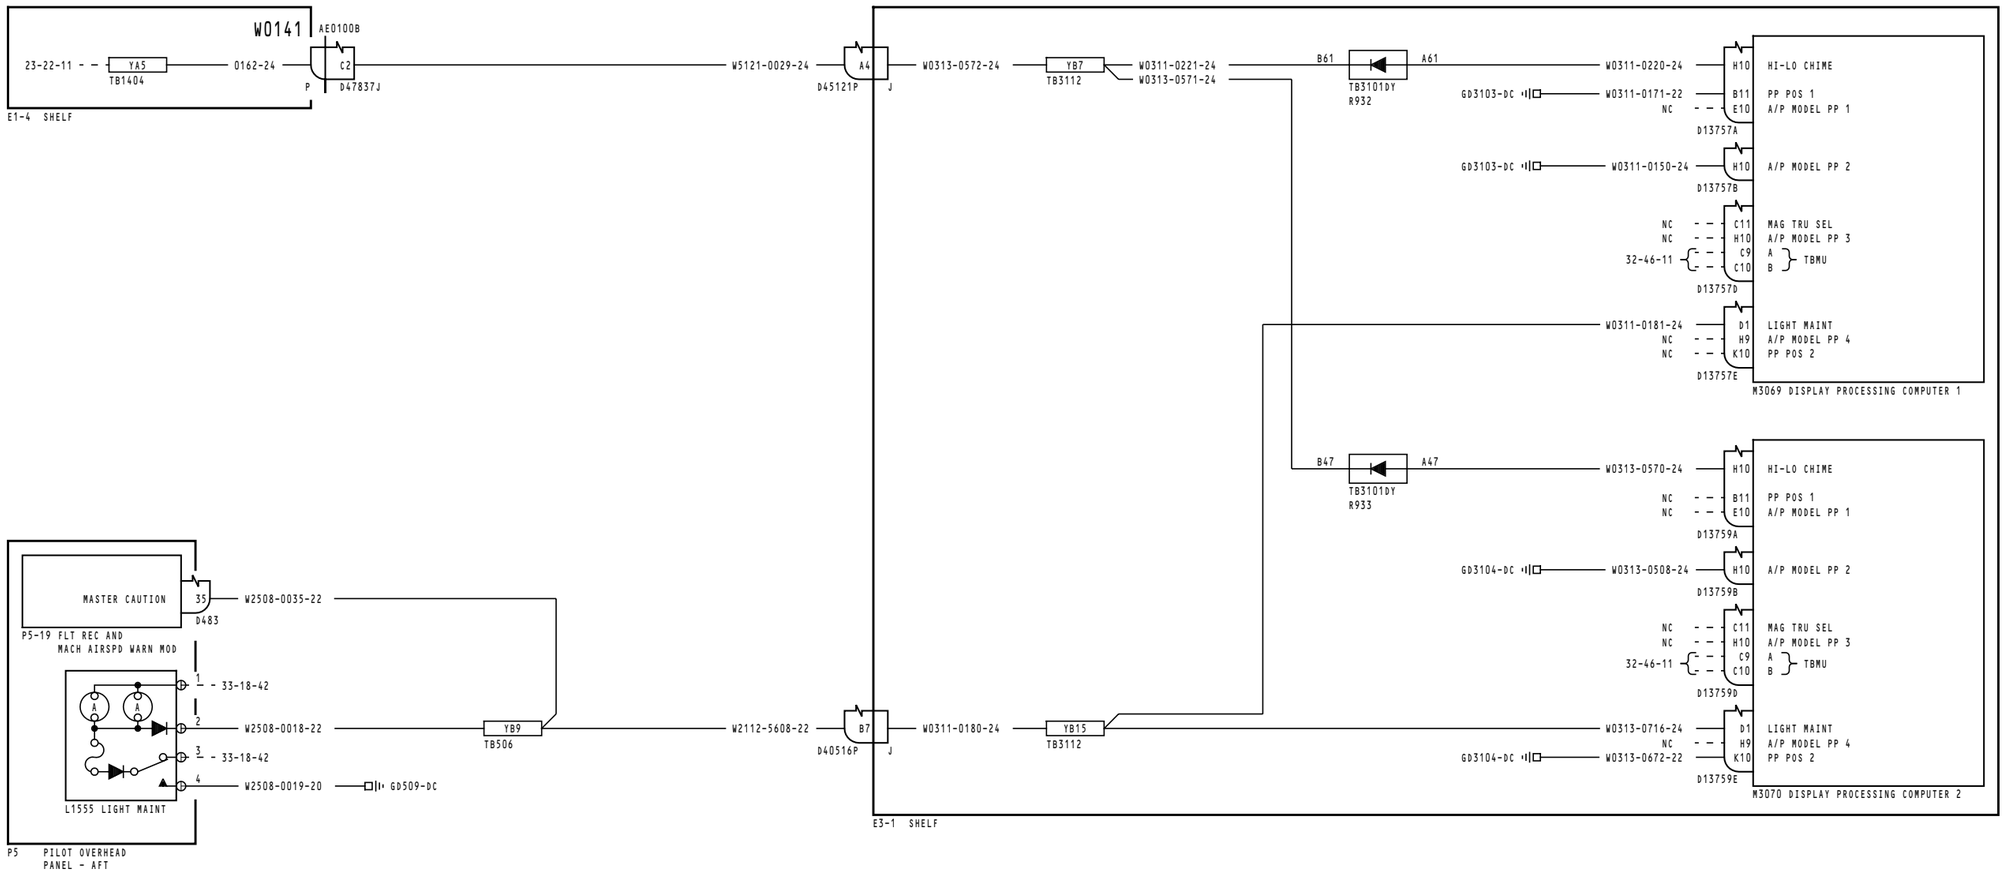


ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-41

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

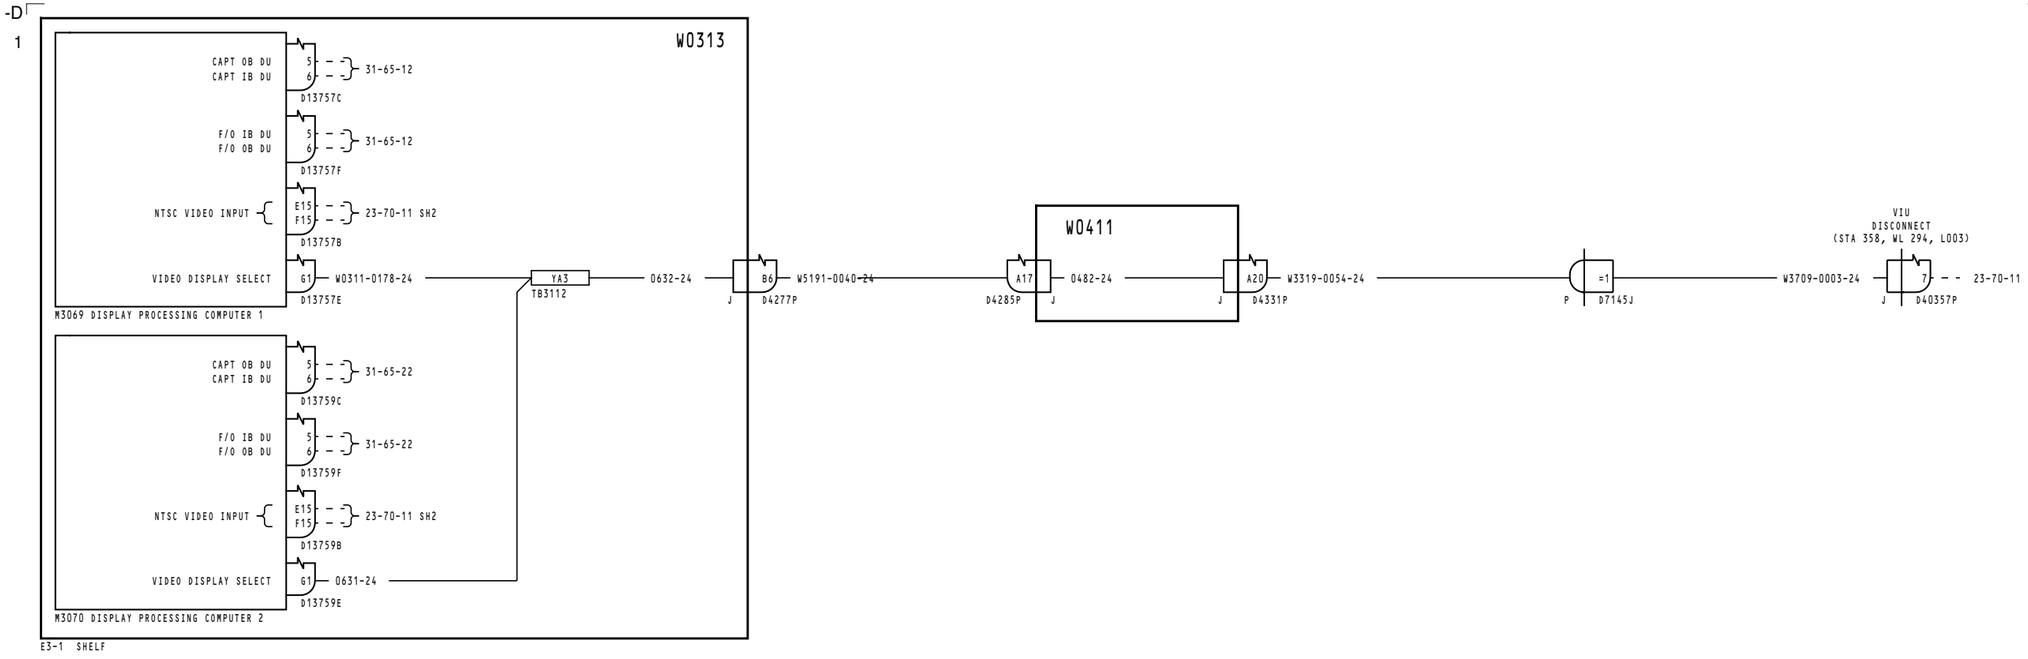

ECCN 9E991 BOEING PROPRIETARY - See title page for details

31-65-42

Page 1

May 15/2024