CHAPTER

38

WATER / WASTE

CHAPTER 38
WATER / WASTE

CH-SE-SU	Schem	Page	Sheet	Date
38-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
38-CONTENTS				
		1		Dec 24/2024
		2		BLANK
38-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
38-21-11				
		1		May 15/2024
38-32-12				
		1		Dec 24/2024
38-32-13				
		1		May 15/2024
38-41-11				
		1		May 15/2024
38-41-13				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 38
WATER / WASTE

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
LAVATORY WATER HEATERS						
LAVATORY WATER HEATERS	38-21-11		1		May 15/2024	ALL
VACUUM WASTE SYSTEM						
VACUUM WASTE SYSTEM CONTROL	38-32-12		1		Dec 24/2024	ALL
VACUUM WASTE SYSTEM INDICATION	38-32-13		1		May 15/2024	ALL
WATER INDICATOR SYSTEM						
WATER QUANTITY INDICATOR	38-41-11		1		May 15/2024	ALL
POTABLE WATER PRESSURE SYSTEM	38-41-13		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 38
WATER / WASTE

CH-SE-SU	Title
38-21-11	LAVATORY WATER HEATERS
38-41-13	POTABLE WATER PRESSURE SYSTEM
38-32-12	VACUUM WASTE SYSTEM CONTROL
38-32-13	VACUUM WASTE SYSTEM INDICATION
38-41-11	WATER QUANTITY INDICATOR

38-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-D
85

W0018

115V AC
MAIN BUS 1
24-51-12 =B 5 =L 0361-22
C104 LAV WATER HEATER A
C

STA 285
3
J D40220P

W3144-0138-22
AC 33-26-31
38
39
D3732
33-26-31
33-26-31
J4
2
6
OVHT SW
WATER HEATER SWITCH
HEATER
CYCLING SW
NEON WARNING LIGHT
H1 LAV WATER HEATER
M1415(Y4) LEFT FORWARD LAV A MODULE
STA 298 WL 288 LBL 10

115V AC
MAIN BUS 1
24-51-12 =B 5 =L 0362-22
C1073 LAV WATER HEATER D
C

AP1800A
1
W3150-0111-22
AB340A
4
W3158-0116-22
STA 930
6
W3144-0338-22
AC 33-26-31
38
39
D3738
SEE M1415
M1418(Y7) LEFT AFT LAV D MODULE
STA 949

115V AC
MAIN BUS 1
24-51-12 =B 5 =L 0202-22
C1096 LAV WATER HEATER E
C

2
W3150-0112-22
J D40198P
5
W3158-0117-22
P D40108J
12
D40116P J
W3144-0388-22
AC 33-26-31
38
39
D3740
SEE M1415
M1419(Y8) RIGHT AFT LAV E MODULE
STA 949

P18-3
P18 LOAD CONTROL CENTER - LEFT

NN1*: CATEGORY 1 WIRES MAY BE BUNDLED WITH CATEGORY 2 WIRES FOR NO MORE THAN 80 FEET

ECCN 9E991 BOEING PROPRIETARY - See title page for details


38-21-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-H
64

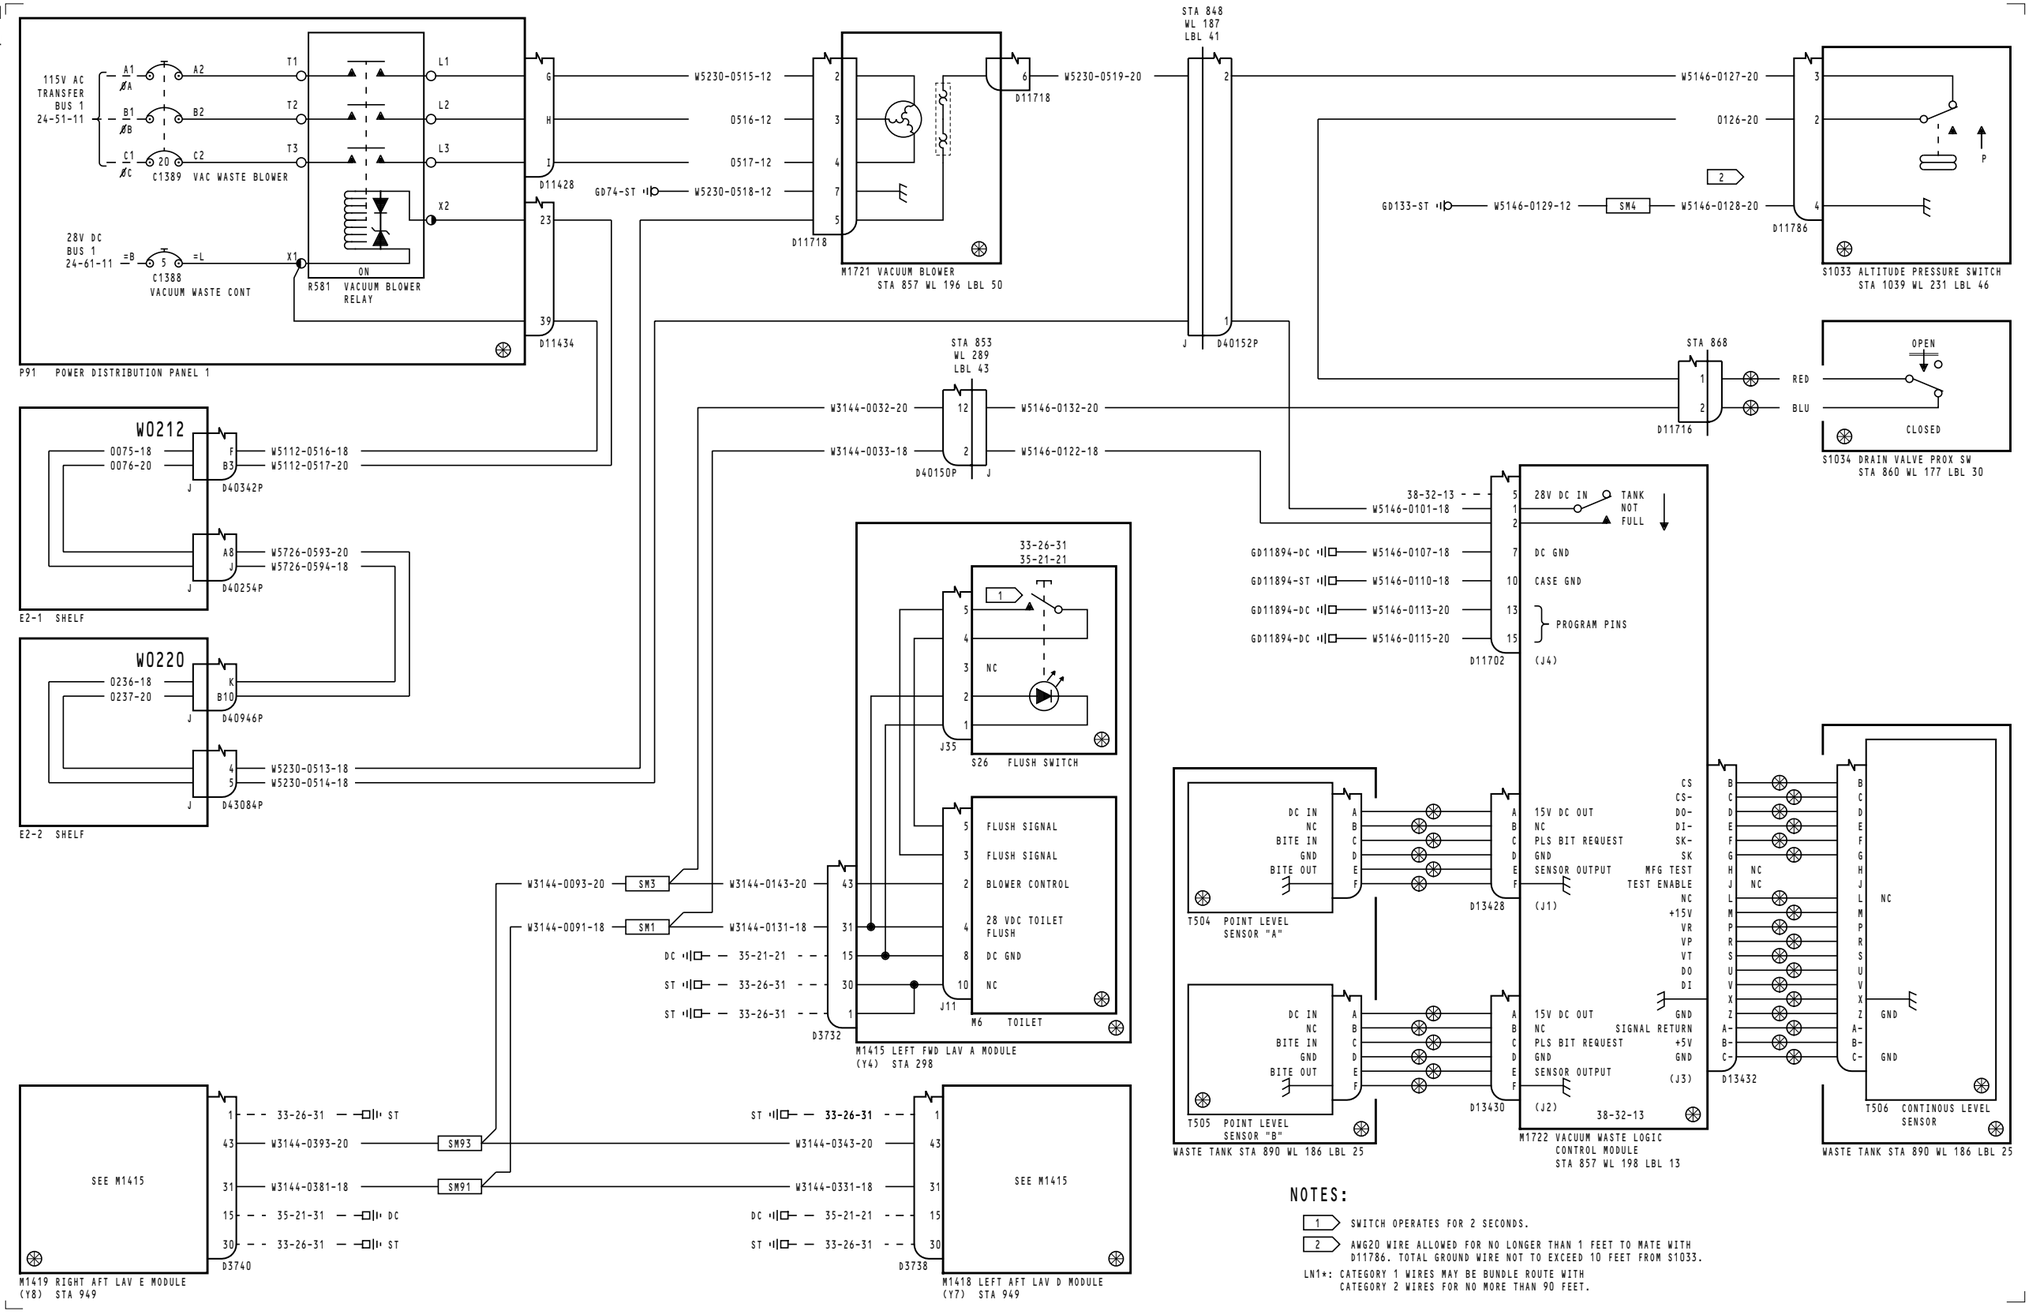

NOTES:

1. SWITCH OPERATES FOR 2 SECONDS.
2. AWG20 WIRE ALLOWED FOR NO LONGER THAN 1 FEET TO MATE WITH D11786. TOTAL GROUND WIRE NOT TO EXCEED 10 FEET FROM S1033.

LN1*: CATEGORY 1 WIRES MAY BE BUNDLE ROUTE WITH CATEGORY 2 WIRES FOR NO MORE THAN 90 FEET.

38-32-12


Page 1

Dec 24/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
47

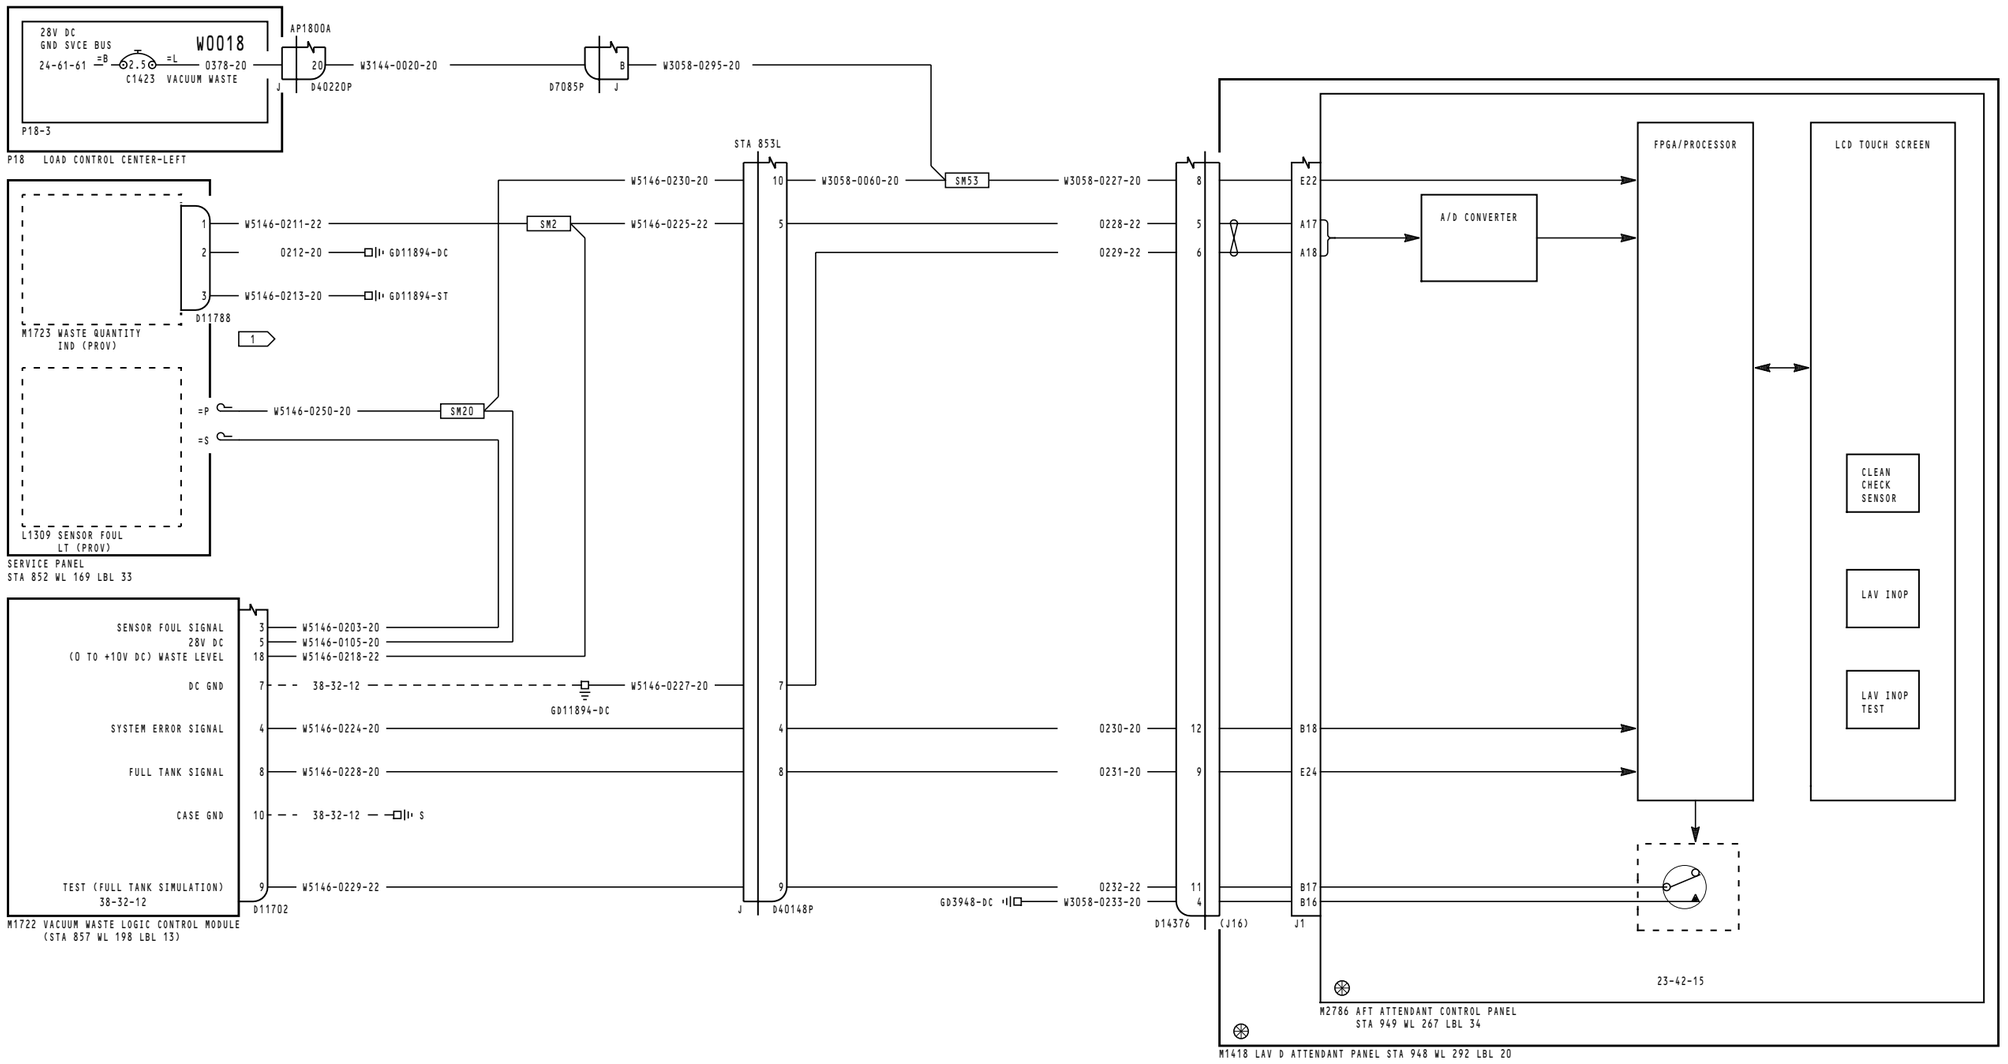

NOTES:

1 CAP AND STOW CONNECTOR

ECCN 9E991 BOEING PROPRIETARY - See title page for details


38-32-13

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

26

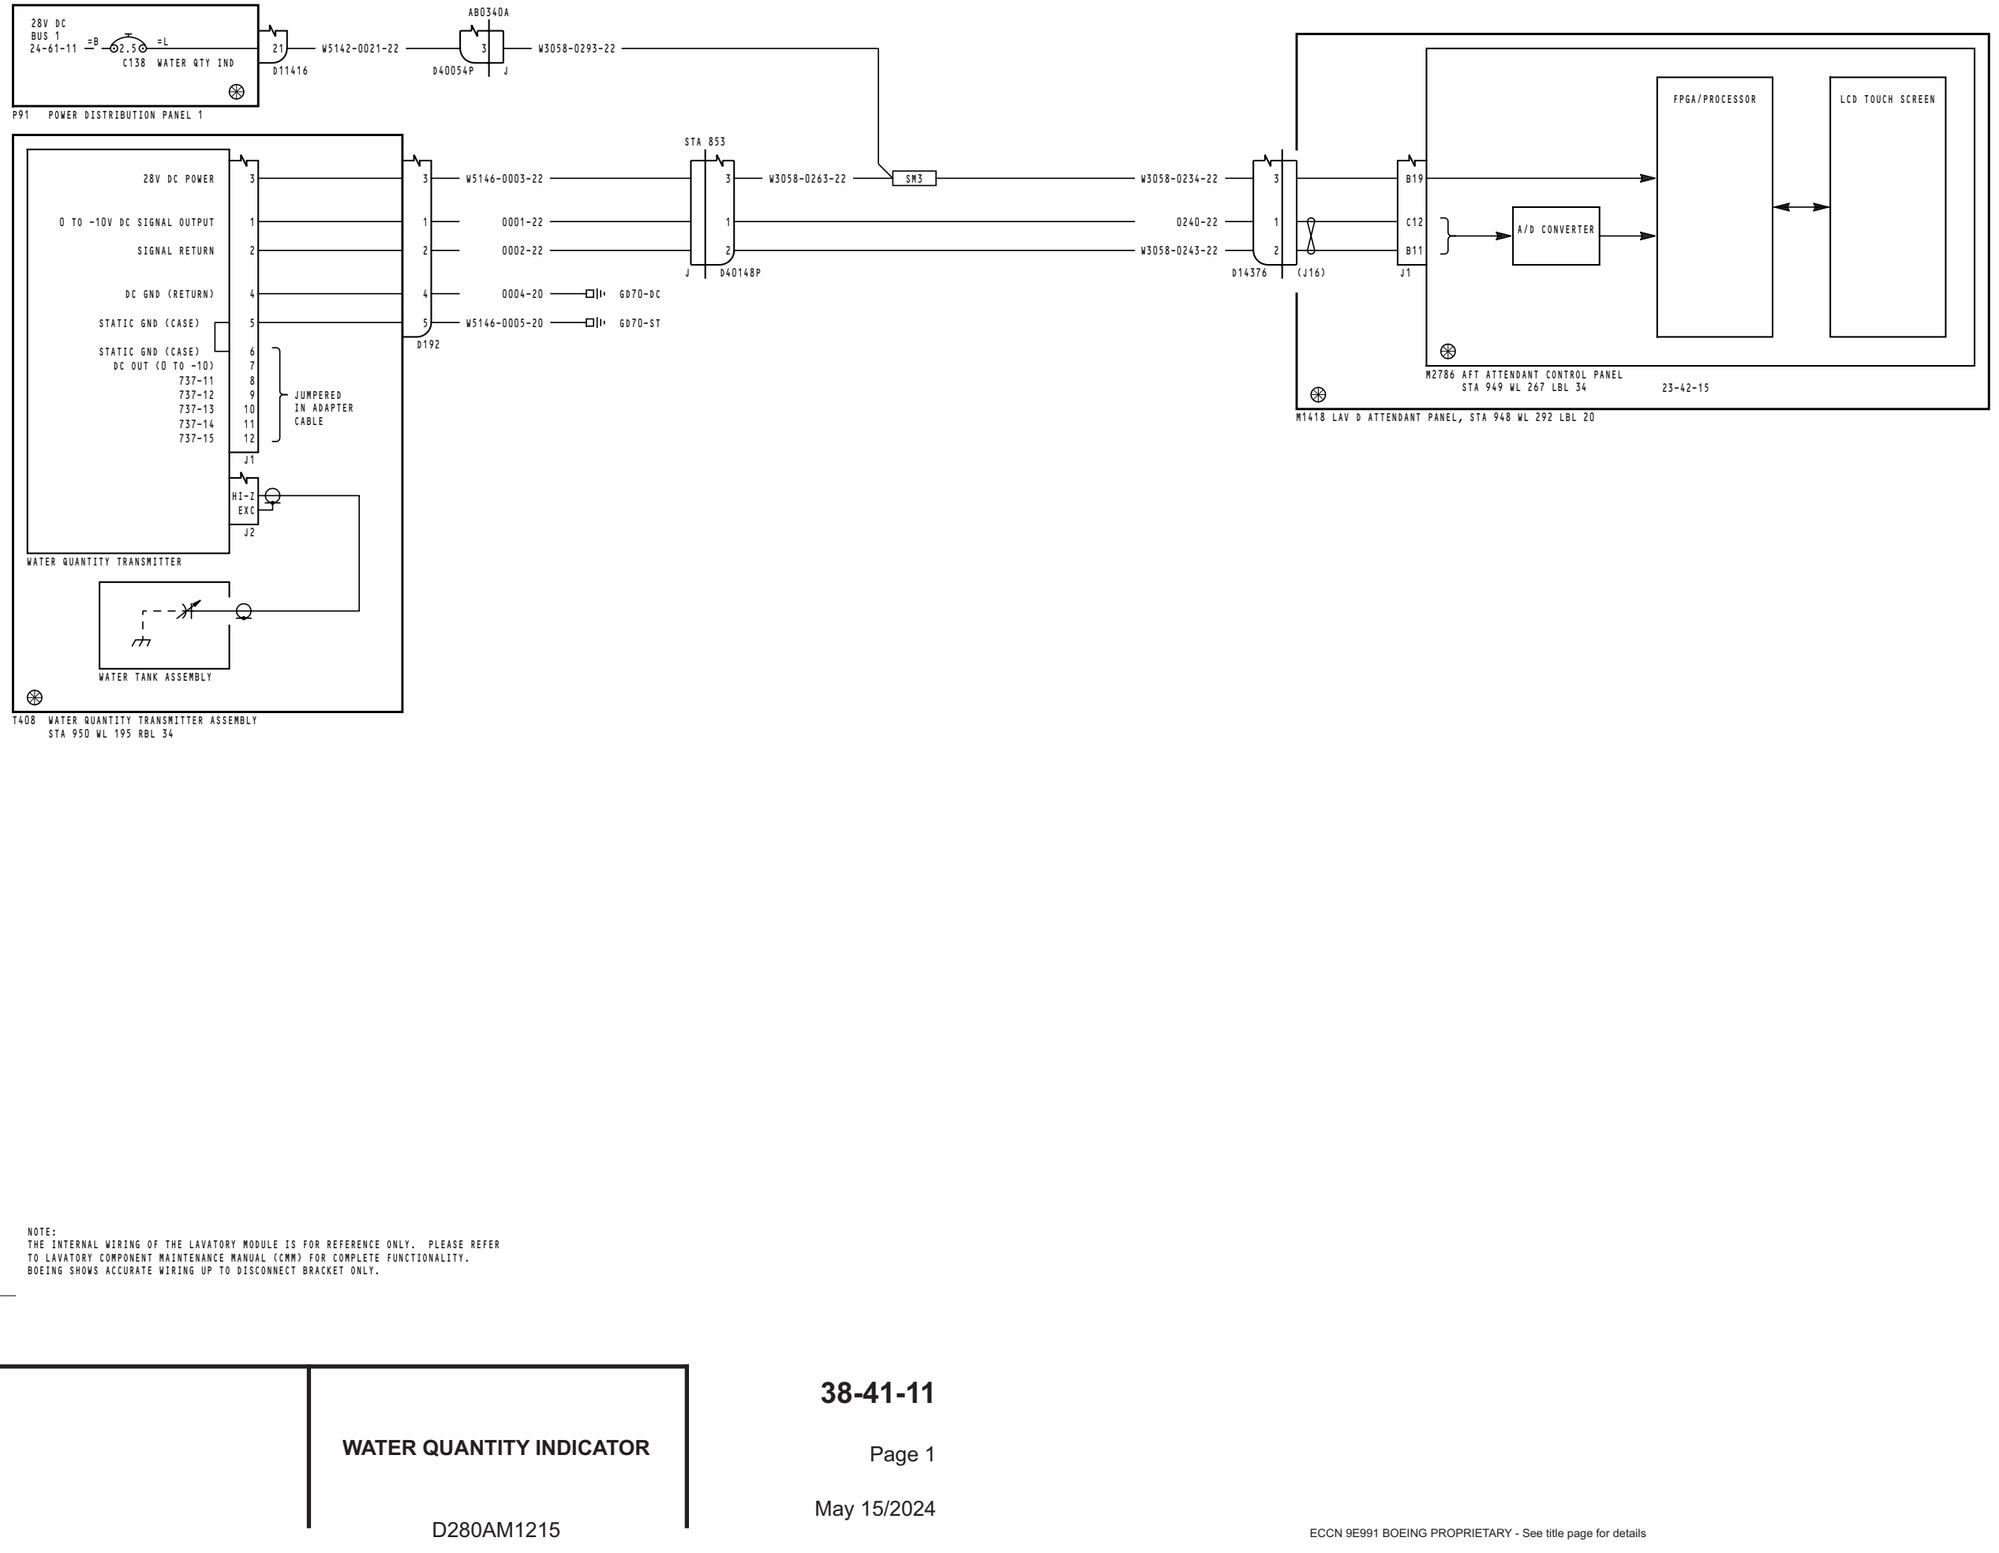

NOTE:
THE INTERNAL WIRING OF THE LAVATORY MODULE IS FOR REFERENCE ONLY. PLEASE REFER TO LAVATORY COMPONENT MAINTENANCE MANUAL (CMM) FOR COMPLETE FUNCTIONALITY. BOEING SHOWS ACCURATE WIRING UP TO DISCONNECT BRACKET ONLY.

ECCN 9E991 BOEING PROPRIETARY - See title page for details


38-41-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
9

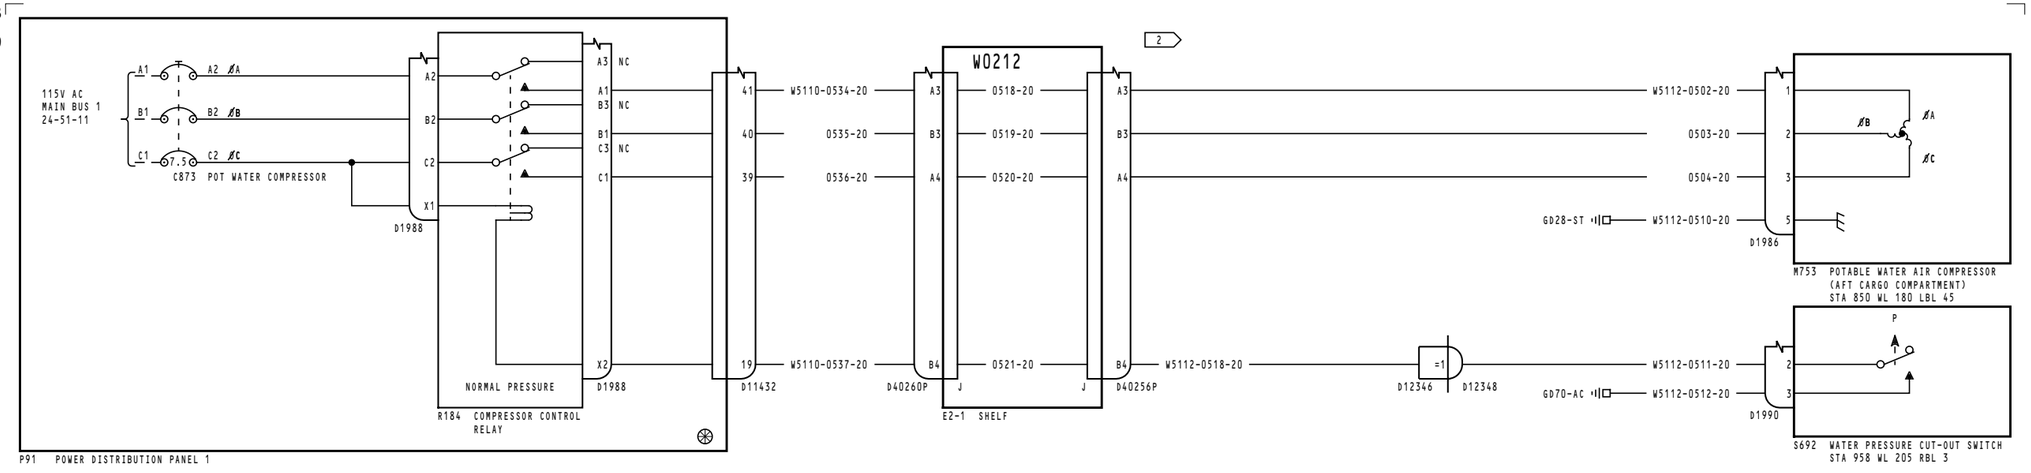

NOTES:

1. CATEGORY 1 WIRES MAY BE ROUTED WITH CATEGORY 2 WIRES FROM P91 TO E2-1 (NO MORE THAN 10 FEET).
2. OVERALL LENGTH, CATEGORY 1 WIRES MAY BE ROUTED WITH CATEGORY 2 WIRES NO MORE THAN 30 FEET.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

38-41-13

Page 1

May 15/2024