CHAPTER

73

ENGINE FUEL AND CONTROL

CHAPTER 73
ENGINE FUEL AND CONTROL

CH-SE-SU	Schem	Page	Sheet	Date
73-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
73-CONTENTS				
		1		May 15/2024
		2		May 15/2024
73-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
73-21-11				
		1		May 15/2024
73-21-12				
		1	1	May 15/2024
			2	May 15/2024
73-21-21				
		1		May 15/2024
73-21-31				
		1		May 15/2024
73-21-41				
		1	1	May 15/2024
			2	May 15/2024
73-22-11				
		1	1	May 15/2024
			2	May 15/2024
73-22-31				
		1	1	May 15/2024
			2	May 15/2024
73-22-41				
		1	1	May 15/2024
			2	May 15/2024
73-23-11				
		1		May 15/2024
73-24-11				
		1		May 15/2024
73-24-12				
		1		May 15/2024
73-24-21				
		1		May 15/2024
73-25-11				
		1		May 15/2024
73-25-21				
		1		May 15/2024
73-31-11				
		1	1	May 15/2024
73-31-11 (cont)				
			2	May 15/2024
			3	May 15/2024
73-32-11				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 73
ENGINE FUEL AND CONTROL

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
ENGINE CONTROL SYSTEM						
ENGINE EXTERNAL RESET AND CONFIGURATION CONTROL	73-21-11		1		May 15/2024	ALL
ELECTRONIC ENGINE CONTROL ALTERNATE MODE	73-21-12		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ENGINE THRUST-LEVER-ANGLE RESOLVER	73-21-21		1		May 15/2024	ALL
ENGINE BLEED AIR THRUST CONTROL	73-21-31		1		May 15/2024	ALL
ENGINE CROSS CHANNEL DATA LINK CABLE/EEC CHANNEL ID FAN OVERHEAT SENSORS	73-21-41		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ELECTRICAL POWER AND CONTROL						
ELECTRONIC ENGINE CONTROL ELECTRICAL POWER	73-22-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ENGINE RUNNING CONTROL	73-22-31		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
EEC COOLING FAN BLOWERS	73-22-41		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
ENGINE IDLE CONTROL						
ENGINE IDLE CONTROL	73-23-11		1		May 15/2024	ALL
ENGINE DATABUS OUTPUT						
ENGINE 1 DATABUS OUTPUT	73-24-11		1		May 15/2024	ALL
ENGINE DATABUS INPUT	73-24-12		1		May 15/2024	ALL
ENGINE 2 DATABUS OUTPUT	73-24-21		1		May 15/2024	ALL
ENGINE FUEL CONTROL						
ENGINE 1 FUEL CONTROL	73-25-11		1		May 15/2024	ALL
ENGINE 2 FUEL CONTROL	73-25-21		1		May 15/2024	ALL
FUEL FLOW INDICATING SYSTEM						
ENGINE FUEL SYSTEM INDICATION	73-31-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 73
ENGINE FUEL AND CONTROL

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
ENGINE FUEL SYSTEM INDICATION (cont.)	73-31-11			3	May 15/2024	ALL
ENGINE FAULT INDICATION						
ENGINE CONTROL EEC FAULT INDICATION	73-32-11		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 73
ENGINE FUEL AND CONTROL


CH-SE-SU	Title
73-22-41	EEC COOLING FAN BLOWERS
73-21-12	ELECTRONIC ENGINE CONTROL ALTERNATE MODE
73-22-11	ELECTRONIC ENGINE CONTROL ELECTRICAL POWER
73-24-11	ENGINE 1 DATABUS OUTPUT
73-25-11	ENGINE 1 FUEL CONTROL
73-24-21	ENGINE 2 DATABUS OUTPUT
73-25-21	ENGINE 2 FUEL CONTROL
73-21-31	ENGINE BLEED AIR THRUST CONTROL
73-32-11	ENGINE CONTROL EEC FAULT INDICATION
73-21-41	ENGINE CROSS CHANNEL DATA LINK CABLE/EEC CHANNEL ID FAN OVERHEAT SENSORS
73-24-12	ENGINE DATABUS INPUT
73-21-11	ENGINE EXTERNAL RESET AND CONFIGURATION CONTROL
73-31-11	ENGINE FUEL SYSTEM INDICATION
73-23-11	ENGINE IDLE CONTROL
73-22-31	ENGINE RUNNING CONTROL
73-21-21	ENGINE THRUST-LEVER-ANGLE RESOLVER

73-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C
42

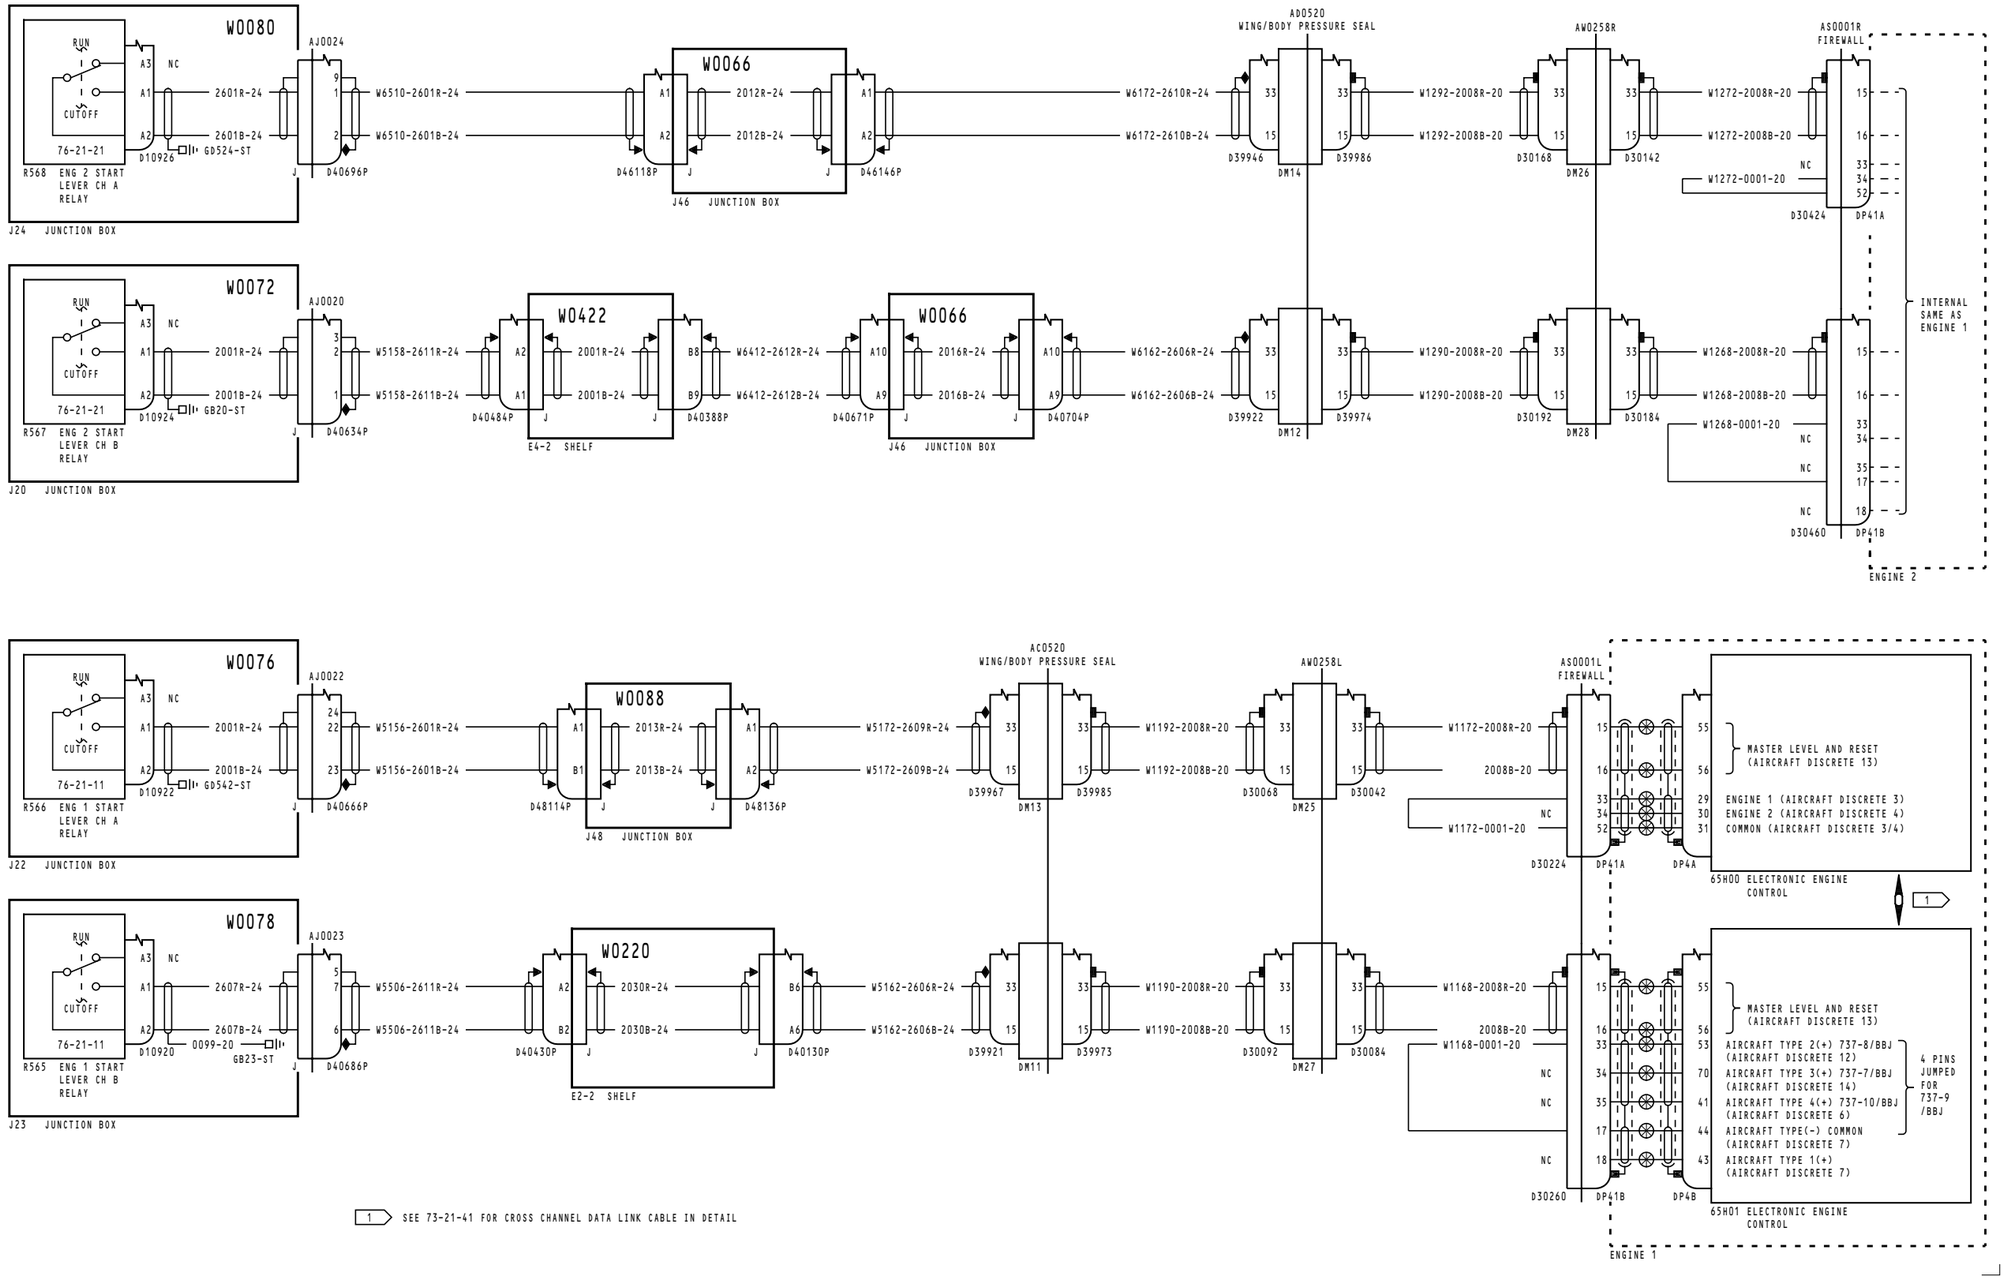


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-21-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

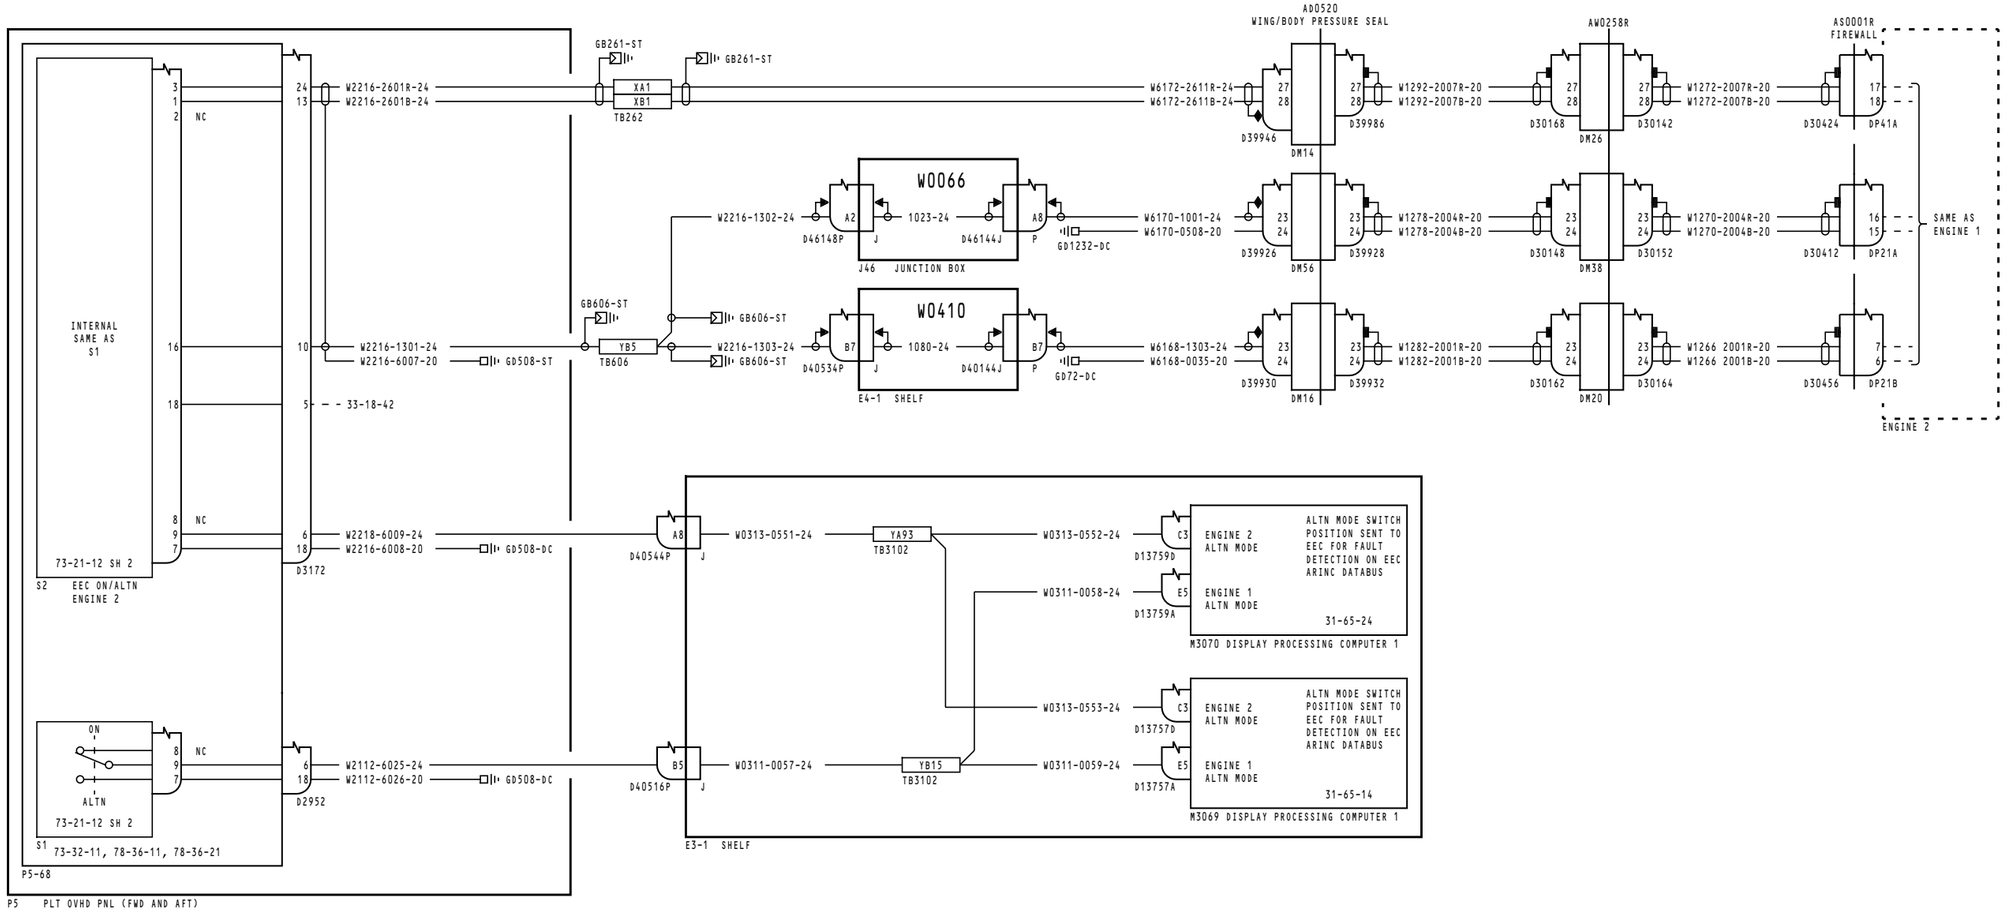


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-21-12

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

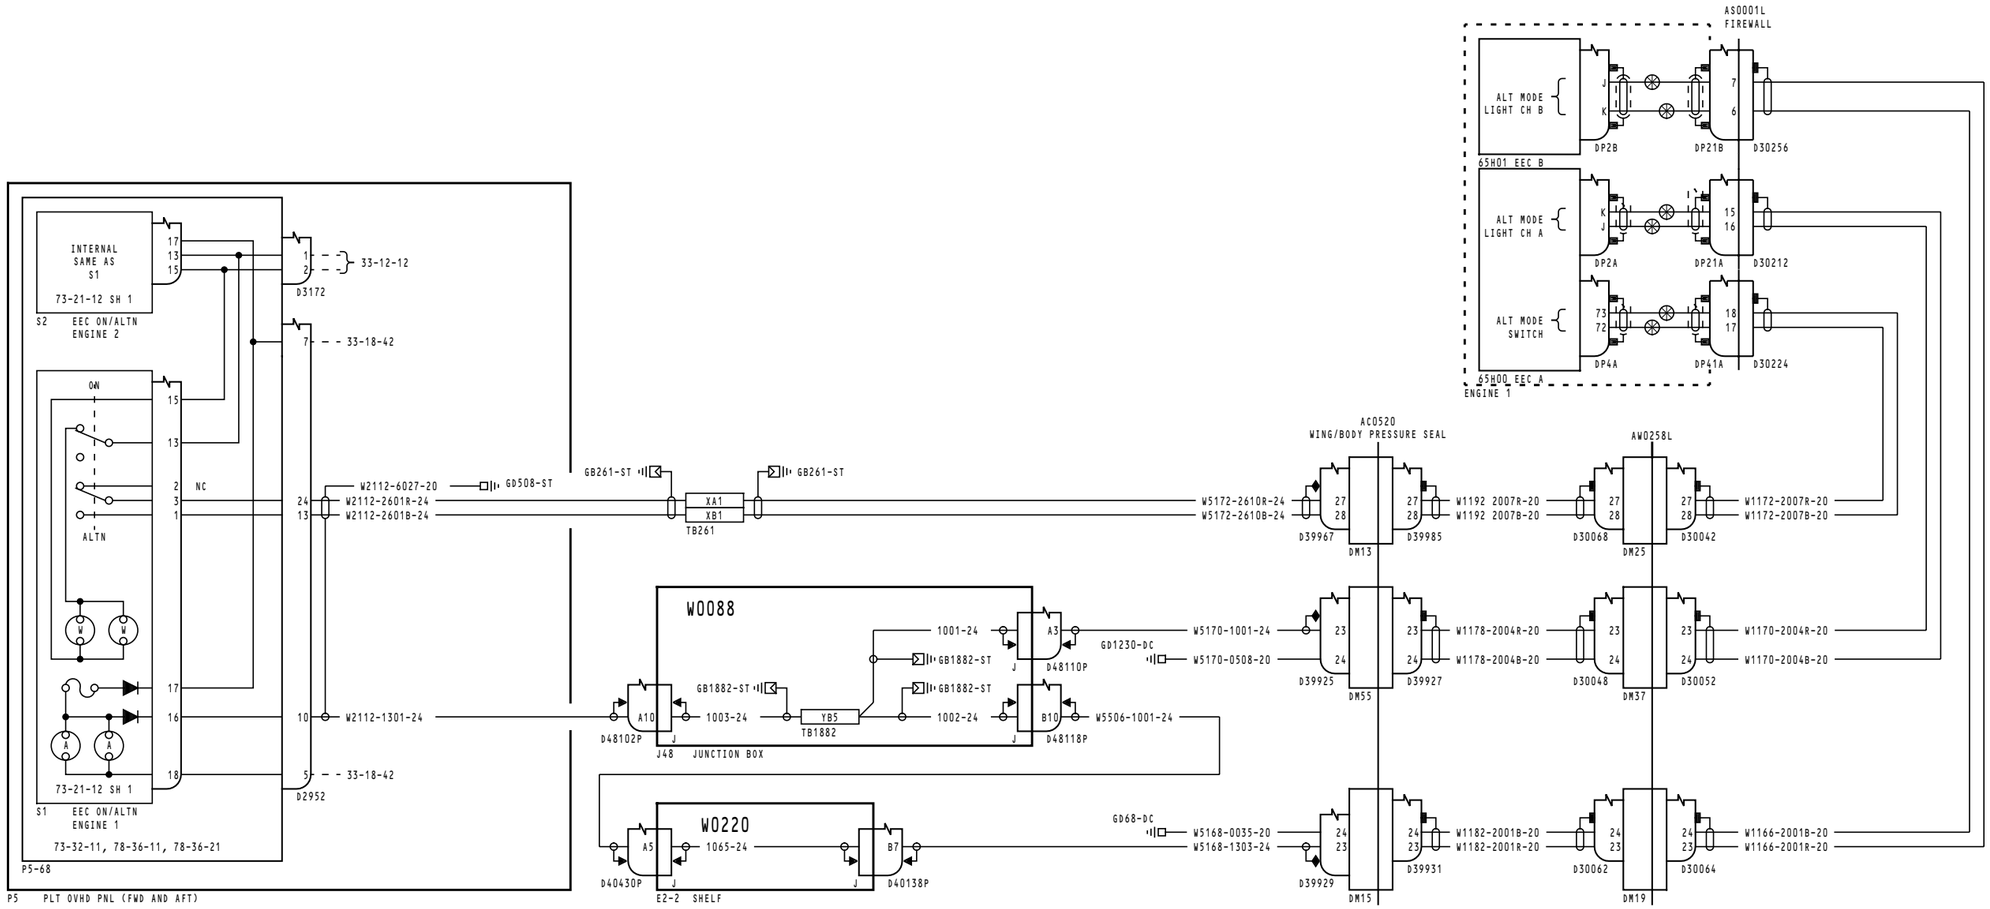


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-21-12

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

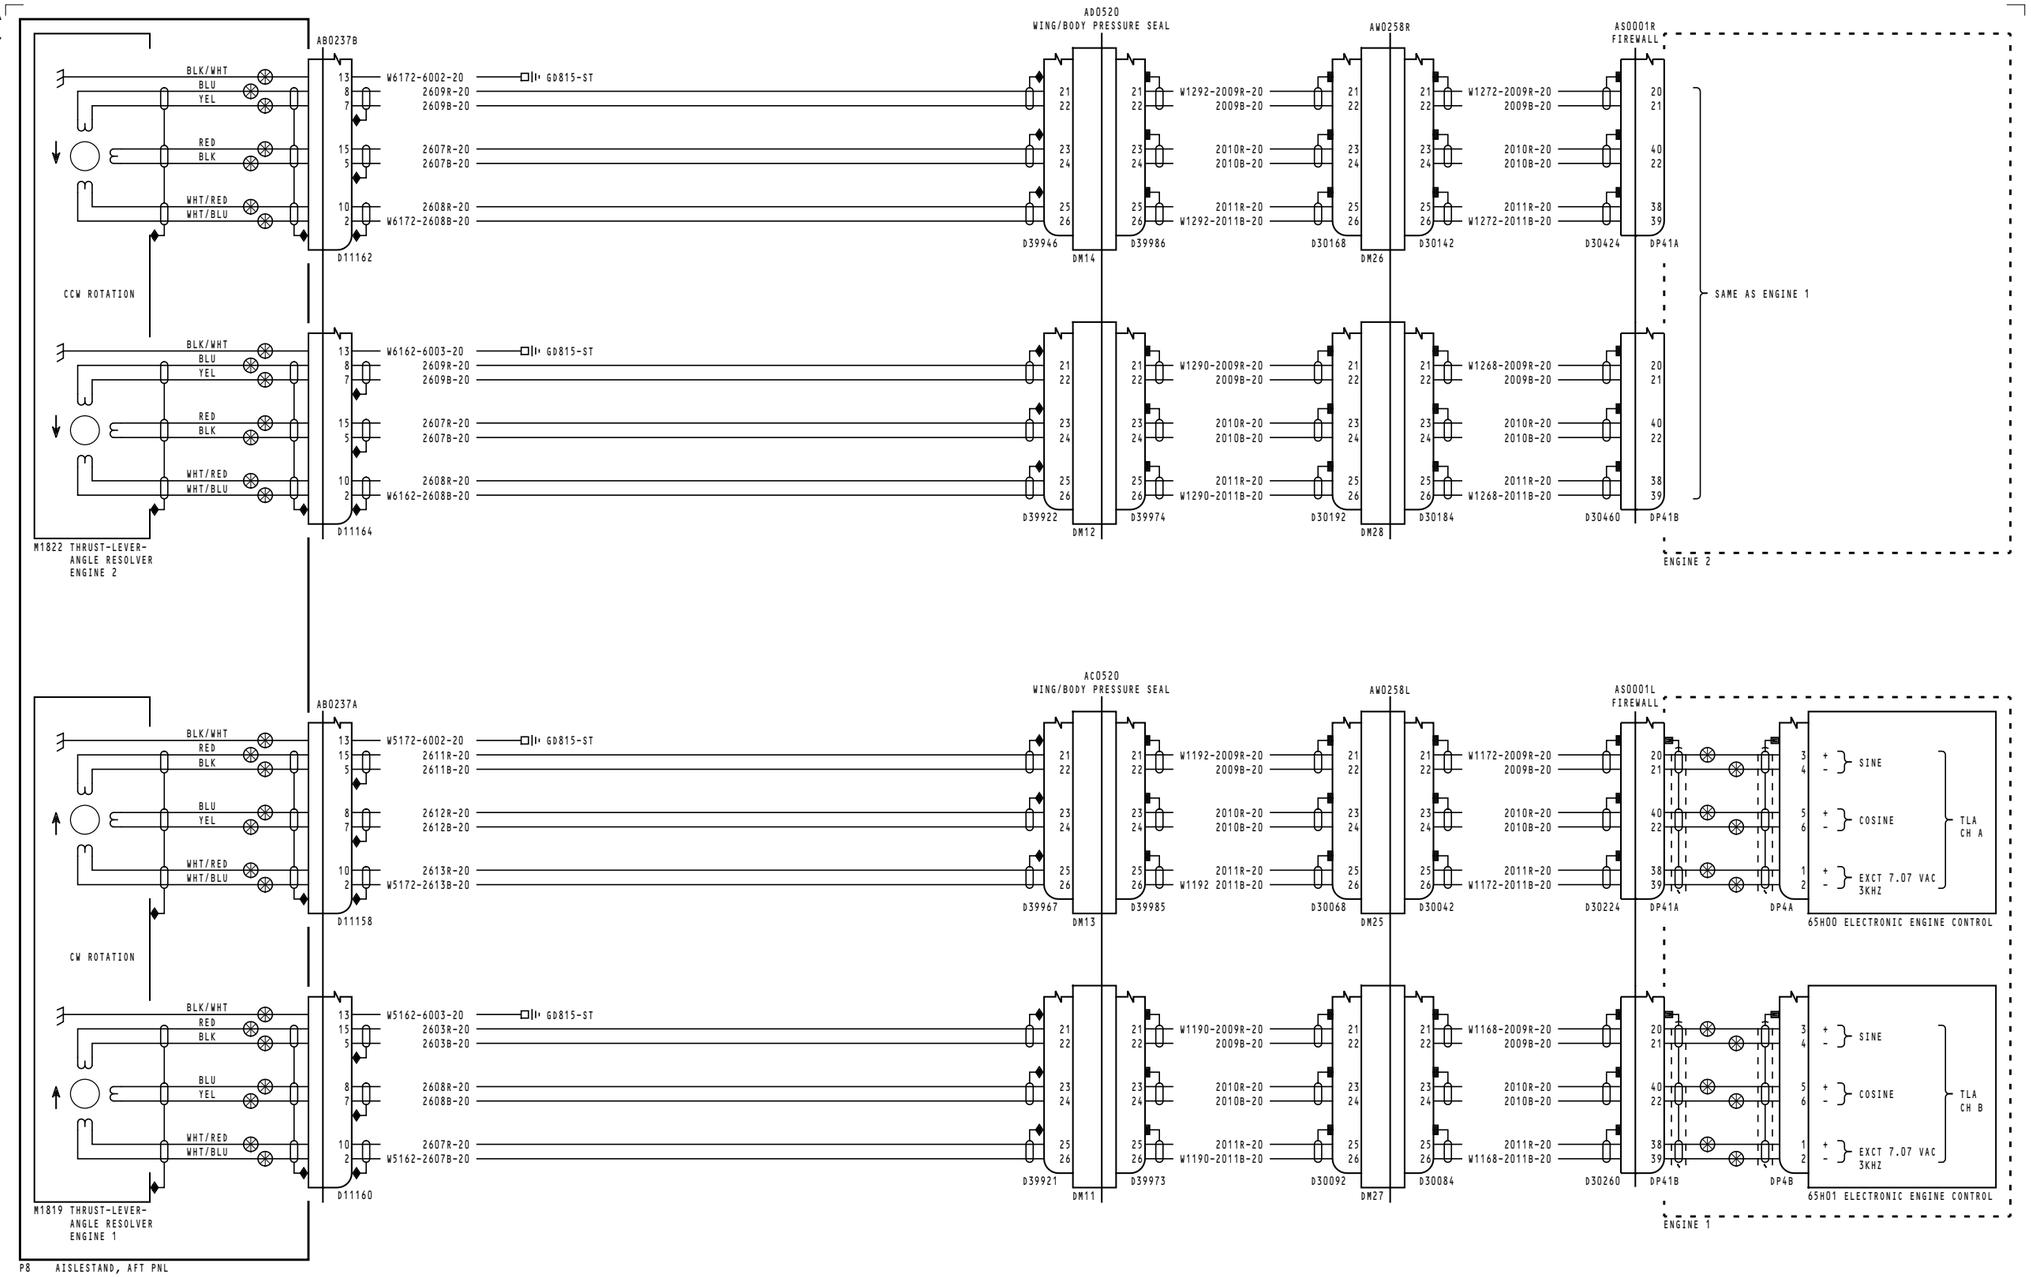


73-21-21

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

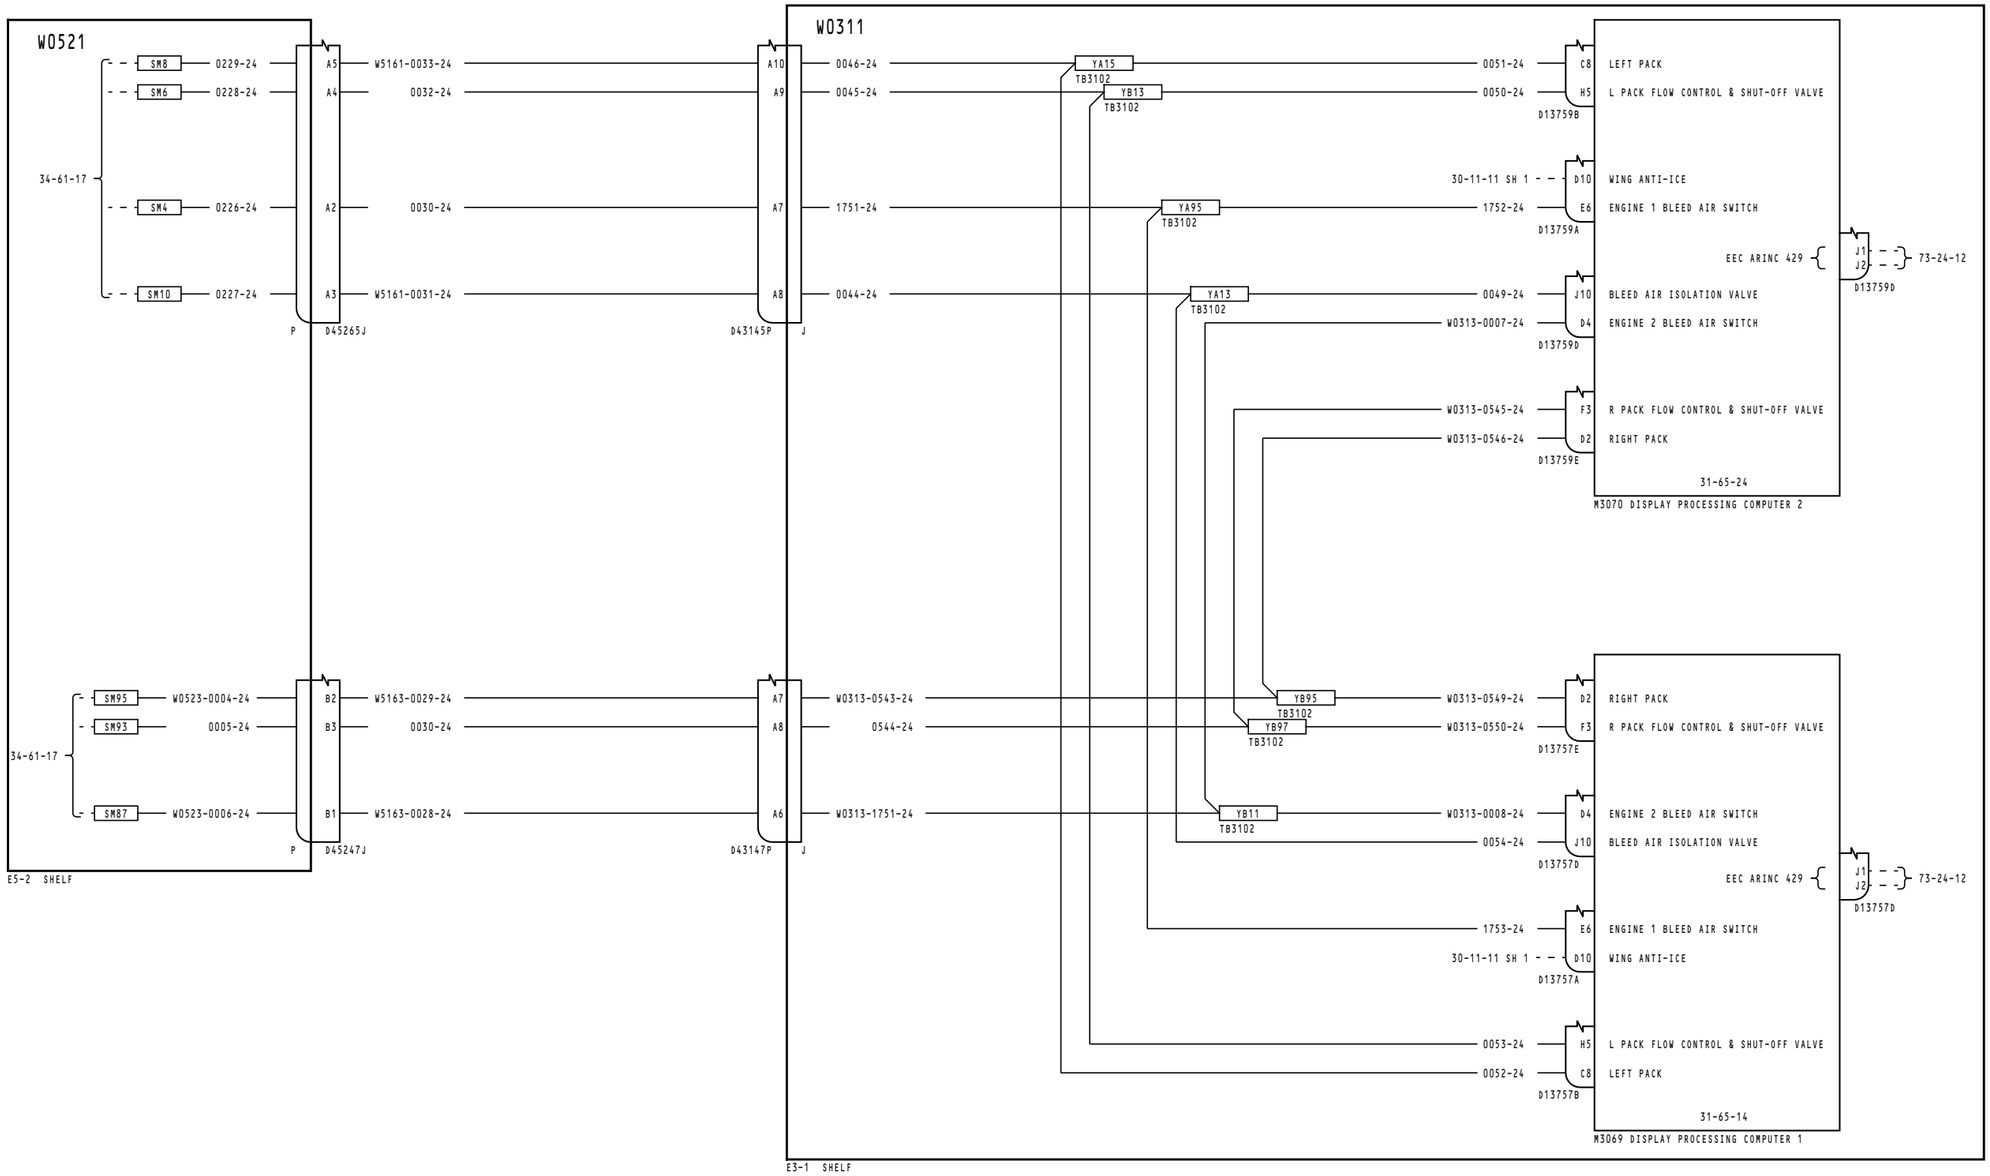


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-21-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

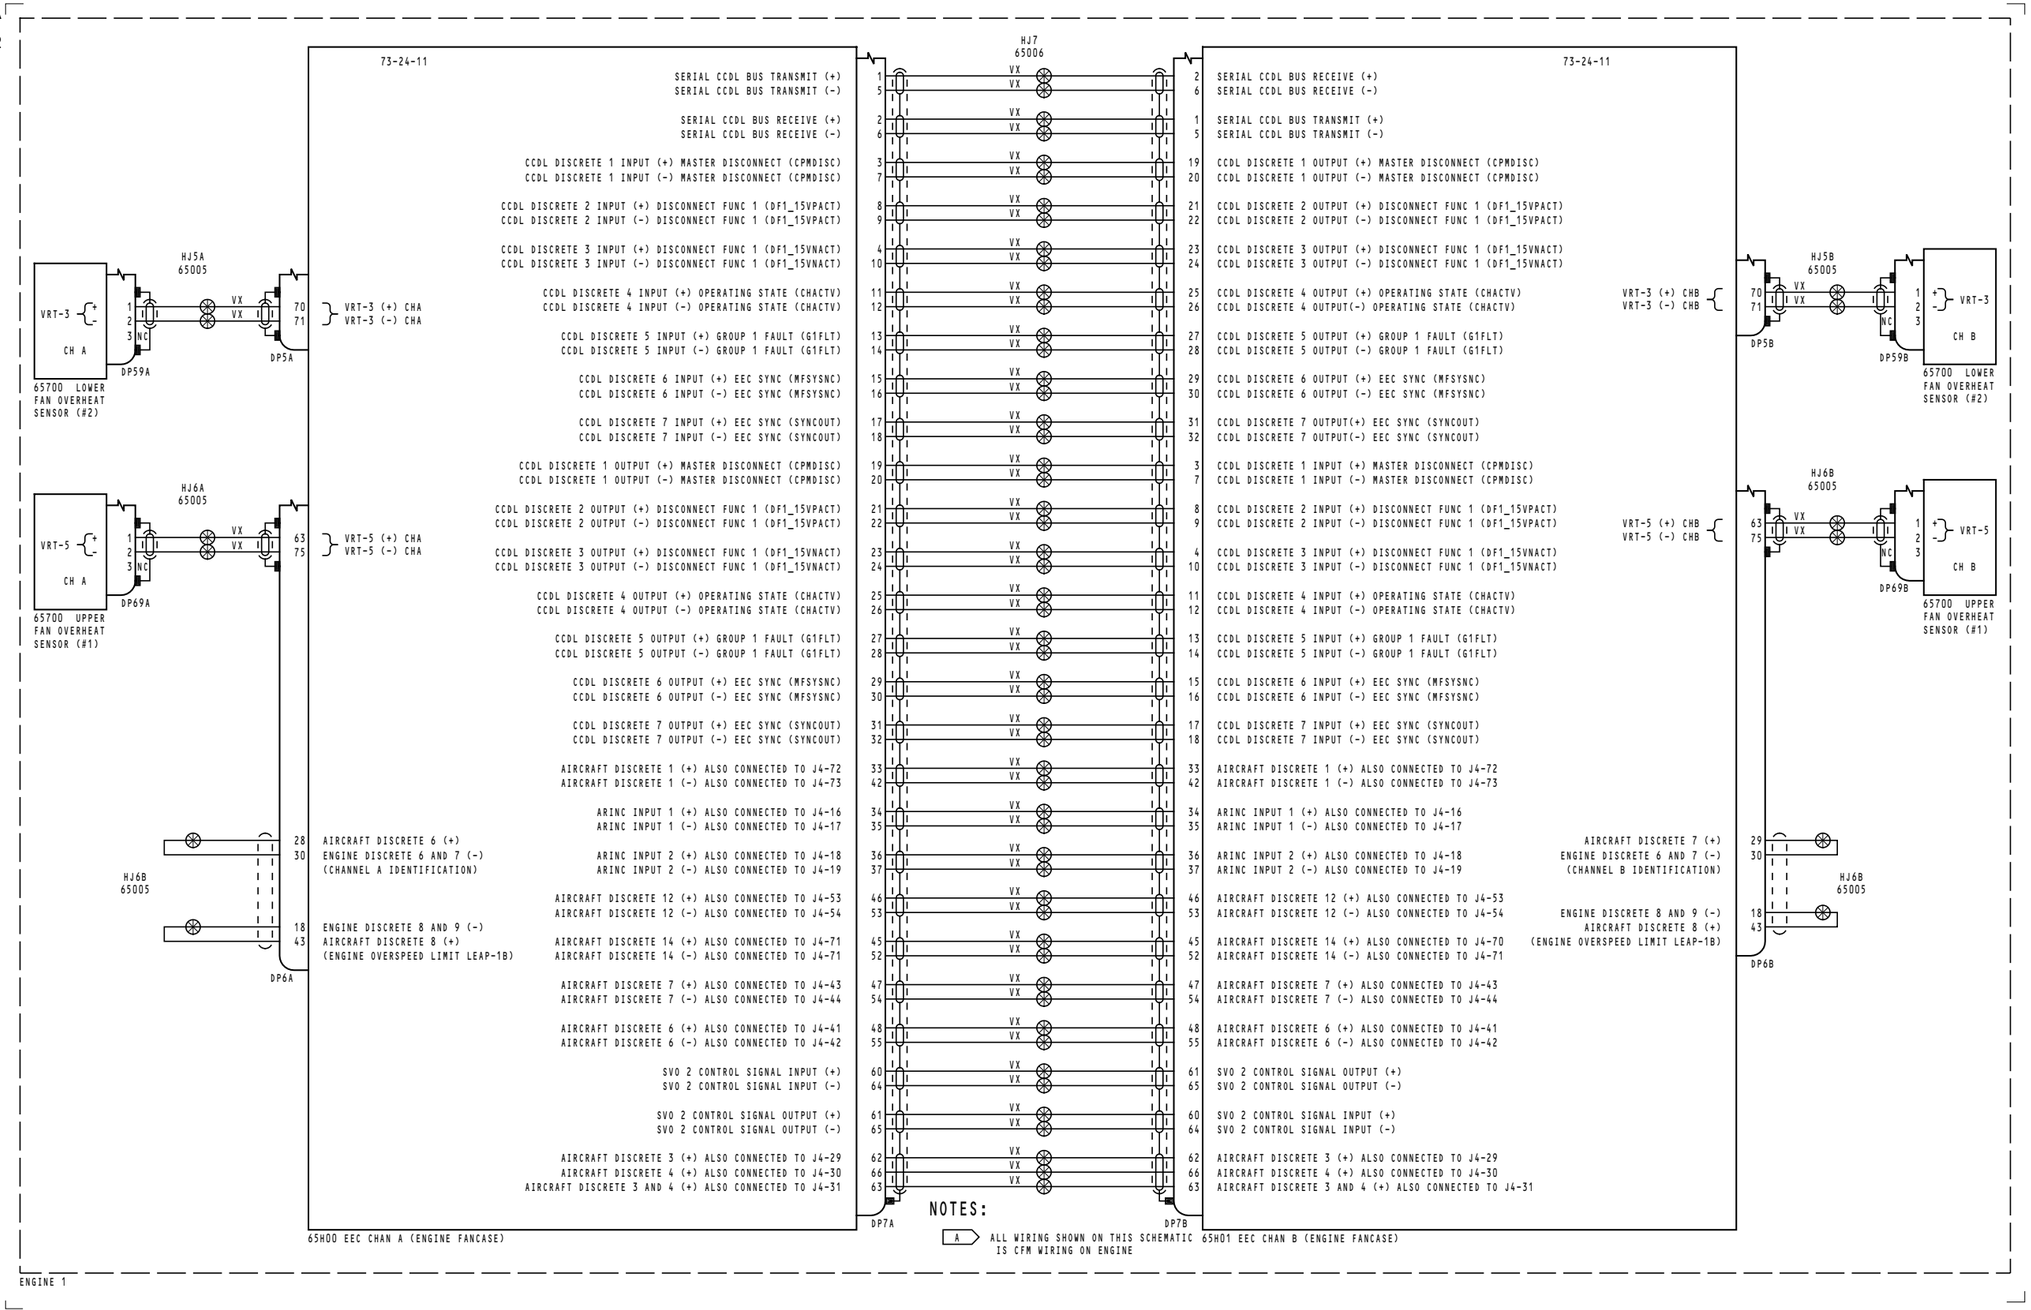


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-21-41

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

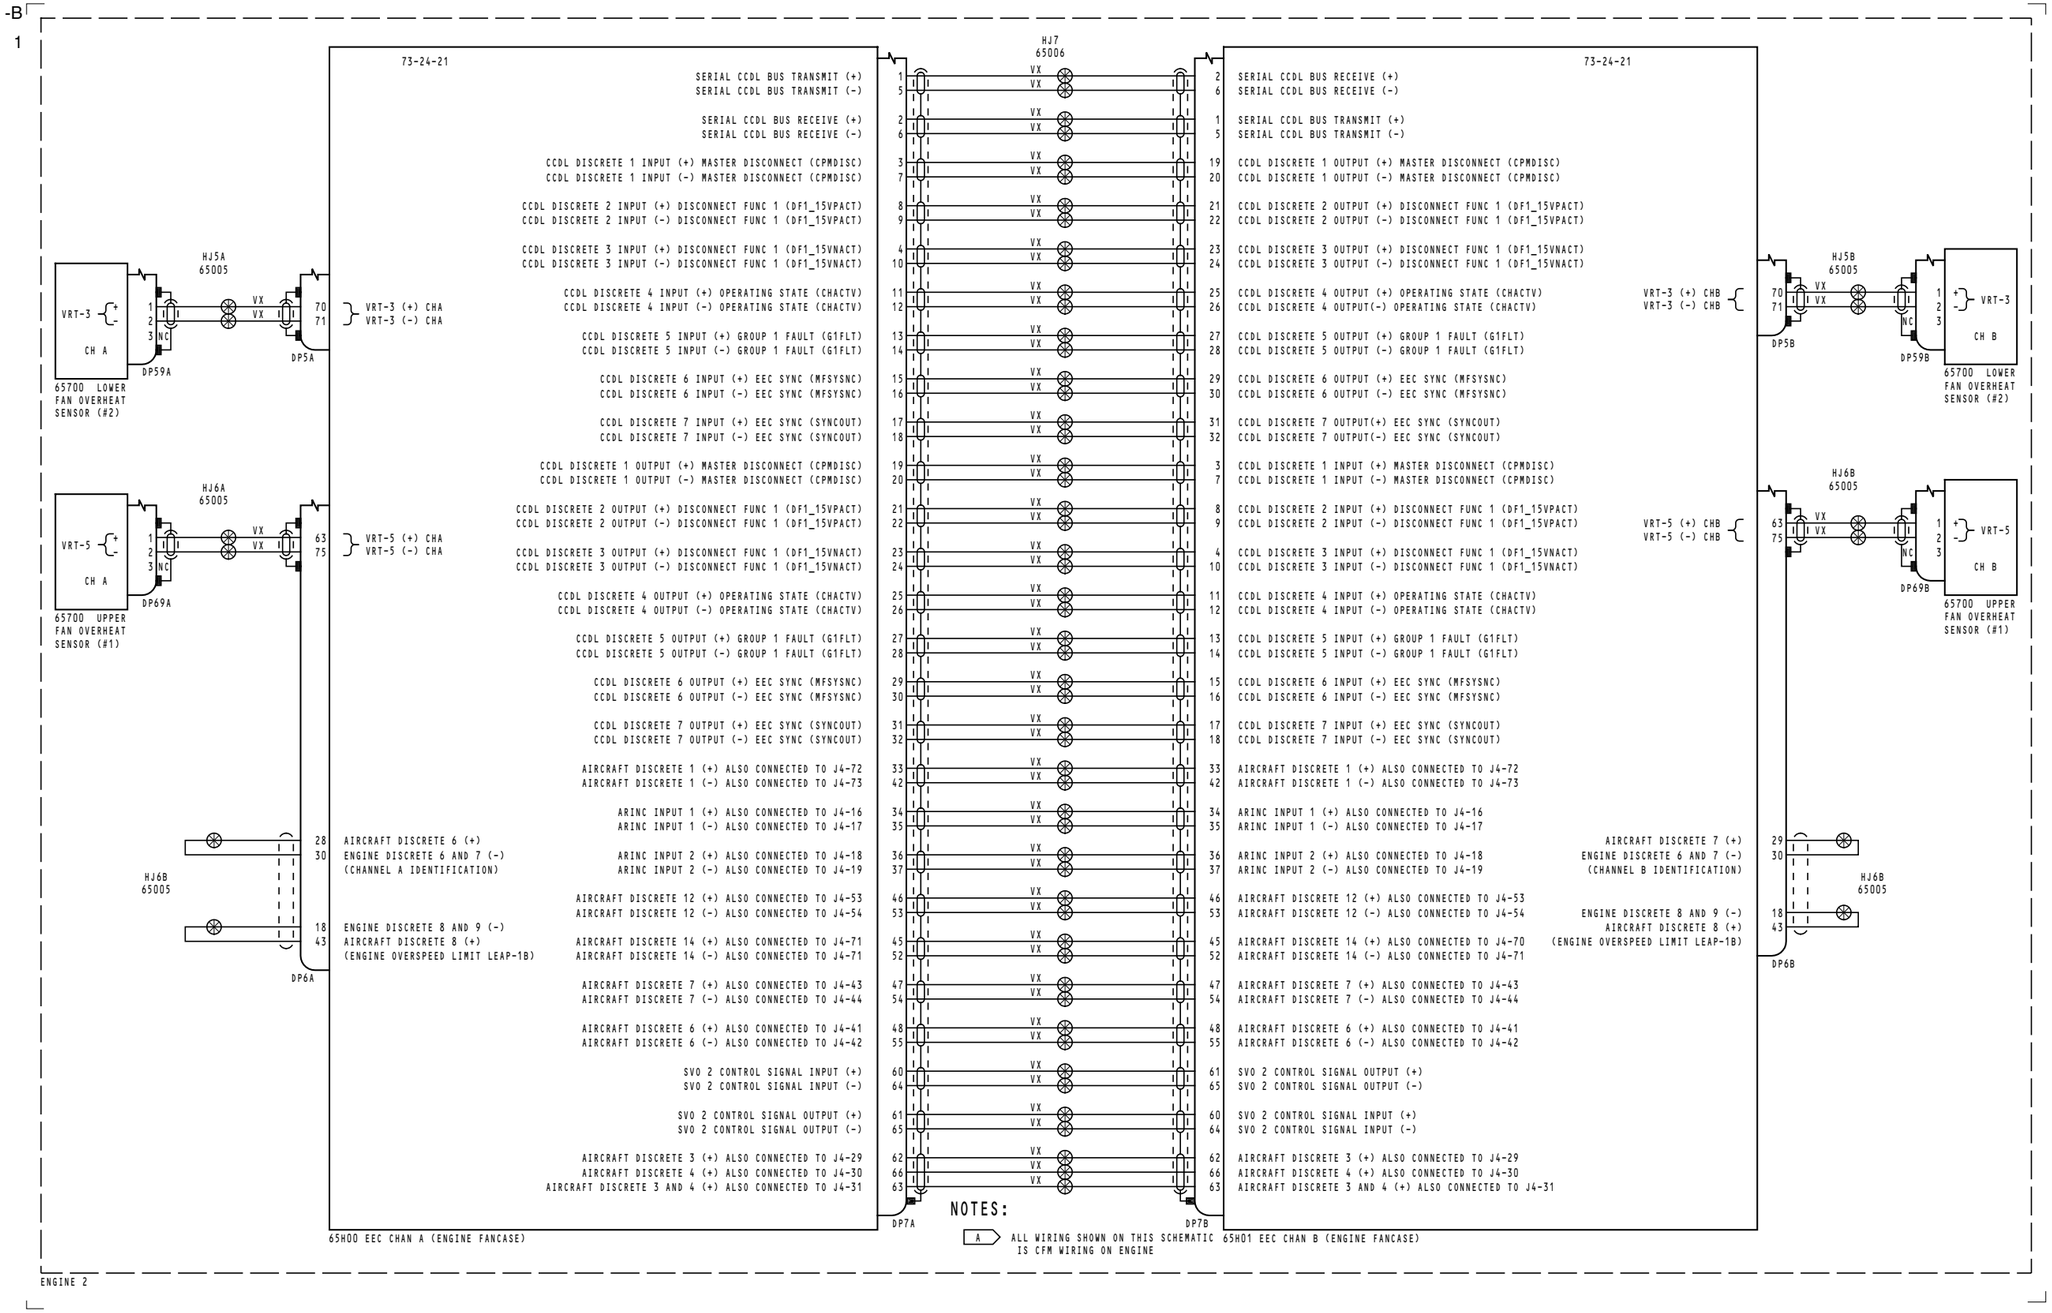


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-21-41

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

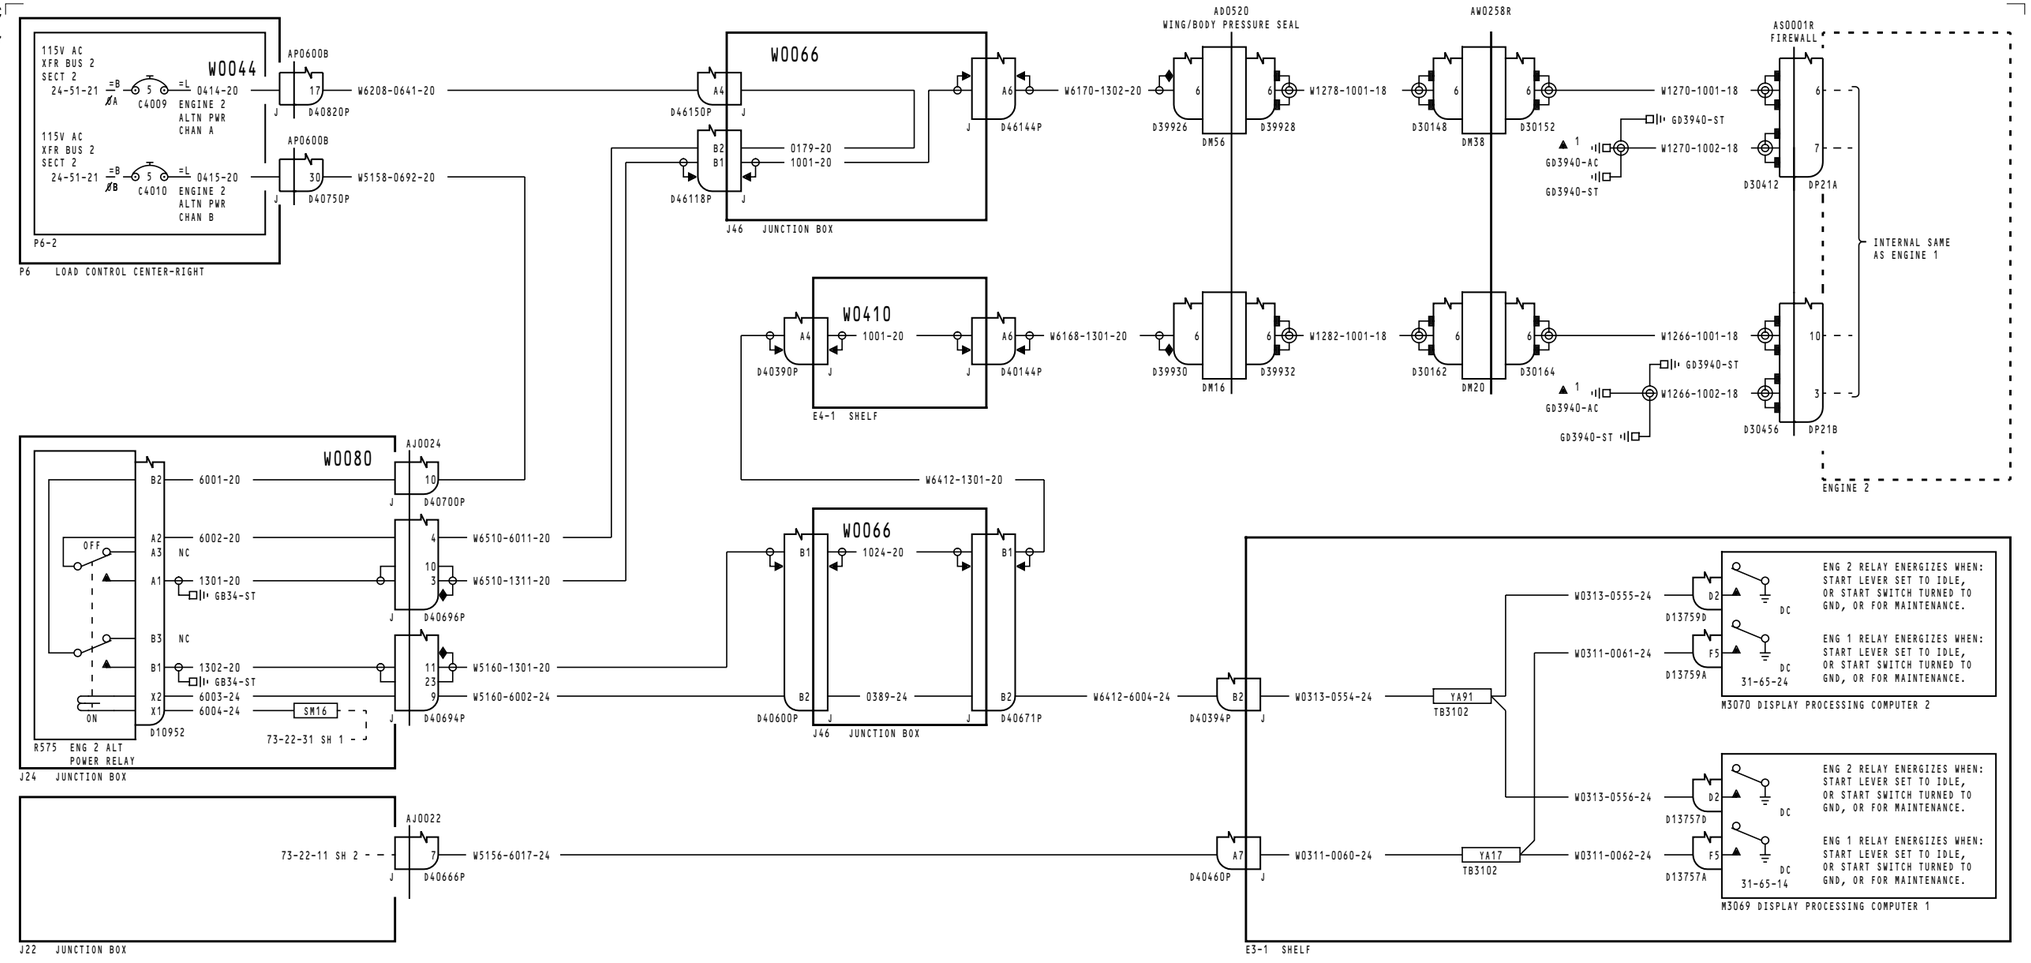


73-22-11

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-D
2

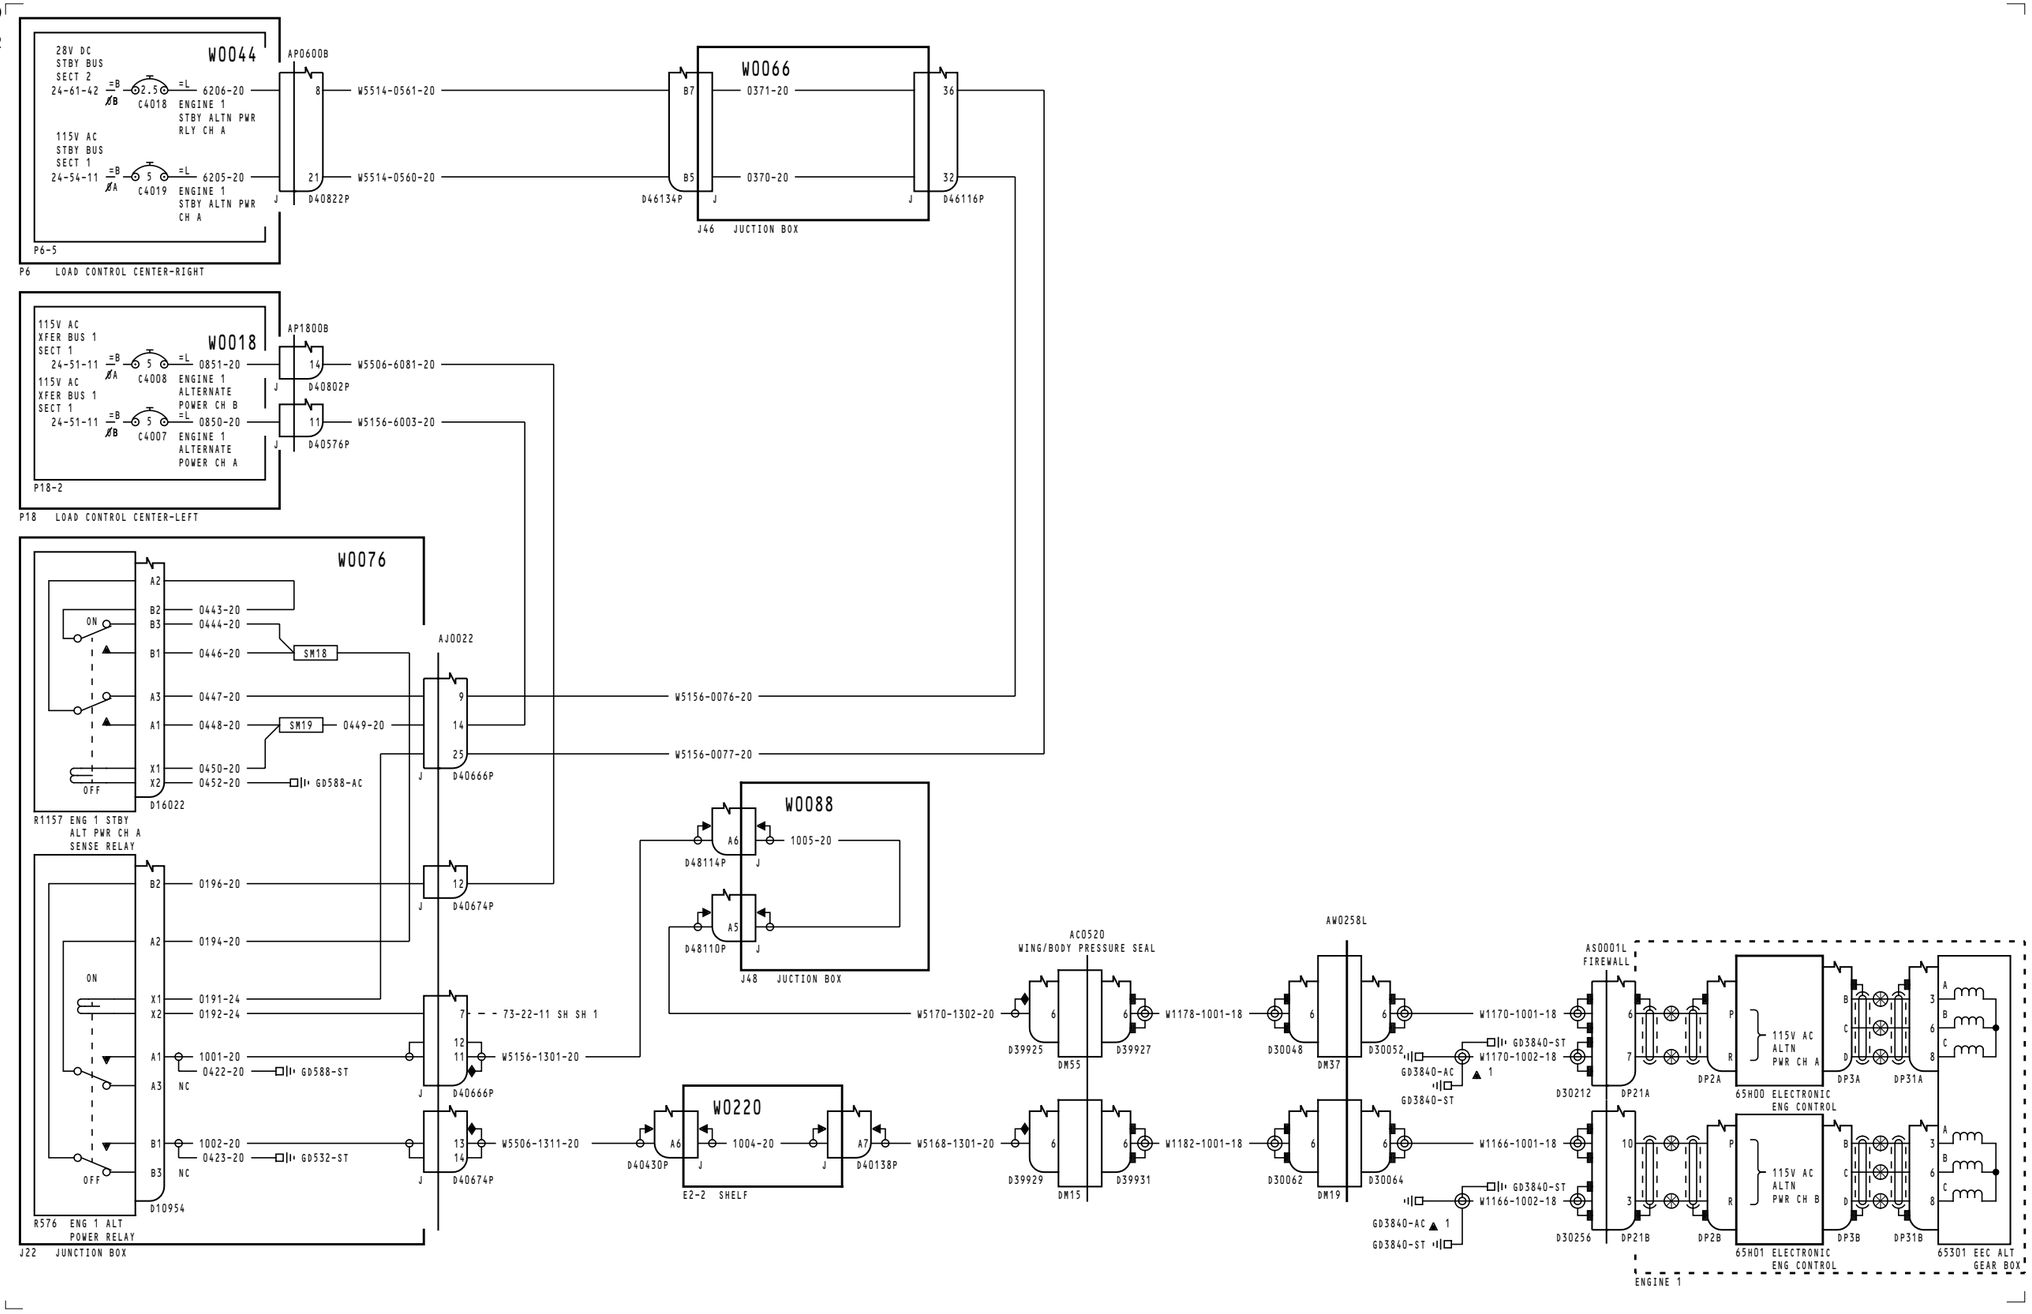


73-22-11

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

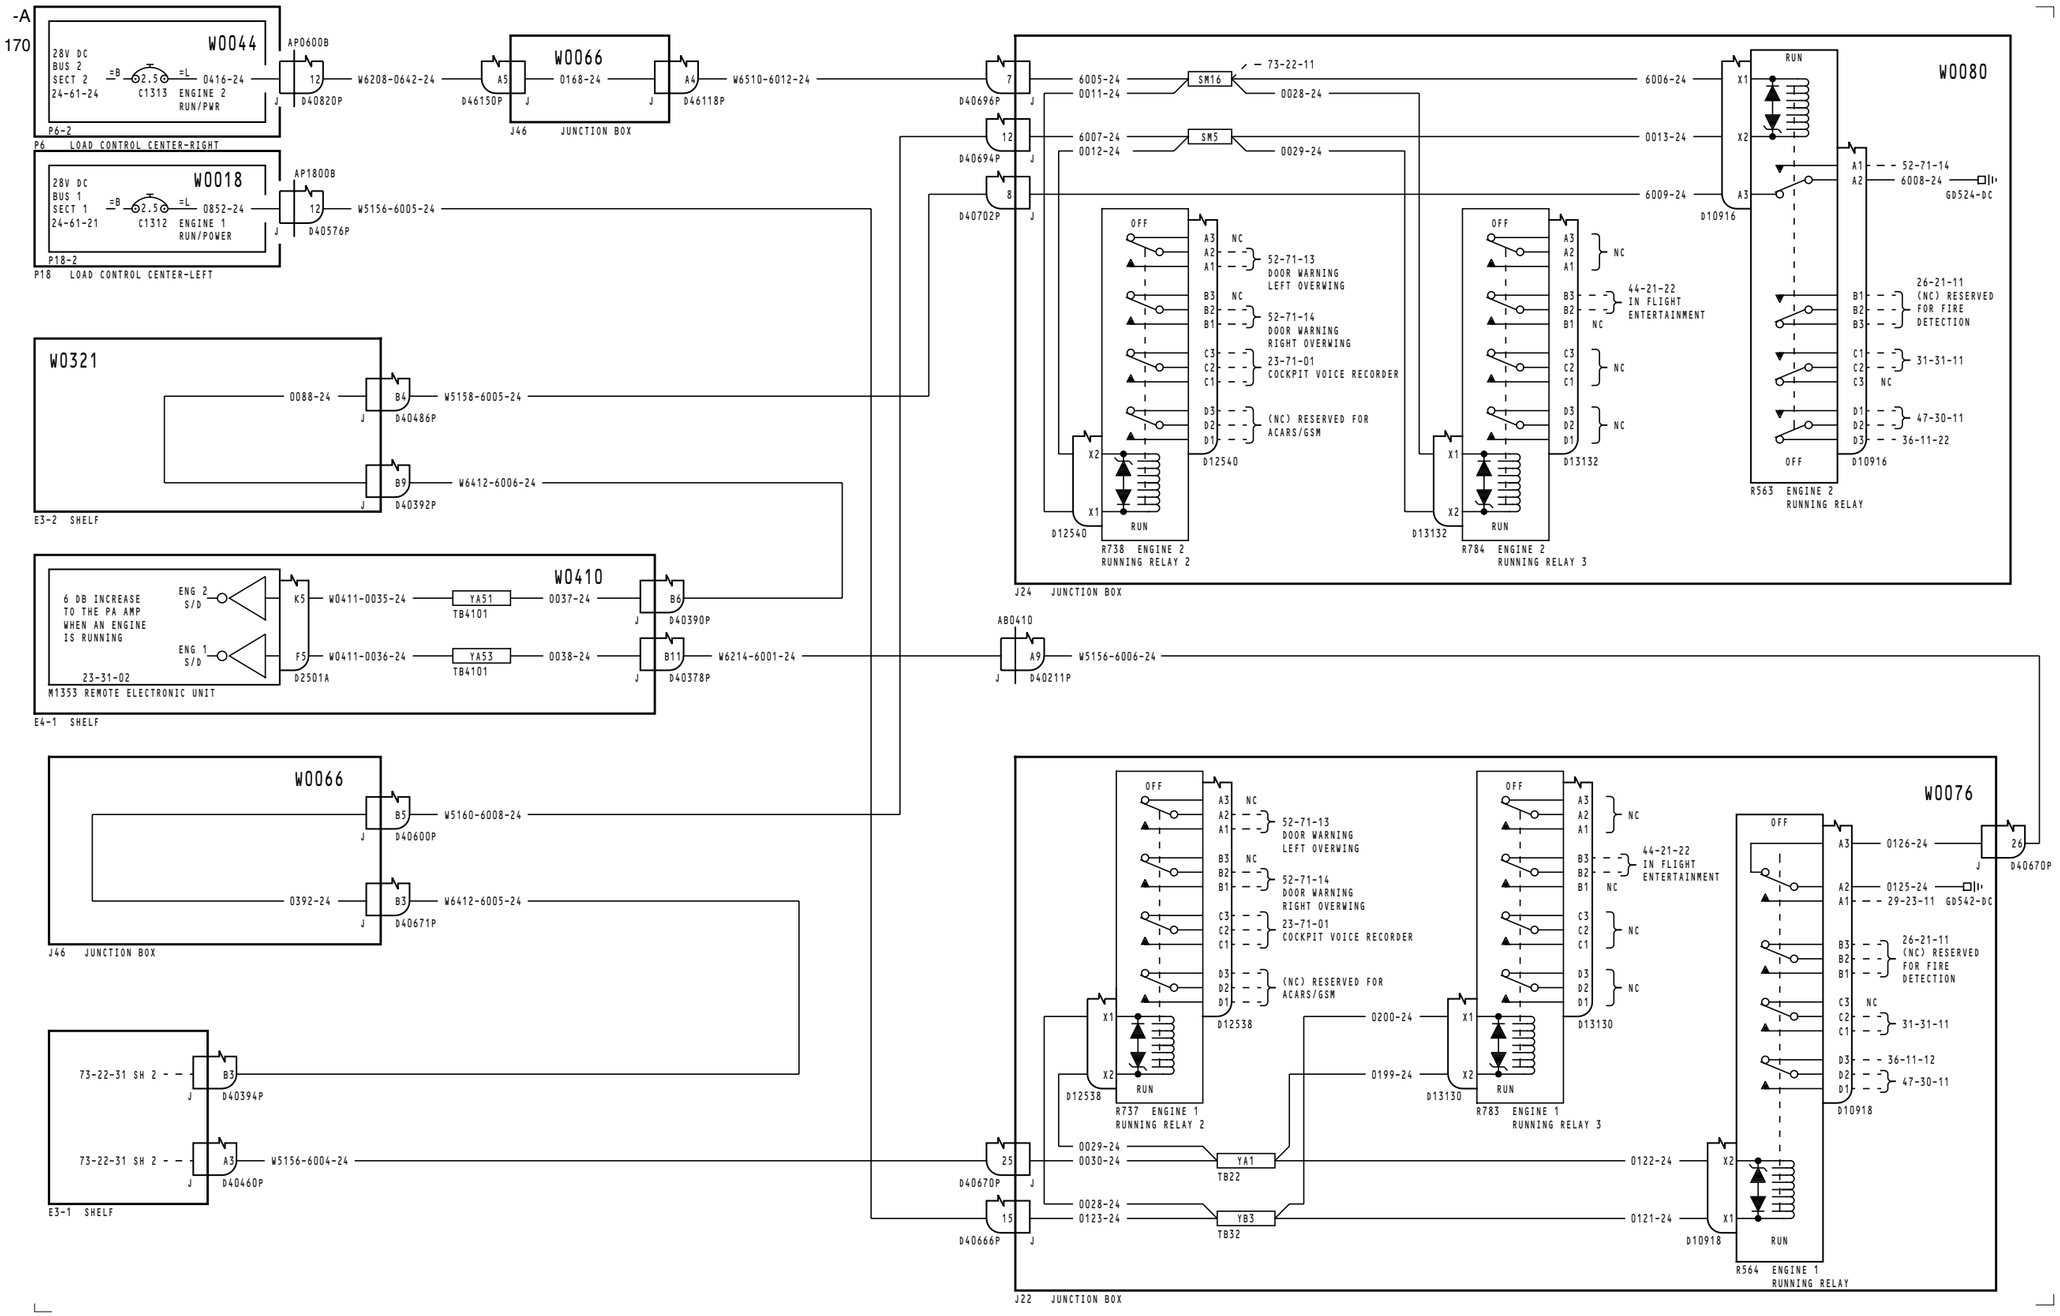

ALL	ENGINE RUNNING CONTROL
	D280AM1215


73-22-31
Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A

5

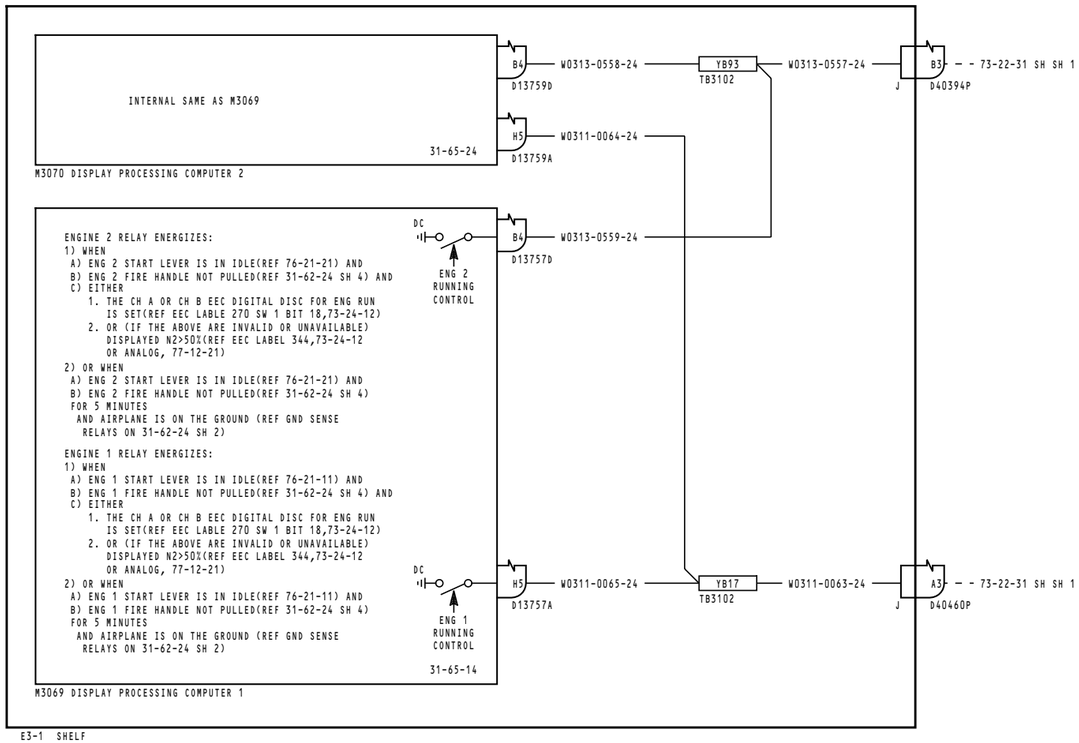


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-22-31

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

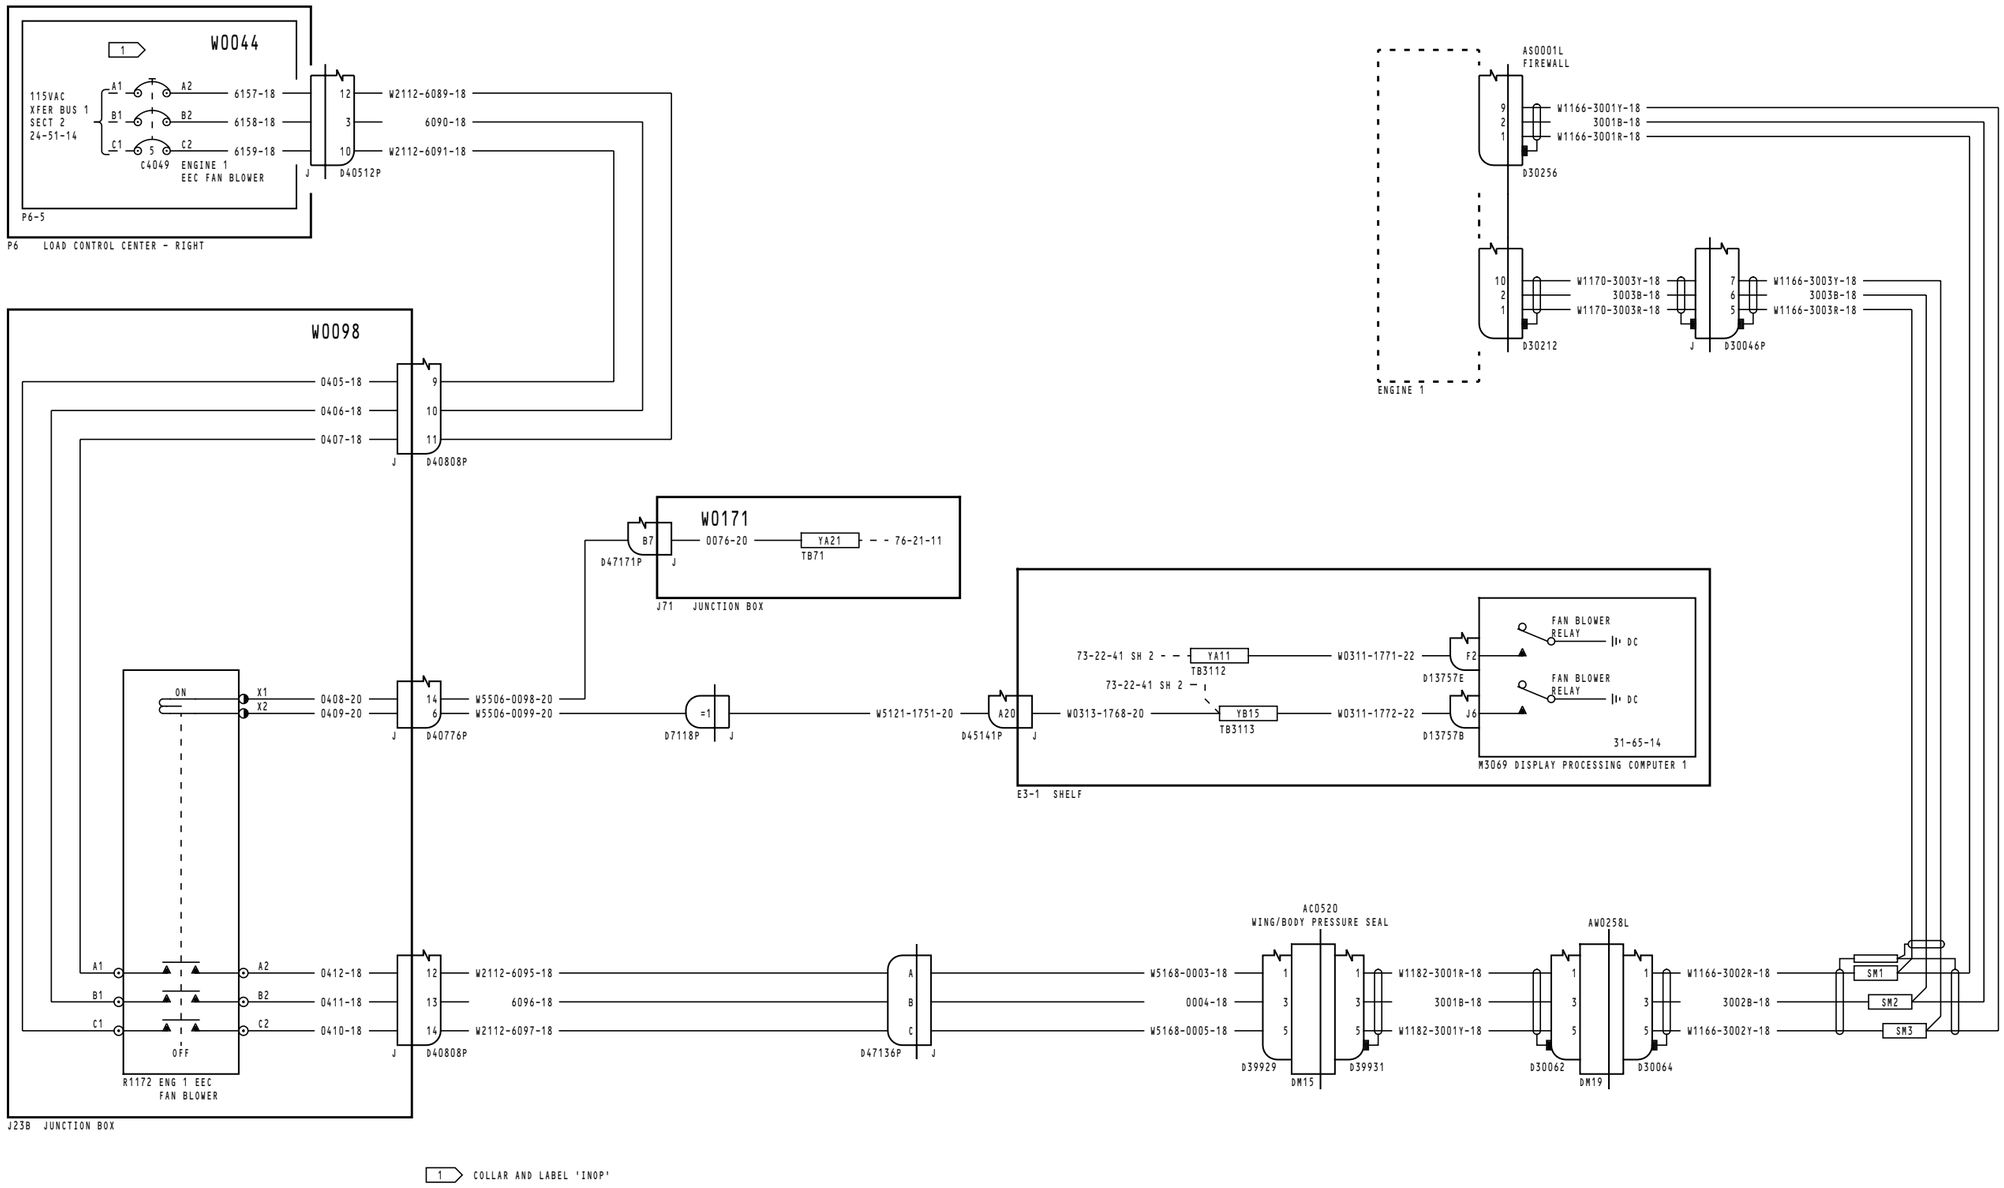


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-22-41

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

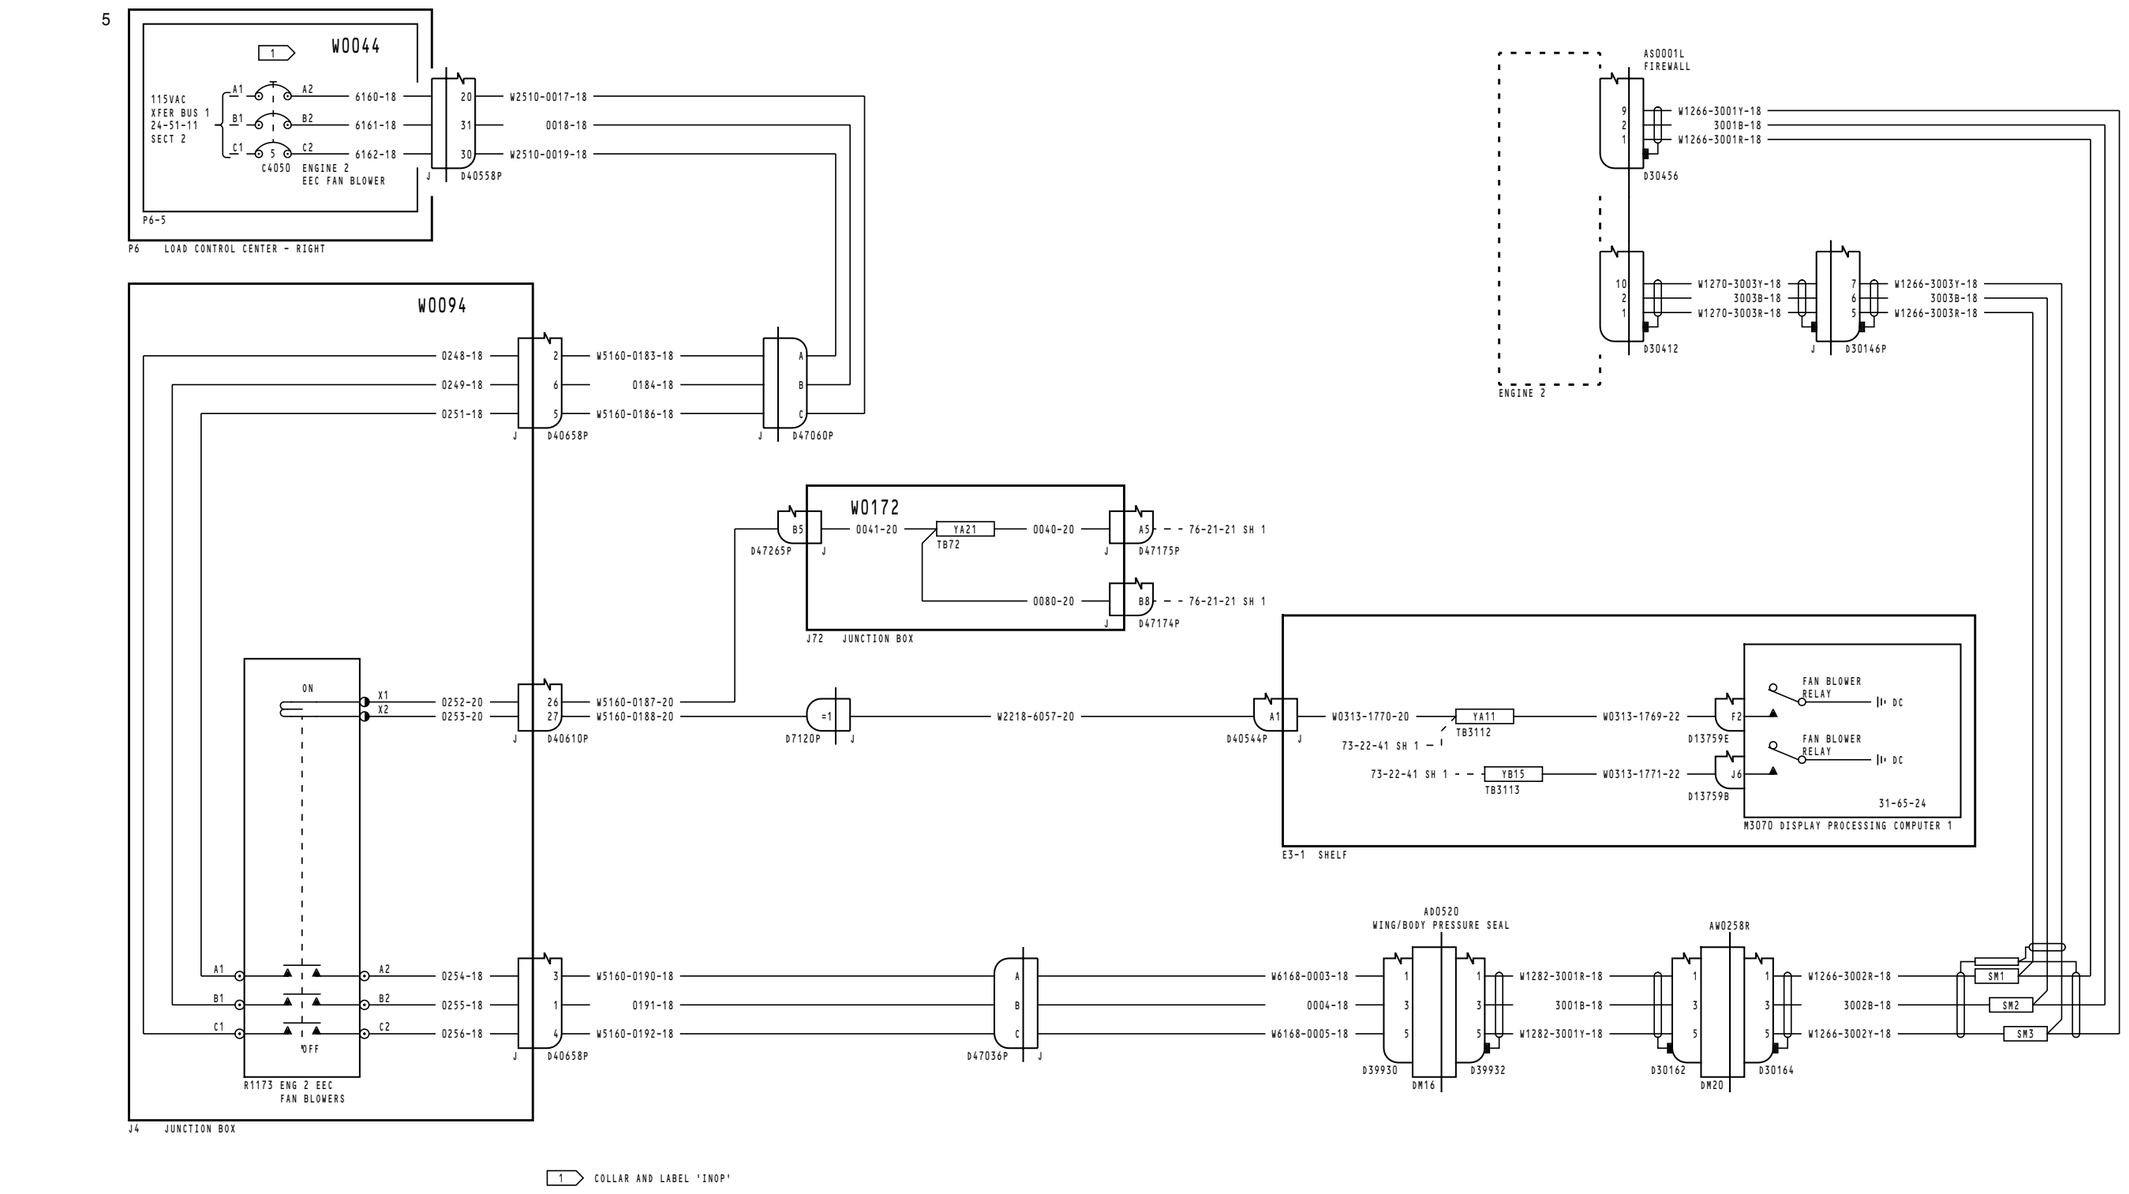


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-22-41

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

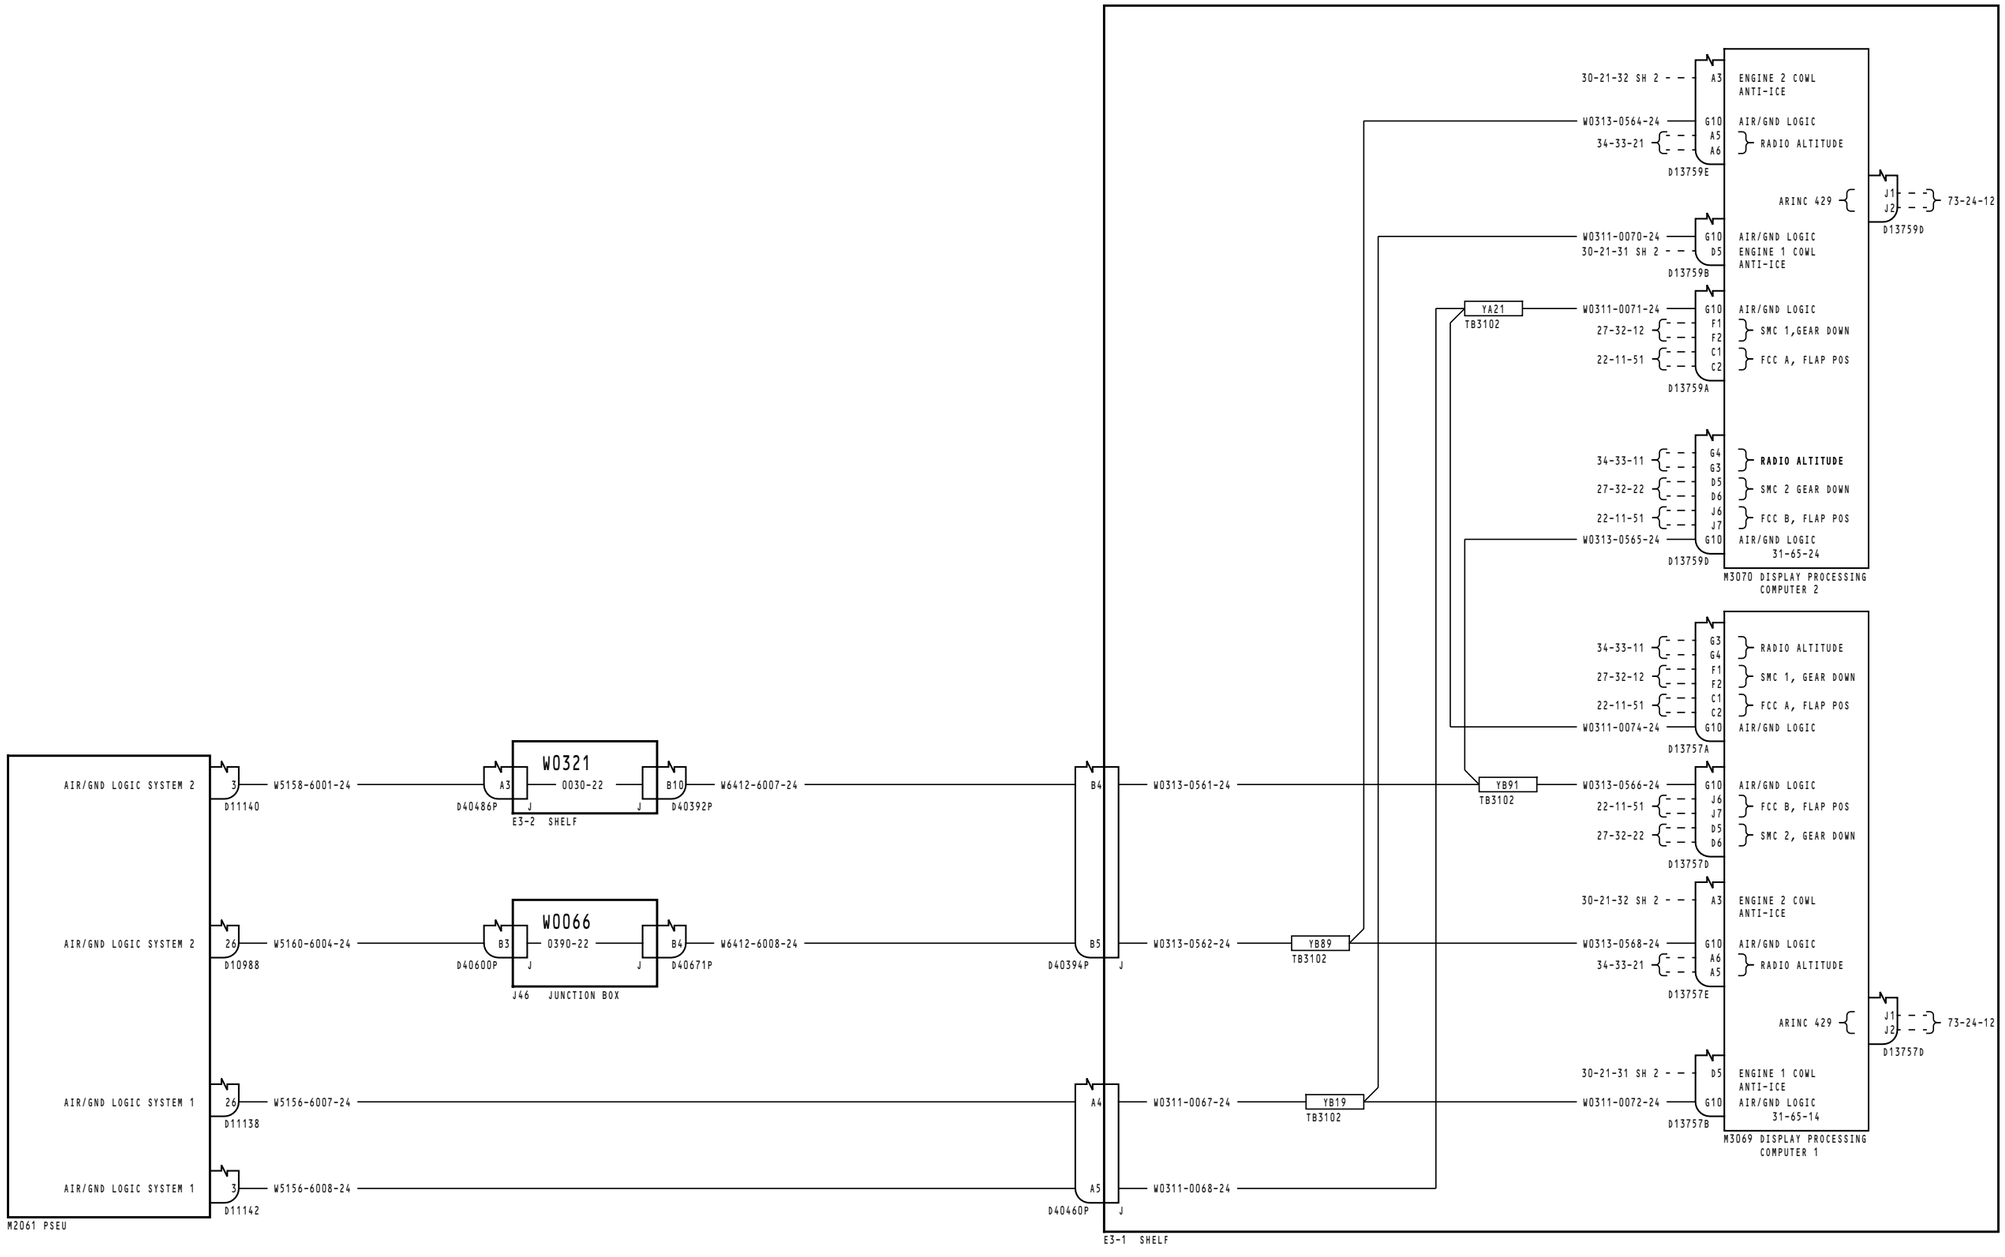


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-23-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

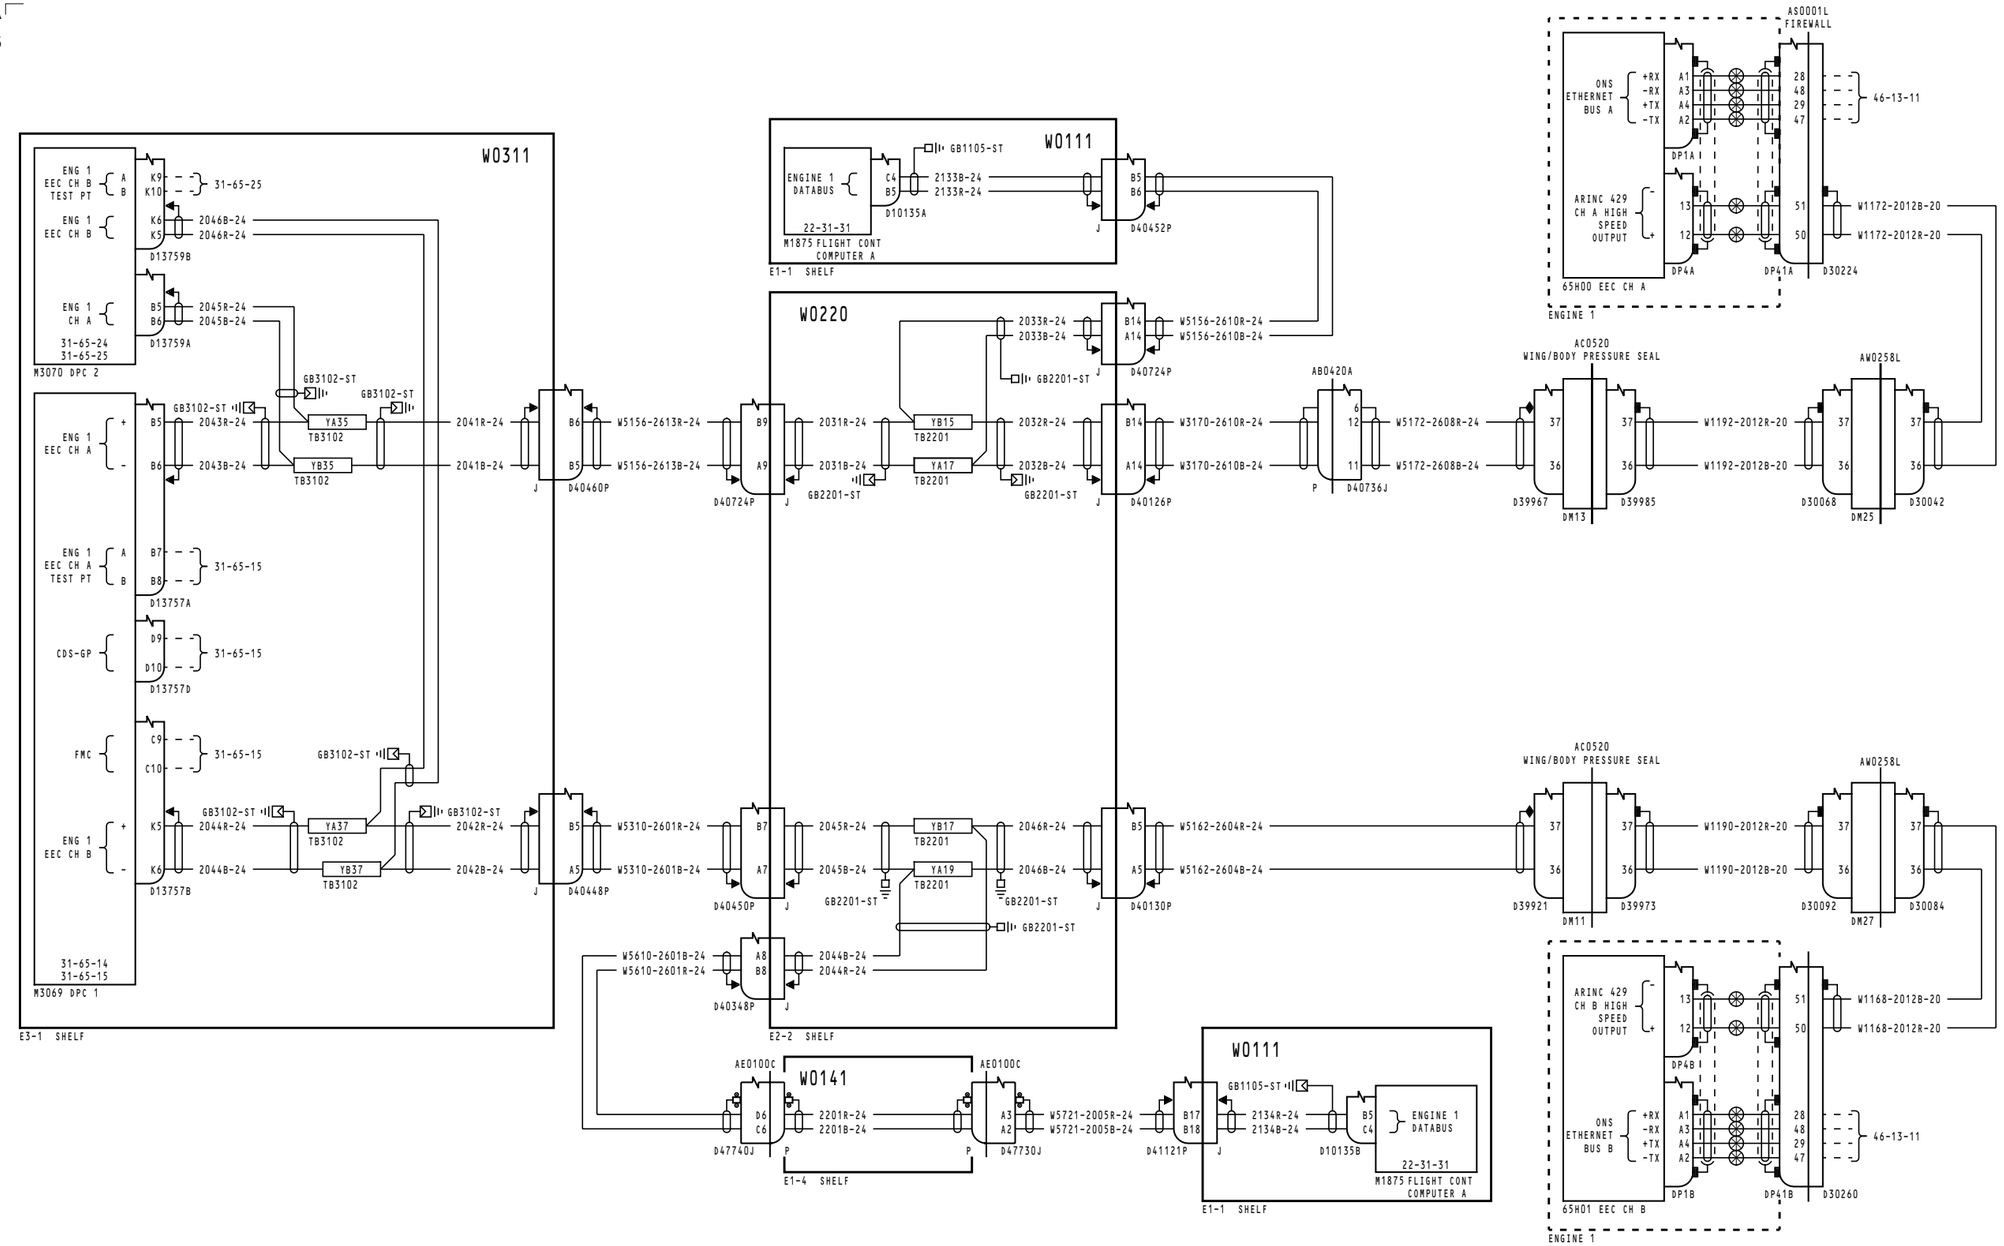


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-24-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

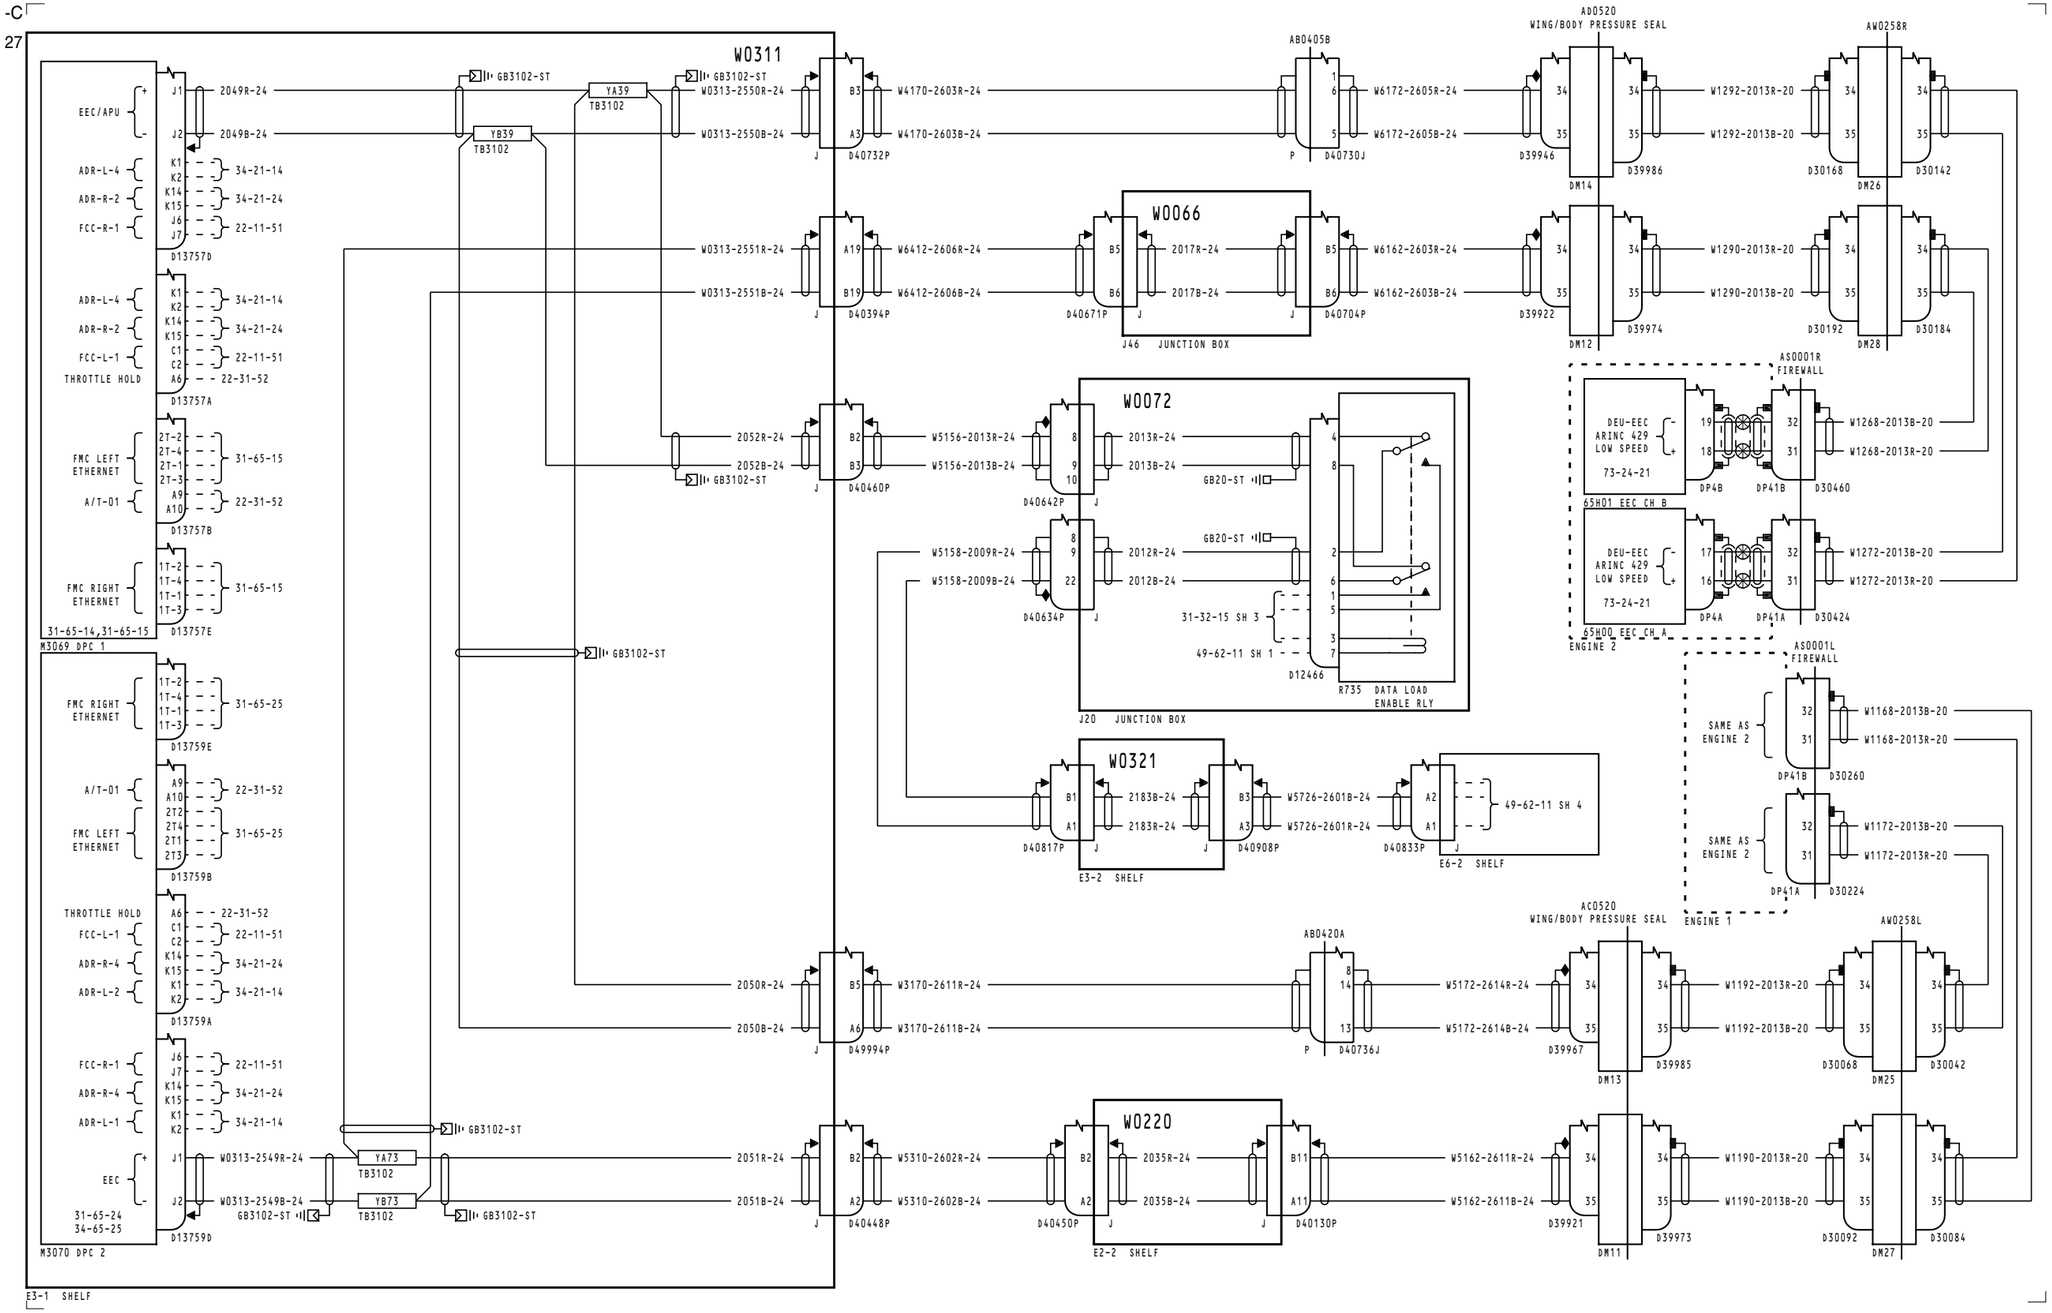

ECCN 9E991 BOEING PROPRIETARY - See title page for details


73-24-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
11

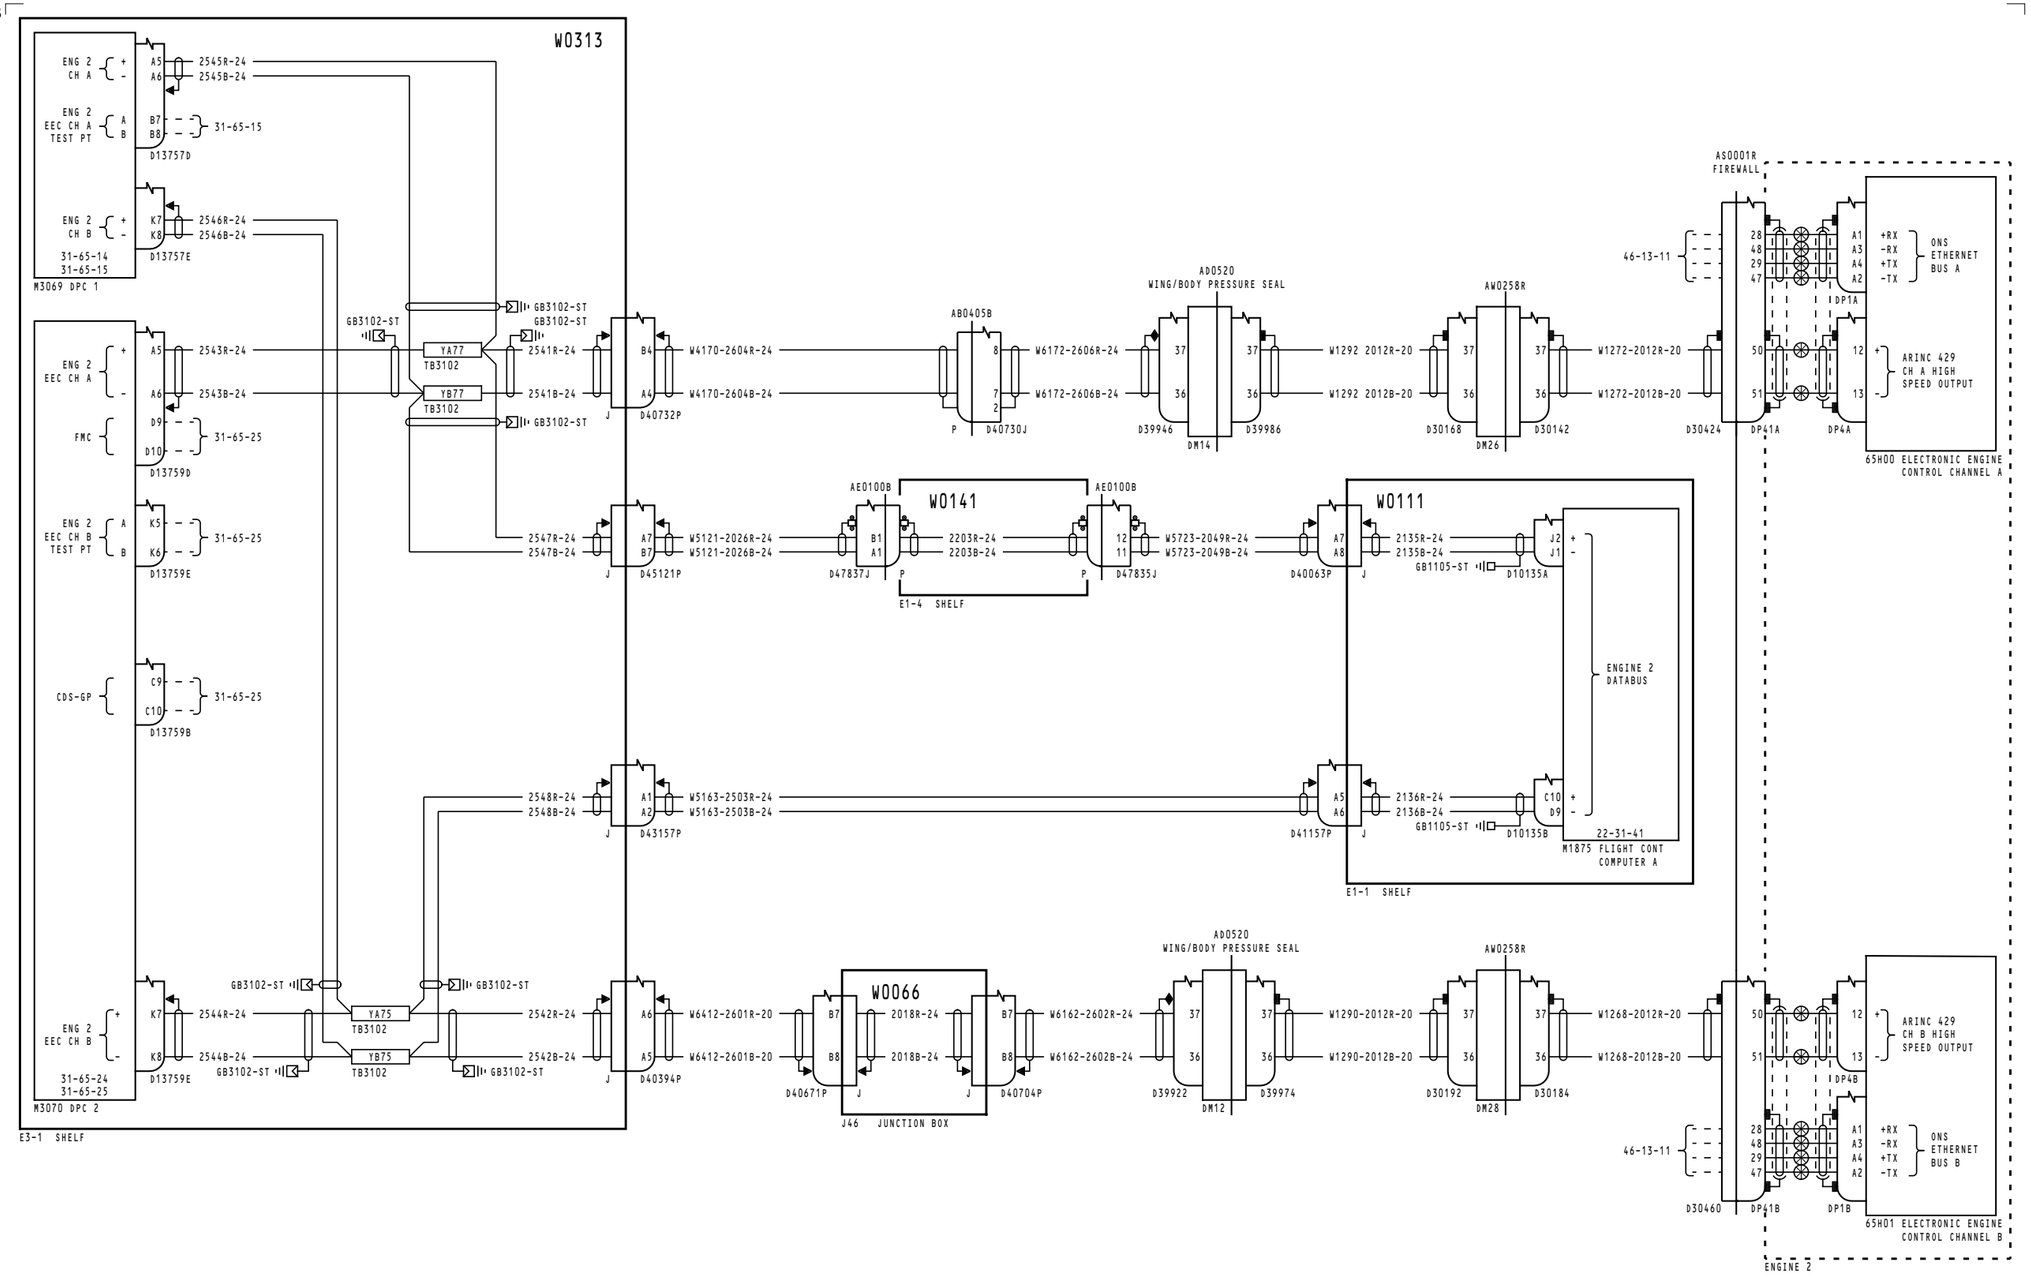


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-24-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

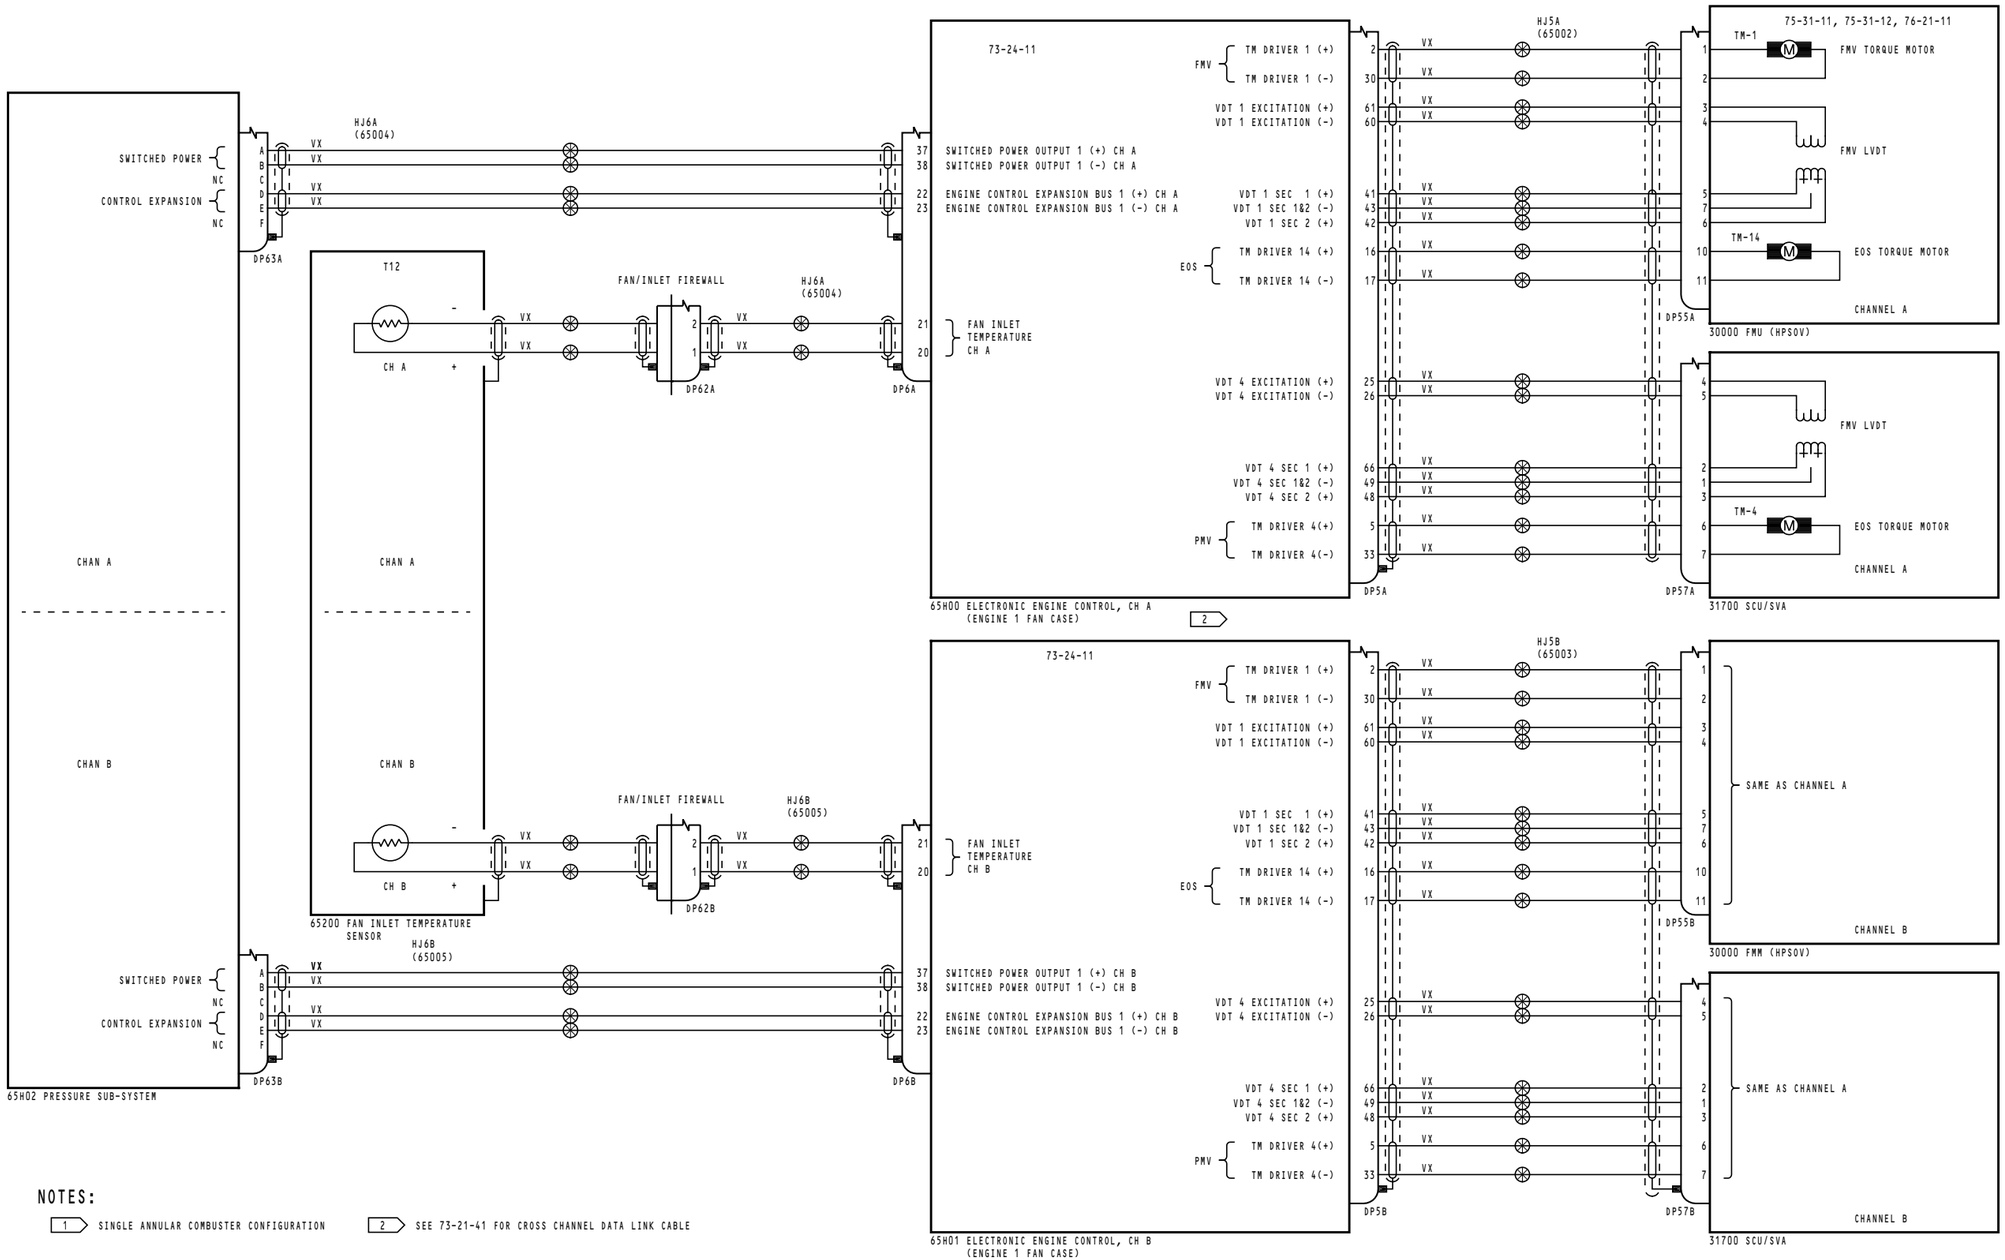

NOTES:

1 SINGLE ANNULAR COMBUSTER CONFIGURATION

2 SEE 73-21-41 FOR CROSS CHANNEL DATA LINK CABLE


ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-25-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

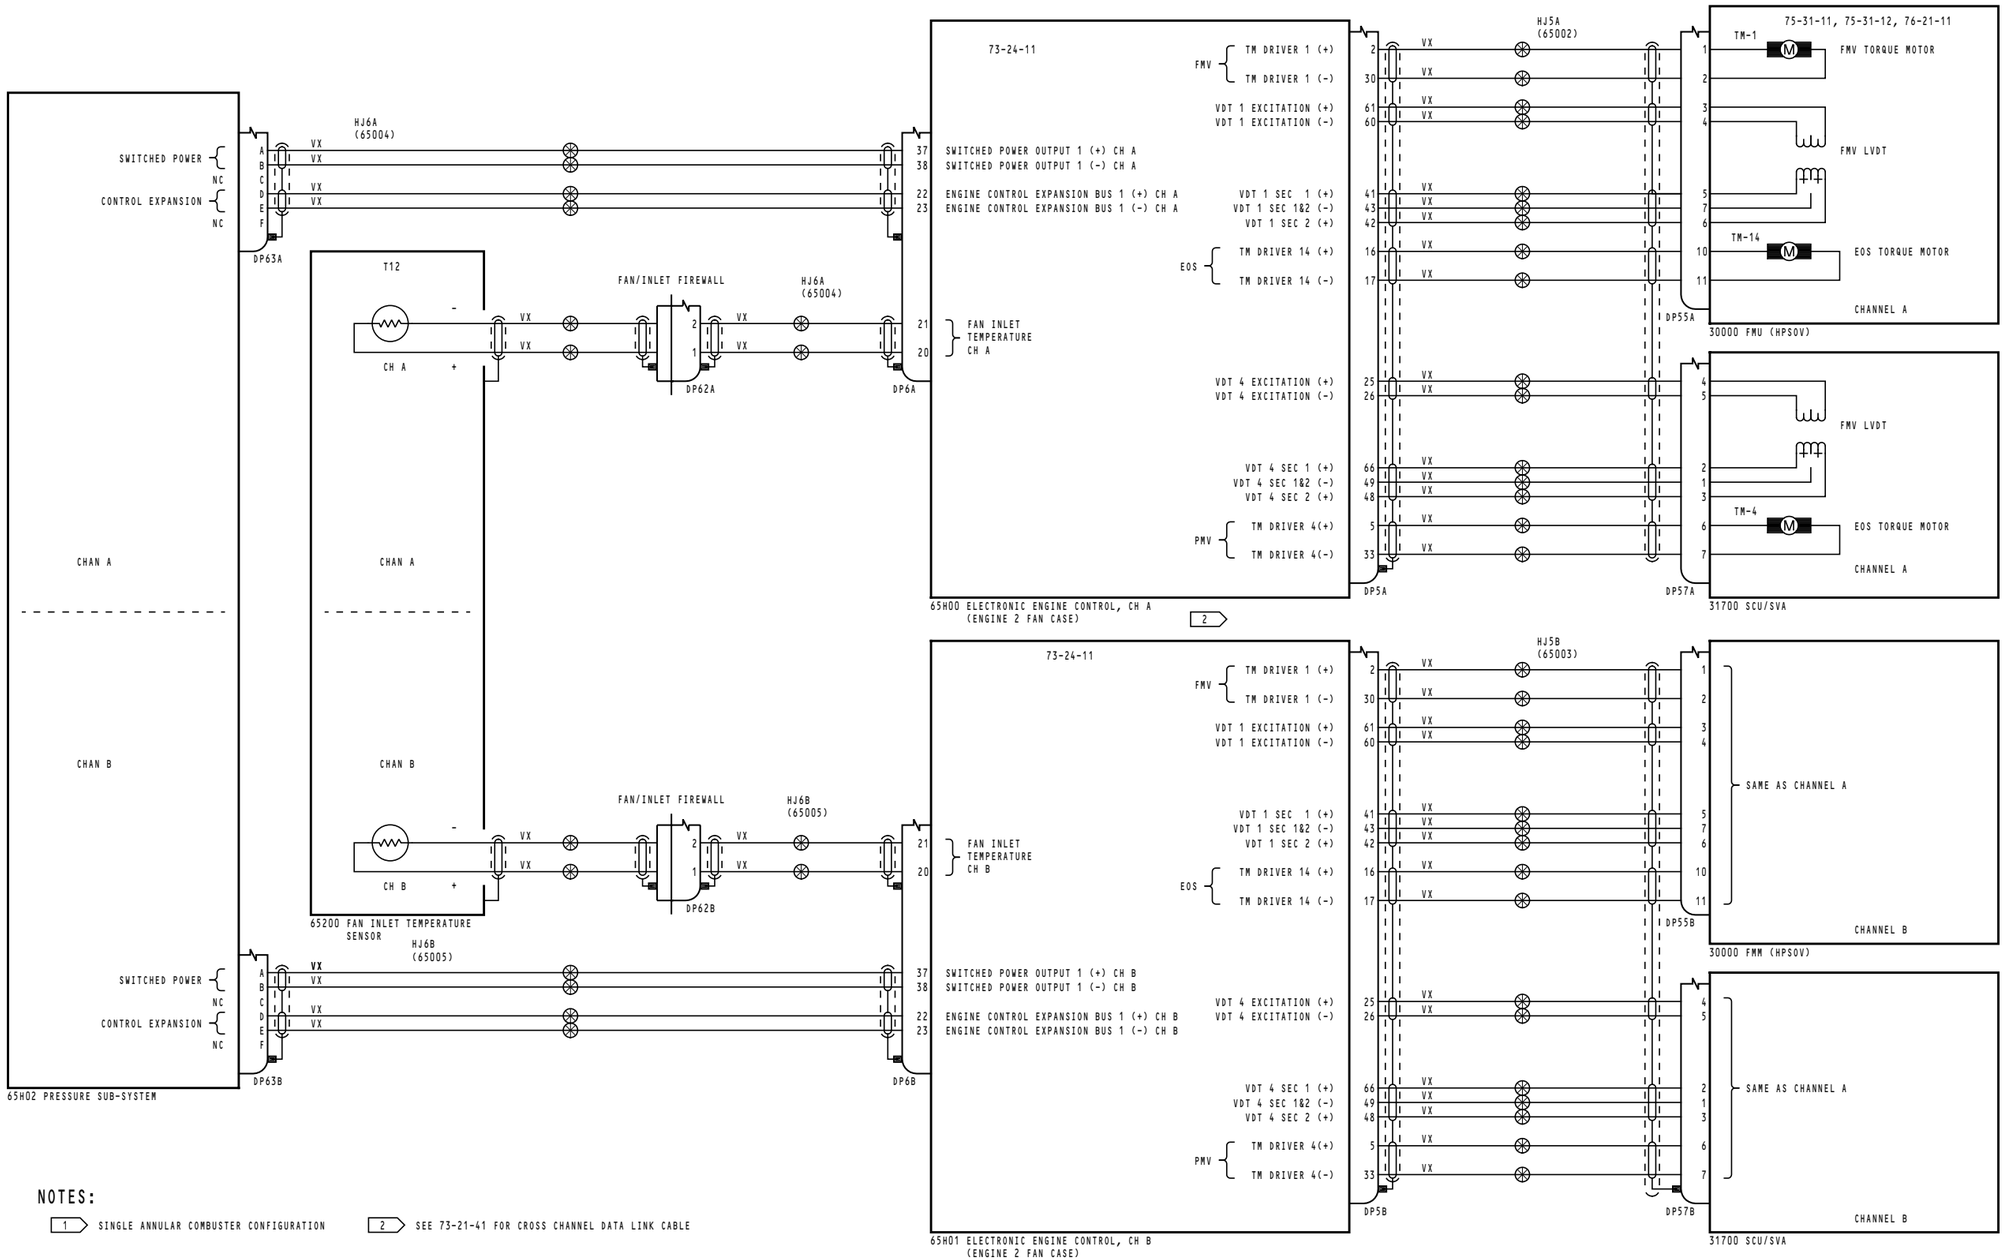

ECCN 9E991 BOEING PROPRIETARY - See title page for details


73-25-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
3

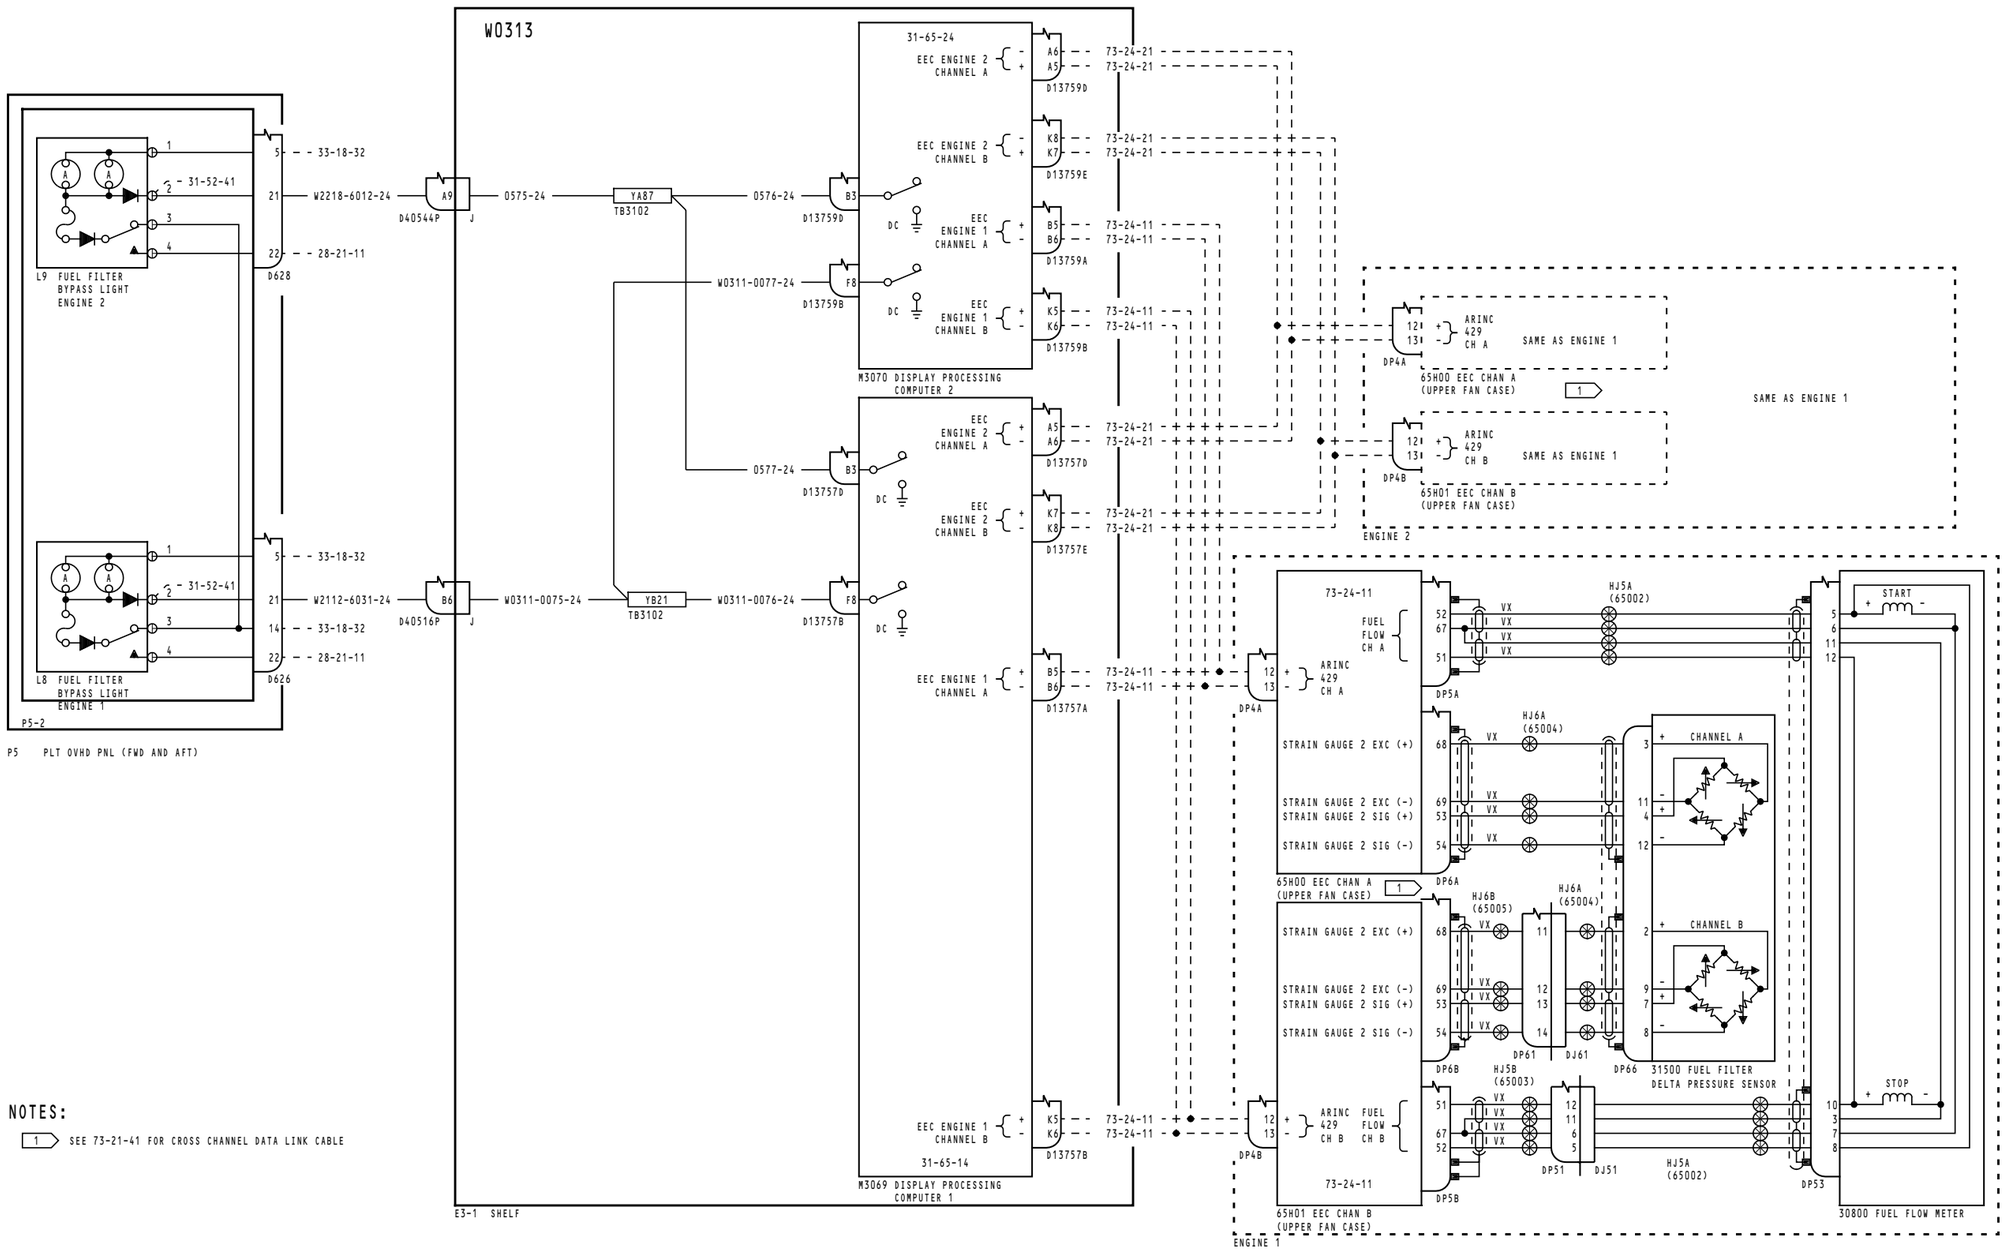

NOTES:


1 SEE 73-21-41 FOR CROSS CHANNEL DATA LINK CABLE

ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-31-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

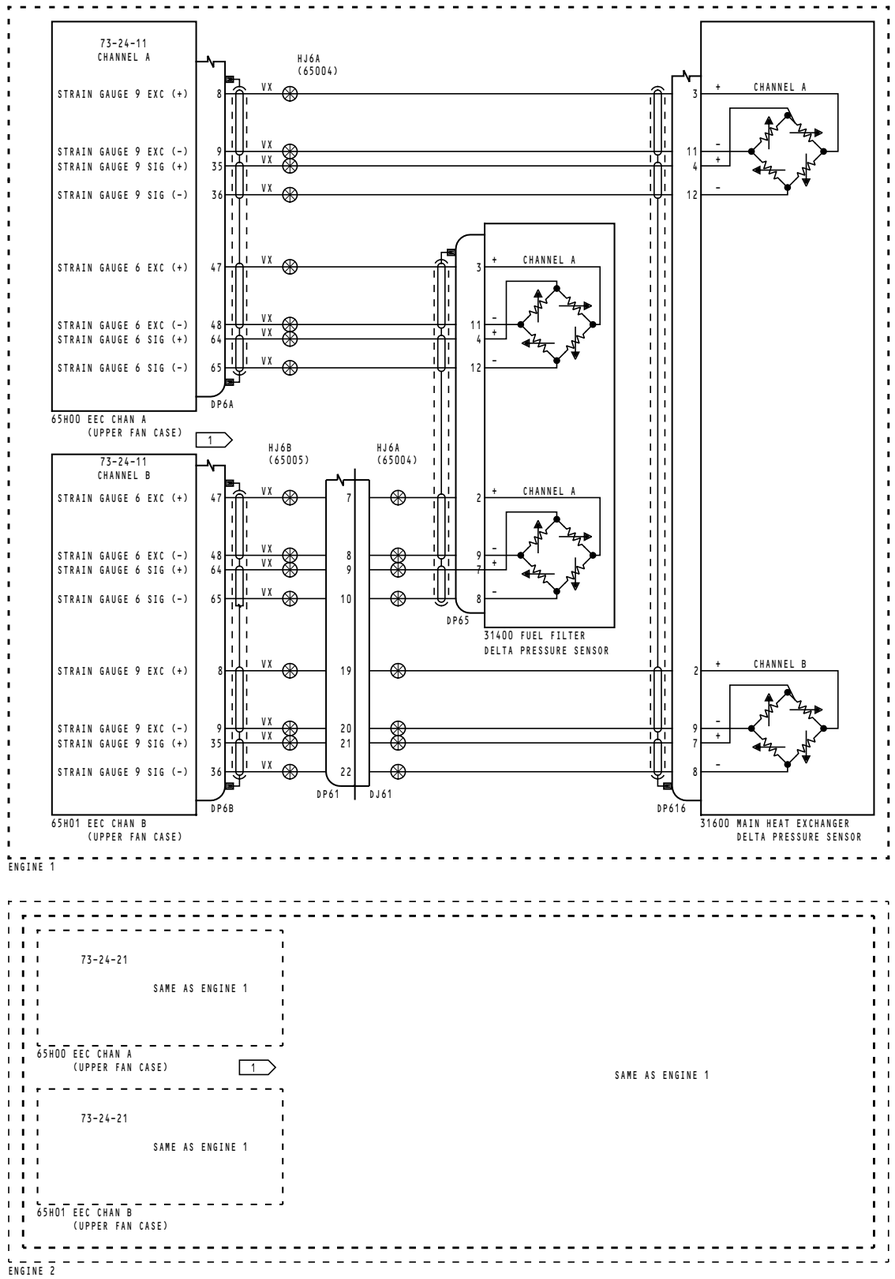

NOTES:


1. SEE 73-21-41 FOR CROSS CHANNEL DATA LINK CABLE
2. ALL WIRING SHOWN ON THIS WIRE DIAGRAM IS CFM WIRING ON ENGINE
3. OUTSIDE PRESSURE VESSEL THIS WIRE CABLE SHALL BE DOUBLE SHIELDED WITH BOTH SHIELDS AT EACH END TERMINATIED TO A ZERO LENGTH BRAID SOCK BACKSHELL.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-31-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

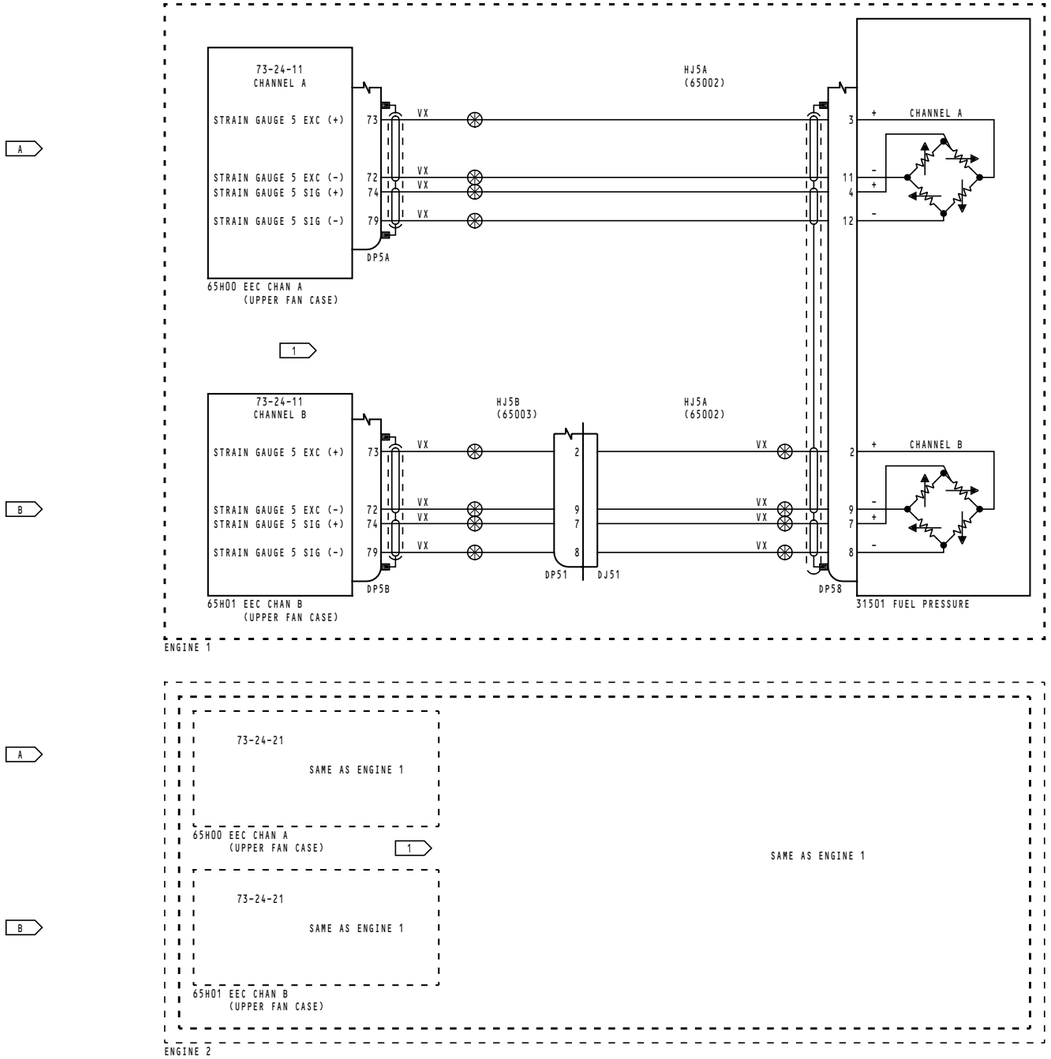

NOTES:


1. SEE 73-21-41 FOR CROSS CHANNEL DATA LINK CABLE
2. ALL WIRING SHOWN ON THIS WIRE DIAGRAM IS CFM WIRING ON ENGINE
3. OUTSIDE PRESSURE VESSEL THIS WIRE CABLE SHALL BE DOUBLE SHIELDED WITH BOTH SHIELDS AT EACH END TERMINATIED TO A ZERO LENGTH BRAID SOCK BACKSHELL.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

73-31-11

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

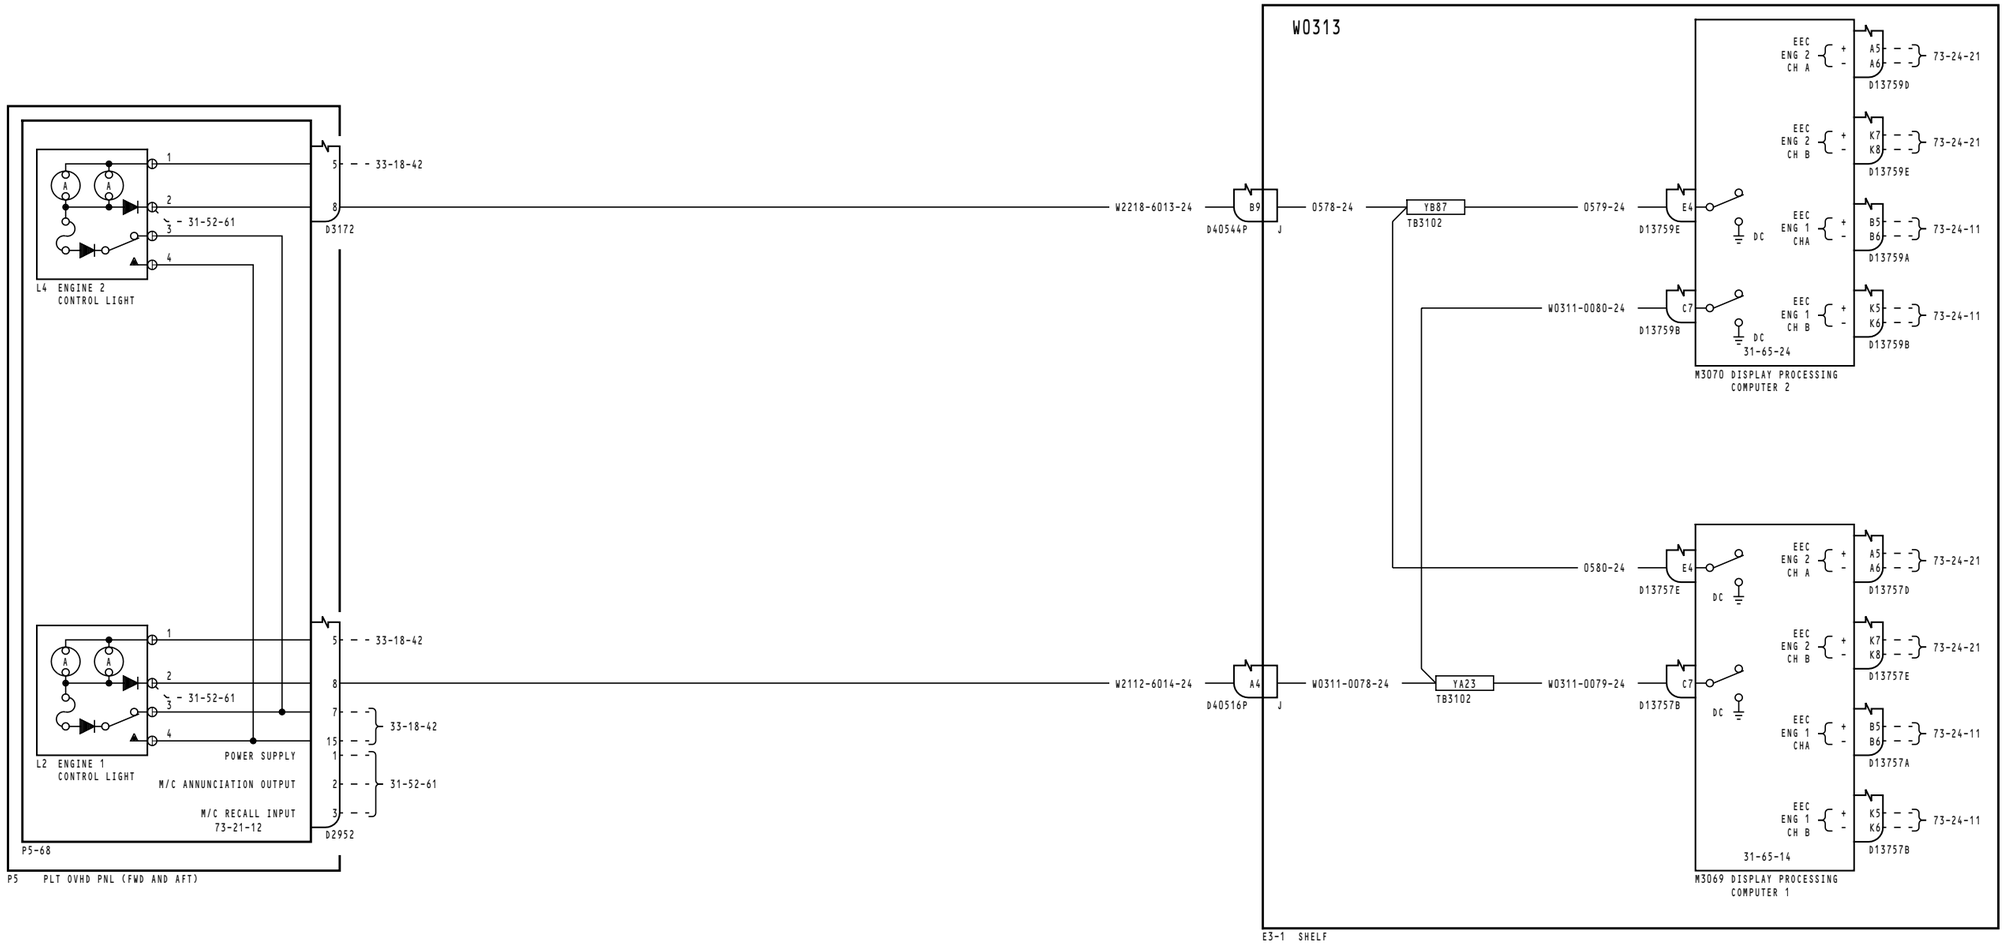

73-32-11

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details