Loadable Diagnostic Interface File – Load Procedures

1. General

This procedure requires the Loadable Diagnostic Interface File (LDI). Media part number is VD6–LDI_1_1_xx (Pre Mod 6/2303); or VD6–LDI_4_1_4_xx (Post Mod 6/2303). The 'xx' represents the latest approved version.

2. LDI File Load Procedure

Insert the LDI File Media and follow the loading procedure as described in 45-00-00, Central Maintenance Computer – General data.

Note Typical load time: 5 minutes.

When loading is complete, verify as follows:

A. Use the arrow keys on the MF Controller to navigate to the SYSTEMS PAGE. (Refer to Figure 1).


B. Push the PAGE button on the MF Controller. (Refer to Figure 2).

C. Use the Joystick to select SCMS/DL and push ENT on the MF Controller. (Refer to Figure 3).


Note There are multiple pages available under the Sys Config tab. To change pages, highlight Page Down or Page Up and press ENT on the MF Controller.

D. Scroll to the page displaying the OMS 1 LDI on the Sys Config tab. (Refer to Figure 4).


E. Verify that OMS 1 LDI shows the correct part number. (Refer to Figure 4).

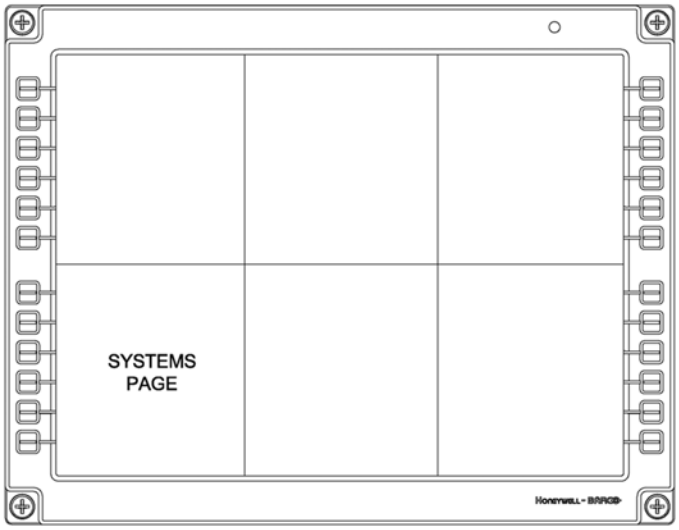


MFD (Lower Typical) – SYSTEMS PAGE Location
Figure 1

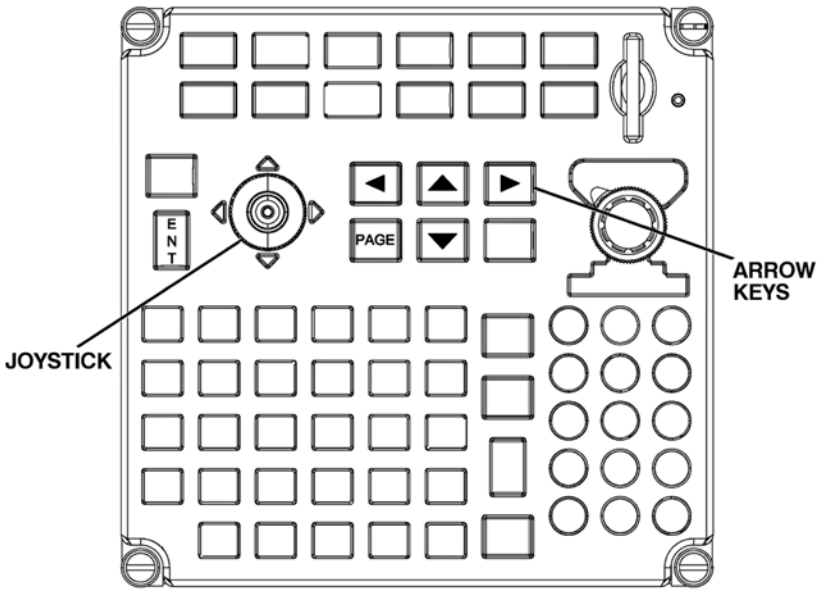

MF Controller
Figure 2

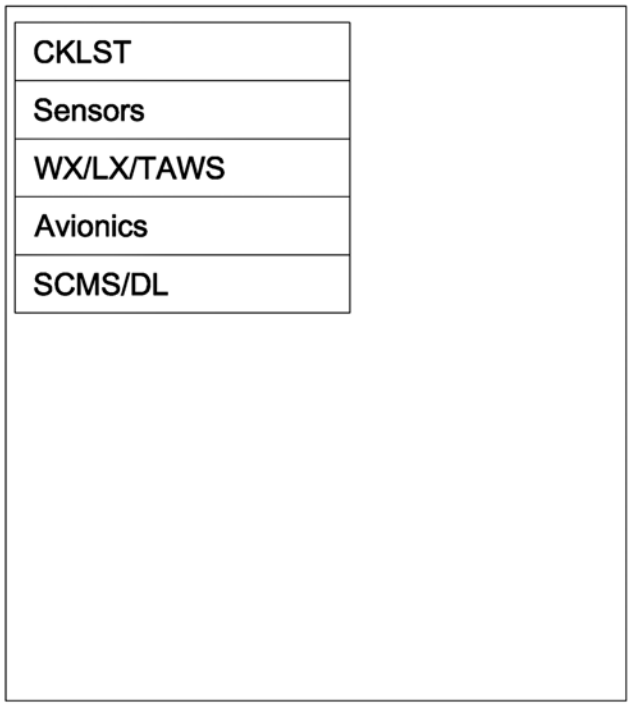

SYSTEMS PAGE Menu
Figure 3

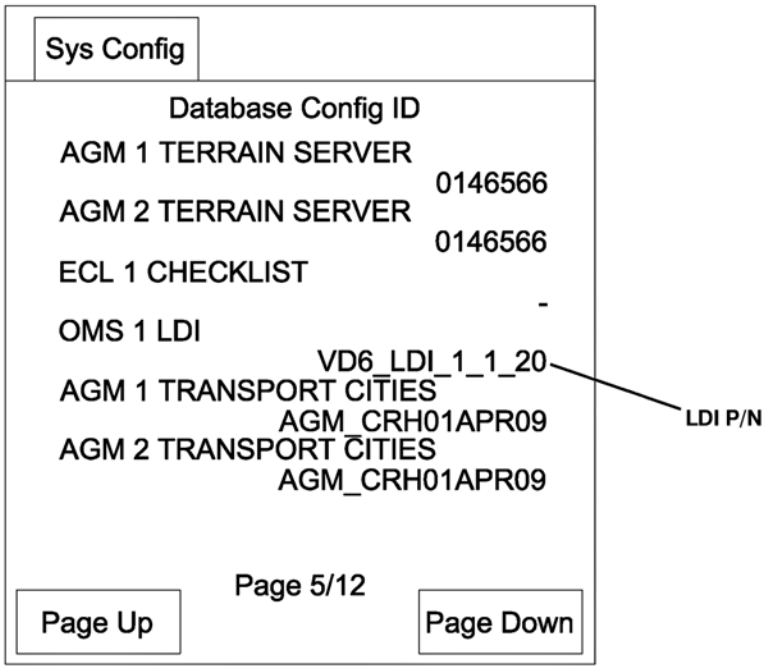

Systems Configuration Tab – (Page 5 Shown)
Figure 4

This Page Intentionally Left Blank