
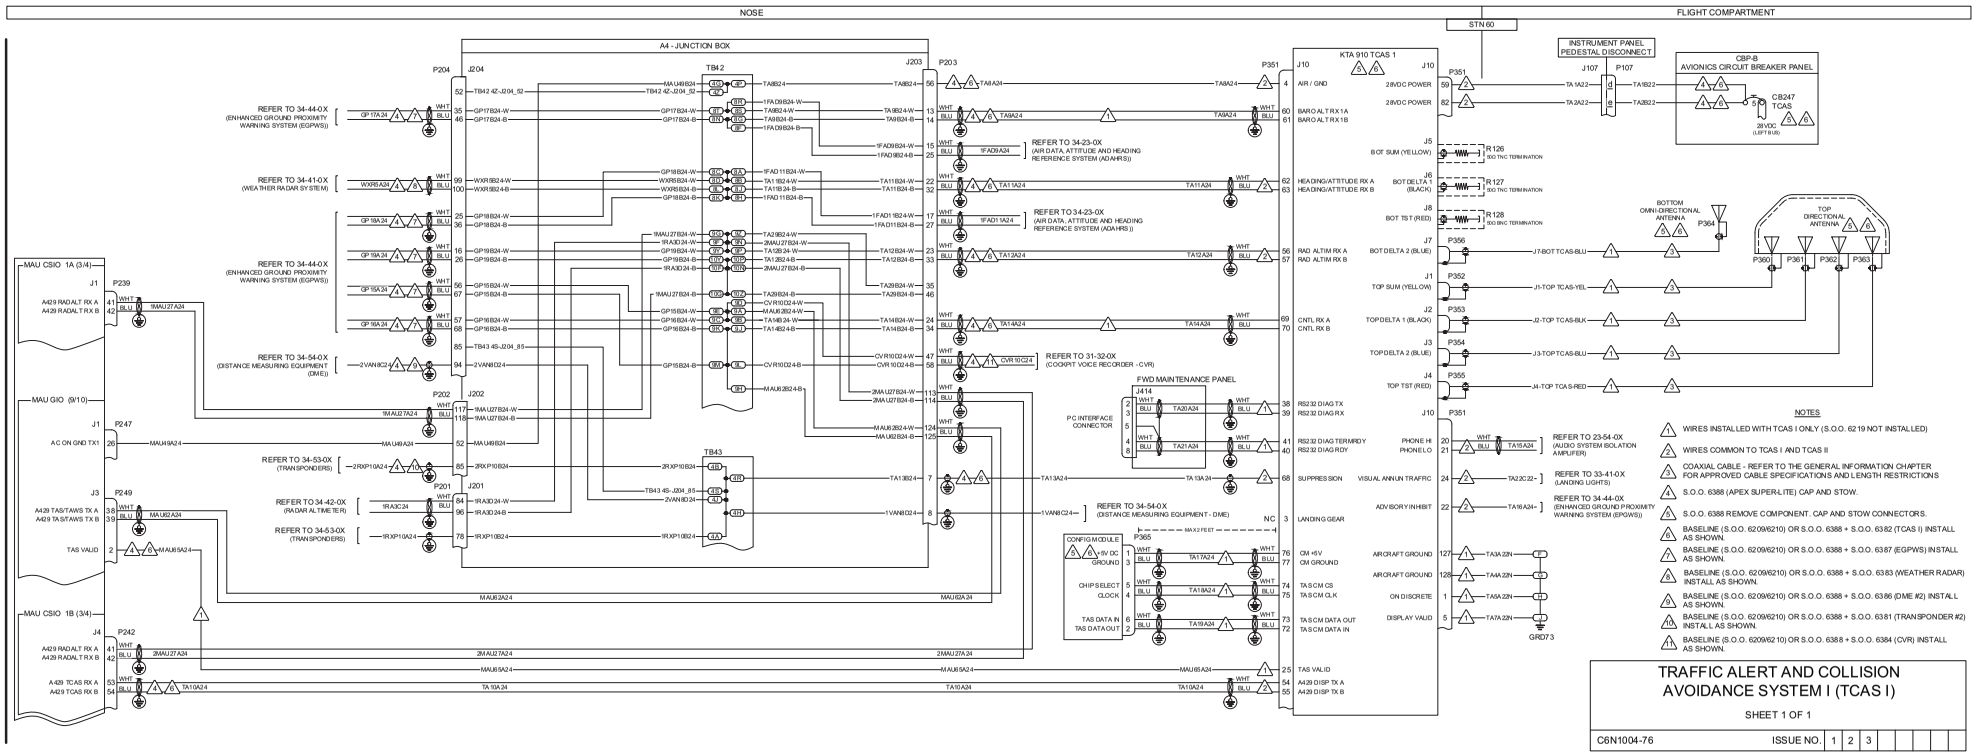


TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM I (TCAS I)

SHEET 1 OF 1

C6N1004-76 ISSUE NO. 1 2 3

This Page Intentionally Left Blank

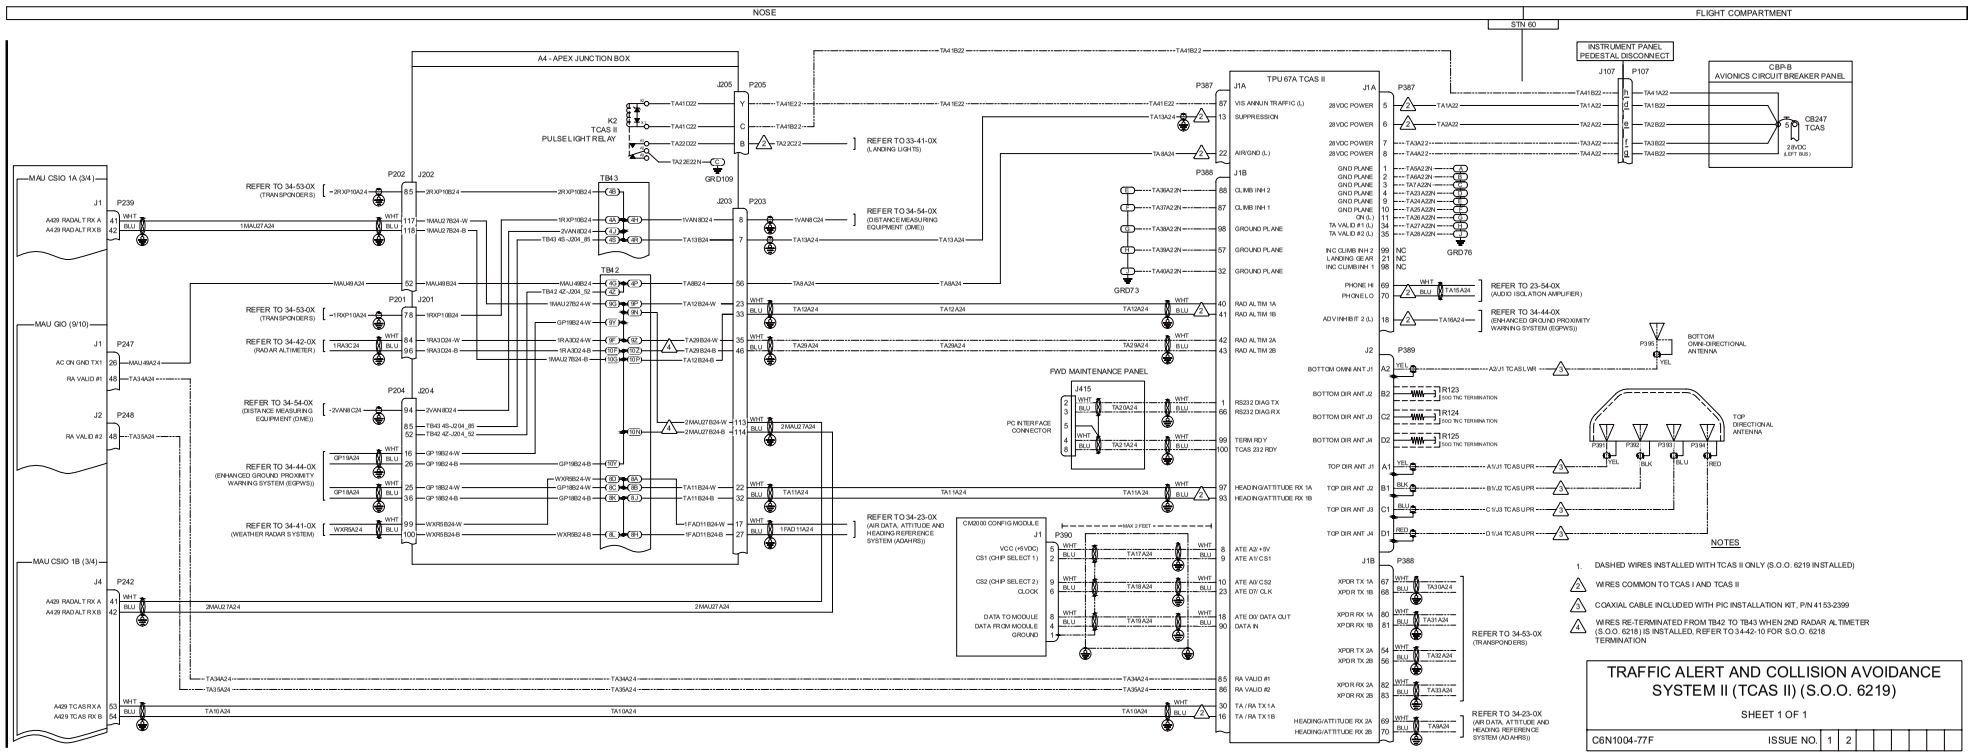


TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM II (TCAS II) (S.O.O. 6219)

SHEET 1 OF 1

C6N1004-77F ISSUE NO. 1 2

This Page Intentionally Left Blank

VIKING
DHC-6 TWIN OTTER

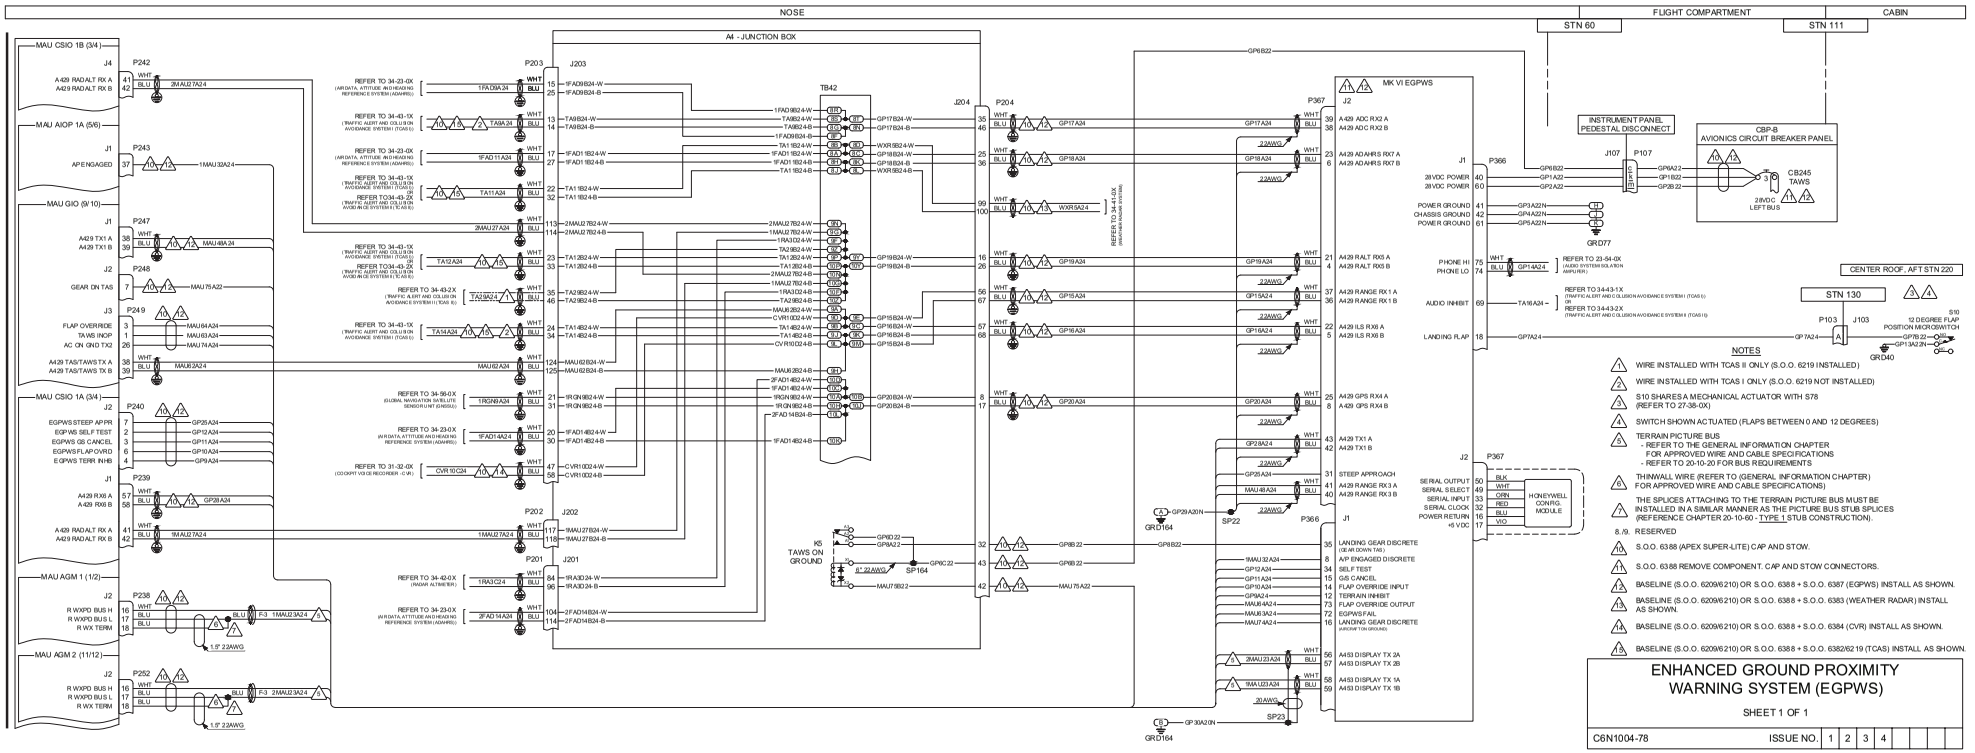

NOTES

1. WIRE INSTALLED WITH TCAS II ONLY (S.O.O. 6219 INSTALLED)
2. WIRE INSTALLED WITH TCAS I ONLY (S.O.O. 6219 NOT INSTALLED)
3. S10 SHARES A MECHANICAL ACTUATOR WITH S78 (REFER TO 27-38-0X)
4. SWITCH SHOWN ACTUATED (FLAPS BETWEEN 0 AND 12 DEGREES)
5. TERRAIN PICTURE BUS
   - REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS
   - REFER TO 20-10-20 FOR BUS REQUIREMENTS
6. THINWALL WIRE (REFER TO (GENERAL INFORMATION CHAPTER) FOR APPROVED WIRE AND CABLE SPECIFICATIONS)
7. THE SPLICES ATTACHING TO THE TERRAIN PICTURE BUS MUST BE INSTALLED IN A SIMILAR MANNER AS THE PICTURE BUS STUB SPLICES (REFERENCE CHAPTER 20-10-60. - TYPE 1 STUB CONSTRUCTION).

8 /9. RESERVED


10. S.O.O. 6388 (APEX SUPER-LITE) CAP AND STOW.
11. S.O.O. 6388 REMOVE COMPONENT, CAP AND STOW CONNECTORS.
12. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6387 (EGPWS) INSTALL AS SHOWN.
13. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6383 (WEATHER RADAR) INSTALL AS SHOWN.
14. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6384 (CVR) INSTALL AS SHOWN.
15. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6382/6219 (TCAS) INSTALL AS SHOWN.

ENHANCED GROUND PROXIMITY WARNING SYSTEM (EGPWS)

SHEET 1 OF 1

C6N1004-78 ISSUE NO. 1 2 3 4

This Page Intentionally Left Blank

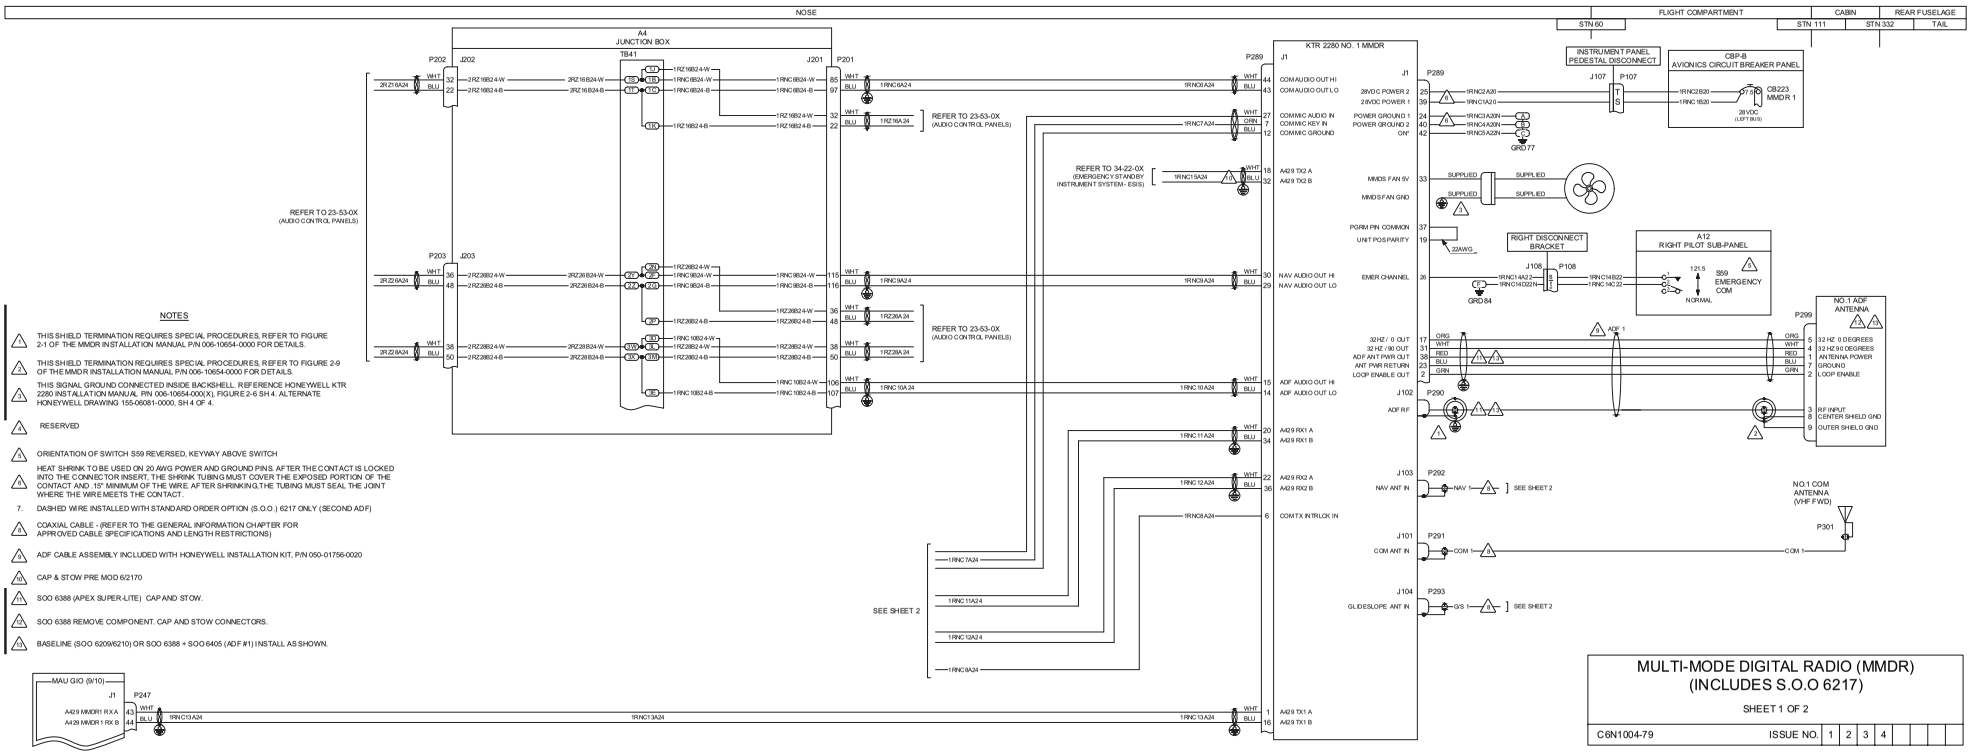

NOTES


1. THIS SHIELD TERMINATION REQUIRES SPECIAL PROCEDURES, REFER TO FIGURE 2-1 OF THE MMDR INSTALLATION MANUAL P/N 006-10654-0000 FOR DETAILS.
2. THIS SHIELD TERMINATION REQUIRES SPECIAL PROCEDURES, REFER TO FIGURE 2-9 OF THE MMDR INSTALLATION MANUAL P/N 006- 10654-0000 FOR DETAILS.
3. THIS SIGNAL GROUND CONNECTED INSIDE BACKSHELL. REFERENCE HONEYWELL KTR 2280 INSTALLATION MANUAL P/N 006-10654-000(X), FIGURE 2-6 SH 4. ALTERNATE HONEYWELL DRAWING 155-06081-0000, SH 4 OF 4.
4. RESERVED
5. ORIENTATION OF SWITCH S59 REVERSED, KEYWAY ABOVE SWITCH
6. HEAT SHRINK TO BE USED ON 20 AWG POWER AND GROUND PINS. AFTER THE CONTACT IS LOCKED INTO THE CONNECTOR INSERT, THE SHRINK TUBING MUST COVER THE EXPOSED PORTION OF THE CONTACT AND .15" MINIMUM OF THE WIRE. AFTER SHRINKING,THE TUBING MUST SEAL THE JOINT WHERE THE WIRE MEETS THE CONTACT.
7. DASHED WIRE INSTALLED WITH STANDARD ORDER OPTION (S.O.O.) 6217 ONLY (SECOND ADF)
8. COAXIAL CABLE - (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED CABLE SPECIFICATIONS AND LENGTH RESTRICTIONS)
9. ADF CABLE ASSEMBLY INCLUDED WITH HONEYWELL INSTALLATION KIT, P/N 050-01756-0020
10. CAP & STOW PRE MOD 6/2170
11. SOO 6388 (APEX SUPER-LITE) CAP AND STOW.
12. SOO 6388 REMOVE COMPONENT. CAP AND STOW CONNECTORS.
13. BASELINE (SOO 6209/6210) OR SOO 6388 + SOO 6405 (ADF #1) INSTALL AS SHOWN.

MULTI-MODE DIGITAL RADIO (MMDR)
(INCLUDES S.O.O 6217)

SHEET 1 OF 2

C6N1004-79 ISSUE NO. 1 2 3 4

This Page Intentionally Left Blank

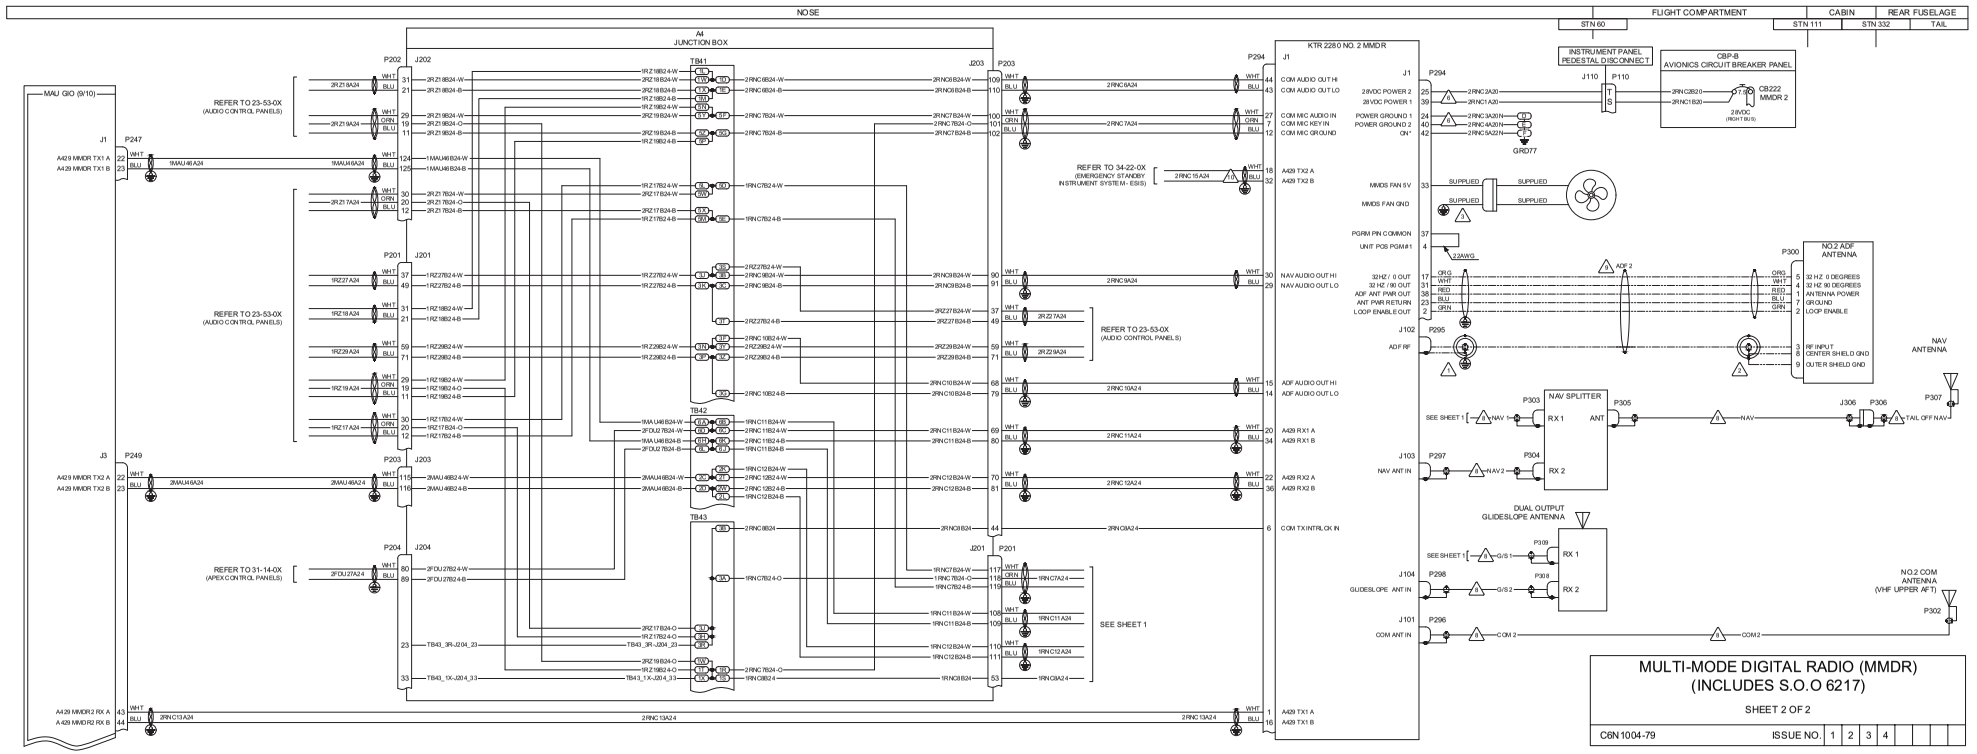


MULTI-MODE DIGITAL RADIO (MMDR)
(INCLUDES S.O.O 6217)

SHEET 2 OF 2

C6N1004-79 ISSUE NO. 1 2 3 4

This Page Intentionally Left Blank

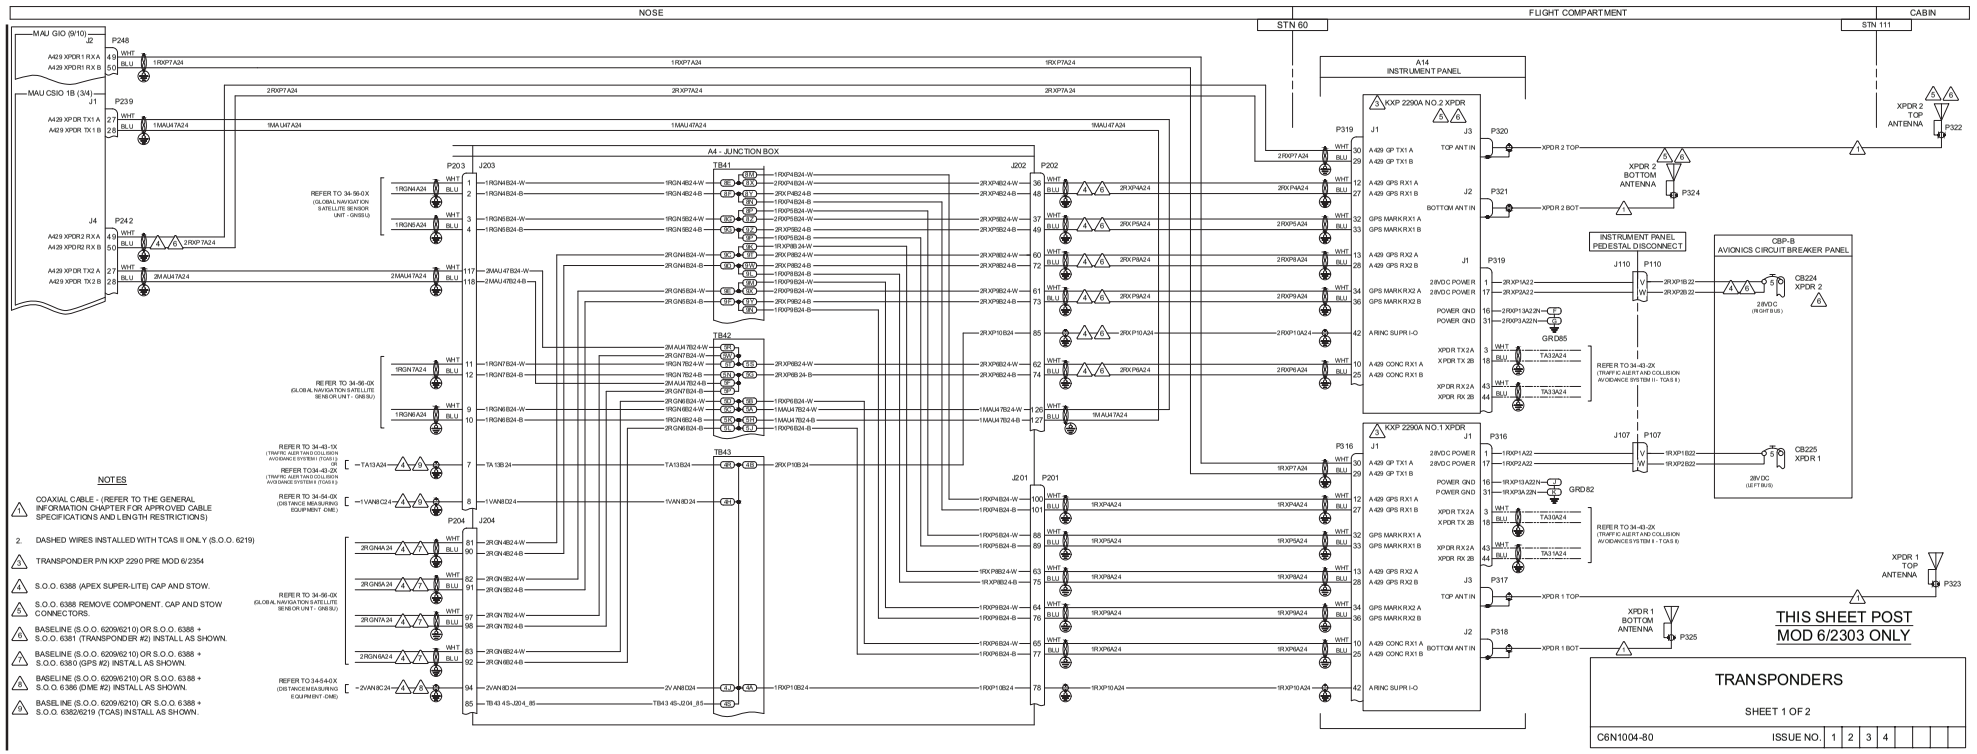


TRANSPONDERS


SHEET 1 OF 2

C6N1004-80 ISSUE NO. 1 2 3 4

This Page Intentionally Left Blank

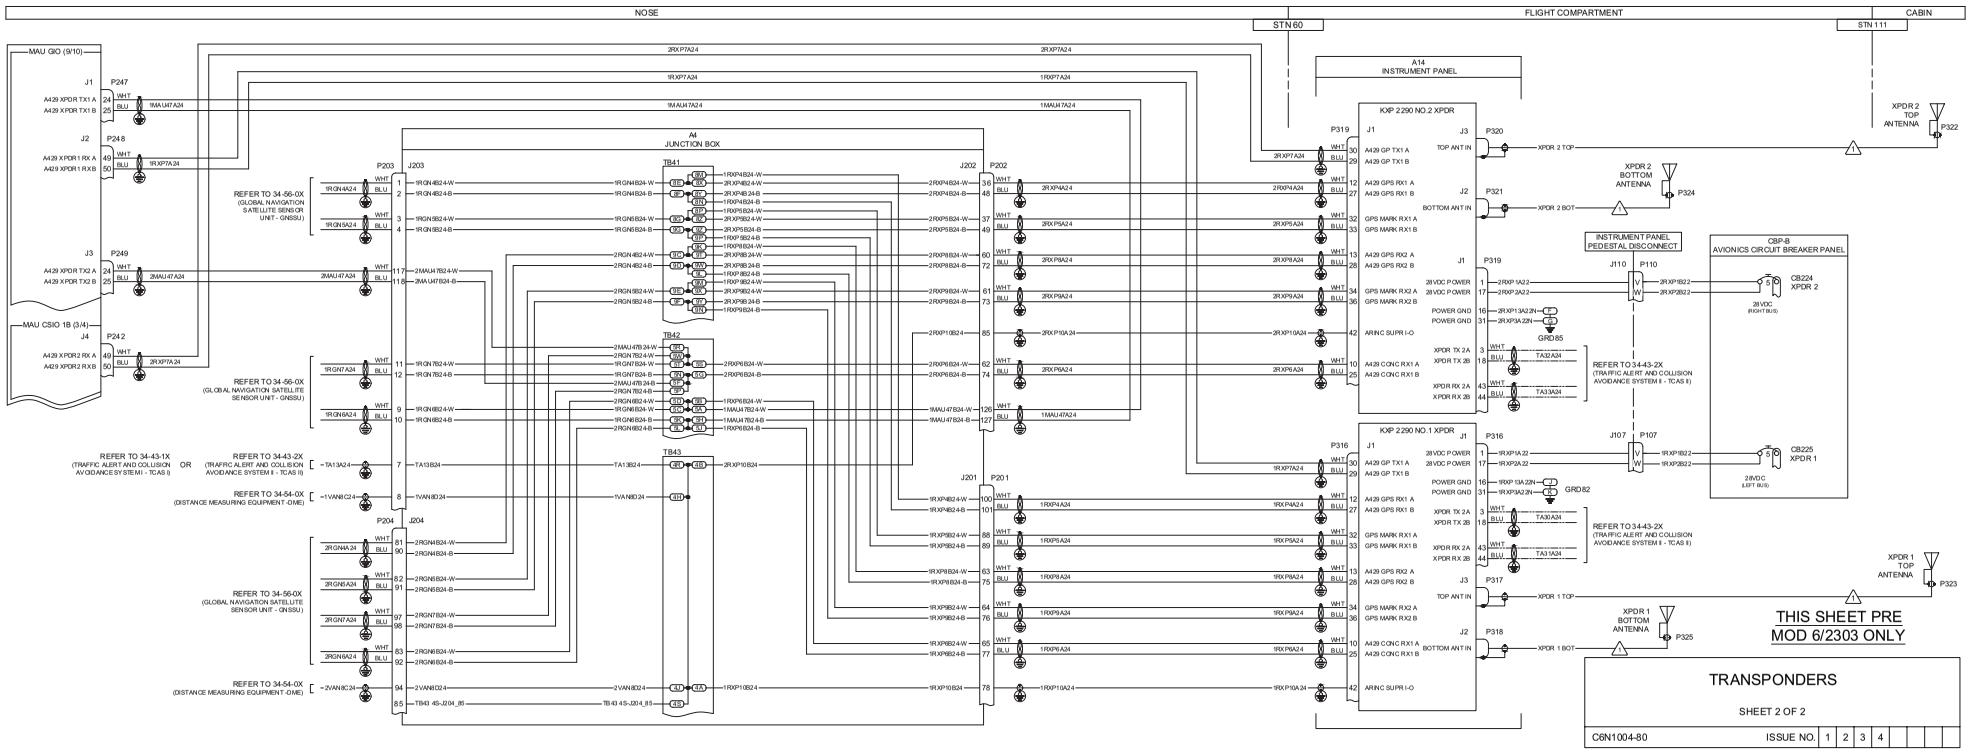
NOSE
FLIGHT COMPARTMENT
CABIN
STN 60
STN 111
MAU GIO (9/10)
MAU CSIO 1B (3/4)
A4
JUNCTION BOX
A14
INSTRUMENT PANEL
KXP 2290 NO.2 XPDR
KXP 2290 NO.1 XPDR
XPDR 2 TOP ANTENNA
XPDR 2 BOTTOM ANTENNA
XPDR 1 TOP ANTENNA
XPDR 1 BOTTOM ANTENNA
INSTRUMENT PANEL PEDESTAL DISCONNECT
CBP-B
AVIONICS CIRCUIT BREAKER PANEL
CB224 XPDR 2
CB225 XPDR 1
REFER TO 34-56-0X (GLOBAL NAVIGATION SATELLITE SENSOR UNIT - GNSSU)
REFER TO 34-43-1X (TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM I - TCAS I)
OR
REFER TO 34-43-2X (TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM II - TCAS II)
REFER TO 34-54-0X (DISTANCE MEASURING EQUIPMENT -DME)
REFER TO 34-43-2X (TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM II - TCAS II)
THIS SHEET PRE MOD 6/2303 ONLY
TRANSPONDERS
SHEET 2 OF 2
C6N1004-80
ISSUE NO. 1 2 3 4

This Page Intentionally Left Blank

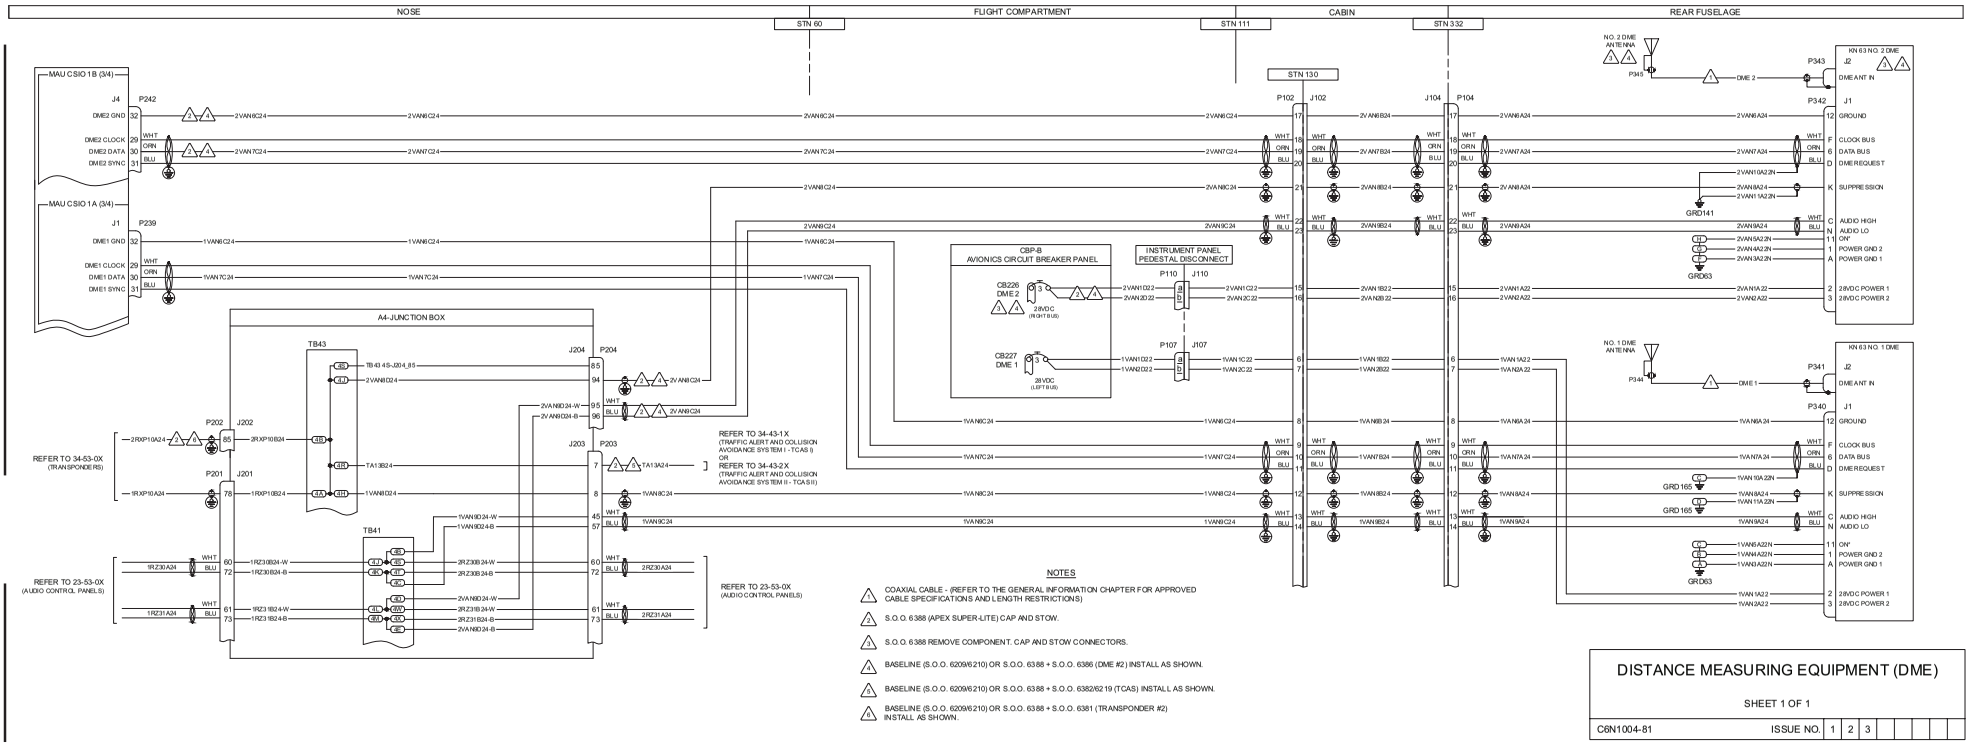

NOTES


1. COAXIAL CABLE - (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED CABLE SPECIFICATIONS AND LENGTH RESTRICTIONS)
2. S.O.O. 6388 (APEX SUPER-LITE) CAP AND STOW.
3. S.O.O. 6388 REMOVE COMPONENT. CAP AND STOW CONNECTORS.
4. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6386 (DME #2) INSTALL AS SHOWN.
5. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6382/62 19 (TCAS) INSTALL AS SHOWN.
6. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6381 (TRANSPONDER #2) INSTALL AS SHOWN.

DISTANCE MEASURING EQUIPMENT (DME)

SHEET 1 OF 1

C6N1004-81 ISSUE NO. 1 2 3

This Page Intentionally Left Blank

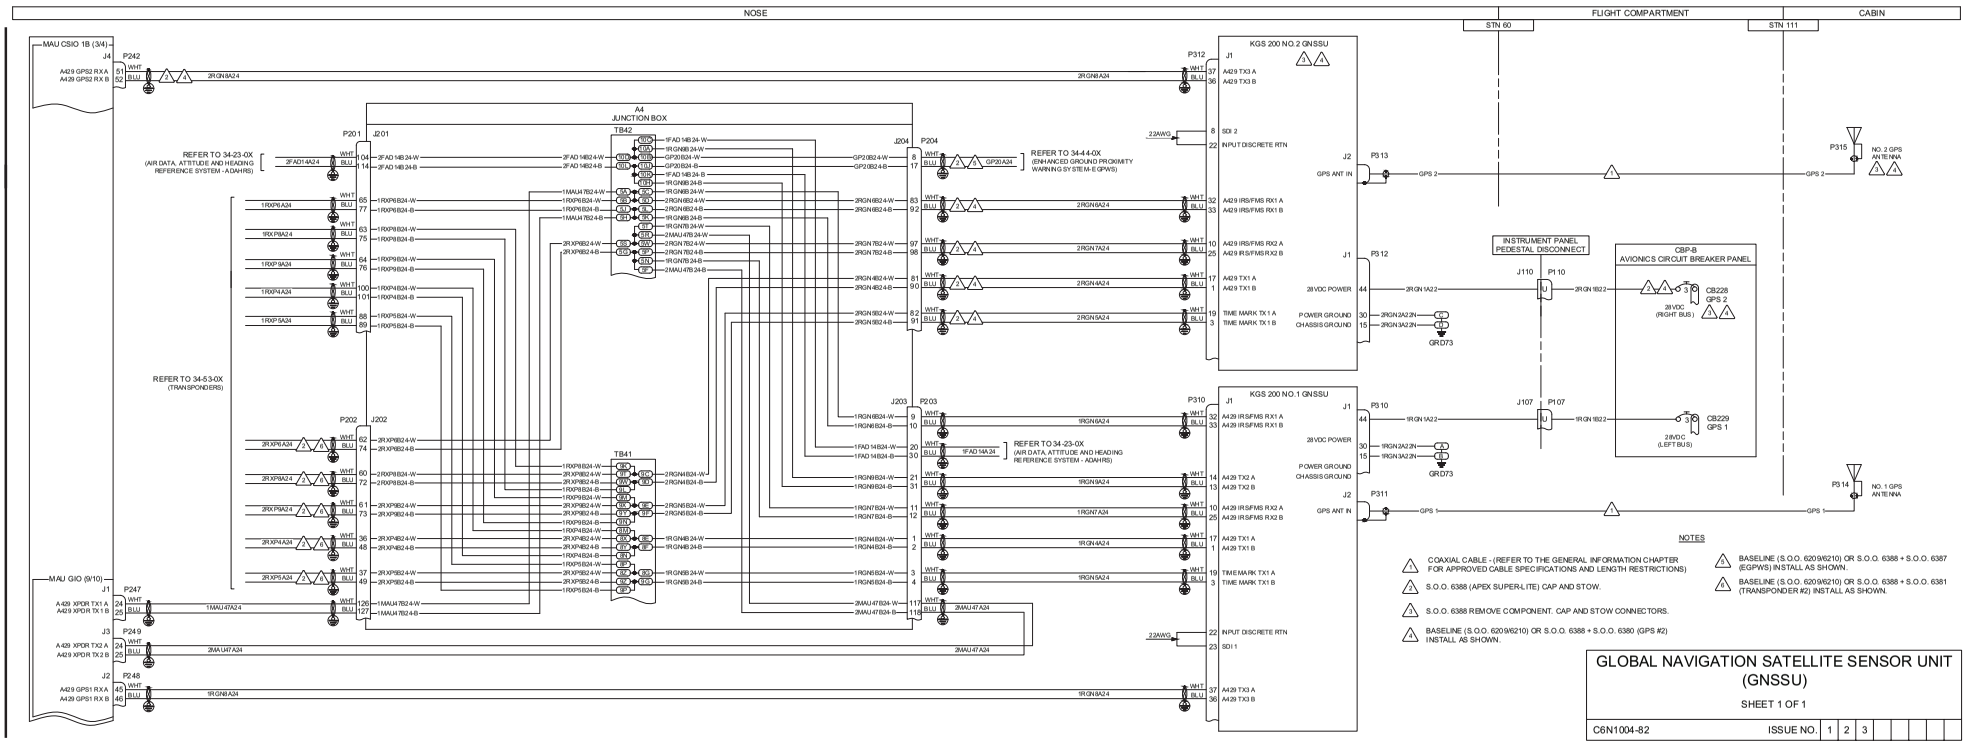

NOTES

1. COAXIAL CABLE - (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED CABLE SPECIFICATIONS AND LENGTH RESTRICTIONS)
2. S.O.O. 6388 (APEX SUPERLITE) CAP AND STOW.
3. S.O.O. 6388 REMOVE COMPONENT. CAP AND STOW CONNECTORS.
4. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6380 (GPS #2) INSTALL AS SHOWN.
5. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6387 (EGPWS) INSTALL AS SHOWN.
6. BASELINE (S.O.O. 6209/6210) OR S.O.O. 6388 + S.O.O. 6381 (TRANSPONDER #2) INSTALL AS SHOWN.

GLOBAL NAVIGATION SATELLITE SENSOR UNIT (GNSSU)

SHEET 1 OF 1

C6N1004-82 ISSUE NO. 1 2 3

This Page Intentionally Left Blank

CHAPTER 36

PNEUMATIC

This Page Intentionally Left Blank

CHAPTER 36 – PNEUMATIC

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
36	* 1	Sep. 30/14		* 5	Sep. 30/14
	* 2	Blank Page		* 6	Blank Page
	* 3	Sep. 30/14	36-20-00	* 1	Sep. 30/14
	* 4	Blank Page		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 36 – PNEUMATIC

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
INDICATING	**36-20**
Pneumatic Low Pressure Indication	36-20-00

This Page Intentionally Left Blank

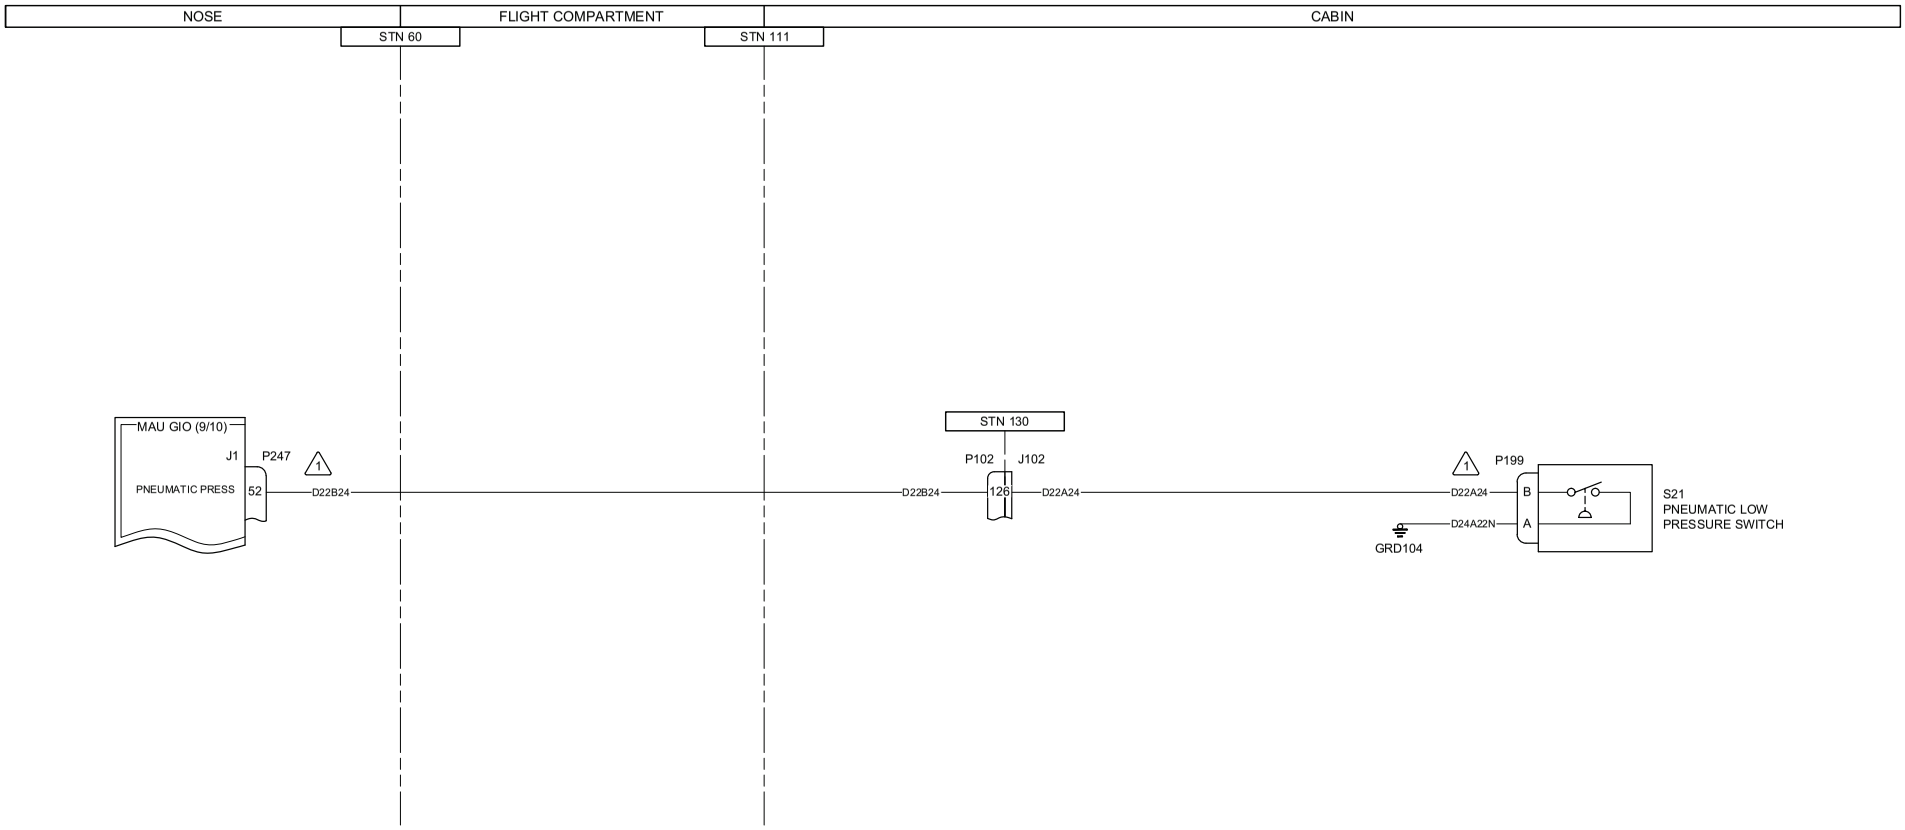

NOTES

1. WIRE ENDS CAPPED AND STOWED WHEN S21 IS NOT INSTALLED, S21 INSTALLED WITH STANDARD ORDER OPTION (S.O.O.) 6004, POST MOD 6/2083 ONLY (WING AND TAIL DEICING SYSTEM)

PNEUMATIC LOW PRESSURE INDICATION		
SHEET 1 OF 1		
C6N1004-26	ISSUE NO.	1

This Page Intentionally Left Blank

CHAPTER 44

CABIN SYSTEMS

This Page Intentionally Left Blank

CHAPTER 44 – CABIN SYSTEMS

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
44	* 1	Sep. 30/14		* 5	Sep. 30/14
	* 2	Blank Page		* 6	Blank Page
	* 3	Sep. 30/14	44-11-00	* 1	Sep. 30/14
	* 4	Blank Page		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 44 – CABIN SYSTEMS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
CABIN CORE SYSTEM	**44-10**
– PASSENGER ADDRESS (PA)	**44-11**
Cabin Passenger Address System	44-11-00

This Page Intentionally Left Blank

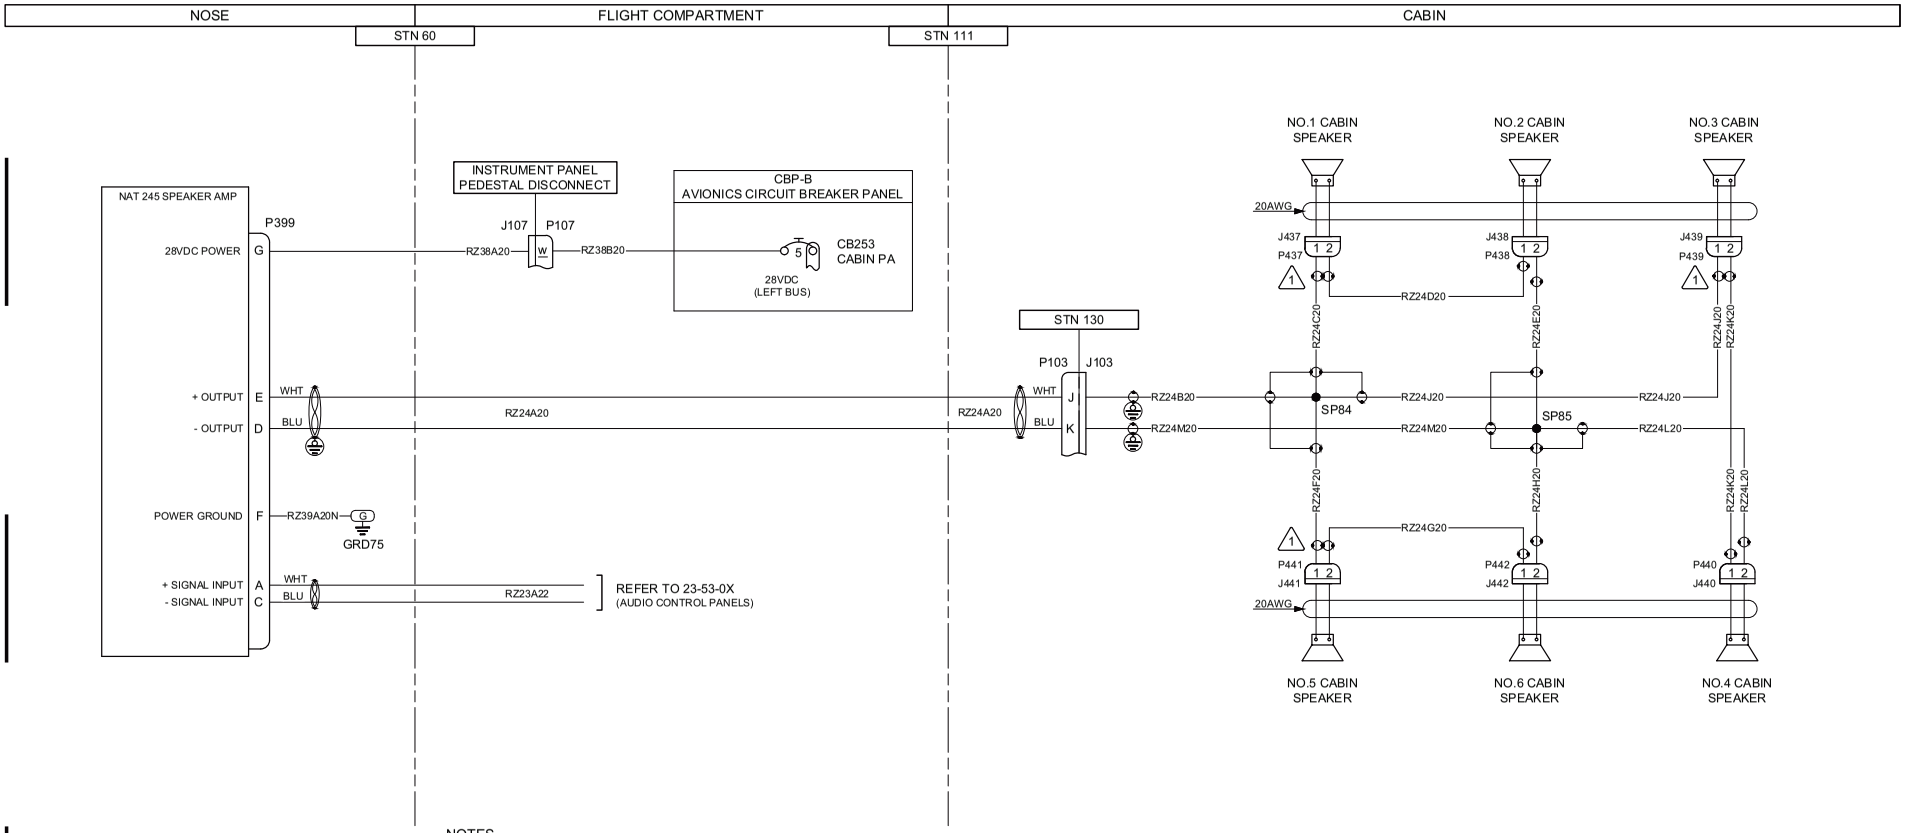

NOTES

1 PRE MOD 6/2114: WIRE SHIELDS NOT CONNECTED TOGETHER
POST MOD 6/2114: WIRE SHIELDS CONNECTED TOGETHER

CABIN PASSENGER ADDRESS SYSTEM

SHEET 1 OF 1

C6N1004-83C	ISSUE NO.	1	2						

This Page Intentionally Left Blank

CHAPTER 46

INFORMATION SYSTEMS

This Page Intentionally Left Blank

CHAPTER 46 – INFORMATION SYSTEMS

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
46	* 1	Sep. 30/14		* 5	Sep. 30/14
	* 2	Blank Page		* 6	Blank Page
	* 3	Sep. 30/14	46-50-00	* 1	Sep. 30/14
	* 4	Blank Page		* 2	Blank Page

This Page Intentionally Left Blank


CHAPTER 46 – INFORMATION SYSTEMS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
MISCELLANEOUS INFORMATION SYSTEM	**46-50**
Float Mounted Depth Sounder (S.O.O. 6295)	46-50-00

This Page Intentionally Left Blank

FLIGHT COMPARTMENT

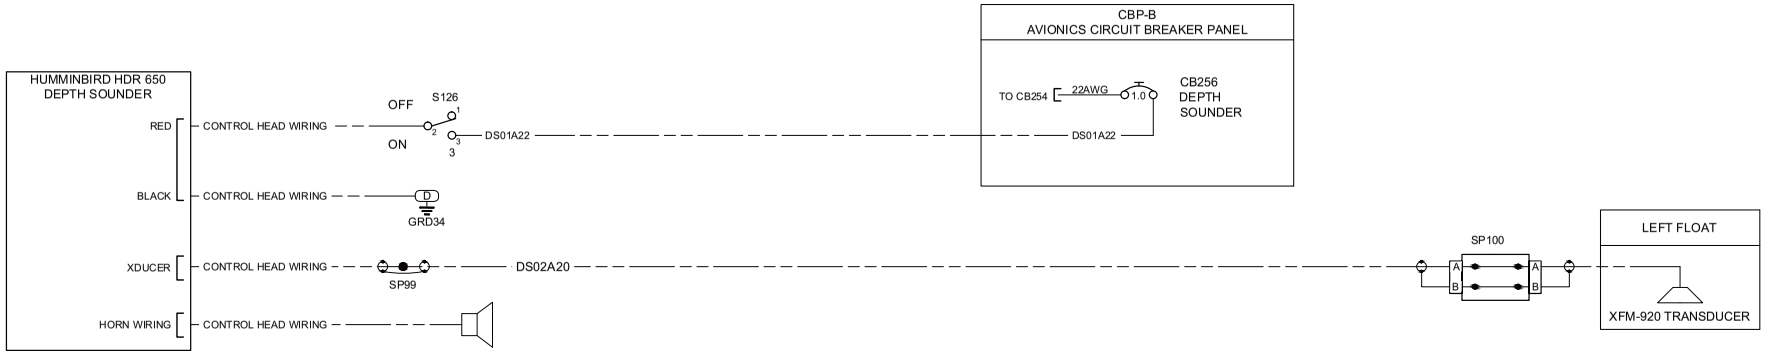

NOTES

1. DASHED WIRES INSTALLED WITH STANDARD ORDER OPTION (S.O.O.) 6295 ONLY (DEPTH SOUNDER)

FLOAT MOUNTED DEPTH SOUNDER (S.O.O. 6295)		
SHEET 1 OF 1		
C6N1004-109	ISSUE NO.	1

This Page Intentionally Left Blank

CHAPTER 52

DOORS

This Page Intentionally Left Blank

CHAPTER 52 – DOORS

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
52	1	Sep. 30/14		* 6	Blank Page
	2	Blank Page	52-70-00	* 1	Nov. 30/18
	* 3	Nov. 30/18		* 2	Blank Page
	* 4	Blank Page	52-70-01	* 1	Nov. 30/18
	* 5	Nov. 30/18		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 52 – DOORS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
MONITORING AND OPERATION	**52-70**
Doors Unlocked Warning System (without S.O.O. 6393)	52-70-00
Doors Unlocked Warning System (with S.O.O. 6393)	52-70-01

This Page Intentionally Left Blank

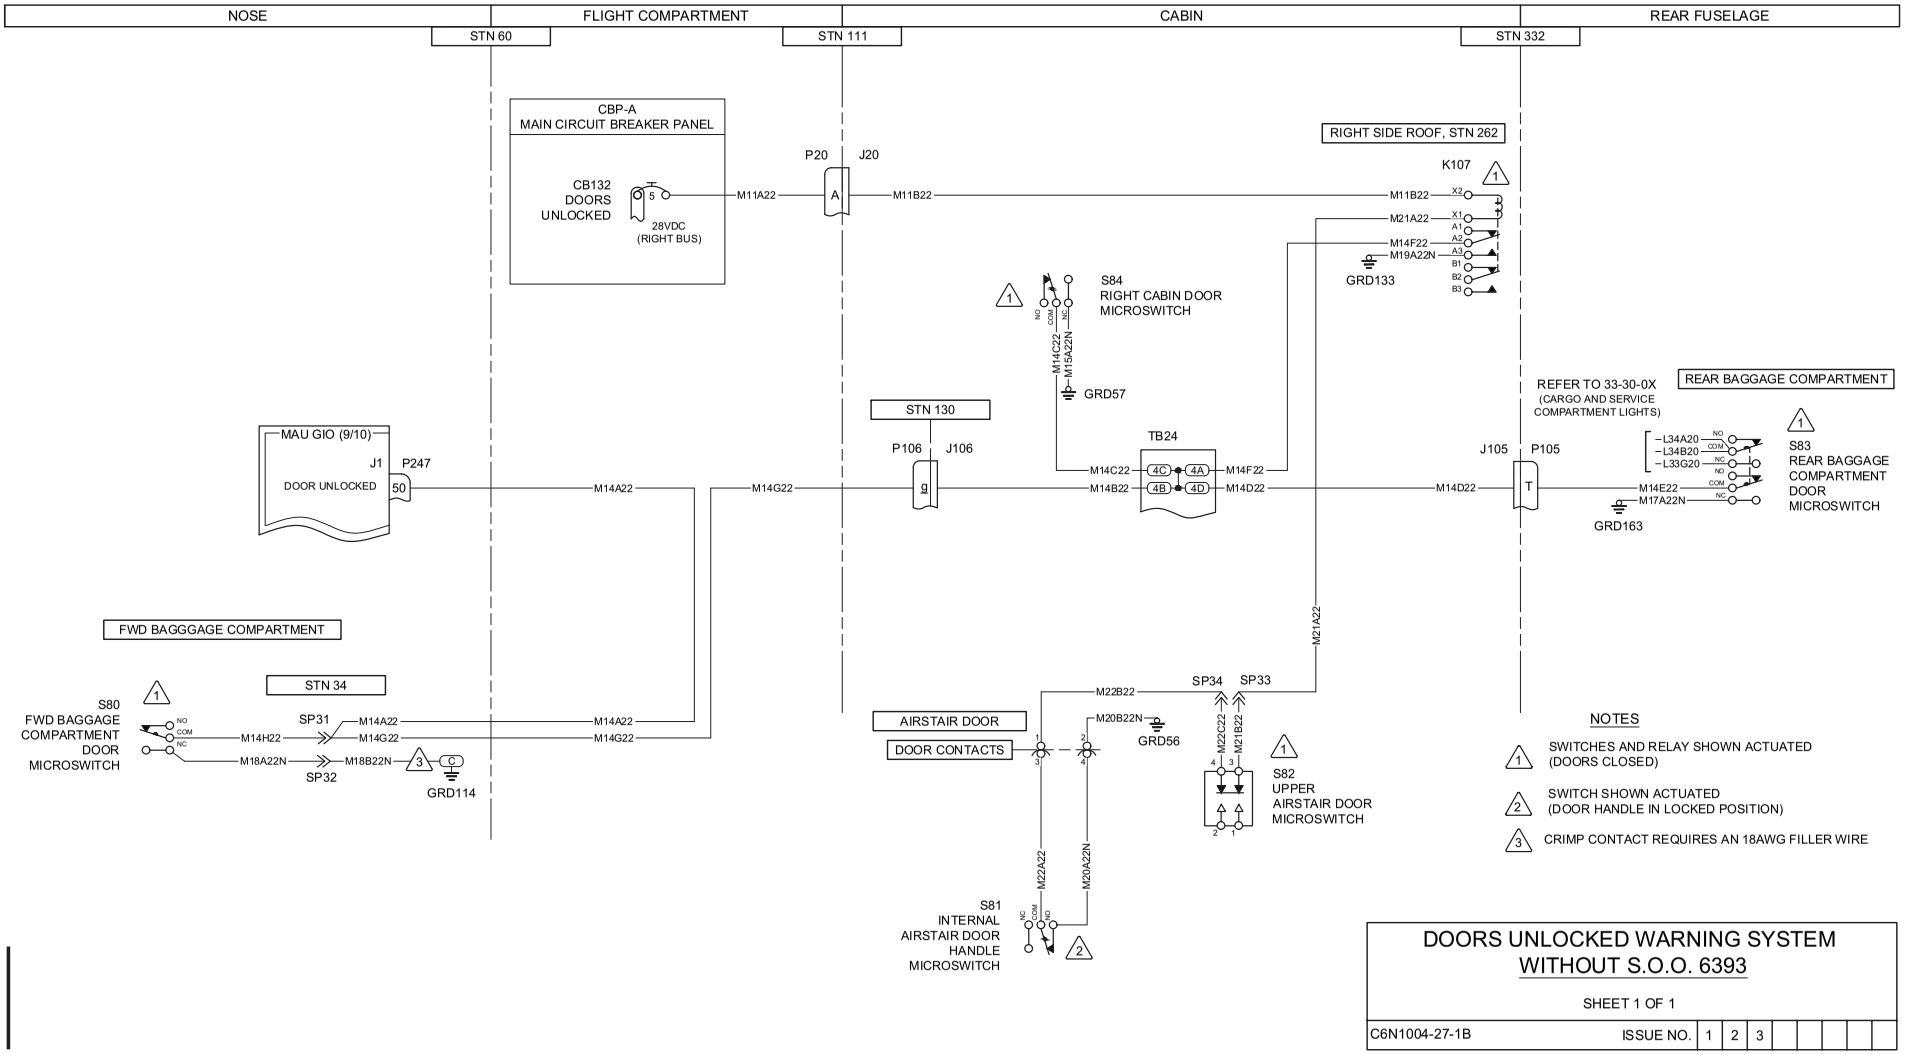


DOORS UNLOCKED WARNING SYSTEM WITHOUT S.O.O. 6393

SHEET 1 OF 1

C6N1004-27-1B	ISSUE NO.	1	2	3					

This Page Intentionally Left Blank

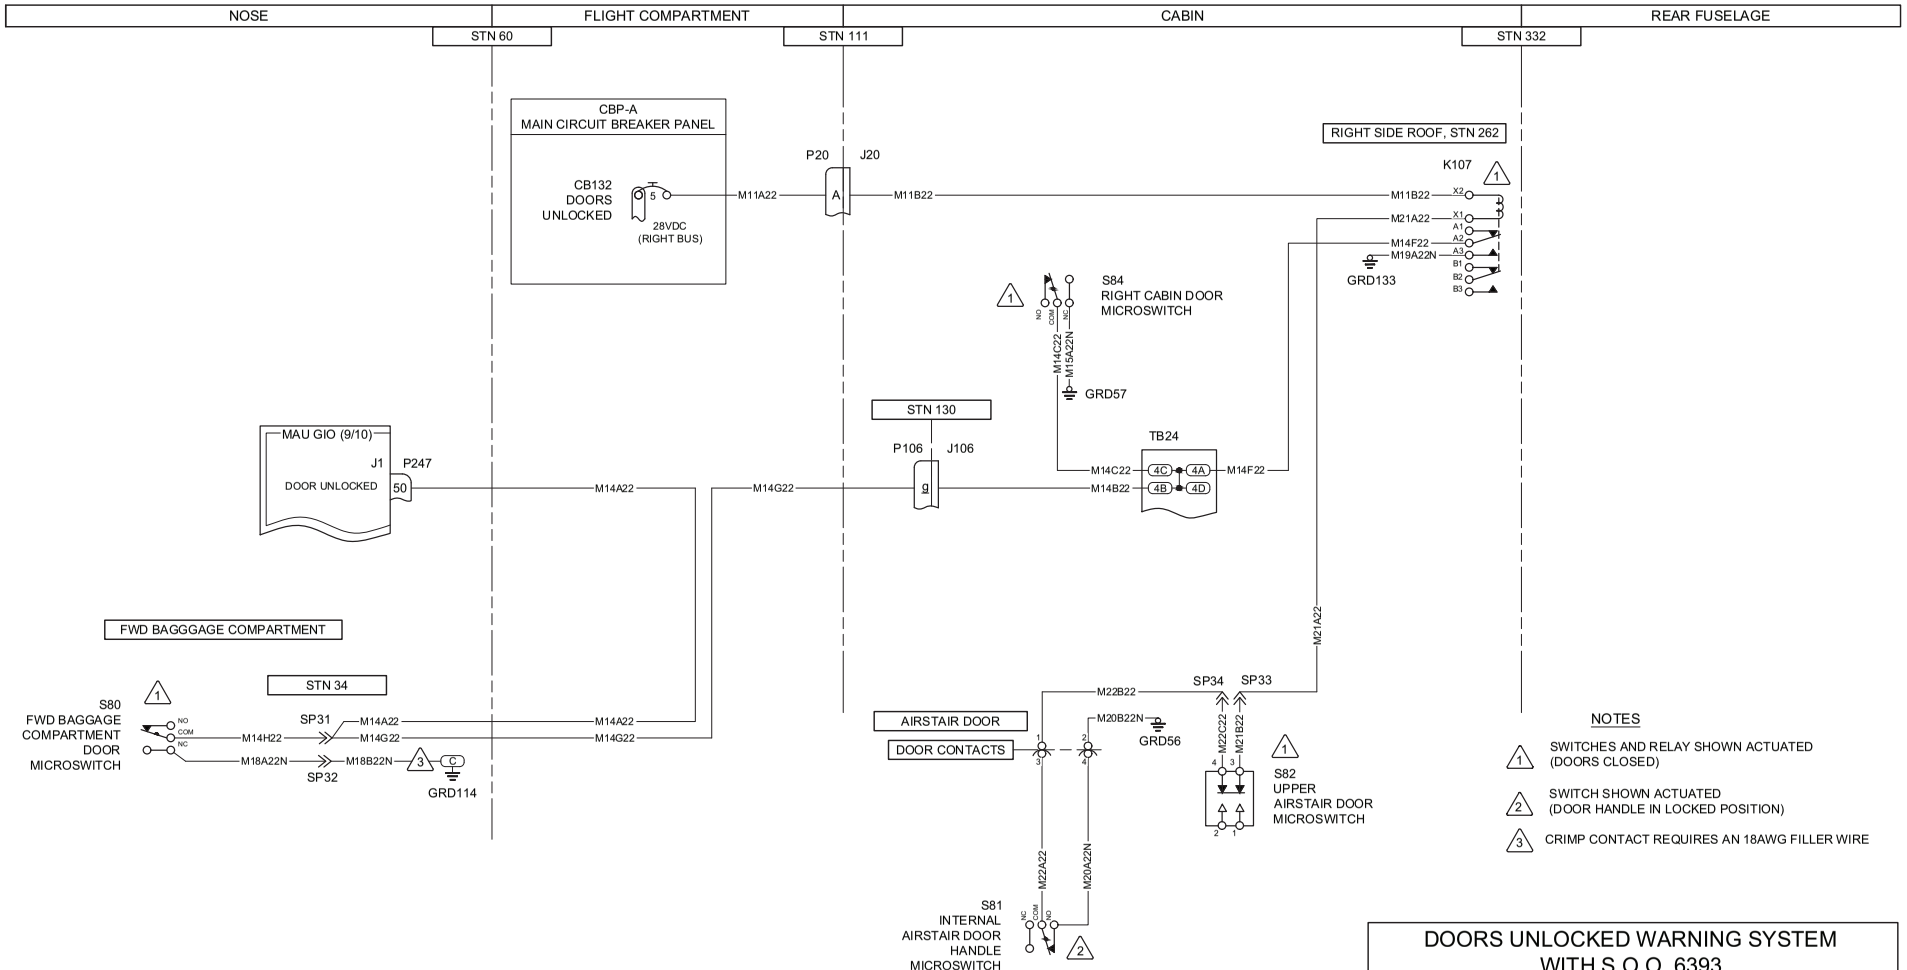

DOORS UNLOCKED WARNING SYSTEM WITH S.O.O. 6393

SHEET 1 OF 1

C6N1004-27-2NC	ISSUE NO.	1

This Page Intentionally Left Blank

CHAPTER 61

PROPELLERS

This Page Intentionally Left Blank

CHAPTER 61 – PROPELLERS

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
61	* 1	Sep. 30/14		* 2	Blank Page
	* 2	Blank Page	61-22-00	* 1	Sep. 30/14
	* 3	Sep. 30/14		* 2	Sep. 30/14
	* 4	Blank Page		* 3	Sep. 30/14
	* 5	Sep. 30/14		* 4	Blank Page
	* 6	Blank Page	61-40-00	* 1	Sep. 30/14
61-20-00	* 1	Sep. 30/14		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 61 – PROPELLERS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
CONTROLLING	**61-20**
Propeller Overspeed Governor Test Circuit	61-20-00
– AUTOFEATHER	**61-22**
Propeller Autofeather System	61-22-00
INDICATING	**61-40**
Propeller RPM Indication	61-40-00

This Page Intentionally Left Blank

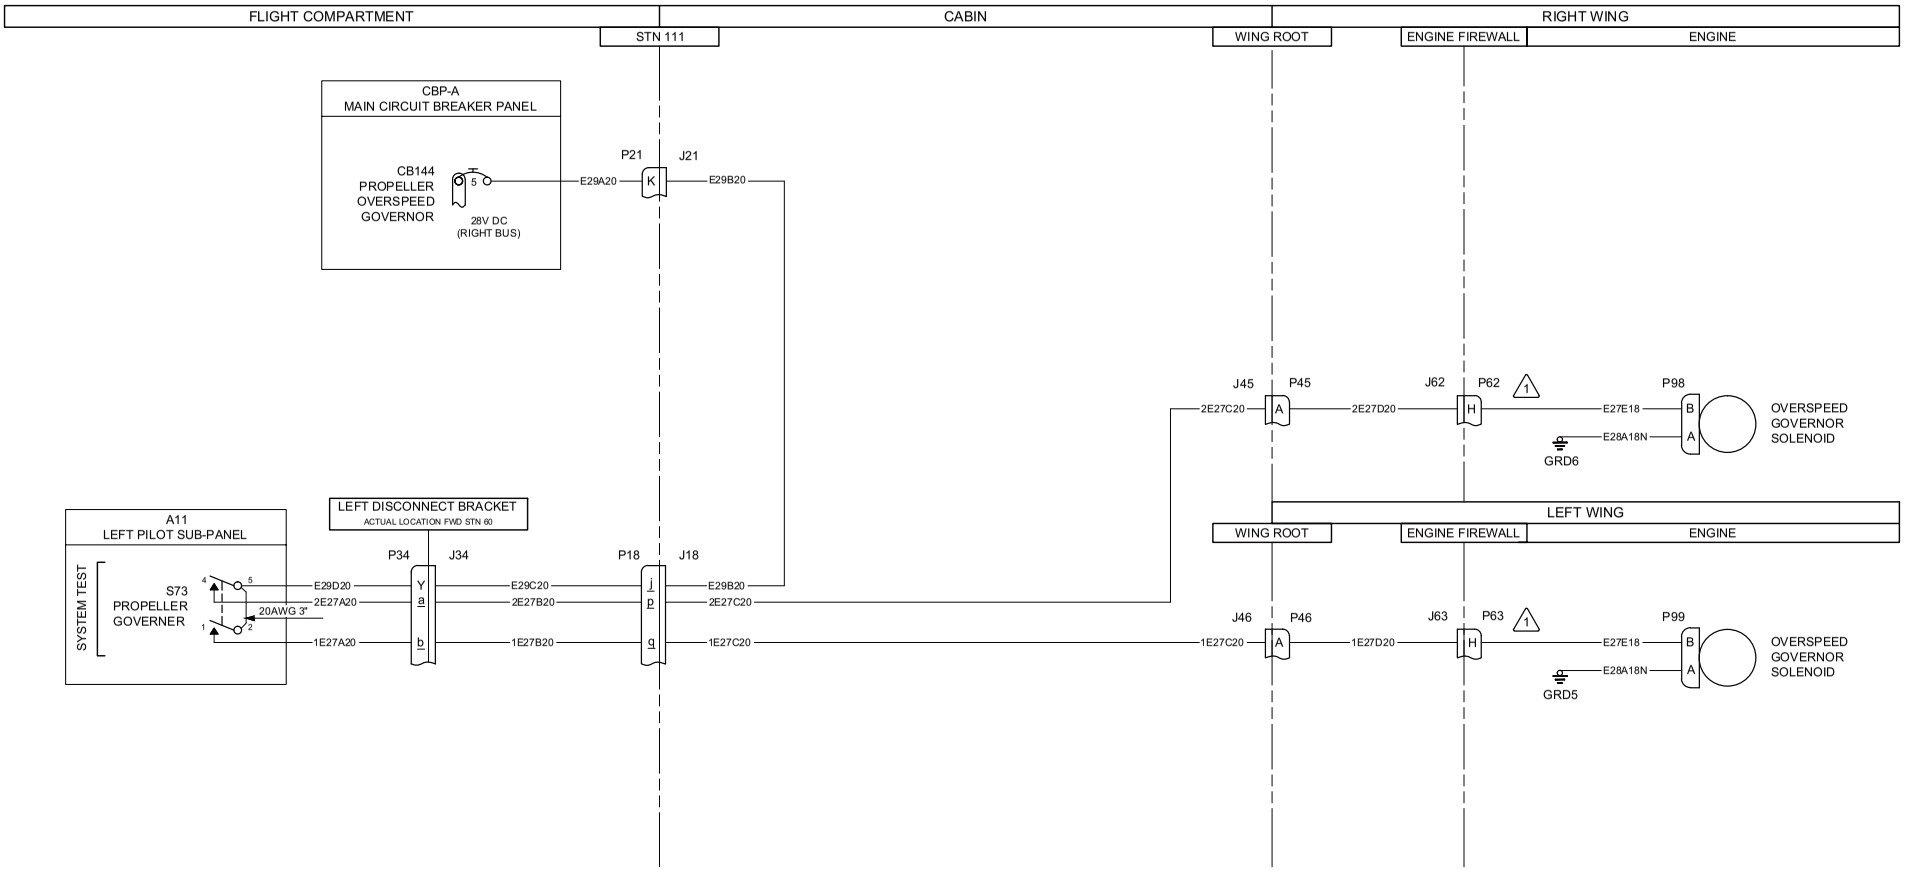

NOTES


1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

PROPELLER OVERSPEED GOVERNOR TEST CIRCUIT

SHEET 1 OF 1

C6N1004-28 ISSUE NO. 1

This Page Intentionally Left Blank

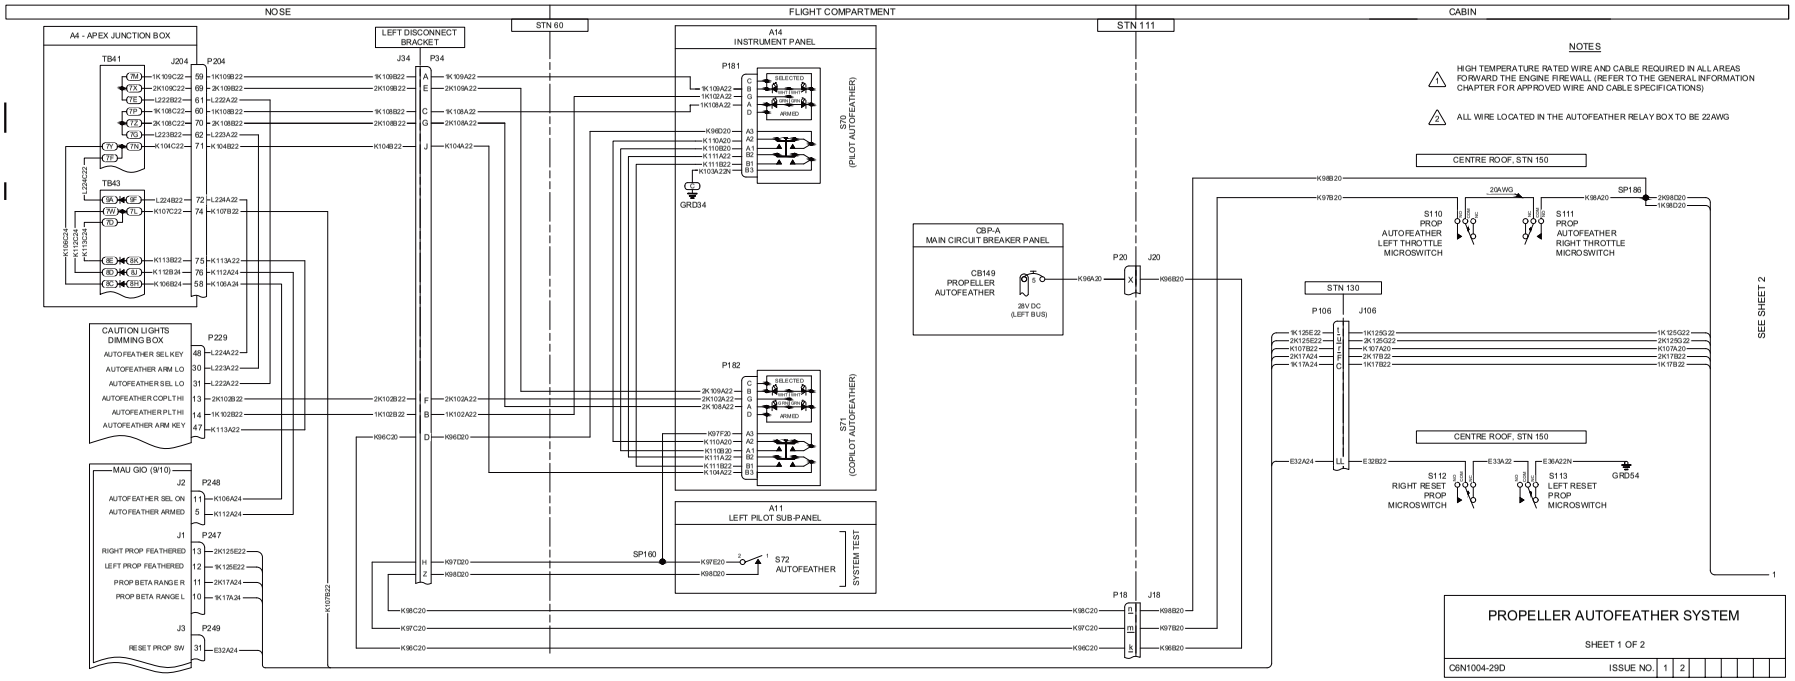


PROPELLER AUTOFEATHER SYSTEM

SHEET 1 OF 2

C6N1004-29D ISSUE NO. 1 2

This Page Intentionally Left Blank

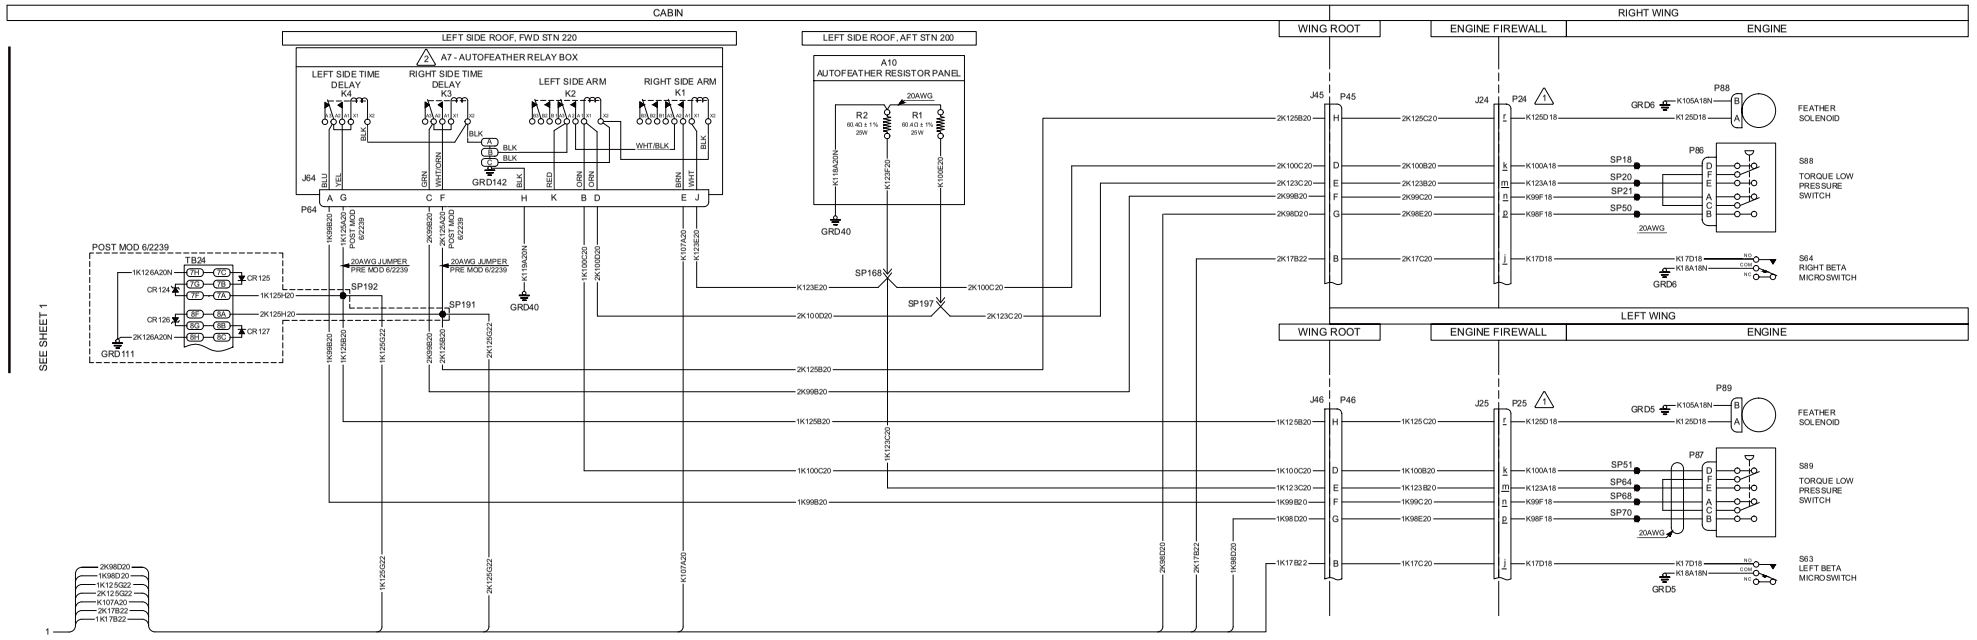


PROPELLER AUTOFEATHER SYSTEM

SHEET 2 OF 2

C6N1004-29D ISSUE NO. 1 2

This Page Intentionally Left Blank

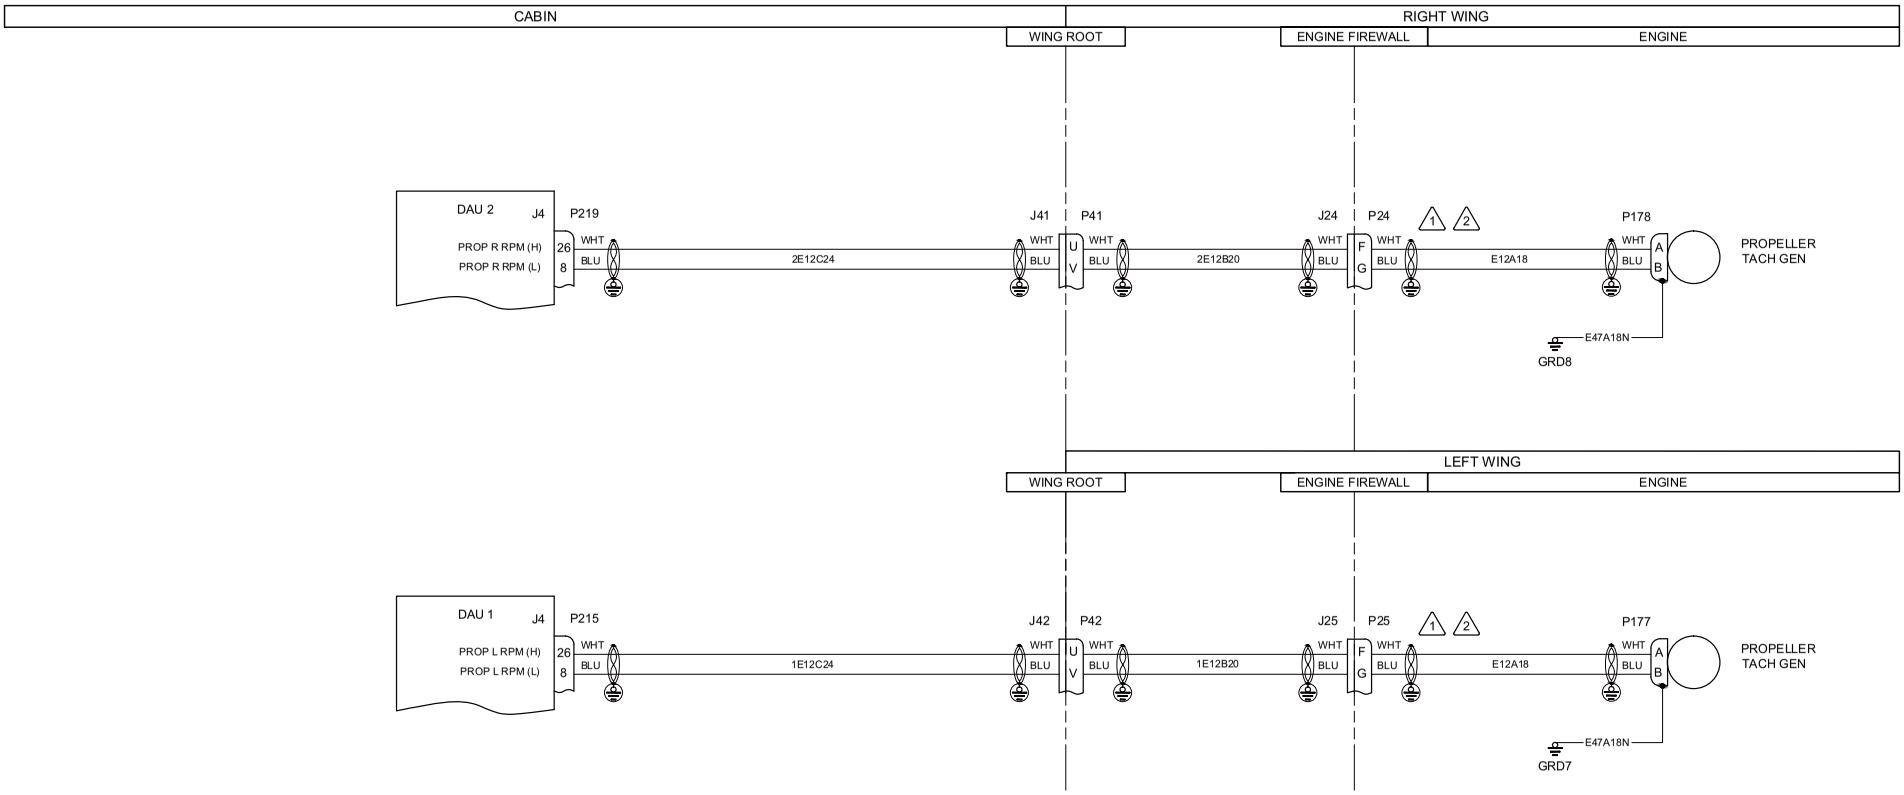

NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

2. HIGH TEMPERATURE SOLDER SLEEVES REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL

PROPELLER RPM INDICATION

SHEET 1 OF 1

C6N1004-30	ISSUE NO.	1							

This Page Intentionally Left Blank

CHAPTER 71

POWER PLANT

This Page Intentionally Left Blank

CHAPTER 71 – POWER PLANT

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
71	1	Sep. 30/14		5	Sep. 30/14
	2	Blank Page		6	Blank Page
	* 3	Dec. 7/16	71-60-00	* 1	Dec. 7/16
	* 4	Blank Page		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 71 – POWER PLANT

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
AIR INTAKES	**71-60**
Air Intake Deflector System	71-60-00

This Page Intentionally Left Blank

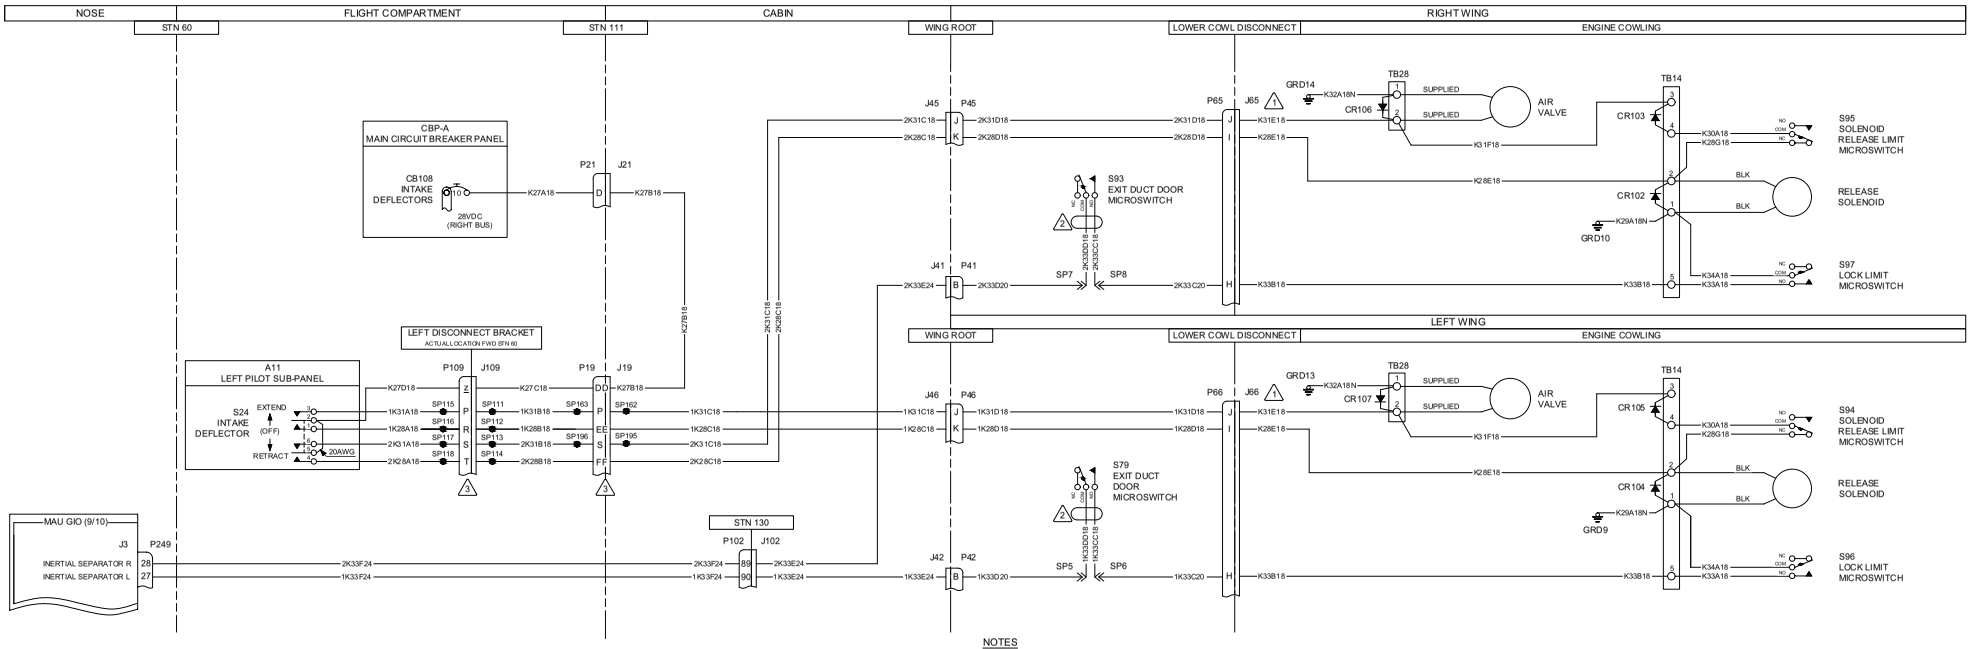

NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE LOWER COWL DISCONNECT (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)
2. HIGH TEMPERATURE RATED WIRE (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)
3. WIRES SPLICED INTO P/J109 AND P/J19 TO BE 20 AWG. – STEP DOWN SPLICES TO BE INSTALLED BETWEEN 3 AND 12 INCHES FROM CONNECTOR BACKSHELL.

AIR INTAKE DEFLECTOR SYSTEM

SHEET 1 OF 1

C6N1004-31A ISSUE NO. 1 2

This Page Intentionally Left Blank

CHAPTER 73

ENGINE FUEL AND CONTROL

This Page Intentionally Left Blank

CHAPTER 73 – ENGINE FUEL AND CONTROL

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
73	* 1	Sep. 30/14		* 6	Blank Page
	* 2	Blank Page	73-21-00	* 1	Sep. 30/14
	* 3	Sep. 30/14		* 2	Blank Page
	* 4	Blank Page	73-30-00	* 1	Sep. 30/14
	* 5	Sep. 30/14		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 73 – ENGINE FUEL AND CONTROL

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
CONTROLLING	**73-20**
– TEMPERATURE COMPENSATOR	**73-21**
Temperature Compensator Sense Tube Heating System	73-21-00
INDICATION	**73-30**
Fuel Flow Indication	73-30-00

This Page Intentionally Left Blank

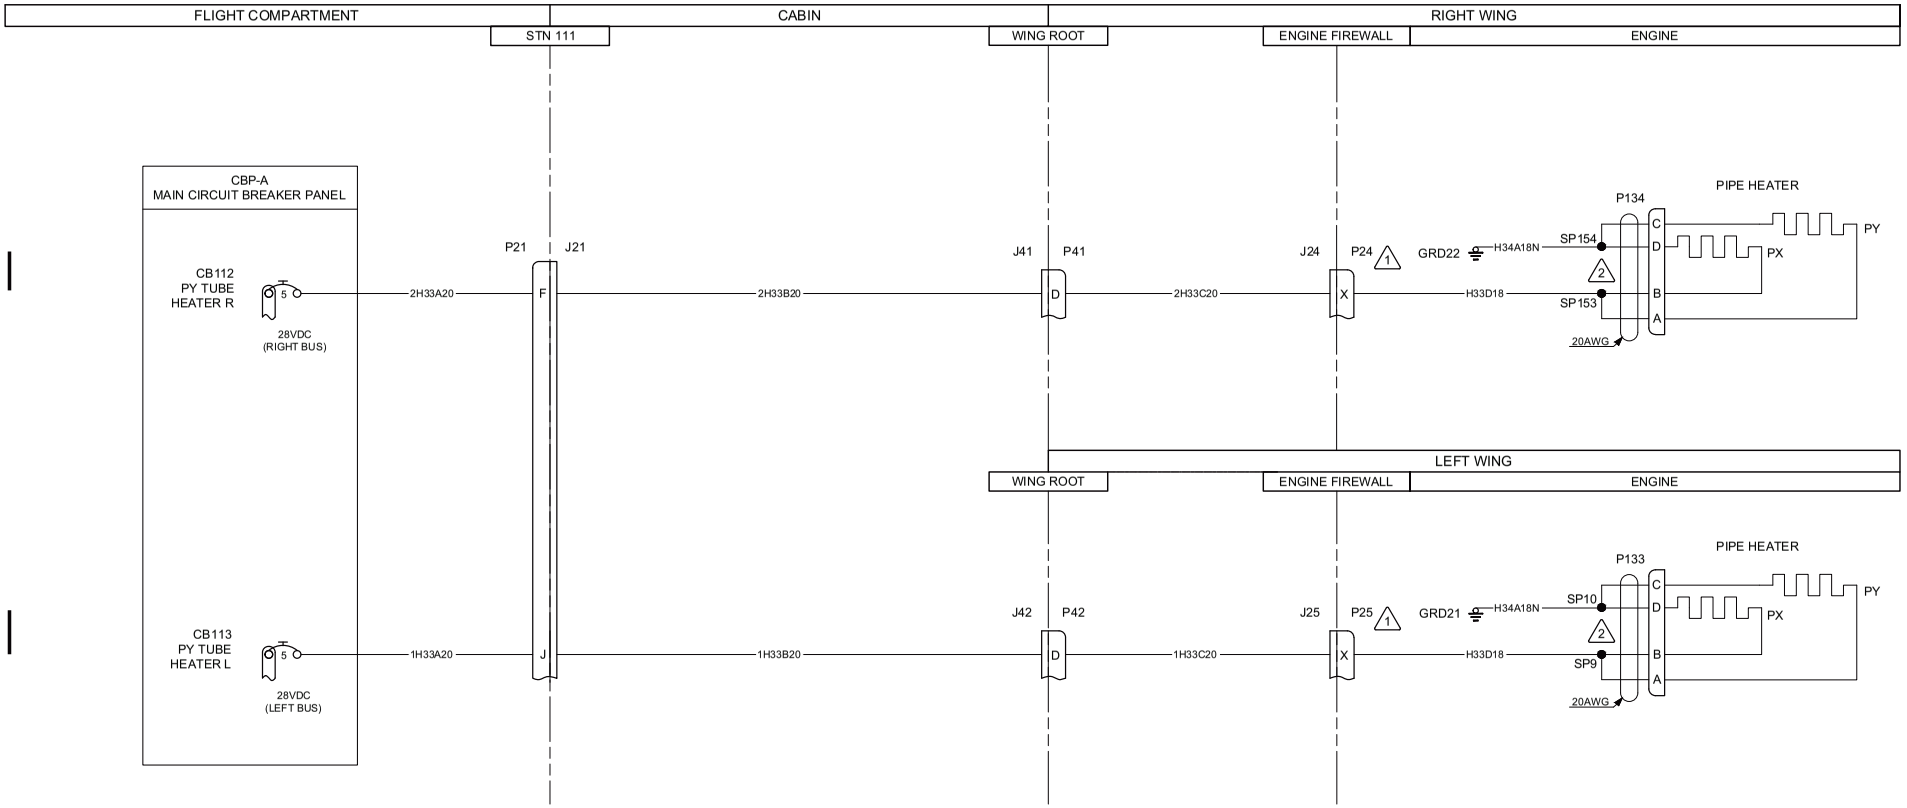

NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)


2. INSTALL FILLER WIRE INTO SPLICES SP9, SP10, SP153, SP154 AS FOLLOWS:
   - SIDE WITH 1 x 18 AWG WIRE: DOUBLE BACK CONDUCTOR IAW DOUBLE BACK FILLER WIRE METHOD
   - SIDE WITH 2 x 20 AWG WIRES: DOUBLE BACK ONE CONDUCTOR IAW DOUBLE BACK FILLER WIRE METHOD
   - REFER TO 20-20-10 FOR FILLER WIRE REQUIREMENTS

TEMPERATURE COMPENSATOR SENSE TUBE HEATING SYSTEM

SHEET 1 OF 1

C6N1004-32B	ISSUE NO.	1	2						

This Page Intentionally Left Blank

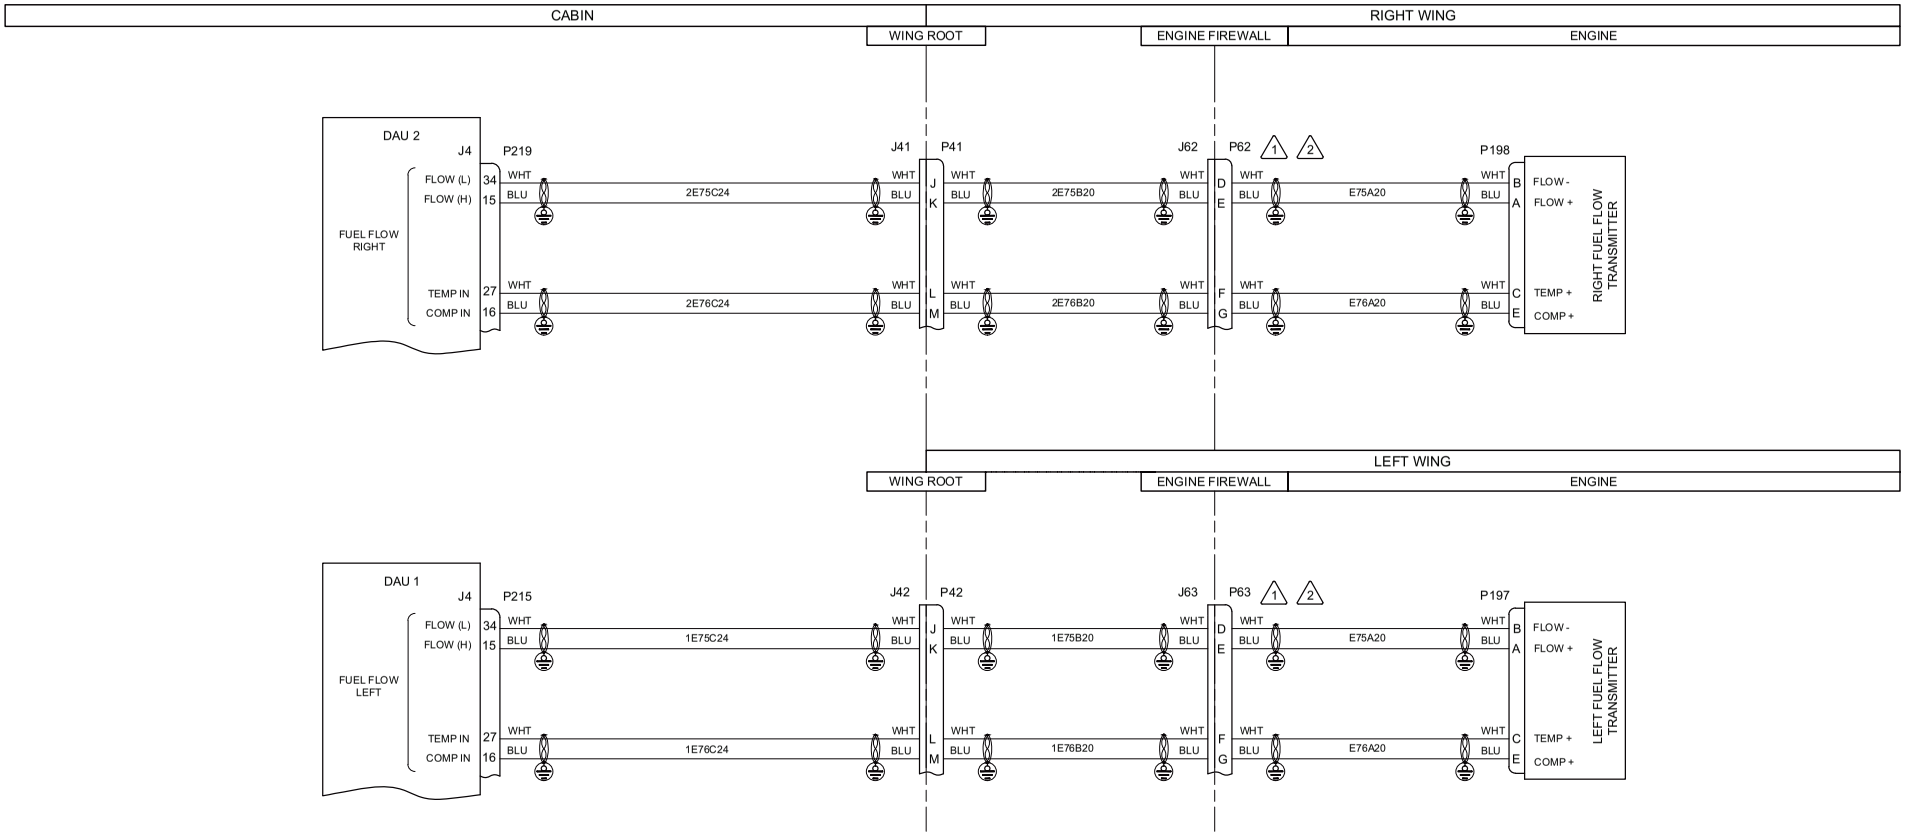

NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

2. HIGH TEMPERATURE SOLDER SLEEVES REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL

FUEL FLOW INDICATION

SHEET 1 OF 1

C6N1004-90 ISSUE NO. 1

This Page Intentionally Left Blank

CHAPTER 74

IGNITION

This Page Intentionally Left Blank

CHAPTER 74 – IGNITION

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
74	* 1	Sep. 30/14		* 5	Sep. 30/14
	* 2	Blank Page		* 6	Blank Page
	* 3	Sep. 30/14	74-00-00	* 1	Sep. 30/14
	* 4	Blank Page		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 74 – IGNITION

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
SWITCHING	**74-00**
Engine Ignition System	74-00-00

This Page Intentionally Left Blank

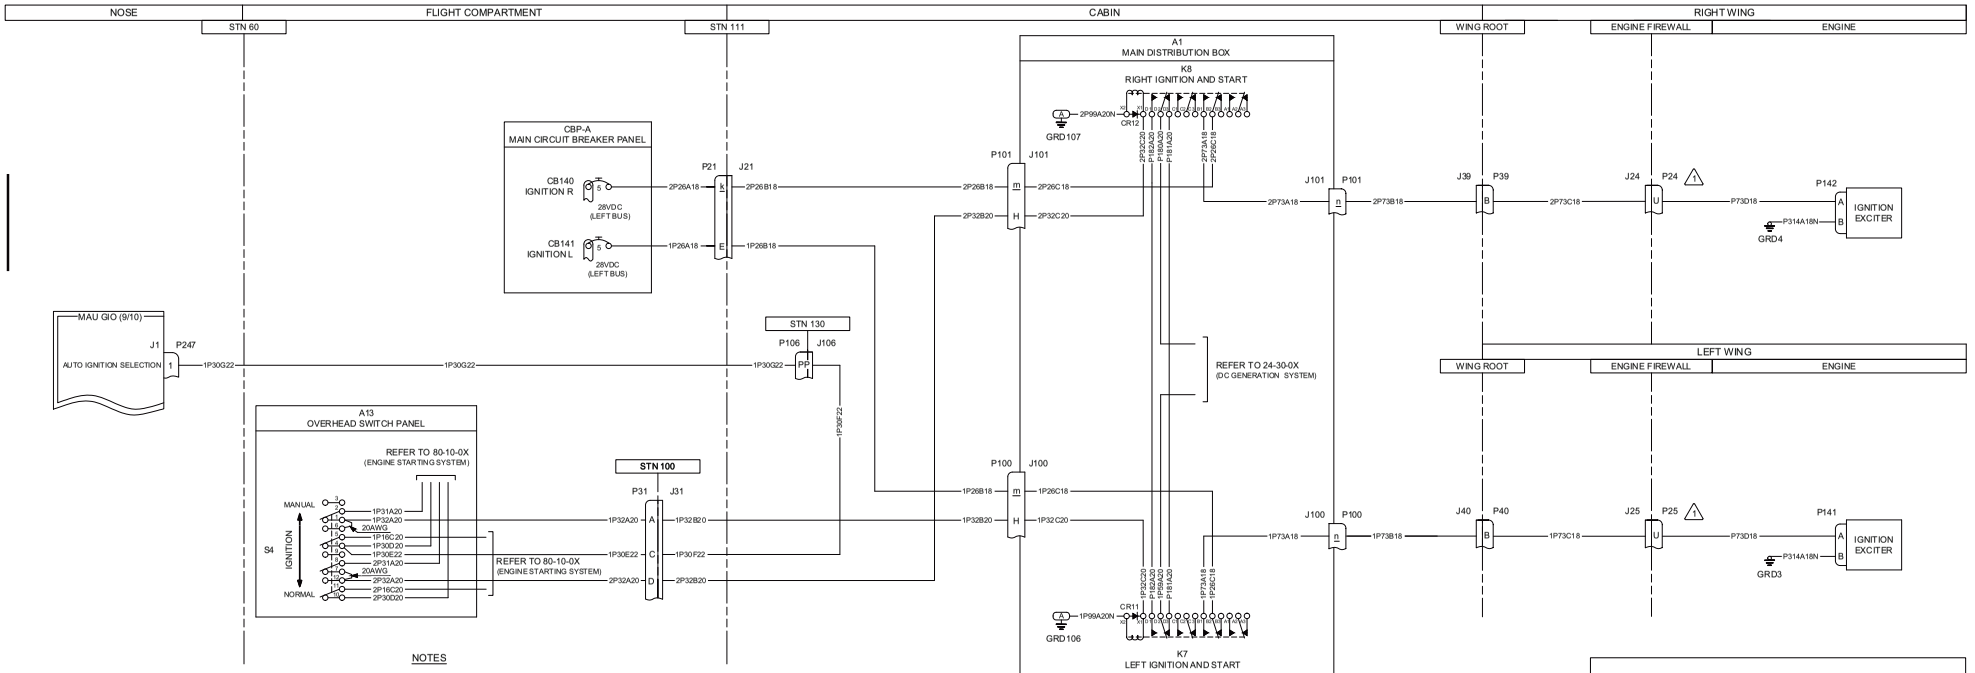

NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

ENGINE IGNITION SYSTEM

SHEET 1 OF 1

C6N1004-33B ISSUE NO. 1 2

This Page Intentionally Left Blank

CHAPTER 76

ENGINE CONTROLS

This Page Intentionally Left Blank

CHAPTER 76 – ENGINE CONTROLS

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
76	* 1	Sep. 30/14		* 6	Blank Page
	* 2	Blank Page	76-11-00	* 1	Sep. 30/14
	* 3	Sep. 30/14		* 2	Blank Page
	* 4	Blank Page	76-12-00	* 1	Sep. 30/14
	* 5	Sep. 30/14		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 76 – ENGINE CONTROLS

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
POWER CONTROLS	**76-10**
– POWER LEVER GRIP	**76-11**
Power Lever Grip Indication	76-11-00
– THROTTLE POSITION	**76-12**
Throttle Position Indication	76-12-00

This Page Intentionally Left Blank

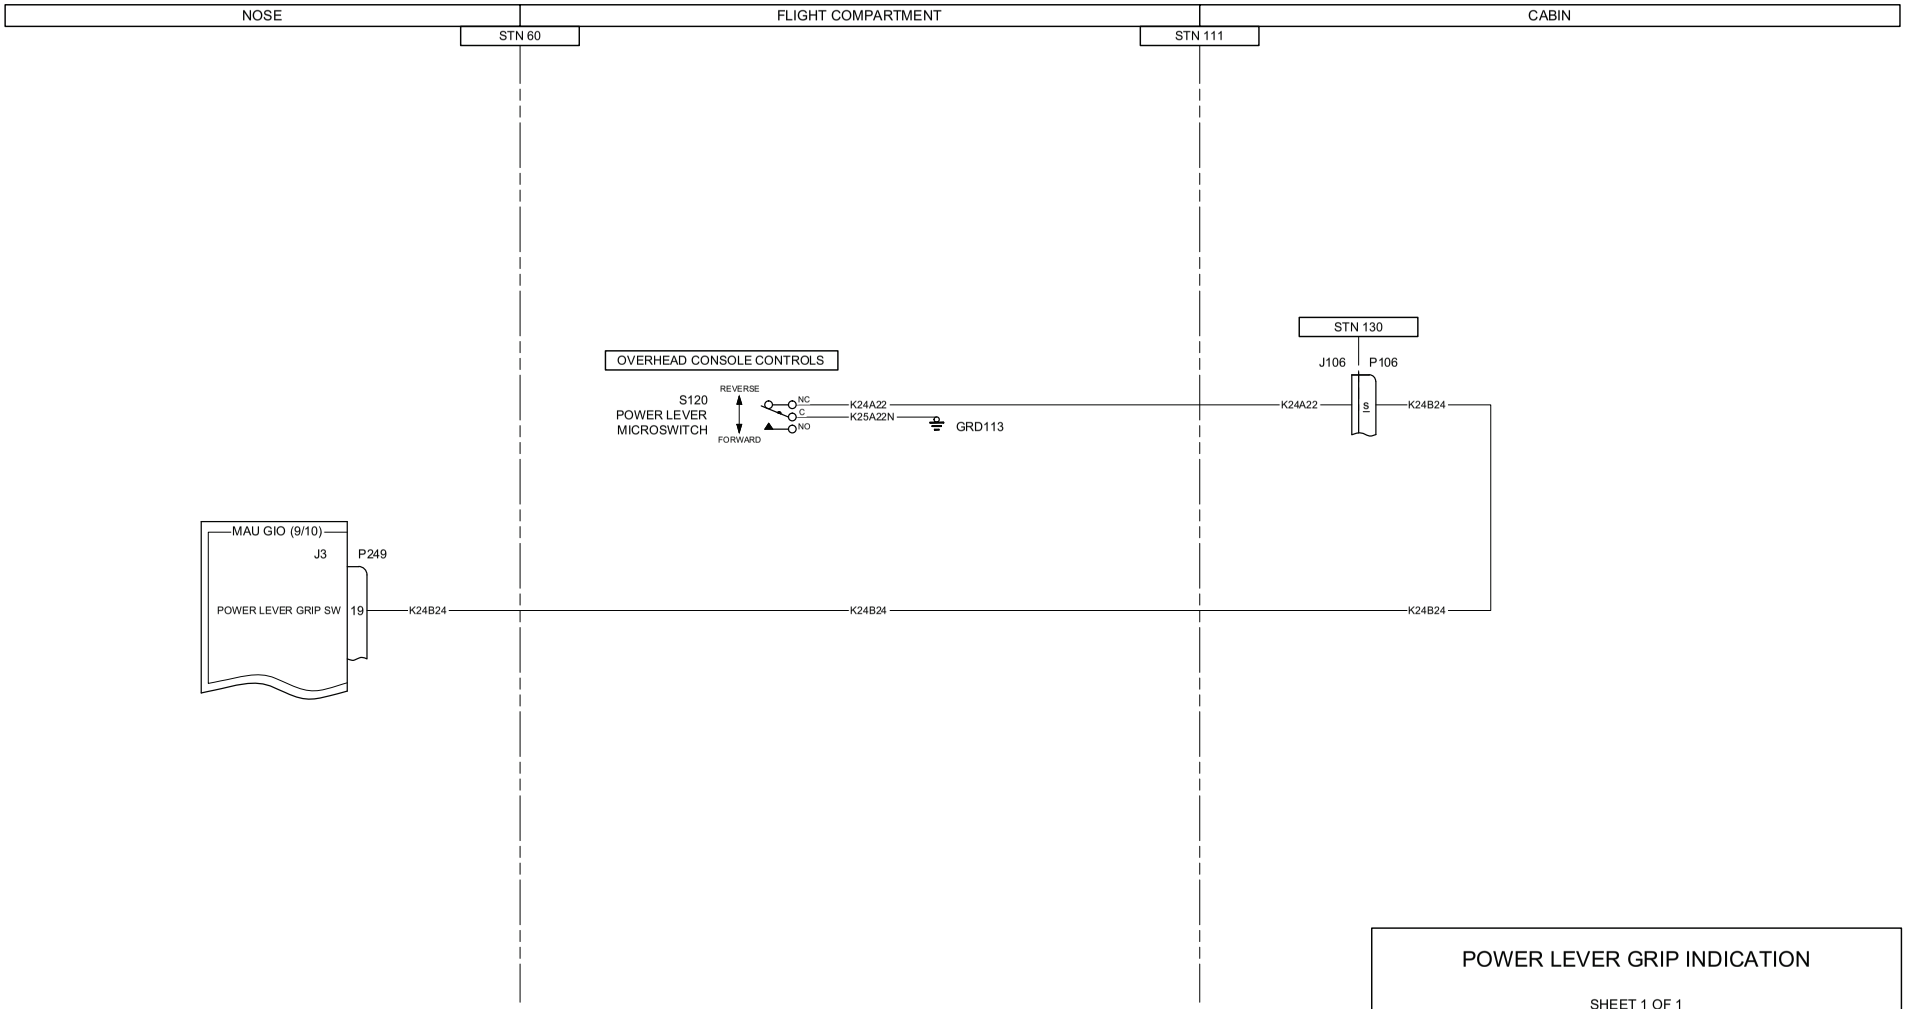


POWER LEVER GRIP INDICATION

SHEET 1 OF 1

C6N1004-93	ISSUE NO.	1

This Page Intentionally Left Blank

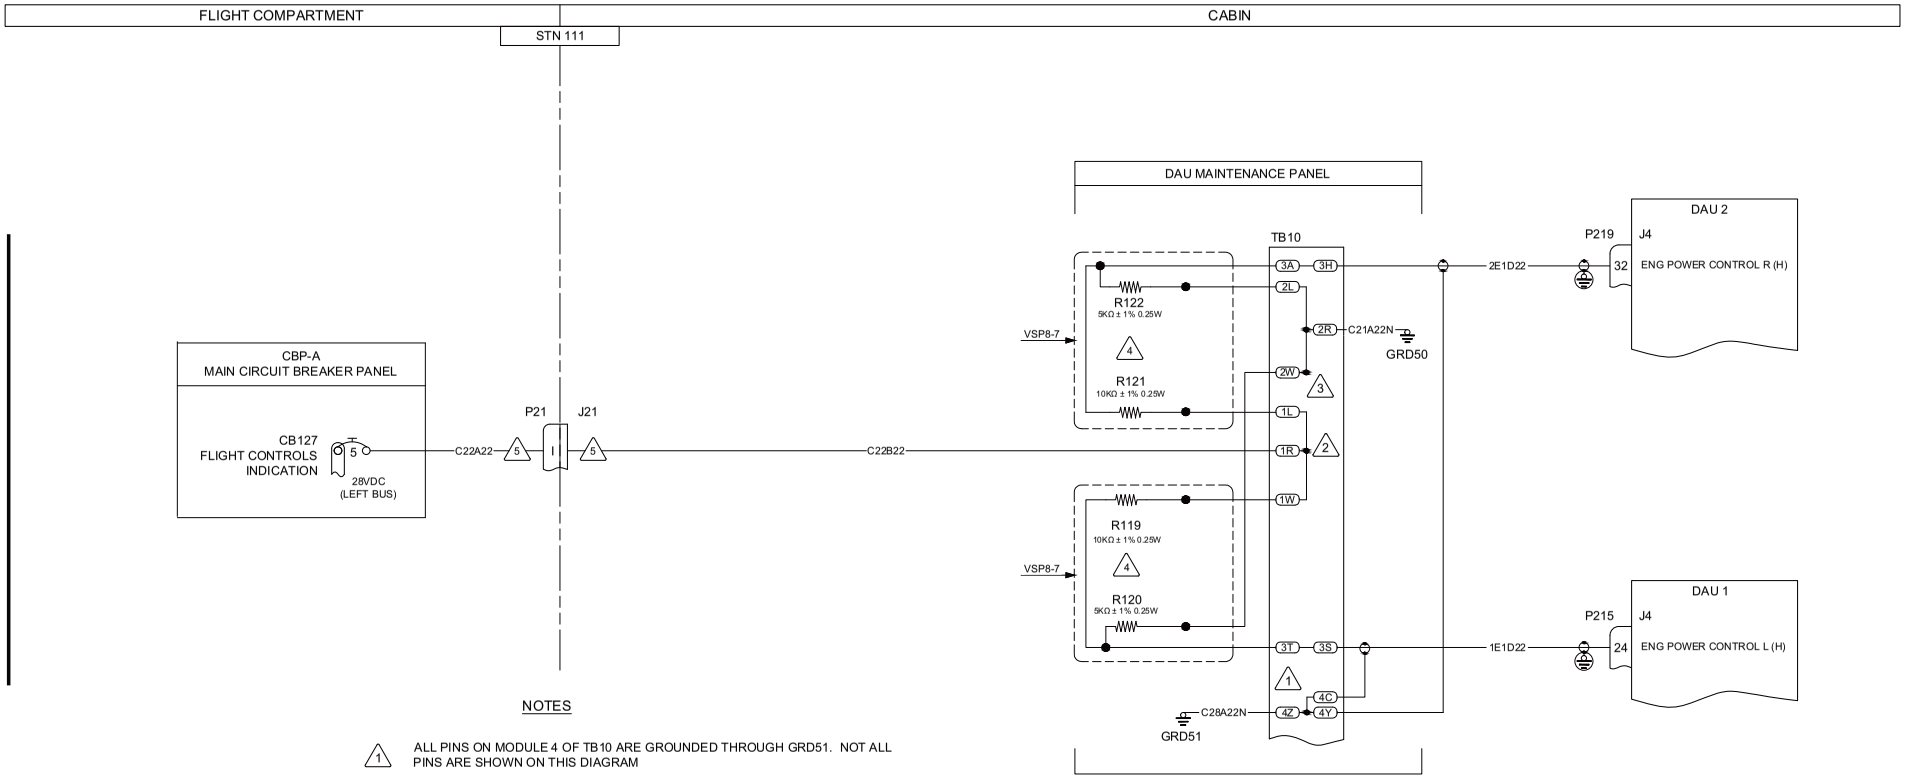

NOTES

1. ALL PINS ON MODULE 4 OF TB10 ARE GROUNDED THROUGH GRD51. NOT ALL PINS ARE SHOWN ON THIS DIAGRAM
2. ALL PINS ON MODULE 1 OF TB10 ARE POWERED THROUGH CB127. NOT ALL PINS ARE SHOWN ON THIS DIAGRAM
3. ALL PINS ON MODULE 2 OF TB10 ARE GROUNDED THROUGH GRD50. NOT ALL PINS ARE SHOWN ON THIS DIAGRAM
4. R119, R120, R121, AND R122 ARE INSTALLED TO PROVIDE A FIXED SIGNAL TO THE DAU WHEN THE ENGINE POWER CONTROL POSITION POTENTIOMETERS ARE NOT INSTALLED. FOR VSP8 ASSEMBLIES, AVOID SHARP BENDS AT THE RESISTOR LEADS AND SOLDER SLEEVE CONNECTIONS
5. CRIMP CONTACT REQUIRES AN 18AWG FILLER WIRE

THROTTLE POSITION INDICATION

SHEET 1 OF 1

C6N1004-84B	ISSUE NO.	1	2						

This Page Intentionally Left Blank

CHAPTER 77

ENGINE INDICATING

This Page Intentionally Left Blank

CHAPTER 77 – ENGINE INDICATING

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
77	* 1	Sep. 30/14	77-10-00	* 1	Sep. 30/14
	* 2	Blank Page		* 2	Blank Page
	* 3	Sep. 30/14	77-12-00	* 1	Sep. 30/14
	* 4	Blank Page		* 2	Blank Page
	* 5	Sep. 30/14	77-20-00	* 1	Sep. 30/14
	* 6	Blank Page		* 2	Blank Page


This Page Intentionally Left Blank

CHAPTER 77 – ENGINE INDICATING

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
POWER	**77-10**
Torque Pressure Indication	77-10-00
– GENERATOR	**77-12**
Gas Generator Tachometer Indication	77-12-00
TEMPERATURE	**77-20**
Turbine Temperature Indication	77-20-00

This Page Intentionally Left Blank

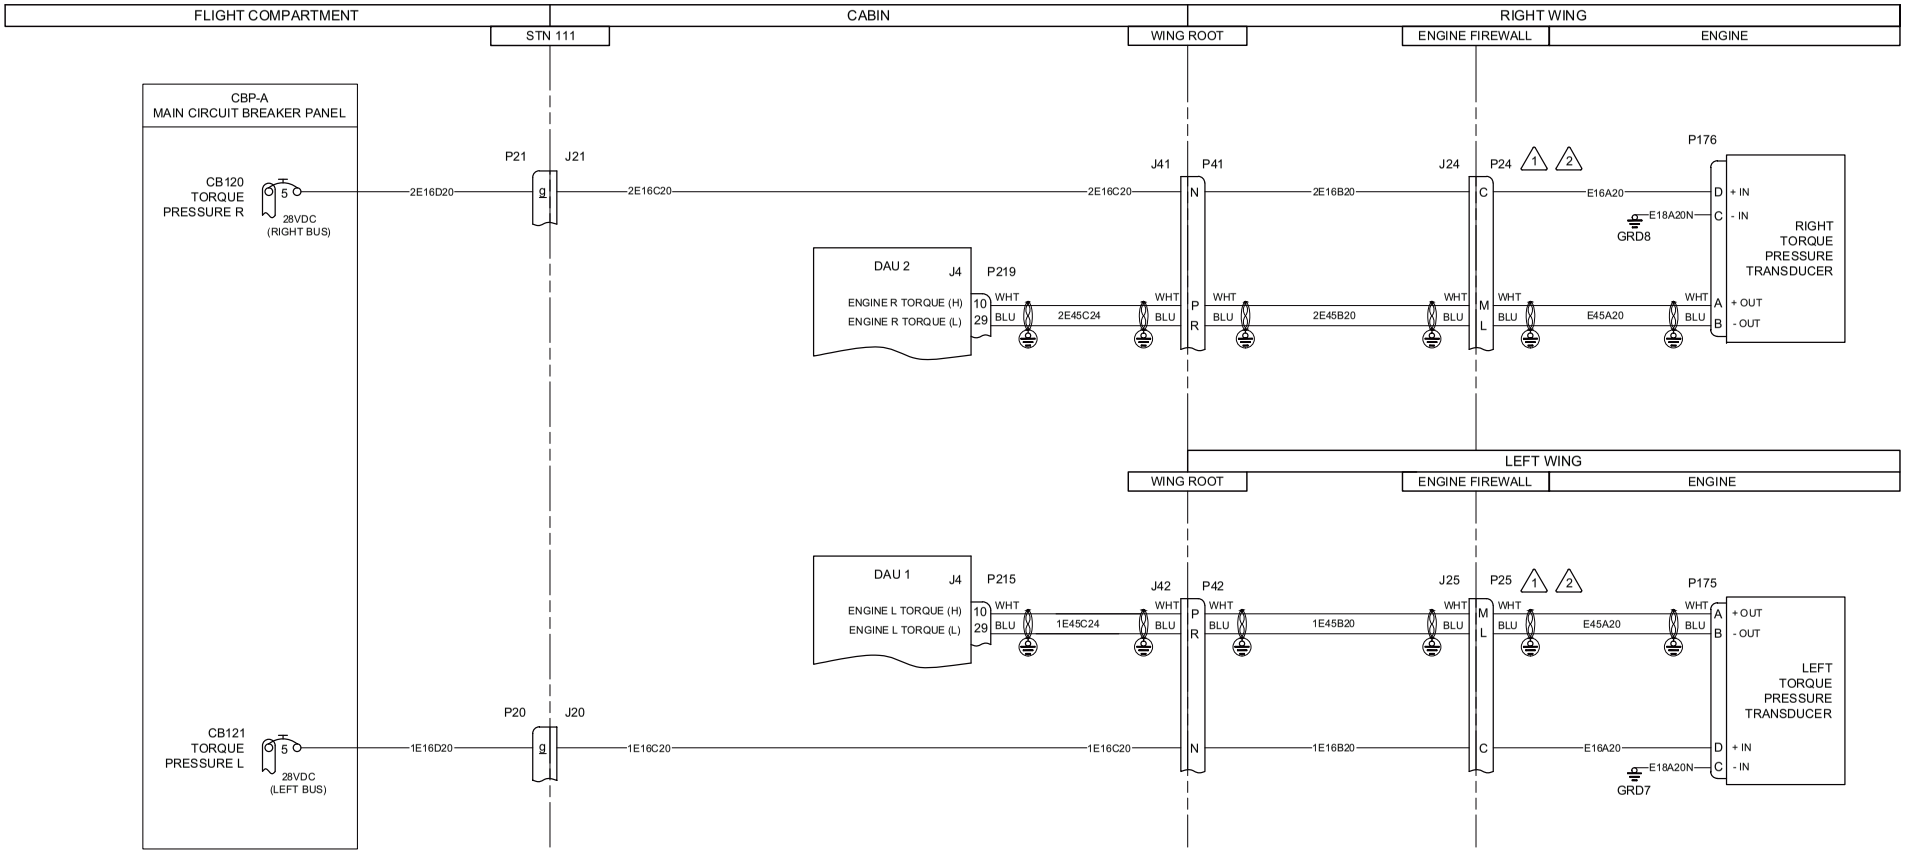


NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

2. HIGH TEMPERATURE SOLDER SLEEVES REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL

TORQUE PRESSURE INDICATION		
SHEET 1 OF 1		
C6N1004-85	ISSUE NO.	1

This Page Intentionally Left Blank

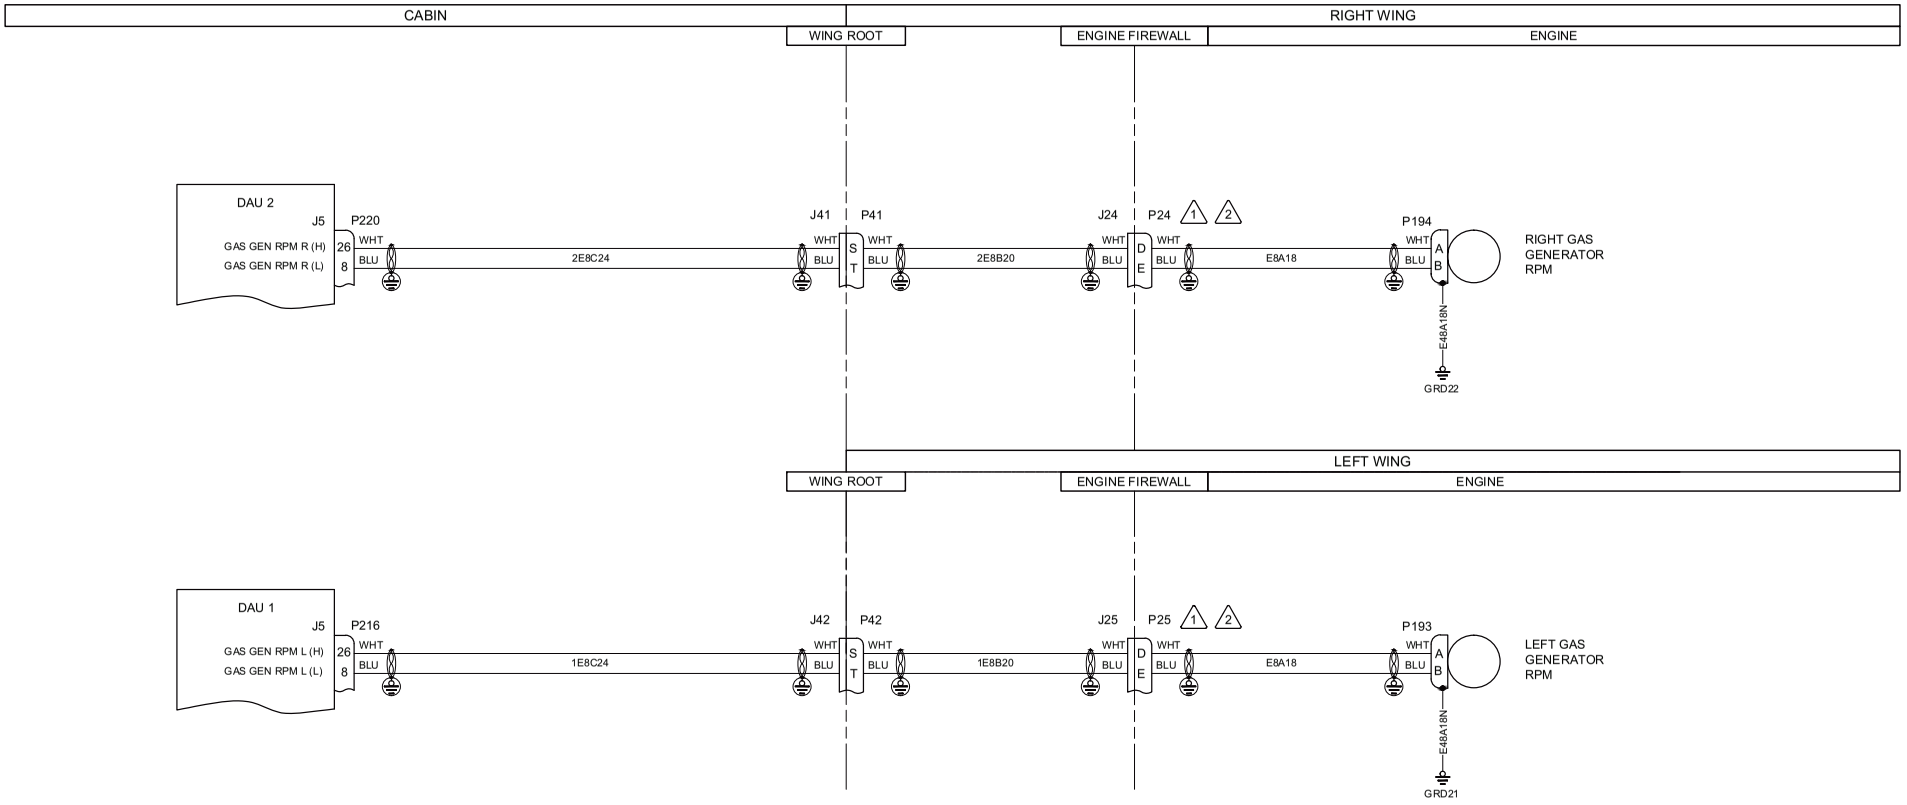

NOTES

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)


2. HIGH TEMPERATURE SOLDER SLEEVES REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL

GAS GENERATOR TACHOMETER INDICATION

SHEET 1 OF 1

C6N1004-86	ISSUE NO.	1

This Page Intentionally Left Blank

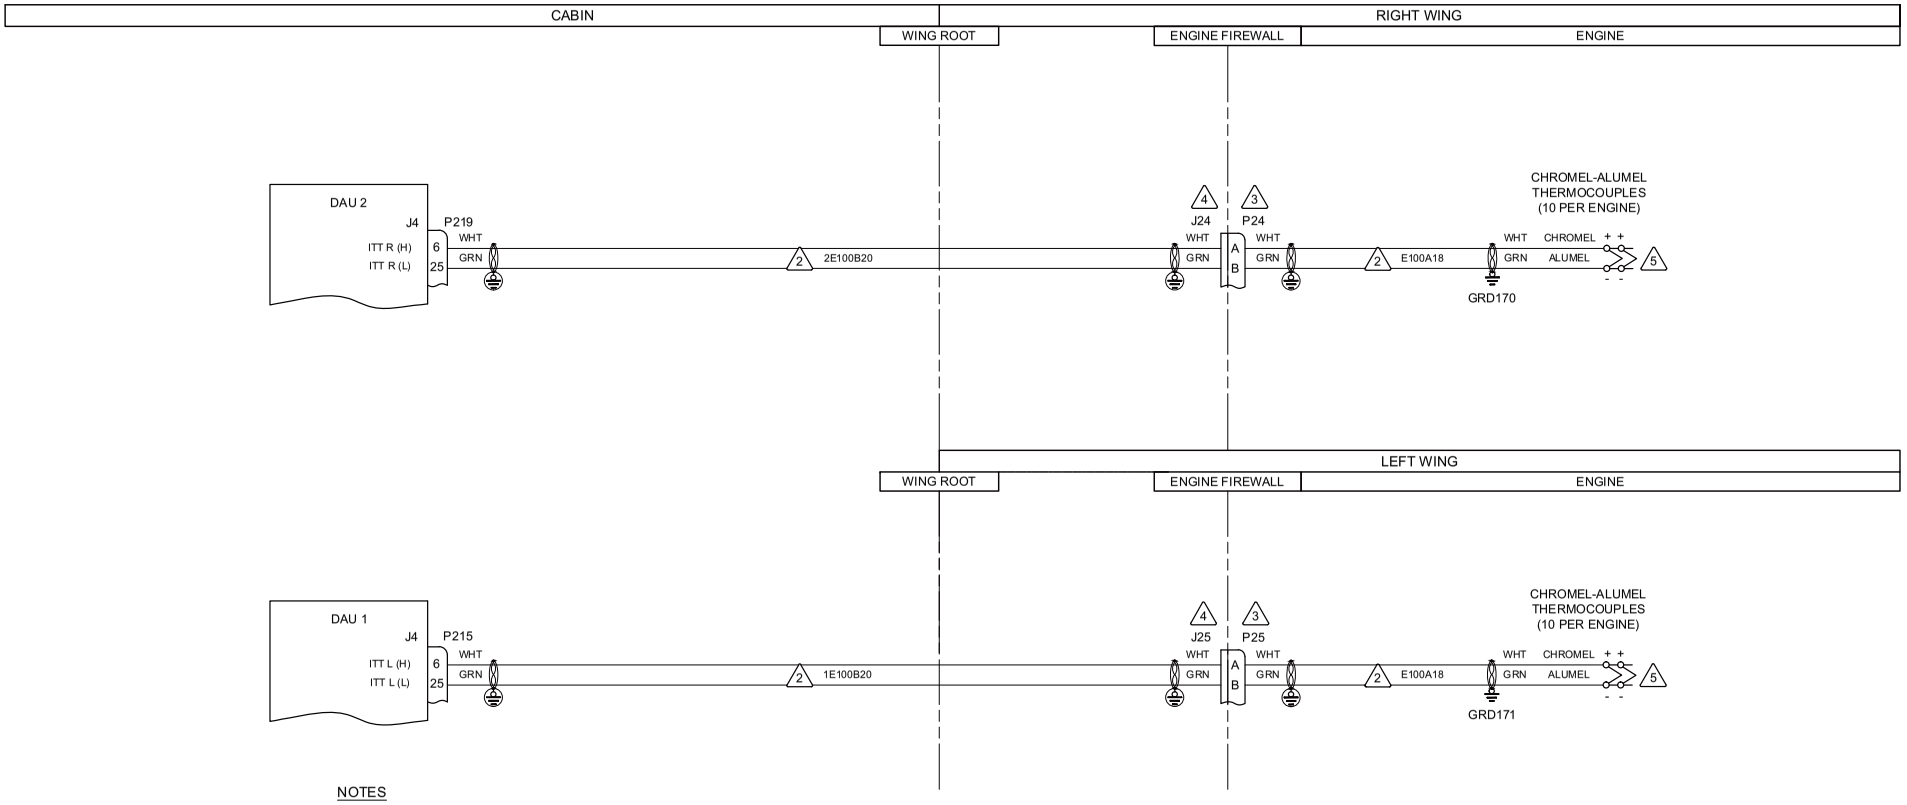

NOTES

1 HIGH TEMPERATURE SOLDER SLEEVES REQUIRED FOR ALL THERMOCOUPLE WIRE

2 THERMOCOUPLE CABLE
(REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

3 USE THERMOCOUPLE CONTACTS; ALUMEL P/N M39029/85-455 CHROMEL P/N M39029/85-456.

4 USE THERMOCOUPLE CONTACTS; ALUMEL P/N M39029/86-463 CHROMEL P/N M39029/86-464.

5 USE THERMOCOUPLE LUGS; ALUMEL P/N 1-321898-0 CHROMEL P/N 1-321897-0

TURBINE TEMPERATURE INDICATION

SHEET 1 OF 1

C6N1004-87	ISSUE NO.	1

This Page Intentionally Left Blank

CHAPTER 79

OIL

This Page Intentionally Left Blank

CHAPTER 79 – OIL

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
79	1	Sep. 30/14		6	Blank Page
	2	Blank Page	79-32-00	* 1	Dec. 7/16
	* 3	Dec. 7/16		* 2	Blank Page
	* 4	Blank Page	79-34-00	1	Sep. 30/14
	5	Sep. 30/14		2	Blank Page


This Page Intentionally Left Blank

CHAPTER 79 – OIL

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
INDICATING	**79-30**
– PRESSURE	**79-32**
Oil Pressure Indication	79-32-00
– TEMPERATURE	**79-34**
Oil Temperature Indication	79-34-00

This Page Intentionally Left Blank

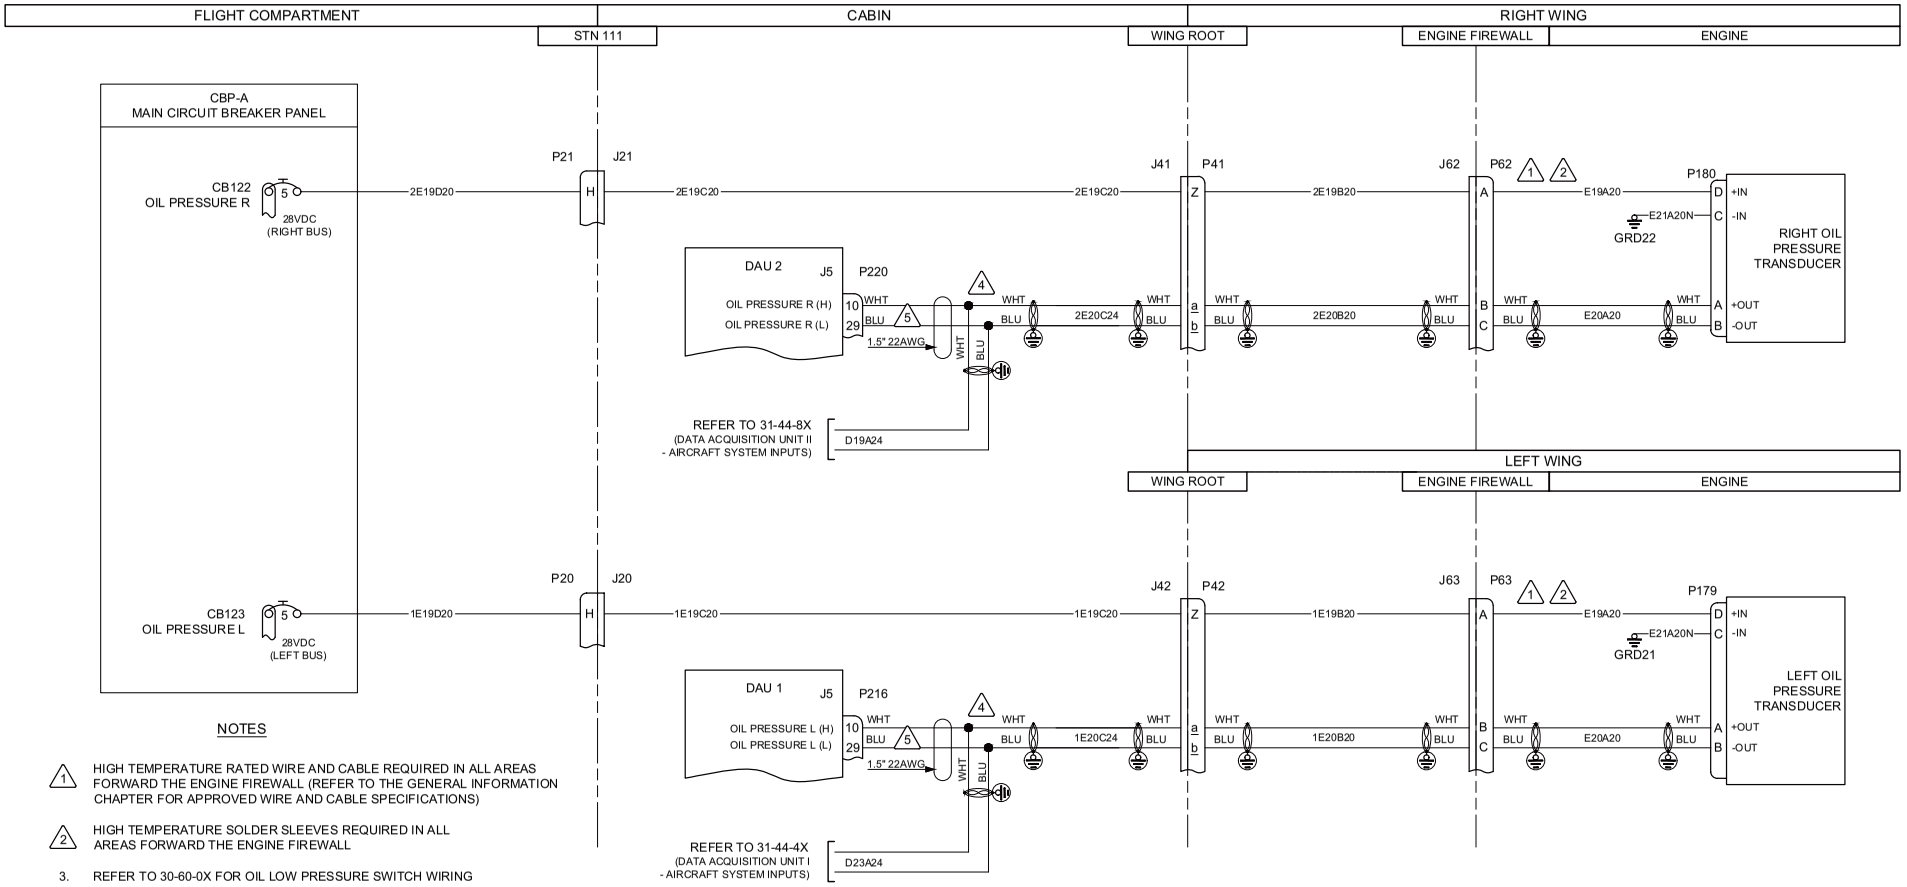

NOTES


1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)
2. HIGH TEMPERATURE SOLDER SLEEVES REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL
3. REFER TO 30-60-0X FOR OIL LOW PRESSURE SWITCH WIRING
4. THE STUB CONNECTIONS ATTACHING TO THE DAU MUST BE CONSTRUCTED IN ACCORDANCE WITH THE TYPE 1 STUB CONSTRUCTION PROCEDURE DESCRIBED IN CHAPTER 20-10-60
5. THINWALL WIRE (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

OIL PRESSURE INDICATION

SHEET 1 OF 1

C6N1004-88B ISSUE NO. 1 2 3

This Page Intentionally Left Blank

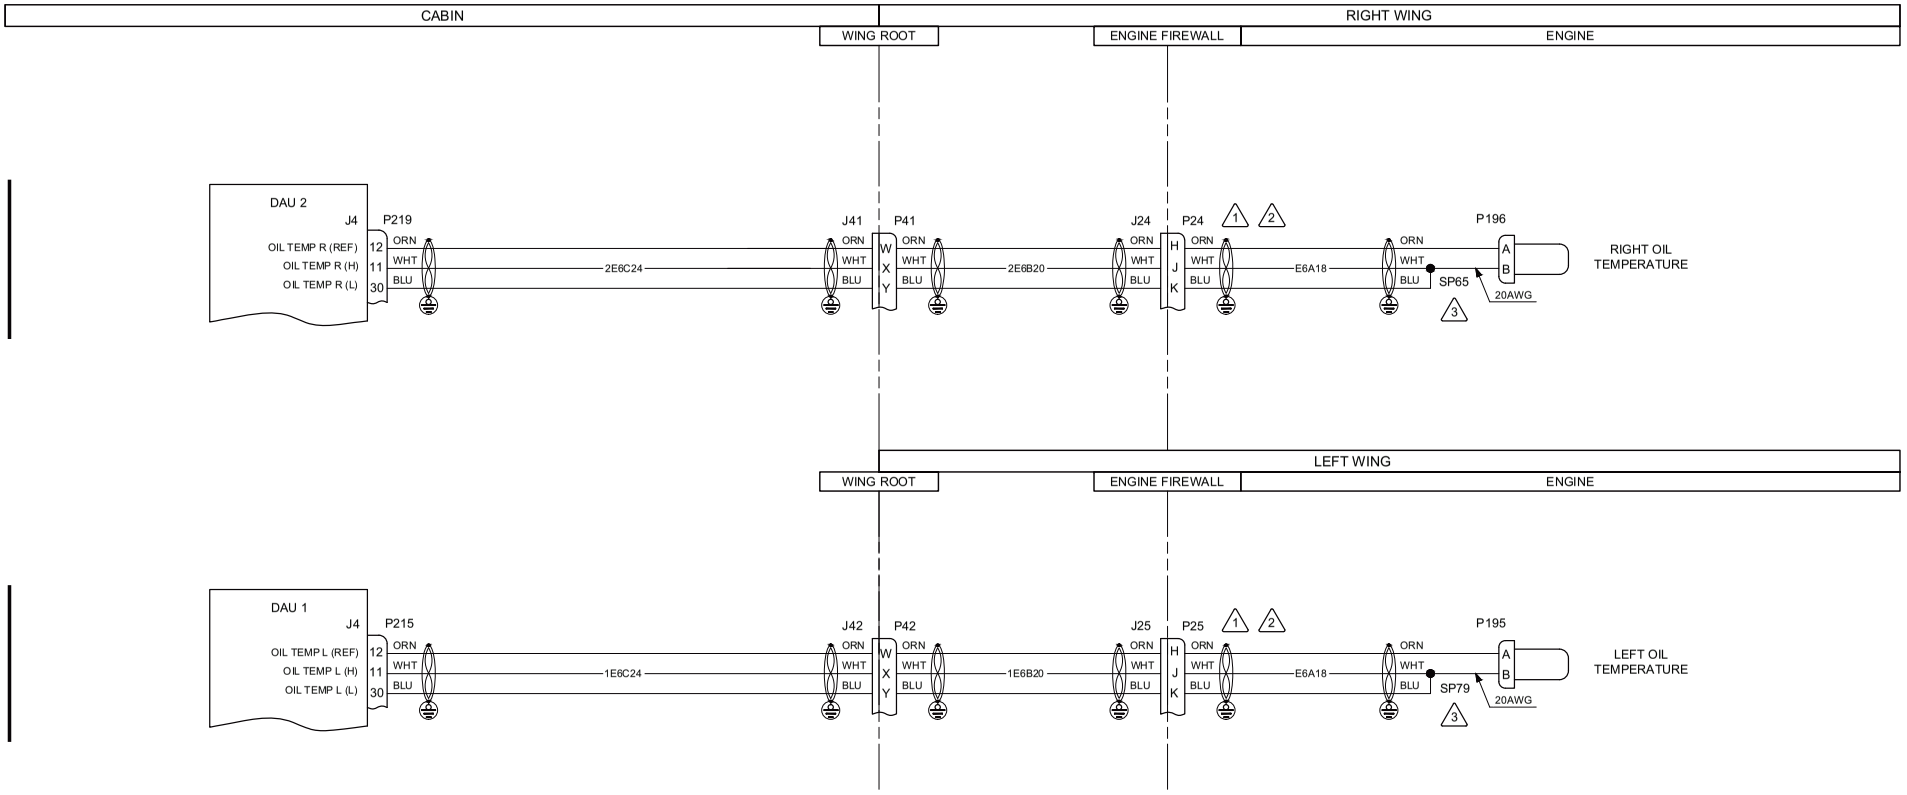

1. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO C6N1004-1 FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

2. HIGH TEMPERATURE SOLDER SLEEVES REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL

3. INSTALL FILLER WIRE INTO SPLICES SP65 AND SP79 AS FOLLOWS:
   - SIDE WITH 1 x 20 AWG WIRE: INSTALL 1 X 18 AWG FILLER WIRE IAW SINGLE FILLER WIRE METHOD
   - NO FILLER WIRE IS REQUIRED FOR SIDE WITH 2 x 18 AWG WIRES
   - REFER TO 20-20-10 FOR FILLER WIRE REQUIREMENTS

OIL TEMPERATURE INDICATION

SHEET 1 OF 1

C6N1004-89B	ISSUE NO.	1	2						

This Page Intentionally Left Blank

CHAPTER 80

STARTING

This Page Intentionally Left Blank

CHAPTER 80 – STARTING

This list shows the effective pages in the manual, with their latest revision date. An asterisk (*) indicates pages added or replaced at the latest revision. Technical changes to the content are indicated by a black vertical line next to the change or the paragraph that contains the change.

REFERENCE	PAGE	DATE	REFERENCE	PAGE	DATE
80	* 1	Sep. 30/14		* 6	Blank Page
	* 2	Blank Page	80-10-00	* 1	Sep. 30/14
	* 3	Sep. 30/14		* 2	Sep. 30/14
	* 4	Blank Page		* 3	Sep. 30/14
	* 5	Sep. 30/14		* 4	Blank Page


This Page Intentionally Left Blank

CHAPTER 80 – STARTING

TABLE OF CONTENTS

SUBJECT	CHAPTER SECTION SUBJECT
CRANKING	**80-10**
Engine Starting System	80-10-00

This Page Intentionally Left Blank

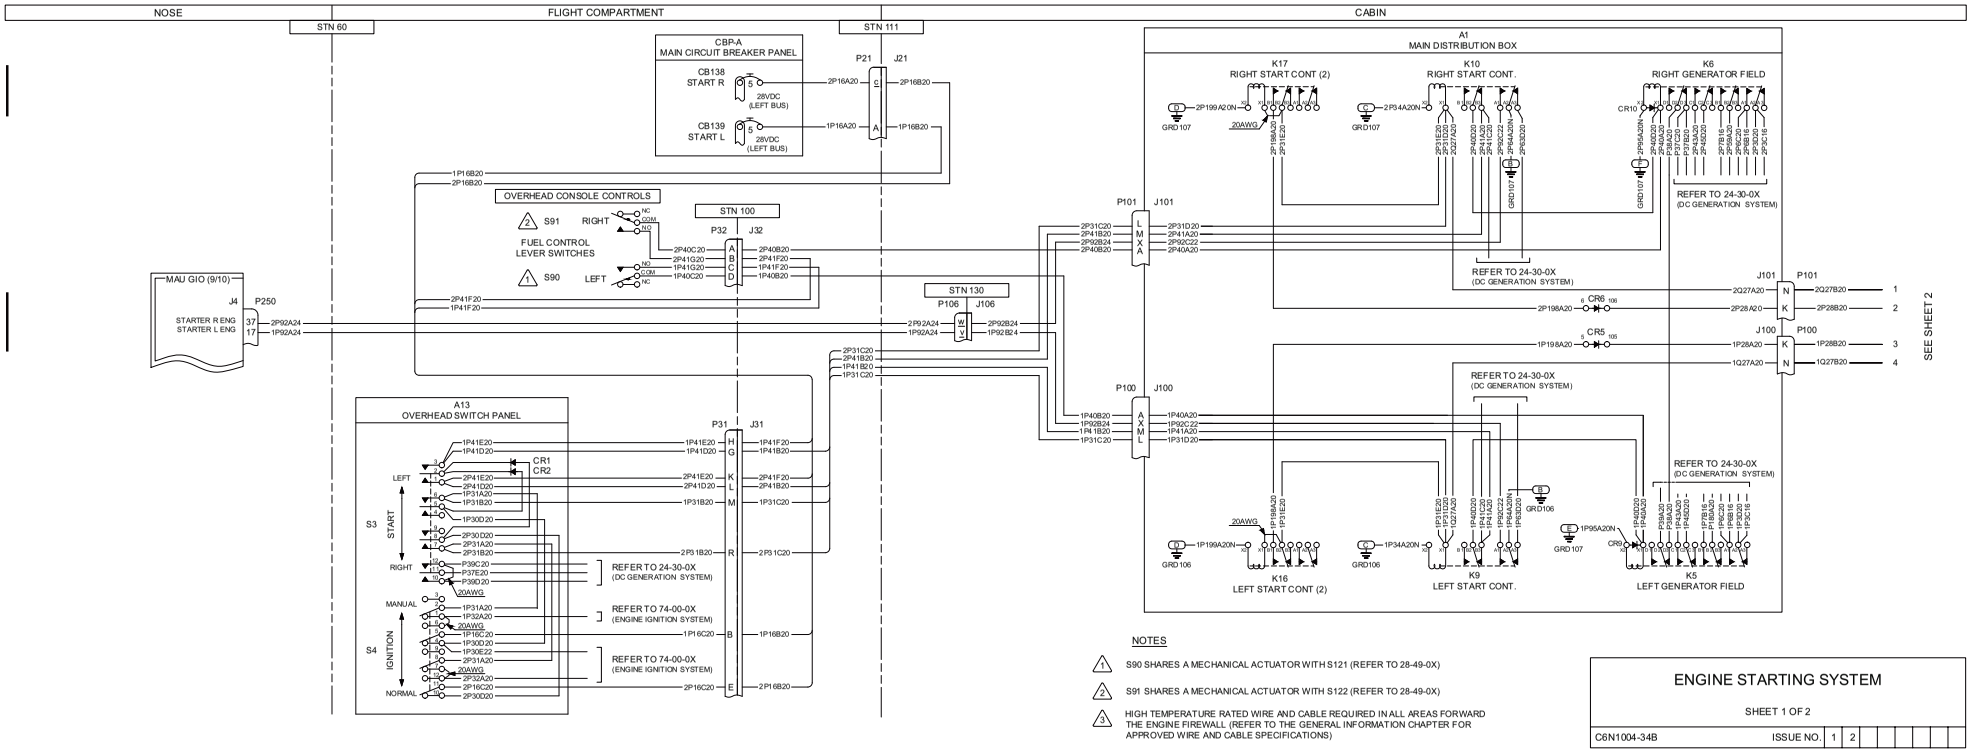

NOTES


1. S90 SHARES A MECHANICAL ACTUATOR WITH S121 (REFER TO 28-49-0X)
2. S91 SHARES A MECHANICAL ACTUATOR WITH S122 (REFER TO 28-49-0X)
3. HIGH TEMPERATURE RATED WIRE AND CABLE REQUIRED IN ALL AREAS FORWARD THE ENGINE FIREWALL (REFER TO THE GENERAL INFORMATION CHAPTER FOR APPROVED WIRE AND CABLE SPECIFICATIONS)

ENGINE STARTING SYSTEM

SHEET 1 OF 2

C6N1004-34B ISSUE NO. 1 2

This Page Intentionally Left Blank

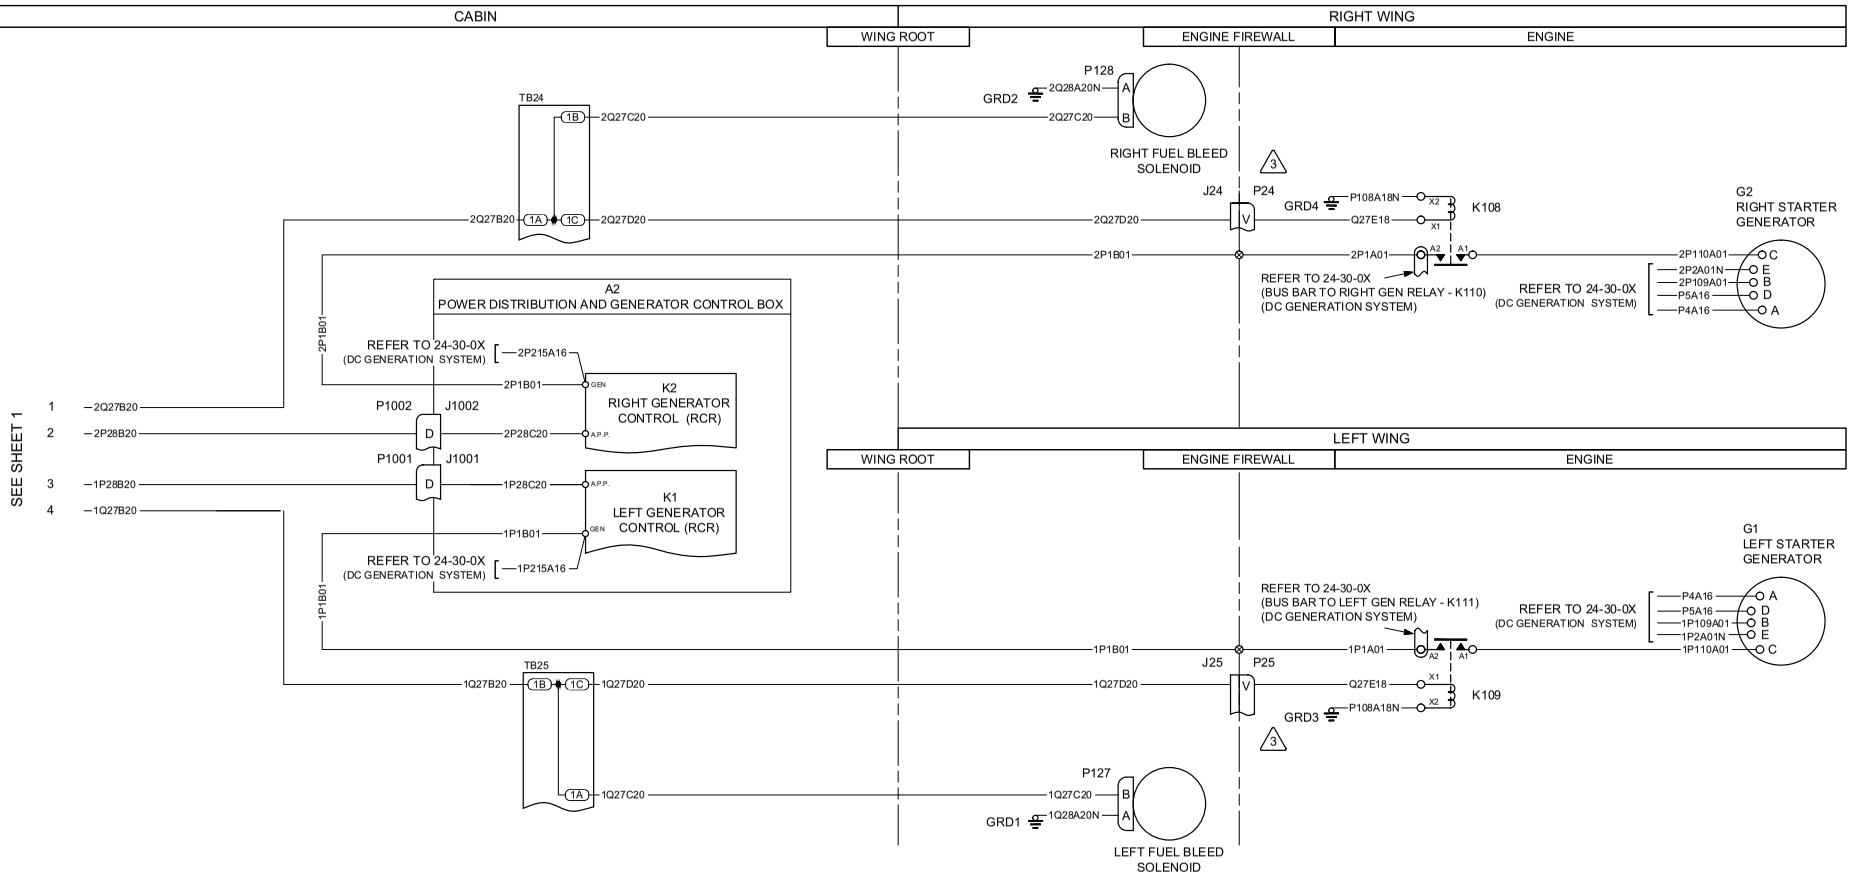

ENGINE STARTING SYSTEM									
SHEET 2 OF 2									
C6N1004-34C	ISSUE NO.	1	2						

This Page Intentionally Left Blank