CHAPTER

00

GENERAL

CHAPTER 00
GENERAL

CH-SE-SU	Schem	Page	Sheet	Date
00-EFFECTIVE PAGES				
		1		Nov 14/2025
		2		BLANK
00-CONTENTS				
		1		May 15/2024
		2		BLANK
00-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
00-00-00				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
			4	May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 00
GENERAL

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
SYMBOLS						
SYMBOLS	00-00-00		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
				4	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 00
GENERAL

CH-SE-SU	Title
00-00-00	SYMBOLS

00-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL


-A
1 AMPLIFIER

ANTENNA



ARINC 629


BATTERY

SINGLE CELL 

MULTICELL 

BUS


BUS BAR WITH CONNECTIONS

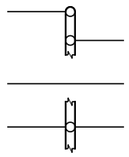

BUS BAR BROKEN WHERE CONDUCTORS CROSS

CAPACITOR

GENERAL 

VARIABLE 

CURVED ELEMENT REPRESENTS:

1. THE OUTSIDE ELECTRODE IN FIXED PAPER AND CERAMIC DIELECTRIC CAPACITORS.
2. THE NEGATIVE ELECTRODE IN ELECTROLYTIC CAPACITORS.
3. THE MOVING ELEMENT IN VARIABLE AND THE LOW POTENTIAL ELEMENT IN FEED THROUGHT CAPACITORS.

CIRCUIT BREAKER

SINGLE PHASE 


SINGLE PHASE-BUSSED 

THREE PHASE 


CONNECTOR

TERMINAL

SOLDER POINT


SEPARATE CONNECTORS ENGAGED (ONE CONNECTOR SHOWN) 

PLUG AND RECEPTACLE

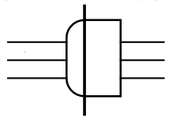



COMPLETE CONNECTOR

CONNECTOR SHOWN COMPLETE AS ILLUSTRATED WILL ONLY APPEAR ON ONE DIAGRAM.

BROKEN CONNECTOR 

BROKEN CONNECTORS ARE SHOWN ON MORE THAN ONE WIRING DIAGRAM OR MORE THAN ONE PLACE ON THE SAME DIAGRAM. (FOR COMPLETE INFORMATION REFER TO CHAPTER 91 HOOK-UP CHARTS.)

COAXIAL-OUTSIDE CONDUCTOR CARRIED THROUGH 

COAXIAL-OUTSIDE CONDUCTOR NOT CARRIED THROUGH 

CONVENIENCE OUTLET (RECEPTACLE)

2 CONDUCTOR POLARIZED 3 CONDUCTOR POLARIZED

DELTA SYMBOLS

△1 CRITICAL (DESIGNATED) GROUND


REFER TO ENGINEERING DIAGRAMS AND/OR STANDARD WIRING PRACTICES FOR SPECIAL CONDUCTIVE AND BONDING REQUIREMENTS.

△2 MOISTURE RESISTANT SPLICE

IDENTICAL EQUIPMENT

△3 INENTICAL EQUIPMENT SHOWN ON THE SAME DIAGRAM WITH IDENTICAL NOMENCLATURE.


FIRE DETECTOR



CONTINUES LOOP ENGINE FIRE DETECTOR

FLAG NOTES

GENERAL



OR

SERVICE BULLETIN FLAG

INCORPORATES:

CUSTOMER ORIGINATED CHANGE FLAG

INCORPORATES:

FUSE



GENERAL SYMBOLS

~ FREQUENCY

Ω OHM OR RESISTANCE

— NEGATIVE POLARITY

+ POSITIVE POLARITY

ECCN 9E991 BOEING PROPRIETARY - See title page for details

00-00-00

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
1

GENERATOR
STANDARD



GROUND
STANDARD

CHASSIS

INTERNAL

BURNDY BLOCK

BURNDY TRACK

CRITICAL GROUND
SYMBOL 1

HANDSET



PRESS TO TALK

HEAD SET
STANDARD



BOOM MIKE



HEATER
STANDARD




HORN



LAMP
BASIC

BALLAST LAMP

FLUORESCENT



COLOR	SYMBOL
AMBER	A
BLUE	B
GREEN	G
RED	R
WHITE	W
YELLOW	Y
VIOLET	V

*COLOR OF CRYSTAL INDICATED BY LETTER

INDICATOR OR WARNING




INDICATOR OR WARNING PRESS TO TEST




ALTERNATING-CURRENT TYPE




TYPE 1



TYPE 2



TYPE 3



LINE WEIGHTS

WIRE


REFERENCE WIRE

LIGHT MODULES, FLUORESCENT LIGHTS, TERMINAL STRIPS


BORDERS FOR PANELS, RACKS, JUNCTION BOXES, MODULES

COAXIAL CABLE

PROVISIONAL EQUIPMENT BORDER



PRESSURE SEAL
(WIRE)
(WIRE)

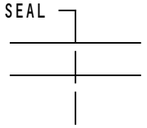

LOUDSPEAKER



MOTOR
STANDARD




PM MOTOR




SERIES WOUND




AC THREE PHASE

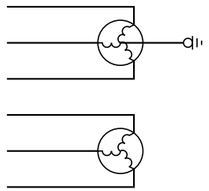

PHONE JACK




PHONE PLUG



PHOTOCELL


RELAY
MOMENTARY ON



SINGLE POLE
SINGLE THROW



DOUBLE POLE
DOUBLE THROW



RESISTOR
GENERAL

WITH INDEPENDANT INTEGRAL HEATER



VARIABLE



WITH ADJUSTABLE CONTACT



SHUNT

SOLID STATE DEVICES
BOEING ASSIGNED TERMINAL IDENTIFICATION FOR DIODE'S IS:
A (ANODE)
C (CATHODE)

DIODE



LIGHT EMITTING DIODE (LED)



ZENER DIODE



SPARK IGNITER

00-00-00

Page 1
Sheet 2
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

-A
1

SPLICE

SPXXXXX

INTER-BUNDLE: CONNECTS WIRES BETWEEN DIFFERENT BUNDLE NUMBERS.

SMXXXXX

INTRA-BUNDLE: CONNECTS WIRES WITHIN THE SAME BUNDLE NUMBER.

SQUIB



SWITCH

S.P.S.T.



S.P.D.T.



S.P.D.T. OFF POSITION



MOMENTARY ON




MOMENTARY OFF POSITION



THREE POSITION SELECTOR SWITCH



FIVE POSITION SELECTOR SWITCH



ROTARY-WAFER, 3 POLE 3 CIRCUIT

THERMAL SWITCH

OPENS ON RISING TEMPERATURE



CLOSES ON RISING TEMPERATURE



SWITCH/RELAY ACTUATORS

OPERATE BY TURNING




OPERATE BY PUSHING




OPERATE BY PULLING



VALVE CONTROLLED



THREE POSITION TOGGLE



SHIELDED PUSH OPERATED



PRESSURE OPERATED (ARROW INDICATES DIRECTION OF BAR MOVEMENT)



CLUTCH/BRAKE ENGAGED



CLUTCH/BRAKE DISENGAGED



TERMINAL BLOCK SYMBOLS



TERMINAL BLOCK DIODE


INTENDED FOR 24 THROUGH 20 GAGE WIRE

INTENDED FOR 18 THROUGH 16 GAGE WIRE



TERMINAL BLOCK RESISTOR

TERMINAL-STRIP AND BUS

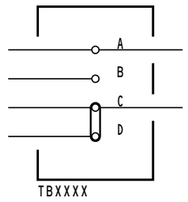



TERMINALS & SIZES

SOLDER POINT •

STUD SIZES

2	◑
4	⊕
6	◑
8	⊙
10	○
1/4	⊘
5/16	⊗
3/8	⊜
1/2	⊖

THERMAL ELEMENT

THERMOMECHANICAL TRANSDUCER




THERMOCOUPLE




TEMP SENSOR

TIME DELAY

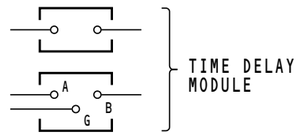

TIME DELAY MODULE

TIME DELAY RELAY




TRANSFORMER

BASIC AIR CORE



CURRENT



BASIC IRON CORE



VENDOR FURNISHED EQUIPMENT



VIBRATION TRANSDUCER



ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

00-00-00

Page 1
Sheet 3
May 15/2024


737-8 WIRING DIAGRAM MANUAL

-D


1 # WIRES

ALL SHIELD SYMBOLS ARE SHOWN AT BOTH ENDS OF WIRE. ALL MULTI-CONDUCTOR SHIELDED WIRES ARE TWISTED. ALL TWIST SYMBOLS MAY ONLY BE AT THE WIRE IDENTIFICATION END.


1 WIRE SHIELDED (A)
2 WIRES SHIELDED (B)
4 WIRES TWISTED (C)

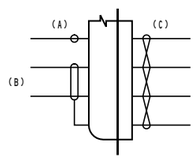


SHIELDED WIRE - SHIELD GROUNDED

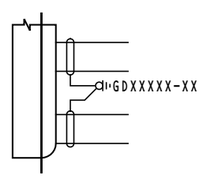


DOUBLE SHIELD

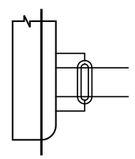


OVERBRAID SYMBOL - SHIELDED, TWISTED AND SINGLE WIRES SHOWN.

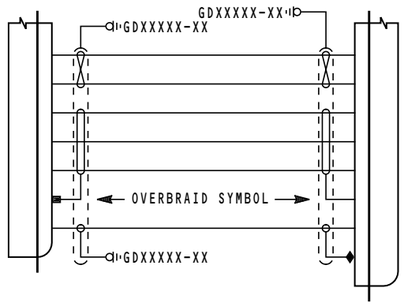


PERIPHERAL SHIELD CONNECTION TO PERIPHERAL BACKSHELL

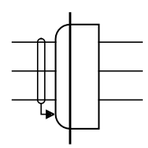

SHIELD TERMINATION TO STRAIN RELIEF CLAMPS

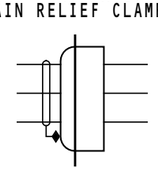


ZERO LENGTH TERMINATION TO BACKSHELL

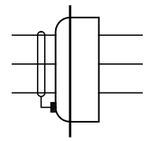


SINGLE WIRE


SHIELDED WIRE




TWISTED PAIR




COAXIAL CABLE



TWINAXIAL CABLE



TRIAX CABLE



FIBER OPTIC CABLE



VENDOR WIRE



STOWED WIRES

CAPPED WIRE



N CAP & STOW NEAR DXXXXXX

TAPED TERMINAL

CONTACT SIZE
4 LUG
6 LUG
8 LUG
10 LUG

N TAPE AND STOW NEAR DXXXXXX

00-00-00

Page 1
Sheet 4
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details