CHAPTER

23

COMMUNICATIONS

CHAPTER 23
COMMUNICATIONS

CH-SE-SU	Schem	Page	Sheet	Date
23-EFFECTIVE PAGES				
		1 thru 2		Nov 14/2025
23-CONTENTS				
R		1		Nov 14/2025
R		2		Nov 14/2025
R		3		Nov 14/2025
		4		BLANK
23-ALPHABETICAL INDEX				
		1		May 15/2024
		2		BLANK
23-11-11				
		1	1	Dec 24/2024
			2	May 15/2024
23-11-21				
		1	1	Dec 24/2024
			2	May 15/2024
23-12-11				
		1	1	May 15/2024
			2	May 15/2024
23-12-21				
		1	1	May 15/2024
			2	May 15/2024
23-12-31				
		1		May 15/2024
23-12-41				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
23-15-11				
		1		May 15/2024
23-15-12				
		1		May 15/2024
23-15-13				
		1		May 15/2024
23-15-15				
		1	1	May 15/2024
			2	May 15/2024
23-22-11				
		1	1	May 15/2024
			2	May 28/2025
23-24-11				
R		1	1	Nov 14/2025
			2	May 28/2025
23-27-31				
		1		May 15/2024
23-27-32				
		1		May 15/2024
23-27-33				
		1		May 15/2024
23-27-34				
		1		May 15/2024
23-27-35				
		1		May 15/2024
23-27-36				
		1		May 15/2024
23-27-37				
		1		May 15/2024
23-27-38				
		1		May 15/2024
23-27-39				
		1		May 15/2024
23-31-01				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024
23-31-02				
		1	1	May 15/2024
			2	May 15/2024
23-31-03				
		1	1	May 15/2024
			2	May 15/2024
23-31-04				
		1		May 15/2024
23-31-06				
		1		May 15/2024
23-41-11				
R		1		Nov 14/2025
23-42-11				
		1		May 15/2024
23-42-12				
		1		May 15/2024
23-42-14				
		1		May 15/2024
23-42-15				
		1		May 15/2024
23-43-11				
		1		May 15/2024
23-51-11				
		1		May 15/2024

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 23
COMMUNICATIONS

CH-SE-SU	Schem	Page	Sheet	Date
23-51-21				
		1		May 15/2024
23-51-31				
		1		Dec 24/2024
23-51-51				
		1	1	May 15/2024
			2	May 15/2024
23-70-11				
R		1	1	Nov 14/2025
			2	May 15/2024
23-71-01				
		1	1	May 15/2024
			2	May 15/2024
			3	May 15/2024

CH-SE-SU	Schem	Page	Sheet	Date

A = Added, R = Revised, D = Deleted, O = Overflow

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 23
COMMUNICATIONS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
HIGH FREQUENCY (HF) COMMUNICATION SYSTEM						
HF COMMUNICATIONS NO.1 (HF-1)	23-11-11		1	1	Dec 24/2024	ALL
				2	May 15/2024	ALL
HF COMMUNICATIONS NO.2 (HF-2)	23-11-21		1	1	Dec 24/2024	ALL
				2	May 15/2024	ALL
VERY HIGH FREQUENCY (VHF) COMMUNICATION SYSTEM						
VHF COMMUNICATION NO.1	23-12-11		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
VHF COMMUNICATION NO.2	23-12-21		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
VHF COMMUNICATION NO.3	23-12-31		1		May 15/2024	ALL
VHF/HF COMMUNICATIONS	23-12-41		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
SATCOM						
SATCOM SYSTEM POWER	23-15-11		1		May 15/2024	ALL
SATCOM SYSTEM INTERCONNECTS	23-15-12		1		May 15/2024	ALL
SATCOM HGA SUBSYSTEM CONTROL	23-15-13		1		May 15/2024	ALL
SATCOM CONTROL	23-15-15		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
SELCAL SYSTEM						
SELCAL	23-22-11		1	1	May 15/2024	ALL
				2	May 28/2025	ALL
EMERGENCY LOCATOR TRANSMITTER SYSTEM						
EMERGENCY LOCATOR TRANSMITTER	23-24-11		1	1	Nov 14/2025	ALL
				2	May 28/2025	ALL
AIRCRAFT COMMUNICATIONS ADDRESSING AND REPORTING SYSTEM (ACARS)						
CMU POWER & CONTROL	23-27-31		1		May 15/2024	ALL
CMU OUTPUT 1 INTERFACES - FMC 1/MCDU 1/PRINTER	23-27-32		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 23
COMMUNICATIONS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
CMU OUTPUT 2 INTERFACES - FMC 2/MCDU 2/DFDAU/MIDU	23-27-33		1		May 15/2024	ALL
OUTPUT BUS 3 INTERFACES - CABIN TERMINALS	23-27-34		1		May 15/2024	ALL
ARINC 716 VHF 3/ SINGLE FMC 702 INTERFACES	23-27-35		1		May 15/2024	ALL
CMU OUTPUT 4 INTERFACES - SATCOM/HF	23-27-36		1		May 15/2024	ALL
CMU OUTPUT 6/7 INTERFACES - COMMUNICATIONS	23-27-37		1		May 15/2024	ALL
CMU 000I, CREW ADVISORIES AND OUTPUT 8	23-27-38		1		May 15/2024	ALL
CMU INTERFACES - DATA LOADER PROGRAM PINS	23-27-39		1		May 15/2024	ALL
PASSENGER ADDRESS SYSTEM						
PASSENGER ADDRESS ATTENDANTS PANELS	23-31-01		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL
PASSENGER ADDRESS AND ENTERTAINMENT LEFT SIDE	23-31-02		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
PASSENGER ADDRESS AND ENTERTAINMENT RIGHT SIDE	23-31-03		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
PASSENGER ADDRESS ATTENDANTS SPEAKERS	23-31-04		1		May 15/2024	ALL
PASSENGER ADDRESS PRE-RECORDED ANNOUNCEMENTS	23-31-06		1		May 15/2024	ALL
SERVICE INTERPHONE SYSTEM						
SERVICE INTERPHONE JACKS	23-41-11		1		Nov 14/2025	ALL
CABIN INTERPHONE SYSTEM						
CABIN INTERPHONE	23-42-11		1		May 15/2024	ALL
CABIN INTERPHONE - ATTENDANT HANDSETS	23-42-12		1		May 15/2024	ALL
FORWARD ATTENDANT CONTROL PANEL	23-42-14		1		May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 23
COMMUNICATIONS

Title	CH-SE-SU	Schem	Page	Sheet	Date	Effectivity
AFT ATTENDANT CONTROL PANEL	23-42-15		1		May 15/2024	ALL
GROUND CREW CALL SYSTEM						
GROUND CREW CALL	23-43-11		1		May 15/2024	ALL
FLIGHT INTERPHONE SYSTEM						
AUDIO INTEGRATING CAPTAIN	23-51-11		1		May 15/2024	ALL
AUDIO INTEGRATING FIRST OFFICER	23-51-21		1		May 15/2024	ALL
AUDIO INTEGRATING OBSERVER	23-51-31		1		Dec 24/2024	ALL
AUDIO INTEGRATING ELECTRONIC SHELF	23-51-51		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
AUDIO AND VIDEO MONITORING						
VIDEO SURVEILLANCE SYSTEM	23-70-11		1	1	Nov 14/2025	ALL
				2	May 15/2024	ALL
VOICE RECORDER SYSTEM						
COCKPIT VOICE RECORDER	23-71-01		1	1	May 15/2024	ALL
				2	May 15/2024	ALL
				3	May 15/2024	ALL

ECCN 9E991 BOEING PROPRIETARY - See title page for details

CHAPTER 23
COMMUNICATIONS


CH-SE-SU	Title
23-42-15	AFT ATTENDANT CONTROL PANEL
23-27-35	ARINC 716 VHF 3/ SINGLE FMC 702 INTERFACES
23-51-11	AUDIO INTEGRATING CAPTAIN
23-51-51	AUDIO INTEGRATING ELECTRONIC SHELF
23-51-21	AUDIO INTEGRATING FIRST OFFICER
23-51-31	AUDIO INTEGRATING OBSERVER
23-42-11	CABIN INTERPHONE
23-42-12	CABIN INTERPHONE - ATTENDANT HANDSETS
23-27-38	CMU 000I, CREW ADVISORIES AND OUTPUT 8
23-27-39	CMU INTERFACES - DATA LOADER PROGRAM PINS
23-27-32	CMU OUTPUT 1 INTERFACES - FMC 1/MCDU 1/PRINTER
23-27-33	CMU OUTPUT 2 INTERFACES - FMC 2/MCDU 2/DFDAU/MIDU
23-27-36	CMU OUTPUT 4 INTERFACES - SATCOM/HF
23-27-37	CMU OUTPUT 6/7 INTERFACES - COMMUNICATIONS
23-27-31	CMU POWER & CONTROL
23-71-01	COCKPIT VOICE RECORDER
23-24-11	EMERGENCY LOCATOR TRANSMITTER
23-42-14	FORWARD ATTENDANT CONTROL PANEL
23-43-11	GROUND CREW CALL
23-11-11	HF COMMUNICATIONS NO.1 (HF-1)
23-11-21	HF COMMUNICATIONS NO.2 (HF-2)
23-27-34	OUTPUT BUS 3 INTERFACES - CABIN TERMINALS
23-31-02	PASSENGER ADDRESS AND ENTERTAINMENT LEFT SIDE
23-31-03	PASSENGER ADDRESS AND ENTERTAINMENT RIGHT SIDE
23-31-01	PASSENGER ADDRESS ATTENDANTS PANELS
23-31-04	PASSENGER ADDRESS ATTENDANTS SPEAKERS
23-31-06	PASSENGER ADDRESS PRE-RECORDED ANNOUNCEMENTS
23-15-15	SATCOM CONTROL
23-15-13	SATCOM HGA SUBSYSTEM CONTROL
23-15-12	SATCOM SYSTEM INTERCONNECTS
23-15-11	SATCOM SYSTEM POWER
23-22-11	SELCAL
23-41-11	SERVICE INTERPHONE JACKS
23-12-11	VHF COMMUNICATION NO.1
23-12-21	VHF COMMUNICATION NO.2
23-12-31	VHF COMMUNICATION NO.3
23-12-41	VHF/HF COMMUNICATIONS
23-70-11	VIDEO SURVEILLANCE SYSTEM

23-ALPHABETICAL INDEX

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
468

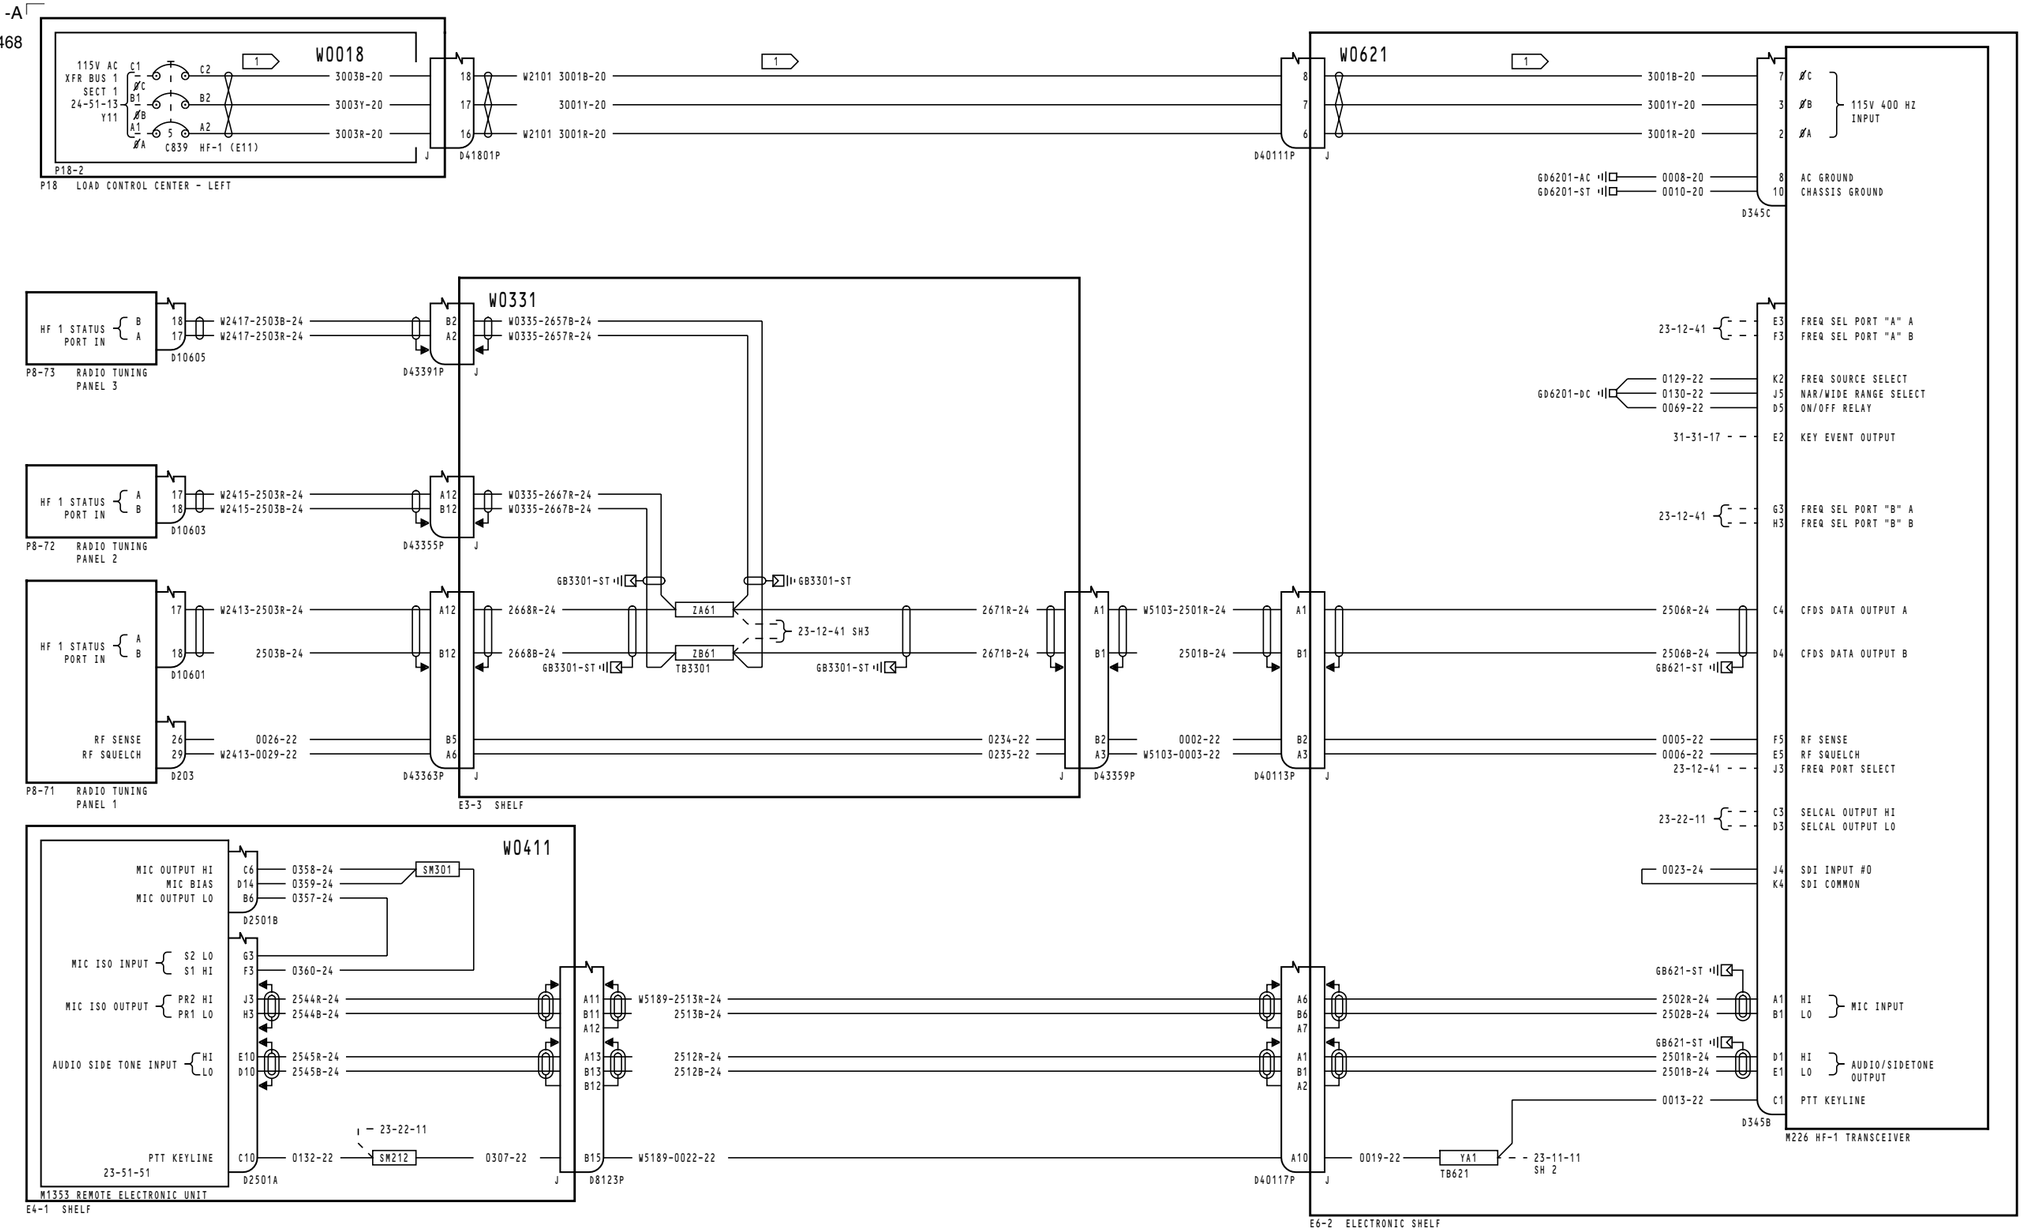


NOTES:

1 THESE WIRES ARE CAT 2 DUE TO MAXIMUM OPERATING CURRENT OF 3.7A COUPLING REQ AS DESIGNED WILL NEVER BE EXCEEDED (EFIX: 73X-1610-0004)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-11-11

Page 1
Sheet 1
Dec 24/2024

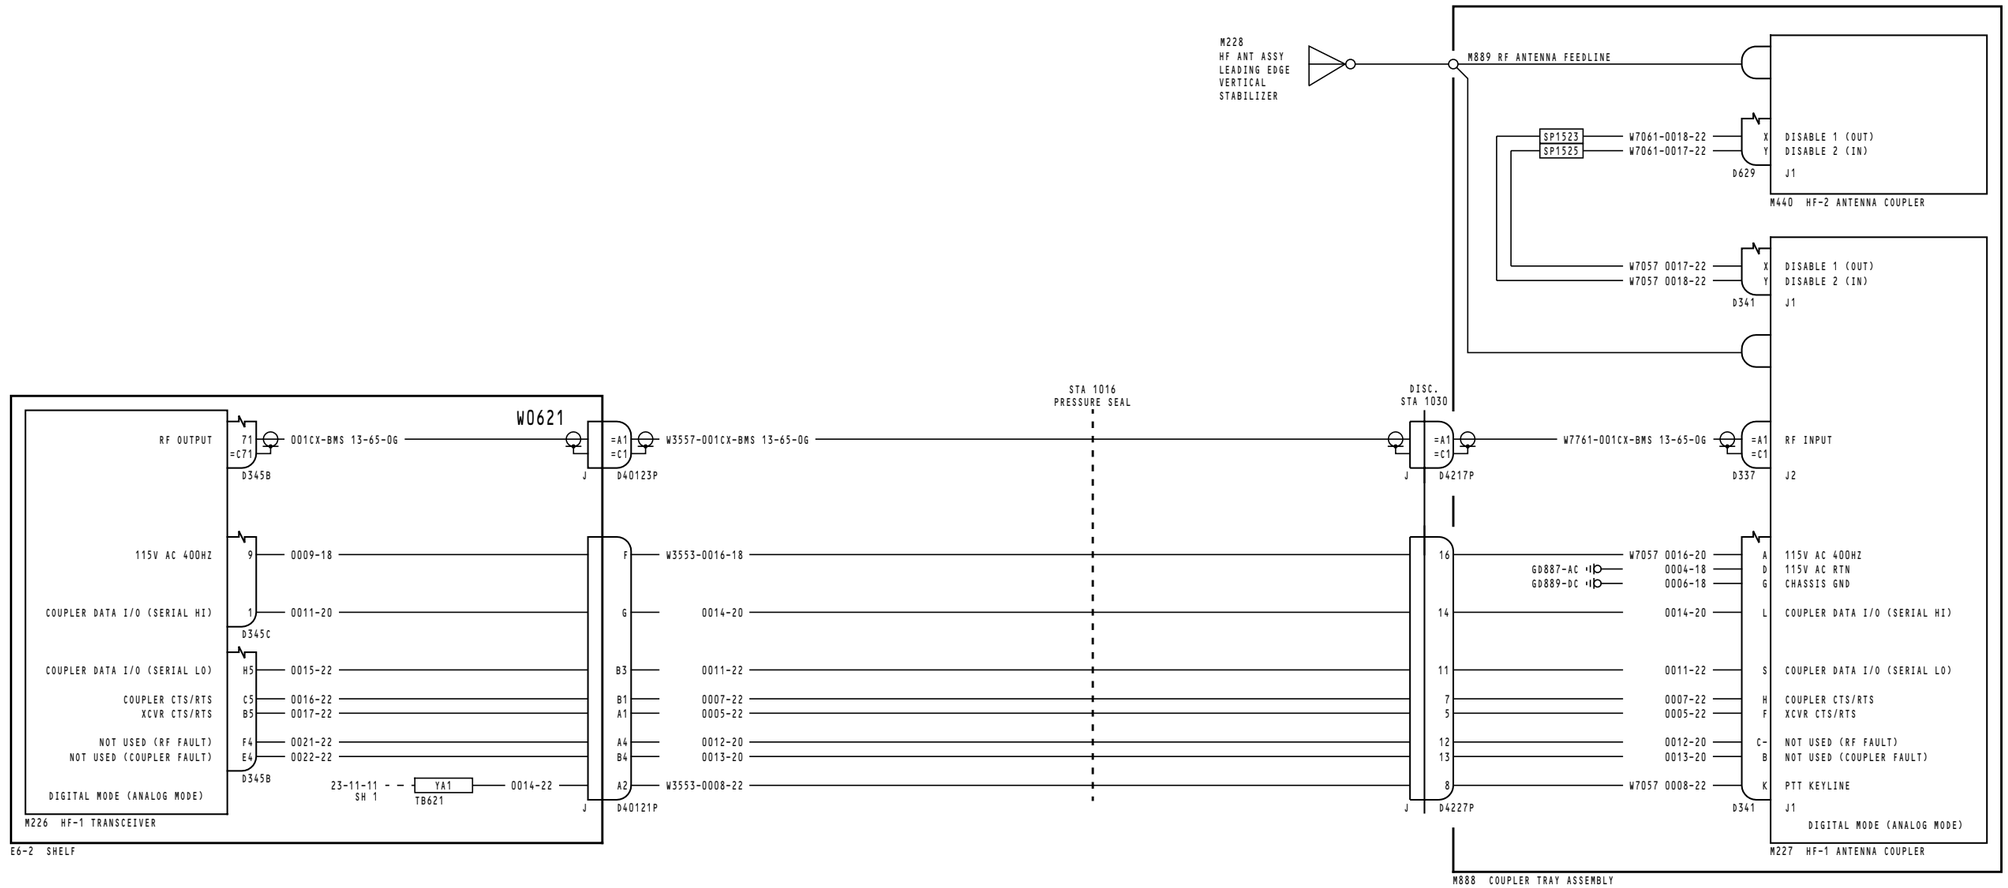


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-11-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
460

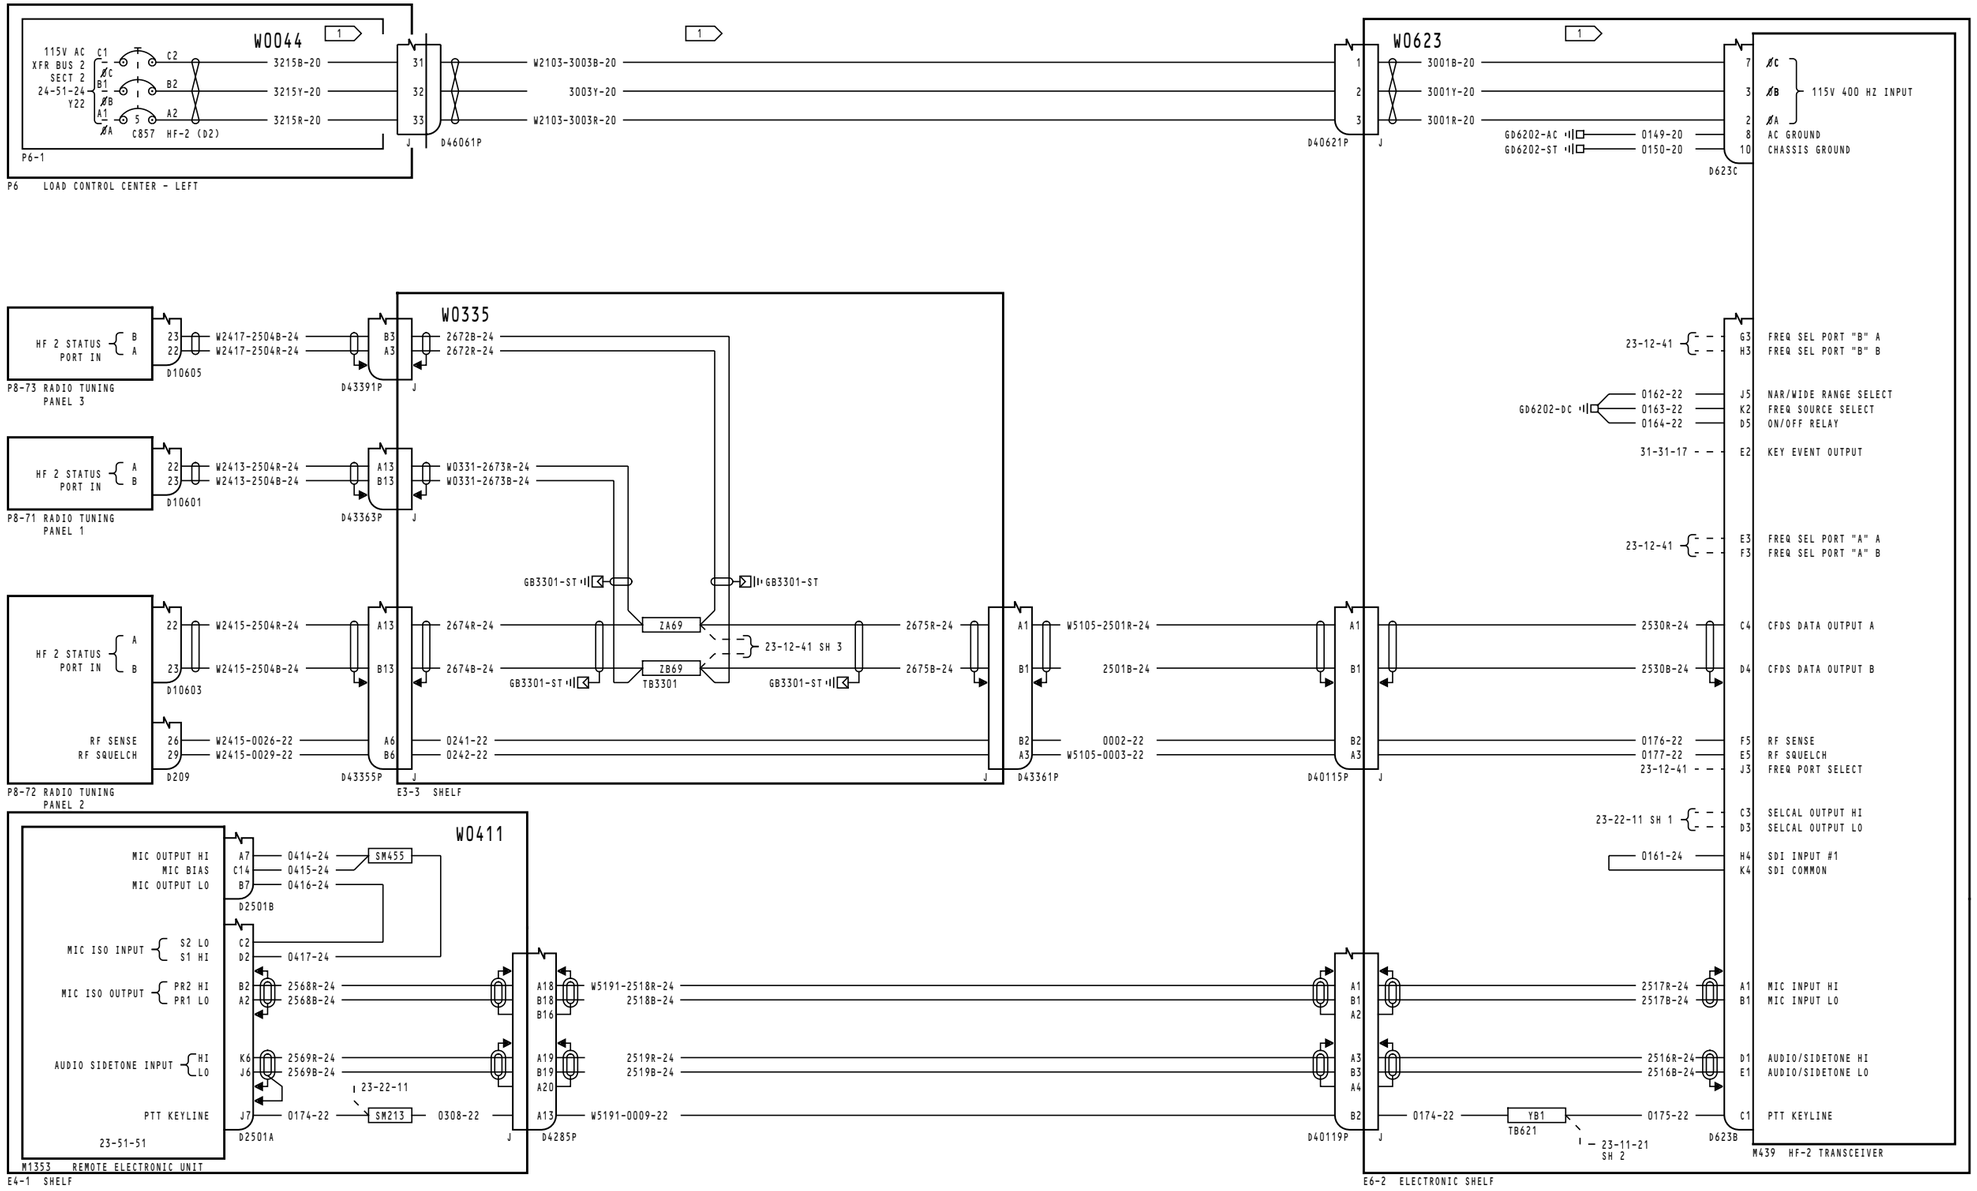


NOTES:

1 THESE WIRES ARE CAT 2 DUE TO MAXIMUM OPERATING CURRENT OF 3.7A COUPLING REQ AS DESIGNED WILL NEVER BE EXCEEDED (EFIX:73X-1610-0004)

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-11-21

Page 1
Sheet 1
Dec 24/2024

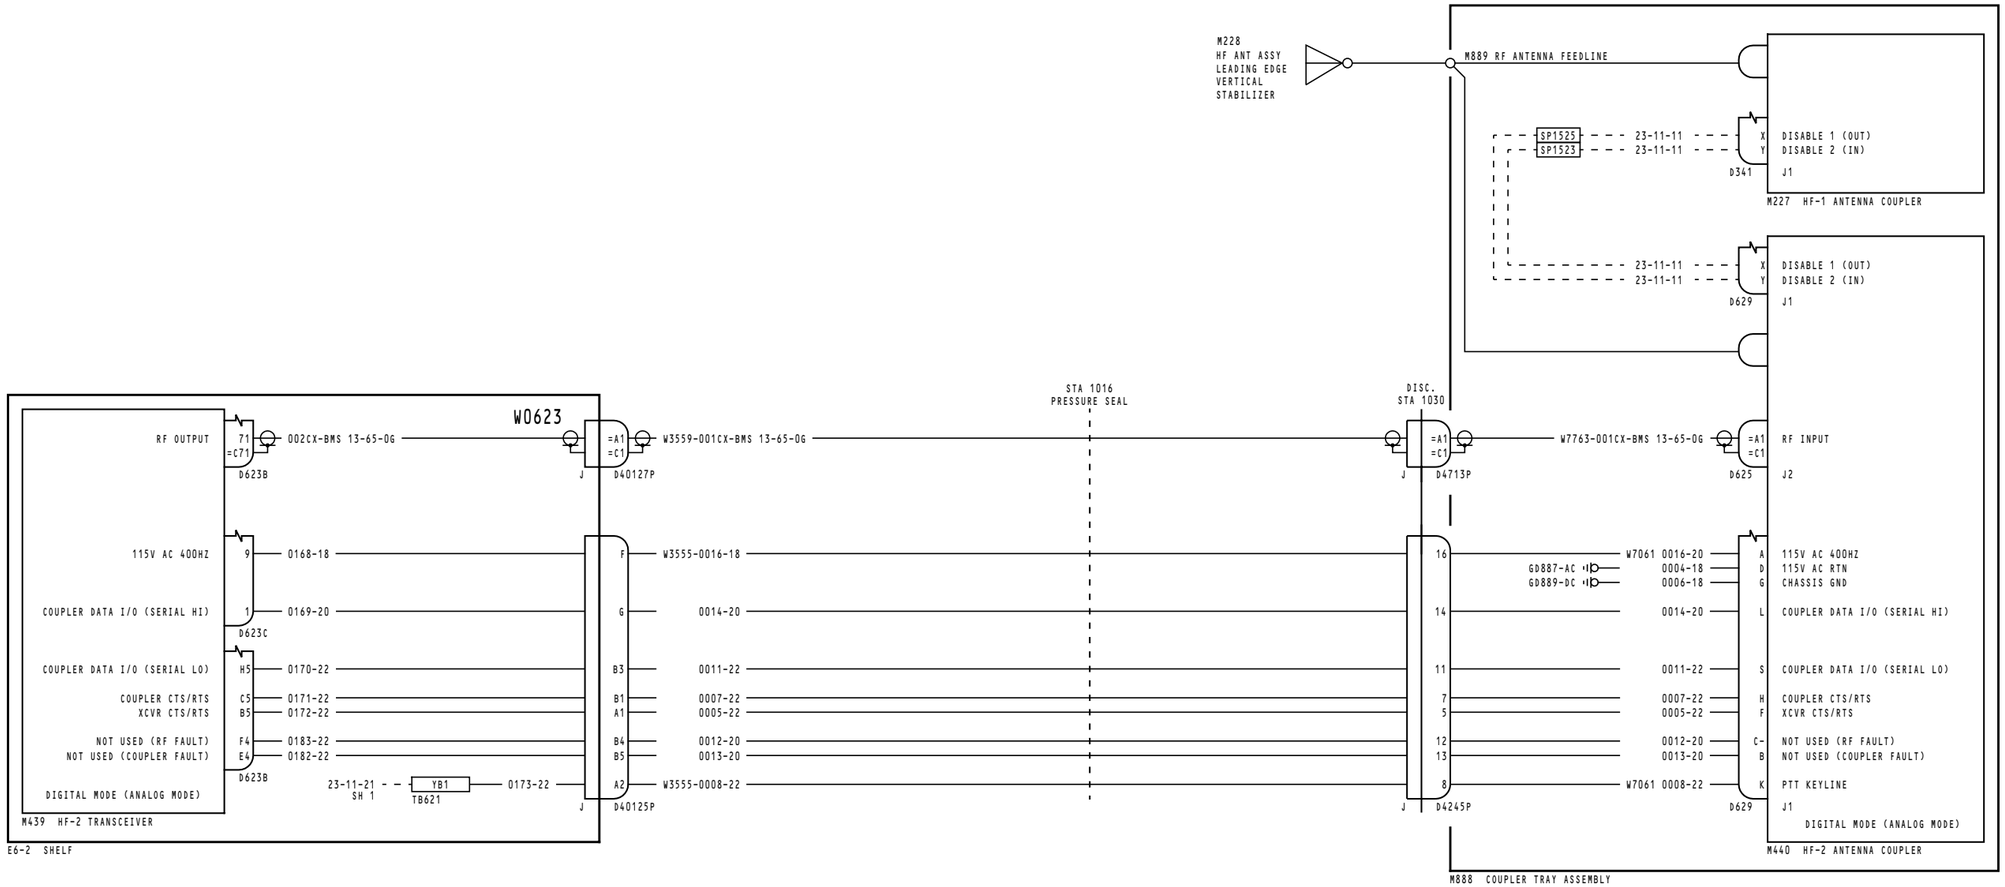


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-11-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
853

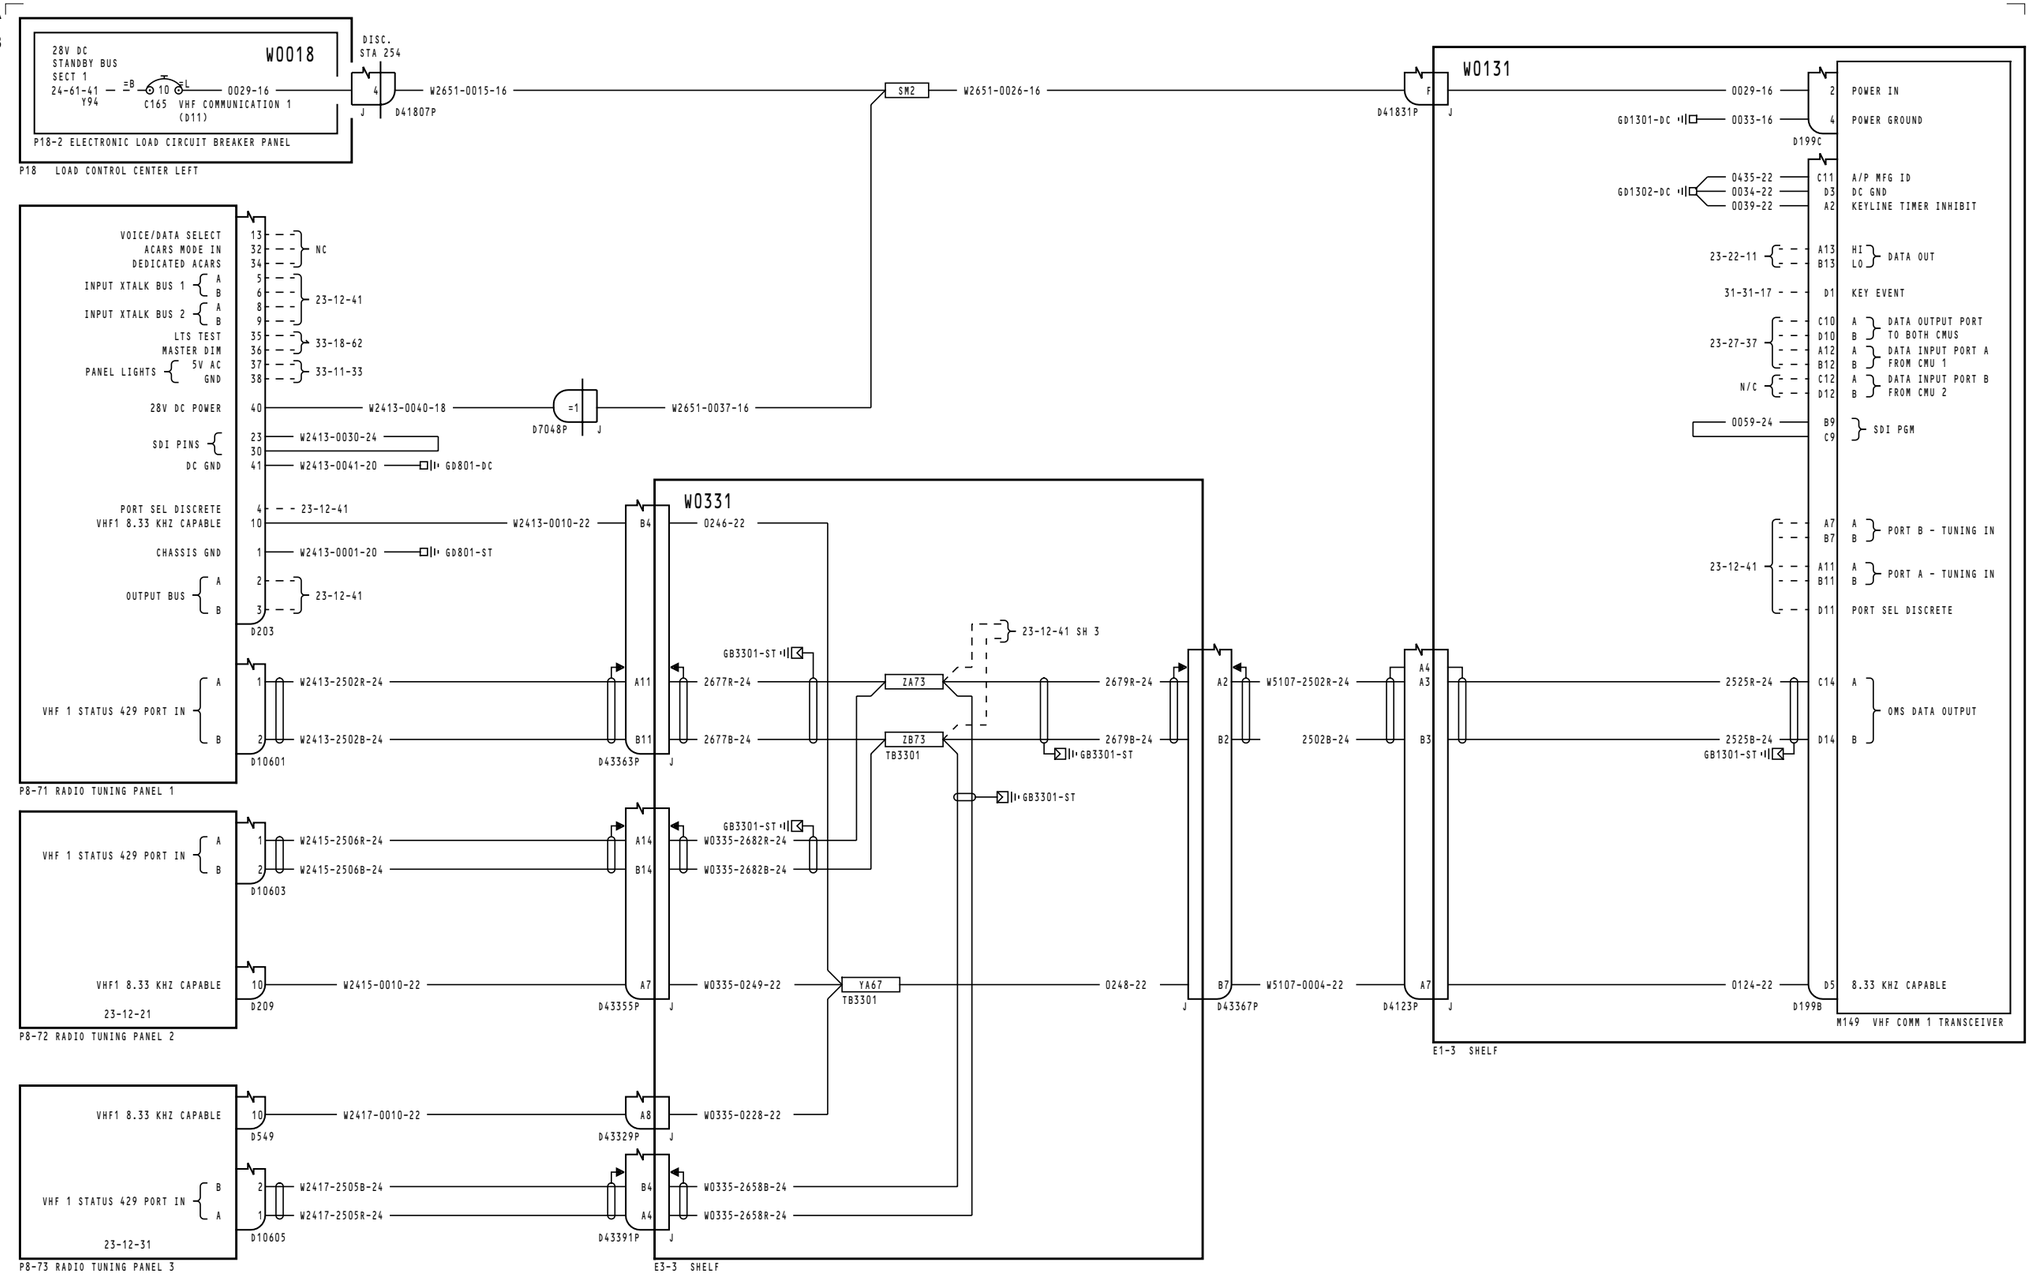

ALL

VHF COMMUNICATION NO.1

D280AM1215

23-12-11

Page 1
Sheet 1
May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-12-11

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

211

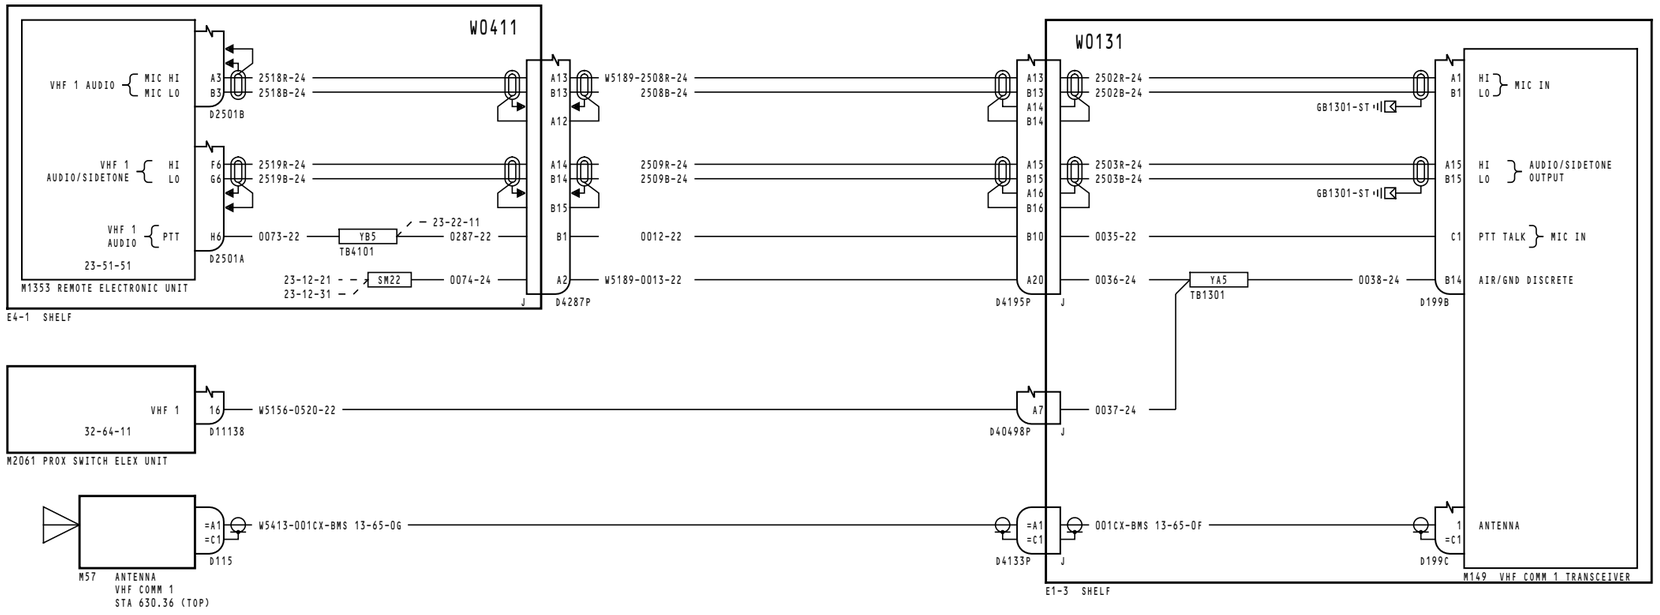


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-12-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

1025

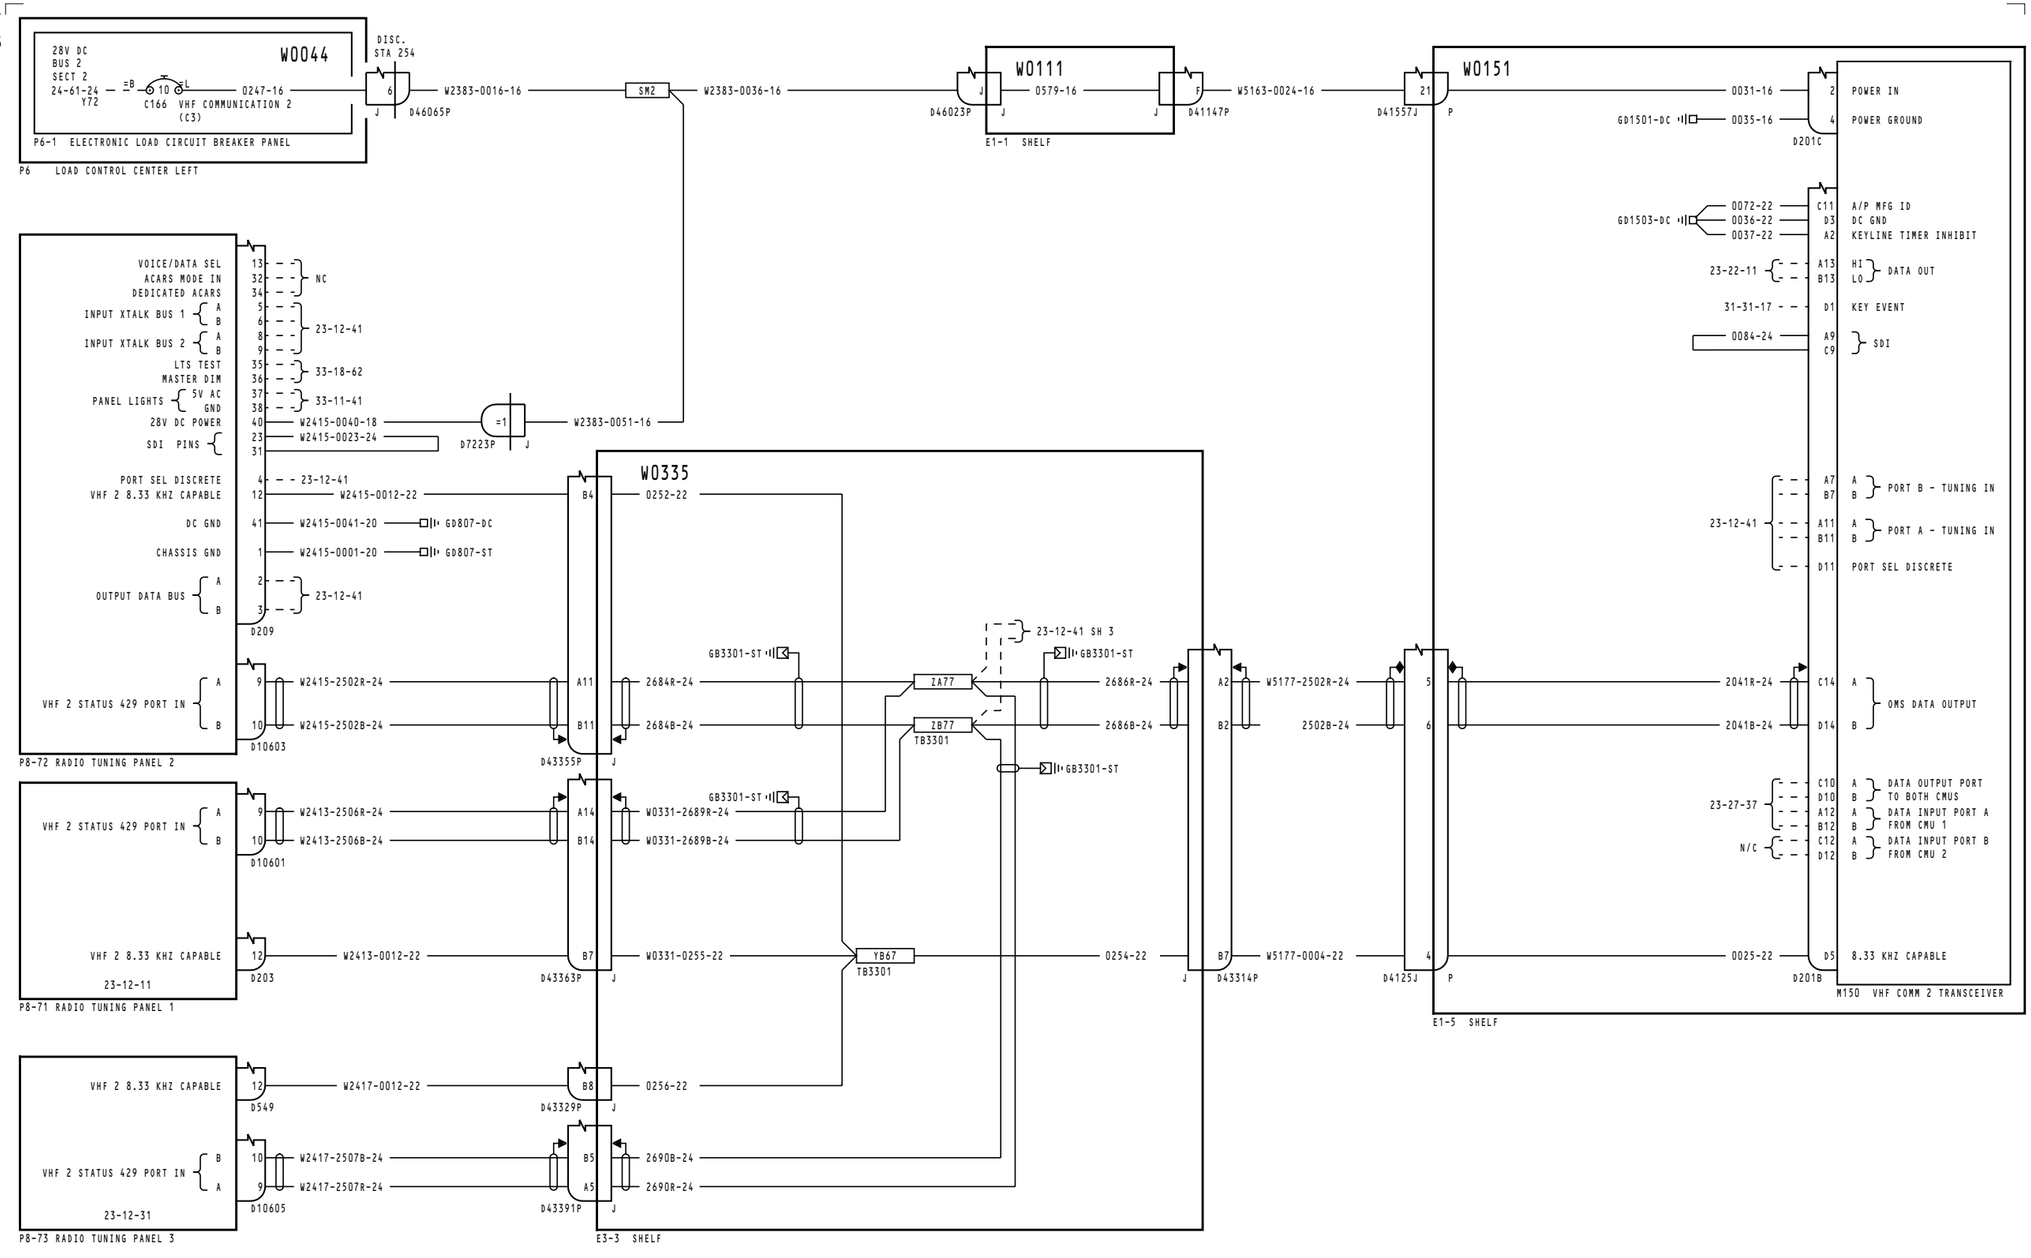


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-12-21

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

199

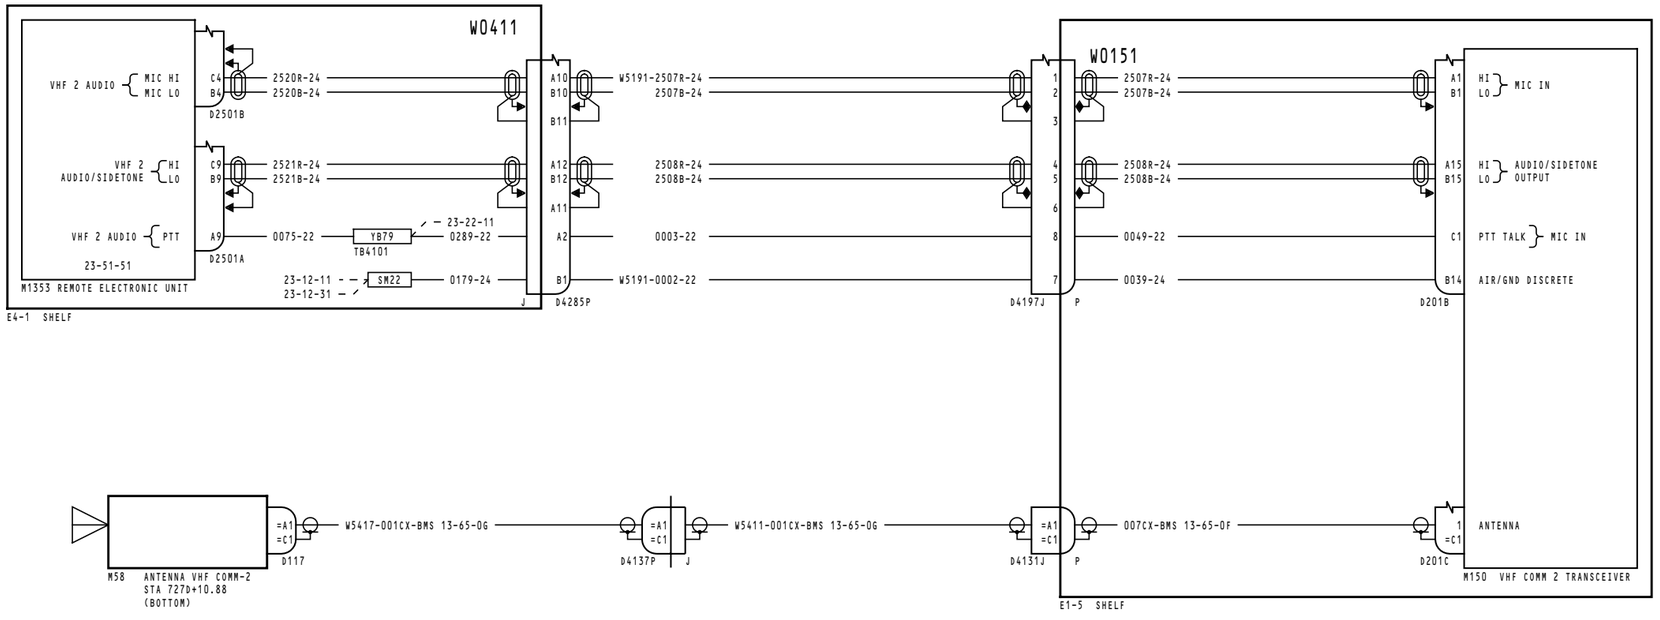


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-12-21

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

939

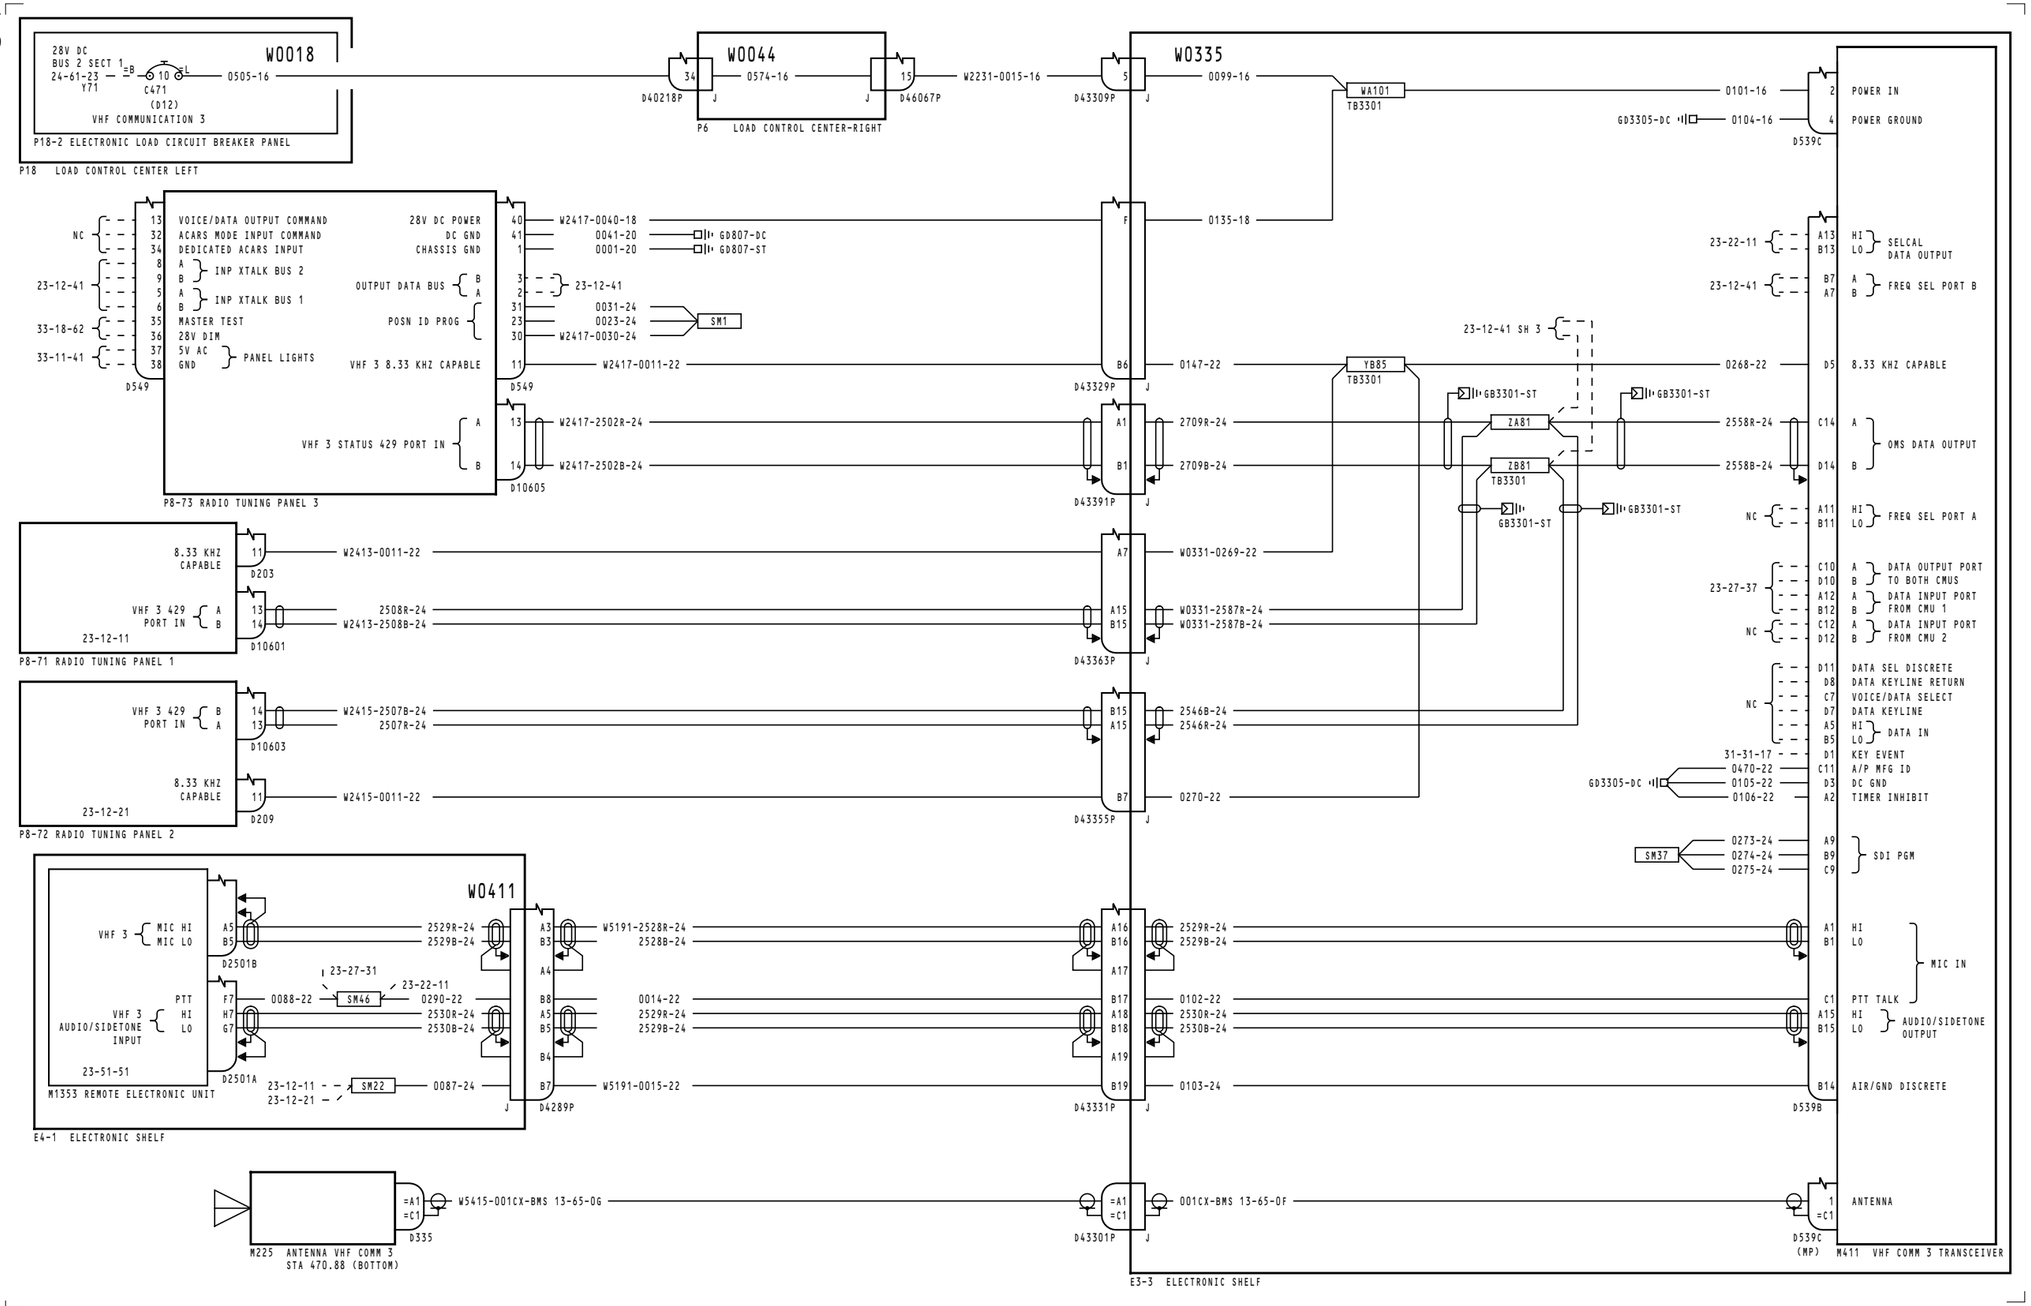

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-12-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

445

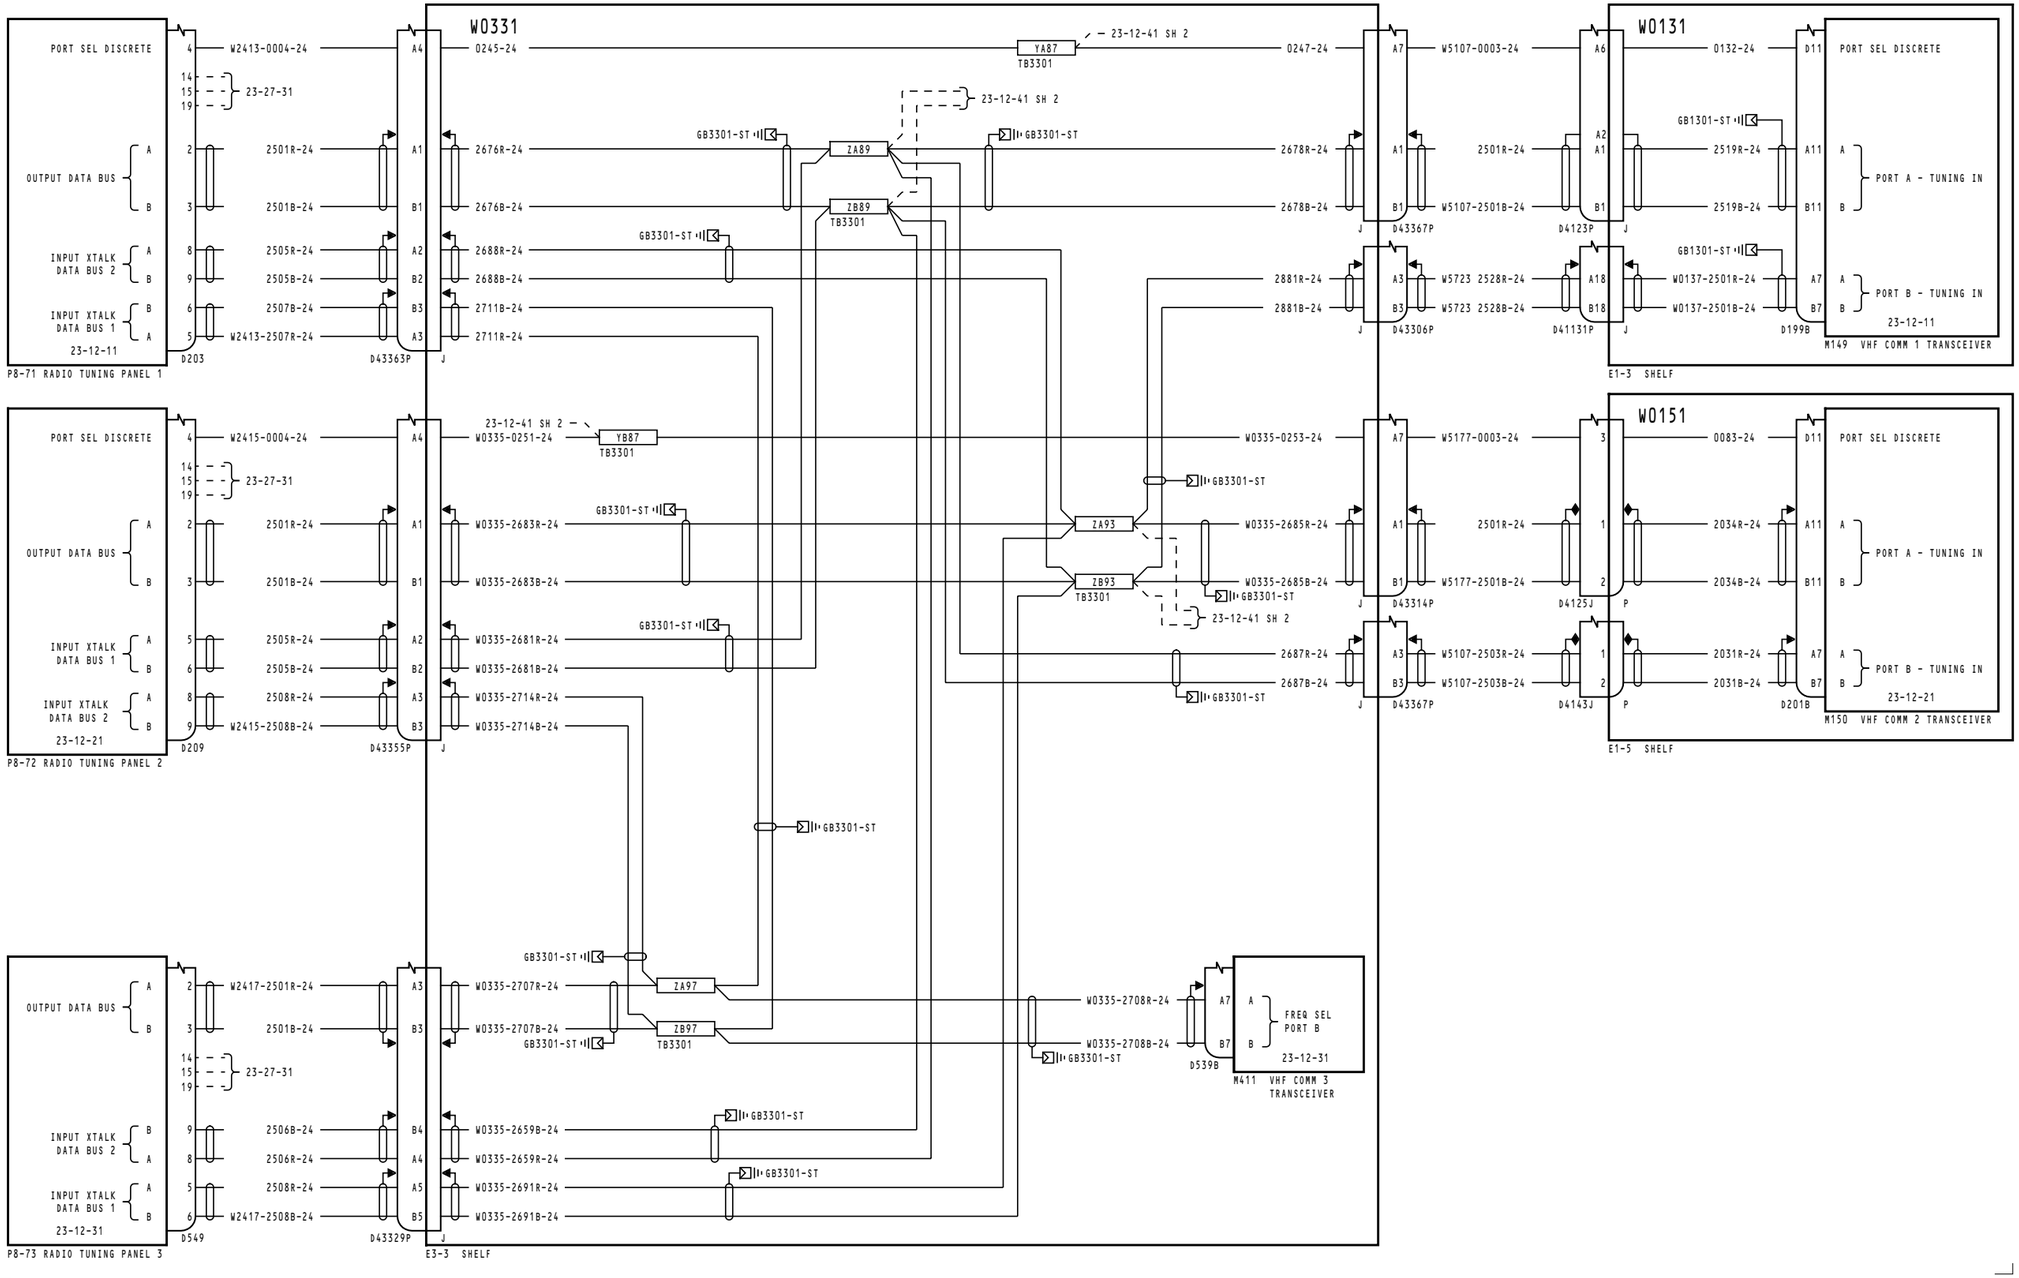


23-12-41

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A
200

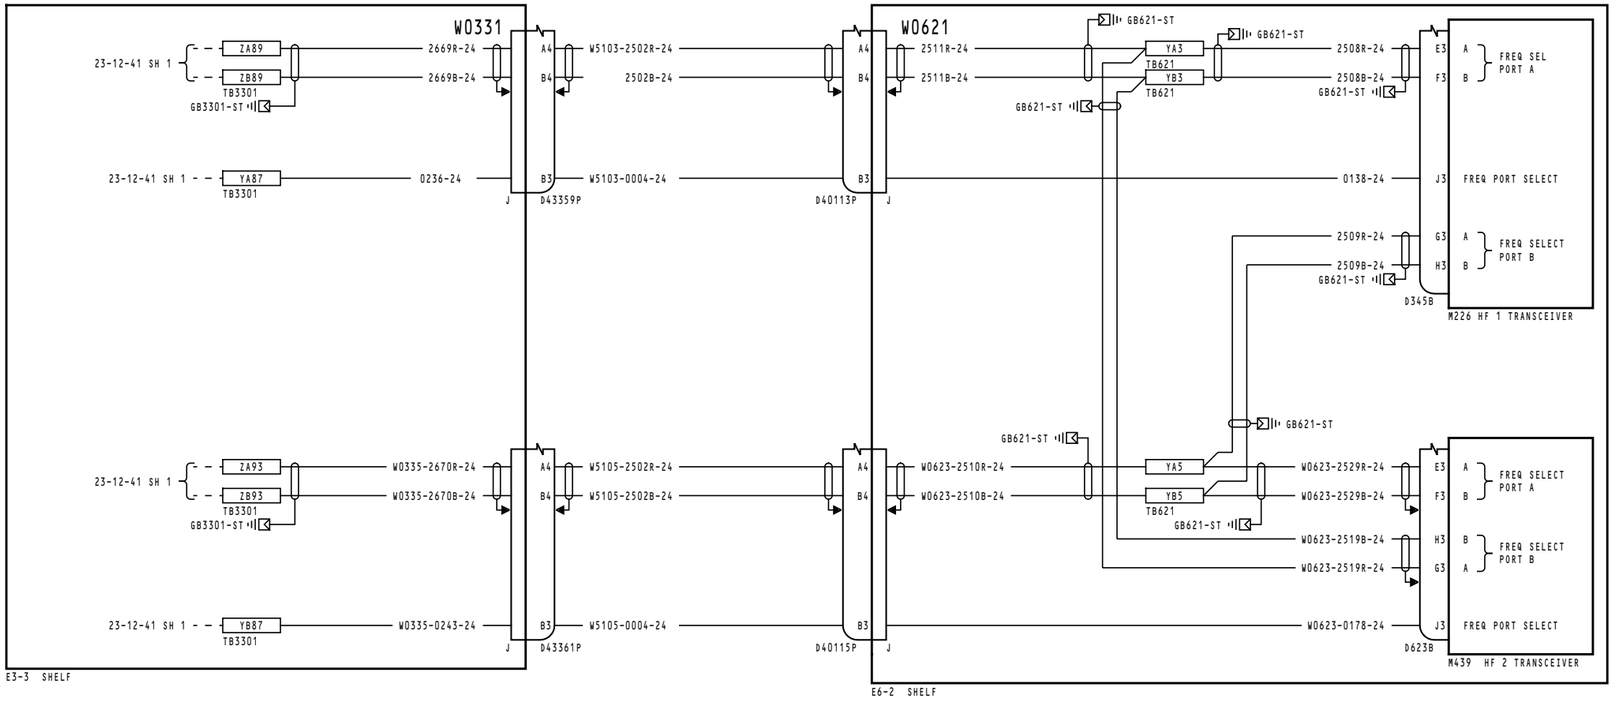


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-12-41

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
14

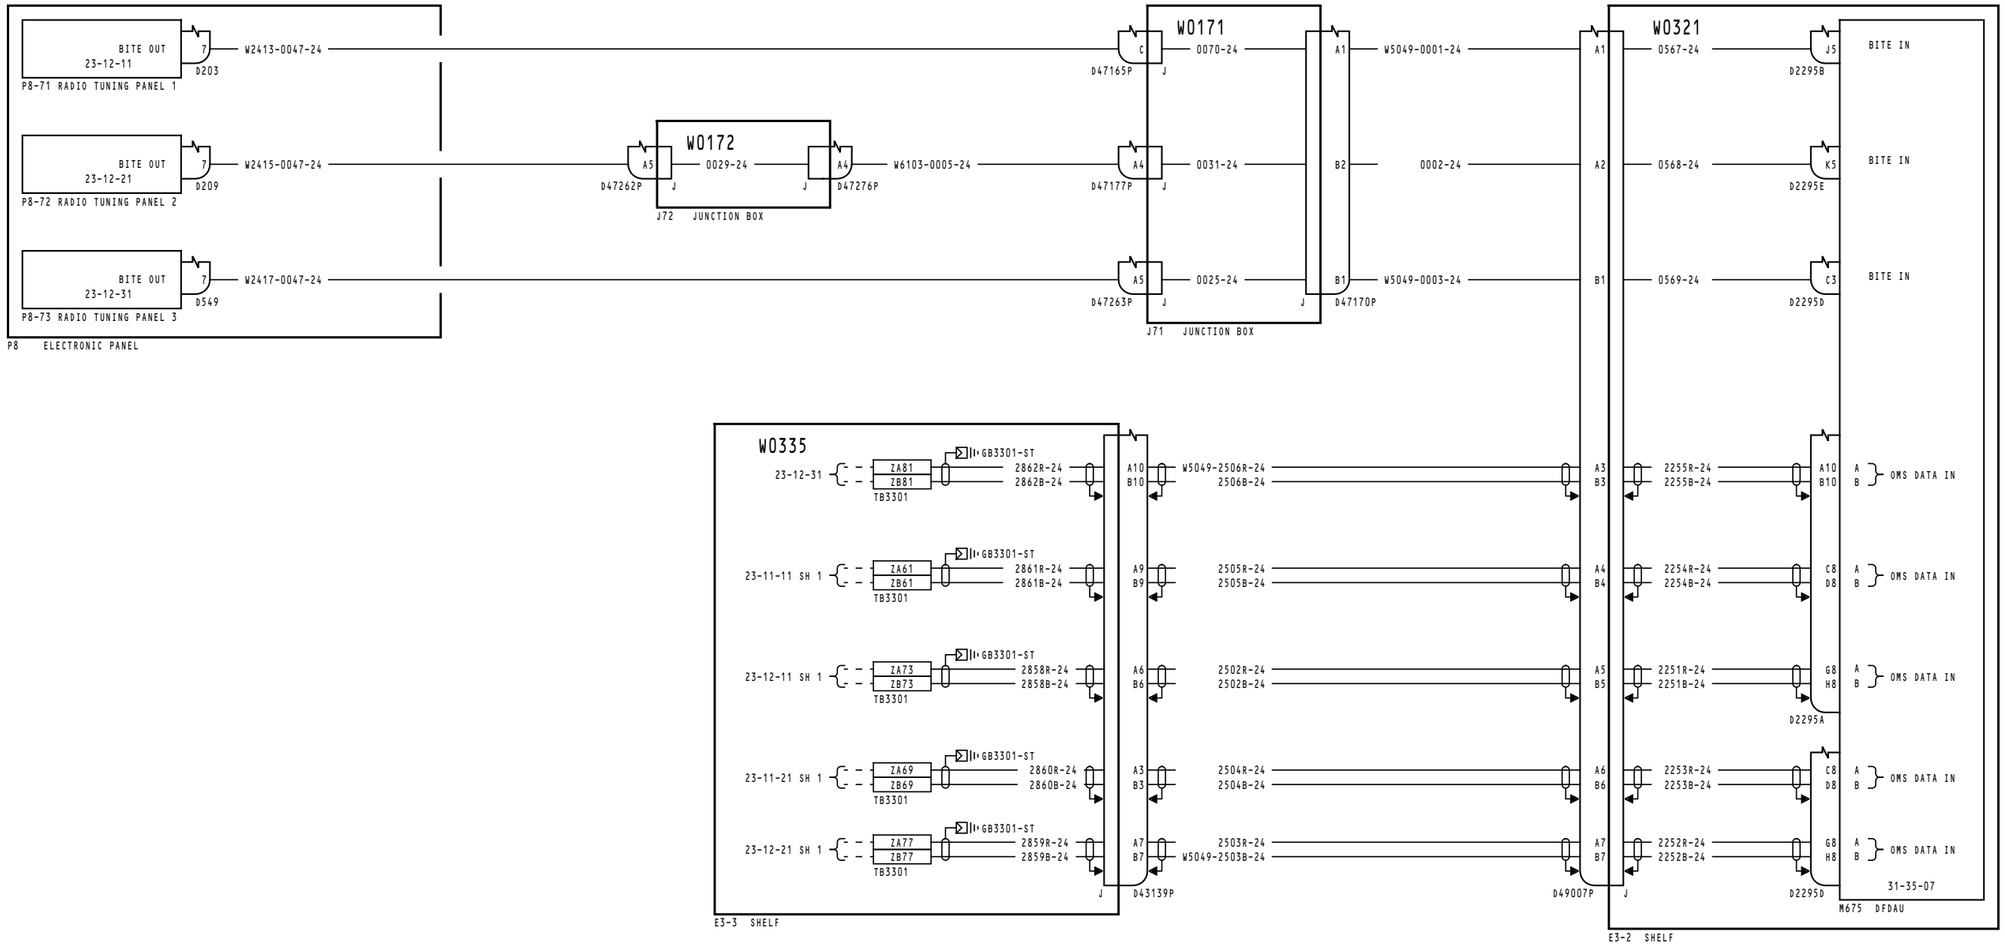

23-12-41

Page 1
Sheet 3
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

--

44



ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-15-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
69

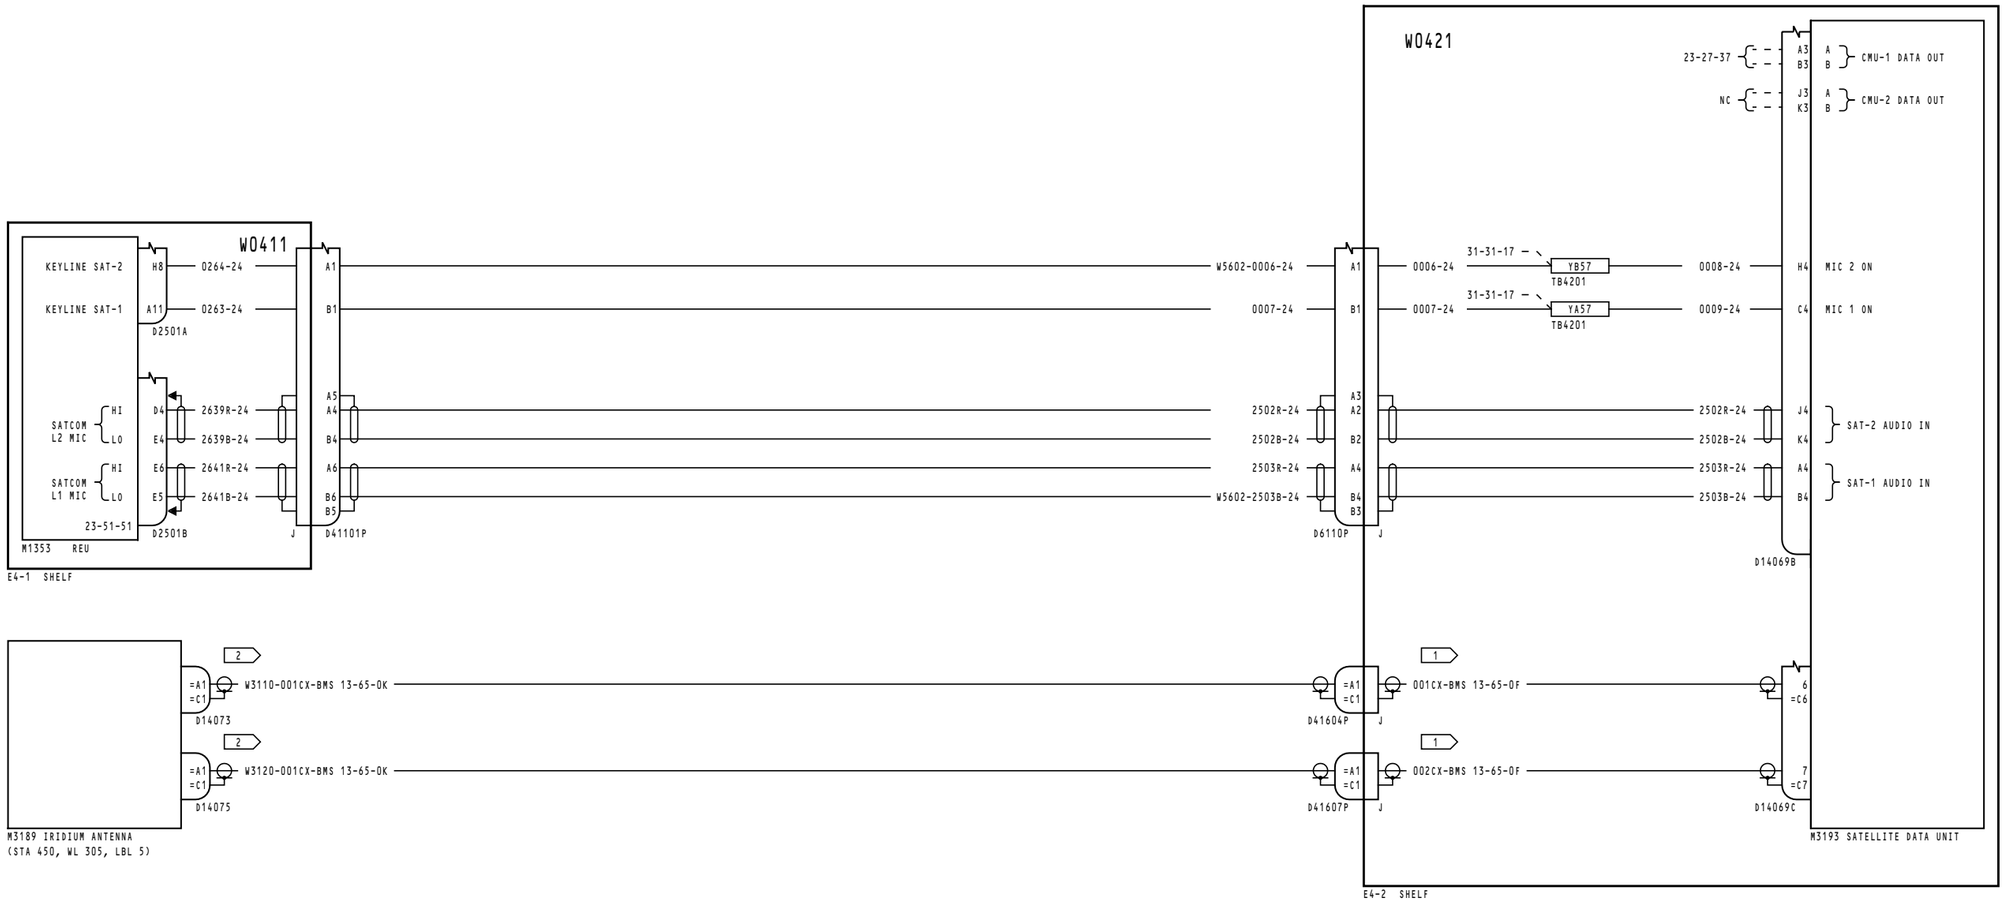

NOTES:

1. COAX CABLE TYPE BMS 13-65 TYPE OF. MAX LENGTH OF 36" BETWEEN E4-2 DISCONNECT AND D14069C
2. COAX CABLE TYPE BMS 13-65 TYPE OK. MAX LENGTH OF 28' BETWEEN E4-2 DISCONNECT AND D14073 AND D14075
* THIS WIRE MAY BE ROUTED WITH CATEGORY 2 WIRE IF SHIELDED

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-15-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
49

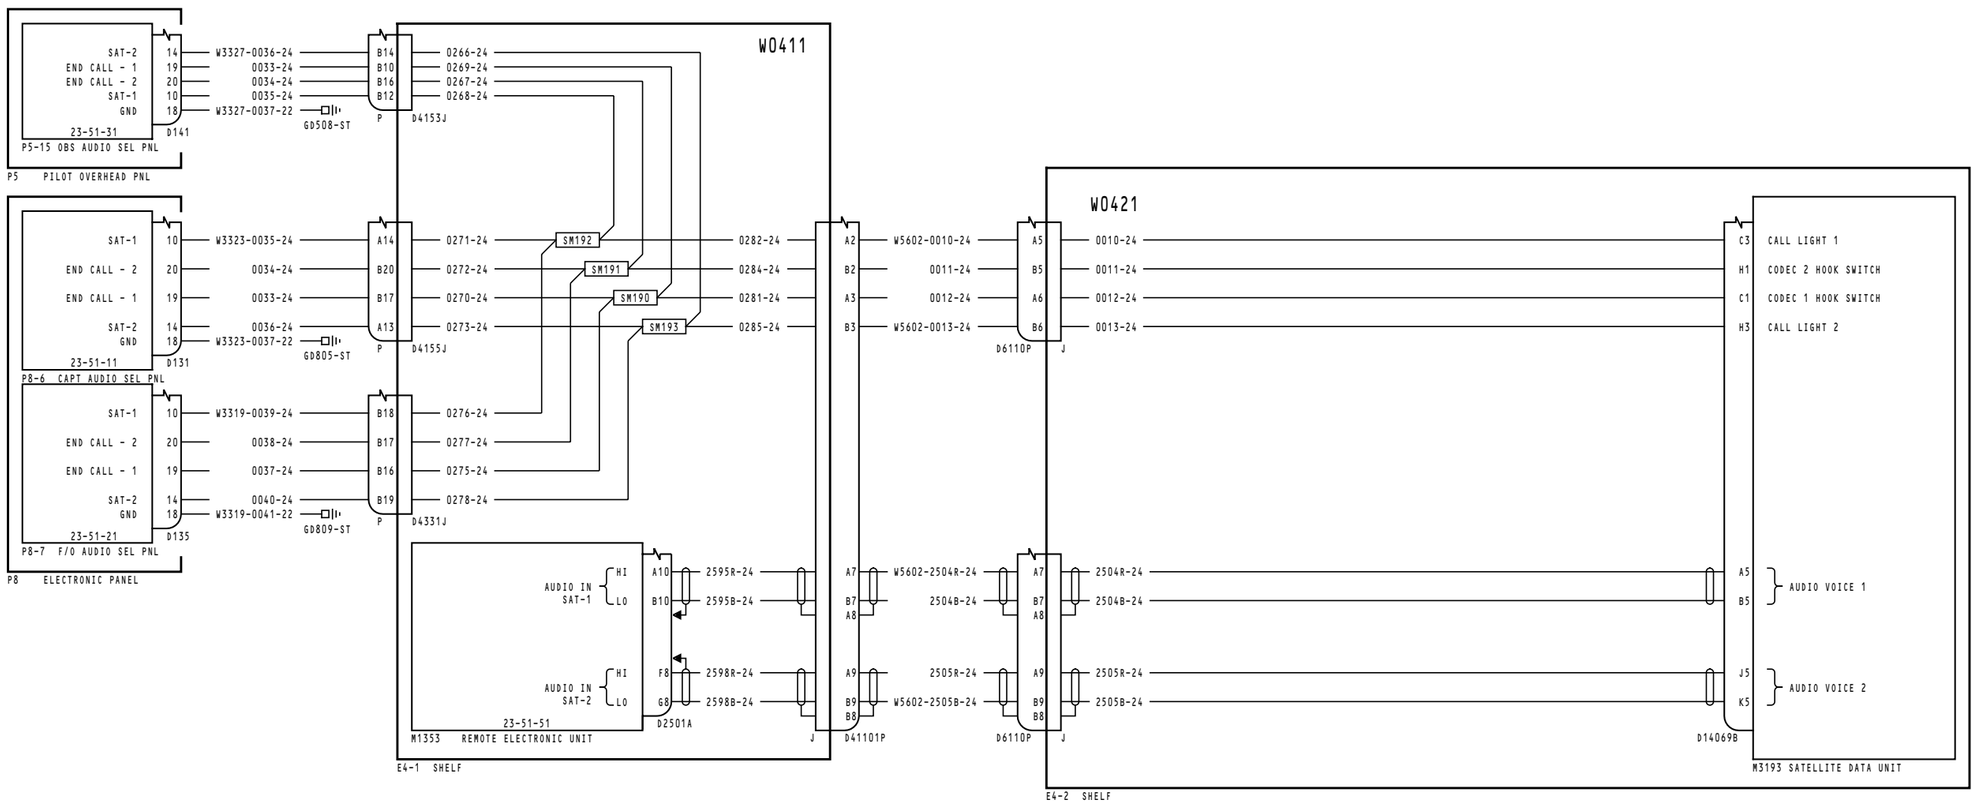

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-15-13

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
63

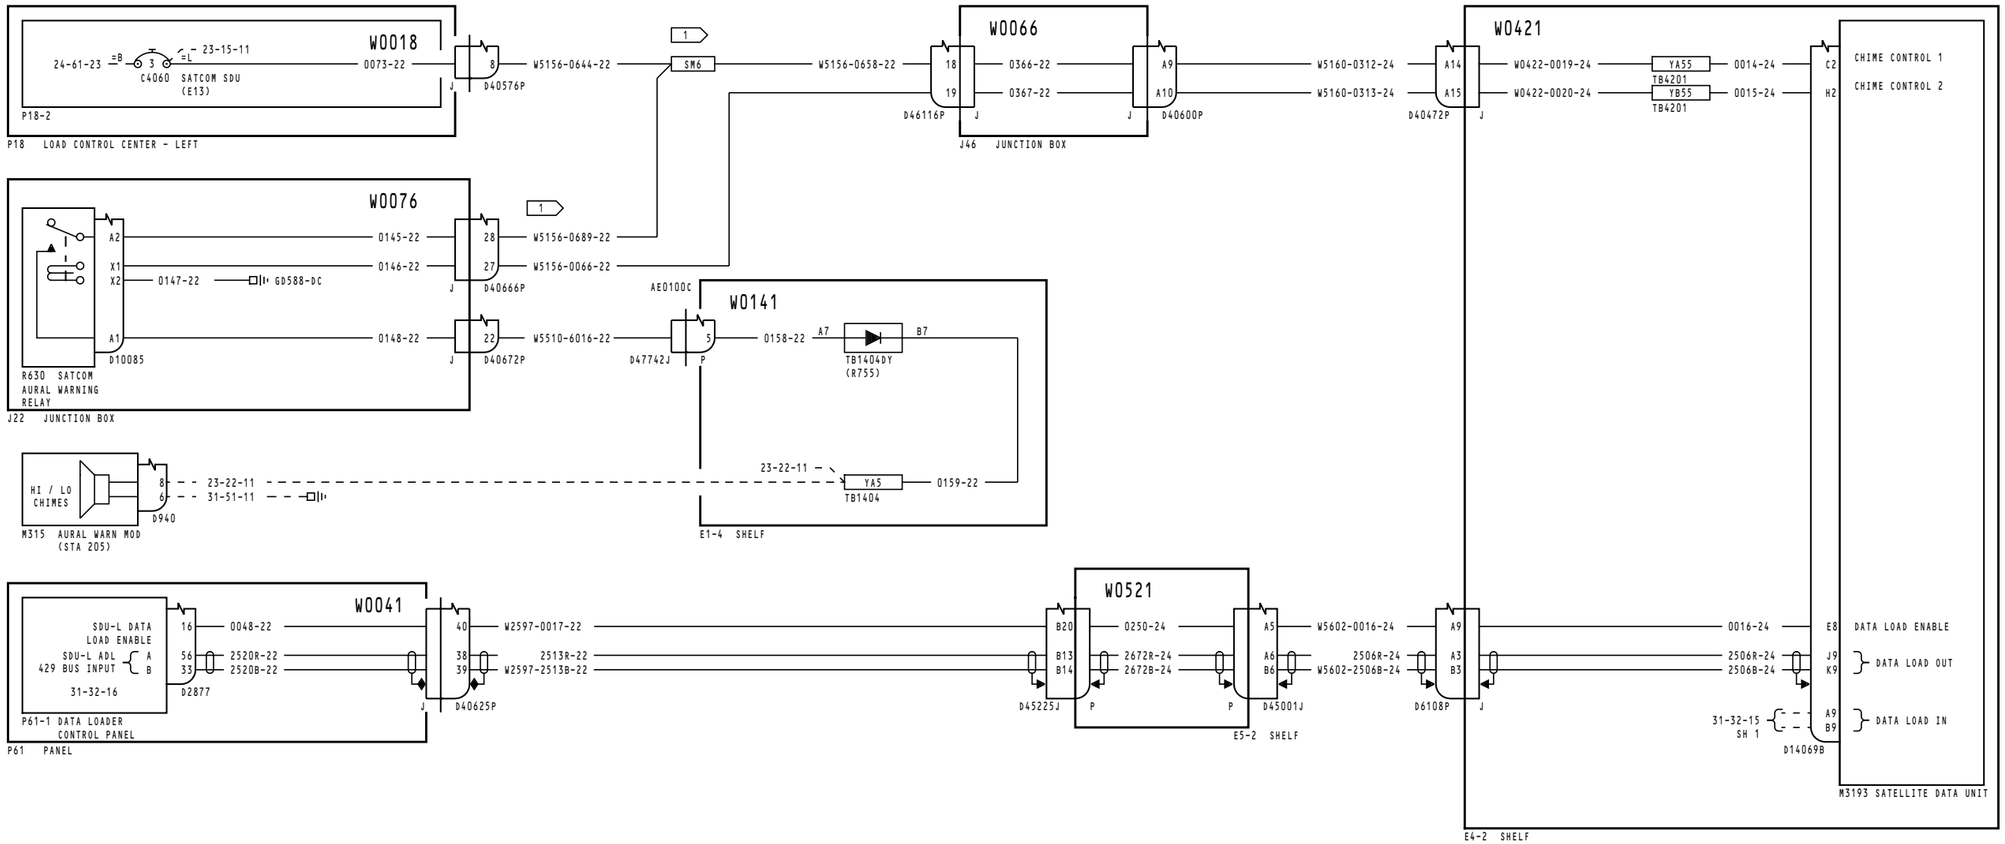


NOTES:

1 LOCATE SPLICE WITHIN 6 INCHES OF D40666P

23-15-15

Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

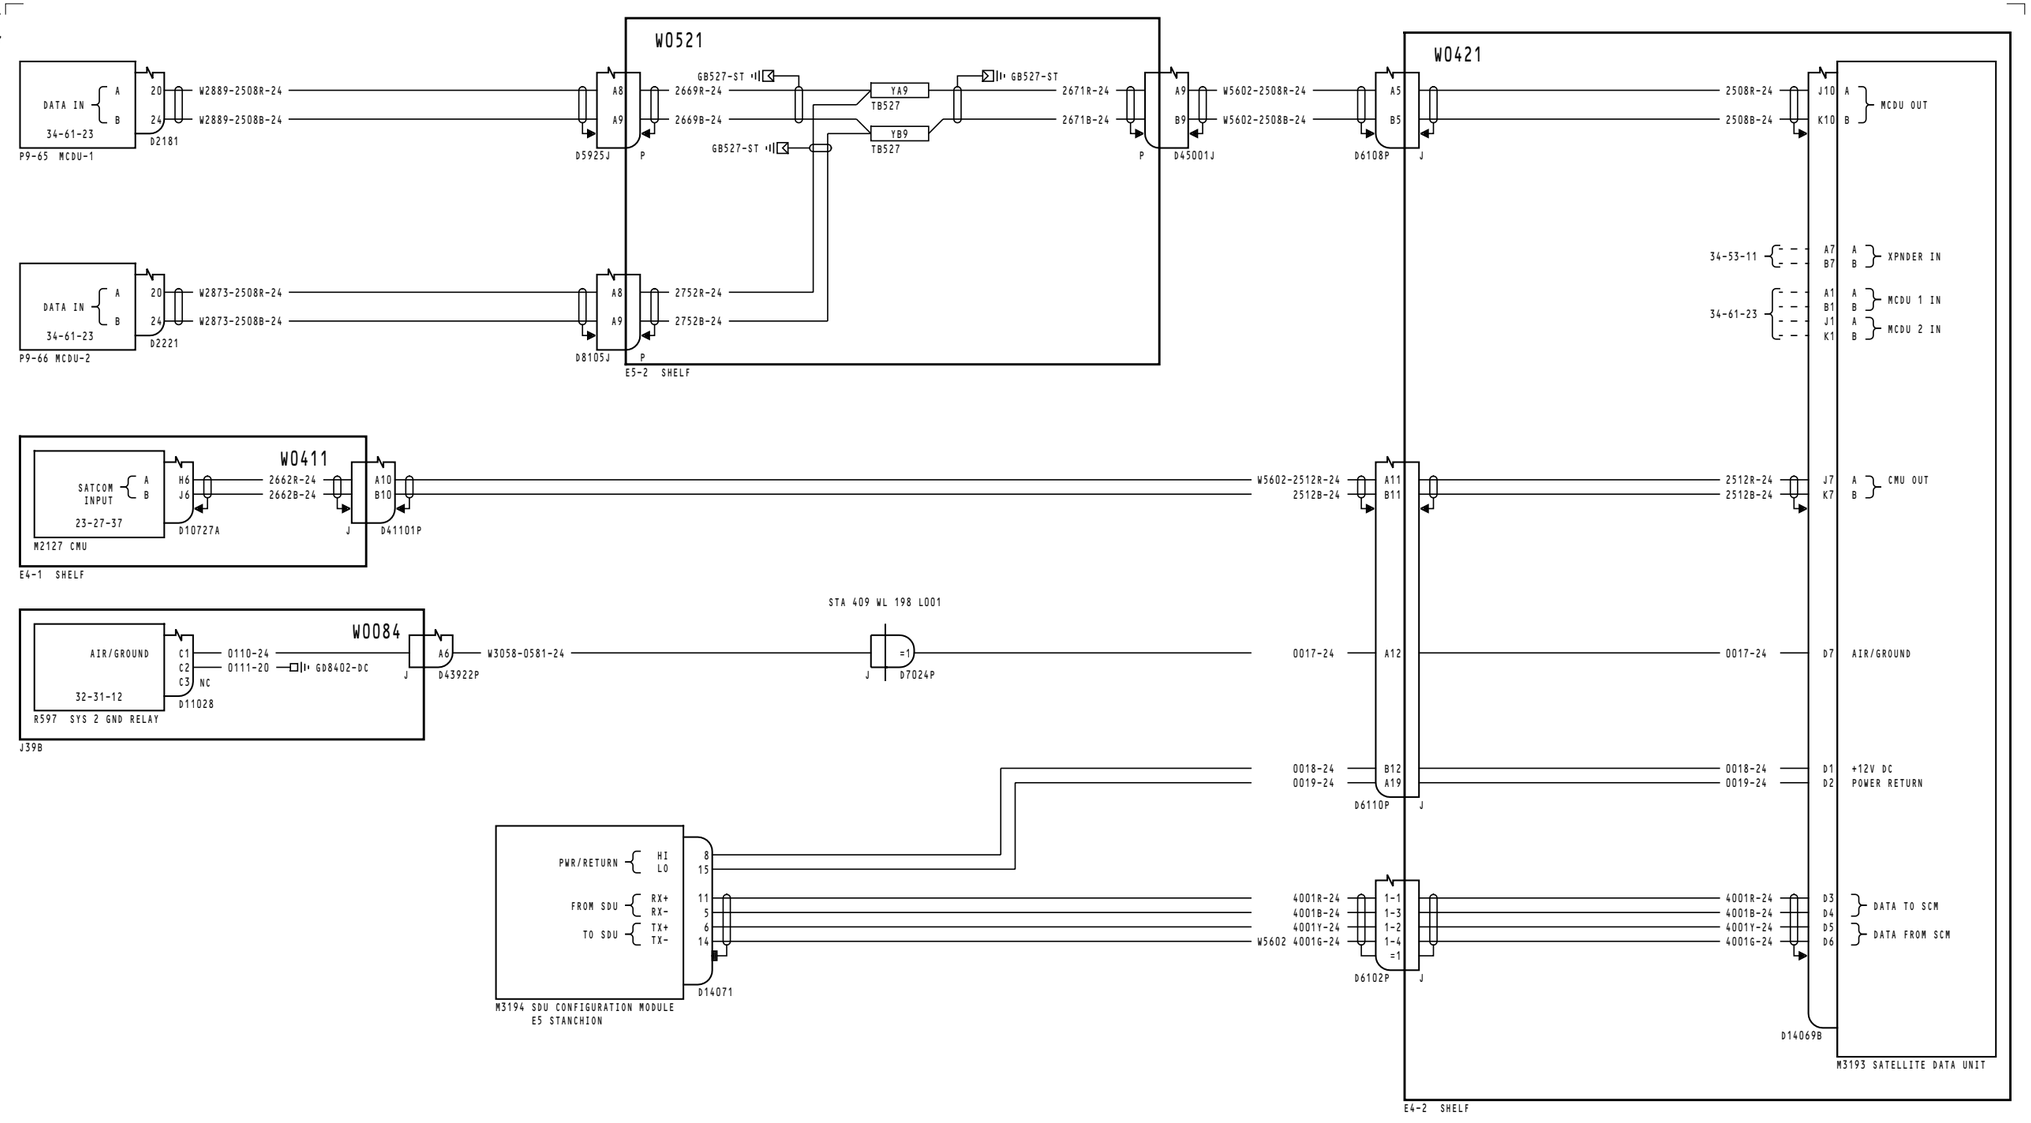

NOTES:


1 BMS 13-72T03C046024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-15-15

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

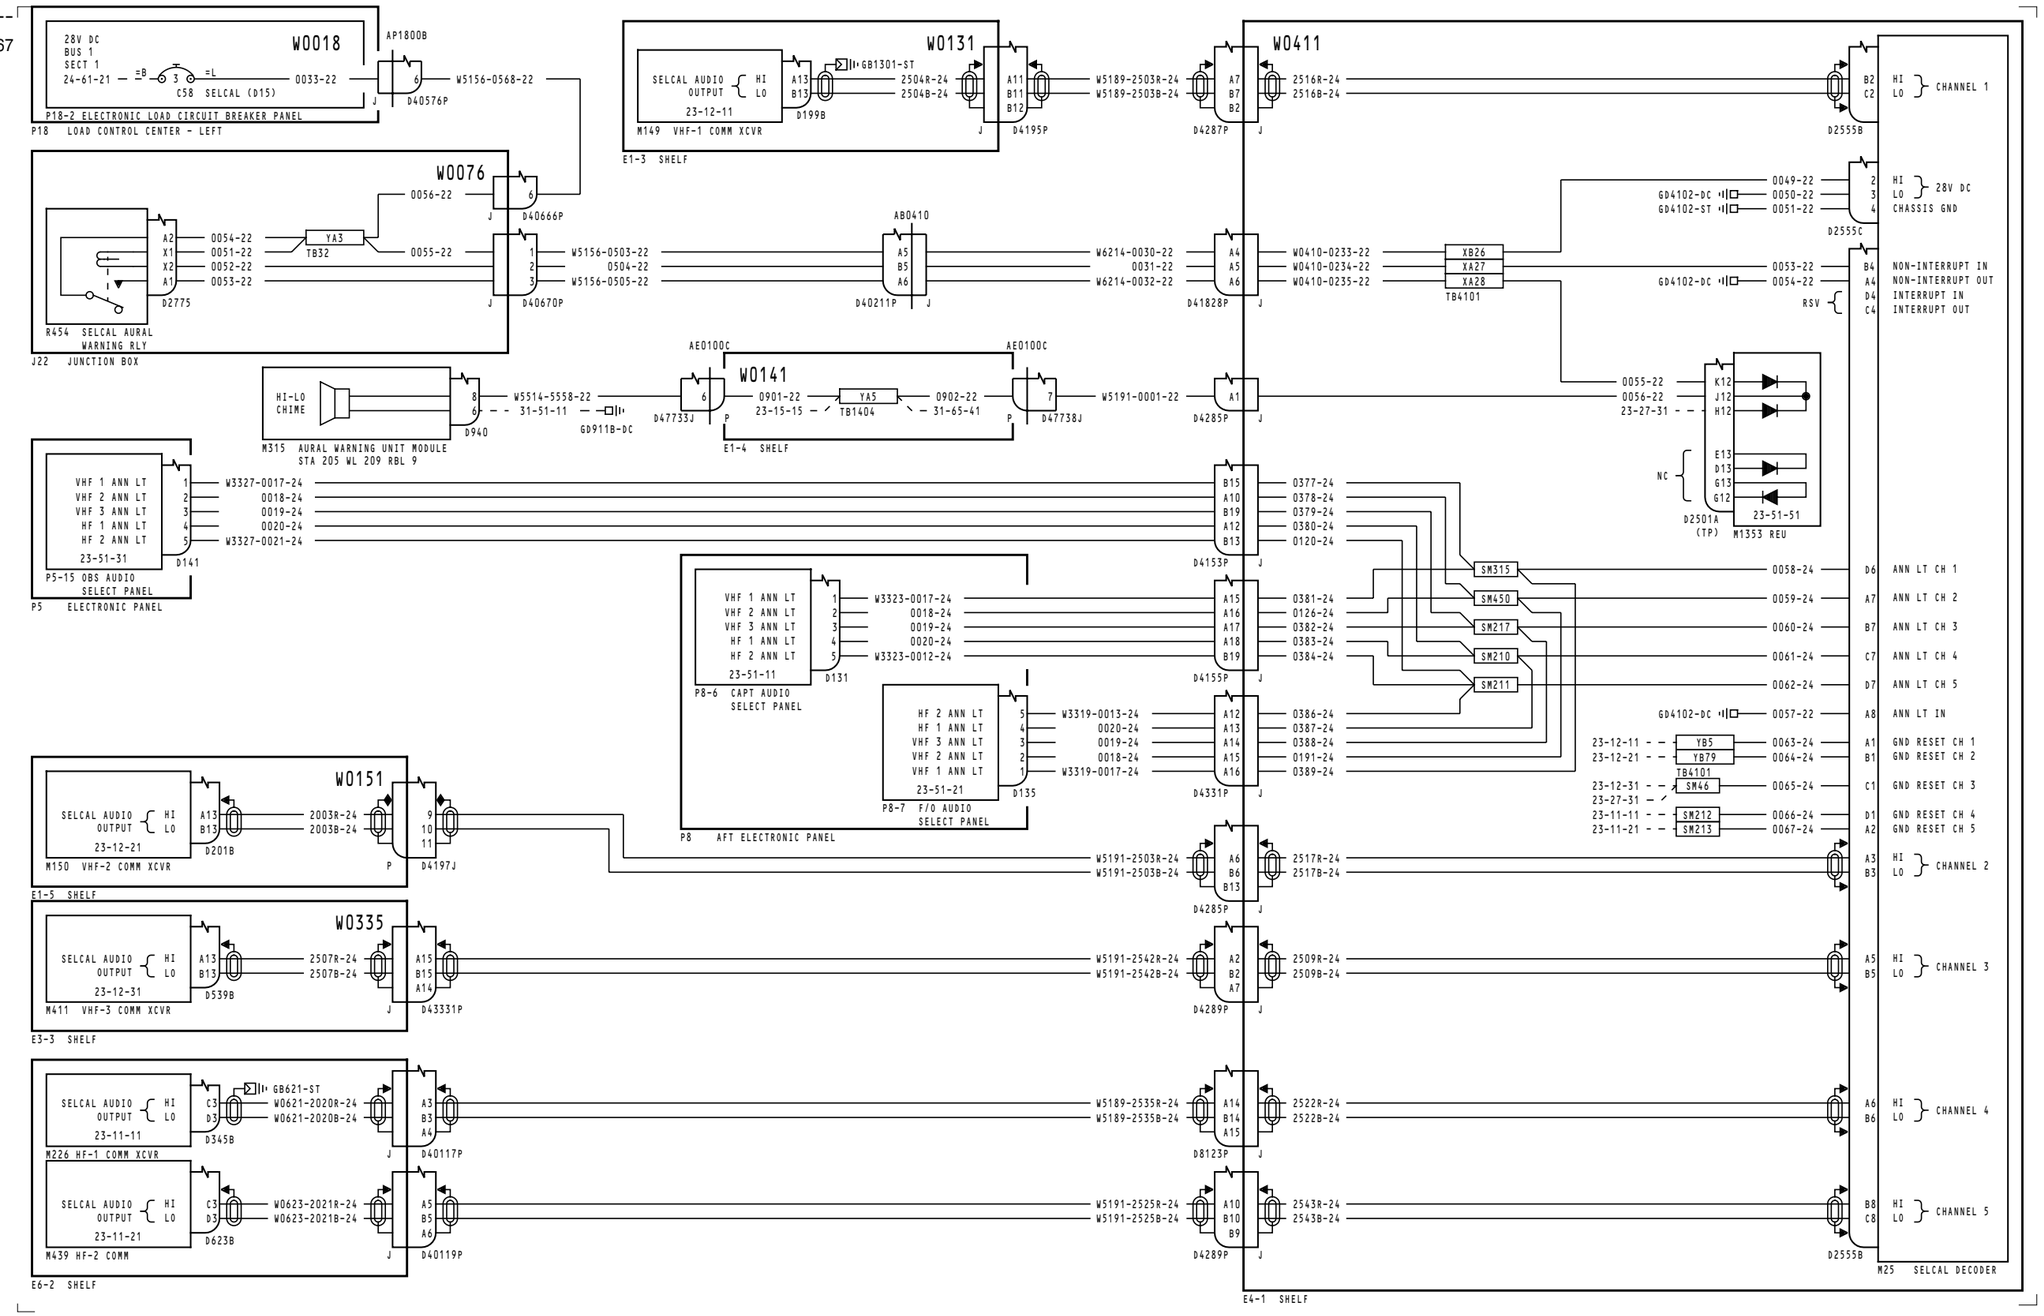

23-22-11


Page 1
Sheet 1
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

BB

681

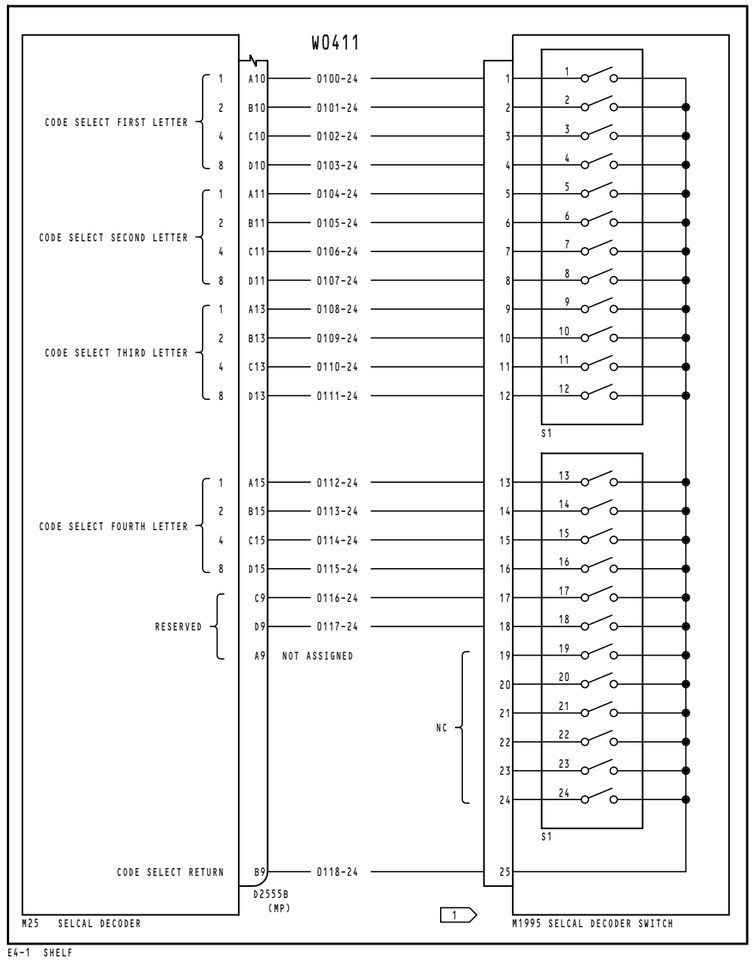

SELCAL CODING TABLE

AIRPLANE	CODE	D2555B (SELCAL DECODER CONNECTOR)																			
		PIN 10				PIN 11				PIN 13				PIN 15				PIN 9			
		A	B	C	D	A	B	C	D	A	B	C	D	A	B	C	D			C	D
		M1995 (DECODER SWITCH) 1																			
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16			17	18
1A301	AB-DR	1	0	0	0	0	1	0	0	0	0	1	0	1	1	1	1			1	1
1A302	AC-DQ	1	0	0	0	1	1	0	0	0	0	1	0	0	1	1	1			1	1
1A303	CJ-ES	1	1	0	0	1	0	0	1	1	0	1	0	0	0	0	0			1	1
1A304	CL-FM	1	1	0	0	1	1	0	1	0	1	1	0	0	0	1	1			1	1
1A305	DL-RS	0	0	1	0	1	1	0	1	1	1	1	1	0	0	0	0			1	1
1A306	EP-HR	1	0	1	0	1	0	1	1	0	0	0	1	1	1	1	1			1	1
1A307	FJ-BC	0	1	1	0	1	0	0	1	0	1	0	0	1	1	0	0			1	1
1A308	LP-KM	1	1	0	1	1	0	1	1	0	1	0	1	0	0	1	1			1	1
1A309	DG-FH	0	0	1	0	1	1	1	0	0	1	1	0	0	0	0	1			1	1
1A310	EG-AF	1	0	1	0	1	1	1	0	1	0	0	0	0	1	1	0			1	1
1A311	GJ-BD	1	1	1	0	1	0	0	1	0	1	0	0	0	0	1	0			1	1
1A312	CQ-HR	1	1	0	0	0	1	1	1	0	0	0	1	1	1	1	1			1	1
1A313	AC-FK	1	0	0	0	1	1	0	0	0	1	1	0	0	1	0	1			1	1
1A314	BF-AJ	0	1	0	0	0	1	1	0	1	0	0	0	1	0	0	1			1	1
1A315	BF-HM	0	1	0	0	0	1	1	0	0	0	0	1	0	0	1	1			1	1
1A316	HL-CR	0	0	0	1	1	1	0	1	1	1	0	0	1	1	1	1			1	1
1A317	AB-FJ	1	0	0	0	0	1	0	0	0	1	1	0	1	0	0	1			1	1
1A318	AB-GK	1	0	0	0	0	1	0	0	1	1	1	0	0	1	0	1			1	1
1A319	EK-CP	1	0	1	0	0	1	0	1	1	1	0	0	1	0	1	1			1	1
1A320	FG-DL	0	1	1	0	1	1	1	0	0	0	1	0	1	1	0	1			1	1
1A321	EM-CD	1	0	1	0	0	0	1	1	1	1	0	0	0	0	1	0			1	1
1A322	DP-HK	0	0	1	0	1	0	1	1	0	0	0	1	0	1	0	1			1	1
1A323	EM-JS	1	0	1	0	0	0	1	1	1	0	0	1	0	0	0	0			1	1
1A324	FJ-BH	0	1	1	0	1	0	0	1	0	1	0	0	0	0	0	1			1	1
1A325	FG-ER	0	1	1	0	1	1	1	0	1	0	1	0	1	1	1	1			1	1
1A326	EG-KP	1	0	1	0	1	1	1	0	0	1	0	1	1	0	1	1			1	1
1A327	EH-AM	1	0	1	0	0	0	0	1	1	0	0	0	0	0	1	1			1	1
1A328	FL-AC	0	1	1	0	1	1	0	1	1	0	0	0	1	1	0	0			1	1

NOTES:

1 FOR EACH BIT DESIGNATED AS "0"
SET THE CORRESPONDING SWITCH TO "ON"
FOR EACH BIT DESIGNATED AS "1"
SET THE CORRESPONDING SWITCH TO "OFF"
(FOR ANY UNUSED SWITCH SET TO "OFF")

23-22-11


Page 1
Sheet 2
May 28/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-C

142

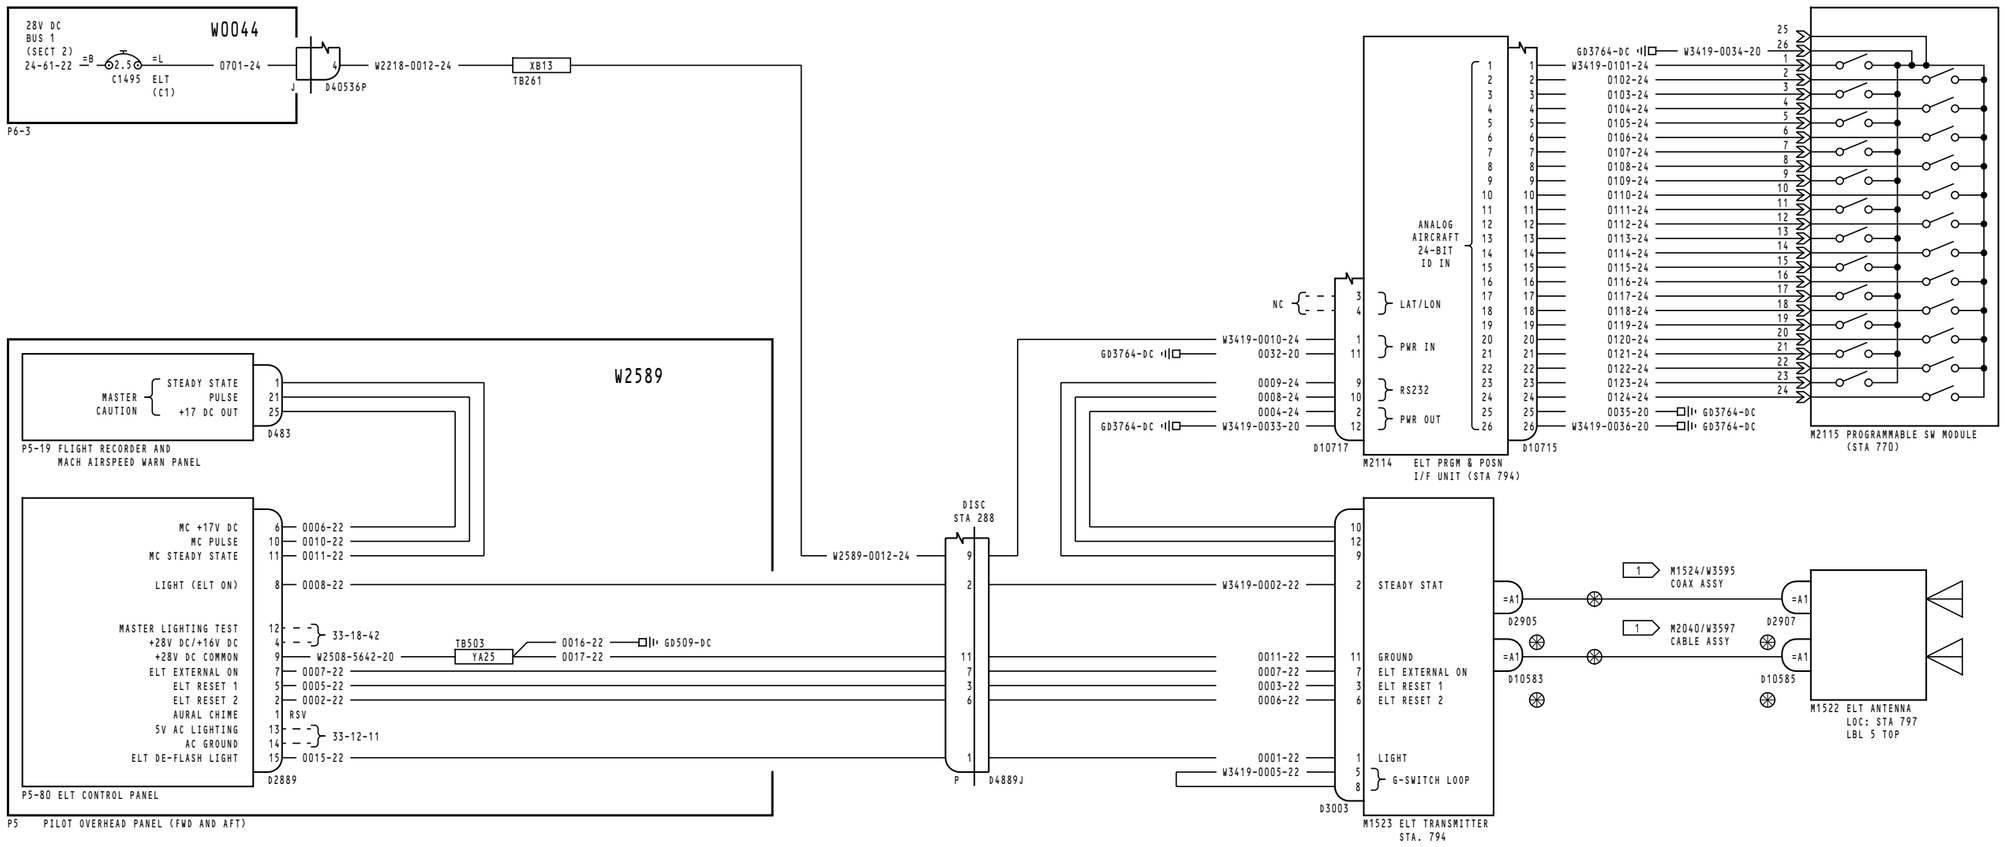

NOTES:

1 BOEING ADDED ITEM NUMBER FOR HOOKUP PURPOSES

ALL

EMERGENCY LOCATOR TRANSMITTER

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-24-11

Page 1
Sheet 1
Nov 14/2025

737-8 WIRING DIAGRAM MANUAL

ADDRESS BIT		M2115																							
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
		M2115S1 [1]																							
EFFECTIVITY	HEX-ID	A1	A2	A3	A4	A5	A6	A7	A8	A9	A10	A11	A12	A13	A14	A15	A16	A17	A18	A19	A20	A21	A22	A23	A24
1A309	20268F8B88FFBFF	0	1	0	0	0	1	1	1	1	1	0	0	0	1	0	1	1	1	0	0	0	1	0	0
1A310	20268F328CFFBFF	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	1	0	1	0	0	0	1	1	0
1A311	20268F3268FFBFF	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	1	0	0	1	1	0	1	0	0
1A313	20268F31D4FFBFF	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	1	1	1	0	1	0	1	0
1A314	20268F312EFFBFF	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	1	0	0	1	0	1	1	1
1A315	20268F3062FFBFF	0	1	0	0	0	1	1	1	1	0	0	1	1	0	0	0	0	0	1	1	0	0	0	1
1A316	2126959502FFBFF	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	0	1
1A317	2126959504FFBFF	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	1	0
1A318	2126959506FFBFF	0	1	0	0	1	0	1	0	1	1	0	0	1	0	1	0	1	0	0	0	0	0	1	1
1A319	9F4C40A9E800349	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1A321	9F4C40AD8400349	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1A323	9F4C40B19000349	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1A324	9F4C40B23000349	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
1A325	9F4C40B23400349	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0

NOTES:

[1]

BIT VALUE	SWITCH SETTING
1	ON (RED DOT VISIBLE)
0	OFF (RED DOT NOT VISIBLE)

23-24-11


Page 1
Sheet 2
May 28/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-B

608

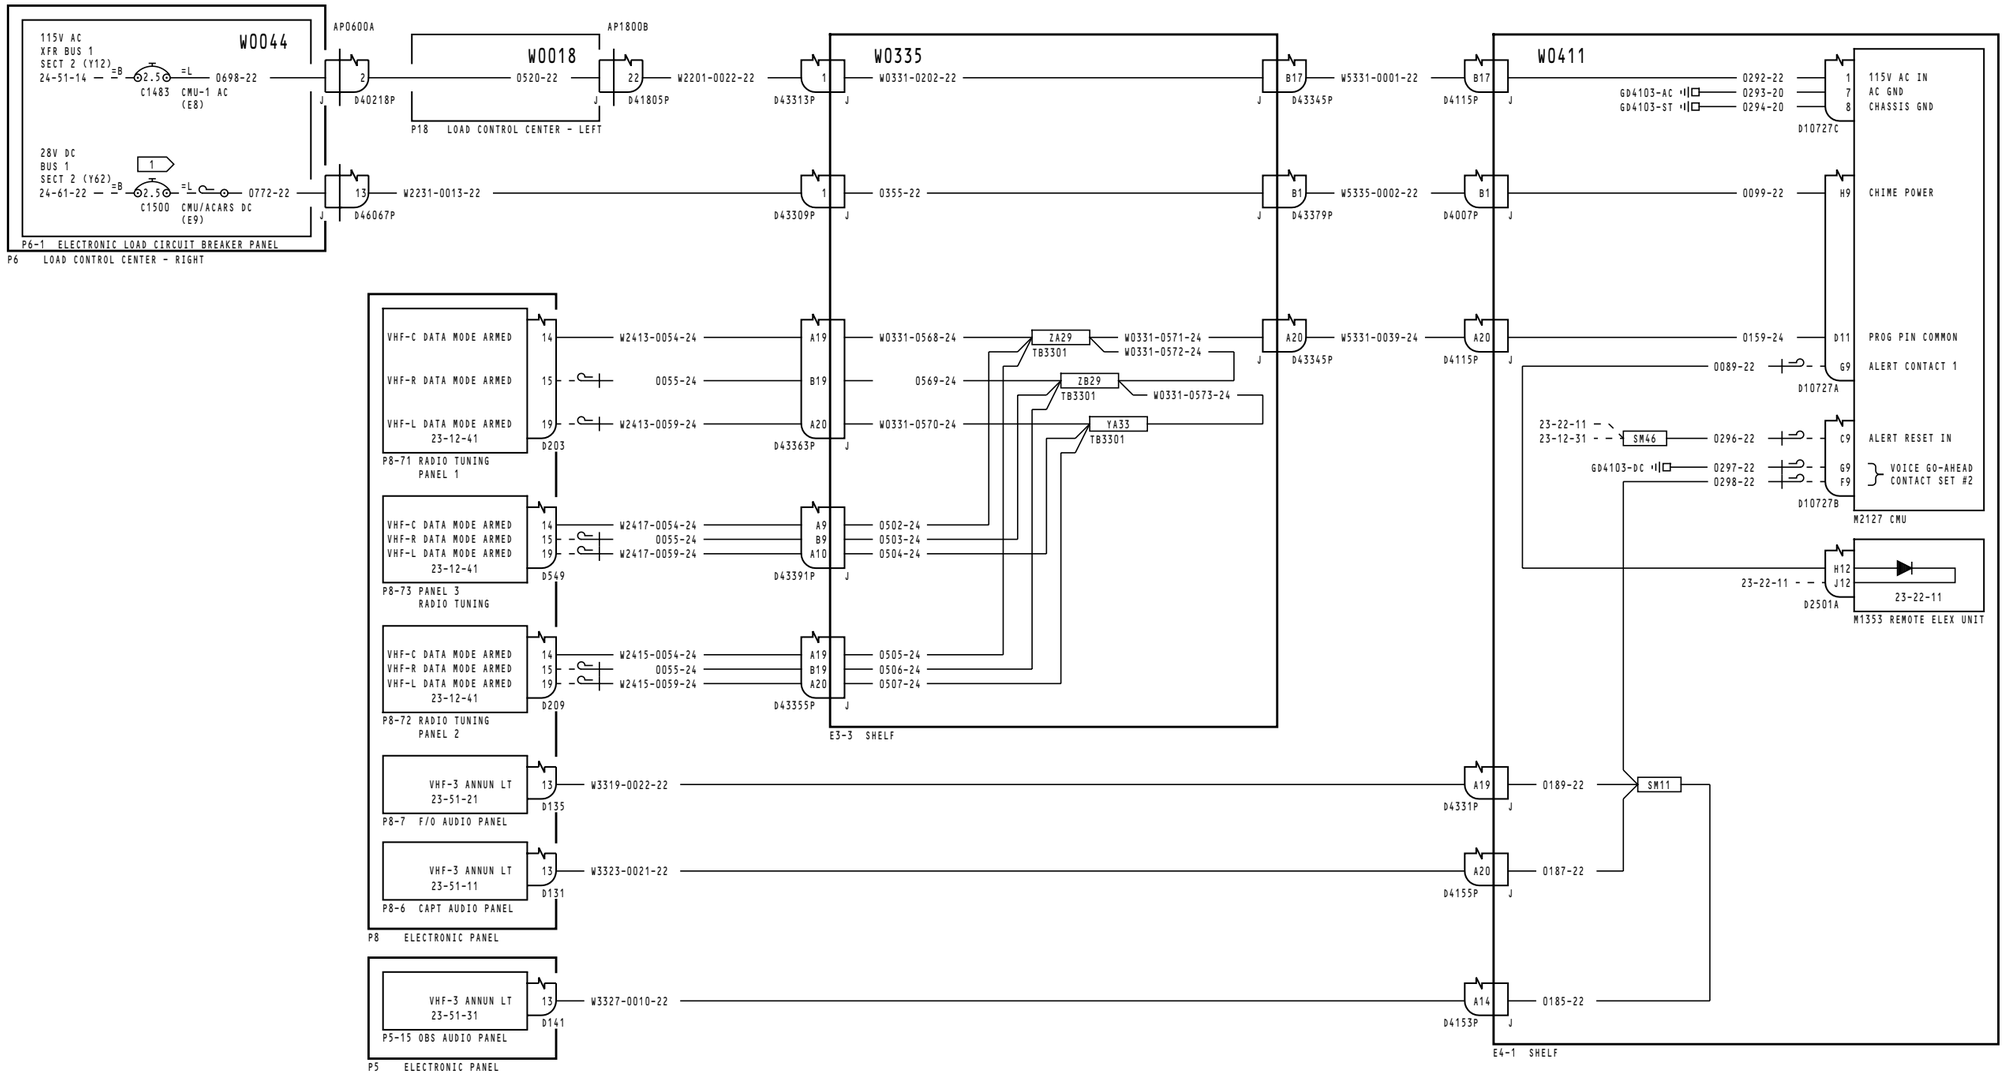

NOTES:

1 COLLAR AND LABEL "INOP"

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-27-31

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

503

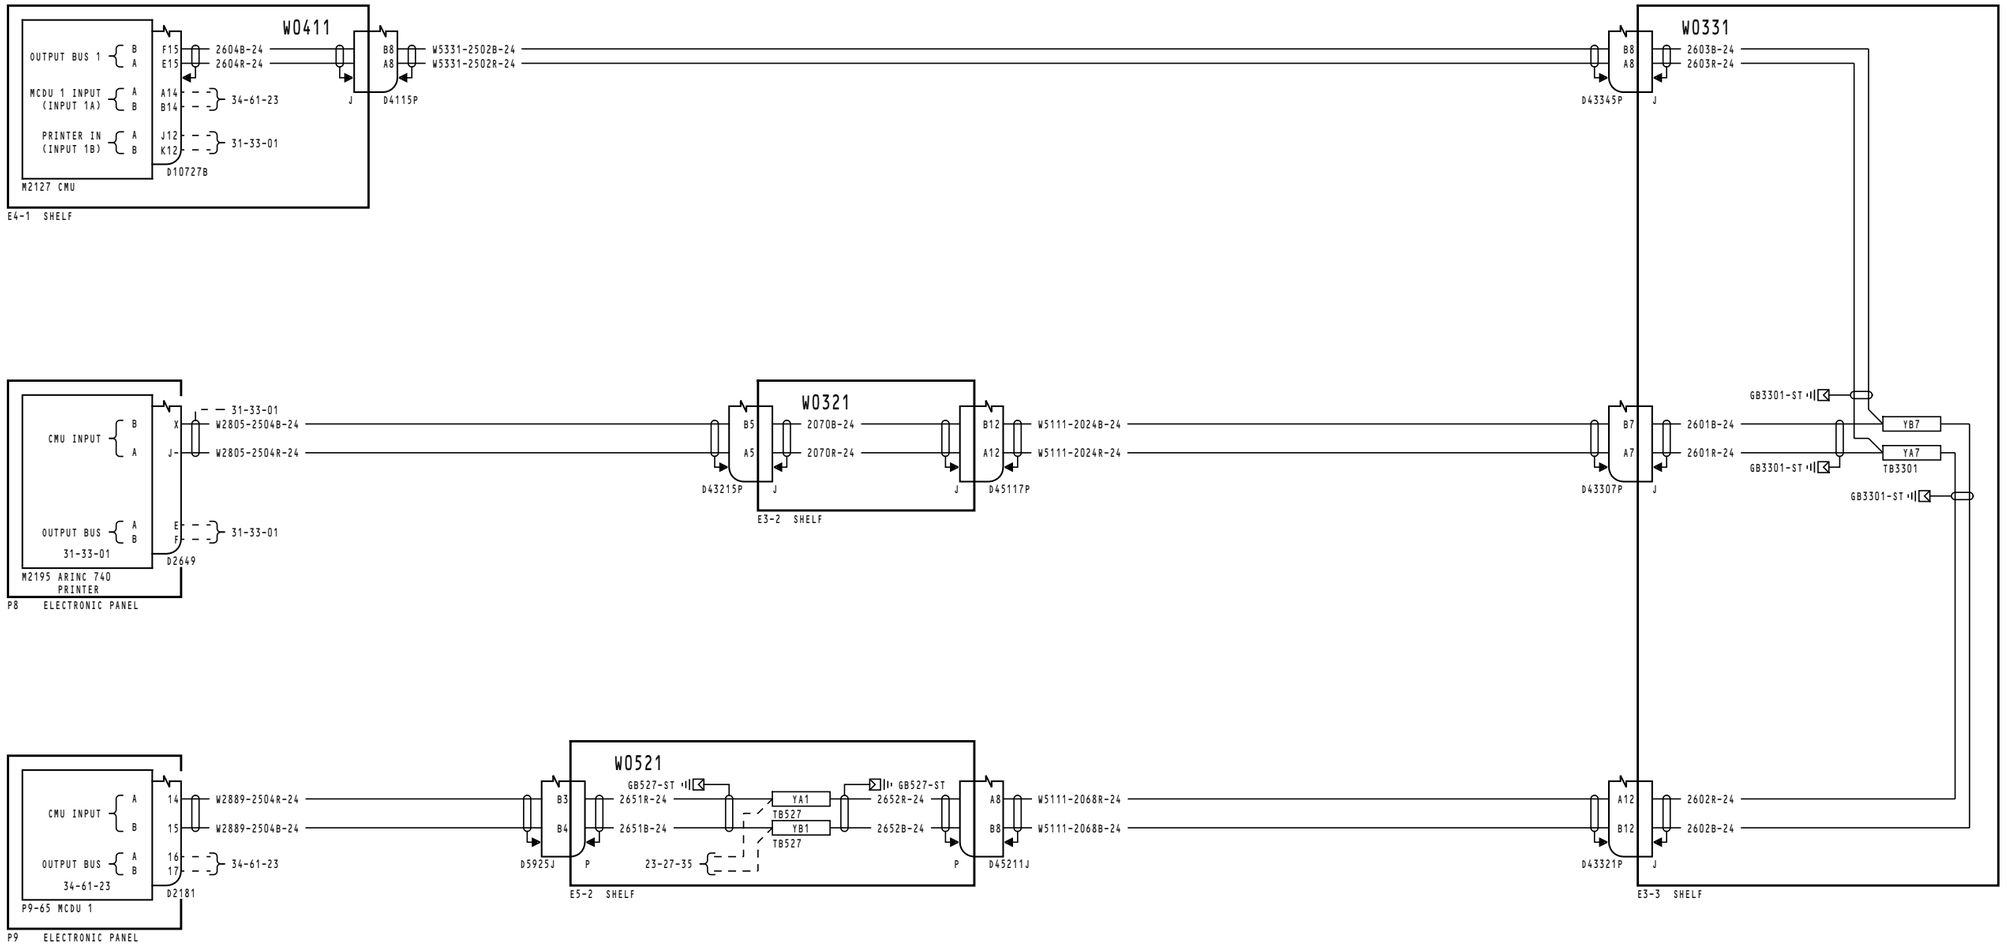

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-27-32

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
336

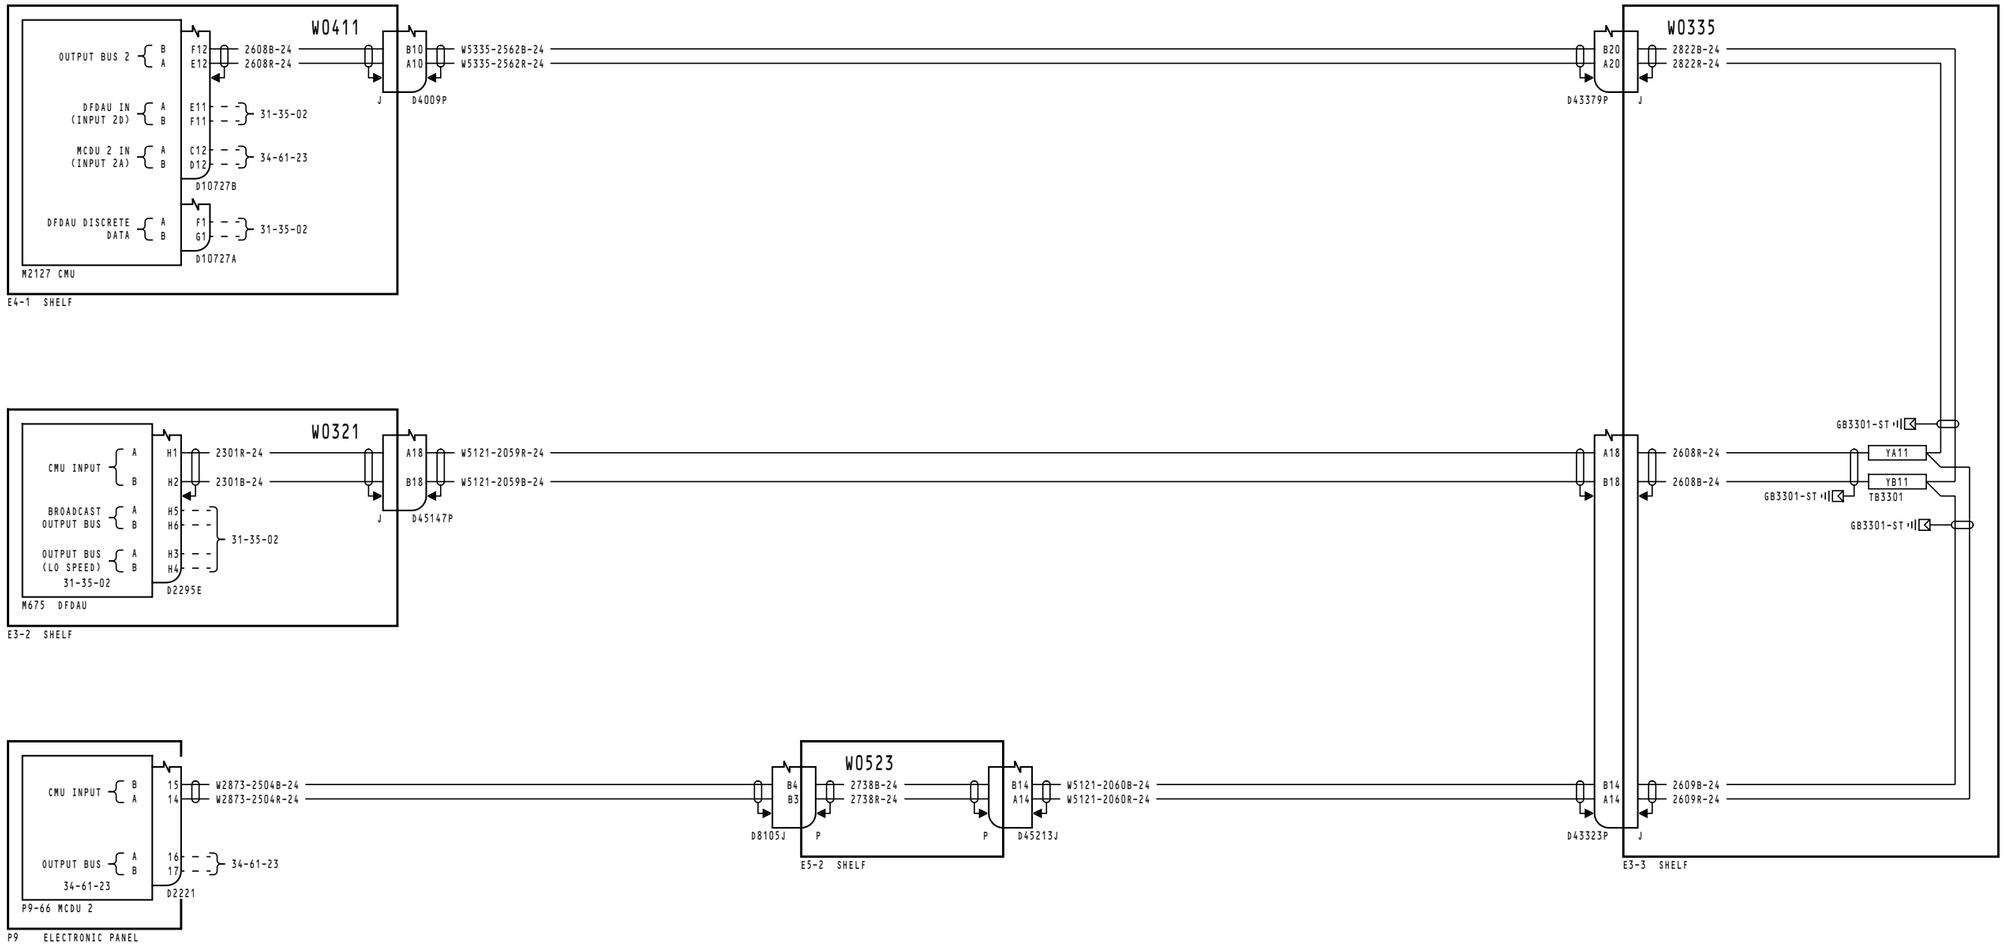

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-27-33

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A

181



ALL

OUTPUT BUS 3 INTERFACES - CABIN TERMINALS

D280AM1215

23-27-34

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-27-34


Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

429

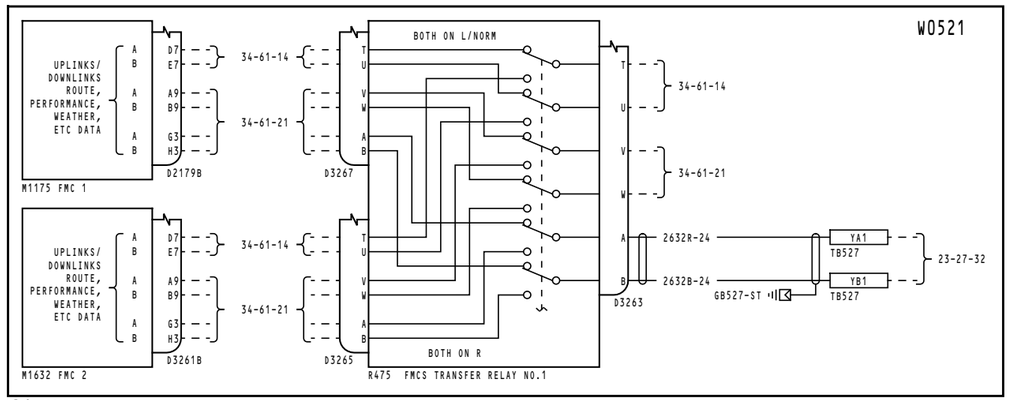

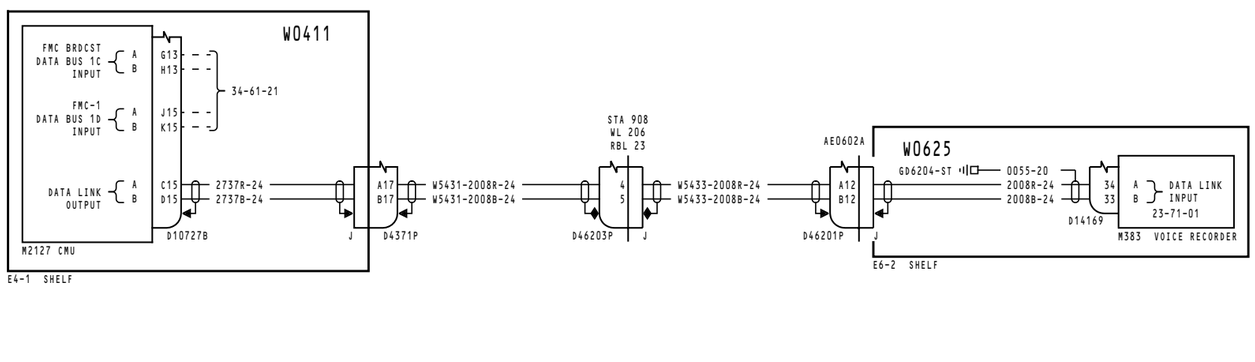

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-27-35


Page 1

May 15/2024


737-8 WIRING DIAGRAM MANUAL

-A

267

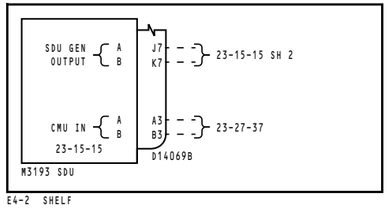

E4-2 SHELF

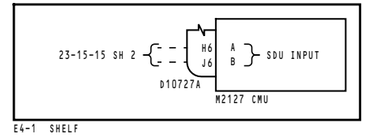

E4-1 SHELF

ALL

CMU OUTPUT 4 INTERFACES - SATCOM/HF

D280AM1215

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-27-36

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

273

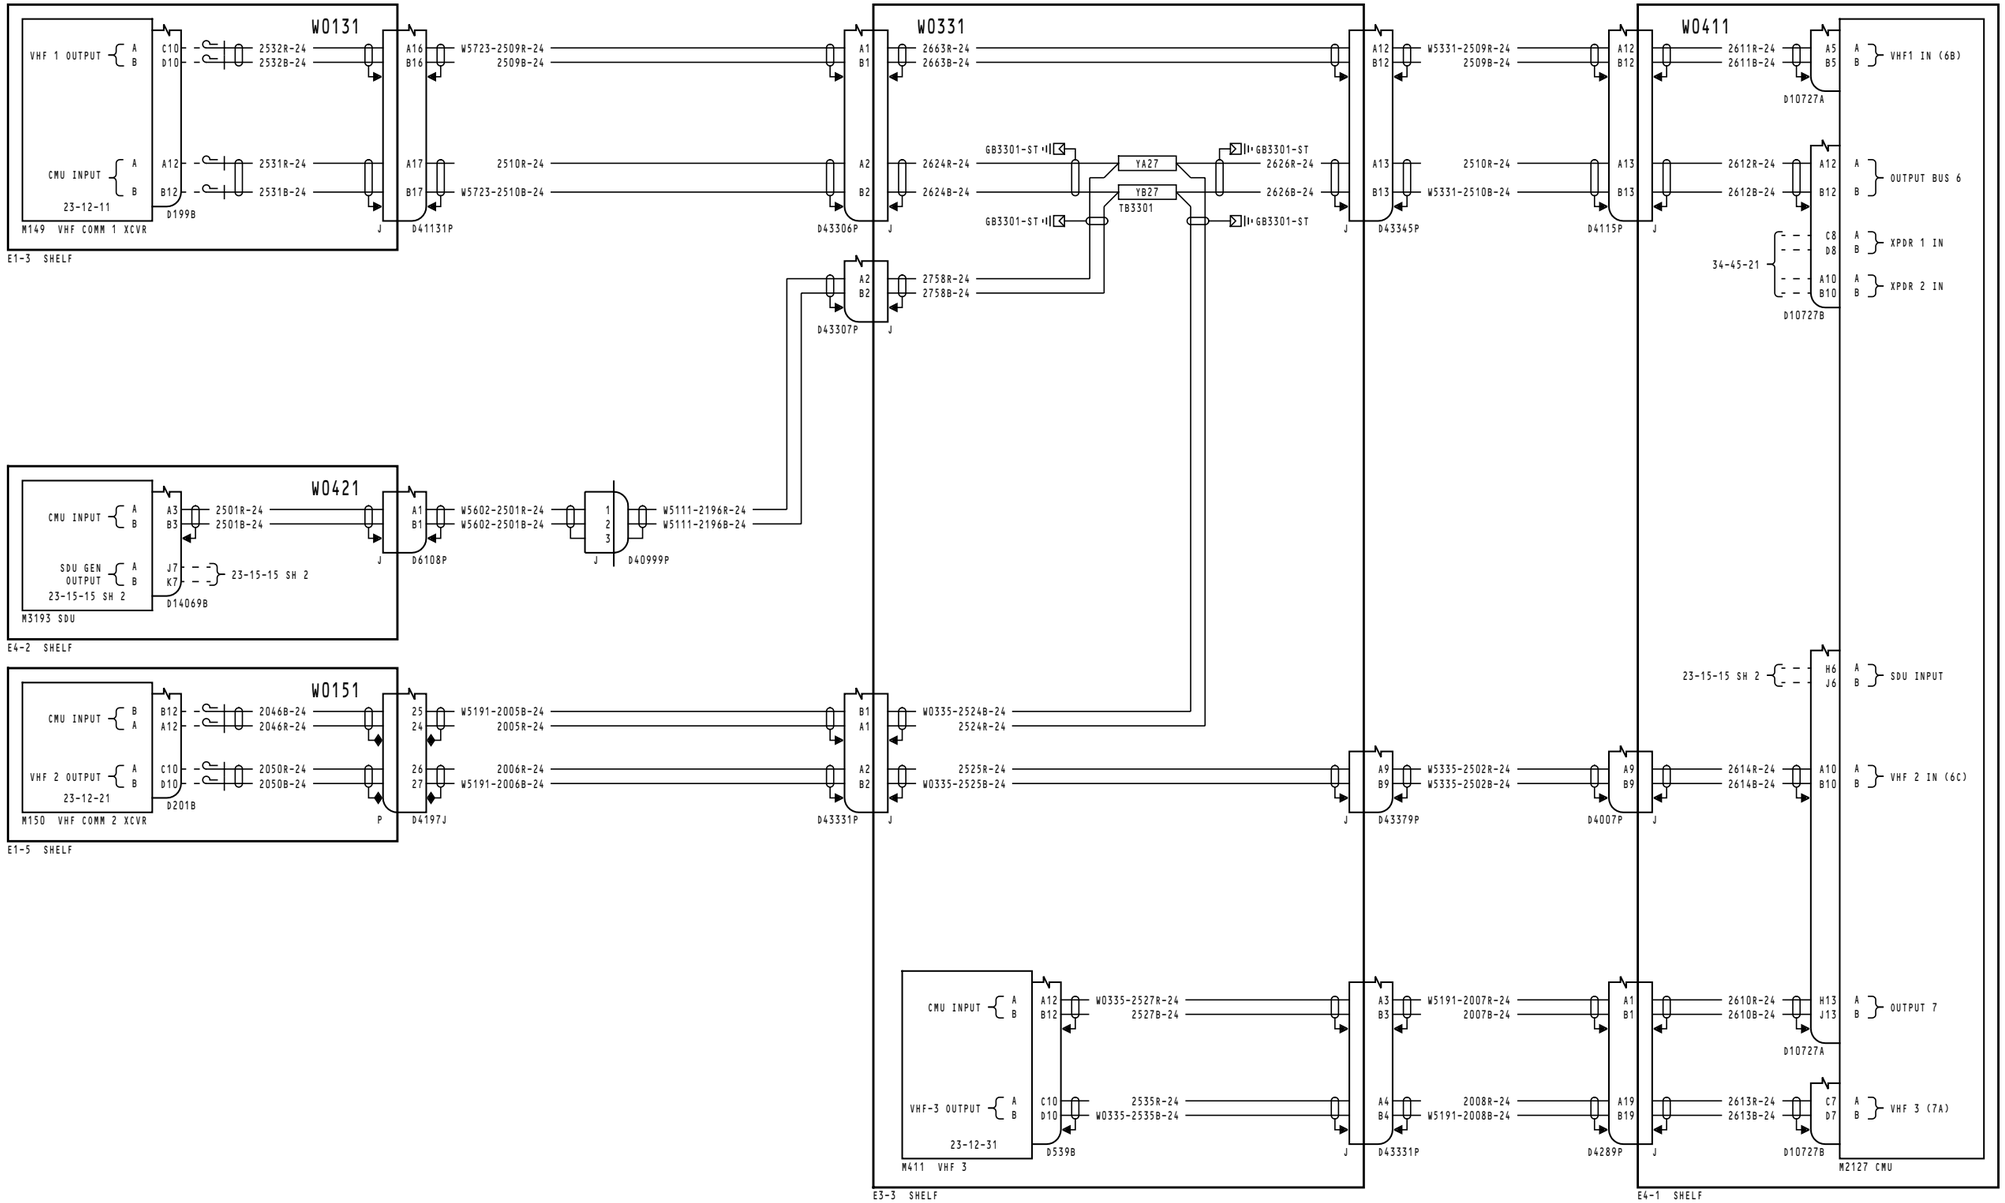

23-27-37


Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

329

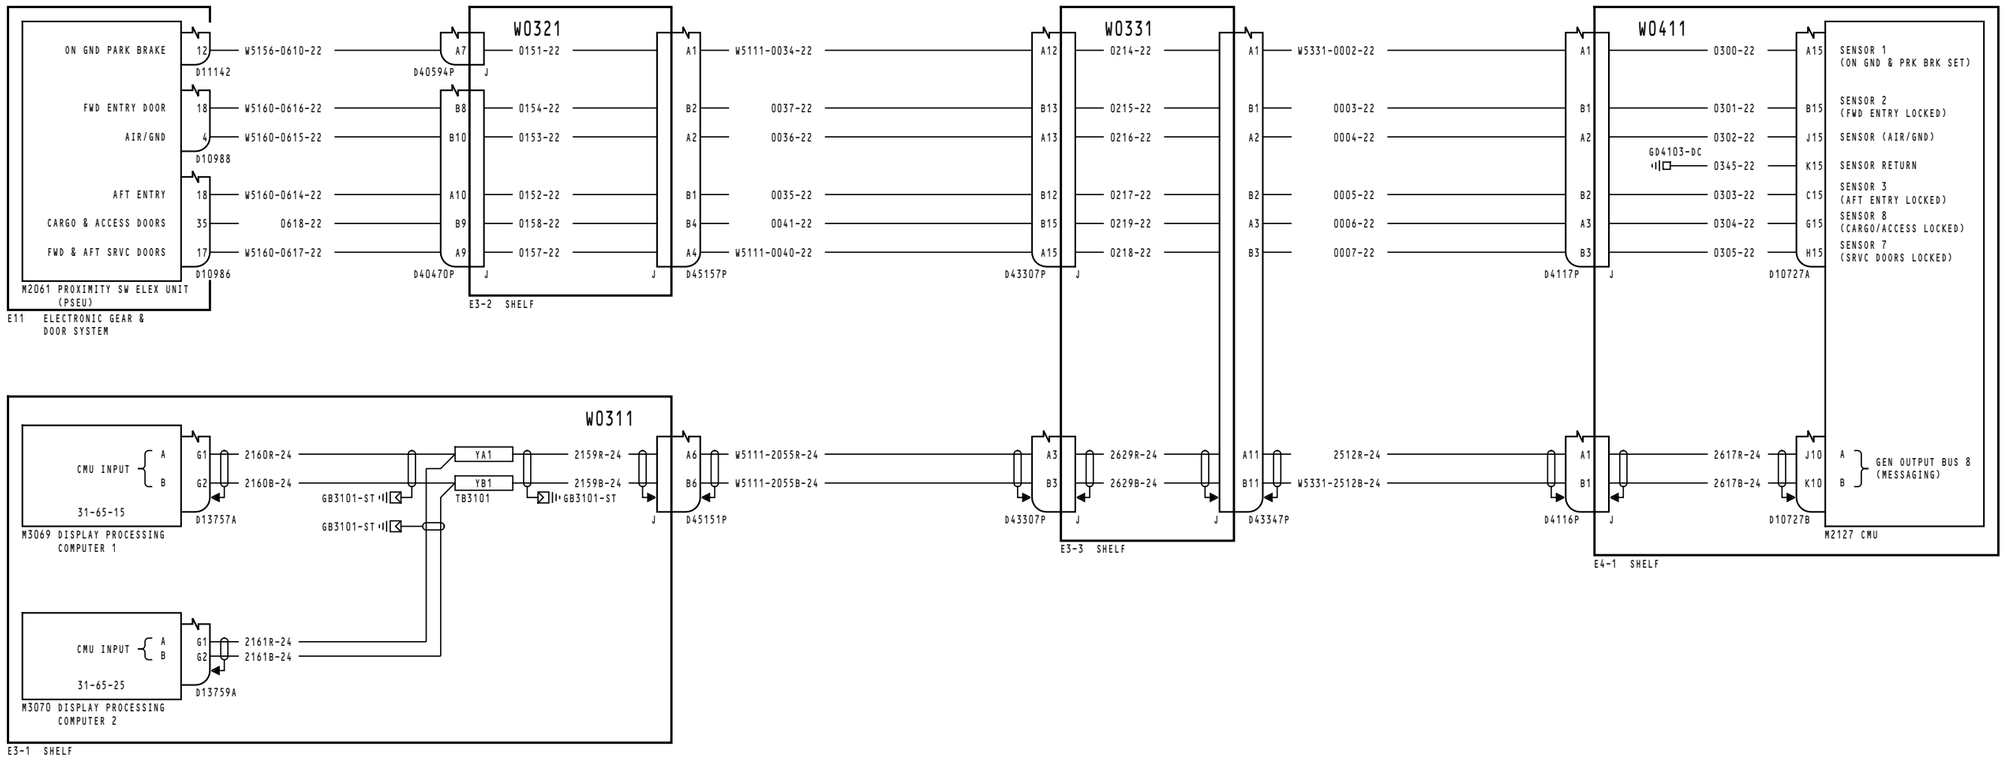

E3-1 SHELF


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-27-38

Page 1

May 15/2024


737-8 WIRING DIAGRAM MANUAL

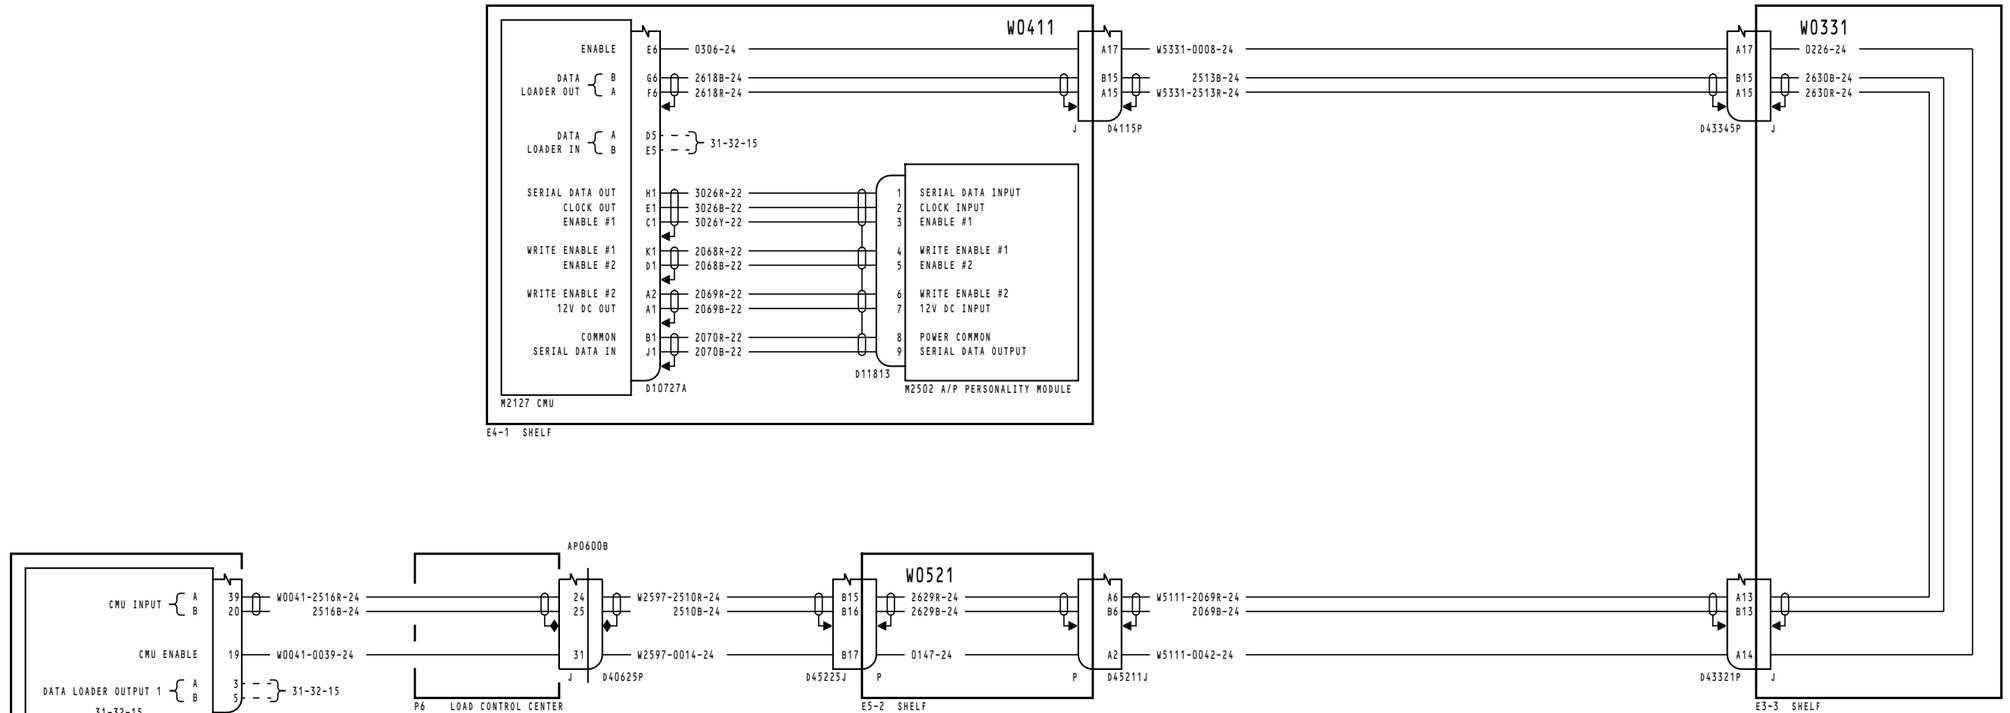

23-27-39
Page 1
May 15/2024
ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-D
467

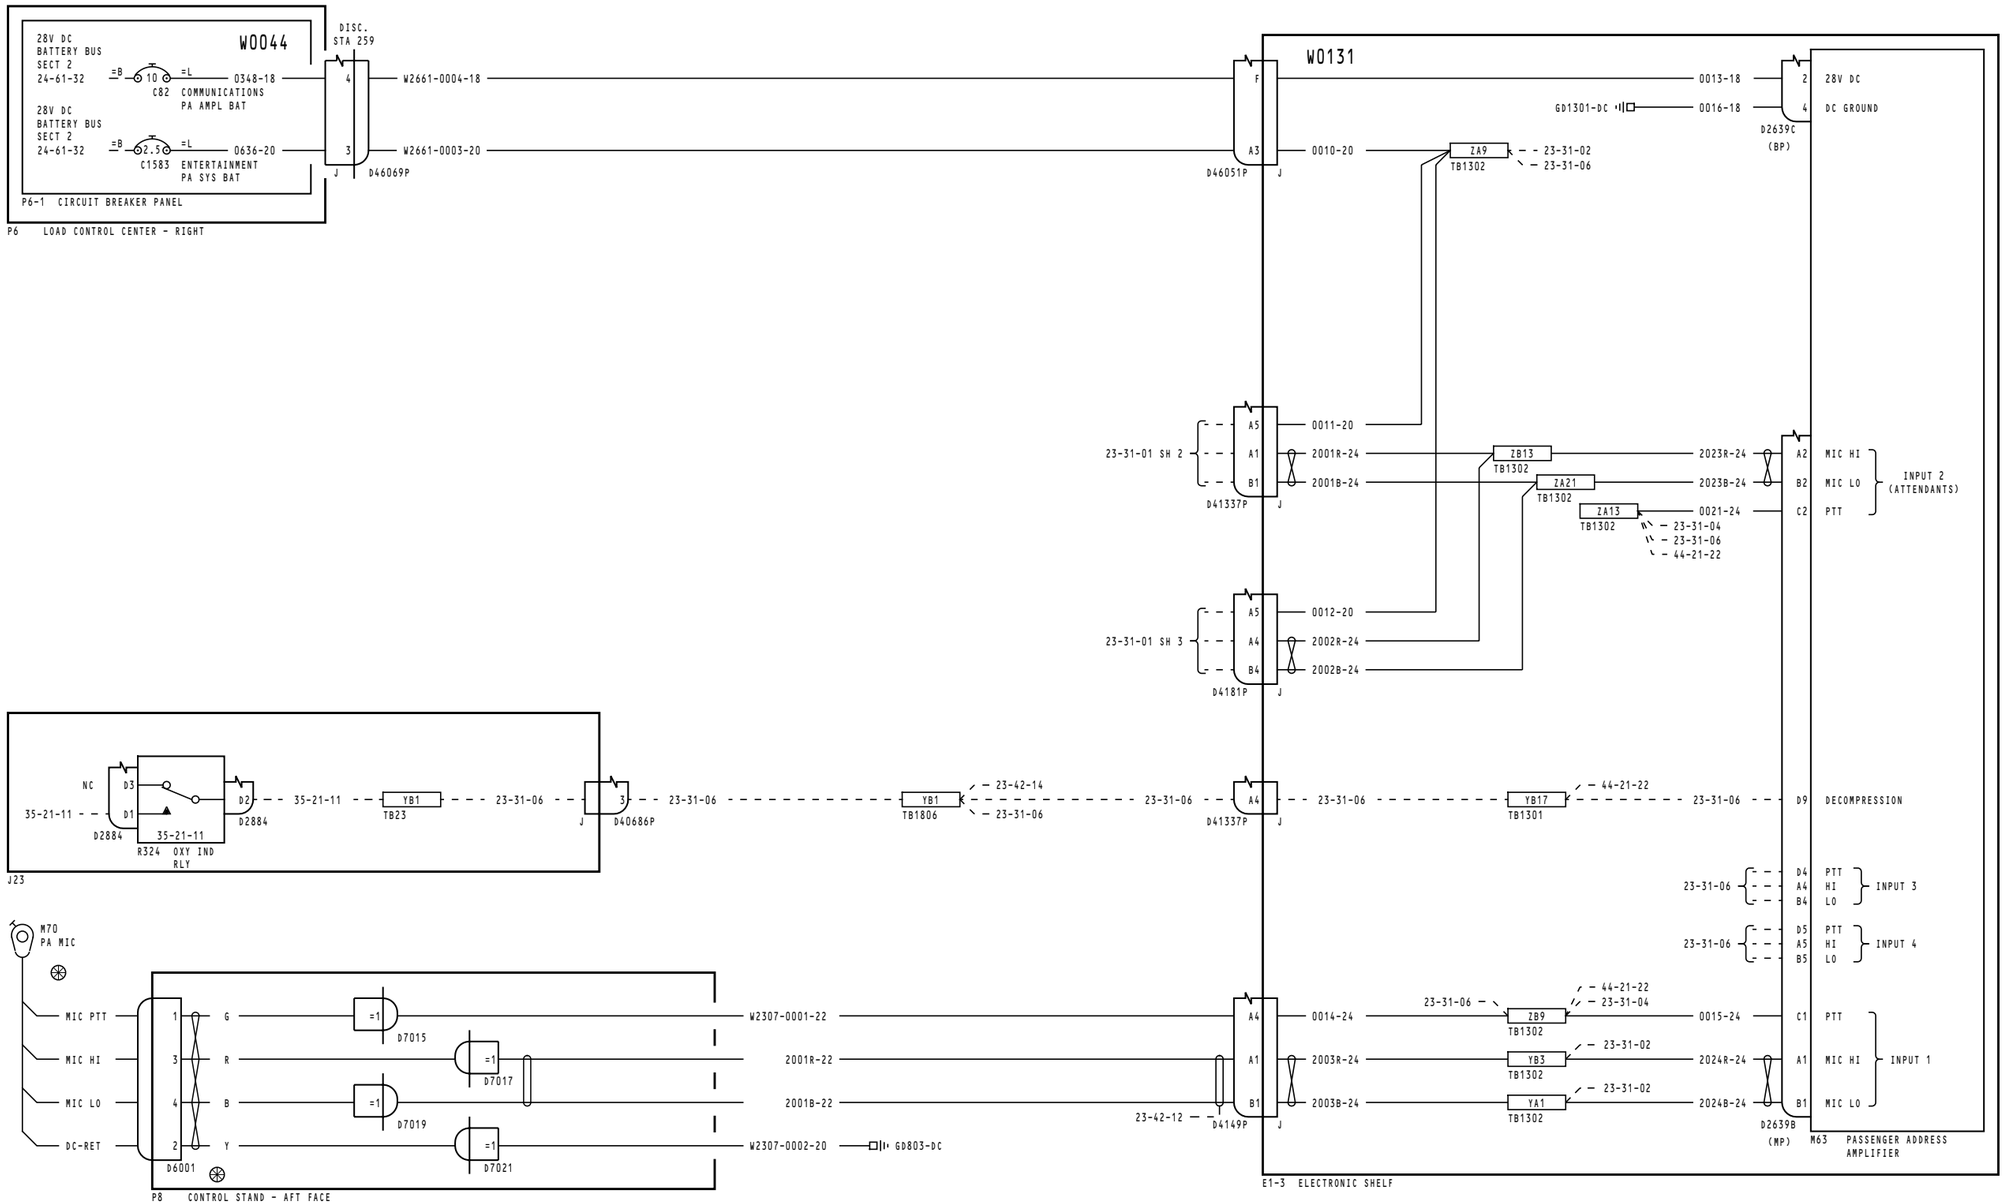

* THIS WIRE, IF SHIELDED AND/OR TWISTED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES MAKING THIS WIRE ELECTROMAGNETCALLY COMPATIBLE.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-01

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL


-A
409

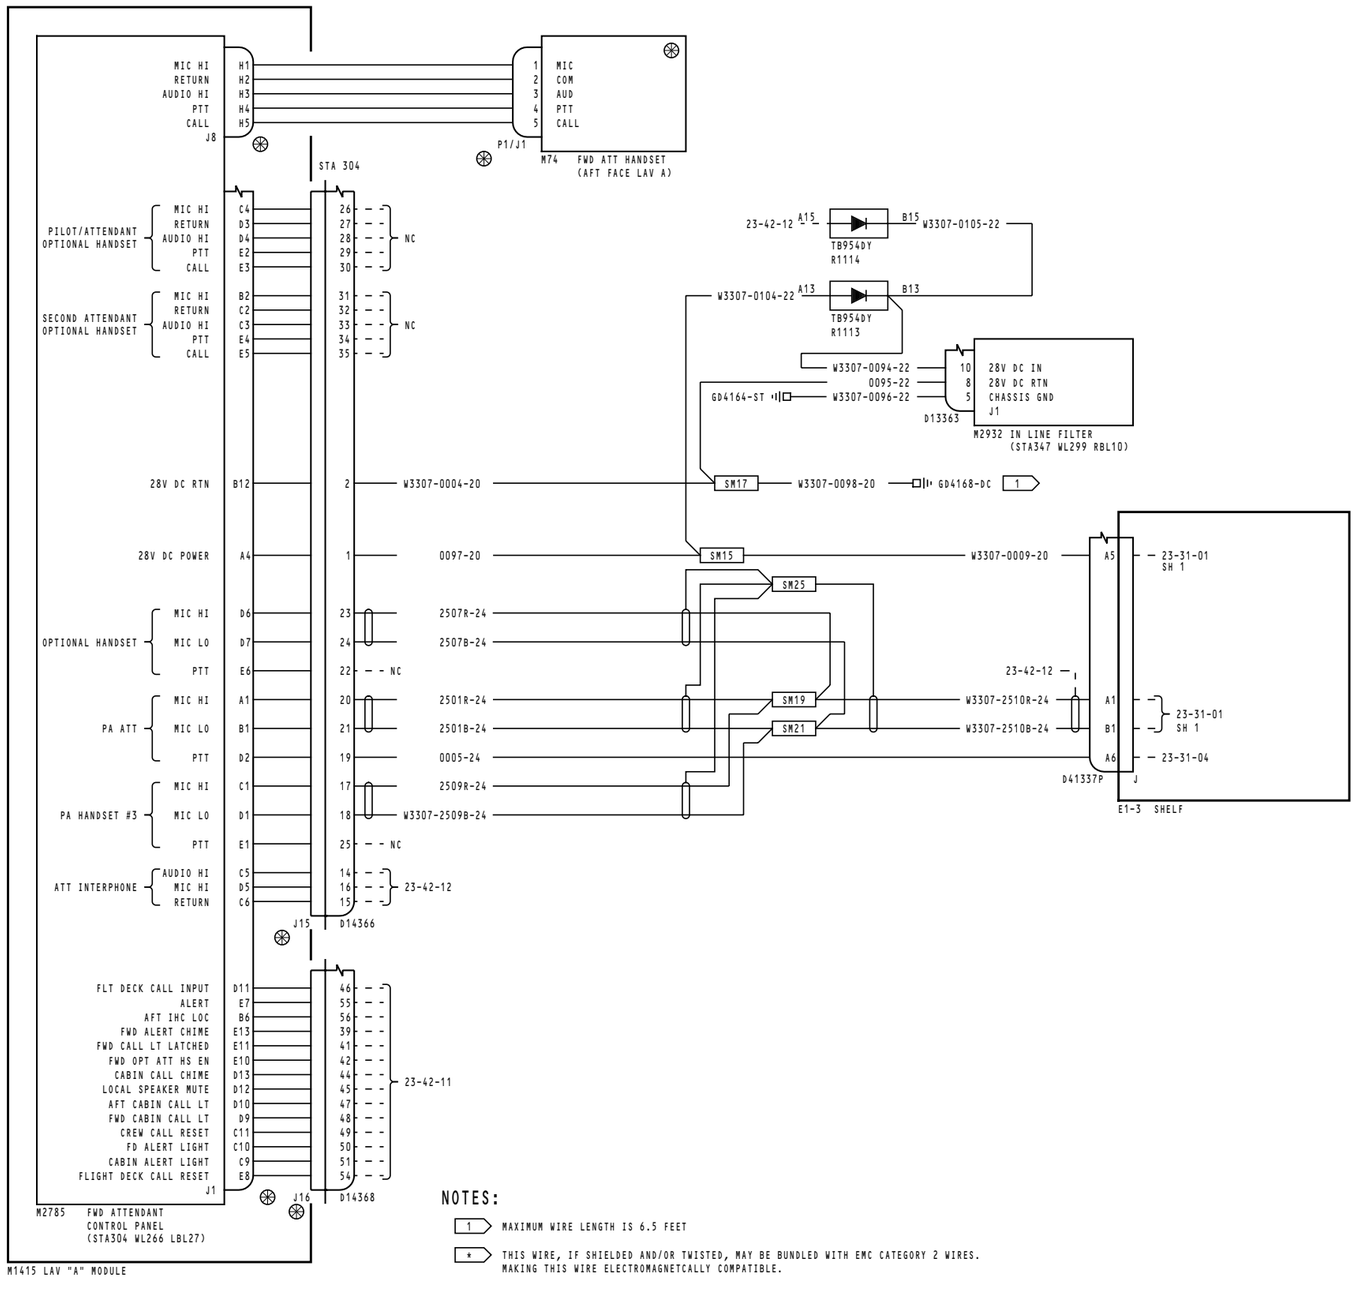

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-01

Page 1
Sheet 2
May 15/2024

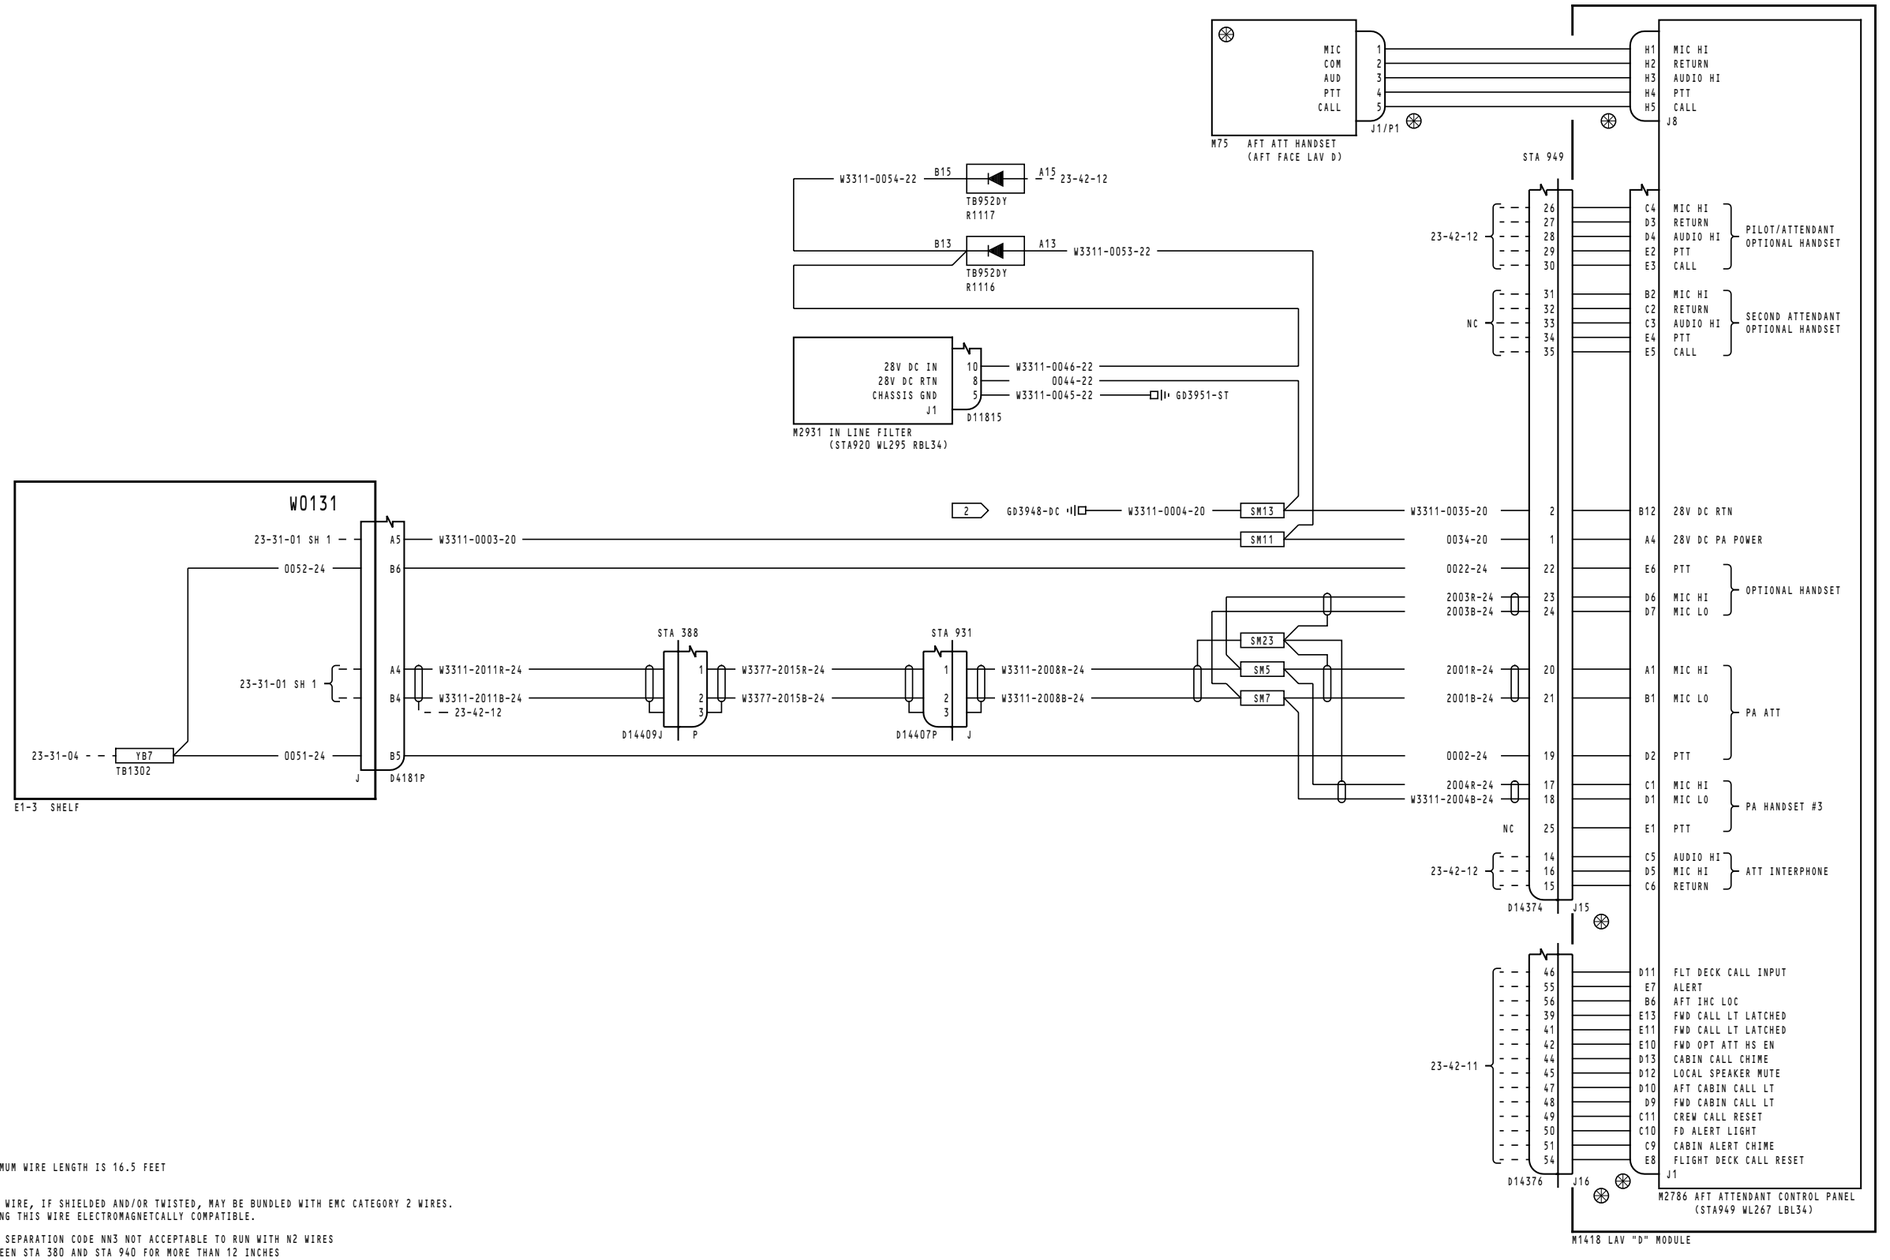

NOTES:

2 MAXIMUM WIRE LENGTH IS 16.5 FEET

* THIS WIRE, IF SHIELDED AND/OR TWISTED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES. MAKING THIS WIRE ELECTROMAGNETCALLY COMPATIBLE.


** WIRE SEPARATION CODE NN3 NOT ACCEPTABLE TO RUN WITH N2 WIRES BETWEEN STA 380 AND STA 940 FOR MORE THAN 12 INCHES

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-01

Page 1
Sheet 3
May 15/2024

737-8 WIRING DIAGRAM MANUAL

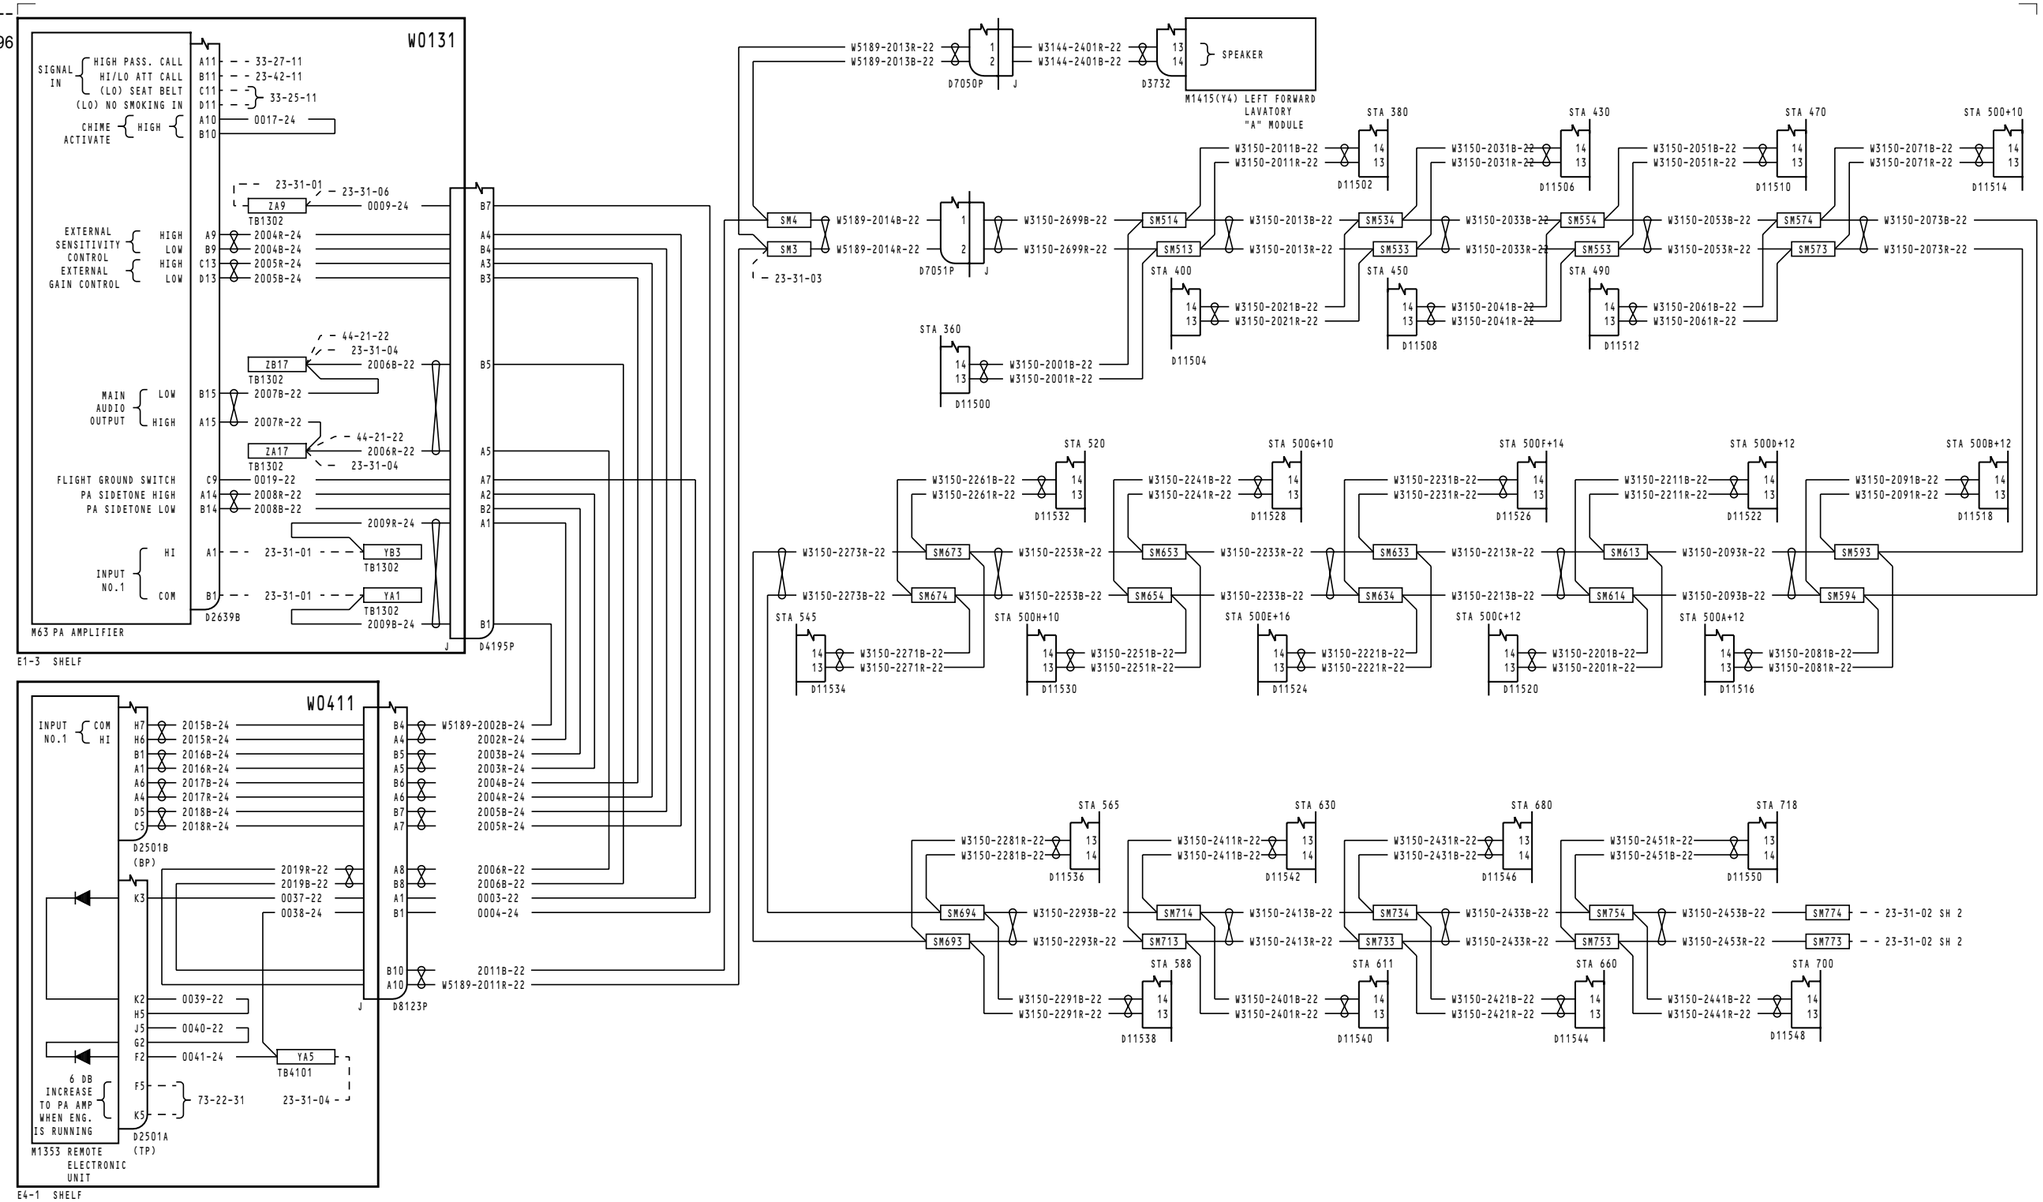

NOTES:


* THIS WIRE, IF SHIELDED AND/OR TWISTED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES. MAKING THIS WIRE ELECTROMAGNETCALLY COMPATIBLE.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-02

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

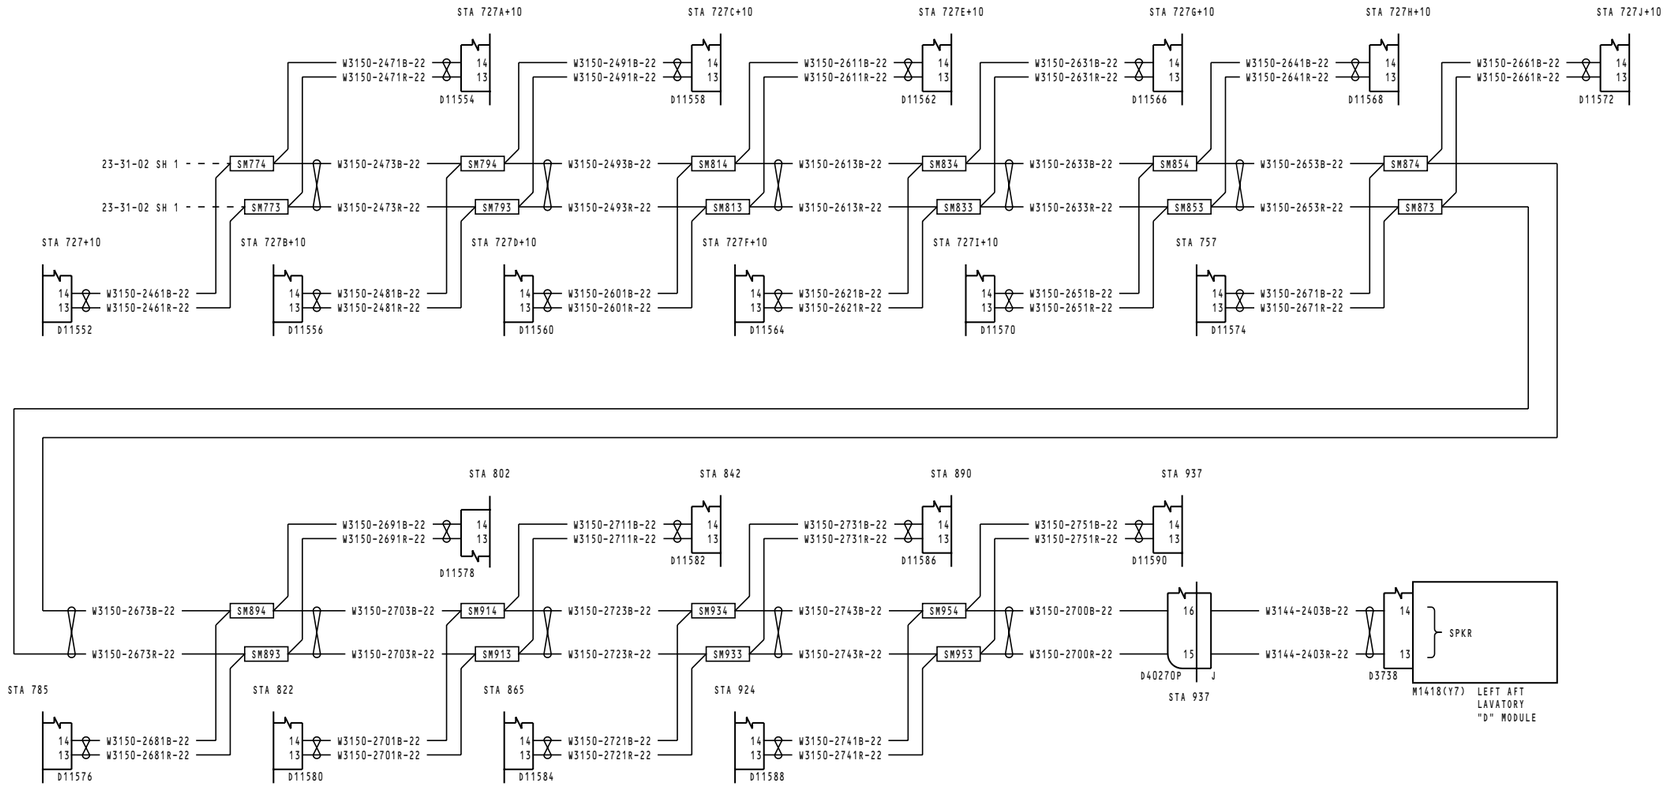


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-02

Page 1
Sheet 2
May 15/2024


737-8 WIRING DIAGRAM MANUAL

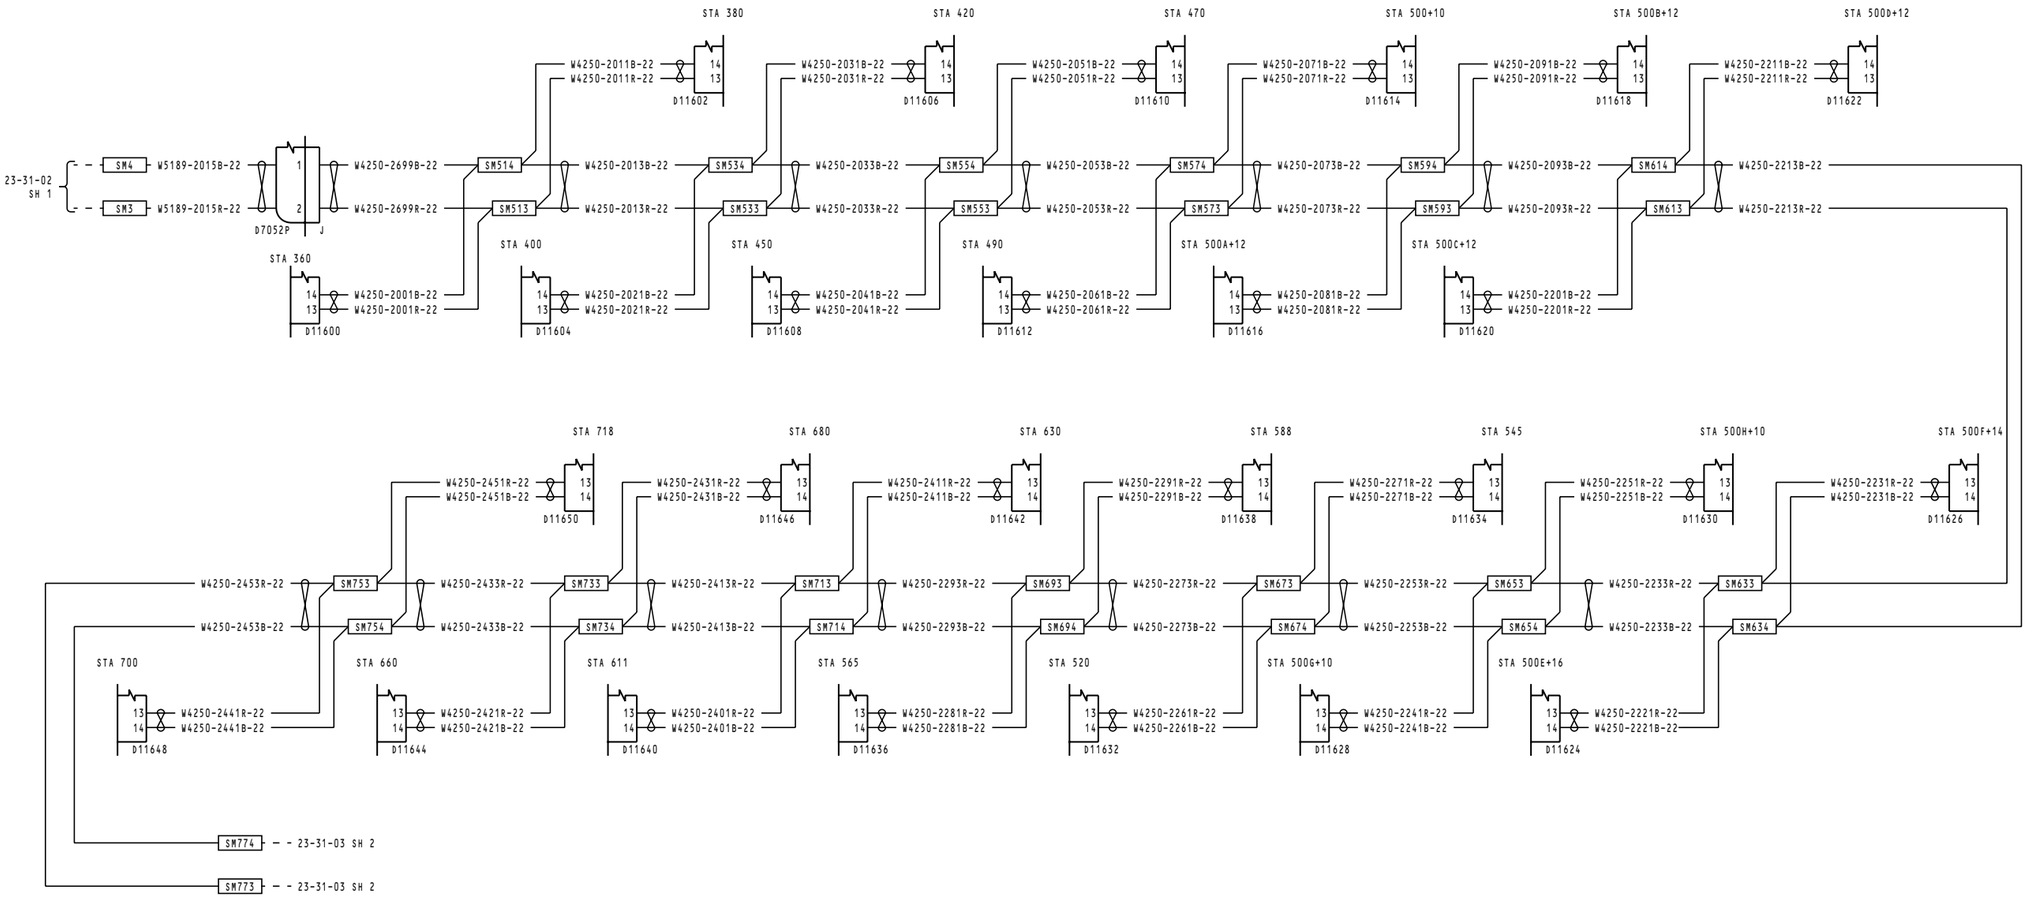

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-03

Page 1
Sheet 1
May 15/2024

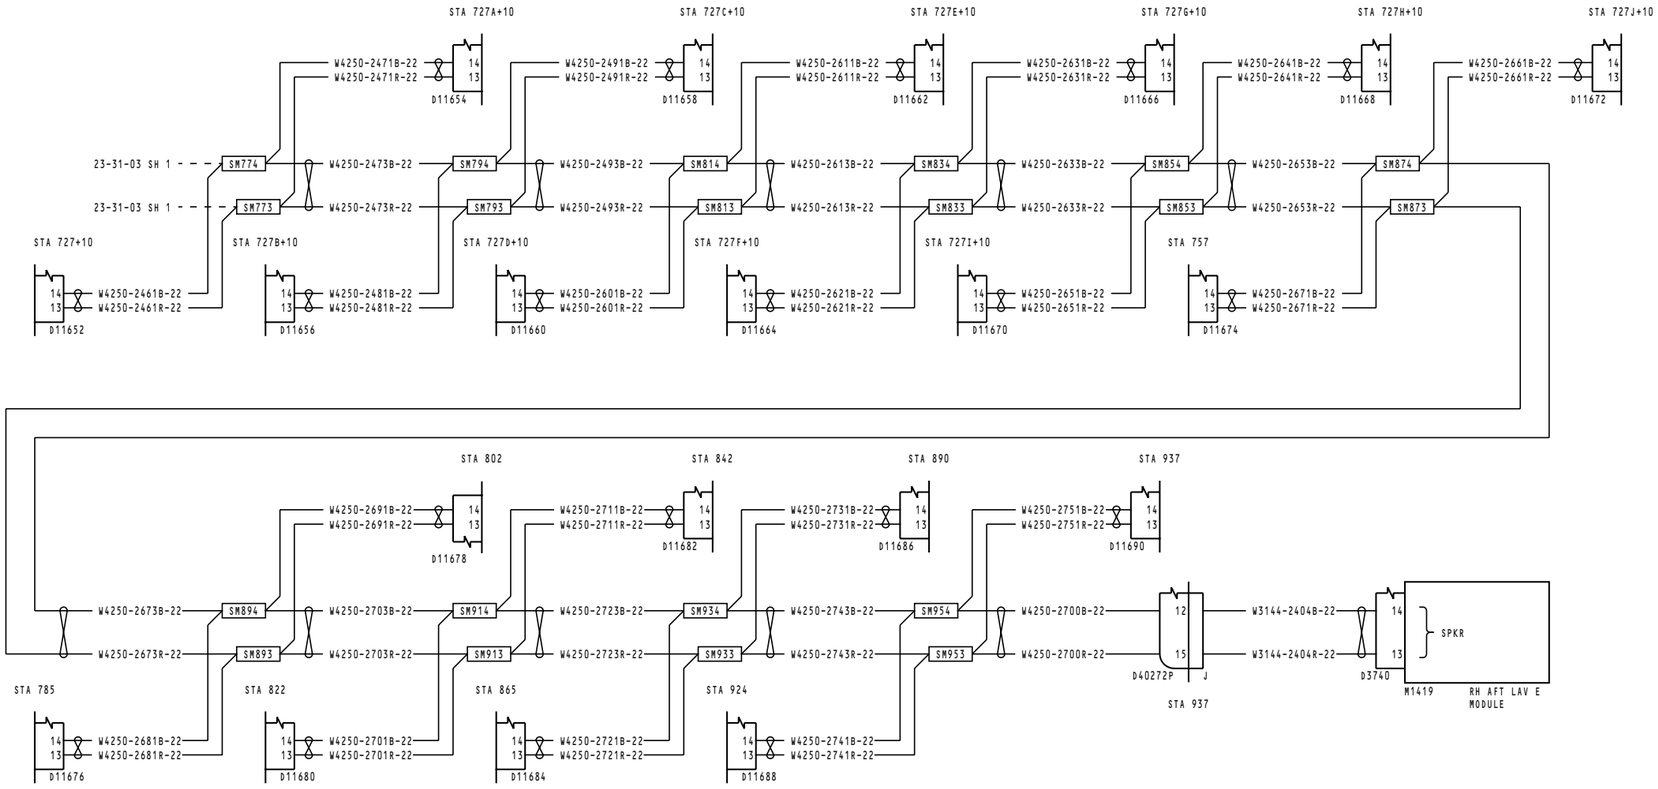


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-03

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

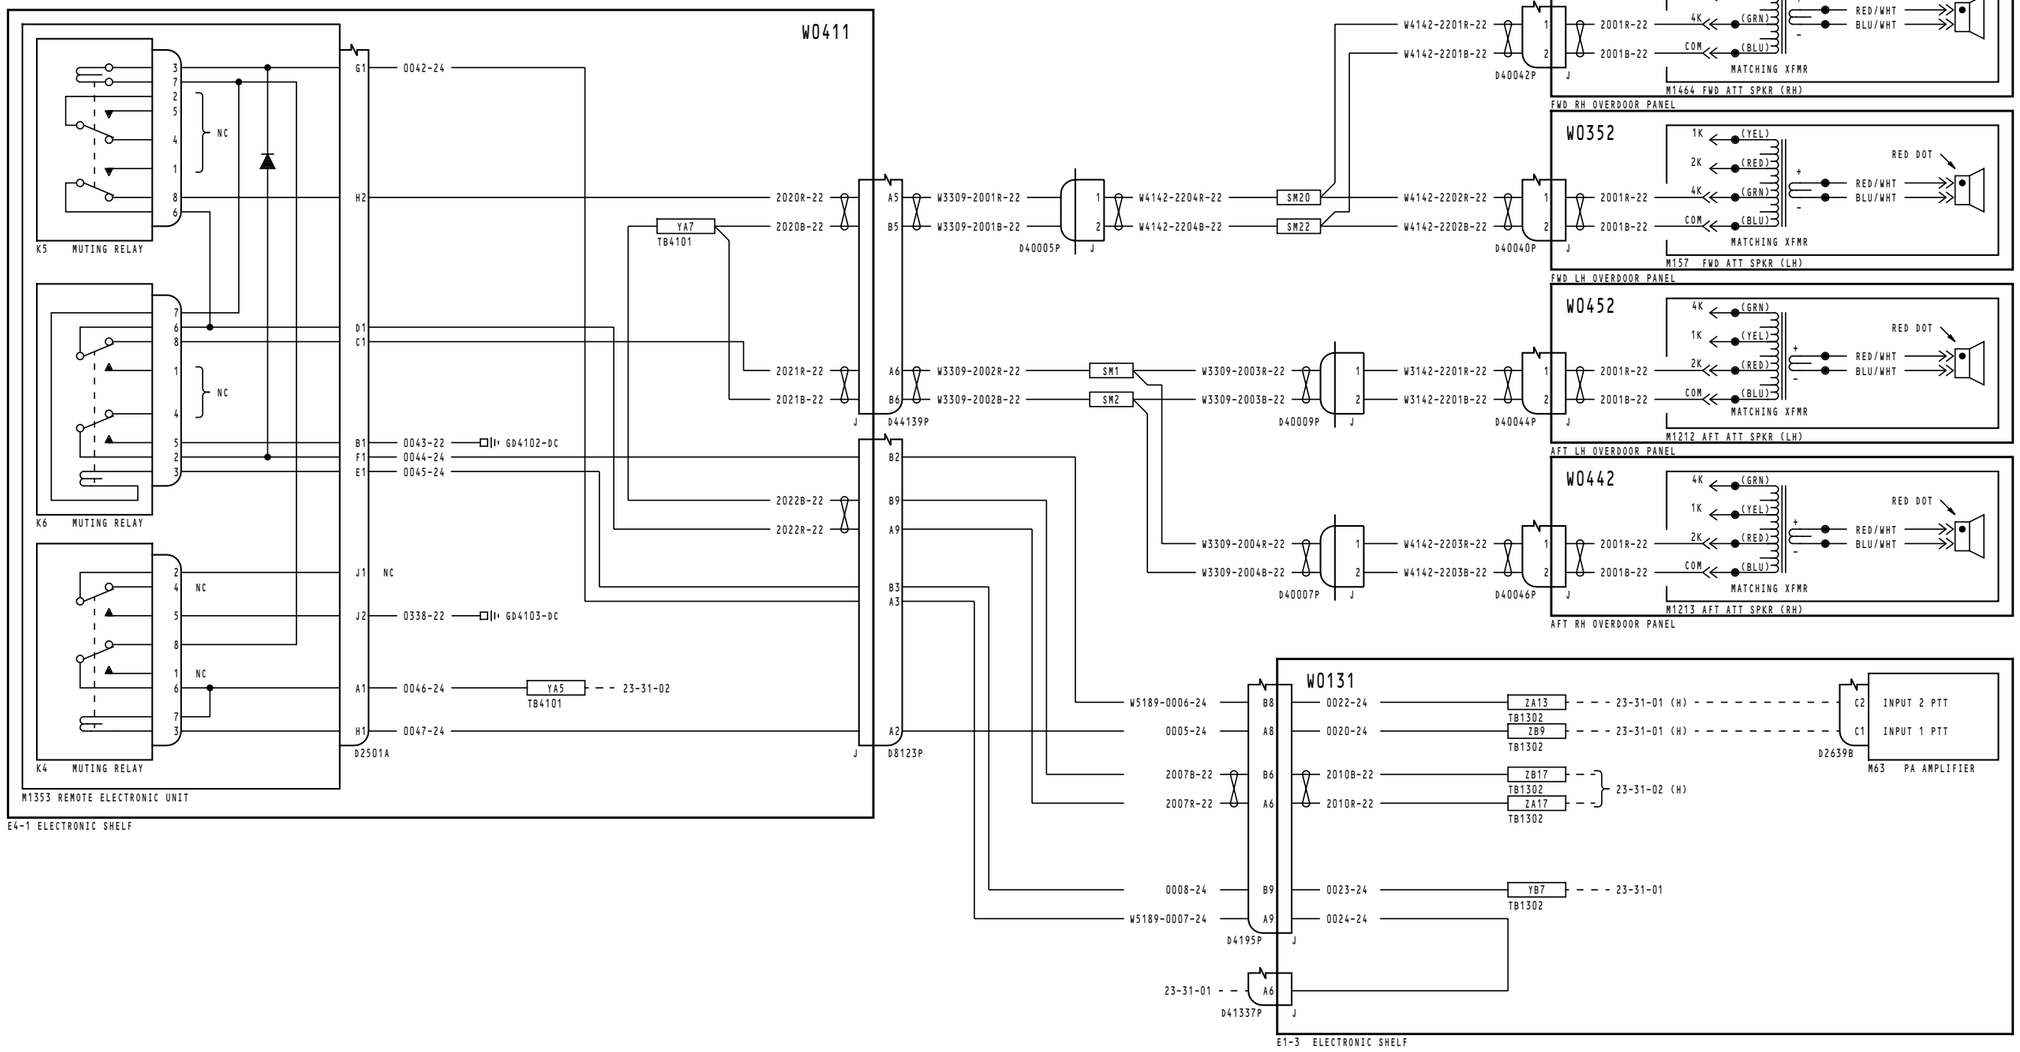


23-31-04

Page 1

May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

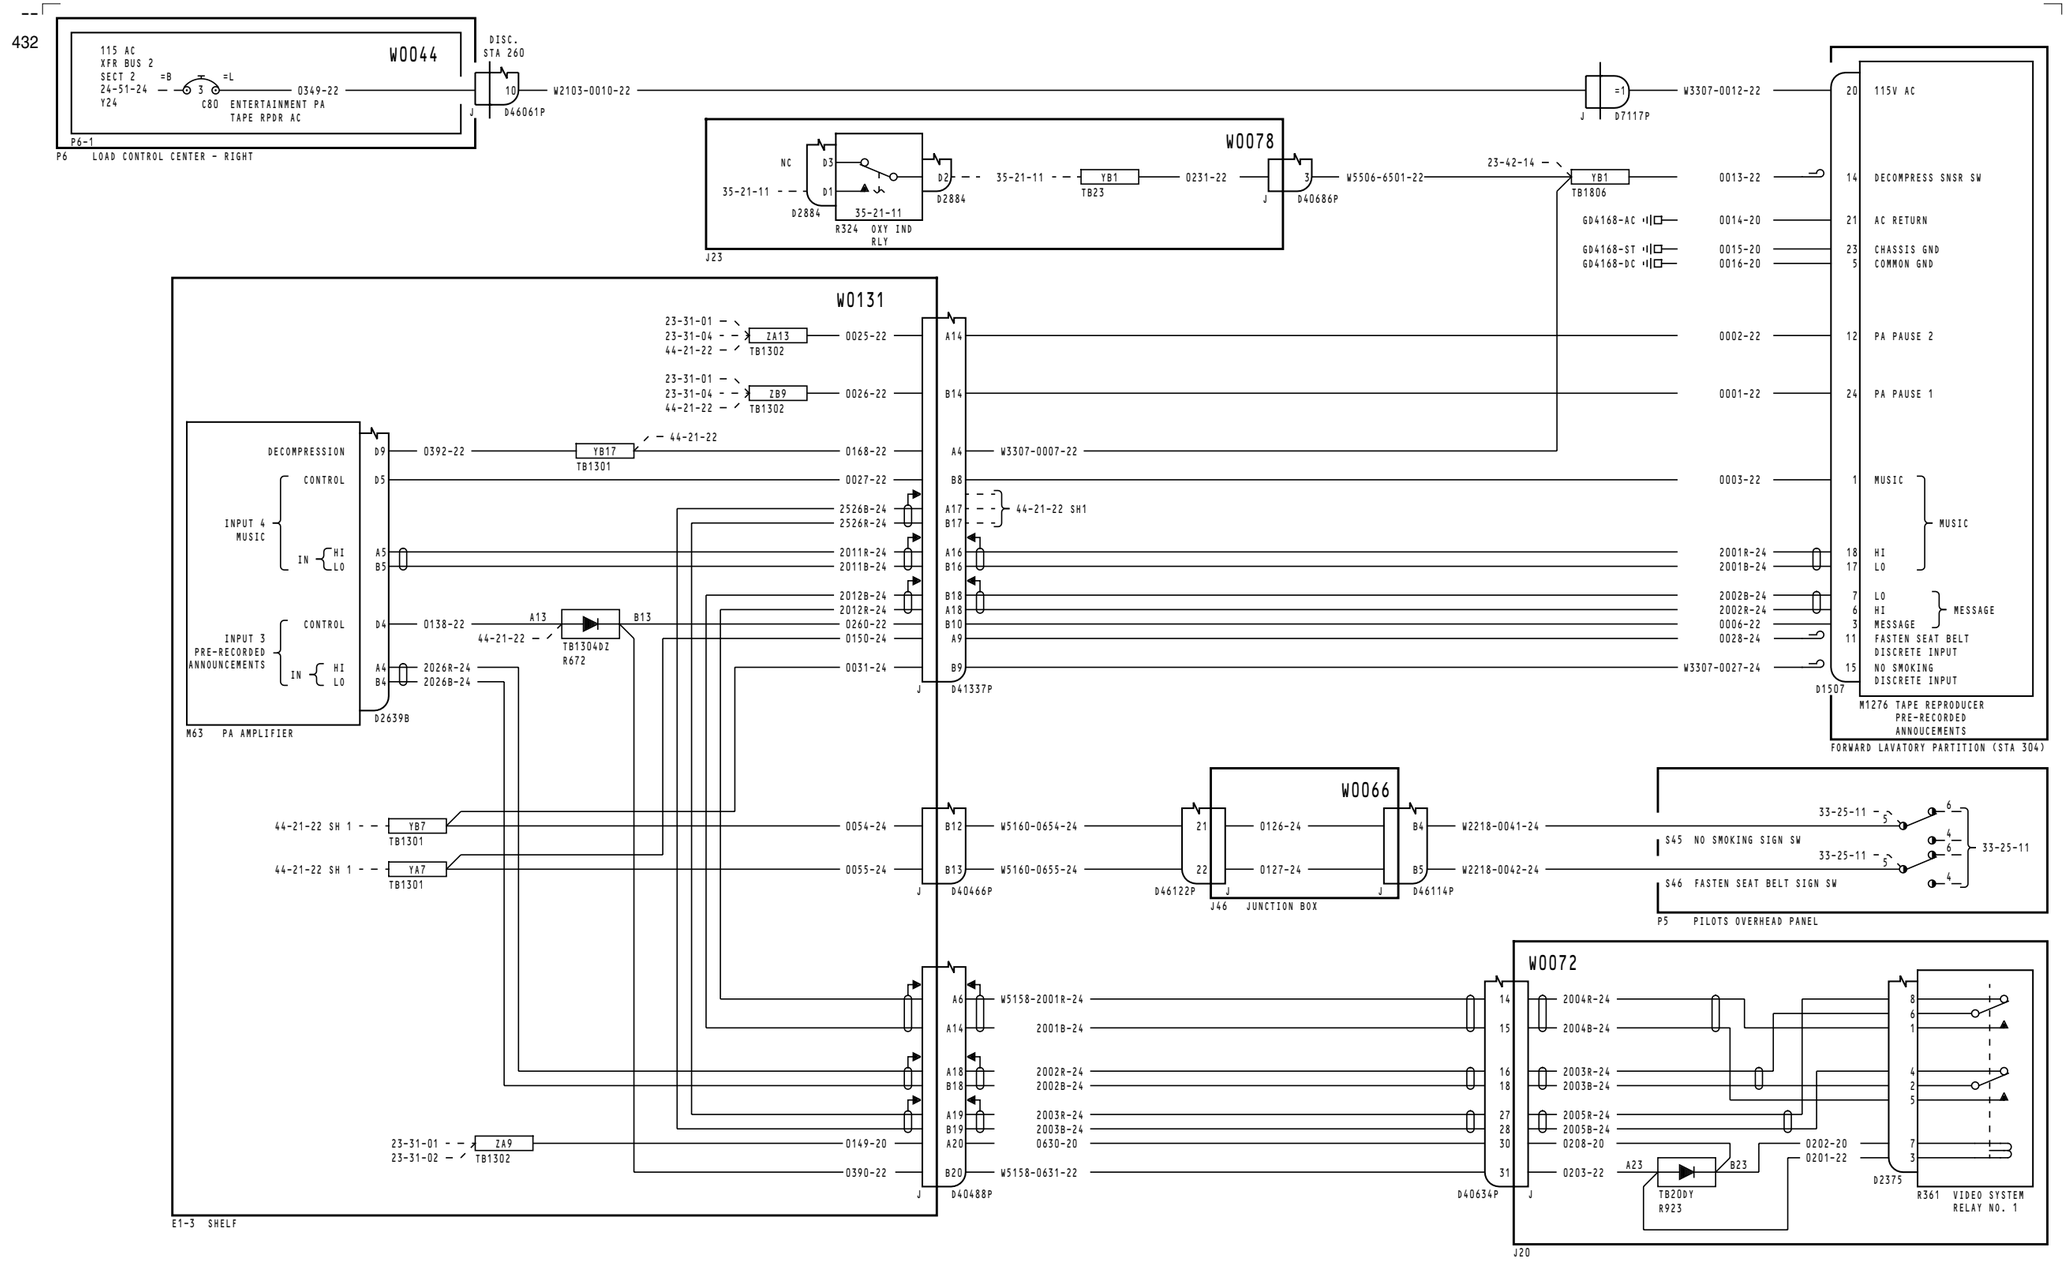

ALL	PASSENGER ADDRESS PRE-RECORDED ANNOUNCEMENTS	23-31-06
	D280AM1215	Page 1
		May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-31-06

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

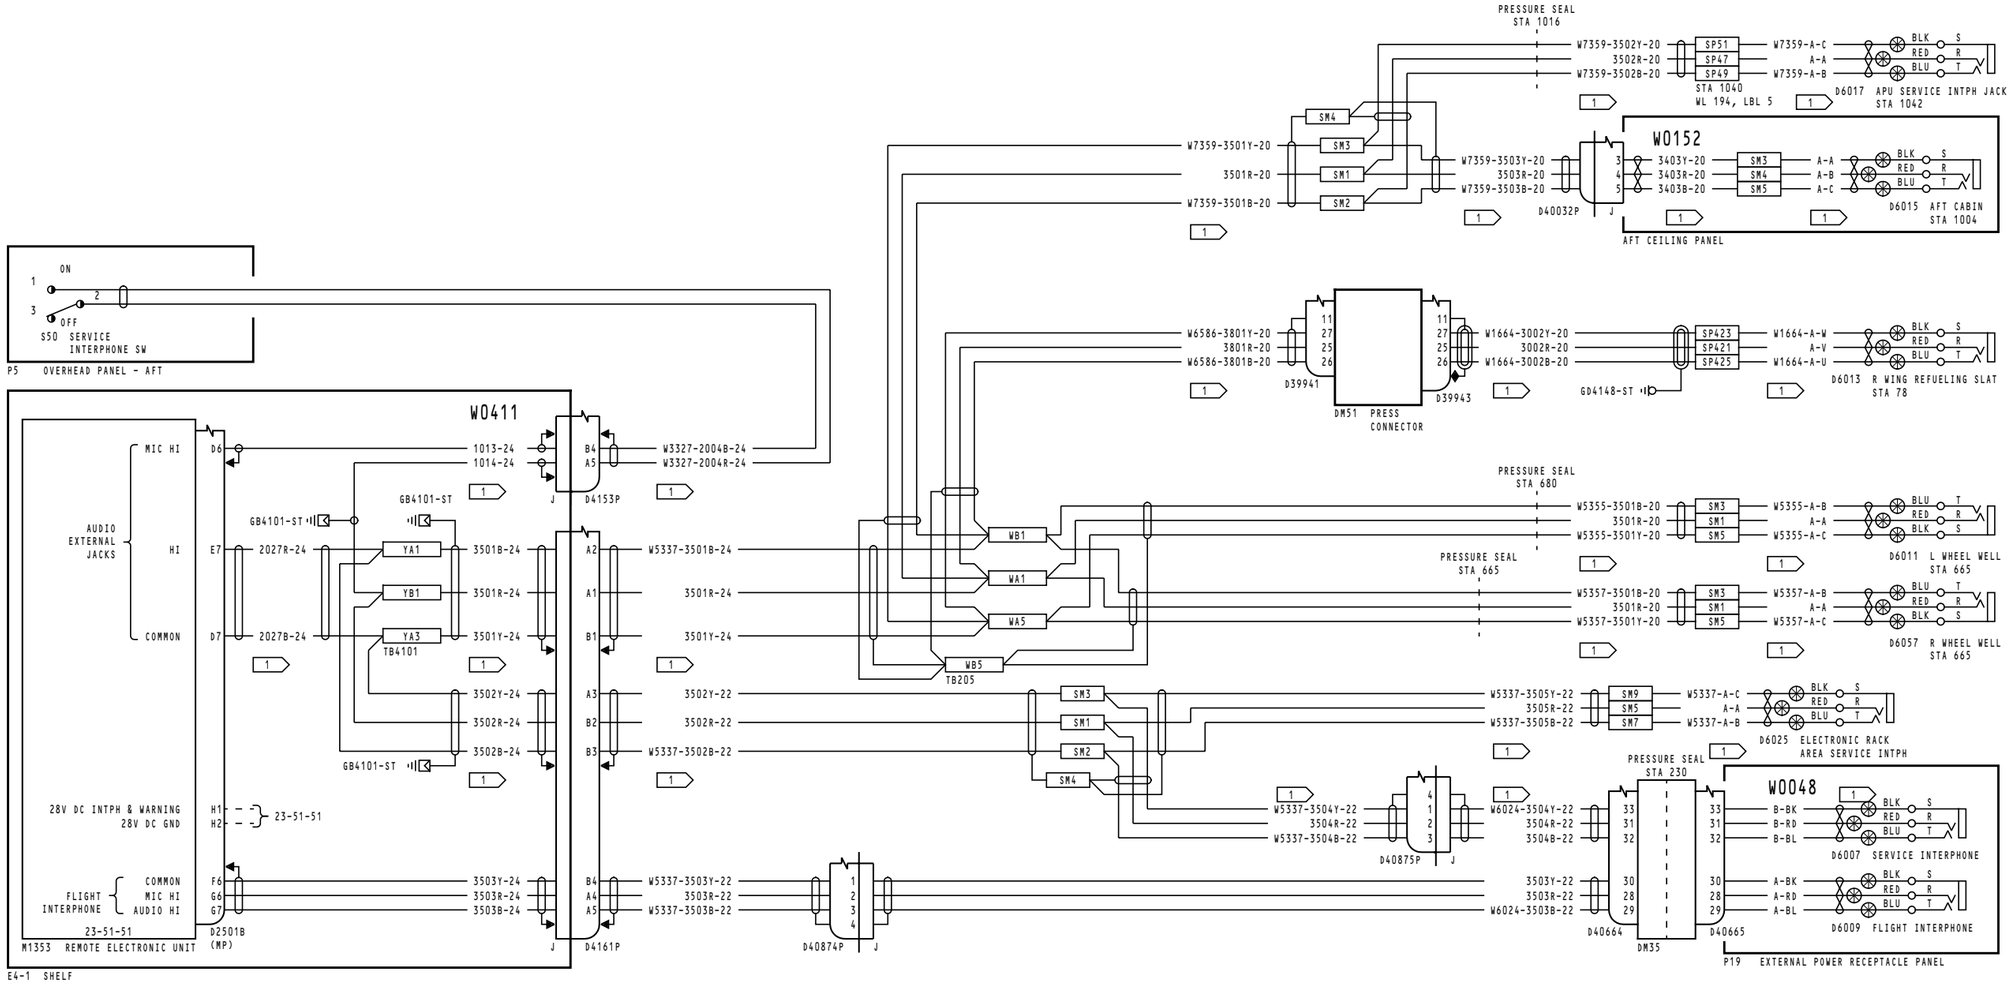

NOTES:

* THIS WIRE, IF SHIELDED AND/OR TWISTED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES. MAKING THIS WIRE ELECTROMAGNETCALLY COMPATIBLE.


1 THIS WIRE MAY BE BUNDLED WITH EMC CATEGORY 1 WIRES FOR SYSTEMS NOT UTILIZED DURING FLIGHT.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-41-11

Page 1

Nov 14/2025

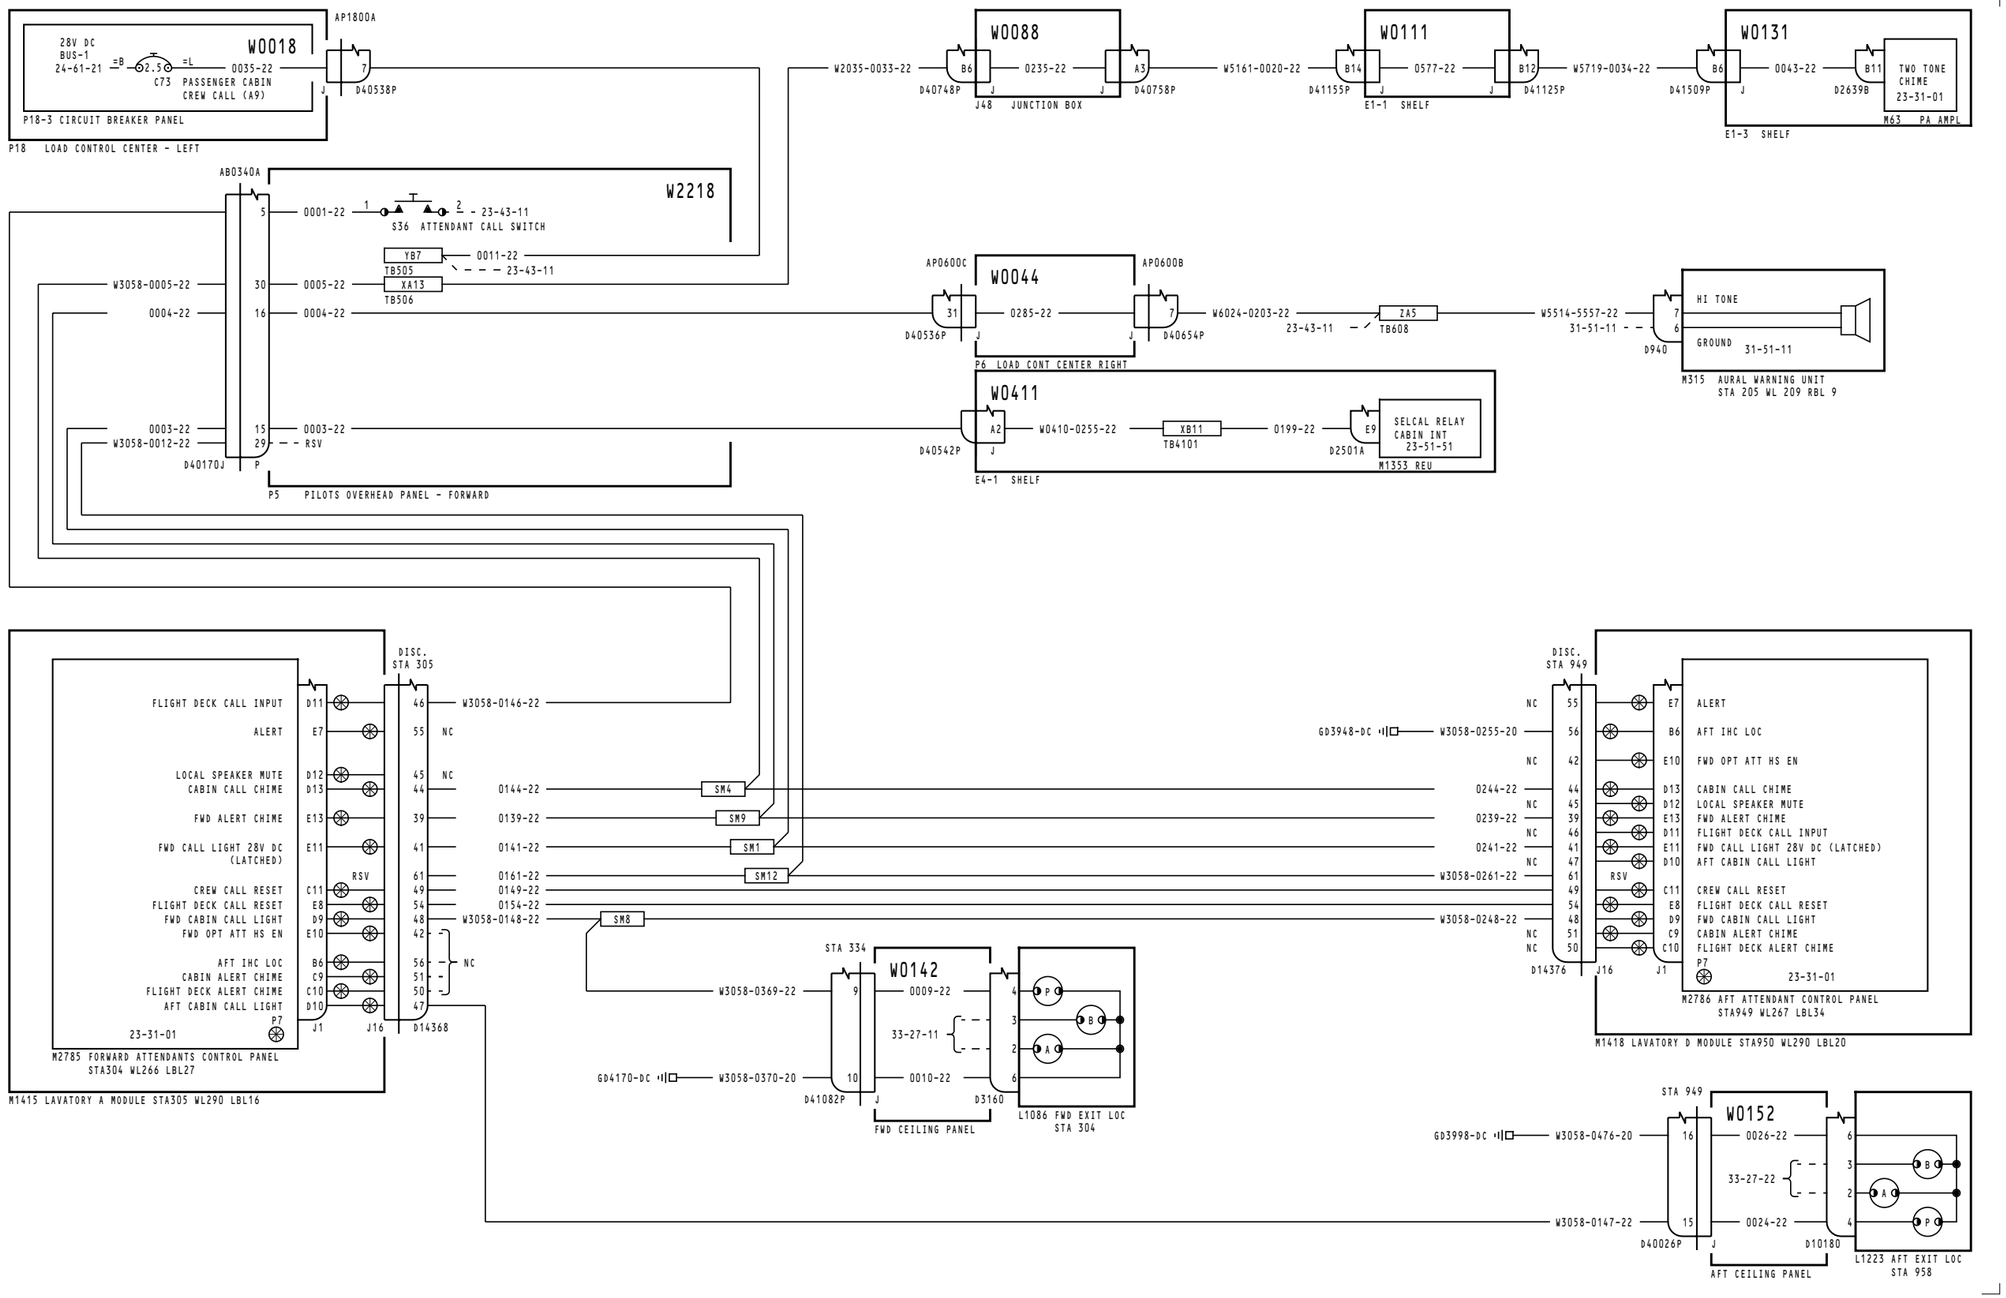
AP1800A
28V DC BUS-1 24-61-21
W0018
0035-22
C73 PASSENGER CABIN CREW CALL (A9)
D40538P
P18-3 CIRCUIT BREAKER PANEL
P18 LOAD CONTROL CENTER - LEFT
W2035-0033-22
W0088
D40748P
J48 JUNCTION BOX
0235-22
D40758P
W5161-0020-22
W0111
D41155P
E1-1 SHELF
0577-22
D41125P
W5719-0034-22
W0131
D41509P
0043-22
D2639B
TWO TONE CHIME 23-31-01
M63 PA AMPL
E1-3 SHELF
AB0340A
W2218
0001-22
S36 ATTENDANT CALL SWITCH
23-43-11
YB7
TB505
0011-22
XA13
TB506
0005-22
0004-22
W3058-0005-22
0003-22
W3058-0012-22
RSV
D40170J
P5 PILOTS OVERHEAD PANEL - FORWARD
AP0600C
AP0600B
W0044
D40536P
0285-22
D40654P
W6024-0203-22
ZA5
TB608
W5514-5557-22
D940
HI TONE
GROUND 31-51-11
M315 AURAL WARNING UNIT STA 205 WL 209 RBL 9
P6 LOAD CONT CENTER RIGHT
W0411
D40542P
W0410-0255-22
XB11
TB4101
0199-22
D2501A
SELCAL RELAY CABIN INT 23-51-51
M1353 REU
E4-1 SHELF
DISC. STA 305
FLIGHT DECK CALL INPUT
ALERT
LOCAL SPEAKER MUTE
CABIN CALL CHIME
FWD ALERT CHIME
FWD CALL LIGHT 28V DC (LATCHED)
CREW CALL RESET
FLIGHT DECK CALL RESET
FWD CABIN CALL LIGHT
FWD OPT ATT HS EN
AFT IHC LOC
CABIN ALERT CHIME
FLIGHT DECK ALERT CHIME
AFT CABIN CALL LIGHT
23-31-01
M2785 FORWARD ATTENDANTS CONTROL PANEL STA304 WL266 LBL27
M1415 LAVATORY A MODULE STA305 WL290 LBL16
W3058-0146-22
NC
0144-22
0139-22
0141-22
0161-22
0149-22
0154-22
W3058-0148-22
SM4
SM9
SM1
SM12
SM8
D14368
STA 334
W0142
W3058-0369-22
GD4170-DC
W3058-0370-20
D41082P
FWD CEILING PANEL
0009-22
33-27-11
0010-22
D3160
L1086 FWD EXIT LOC STA 304
DISC. STA 949
GD3948-DC
W3058-0255-20
W3058-0261-22
W3058-0248-22
0244-22
0239-22
0241-22
ALERT
AFT IHC LOC
FWD OPT ATT HS EN
CABIN CALL CHIME
LOCAL SPEAKER MUTE
FWD ALERT CHIME
FLIGHT DECK CALL INPUT
FWD CALL LIGHT 28V DC (LATCHED)
AFT CABIN CALL LIGHT
CREW CALL RESET
FLIGHT DECK CALL RESET
FWD CABIN CALL LIGHT
CABIN ALERT CHIME
FLIGHT DECK ALERT CHIME
D14376
M2786 AFT ATTENDANT CONTROL PANEL STA949 WL267 LBL34
M1418 LAVATORY D MODULE STA950 WL290 LBL20
STA 949
W0152
GD3998-DC
W3058-0476-20
W3058-0147-22
0026-22
33-27-22
0024-22
D40026P
D10180
AFT CEILING PANEL
L1223 AFT EXIT LOC STA 958

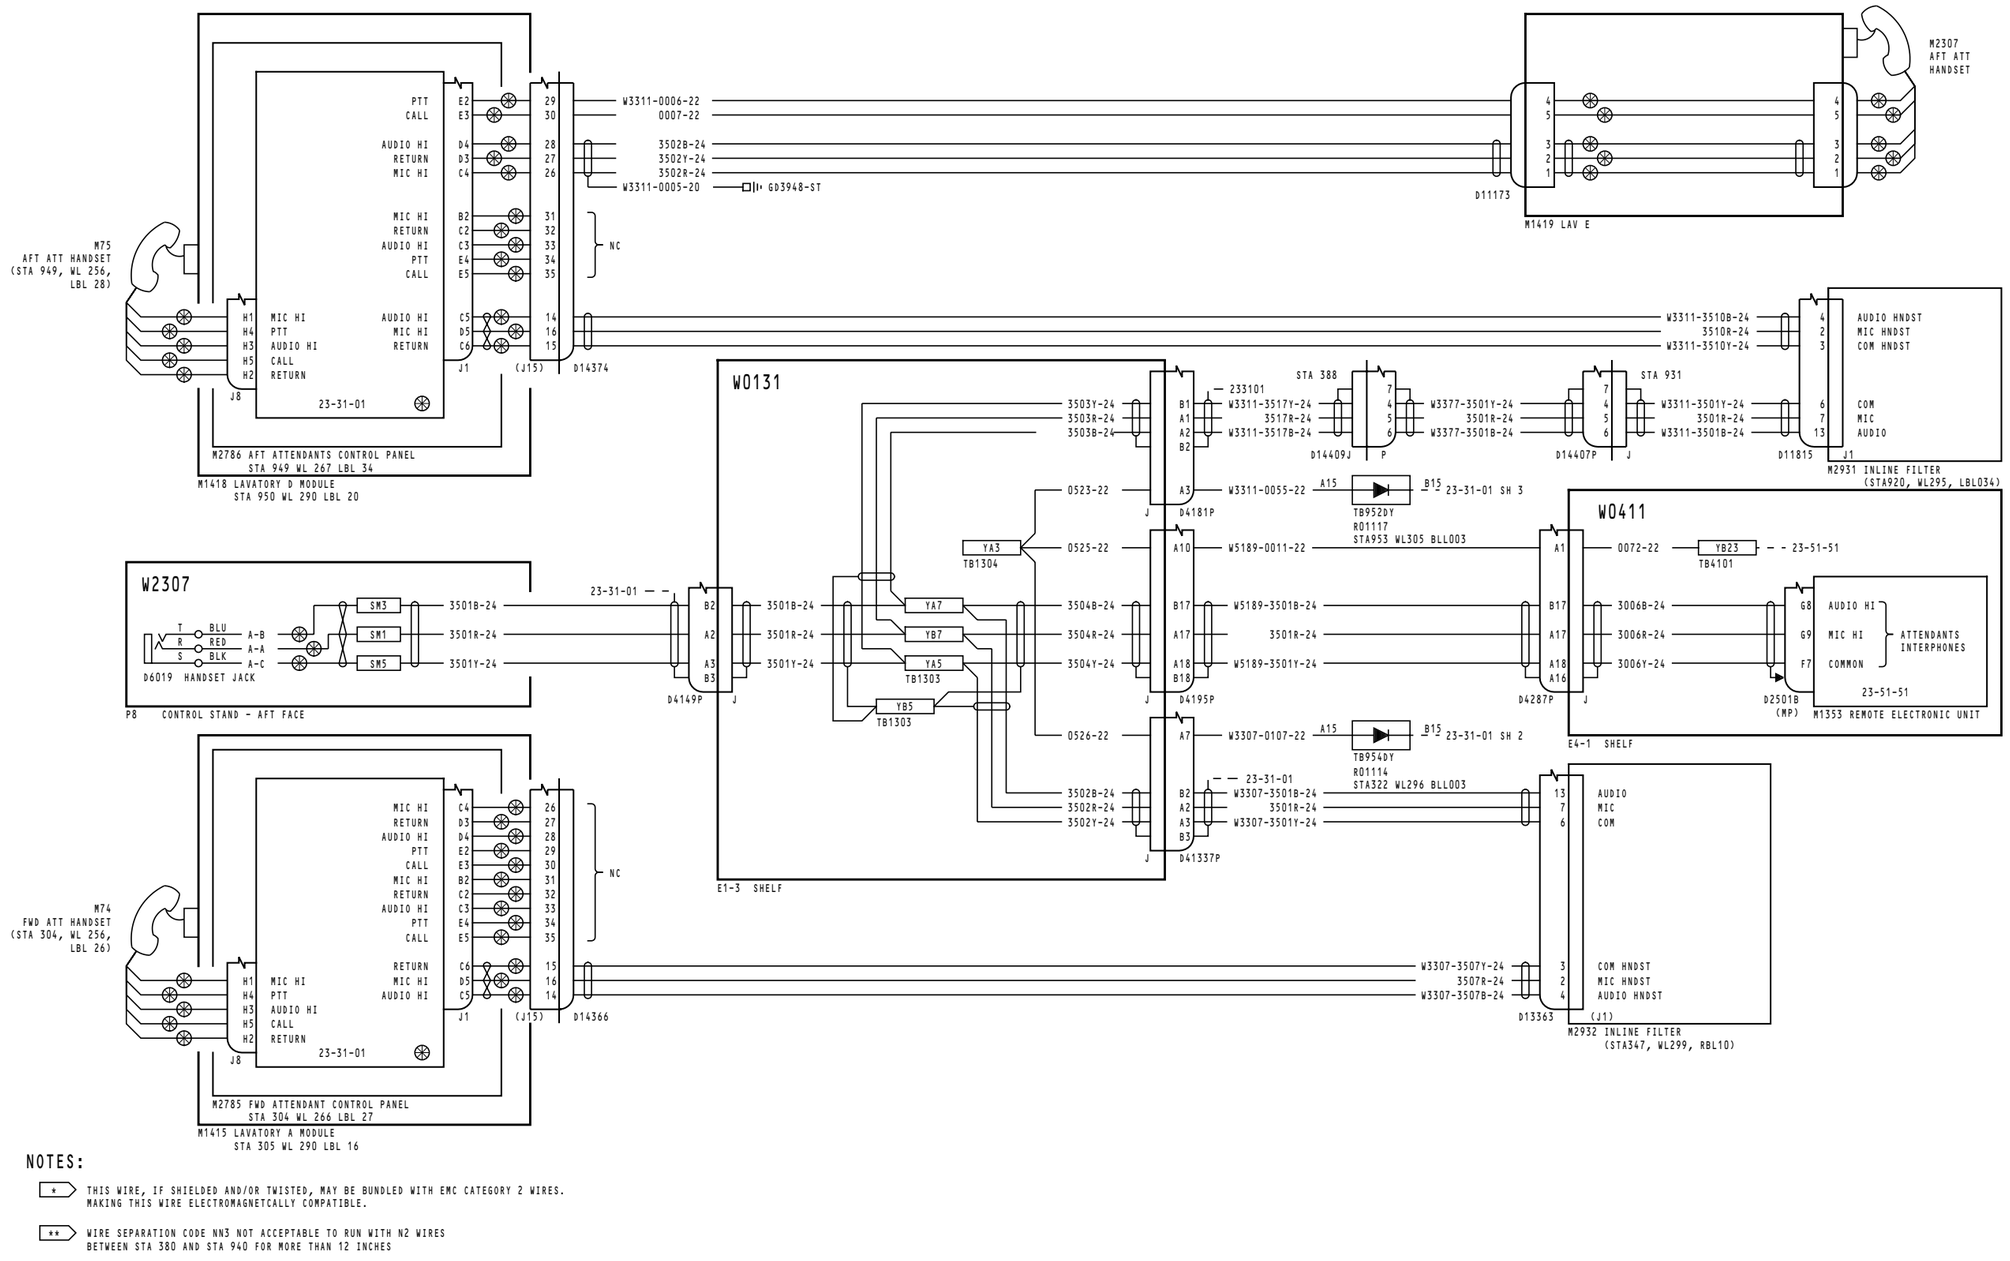

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-42-12

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-A
113

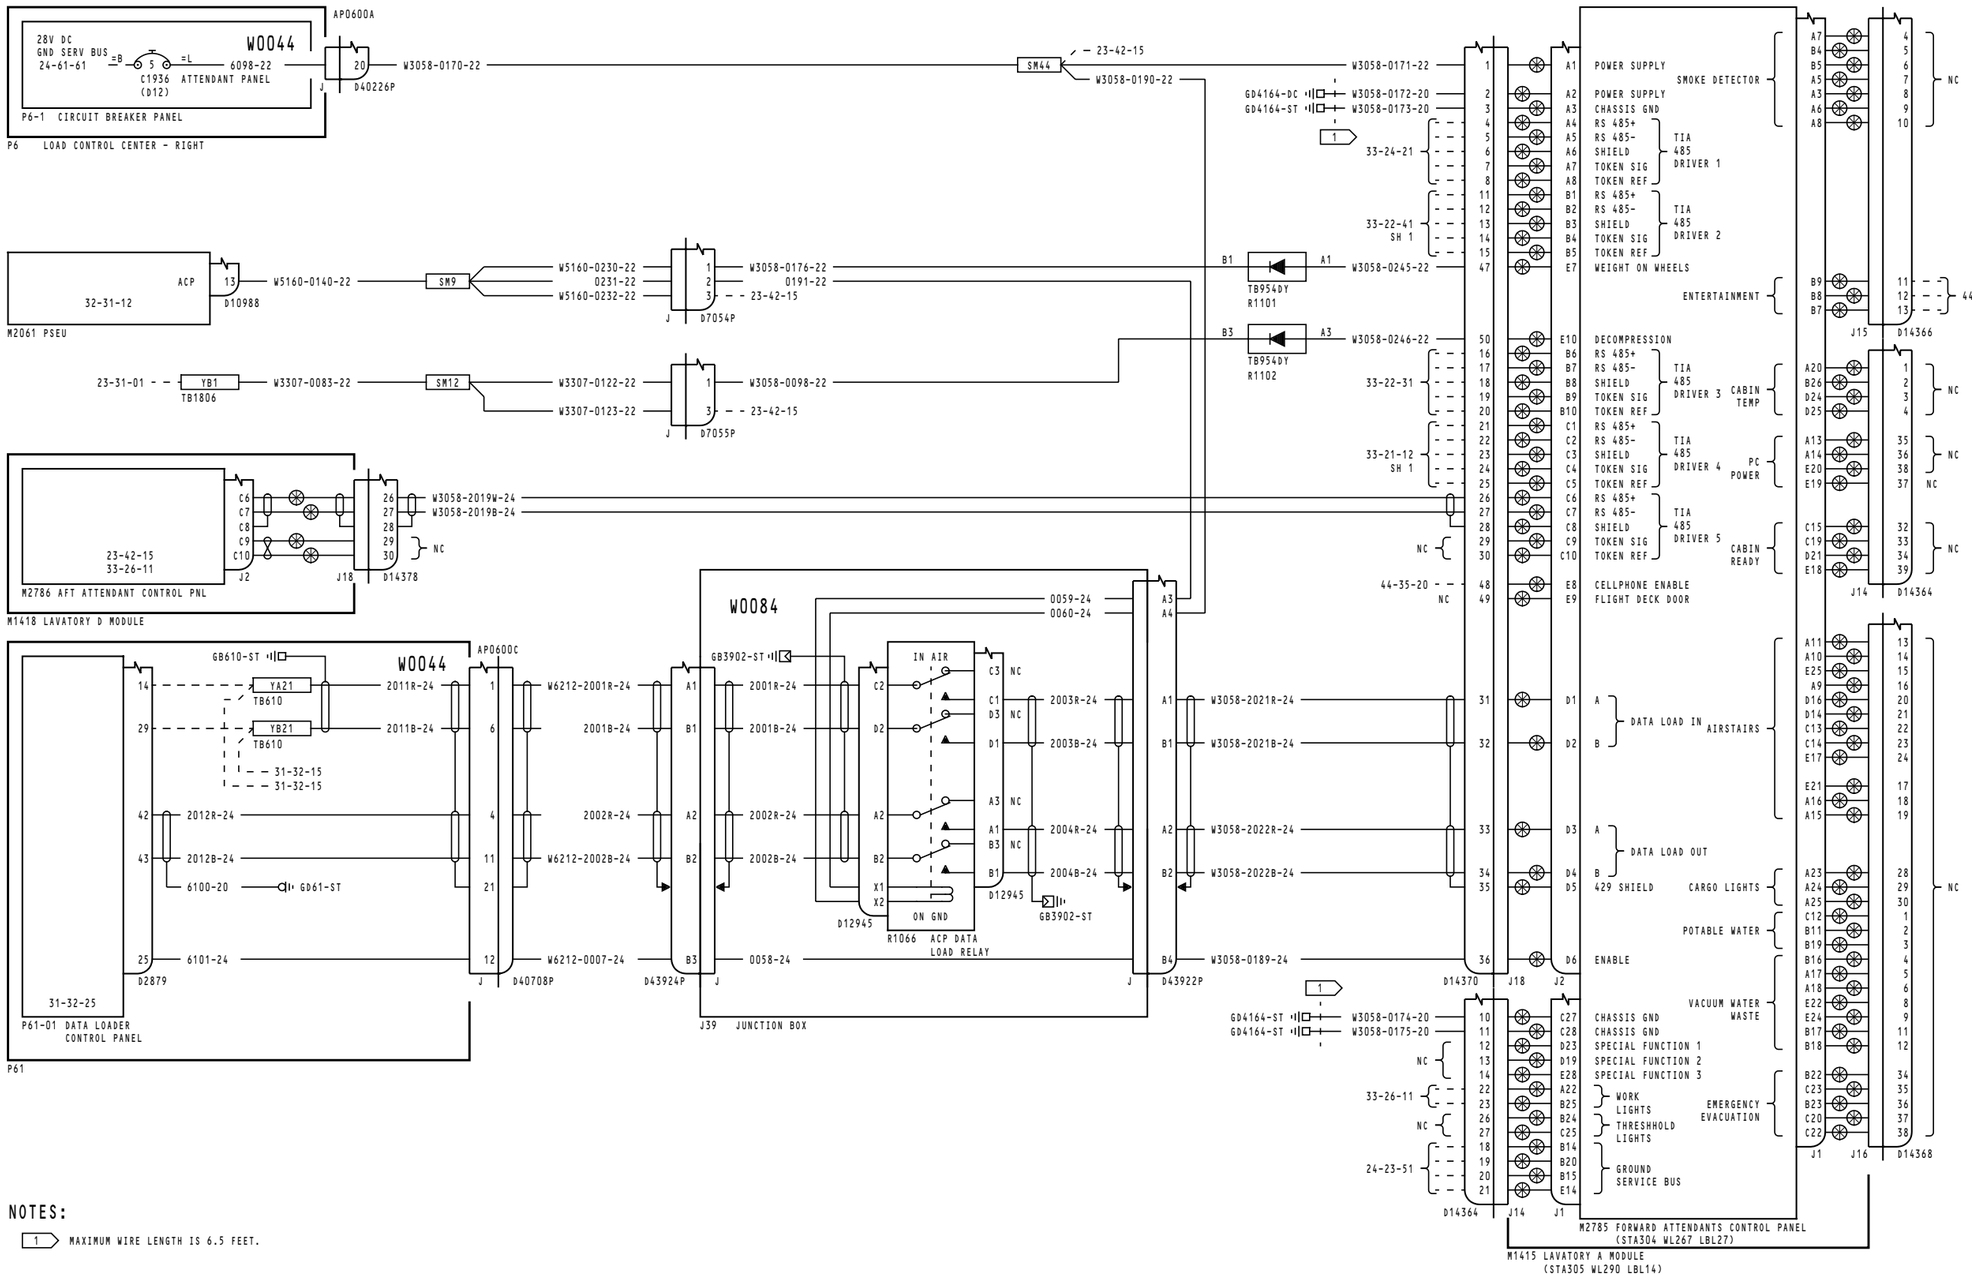

NOTES:


1. MAXIMUM WIRE LENGTH IS 6.5 FEET.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-42-14

Page 1

May 15/2024

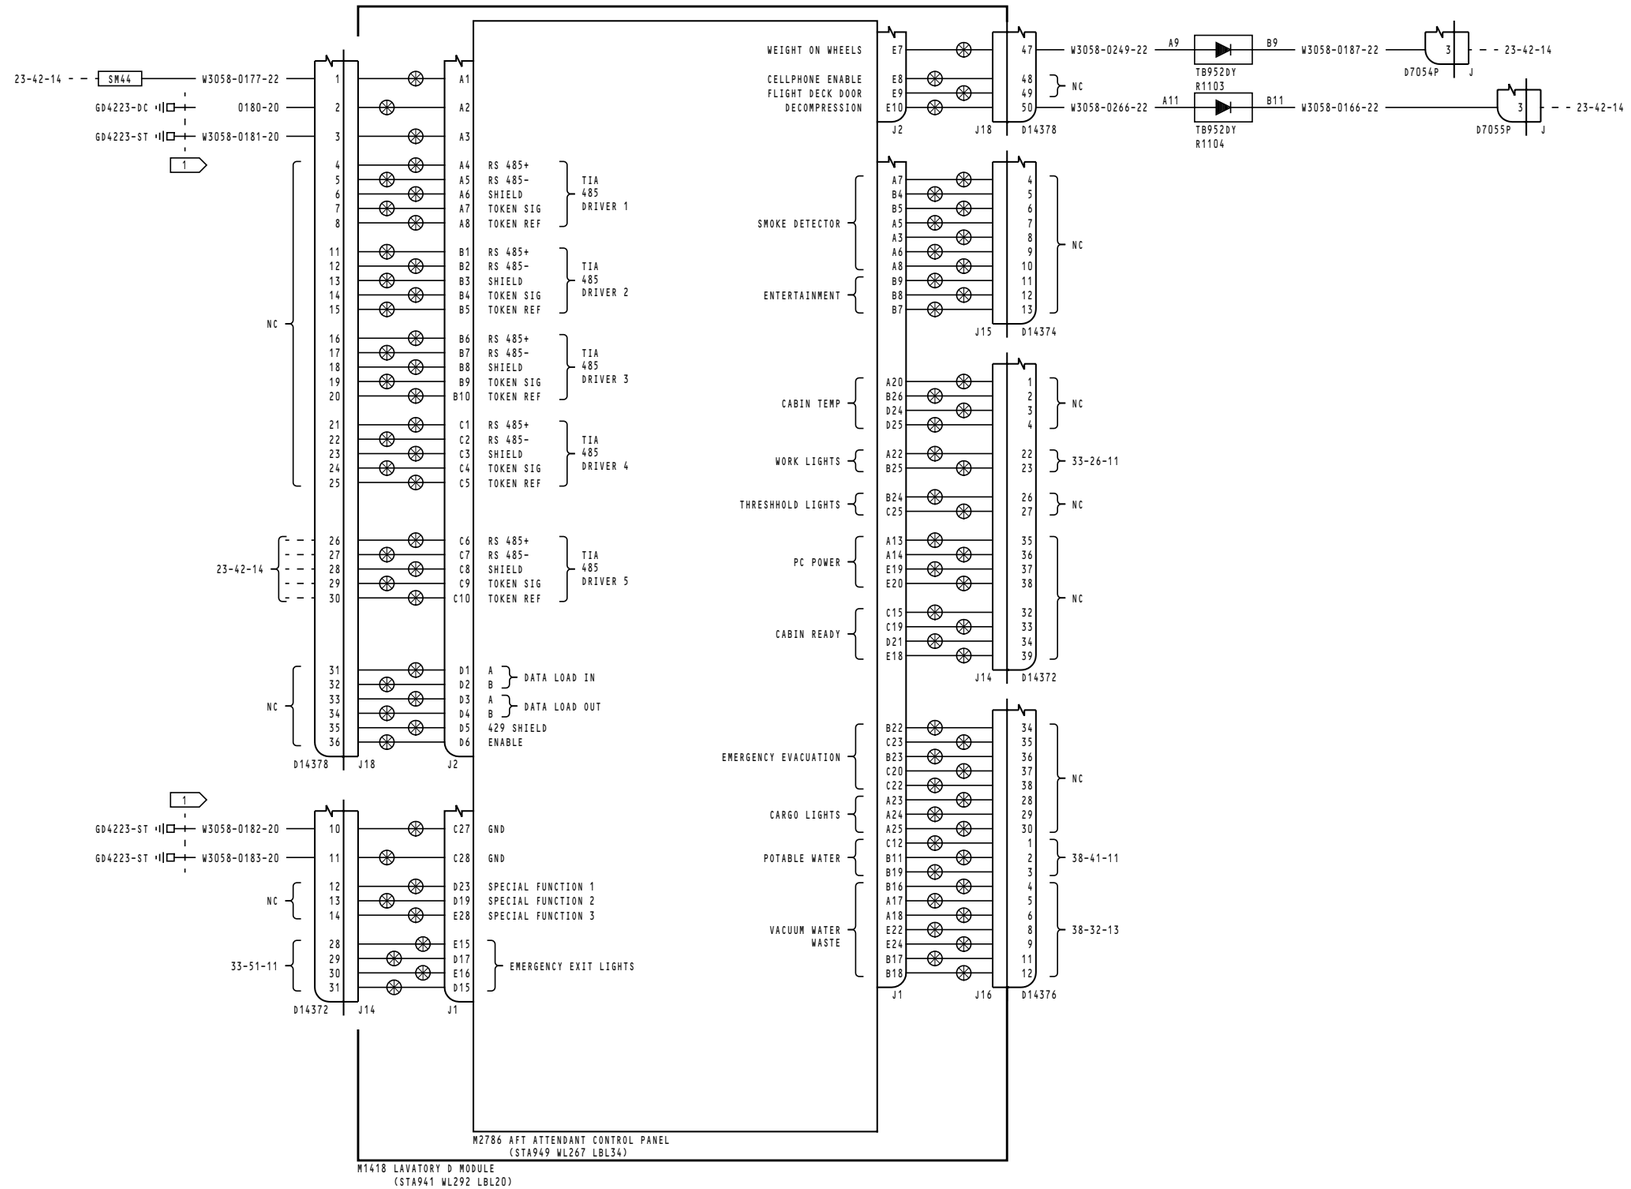

NOTES:

1 MAXIMUM WIRE LENGTH IS 6.5 FEET.

737-8 WIRING DIAGRAM MANUAL

23-42-15

Page 1


May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details

737-8 WIRING DIAGRAM MANUAL

-A

104

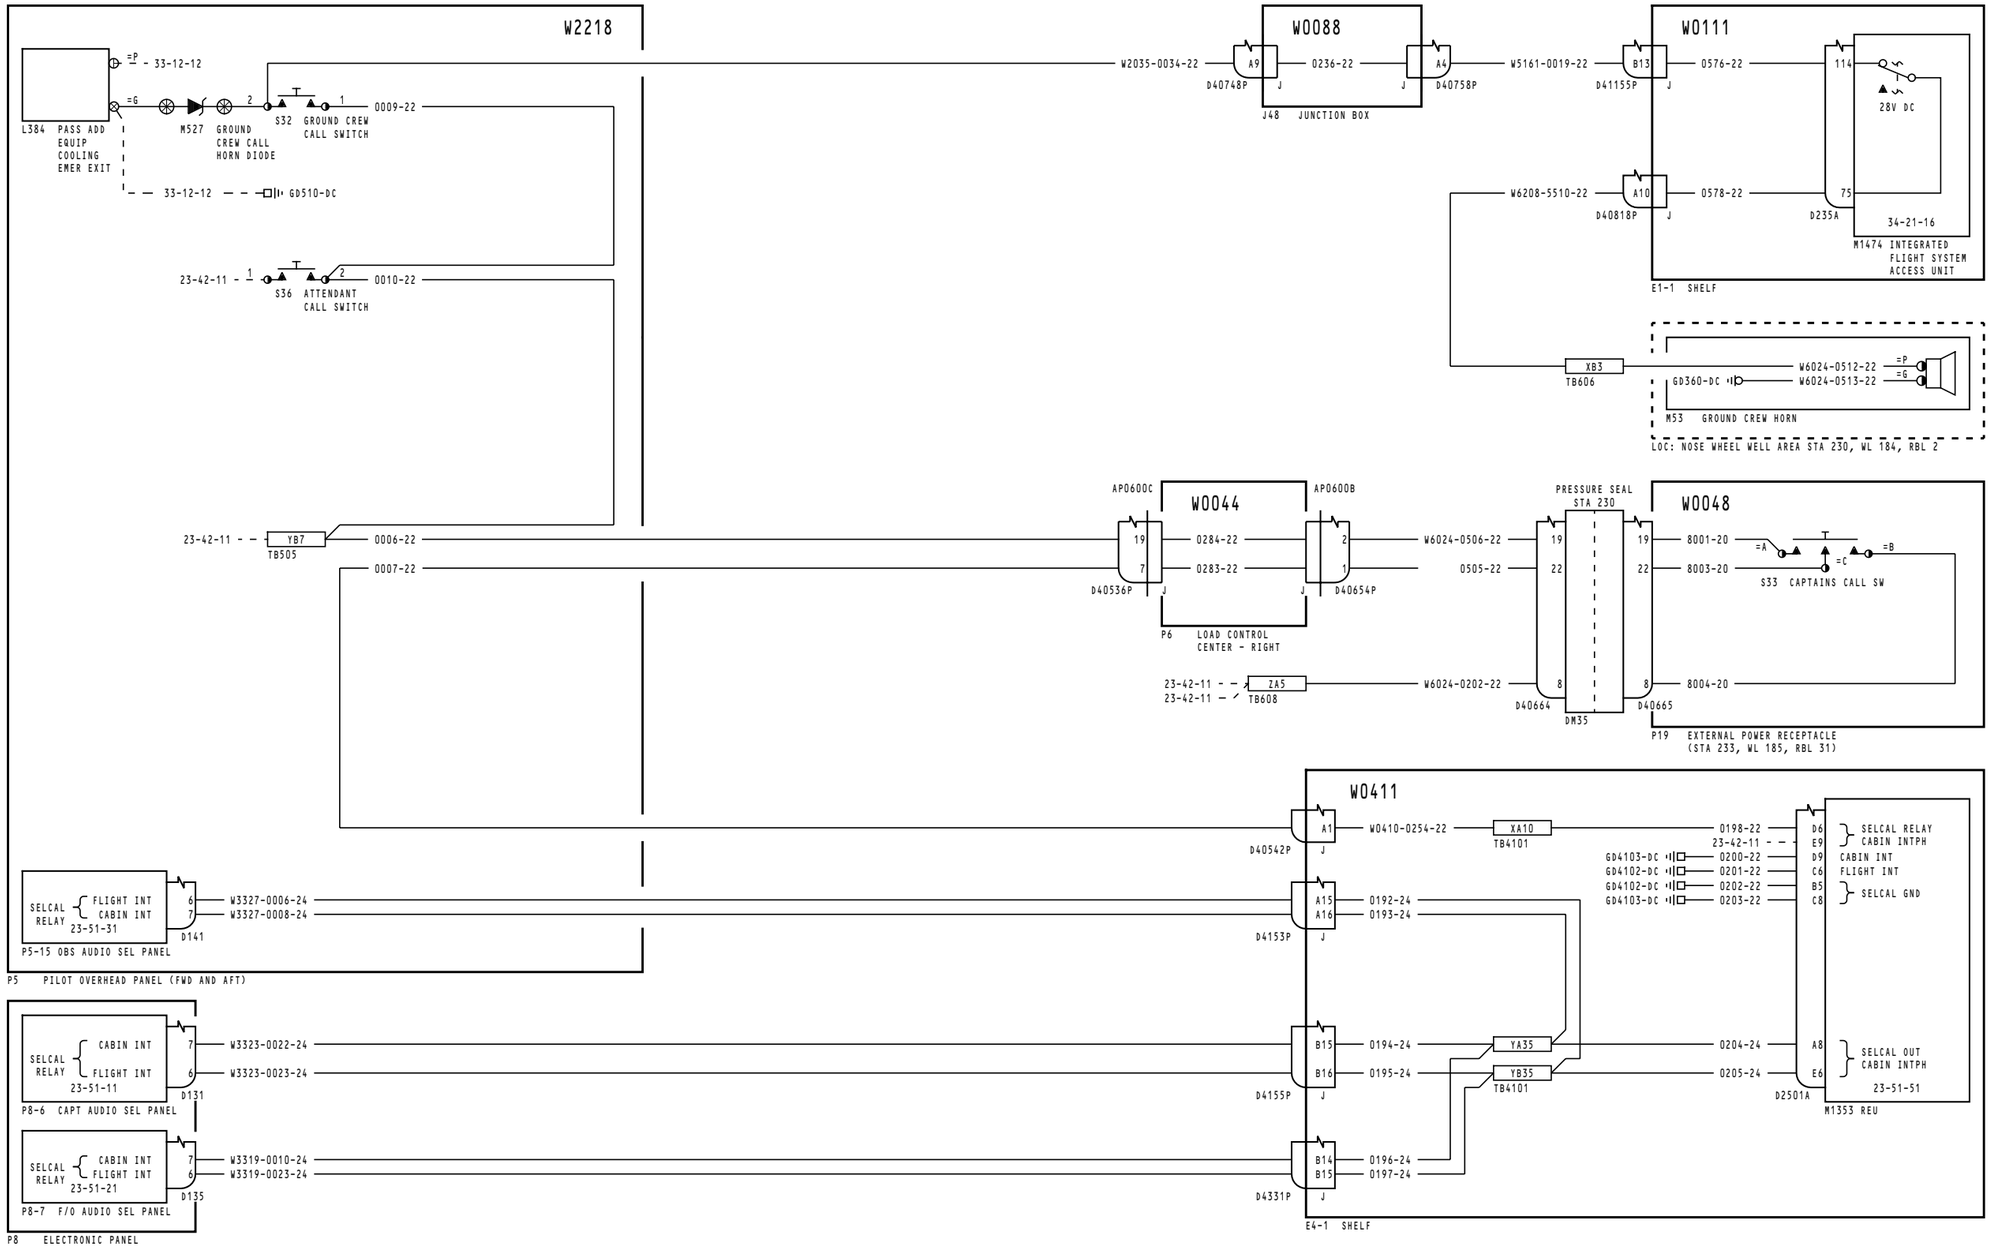

ALL

GROUND CREW CALL

D280AM1215

23-43-11

Page 1

May 15/2024


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-43-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

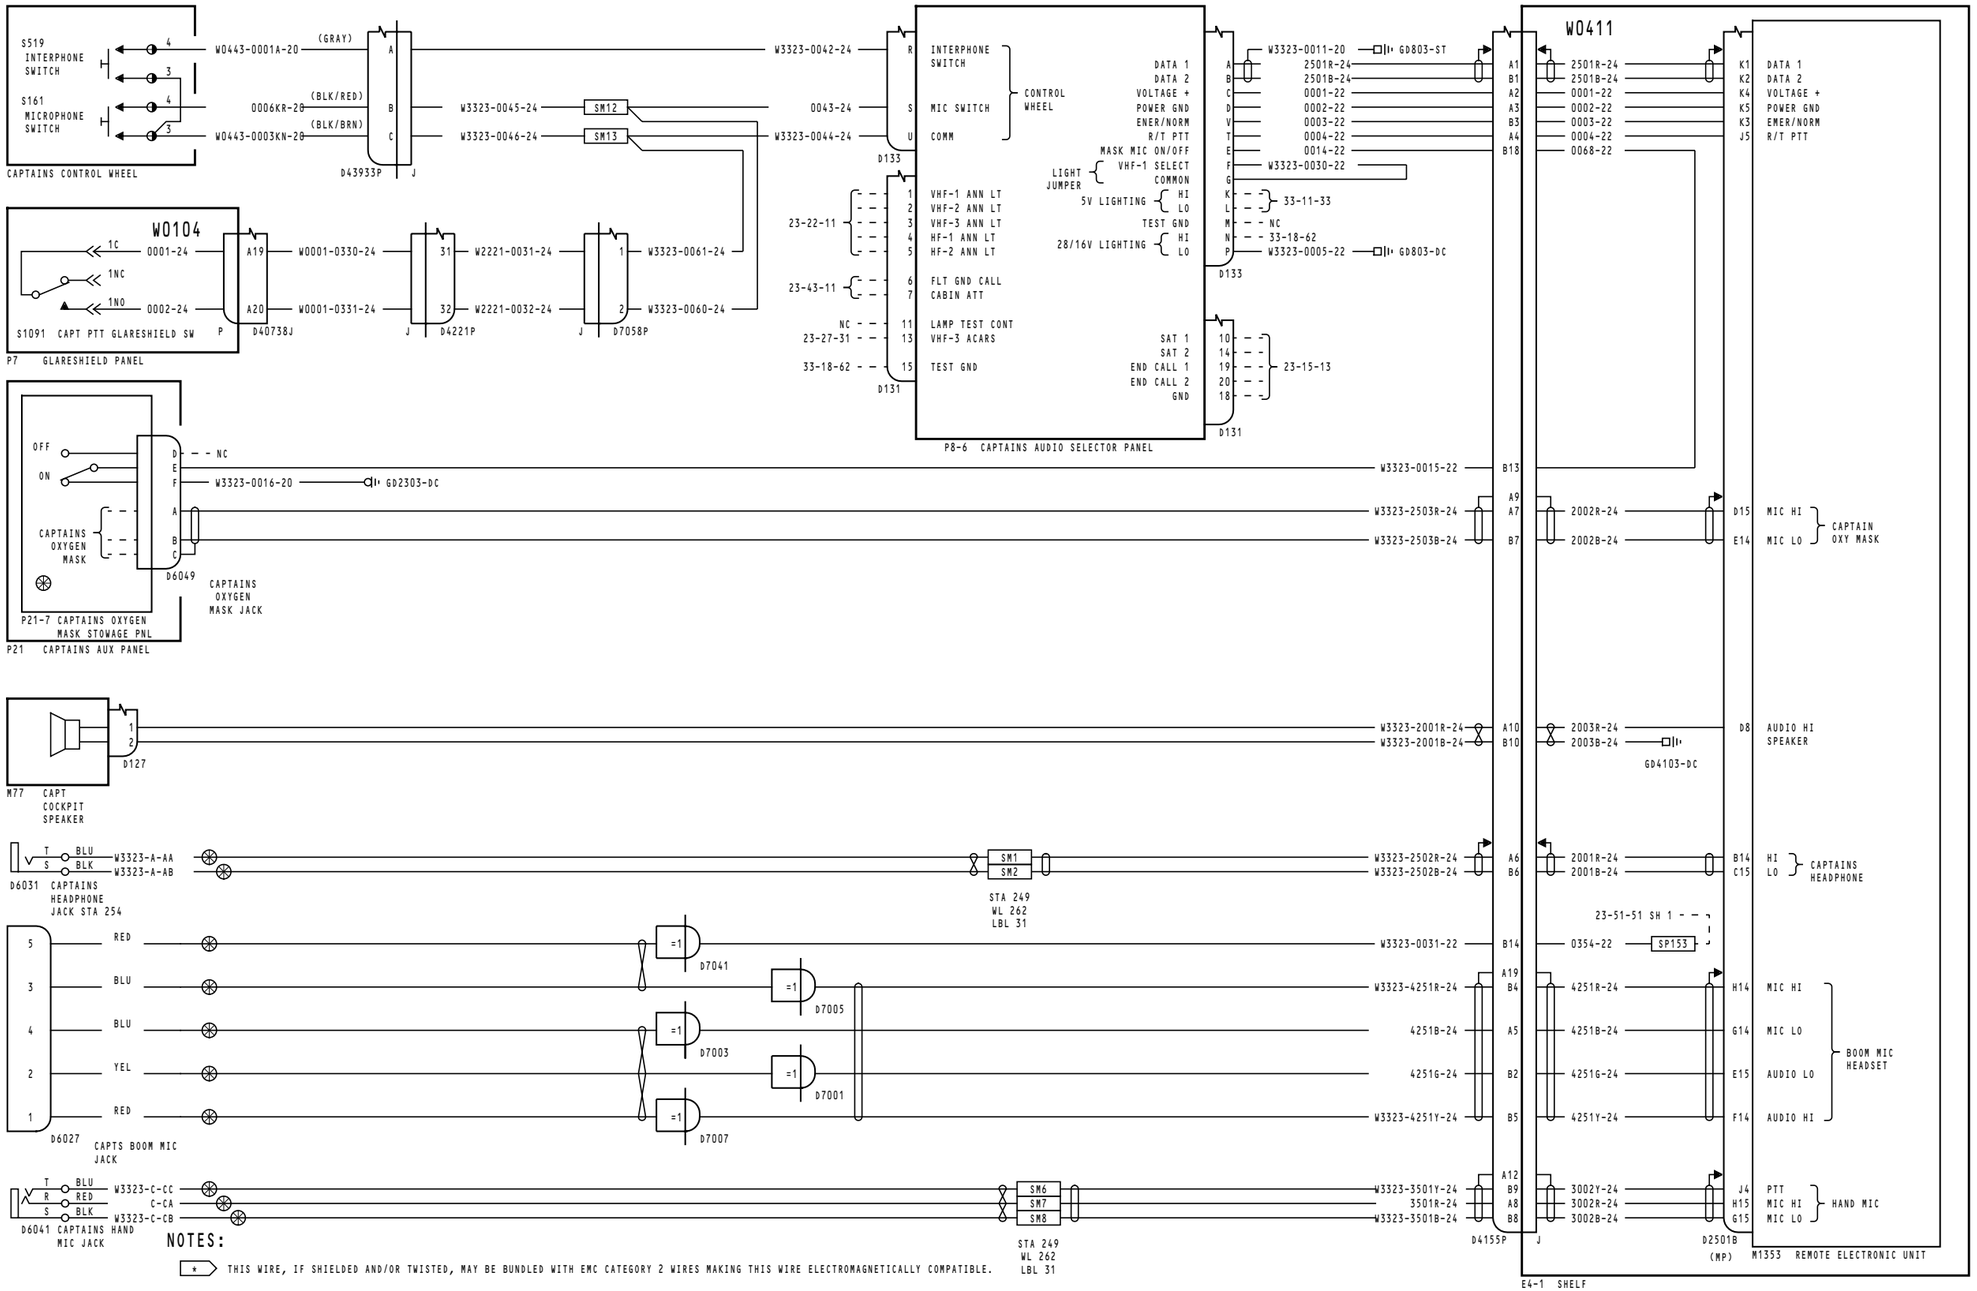


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-51-11

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

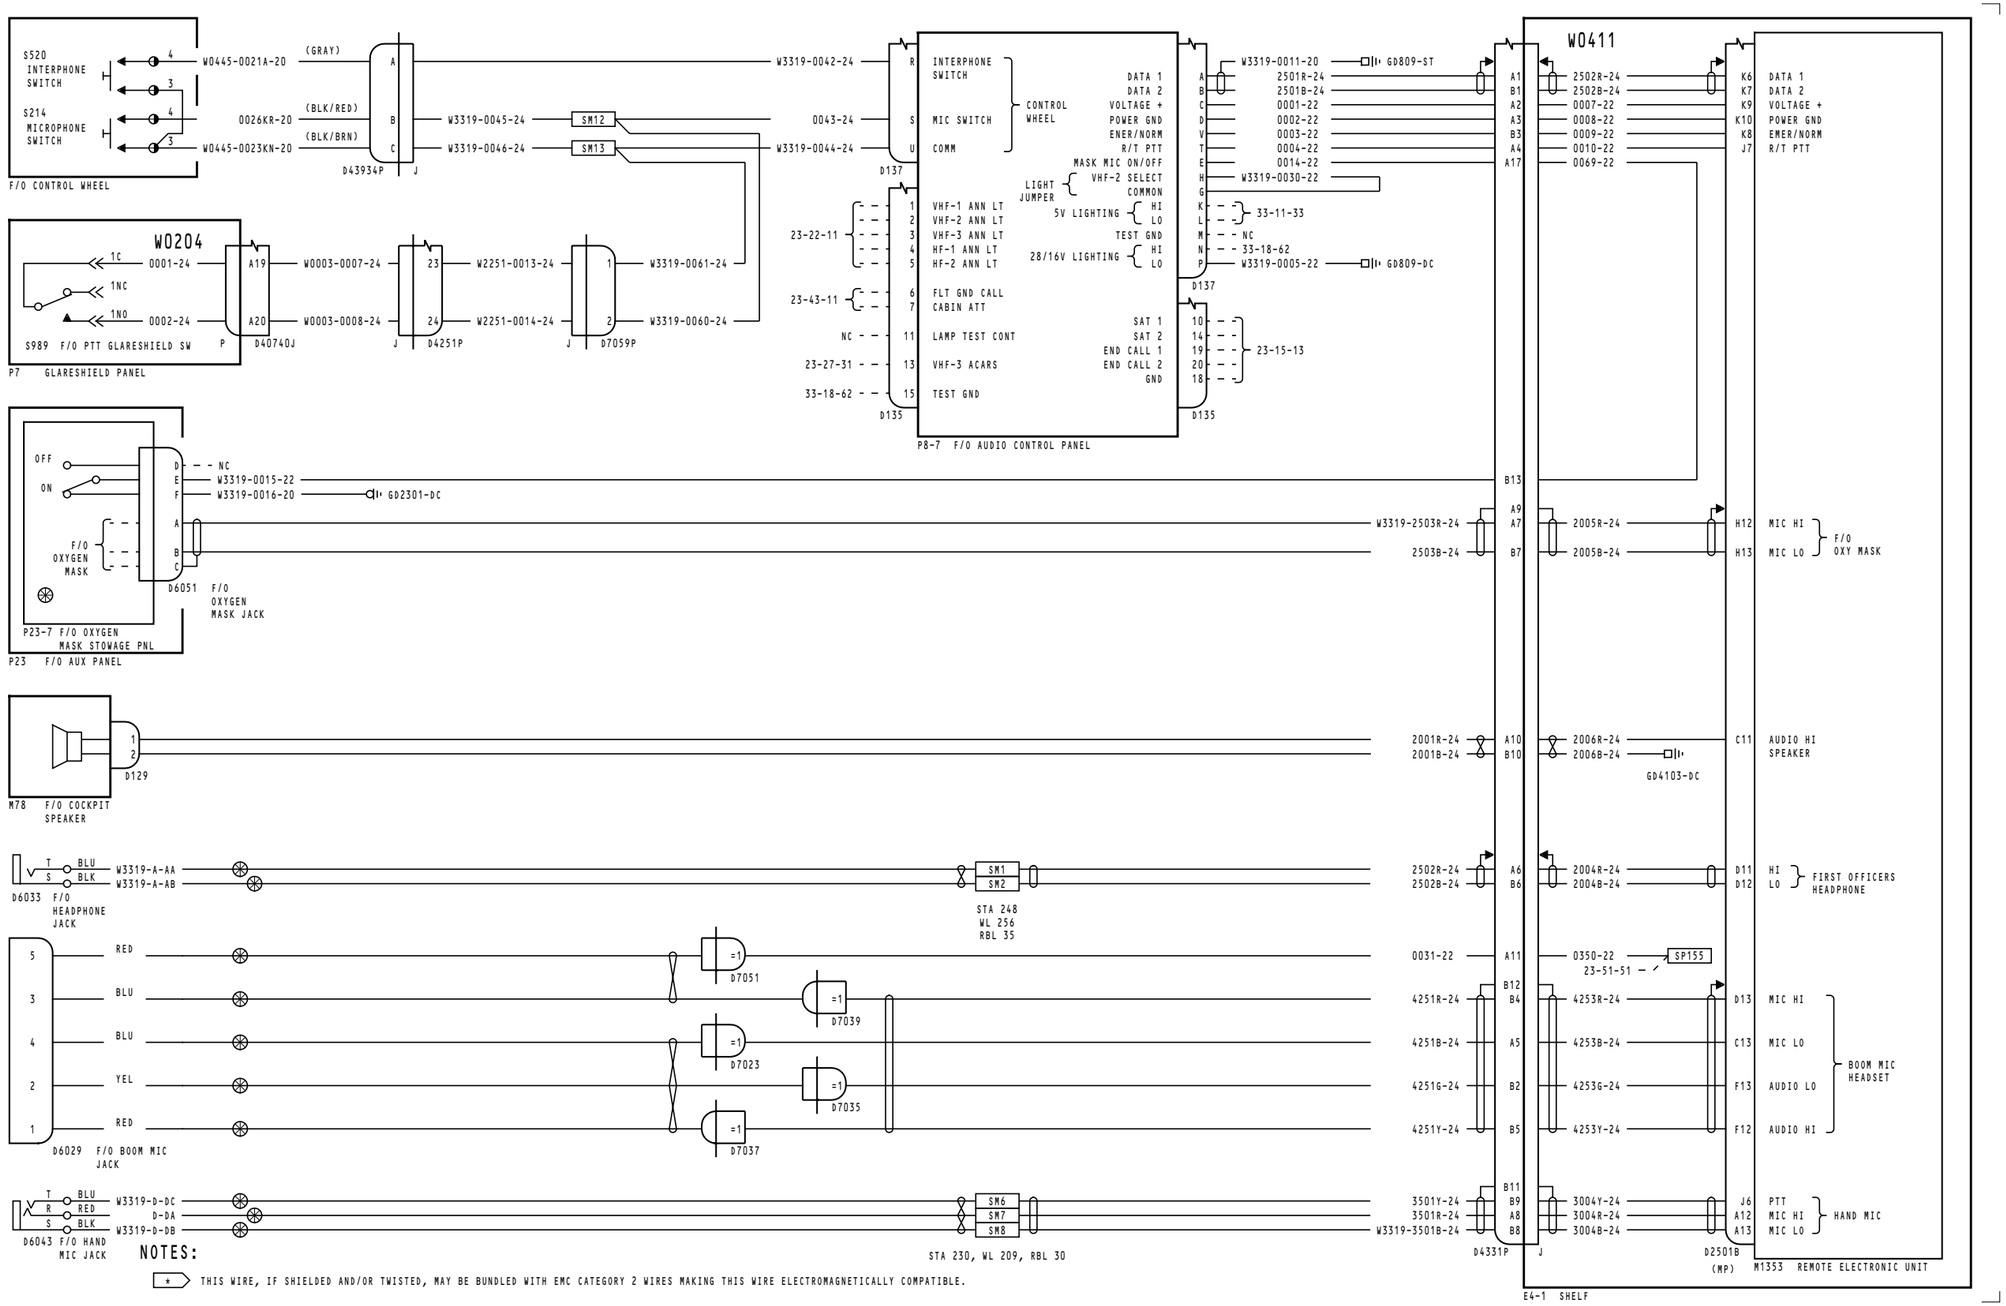

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-51-21

Page 1

May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
237

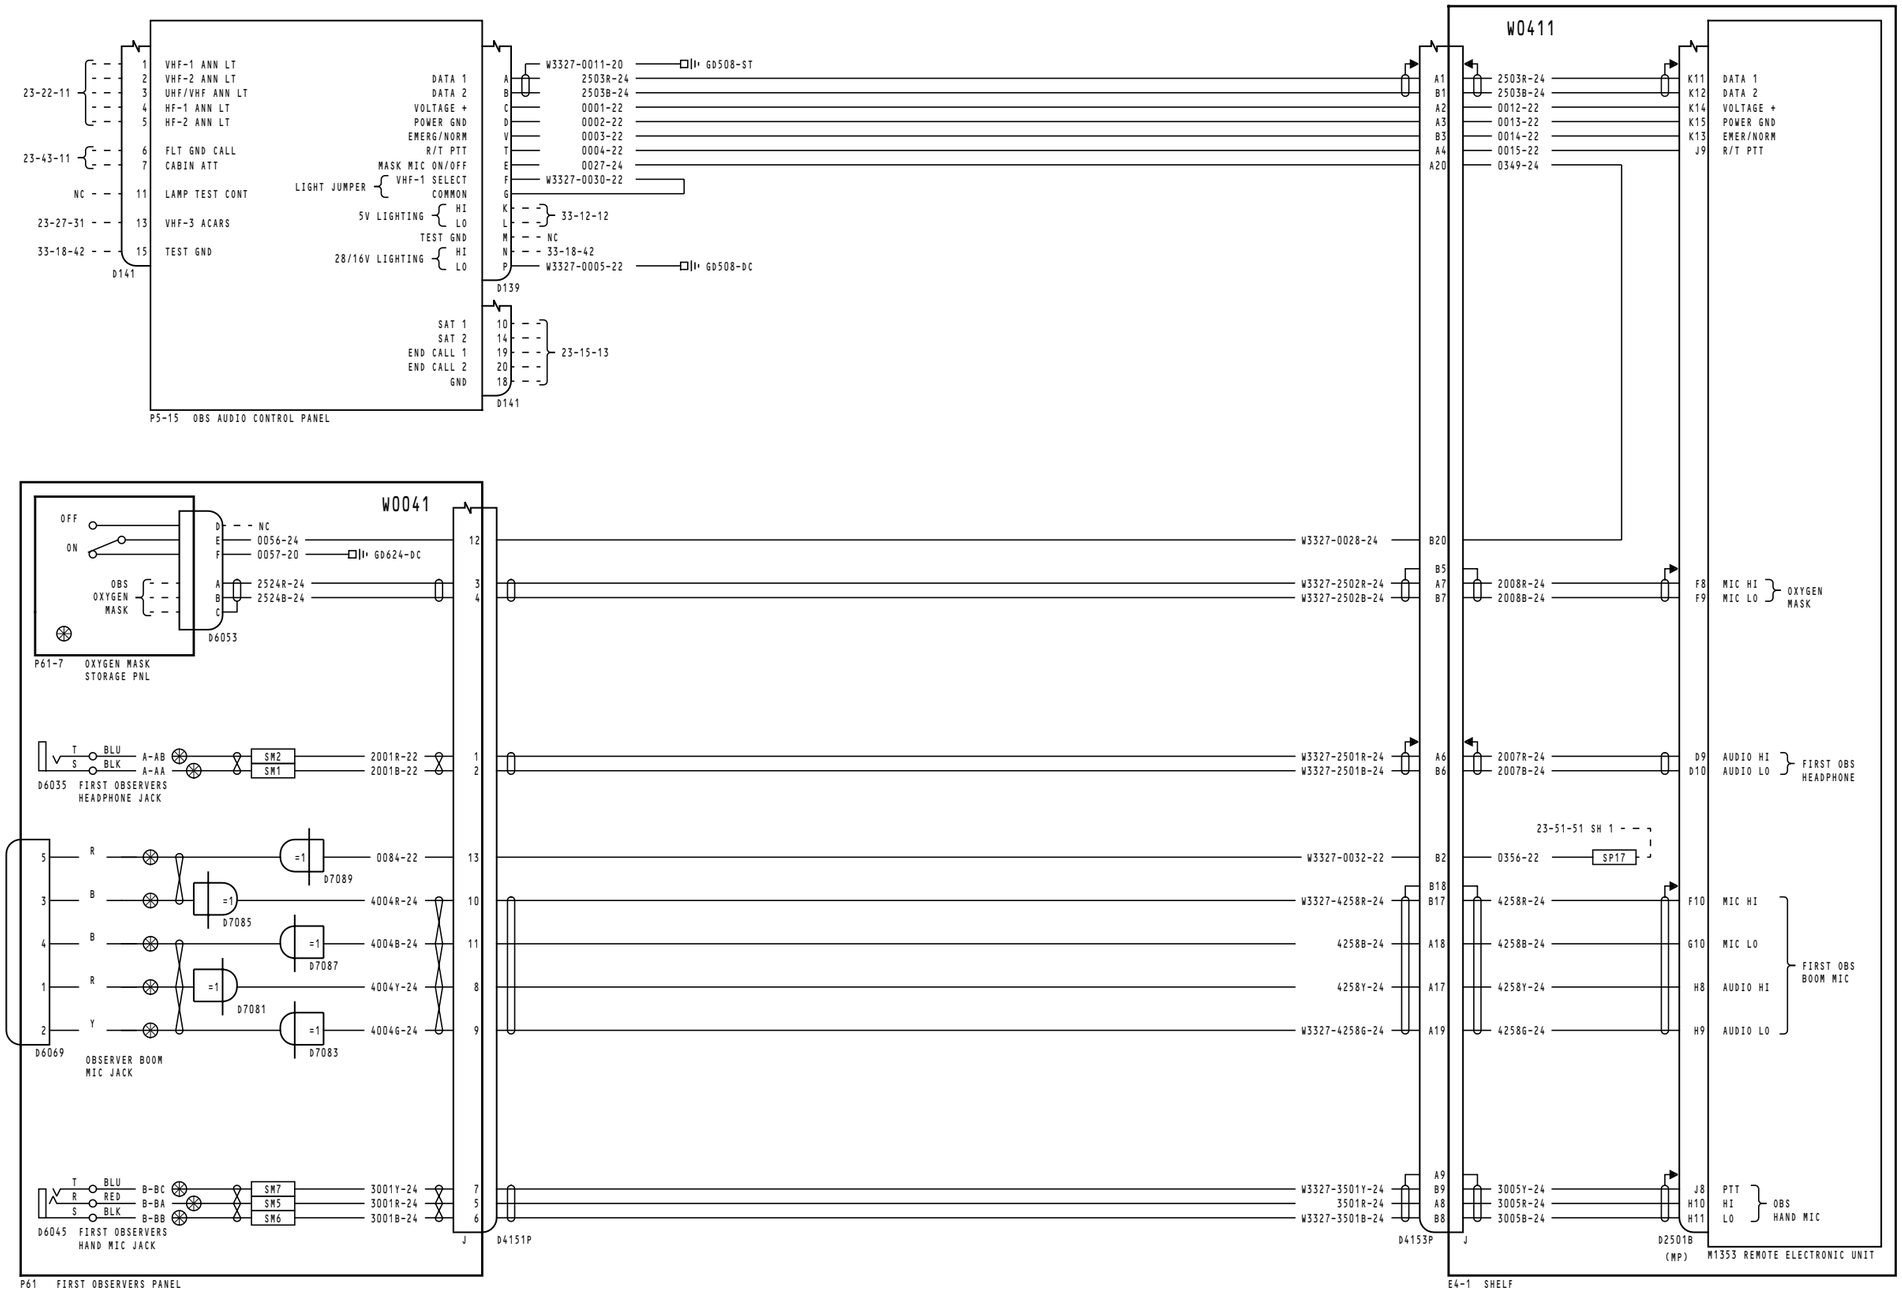

ECCN 9E991 BOEING PROPRIETARY - See title page for details


23-51-31

Page 1

Dec 24/2024

737-8 WIRING DIAGRAM MANUAL

-A
140

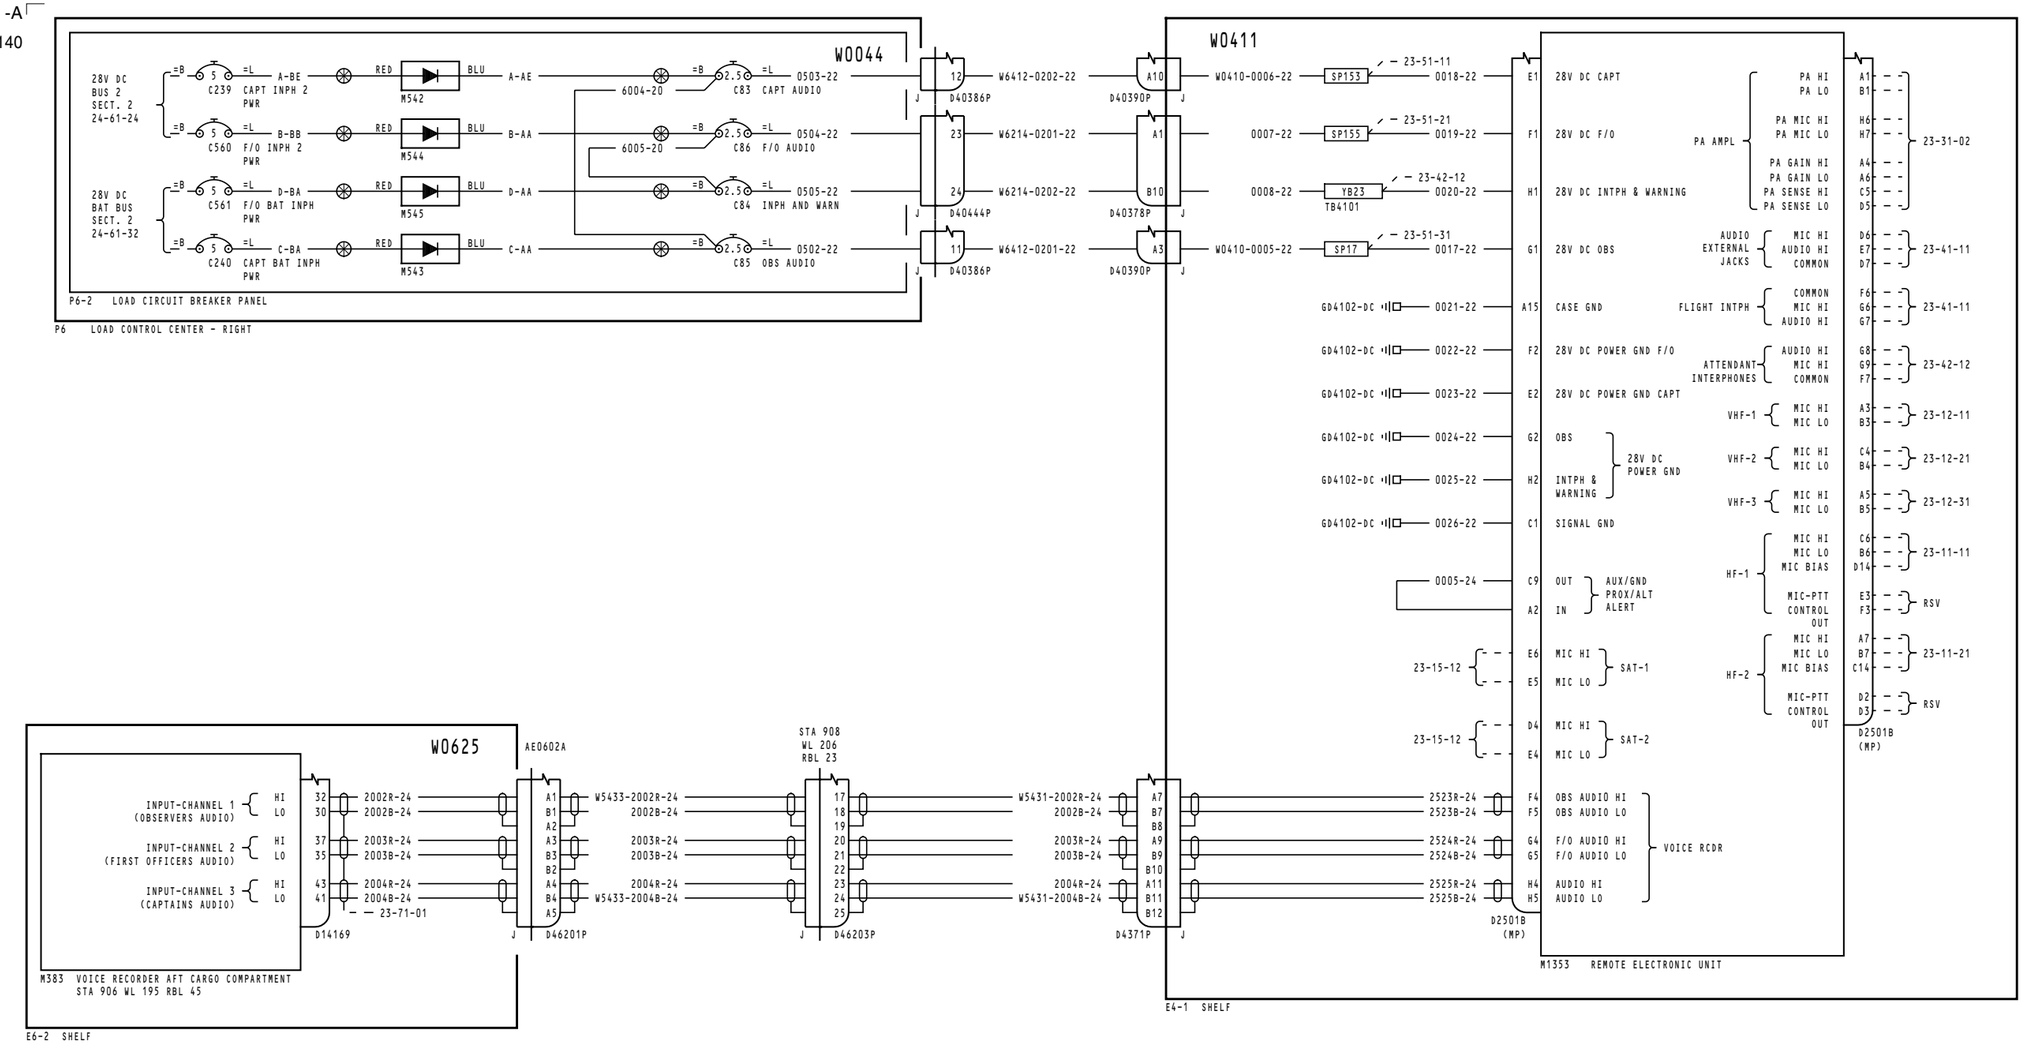

NOTES:


* THIS WIRE, IF SHIELDED AND/OR TWISTED, MAY BE BUNDLED WITH EMC CATEGORY 2 WIRES MAKING THIS WIRE ELECTROMAGNETICALLY COMPATIBLE.

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-51-51

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

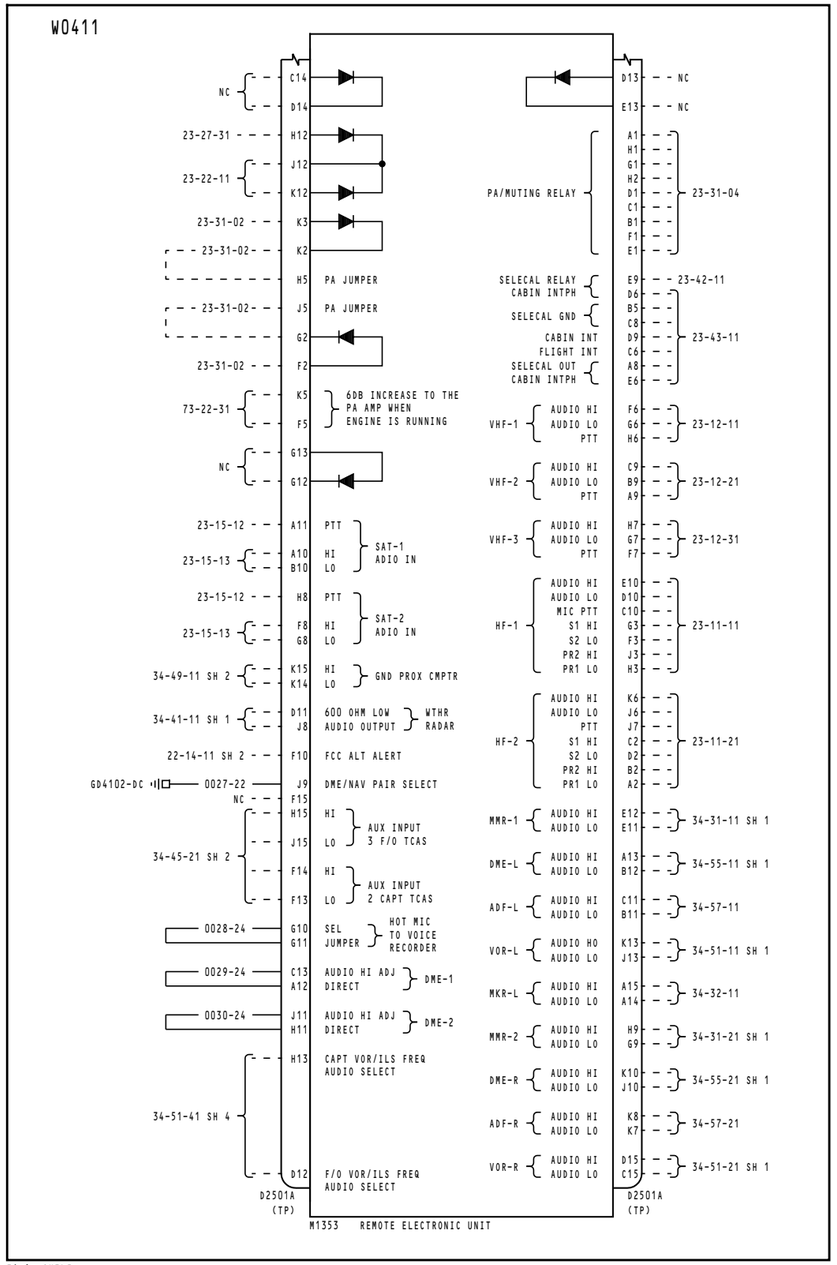

E4-1 SHELF


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-51-51

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-B
39

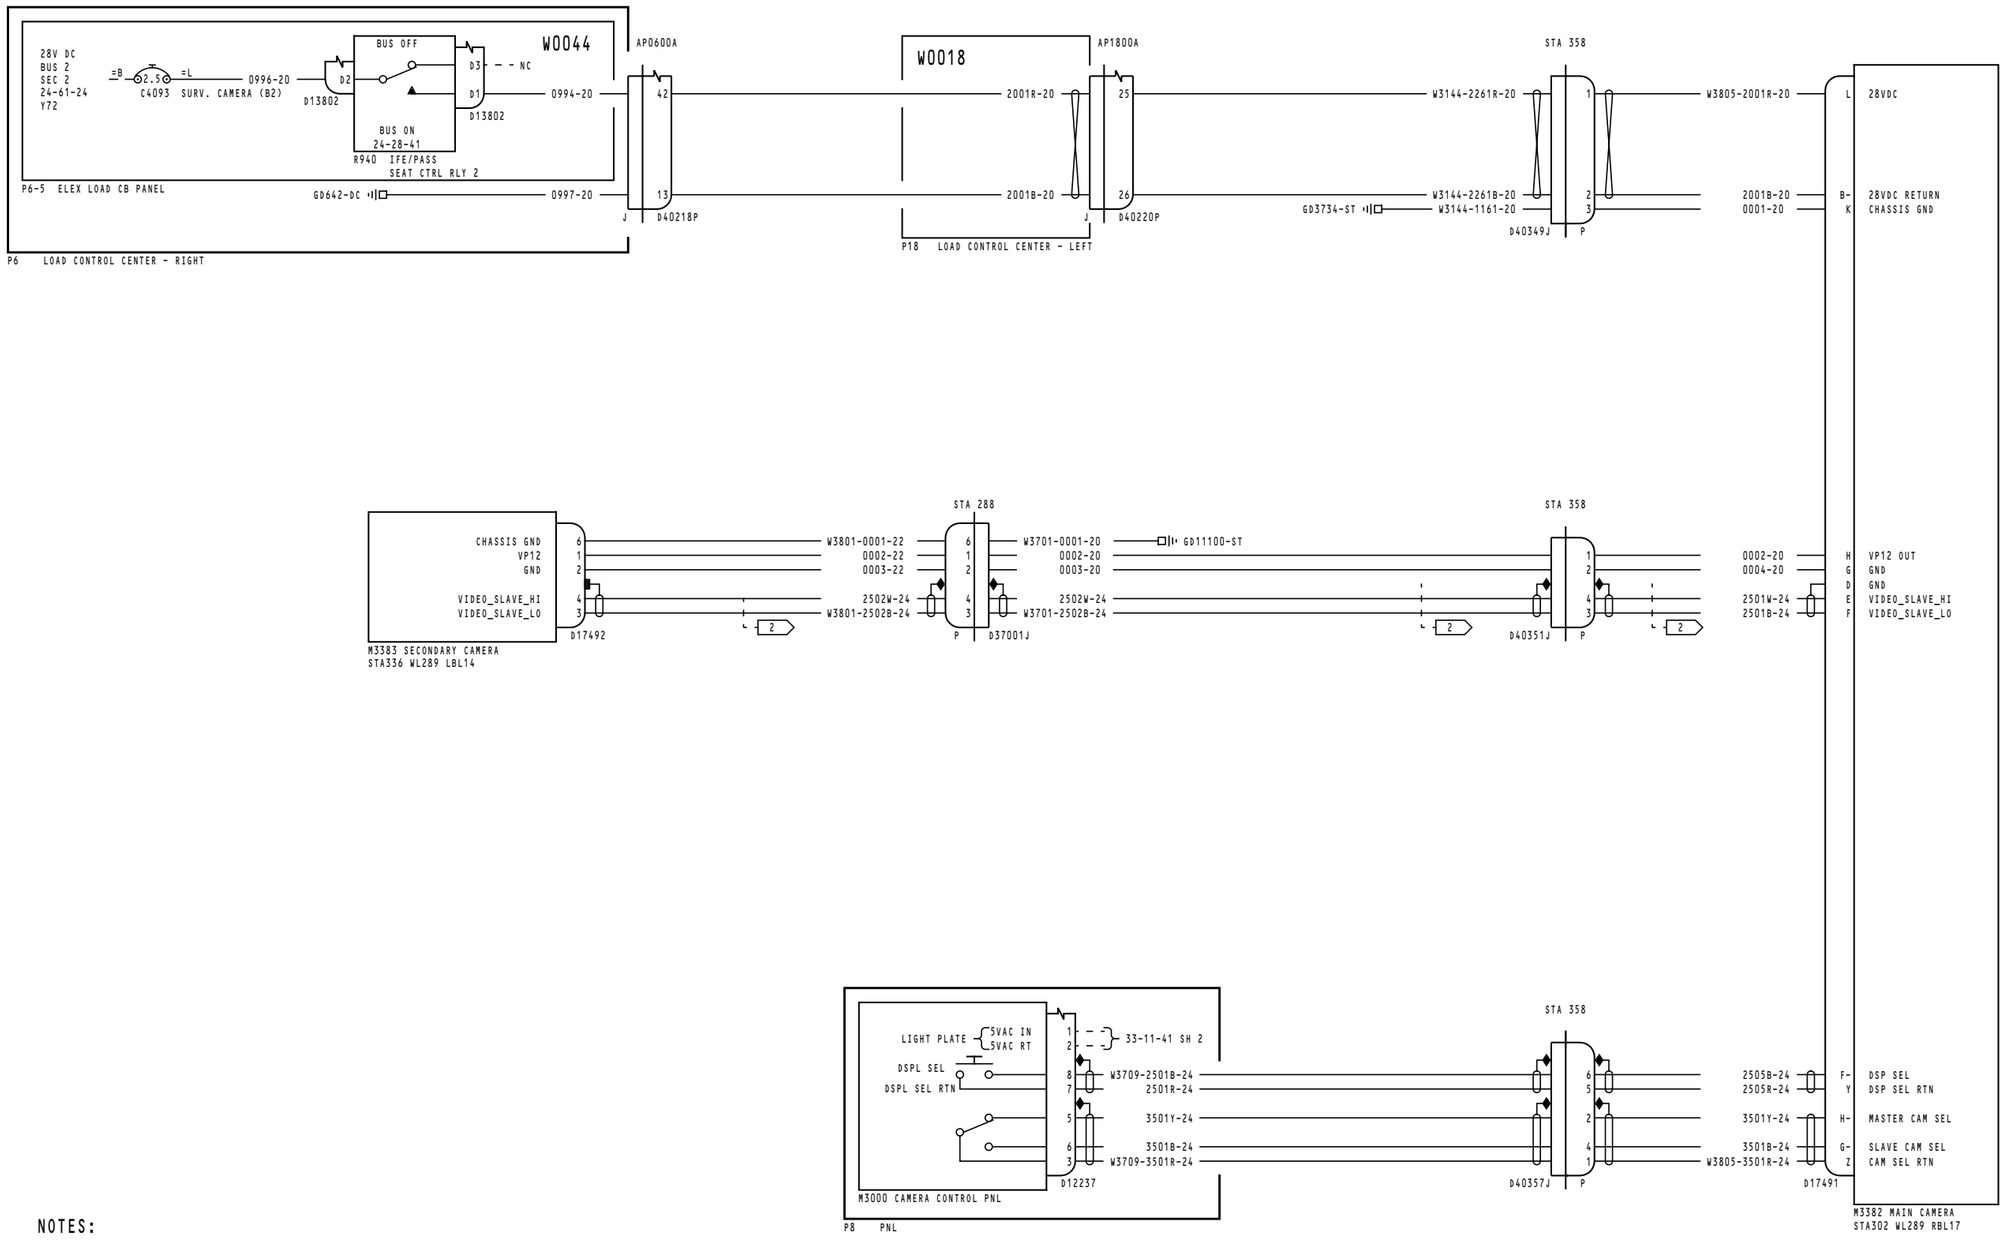

NOTES:

2 CABLE P/N S280W502-6

ALL

VIDEO SURVEILLANCE SYSTEM

D280AM1215

23-70-11


Page 1
Sheet 1
Nov 14/2025

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-70-11

Page 1
Sheet 1
Nov 14/2025

737-8 WIRING DIAGRAM MANUAL

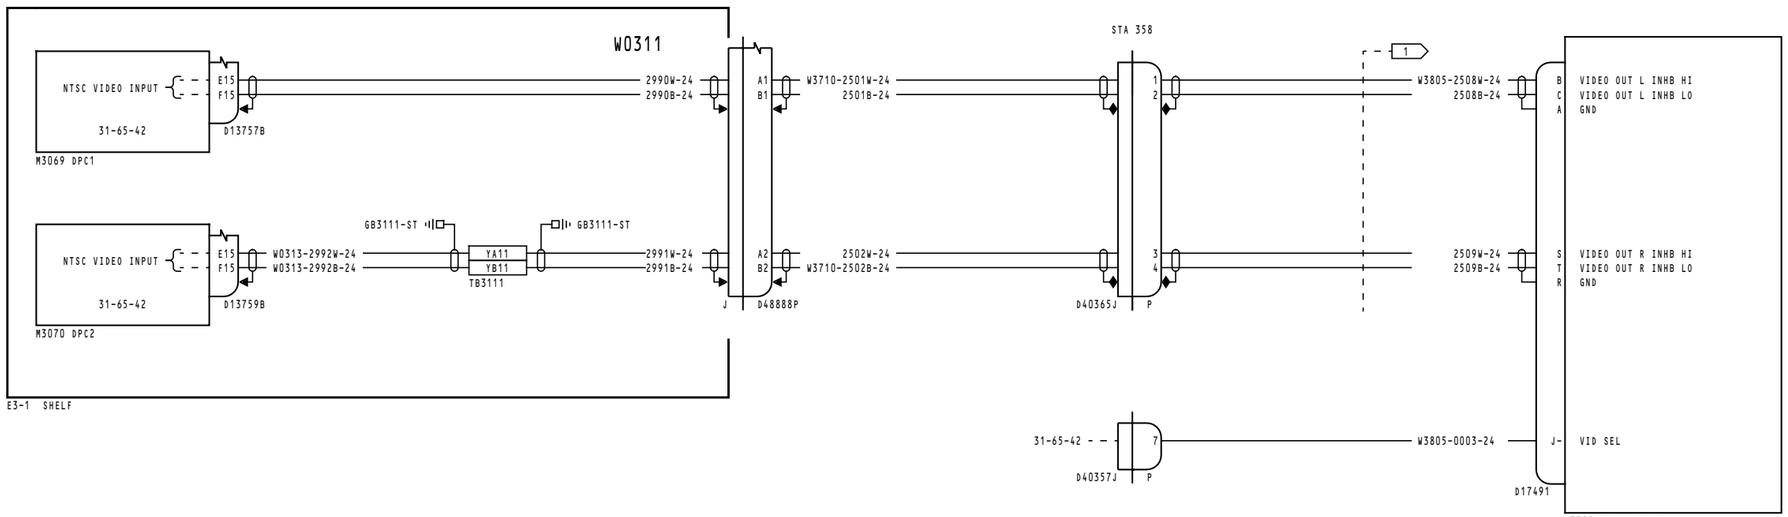

NOTES:


1 CABLE P/N S280W502-6

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-70-11

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

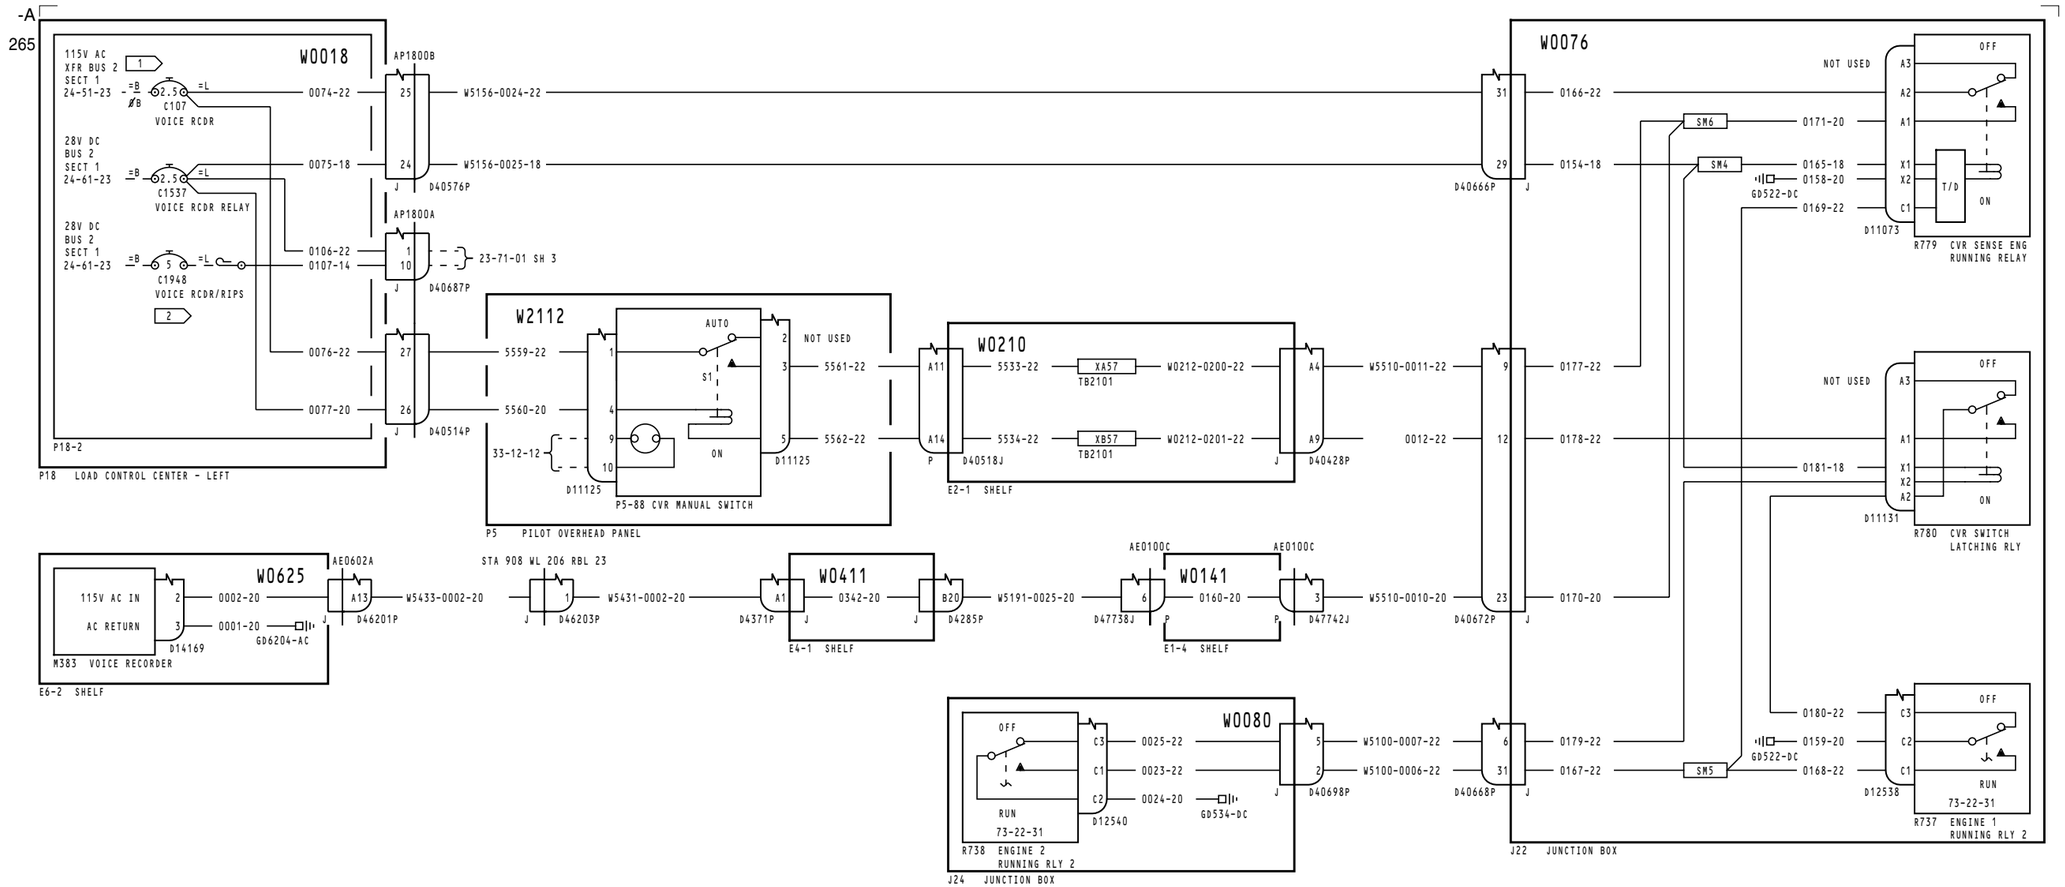

NOTES:

1. CVR AND FDR ARE REQUIRED TO BE POWERED FROM SEPARATE AC BUSSES.
2. COLLAR AND LABEL INOP.


ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-71-01

Page 1
Sheet 1
May 15/2024

737-8 WIRING DIAGRAM MANUAL

-C
139

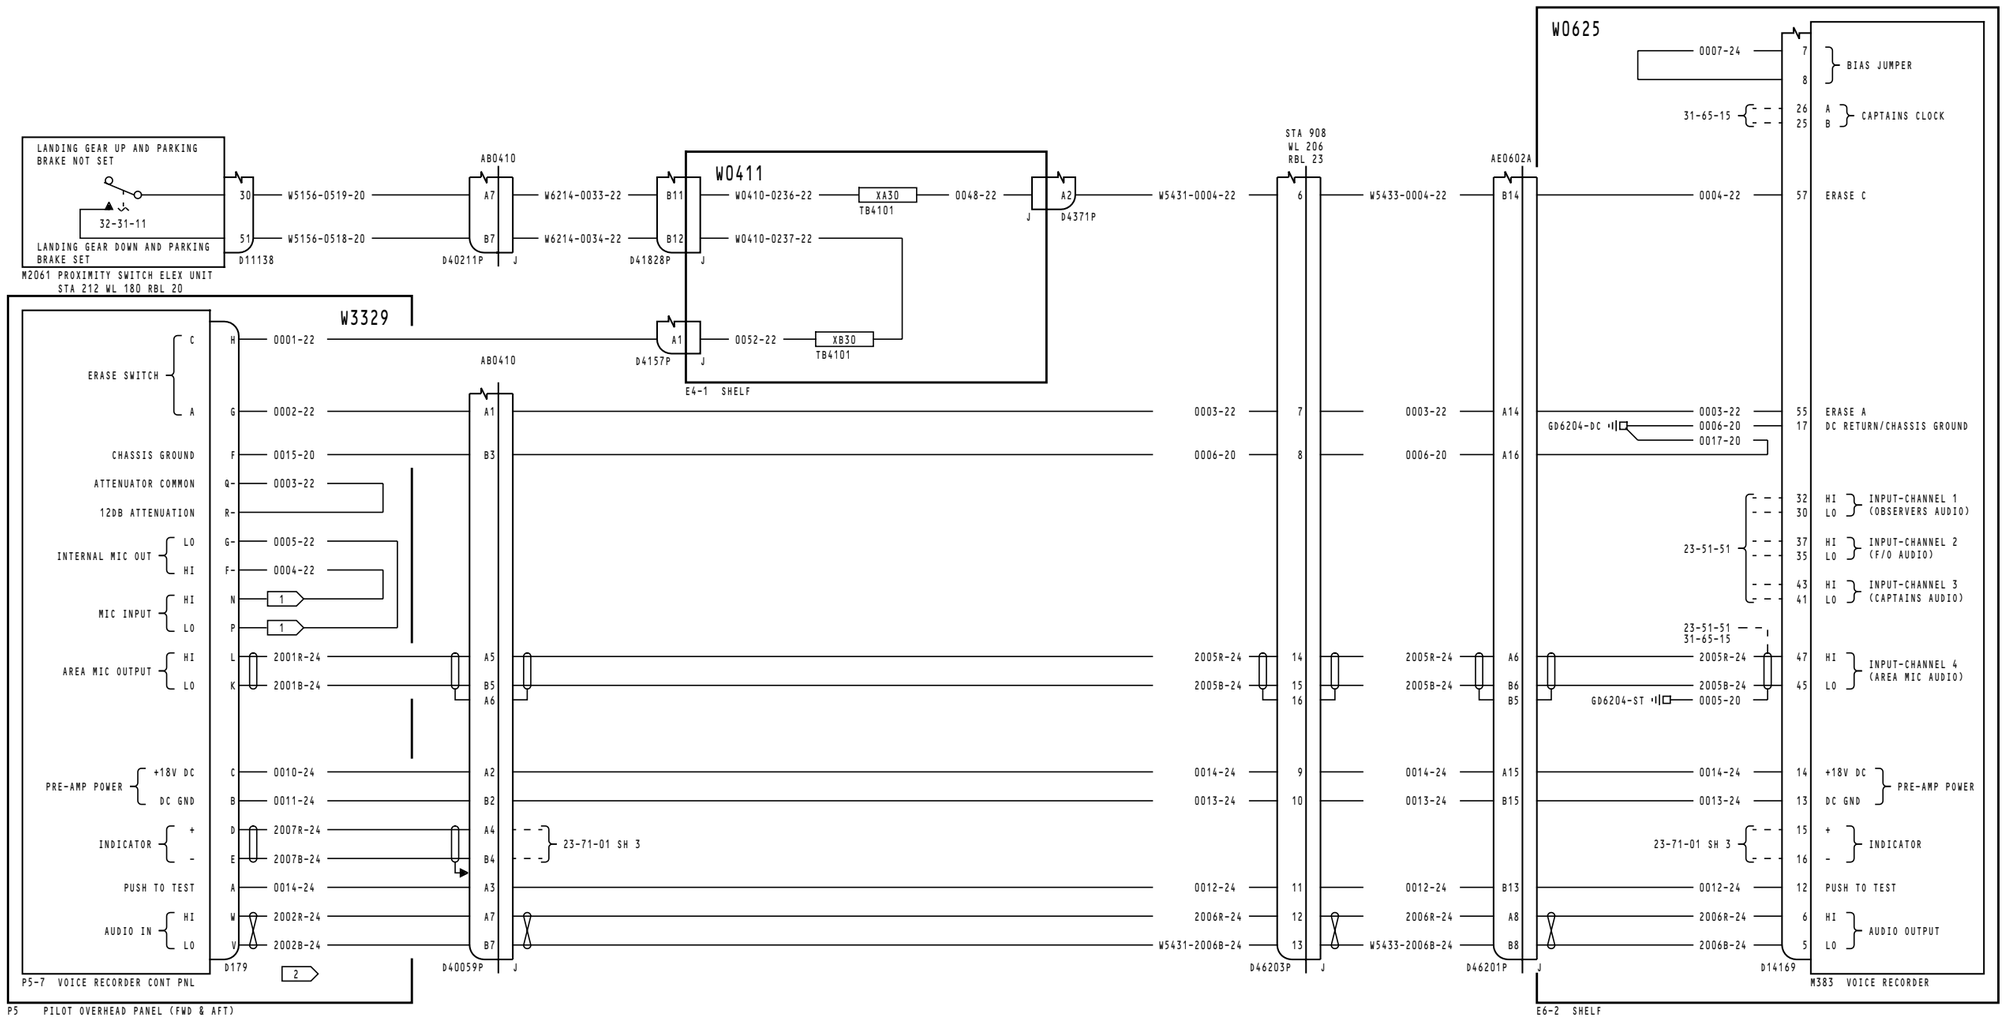

NOTES:


1. INSTALL BMS 13-16 CUT TO 2.0 INCHES MAXIMUM LENGTH STRIP BOTH END PER BAC 5162-9 AND INSTALL CONTACT BENDIX 10-314980-20S ON EACH END OF THE WIRE.
2. PIGTAILS 3 INCHES MAXIMUM

ECCN 9E991 BOEING PROPRIETARY - See title page for details

23-71-01

Page 1
Sheet 2
May 15/2024

737-8 WIRING DIAGRAM MANUAL

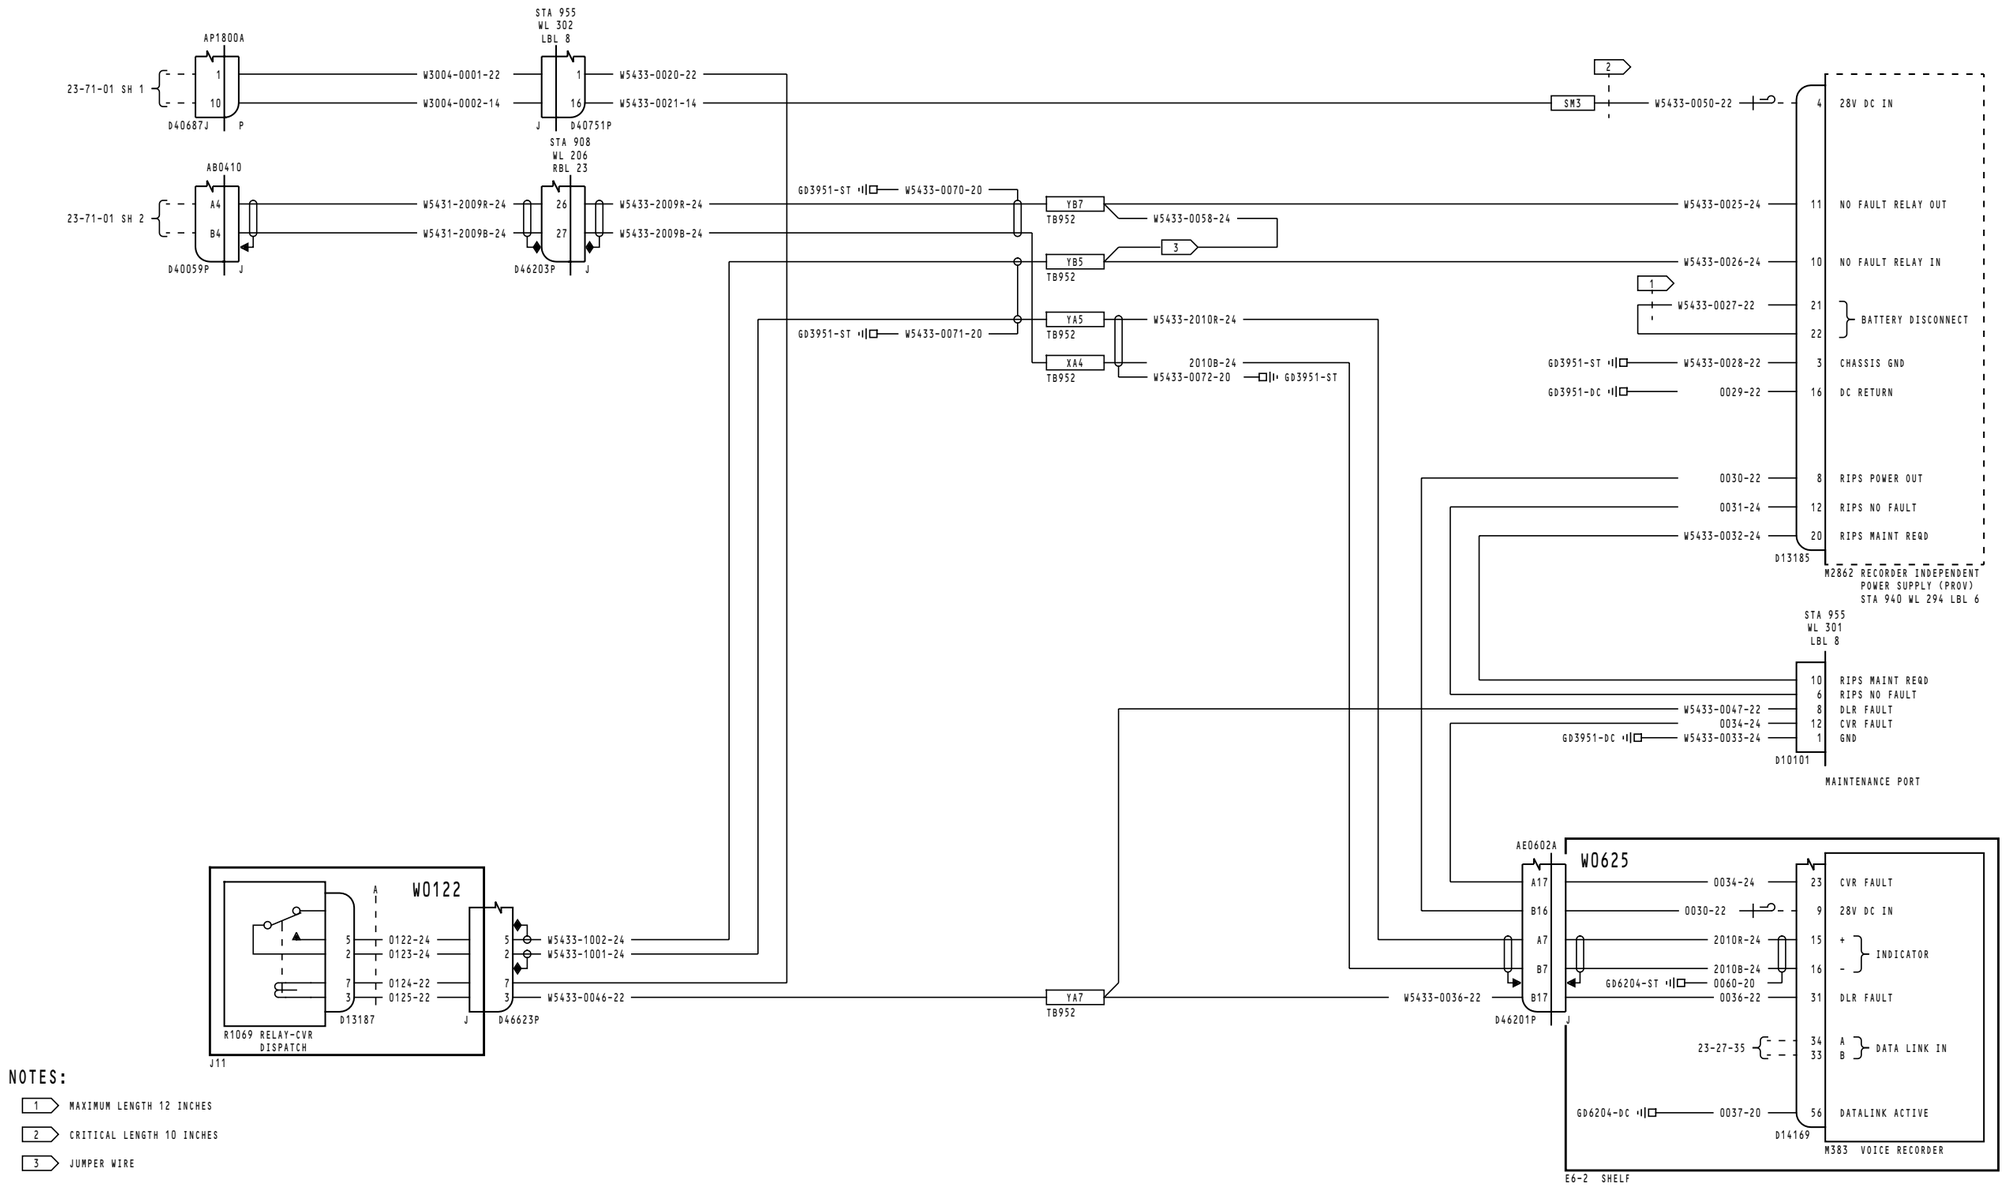

23-71-01

Page 1
Sheet 3
May 15/2024

ECCN 9E991 BOEING PROPRIETARY - See title page for details