ITEM NO.	DESCRIPTION	PART NO.	MFR.
272	Pump, Fuel Boost (Pre Mod 6/1424)	C6SC1005-1	DHC
	(Post Mod 6/1424 and 6/1621)	C6SC1005-3	DHC
	(Pre Mod 6/1795 and Mod S.O.O. 6164 or 6/1610)	160-065	Crane (HydroAire)
	(Mod S.O.O. 6159)	72266-3	Adel
	(Mod 6/1757 and 6/1795)	1D2-17	Airborne
273	Pump, Hydraulic	100-689-3	Great Lakes Eng.
274	Deleted (Mod 6/1827)		
275	Receptacle, External Power	AN2552-3A	
276	Relay, Reverse Current (Pre Mod 6/1585)	A700-AAP	Hartman
	(Mod 6/1585)	A701-D	Hartman
277	Relay	4B-1E-126	
278	Relay	DSC32-1	DHC
279	Relay	MS24171-D1	
280	Relay	MS24172-D1	
281	Relay	MS24149-D1	
282	Relay	MS24166-D1	
283	Relay	MS24178-D1	
284	Relay	MS25035-1	
285	Relay	MS25024-2	
286	Relay, Overvoltage	TD-805V-2	Hartman
	(Mod 6/1539)	E-311C	Hartman
287	Resistor, 10 ohm, 25W	0200B	Ohmite
288	Resistor, 20 ohm, 25W	0364B	Ohmite
289	Resistor 6540 (Tickler)	RW20V101	Ohmite
290	Resistor	RW59V401	I.R.C.
291	Resistor	RC42GF391K	
292	Resistor, 10 ohm, 10W	F105	Ohmite
293	Resistor, 5 ohm (Pre Mod 6/2427)	F506	Ohmite
	Resistor, 100 ohm (Post Mod 6/2427)	615-1000-FBW	RCD
294	Resistor, Spool	AN5534-2	
295	Resistor, 15 ohm, 30W	F307	Ohmite
296	Resistor, 1.5 ohm, 30W	FRW22-1.5	I.R.C.
297	Rheostat, Dimming	AN3155-50-25	
298	Rheostat, Temp Selector	CTS-IKS9929	CTS
299	Regulator Unit, Current	3013242	Pratt & Whitney
300	Regulator Unit, Voltage	VR-1010-24-1A	Phoenix
	(Mod 6/1590 or 6/1636)	VR-1010-24-2A	Phoenix
301	Selector, Heading	CG136B1	Honeywell (King)
302	Sensing Element, Cabin	BYLF7469	Barber-Colman
303	Sensing Element, Duct	AYLF3001-1	Barber-Colman
304	Sensor, Gen Overheat	21544-1-10-4	Texas Instr
305	Sensor, Stall Warning	167	Safe Flight Co.
306	Shunt, 100 amp	MS91586-6	
307	Shunt, 200 amp	MS91587-2	
308	Solenoid, Autofeather	1310-115	Woodward
309	Solenoid, Fuel Bleed	U9500	United Aircraft Prod.
310	Solenoid, Beta Back-up	1310-511	Woodward
311	Solenoid, Eng Intake Deflector	R14S143	Marsland
311A	Solenoid, Eng Intake Deflector	RS342AE1	Ledex
312	Solenoid, Prop. O/S Governor	1310-105	Woodward
313	Solenoid, Engage Air Valve	AV1A1128	General Controls
314	Socket, Speaker	XLR-5-11C	Cannon
315	Spare		

ITEM NO.	DESCRIPTION	PART NO.	MFR.
316	Starter-Generator	23048-004	Lear-Siegler
317	Switch, Ind Select	13AT8	Honeywell
318	Switch, Generator	13AT10	Honeywell
319	Switch, DC Power	13AT2A	Honeywell
320	Switch, Heater Mode	13AT2	Honeywell
321	Switch, Limit	V3-419	Honeywell
322	Switch, Aileron Trim	2TP12-70	Honeywell
323	Switch, Landing Light	11TS193-21 or	Honeywell
		1TL133-21	Honeywell
324	Switch, Limit	DT-2R-A7	Honeywell
325	Switch	MS25125-B4	
326	Switch, Microphone	DHC60155	DHC
327	Switch, Reading Light	55-0045-11	Grimes
328	Switch, Boarding Light	1TP12-3	
329	Switch, Dual Pressure	MDB-620-1	Custom Comp
330	Switch, Reading Light	55-0045-11	Grimes
331	Switch, Fire Pull	E601-FP-1	Avionics Prod.
332	Switch, Limit	W102-L5	Hetherington
333	Switch, Power Lever; Prop Beta Range	KX5-1-16	Texas Instr
334	Switch, Float	F8300-105	Revere
335	Switch, Pressure	DHCSC70019-15	DHC
336	Switch, Pressure	DHCSC70019-17	DHC
	(Mod 6/1150)	DHCSC70019-21	DHC
337	Switch, Pressure	DHCSC70036-1	DHC
338	Switch, Pressure	DHCSC70020-5	DHC
	(Mod 6/1417)	20627	Hobbs
339	Switch, Pressure	DHCSC70020-7	DHC
	(Mod 6/1423)	DHCSC70020-15	DHC
		DHCSC70020-17	DHC
	(Mod 6/1493)	8190024	Hathaway
340	Switch, Pressure (Hydraulic Oil)	6607P-9-6	Consolidated Cont
	(Mod 6/1570)	6607P-9-6A	Consolidated Cont
341	Switch, Selector	MS25002-5	
342	Switch, Sensitive (Limit)	MS25008-1	
343	Switch (MS35058-21)	DSC11-21	Cutler Hammer, Honeywell, Micro Switch
344	Switch (MS25068-21)	DSC13-21	Cutler Hammer
345	Switch (MS25068-23)	DSC13-23	Cutler Hammer
346	Switch (MS25068-26)	DSC13-26	Cutler Hammer
347	Switch, Sensitive (Limit)	MS25026-1	
348	Switch (MS25125-C3)	MS24658-23G	Cutler Hammer
349	Switch (MS25125-J4)	MS24658-24M	Cutler Hammer
350	Switch	DSC20-13	Cutler Hammer
351	Switch (MS25127-J4)	MS24660-24M	Cutler Hammer
352	Switch, Limit	MS25253-4	
353	Switch (MS35058-22)	DSC11-22)	
354	Switch (MS35058-23)	DSC11-23)	
355	Switch (MS35058-24)	DSC11-24)	
356	Switch (MS35058-27)	DSC11-27)	Cutler Hammer,
357	Switch (MS35058-28)	DSC11-28)	Honeywell, Micro
358	Switch (MS35059-21)	DSC12-21)	Switch
359	Switch (MS35059-22)	DSC12-22)	
360	Switch (MS35059-23)	DSC12-23)	
361	Switch (MS35059-24)	DSC12-24)	

ITEM NO.	DESCRIPTION	PART NO.	MFR.
361A	Switch (MS35059-27)	DSC12-27)	Cutler Hammer,
362	Switch (MS35059-28)	DSC12-28)	Honeywell, Micro
363	Switch (MS35059-31)	DSC12-31)	Switch
364	Switch, Limit	MS25253-4	
365	Switch, Gyro Compass	6AT2	Honeywell
366	Switch, A/P	TPB58	Honeywell
367	Tank Unit	391087-03081 or	Simmonds
	(Mod 6/1420)	391088-002	Simmonds
368	Tank Unit	391087-03082 or	Simmonds
	(Mod 6/1420)	391088-003	Simmonds
369	Tank Unit	391087-03083 or	Simmonds
	(Mod 6/1420)	391088-004	Simmonds
370	Tank Unit	391087-03084 or	Simmonds
	(Mod 6/1420)	391088-005	Simmonds
371	Tank Unit	391087-03085 or	Simmonds
	(Mod 6/1420)	391088-006	Simmonds
372	Thermocouple, Chromel-Alumel	3012075	U.A.C.
373	Timer, Deicing (Propeller)	3E1150-3	B.F. Goodrich
	(Post Mod 6/1629)	3E1150-10	B.F. Goodrich
374	Timer, Deicing (Airframe) (Pre Mod 6/1779)	42E13-3A	Bendix
	(Mod 6/1779)	42E13-3B	Bendix
375	Transformer	43642	Hammond
376	Transmitter, Fuel Flow	9133-25-B1	Bendix
377	Transmitter, Oil Pressure	C6SC1084-3	DHC
378	Transmitter, Gas Gen Tach	GEU7A	Globe
379A	Transmitter, Torque Pressure (Edison)	318-02020	Edison
380	Transmitter, Aileron Trim Tab	10820-17-1.31-102	Bourns
381	Terminal Insert	DSC64-2	DHC
382	Terminal Insert	DSC64-3	DHC
383	Terminal Board	MS27212-1-5	
384	Terminal, Ground	A2532	Grimes
385	Valve, Bleed Air Shutoff (Pre Mod 6/1680)	26440051	Vapor Heating
	(Mod 6/1680)	320295-1	Whittaker

This Page Intentionally Left Blank

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR
276	Relay, Reverse Current	A700-AAP (Pre Mod 6/1585)	Hartman
		A701-D (Mod 6/1585)	Hartman
277	Relay	4B-1E-126	
278	Relay	DSC32-1	DHC
279	Relay	MS24171-D1	
280	Relay	MS24172-D1	
281	Relay	MS24149-D1	
282	Relay	MS24166-D1	
283	Relay	MS24178-D1	
284	Relay	MS25035-1	
285	Relay	MS25024-2	
286	Relay, Overvoltage	TD-805V-2	Hartman
	(Mod 6/1539)	E-311C	Hartman
287	Resistor, 10 ohm, 25W	0200B	Ohmite
288	Resistor, 20 ohm, 25W	0364B	Ohmite
289	Resistor 6540 (Tickler)	RW20G101	Ohmite
290	Resistor	RW59V401	I.R.C.
291	Resistor	RC42GF391K	
292	Resistor, 10 ohm, 10W	F105	Ohmite

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
293	Resistor, 5 ohm	F506	Ohmite
294	Resistor, Spool	AN5534-2	
295	Resistor, 15 ohm, 30W	F307	Ohmite
296	Resistor, 1.5 ohm, 30W	FRW22-1.5	I.R.C.
297	Rheostat, Dimming	AN3155-50-25	
298	Rheostat, Temp Selector	CTS-IKS9929	CTS
299	Regulator Unit, Current	3013242	Pratt & Whitney
300	Regulator Unit, Voltage	VR-1010-24-1A	Phoenix
	(Mod 6/1590 or 6/1636)	VR-1010-24-2A	Phoenix
301	Selector, Heading	CG136B1	Honeywell (King)
302	Sensing Element, Cabin	BYLF7469	Barber-Colman
303	Sensing Element, Duct	AYLF3001-1	Barber-Colman
304	Sensor, Gen Overheat	21544-1-10-4	Texas Instr
305	Sensor, Stall Warning	167	Safe Flight Co.
306	Shunt, 100 amp	MS91586-6	
307	Shunt, 200 amp	MS91587-2	
308	Solenoid, Autofeather	1310-115	Woodward
309	Solenoid, Fuel Bleed	U9500	United Aircraft Prod.
310	Solenoid, Beta Back-up	1310-511	Woodward
311	Solenoid, Eng Intake Deflector	R14S143	Marsland
311A	Solenoid, Eng Intake Deflector	RS342AE1	Ledex
312	Solenoid, Prop. O/S Governor	1310-105	Woodward
313	Solenoid, Engage Air Valve	AV1A1128	General Controls
314	Socket, Speaker	XLR-5-11C	Cannon
315	Spare		
316	Starter-Generator	23048-004	Lear-Siegler
317	Switch, Ind Select	13AT8	Honeywell
318	Switch, Generator	13AT10	Honeywell
319	Switch, DC Power	13AT2A	Honeywell
320	Switch, Heater Mode	13AT2	Honeywell
321	Switch, Limit	V3-419	Honeywell
322	Switch, Aileron Trim	2TP12-70	Honeywell
323	Switch, Landing Light	11TS-193-21	Honeywell
324	Switch, Limit	DT-2R-A7	Honeywell
325	Switch	MS25125-B4	
326	Switch, Microphone	DHC60155	DHC
327	Switch, Reading Light	55-0045-5	Grimes
328	Switch, Boarding Light	1TP12-3	
329	Switch, Dual Pressure	MDB-620-1	Custom Comp
330	Switch, Reading Light	55-0045-11	Grimes
331	Switch, Fire Pull	E601-FP-1	Avionics Prod.
332	Switch, Limit	W102-L5	Hetherington
333	Switch, Power Lever; Prop Beta Range	KX5-1-16	Texas Instr
334	Switch, Float	F8300-105	Revere
335	Switch, Pressure	DHCSC70019-15	DHC
336	Switch, Pressure	DHCSC70019-17	DHC
	(Mod 6/1150)	DHCSC70019-21	DHC
337	Switch, Pressure	DHCSC70036-1	DHC
338	Switch, Pressure	DHCSC70020-5	DHC
	(Mod 6/1417)	20627	Hobbs
339	Switch, Pressure	DHCSC70020-7	DHC
	(Mod 6/1423)	DHCSC70020-15	DHC
		DHCSC70020-17	DHC
	(Mod 6/1493)	8190024	Hathaway
340	Switch, Pressure (Hydraulic Oil)	6607P-9-6	Consolidated Cont
	(Mod 6/1570)	6607P-9-6A	Consolidated Cont
341	Switch, Selector	MS25002-5	
342	Switch, Sensitive (Limit)	MS25008-1	

NOTE: Please see the TEMPORARY REVISION that revises this page.

ITEM NO.	DESCRIPTION	PART NO.	MFR.
343	Switch (MS35058-21)	DSC11-21	Cutler Hammer, Honeywell, Micro Switch
344	Switch (MS25068-21)	DSC13-21	Cutler Hammer
345	Switch (MS25068-23)	DSC13-23	Cutler Hammer
346	Switch (MS25068-26)	DSC13-26	Cutler Hammer
347	Switch, Sensitive (Limit)	MS25026-1	
348	Switch (MS25125-C3)	DSC18-4	Cutler Hammer
349	Switch (MS25125-J4)	DSC18-9	Cutler Hammer
350	Switch	CH8859K50	Cutler Hammer
351	Switch (MS25127-J4)	DSC20-9	Cutler Hammer
352	Switch, Limit	MS25253-4	
353	Switch (MS35058-22)	DSC11-22)	
354	Switch (MS35058-23)	DSC11-23)	
355	Switch (MS35058-24)	DSC11-24)	
356	Switch (MS35058-27)	DSC11-27)	
357	Switch (MS35058-28)	DSC11-28)	Cutler Hammer,
358	Switch (MS35059-21)	DSC12-21)	Honeywell, Micro
359	Switch (MS35059-22)	DSC12-22)	Switch
360	Switch (MS35059-23)	DSC12-23)	
361	Switch (MS35059-24)	DSC12-24)	
361A	Switch (MS35059-27)	DSC12-27)	
362	Switch (MS35059-28)	DSC12-28)	
363	Switch (MS35059-31)	DSC12-31)	
364	Switch, Limit	MS25253-4	
365	Switch, Gyro Compass	6AT2	Honeywell
366	Switch, A/P	TPB58	Honeywell
367	Tank Unit	391087-03081 or	Simmonds
	(Mod 6/1420)	391088-002	Simmonds
368	Tank Unit	391087-03082	Simmonds
	(Mod 6/1420)	391088-003	Simmonds
369	Tank Unit	391087-03083 or	Simmonds
	(Mod 6/1420)	391088-004	Simmonds
370	Tank Unit	391087-03084 or	Simmonds
	(Mod 6/1420)	391088-005	Simmonds
371	Tank Unit	391087-03085 or	Simmonds
	(Mod 6/1420)	391088-006	Simmonds
372	Thermocouple, Chromel-Alumel	3012075	U.A.C.
373	Timer, Deicing (Propeller)	3E1150-3	B.F. Goodrich
	(Post Mod 6/1629)	3E1150-10	B.F. Goodrich
374	Timer, Deicing (Airframe) (Pre Mod 6/1779)	42E13-3A	Bendix
	(Mod 6/1779)	42E13-3B	Bendix
375	Transformer	43642	Hammond
376	Transmitter, Fuel Flow	9133-25-B1	Bendix
377	Transmitter, Oil Pressure	C6SC1084-3	DHC
378	Transmitter, Gas Gen Tach	GEU7A	Globe
379A	Transmitter, Torque Pressure (Edison)	318-02020	Edison
380	Transmitter, Aileron Trim Tab	10820-17-1.31-102	Bourns
381	Terminal Insert	DSC64-2	DHC
382	Terminal Insert	DSC64-3	DHC
383	Terminal Board	MS27212-1-5	
384	Terminal, Ground	A2532	Grimes
385	Valve, Bleed Air Shutoff (Pre Mod 6/1680)	26440051	Vapor Heating
	(Mod 6/1680)	320295-1	Whittaker

ITEM NO.	DESCRIPTION	PART NO.	MFR.
386	Valve, Hot Air Actuator	BLYB9304	Barber-Colman
387	Valve, Fuel Crossfeed & SOV	AV16B1762B	General Controls
388	Valve, Deicing Airframe	1532-3A	Bendix
	(Mod 6/1410)	1532-3C	
389	Voltmeter	DHCSC70022-1	DHC
390	Valve, Air	15328	Wright Components
391	Switch, Synch)	P/O 213433	Woodward
392	Box, Synch Control)		
393	Actuator Prop Synch	213100	Woodward
394	Pickup, Governor (Pre Mod 6/1767)	5430-904	Woodward
	(Mod 6/1767)	210952	Woodward
395	Connector, Governor Pickup	1609-201	Woodward
396	Connector, Prop Synch Control	233032	Woodward
397	Connector, Prop Synch Actuator	233062	Woodward
398	Connector, Skis	PTOP8-4S	Bendix
399	Resistor, Type 250	F208	Ohmite
400	Switch (MS25126-B1)	DSC19-2	Cutler Hammer
401	Switch, Pressure	SW333	Autolite
402	Light, Indicator	MS25041-8	
403	Pump, Aux Fuel	2B6-7 or 2B7-1	Airborne
404	Indicator, Aux Fuel Qty	6430694 or 6432690	AC Spark Plug
405	Transmitter, Aux Fuel Qty	C6G1129-1	DHC
		6427208	AC Spark Plug
	(Mod 6/1569)	C6G1129-7	DHC
406	Valve, Transfer & Refuel/SOV	AV1E1139	
407	Light, Ski Position (Lamp 327)	134-3830-0375-201	Dialco
408	Switch, Limit	BZ-2R55T	Honeywell
409	Panel, Ski Position Indicator	C6NF1103	DHC
410	Resistor	RC42GF271K	
411	Relay, 4-pole	4B3104	Hi-G
412	Air Conditioner, Type 1000	031100	J.B. Systems
413	Limiter, 150 amps	27-442	J.B. Systems
414	Switch	27-407	J.B. Systems
415	Box, Relay - Pressure Refuel	C6G1190-1	DHC
416	Deleted		
417	Panel, Pressure Refuel	C6G1153-1	DHC
418	Connector, J7	KPTMOOE-12-10P	Cannon
419	Connector, J1/J5	6046-1	Dage
420	Connector, J3	6048-1	Dage
421	Connector, J2/J6	6047-1	Dage
422	Connector, J4	6049-1	Dage
423	Connector, P3	6819-1	Dage
424	Connector, P4	6820-1	Dage
425	Relay, K3, K4	DSC35-1	DHC
426	Switch, Fuel Overload (MS25125-C3)	DSC18-4	Cutler Hammer
427	Switch, Master Refuel (MS25126-C3)	DSC19-4	Cutler Hammer
428	Switch, Overload Test (MS35058-27)	DSC11-27	Cutler Hammer, Honeywell, Micro Switch
429	Light, Indicating (Lamp 301)	95-1310-0932-301	Dialco
430	Panel, Circuit Breaker Overhead	C6NF1283	DHC
431	Panel, Circuit Breaker Main	C6NF1284	DHC

ITEM NO.	DESCRIPTION	PART NO.	MFR
432	Panel, Circuit Breaker Radio	C6NF1285	DHC
433	Box, Radio AC	C6NF1287	DHC
434	Solenoid, Eng Intake Deflector	R14S143	G.W. Lisk
435	Resistor 2K 1/2W	RC20GF202J	
436	Resistor 20 ohm 25W	0364B	Ohmite
437	Resistor 6.8K 1/2W	RC20GF682K	
438	Resistor 1K 2W	CLU1021	Ohmite
439	Lamp, Fwd Baggage Compt (Lamp 306)	B5540-306	Grimes
440	Panel, Emer Bus Control	C6NF1291-27	DHC
441	Relay, Undercurrent	R103	A.A.E.
442	Battery (Nicad 22 AH)	CA4	Sonotone
443	Diode	IN3571	
444	Circuit Breaker	MS25244-15	
445	Circuit Breaker	MS25244-25	
446	Switch, Emer Bus	MS25103-23	
447	Light Assy, A/P Disengage (Lamp 327)	40000	Honeywell
448	Relay, Inverter Control	AN3353-2	
449	Inverter, 400VA	DH1030-24-600-CS	Phoenix
450	Connector, Inverter Input	MS3106R22-1S	
451	Connector, Inverter Output	MS3106R22-10P	
452	Resistor, VM 30.1K	DCC30.1K	IRC
453	Transformer	88663	Hammond
454	Switch, Pressure	DHCSC70020-11	DHC
	(Mod 6/1422)	DHCSC70020-13	DHC
	(Mod 6/1470)	C6SC1125	DHC
	(Mod 6/1503	8190026	Hathaway
455	Connector, Torque Switch	MS3126E10-6S	
456	Diode	MR1124	
457	Fuse, 1/2-amp	312.500	Littelfuse
458	Capacitor	CP05A1KC474K3	Sprague
459	Fuse, 1-amp	312001.	Littelfuse
460	Relay, Crystal Can	DSC76-1	
461	Relay, Crystal Can	DSC76-2	
462	Resistor	RW59V901	
463	Switch, Pressure	M4008-15	Hobbs
464	Spare		
465	Indicator, Bleed Air Temp	C6SC1111	Lewis Engineering
466	Connector	KPTM06E10-6S	Cannon
467	Bulb, Temperature	56B17	Lewis Engineering
468	Light, Eyebrow (Lamp 327)	B4850-8 or B4850-1R	Grimes
469	Spare		
470	Switch, Limit	B22RT04	Honeywell
471	Lamp	A-7079B-24	Grimes
472	Voltmeter, ac	6625-21-844-8122	NATO
		or 8AW61LVA218	G.E.
473	Switch	8868K8	Cutler Hammer
474	Hot Cup Timer and Bracket Assy	3B-5502-2-SE	Lacy
475	Lamp	1820 or 1820R	
476	Connector, ac Voltmeter	MS3147E7-50S	
477	Panel Assy, Bleed Resistor	C6NF1330	DHC
478	Indicator, Torque Pressure (Edison)	C6SC1115	DHC


ITEM NO.	DESCRIPTION	PART NO.	MFR.
479	Transmitter, Torque Pressure (Edison)	C6SC1116	DHC
480	Connector, P1	126-196	Amphenol
481	Connector, P2	126-195	Amphenol
482	Resistor, Bleed, 60.4 ohm, 20W	RE70G60R4	Dale Elect
483	Indicator, Battery Temperature (Mod 6/1479)	29088-1	Marathon
484	Switch, Fuel Quantity Ind Test	2PB13	Honeywell
485	Light, Nosewheel Position Ind (Mod 6/1478)	5952-3LH-CW-28	Glarban
486	Panel, Engine and Fuel Instrument	C6JF1290	DHC
487	Flasher Unit	70-0075-1	Grimes
488	Power Supply	60-1755-5	Grimes
489	Left Strobe Light and Position Light	C6NW1049-1	DHC
490	Right Strobe Light and Position Light	C6NW1049-3	DHC
491	Panel Assy, Resistor	C6NF1339-3	DHC
492	Relay, Time Delay	1621-C-2001	Hi-G
493	Switch, Power Lever Test	C6NF1342-1	DHC
494	Light, Beacon	G8400A-24	Grimes
495	Relay, Generator Field Control	C6NF1361-3	DHC
496	Relay, Generator Field Control	C6NF1361-1	DHC
497	Panel, Generator Field Control	C6NF1360	DHC
498	Light, Post	A89708-5-327G MS25036-149	Grimes
499	Limiter, 150 amps.	ANL150	Bussman
500	Limiter, Mounting Assy.	4164	Bussman
501	Connector, J1001	MS3120E14-12SW	
502	Connector, P1001	MS3126E14-12PW	
503	Filter	Type 7718-1	Solar Electronics Co.
504	Resistor	RE65G1500	Dale Elect.
505	Light	134-3830-0373-201	Dialco
506	Connector	CA16371	Cannon
507	Connector	MS3102R16-11P	
508	Connector	MS3102R16-11S	
509	Switch	72820105-007	DHC
510	Resistor	RN60C1503F	Ohmite
511	Resistor	RW59V401	Ohmite
512	Light Assy.	C6SC1032-5	DHC
513	Relay	J-D4L-050	Leach
514	Relay, Time Delay	TDH8002-2002	Leach
515	Connector	MS3121E10-6P	
516	Connector	MS3121E12-10P	
517	Control Box, Caution Lights	C6Z2084-1	DHC
518	Relay Panel, Fuel Transfer	C6Z2040-3	DHC


DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 21 - AIR CONDITIONING

TABLE OF CONTENTS


Subject	Chapter Section Subject	Page
HEATING		
Bleed Air System	21-40-00	1
Bleed Air System (Pre Mod 6/1266, Mod 6/1482)	21-40-01	1
Bleed Air System (E.O. 68915)	21-40-02	1
COOLING	21-50-00	
Cabin and Flight Compartment Fans (Mod 6/1602)	21-55-00	1
Air Conditioner System (Mod S.O.O. 6109)	21-58-00	1
TEMPERATURE CONTROL	21-60-00	
Temperature Control System		1

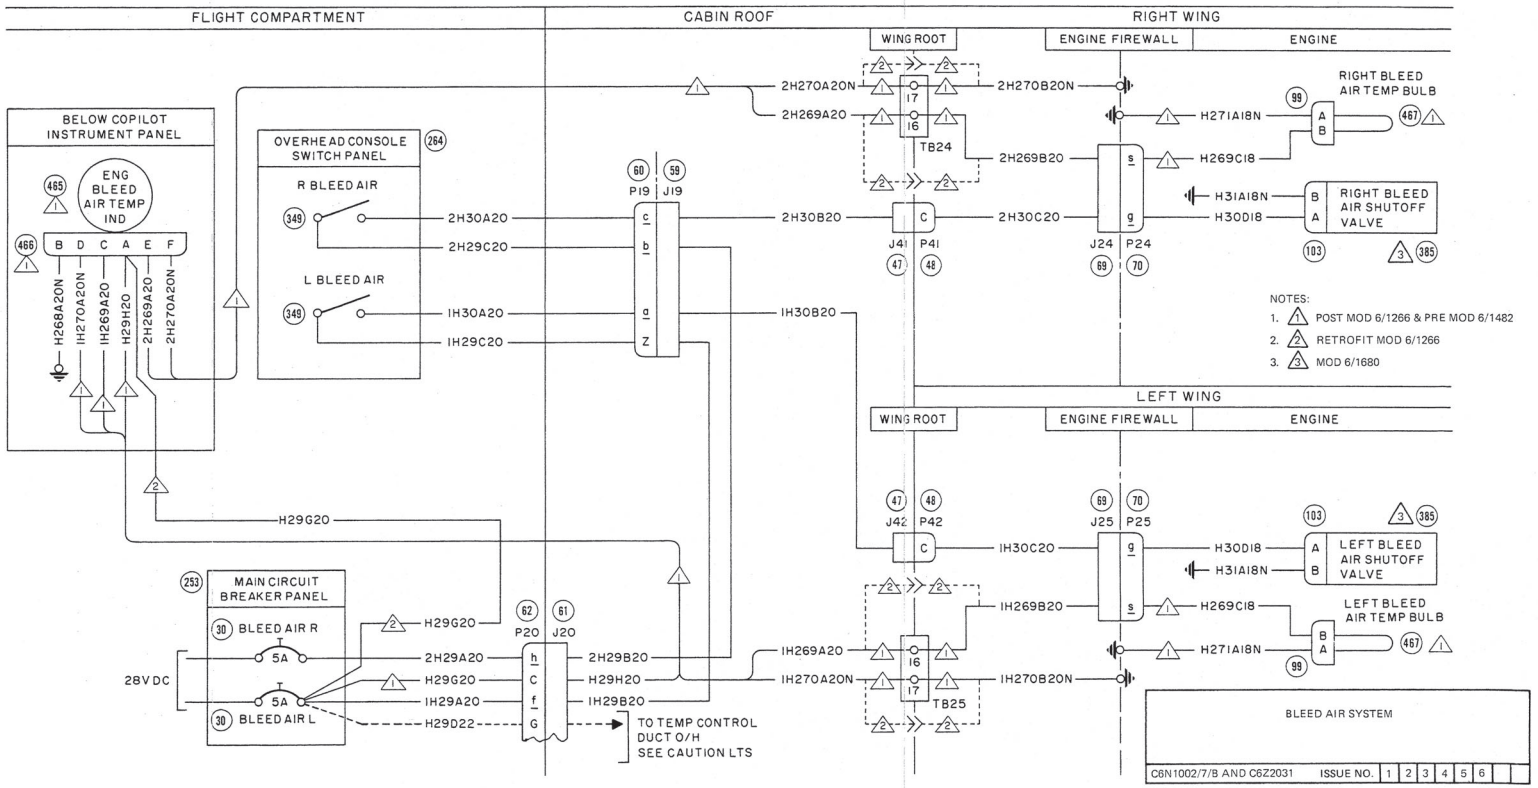
FLIGHT COMPARTMENT
CABIN ROOF
RIGHT WING
WING ROOT
ENGINE FIREWALL
ENGINE
BELOW COPILOT INSTRUMENT PANEL
ENG BLEED AIR TEMP IND
B D C A E F
H268A20N
IH270A20N
IH269A20
H29H20
2H269A20
2H270A20N
OVERHEAD CONSOLE SWITCH PANEL
R BLEED AIR
L BLEED AIR
2H30A20
2H29C20
IH30A20
IH29C20
P19 J19
2H270A20N
2H269A20
2H270B20N
TB24
2H269B20
2H30B20
2H30C20
J41 P41
J24 P24
H271A18N
H269C18
H31A18N
H30D18
RIGHT BLEED AIR TEMP BULB
RIGHT BLEED AIR SHUTOFF VALVE
IH30B20
LEFT WING
J42 P42
J25 P25
IH30C20
IH269B20
IH270A20N
IH270B20N
TB25
LEFT BLEED AIR SHUTOFF VALVE
LEFT BLEED AIR TEMP BULB
H29G20
MAIN CIRCUIT BREAKER PANEL
BLEED AIR R
BLEED AIR L
5A
28V DC
2H29A20
IH29A20
H29D22
P20 J20
2H29B20
H29H20
IH29B20
TO TEMP CONTROL DUCT O/H SEE CAUTION LTS
NOTES:
1. POST MOD 6/1266 & PRE MOD 6/1482
2. RETROFIT MOD 6/1266
3. MOD 6/1680
BLEED AIR SYSTEM
C6N1002/7/B AND C6Z2031 ISSUE NO. 1 2 3 4 5 6

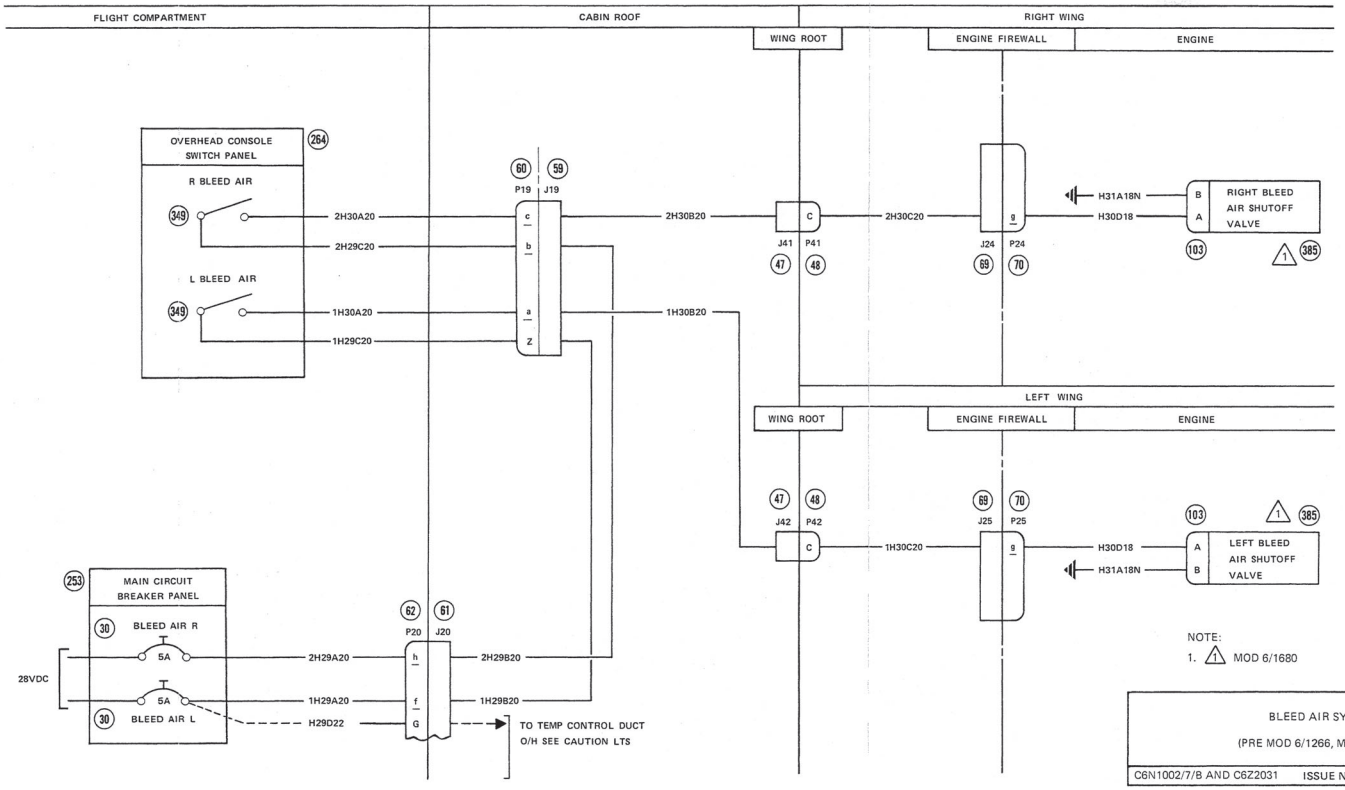

NOTE:
1. 1 MOD 6/1680


BLEED AIR SYSTEM									
(PRE MOD 6/1266, MOD 6/1482)									
C6N1002/7/B AND C6Z2031	ISSUE NO.	1	2						

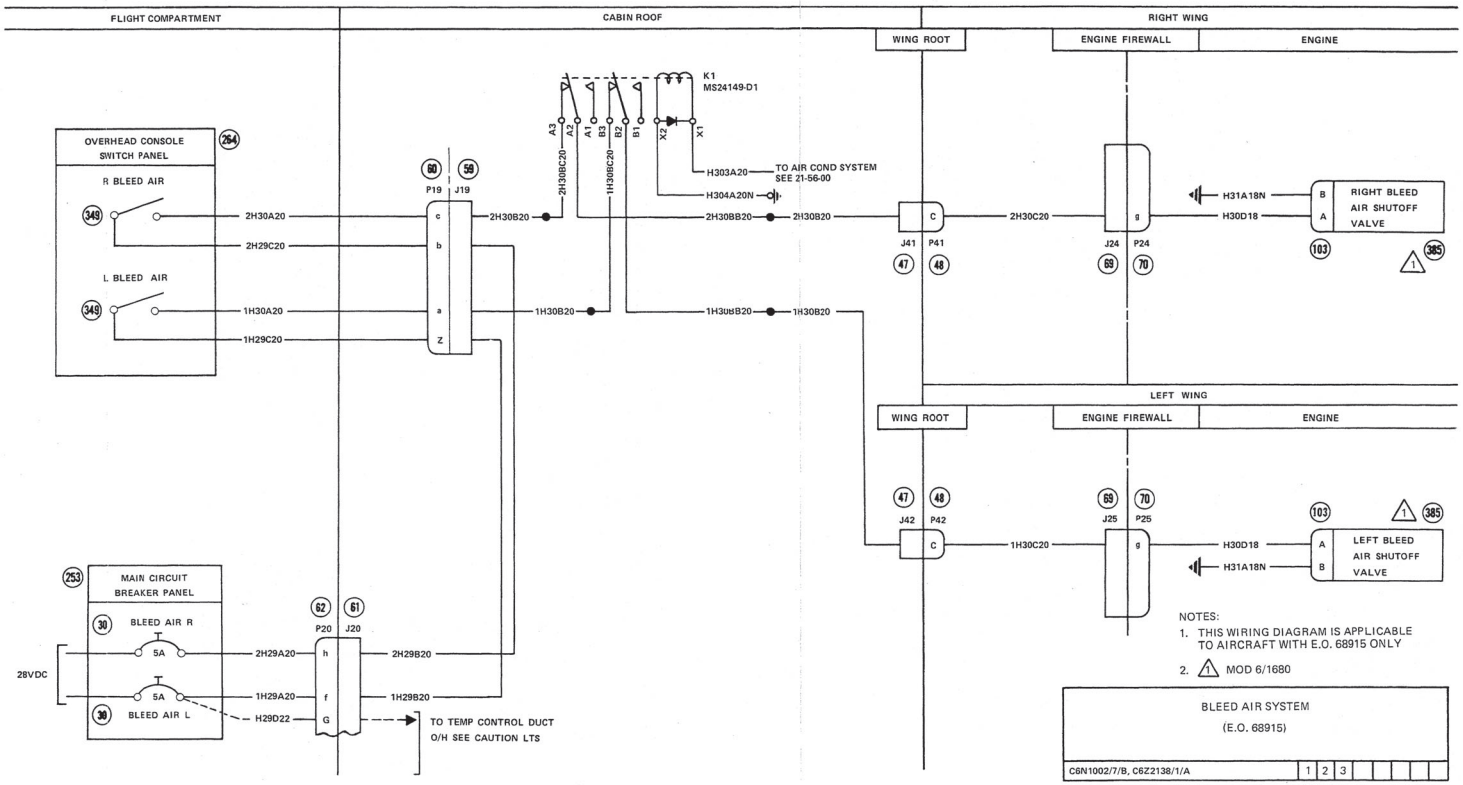

NOTES:
1. THIS WIRING DIAGRAM IS APPLICABLE TO AIRCRAFT WITH E.O. 68915 ONLY
2. ⚠1 MOD 6/1680

BLEED AIR SYSTEM
(E.O. 68915)

C6N1002/7/B, C6Z2138/1/A | 1 | 2 | 3

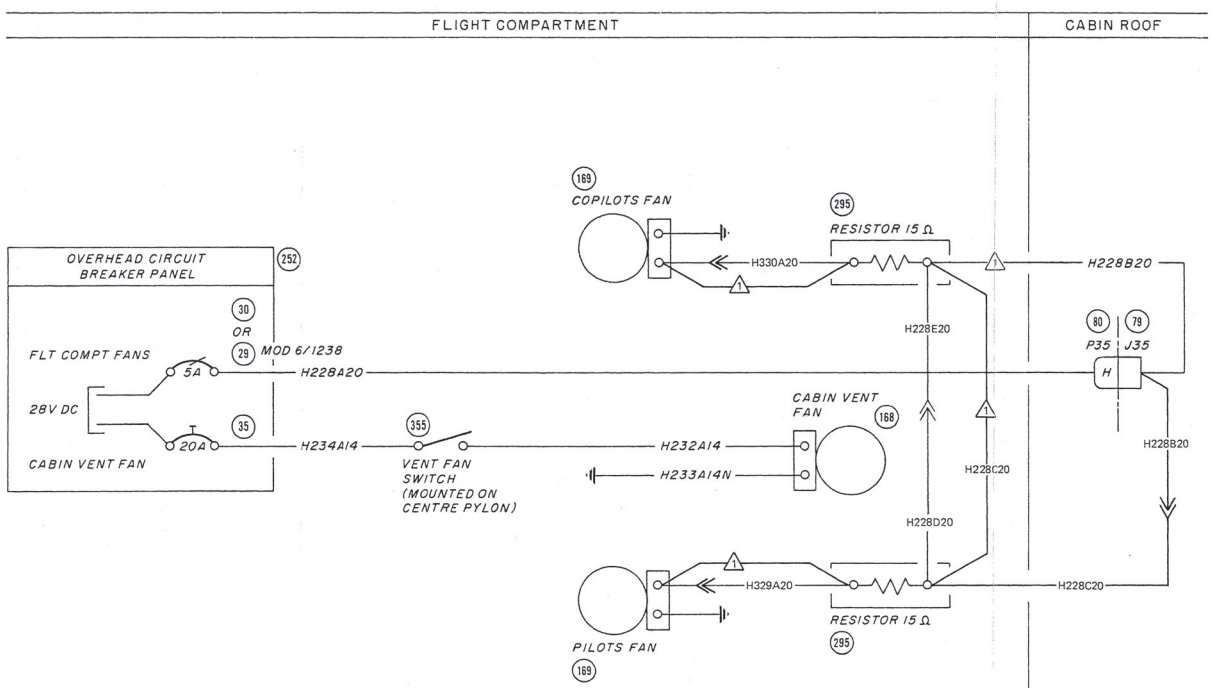

⚠1 SHOWS WIRES FOR S.O.O. 6015 WHICH PRECEEDED MOD 6/1602

CABIN AND FLIGHT COMPARTMENT FANS
MOD 6/1602

⚠1 C6N1002/22/B
C6N1002/54/–

ISSUE NO. 1 2 3 4

VIKING – Temporary Revision

PSM NO.: 1–63–2W **AIRCRAFT:** DASH–6 **SERIES:** 300

PUBLICATION: WIRING MANUAL **TEMPORARY REVISION NO.:** W16

Insert 21-56-00 after 21-55-00 Page 1


CABIN FANS (S.O.O. 6378 & 6379)

REASON FOR ISSUE:
To introduce S.O.O. 6378, Cabin Fans – STA 111 Bulkhead and S.O.O. 6379, Cabin Blower Fan – STA 332 Bulkhead.

ACTION:
In PSM 1–63–2W, insert new diagram 21-56-00 - Cabin Fans (S.O.O. 6378 & 6379) after 21-55-00, as shown on Page 3 of this Temporary Revision.

RECORDING INSTRUCTIONS:
Record this Temporary Revision No. and the relevant information in the appropriate columns of the TEMPORARY REVISION INDEX provided at the front of the manual.

This Page Intentionally Left Blank

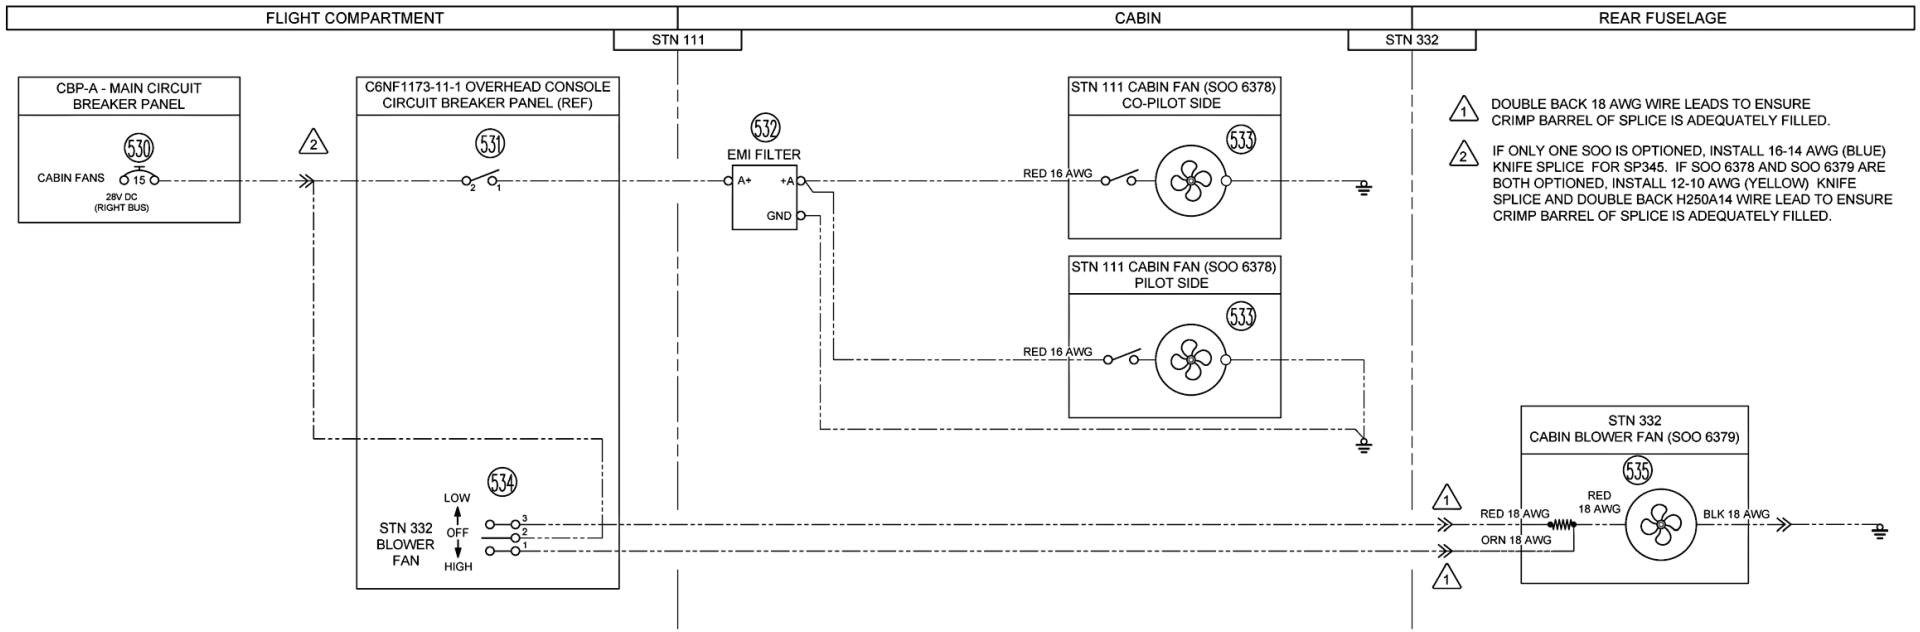


CABIN FANS
(SOO 6378 & SOO 6379)

SHEET 1 OF 1


C6Z2698-11 & C6Z2699-11 ISSUE NO. 1

This Page Intentionally Left Blank

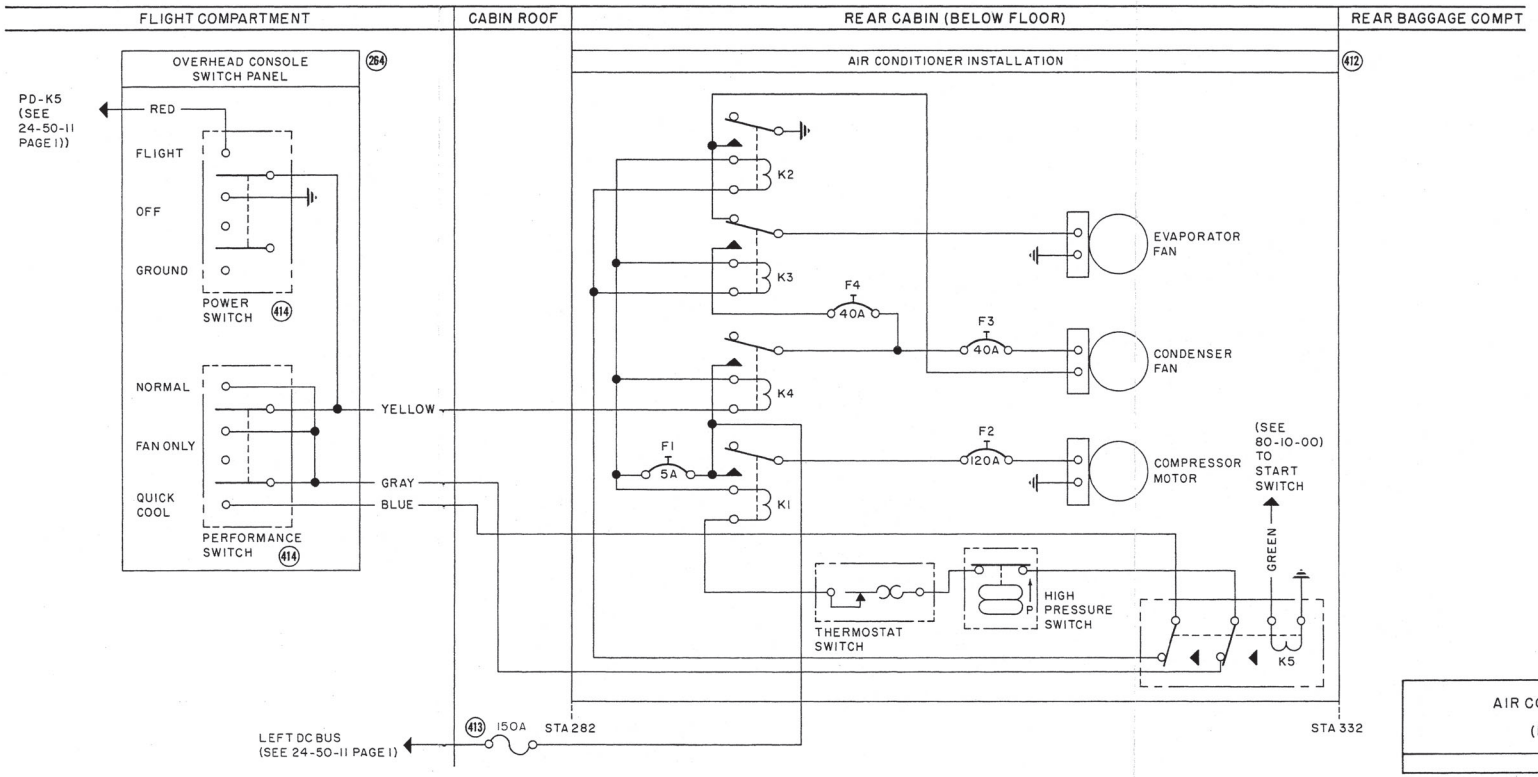

AIR CONDITIONER SYSTEM
(MOD S.O.O. 6109)

ISSUE NO. 1 2 3

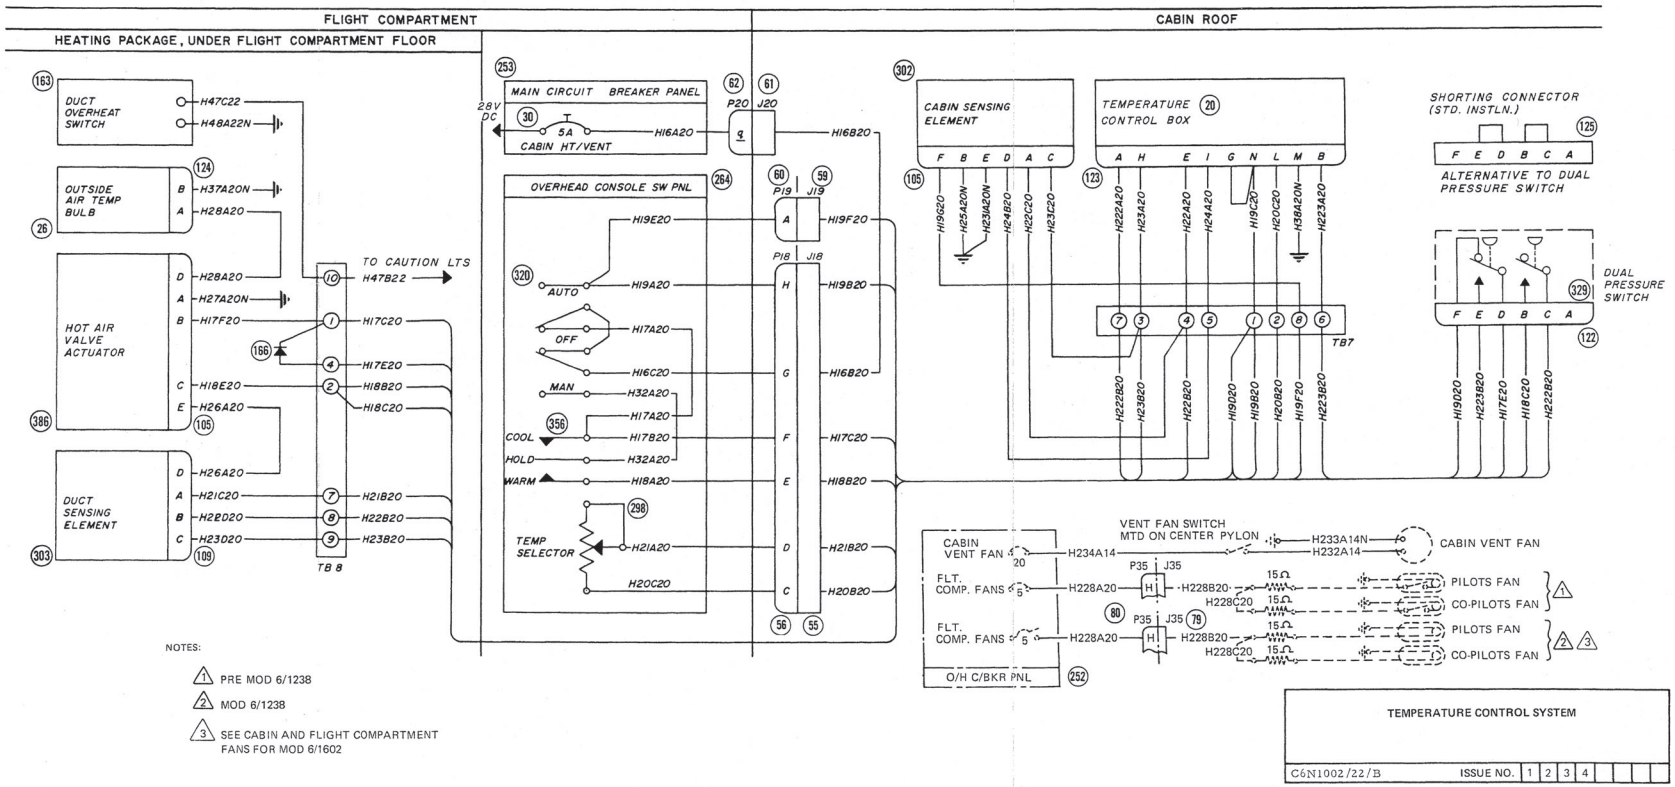

NOTES:

1. PRE MOD 6/1238
2. MOD 6/1238
3. SEE CABIN AND FLIGHT COMPARTMENT FANS FOR MOD 6/1602

TEMPERATURE CONTROL SYSTEM

C6N1002/22/B ISSUE NO. 1 2 3 4

LIST OF EFFECTIVE PAGES: CHAPTER 22: AUTOFLIGHT

Reference	Page	Date
Contents	1	Mar 1/69
22-10-00	*1	Oct 18/73


The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 22 - AUTOFLIGHT

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
AUTOPILOT	22-10-00	
Autopilot System H14		1

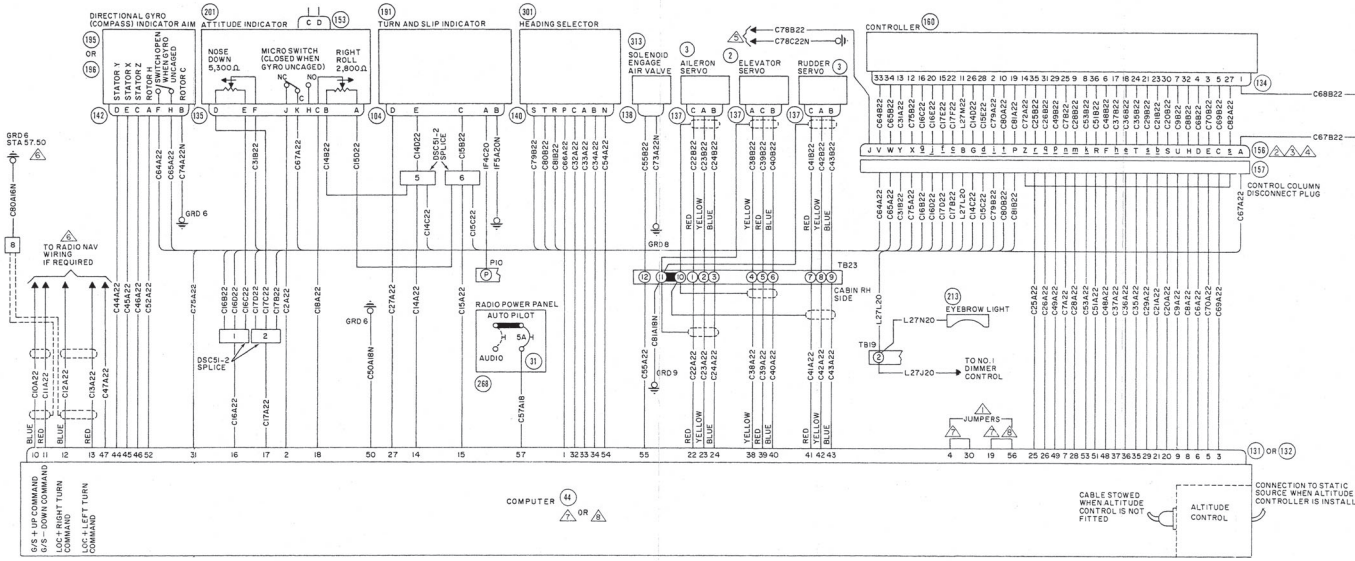

NOTES:

1. ⚠1 PROVISION FOR BACKCOURSE SWITCHING CIRCUIT OPTION
2. ⚠2 ON BASIC INSTALLATION AT PLUG MS3126F20-41P PIN 'H' WIRE CODED C8822 AND PIN 'Z' WIRE CODED C72A22 ARE WITHDRAWN, TAPED AND STOWED
3. ⚠3 WHEN ALTITUDE HOLD OPTION IS INSTALLED WIRE C8B22 IS CONNECTED TO PIN 'H' IN PLUG MS3126F20-41P
4. ⚠4 WHEN VOR OPTION IS INSTALLED, WIRE C72A22 IS CONNECTED TO PIN 'Z' IN PLUG MS3126F20-41P
5. ⚠5 WIRES TAPED AND STOWED WHEN VOR OPTION NOT INSTALLED
6. ⚠6 TAPE AND STOW WIRES ON RADIO SHELF AT STA WL 3.00
7. ⚠7 PRE-MOD 6/1455
8. ⚠8 POST MOD 6/1455

AUTOPILOT SYSTEM H-14

(S.O.O. 6085)

C6J1200/C ISSUE NO. 1 2 3

LIST OF EFFECTIVE PAGES: CHAPTER 23: COMMUNICATIONS

Reference	Page	Date
Contents	*1	Mar 10/76
23-30-00	*1	Deleted
	*2	Deleted
23-40-00	*1	Mar 10/76
	*2	Mar 10/76
23-50-00	*1	Mar 10/76
23-51-00	1	Jul 1/69


The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

CHAPTER 23 - COMMUNICATIONS

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
INTERPHONE	23-40-00	
Audio Control Unit DHC60206 - Sheet 1		1
Audio Control Unit DHC60206 - Sheet 2		2
AUDIO INTEGRATING	23-50-00	
Interphone/Audio Distribution System		1
Audio Terminal Panel	23-51-00	1

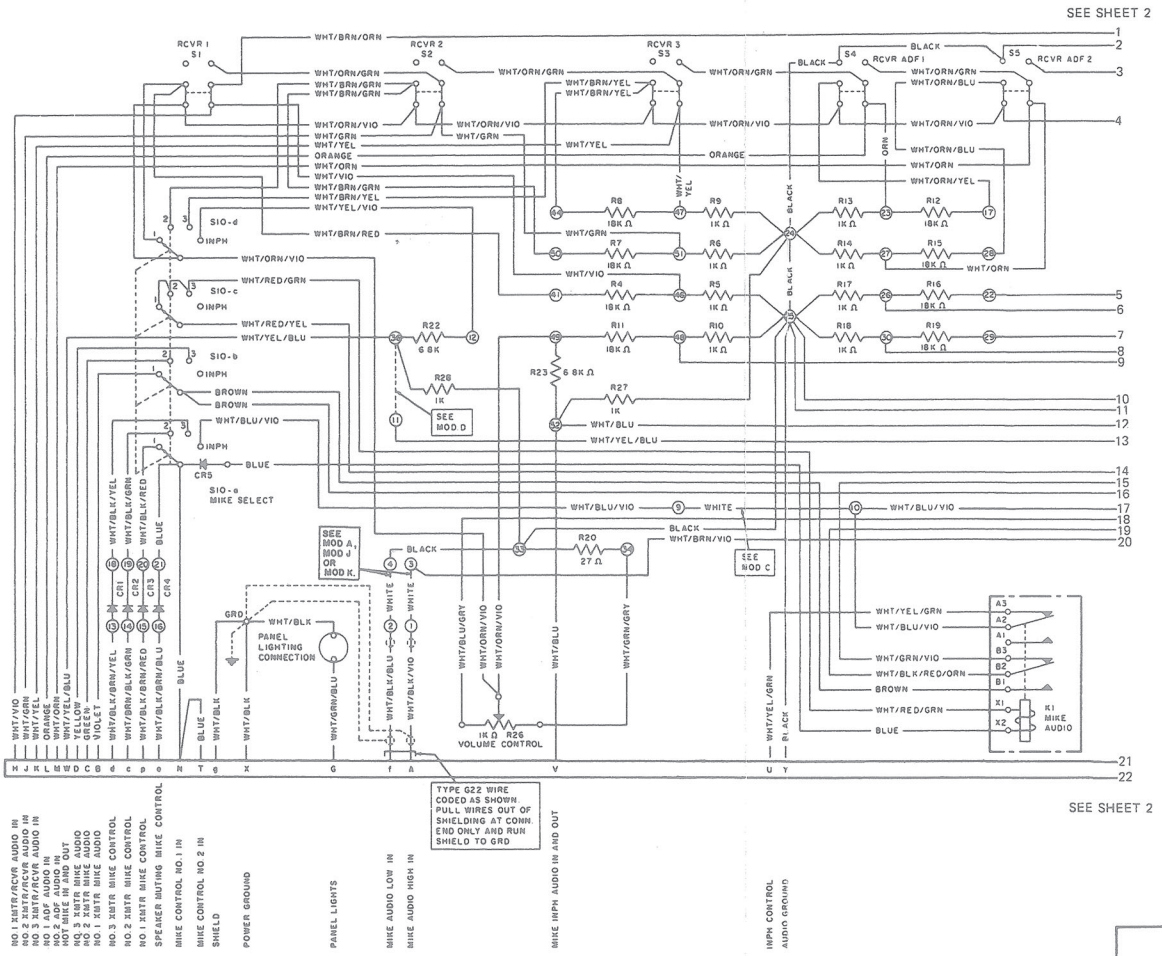


MOD	FUNCTION	DWG REF
A	JUMPERS BETWEEN TERMINALS 1 AND 3, AND 2 AND 4 TO BE REMOVED WHEN MIKE PRE-AMP IS FITTED 8 OHMS	DHC60131
B	JUMPERS BETWEEN TERMINALS 5 AND 6 AND 7 AND 8 TO BE REMOVED WHEN HEADSET 8 OHMS IMPEDANCE MATCHING TRANSFORMER IS FITTED	DHC60132
C	JUMPER BETWEEN TERMINALS 9 AND 10 TO BE REMOVED IF TWO BUTTON OPERATION IS REQUIRED	
D	JUMPER BETWEEN TERMINALS 11 AND 36 TO BE ADDED IF HOT MIKE OPERATION IS REQUIRED	
H	JUMPERS BETWEEN TERMINALS 5 AND 6 AND 7 AND 8 TO BE REMOVED WHEN TRANSFORMER INSTALLED IMPEDANCE MATCHING 150 Ω HEADSET IS FITTED	DHC60197
J & K	JUMPERS BETWEEN TERMINALS 1 AND 3 AND 2 AND 4 TO BE REMOVED WHEN PRE-AMP INSTALLATION 150 Ω DYNAMIC MIKE IS FITTED	DHC60198 & DHC60203
THE ABOVE MODS ARE AVAILABLE OPTIONS AND MAY BE ADDED TO CONTROL UNITS AS REQUIRED		

NOTES:
1. WIRES MARKED WITH AN ASTERISK (*) ARE PART OF WM-85/U CABLE
2. THIS WIRING IDENTICAL FOR ALL DASH NUMBERS OF THE DHC60206 CONTROL EXCEPT WHERE NOTED OTHERWISE

AUDIO CONTROL UNIT - DHC60206

(SHEET 1)

DHC60205/D ISSUE NO. 1 2 3

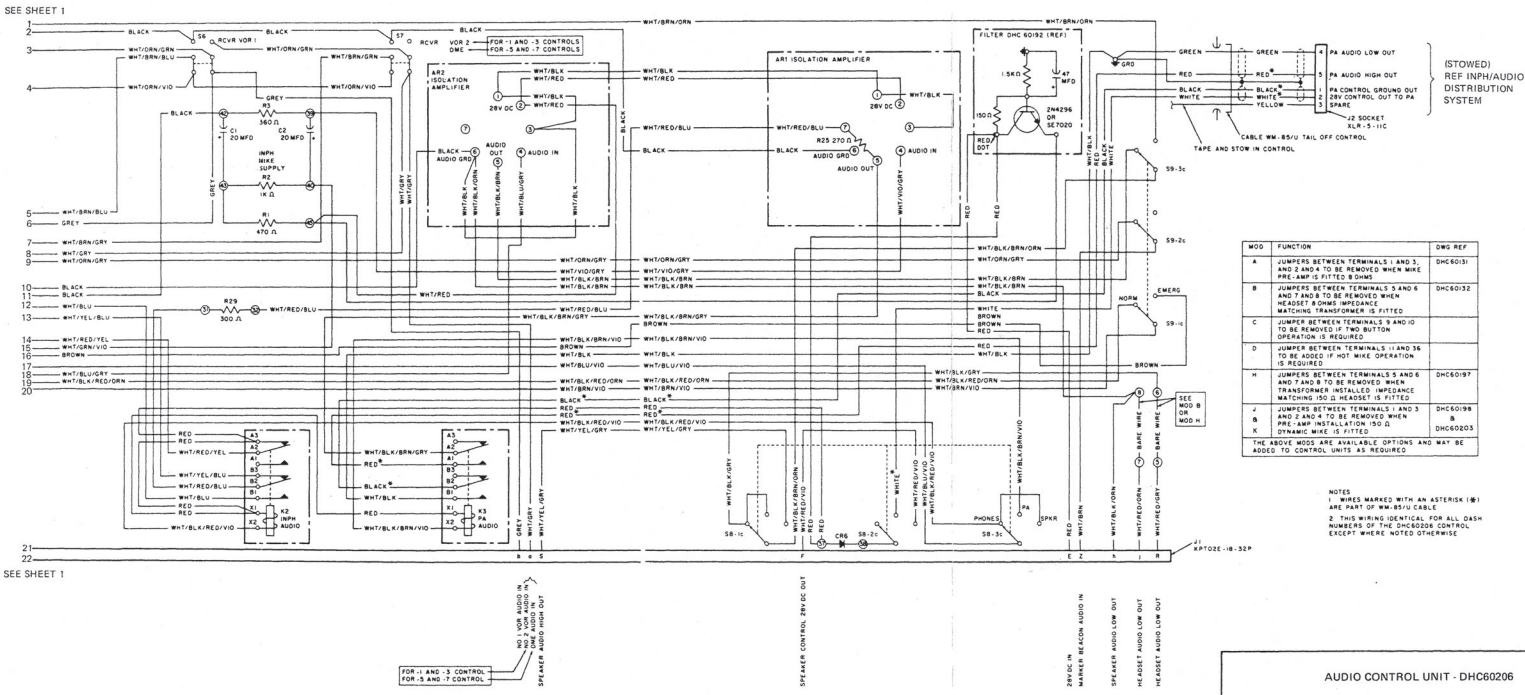


MOD	FUNCTION	DWG REF
A	JUMPERS BETWEEN TERMINALS 1 AND 3 AND 2 AND 4 TO BE REMOVED WHEN MIKE PRE-AMP IS FITTED 8 OHMS	DHC60131
B	JUMPERS BETWEEN TERMINALS 5 AND 6 AND 7 AND 8 TO BE REMOVED WHEN HEADSET 8 OHMS IMPEDANCE MATCHING TRANSFORMER IS FITTED	DHC60132
C	JUMPER BETWEEN TERMINALS 9 AND 10 TO BE REMOVED IF TWO BUTTON OPERATION IS REQUIRED	
D	JUMPER BETWEEN TERMINALS 11 AND 36 TO BE ADDED IF HOT MIKE OPERATION IS REQUIRED	
H	JUMPERS BETWEEN TERMINALS 5 AND 6 AND 7 AND 8 TO BE REMOVED WHEN TRANSFORMER INSTALLED IMPEDANCE MATCHING 150 Ω HEADSET IS FITTED	DHC60197
J B K	JUMPERS BETWEEN TERMINALS 1 AND 3 AND 2 AND 4 TO BE REMOVED WHEN PRE-AMP INSTALLATION 150 Ω DYNAMIC MIKE IS FITTED	DHC60198 B DHC60203
THE ABOVE MODS ARE AVAILABLE OPTIONS AND MAY BE ADDED TO CONTROL UNITS AS REQUIRED		

NOTES
1. WIRES MARKED WITH AN ASTERISK (*) ARE PART OF WM-85/U CABLE
2. THIS WIRING IDENTICAL FOR ALL DASH NUMBERS OF THE DHC60206 CONTROL EXCEPT WHERE NOTED OTHERWISE

AUDIO CONTROL UNIT - DHC60206

(SHEET 2)


DHC60205/D ISSUE NO. 1 2 3

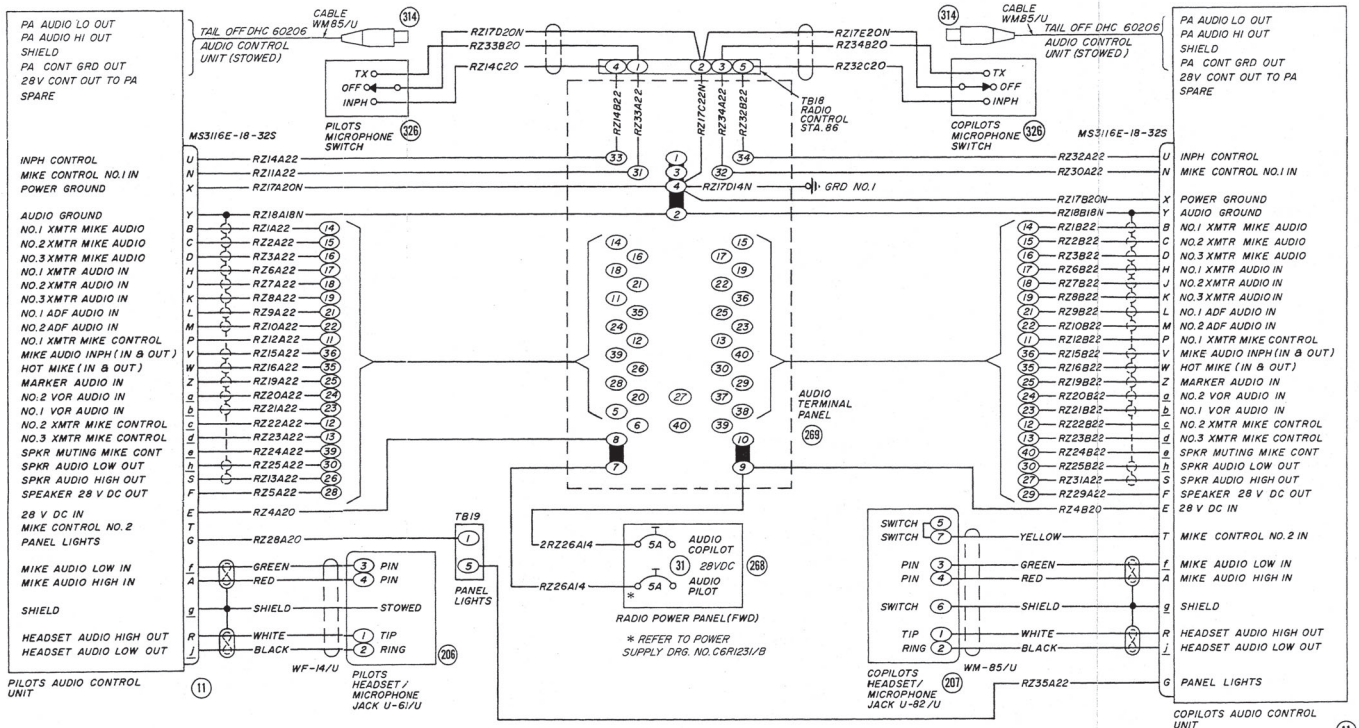

INTERPHONE/AUDIO DISTRIBUTION SYSTEM

C6R1083/E, C6R1231/B ISSUE NO. 1 2 3

AND EO 60050

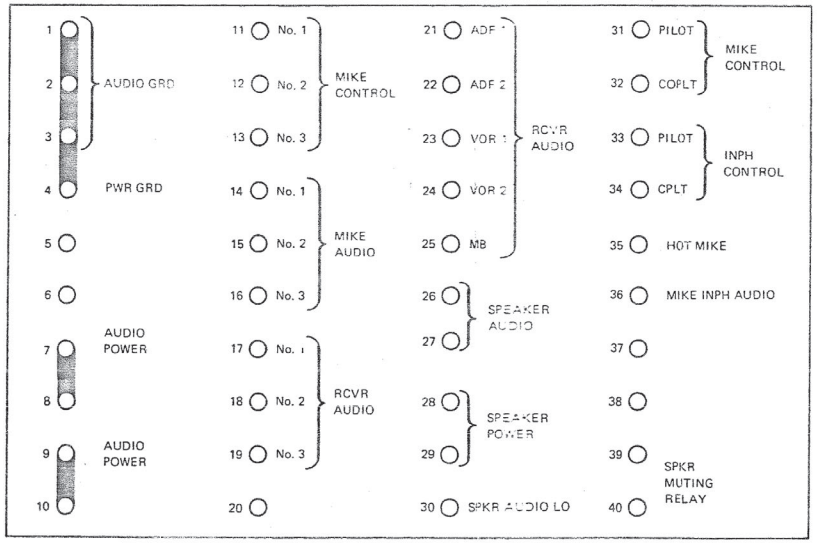

AUDIO TERMINAL PANEL

C6R1020 ISSUE NO. 2

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL

LIST OF EFFECTIVE PAGES: CHAPTER 24: ELECTRICAL POWER

Reference	Page	Date
Contents	1	Jun 16/80
	2	May 7/82
24-10-00	1	Mar 10/76
24-20-00	1	Jun 8/71
24-21-00	1	Mar 10/76
	2	Mar 10/76
	3	Mar 10/76
24-22-01	1	Mar 10/76
	2	May 7/82
	3	Mar 10/76
	4	May 7/82
24-23-00	1	Mar 10/76
	2	Mar 10/76
	3	Mar 10/76
	4	Mar 10/76
24-24-00	1	Mar 10/76
	2	May 7/82
	3	Mar 10/76
	4	May 7/82
24-30-00	1	Mar 10/76
	2	Mar 10/76
	3	Mar 10/76
	4	Jun 16/80
	5	Mar 10/76
	6	Mar 10/76
24-30-02	1	Nov 24/77
	2	Jun 16/80
	3	Nov 24/77
	4	May 7/82
	5	Nov 24/77
	6	Jun 16/80
24-30-03	1	Jun 16/80
	*2	Oct 31/02
	3	Jun 16/80
	4	May 7/82
24-30-03 (Cont'd)	5	Jun 16/80
	6	Jun 16/80
24-30-33	1	Mar 10/76
24-50-00	1	Oct 18/73
24-50-11	1	Jun 8/71
24-50-12	1	Jun 16/80
24-50-21	1	Jun 16/80
24-50-22	1	May 7/82
24-51-00	1	Mar 10/76
	2	Mar 10/76

The asterisk (*) indicates pages revised, added or deleted by current revision.

DHC-6 TWIN OTTER SERIES 300
WIRING DIAGRAM MANUAL


CHAPTER 24 - ELECTRICAL POWER

TABLE OF CONTENTS

Subject	Chapter Section Subject	Page
GENERATOR DRIVE	24-10-00	
Generator Overheat Caution (Mod S.O.O. 6031)		1
AC GENERATION	24-20-00	
AC Power Control (Mod S.O.O. 6127)		1
AC Power Supplies (65VA)-(Pre Mod 6/1317, Pre Mod 6/1274, Mod 6/1372) - Sheet 1	24-21-00	1
AC Power Supplies (65VA) - (Pre Mod 6/1317, Mod 6/1274) - Sheet 2	24-21-00	2
AC Power Supplies (65VA) - (Pre Mod 6/1317, Mod 6/1274) - Sheet 3	24-21-00	3
AC Power Supplies (250VA) - (Pre Mod 6/1274) - Sheet 1	24-22-01	1
AC Power Supplies (250VA) - (Pre Mod 6/1274) - Sheet 2	24-22-01	2
AC Power Supplies (250VA) - (Mod 6/1274) - Sheet 3	24-22-01	3
AC Power Supplies (250VA) - (Mod 6/1274) - Sheet 4	24-22-01	4
AC Power Supplies (400VA) - (Pre Mod 6/1274) - Sheet 1	24-23-00	1
AC Power Supplies (400VA) - (Pre Mod 6/1274) - Sheet 2	24-23-00	2
AC Power Supplies (400VA) - (Mod 6/1274) - Sheet 3	24-23-00	3
AC Power Supplies (400VA) - (Mod 6/1274) - Sheet 4	24-23-00	4
AC Power Supplies (250VA) - (Mod S.O.O. 6142 and Pre Mod 6/1416) - Sheet 1	24-24-00	1
AC Power Supplies (250VA) - (Mod S.O.O. 6142 and Pre Mod 6/1416) - Sheet 2	24-24-00	2
AC Power Supplies (250VA) - Mod S.O.O. 6142 and Mod 6/1416) - Sheet 3	24-24-00	3
AC Power Supplies (250VA) - (Mod S.O.O. 6142 and Mod 6/1416) - Sheet 4	24-24-00	4
DC GENERATION	24-30-00	
DC Power Supplies _ Sheet 1		1
DC Power Supplies - Sheet 2		2
DC Power Supplies - Sheet 3		3
DC Power Supplies - Sheet 4		4
DC Power Supplies - Sheet 5		5
DC Power Supplies - Sheet 6		6
	24-30-02	
DC Power Supplies - (Post Mod 6/1590 and 6/1591) Sheet 1		1
DC Power Supplies - (Post Mod 6/1590 and 6/1591) Sheet 2		2
DC Power Supplies - (Post Mod 6/1590 and 6/1591) Sheet 3		3
DC Power Supplies - (Post Mod 6/1590 and 6/1591) Sheet 4		4
DC Power Supplies - (Post Mod 6/1590 and 6/1591) Sheet 5		5
DC Power Supplies - (Post Mod 6/1590 and 6/1591) Sheet 6		6


TABLE OF CONTENTS (Cont'd)

Subject	Chapter Section Subject	Page
	24-30-03	
DC Power Supplies - (Mod 6/1651) Sheet 1		1
DC Power Supplies - (Mod 6/1651) Sheet 2		2
DC Power Supplies - (Mod 6/1651) Sheet 3		3
DC Power Supplies - (Mod 6/1651) Sheet 4		4
DC Power Supplies - (Mod 6/1651) Sheet 5		5
DC Power Supplies - (Mod 6/1651) Sheet 6		6
Battery Overtemperature Indication (Mod 6/1479)	24-30-33	
ELECTRICAL LOAD DISTRIBUTION	24-50-00	
DC Distribution System		1
Power Distribution and Generator Control Box	24-50-11	1
Power Distribution and Generator Control Box (Mod 6/1651)	24-50-12	1
Main Distribution Box	24-50-21	1
Main Distribution Box	24-50-22	1
Radio Power Distribution System - Sheet 1	24-51-00	1
Radio Power Distribution System - Sheet 2	24-51-00	2

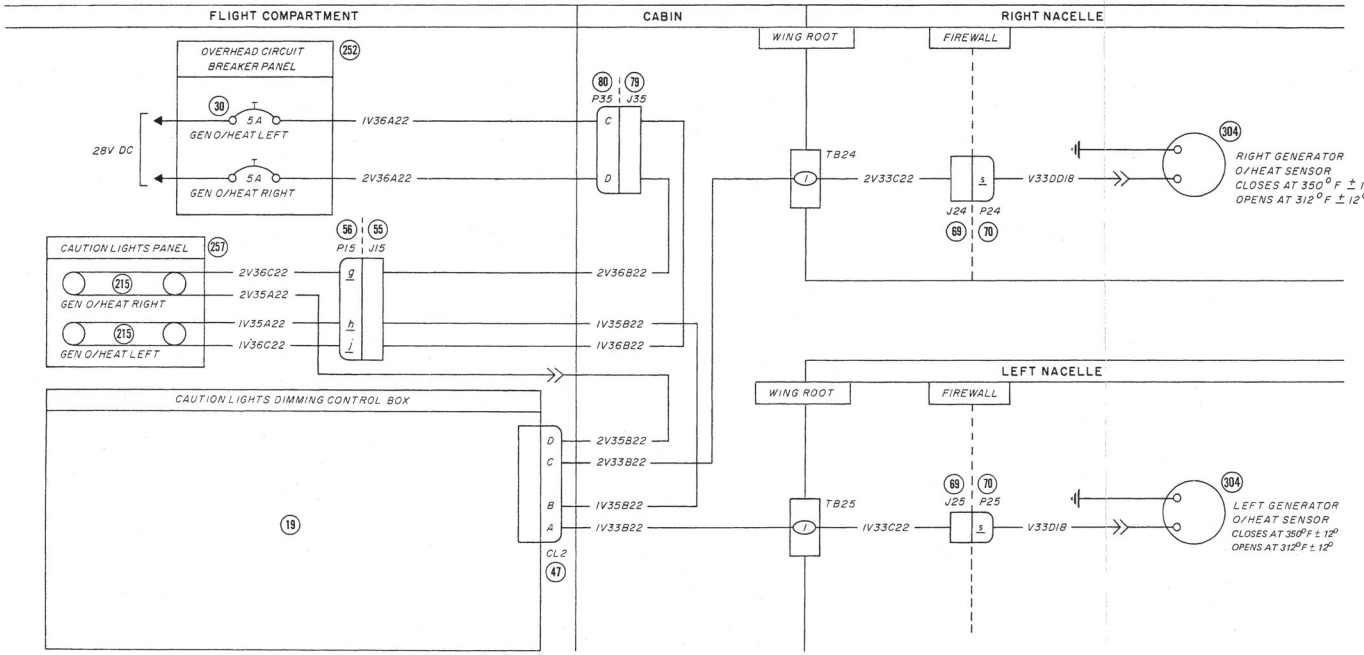

GENERATOR OVERHEAT CAUTION
(MOD SOO 6031)


C6Z1273/E ISSUE NO. 1 2 3

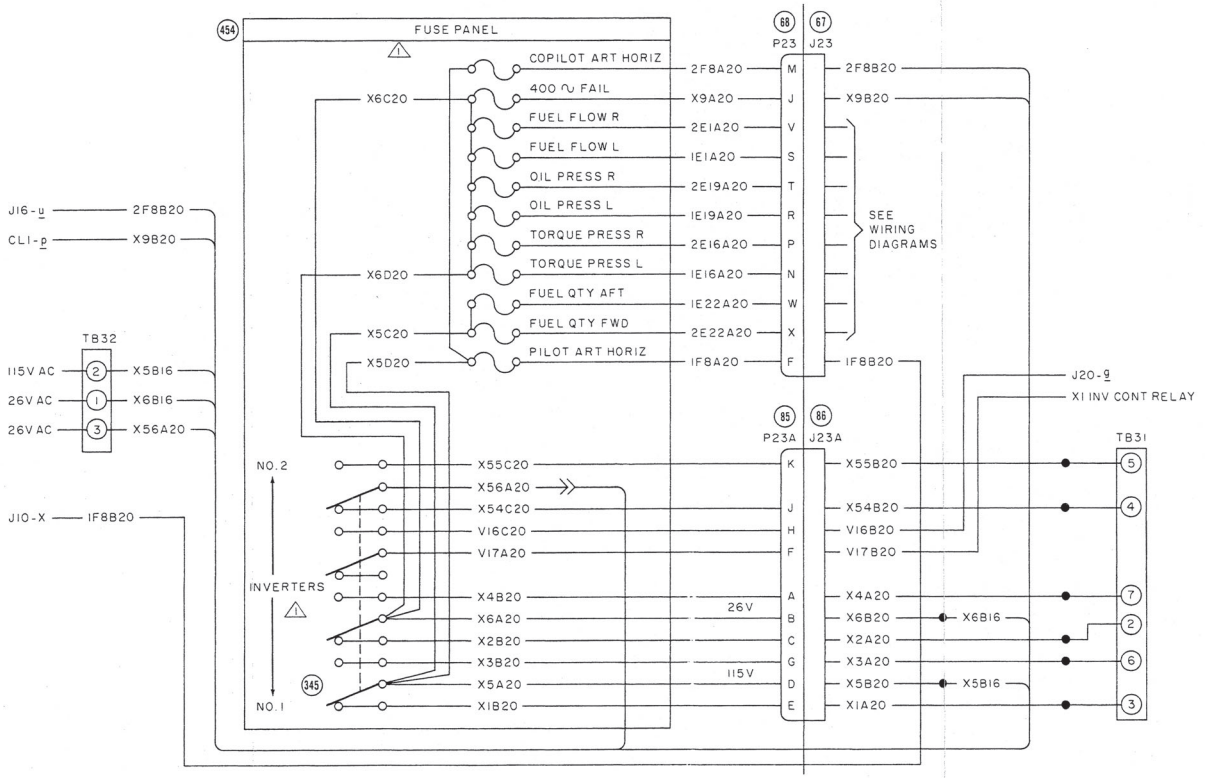

NOTES:

1. ⚠1 MOD S.O.O. 6127 PROVIDES FOR RELOCATION OF INVERTER SWITCH ON FUSE PANEL FOR 65VA OR, 250VA SYSTEMS PRE MOD 6/1274 OR PRE MOD S.O.O. 6142

AC POWER CONTROL (MOD S.O.O. 6127)									
C6N1076/A	ISSUE NO.	1	2	3					

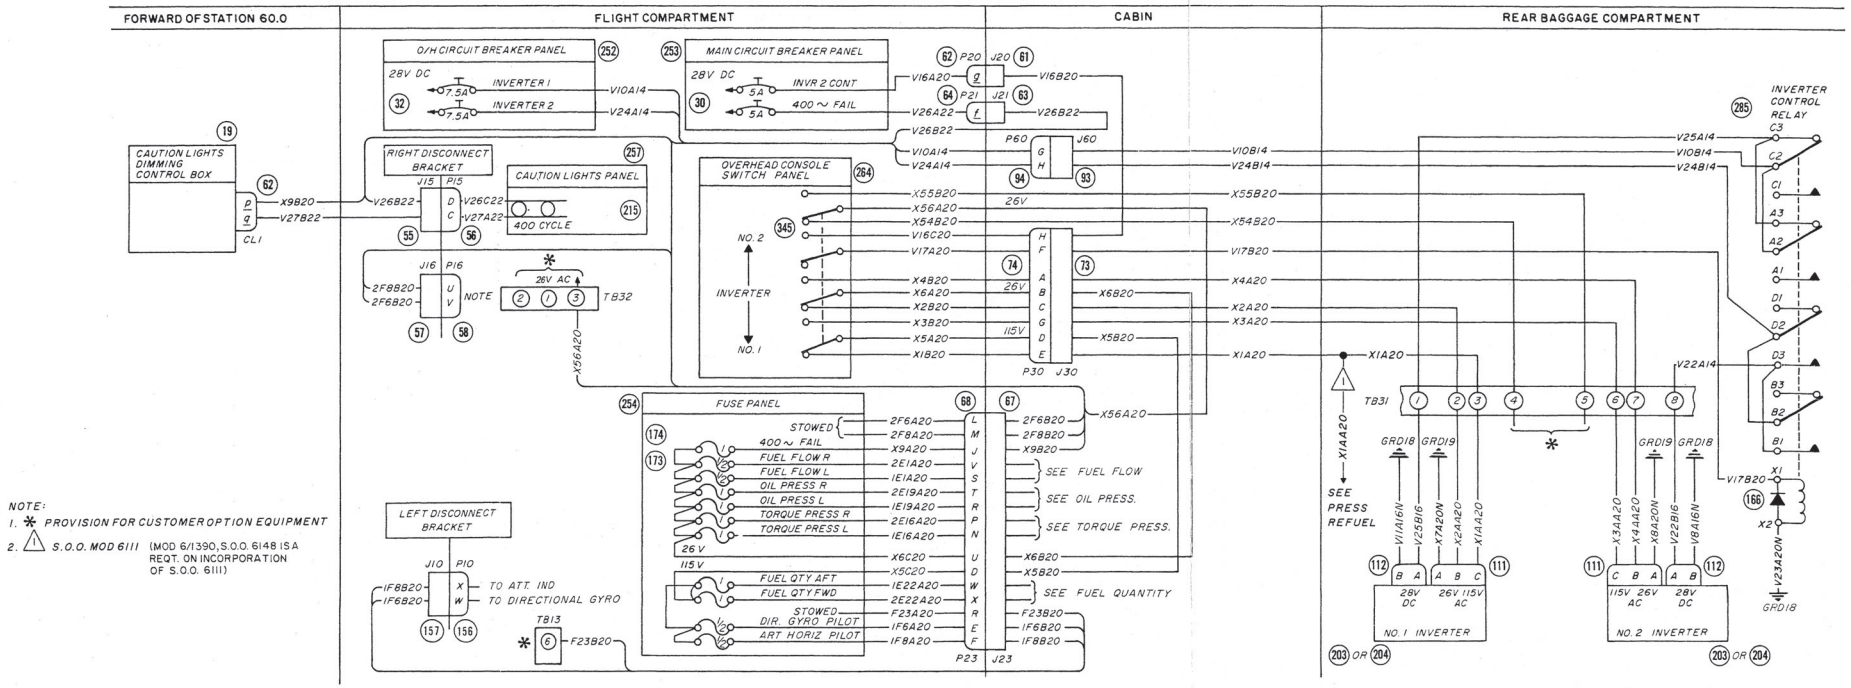


NOTE:
1. * PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. ⚠ S.O.O. MOD 6111 (MOD 6/1390, S.O.O. 6148 IS A REQT. ON INCORPORATION OF S.O.O. 6111)

AC POWER SUPPLIES (65VA)

(PRE MOD 6/1317, PRE MOD 6/1274, MOD 6/1372)
(SHEET 1)

C6N1002/40/- AND	ISSUE NO.	1	2	3	4				

C6N1002/48/A

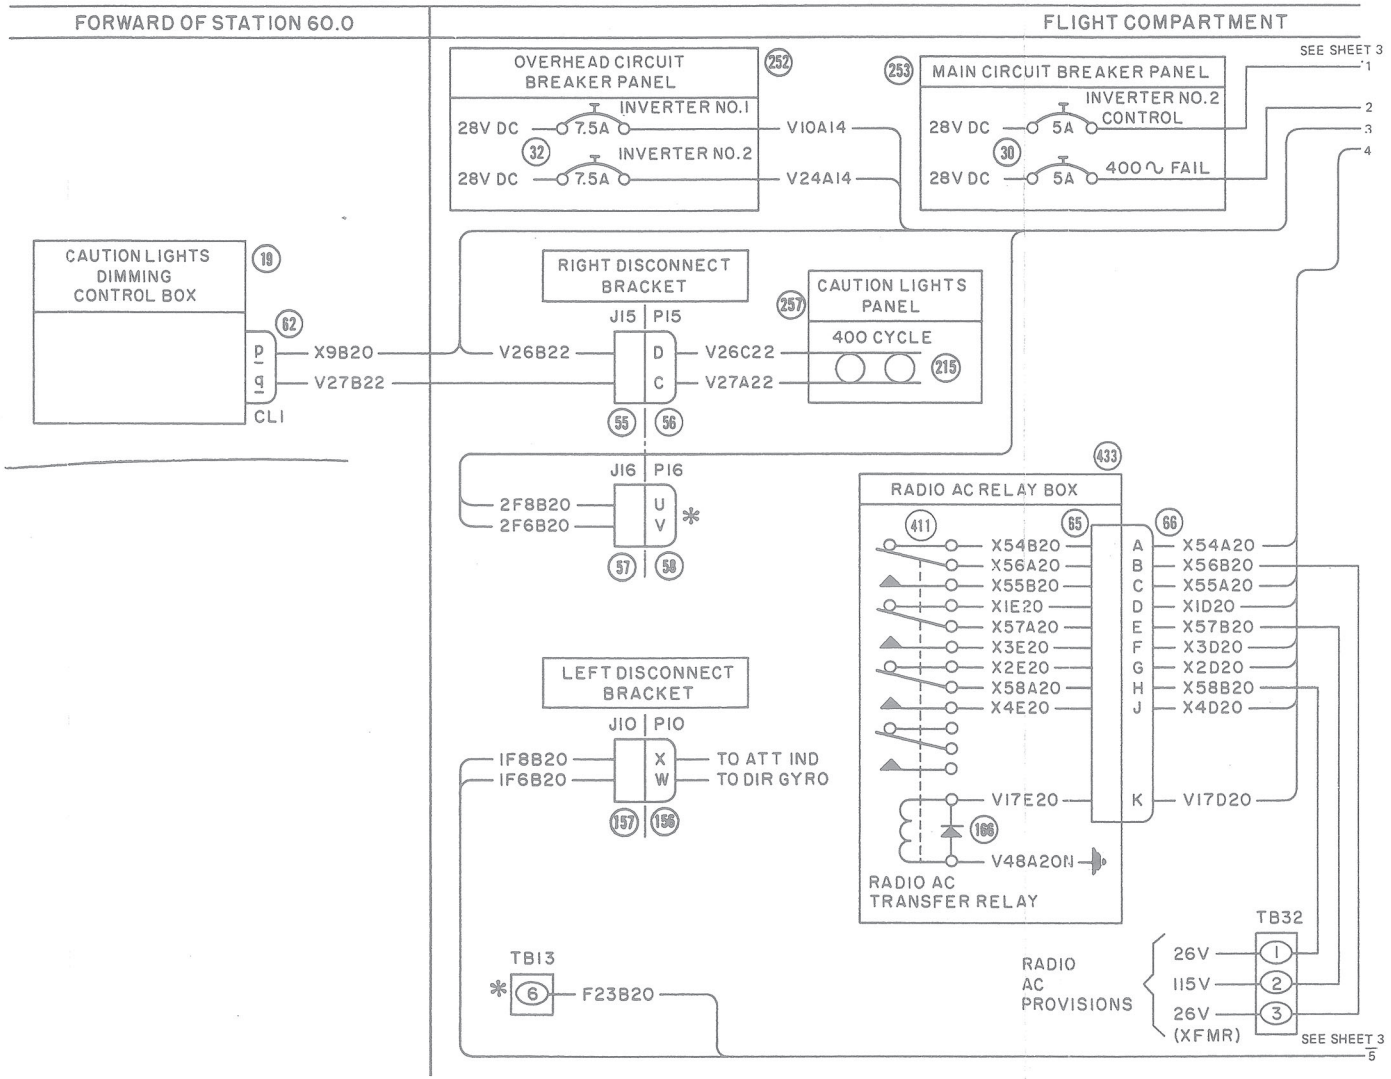


NOTE:
1. * PROVISION FOR CUSTOMER EQUIPMENT OPTION
2. ⚠1 POST MOD 6/1274
3. ⚠2 RETROFIT MOD 6/1274
4. ⚠3 S.O.O. MOD 6111

AC POWER SUPPLIES (65VA)
(PRE-MOD 6/1317, MOD 6/1274)
(SHEET 2)

C6Z1583/B AND ISSUE NO. 1 2 3 4

C6N1002/45/B

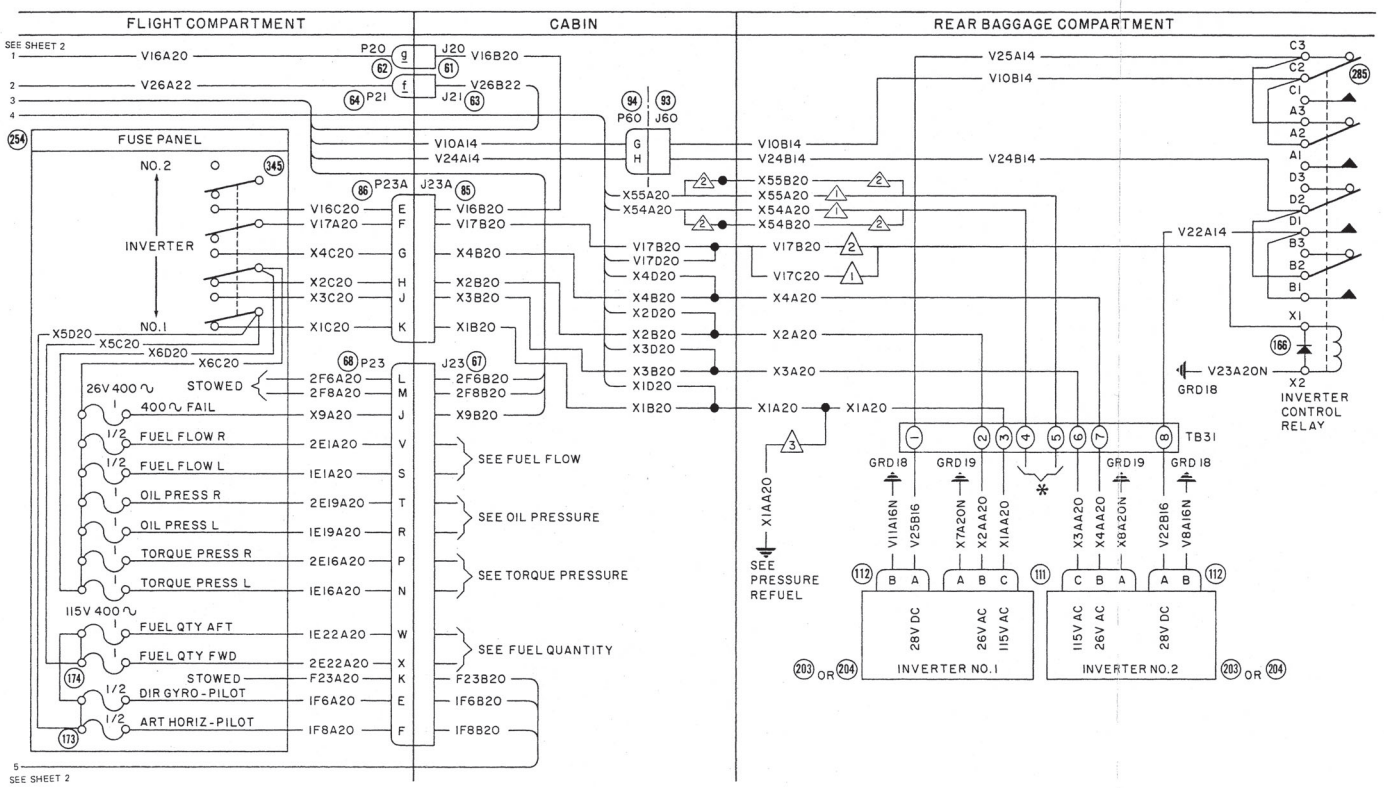


NOTE:
1. * PROVISION FOR CUSTOMER EQUIPMENT OPTION
2. △1 POST MOD 6/1274
3. △2 RETROFIT MOD 6/1274
4. △3 S.O.O. MOD 6111

AC POWER SUPPLIES (65VA)
(PRE MOD 6/1317, MOD 6/1274)
(SHEET 3)

C6Z1583/B AND ISSUE NO. 1 2 3 4


C6N1002/45/B

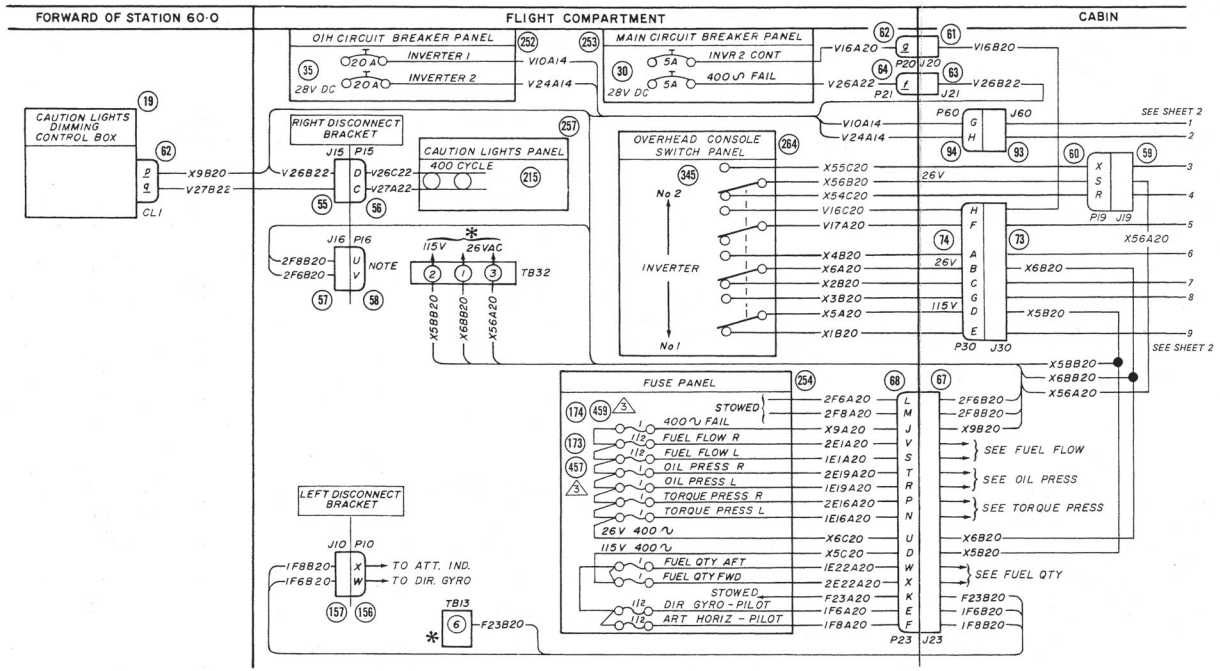

NOTES:
1. * PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION - PART OF S.O.O. MOD 6079 (PRE MOD 6/1317) OR, STANDARD (POST MOD 6/1317)
3. △2 S.O.O. MOD 6111
4. △3 POST MOD 6/1388
5. △4 PRE MOD 6/1586
6. △5 MOD 6/1586

AC POWER SUPPLIES (250VA)
(PRE MOD 6/1274)
(SHEET 1)

C6N1059/2/A AND C6N1002/40/-
ISSUE NO. 1 2 3 4 5

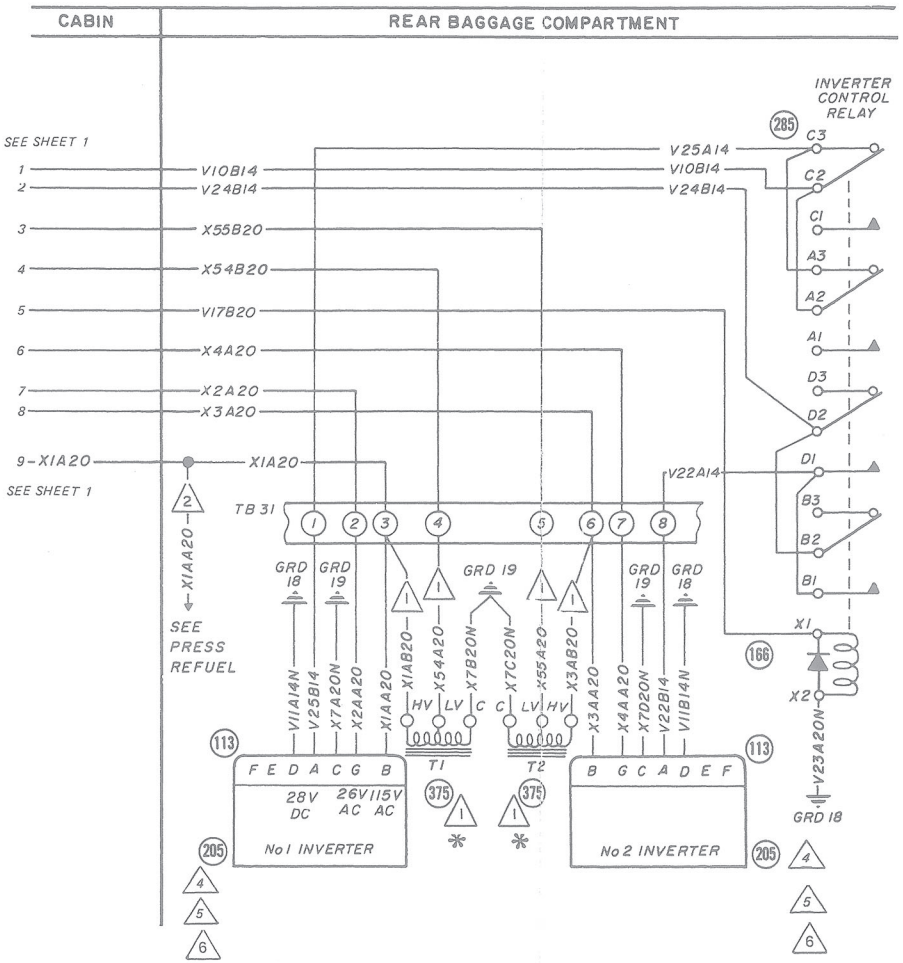


NOTES:

1. * PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION - PART OF S.O.O. MOD 6079 (PRE MOD 6/1317) OR, STANDARD (POST MOD 6/1317)
3. △2 S.O.O. MOD 6111
4. △3 POST MOD 6/1388
5. △4 PRE MOD 6/1586
6. △5 MOD 6/1586 AND PRE MOD 6/1740
7. △6 MOD 6/1740

AC POWER SUPPLIES (250VA)
(PRE MOD 6/1274)
(SHEET 2)

C6N1059/2/A AND ISSUE NO. 1 2 3 4 5 6


C6N1002/40/-

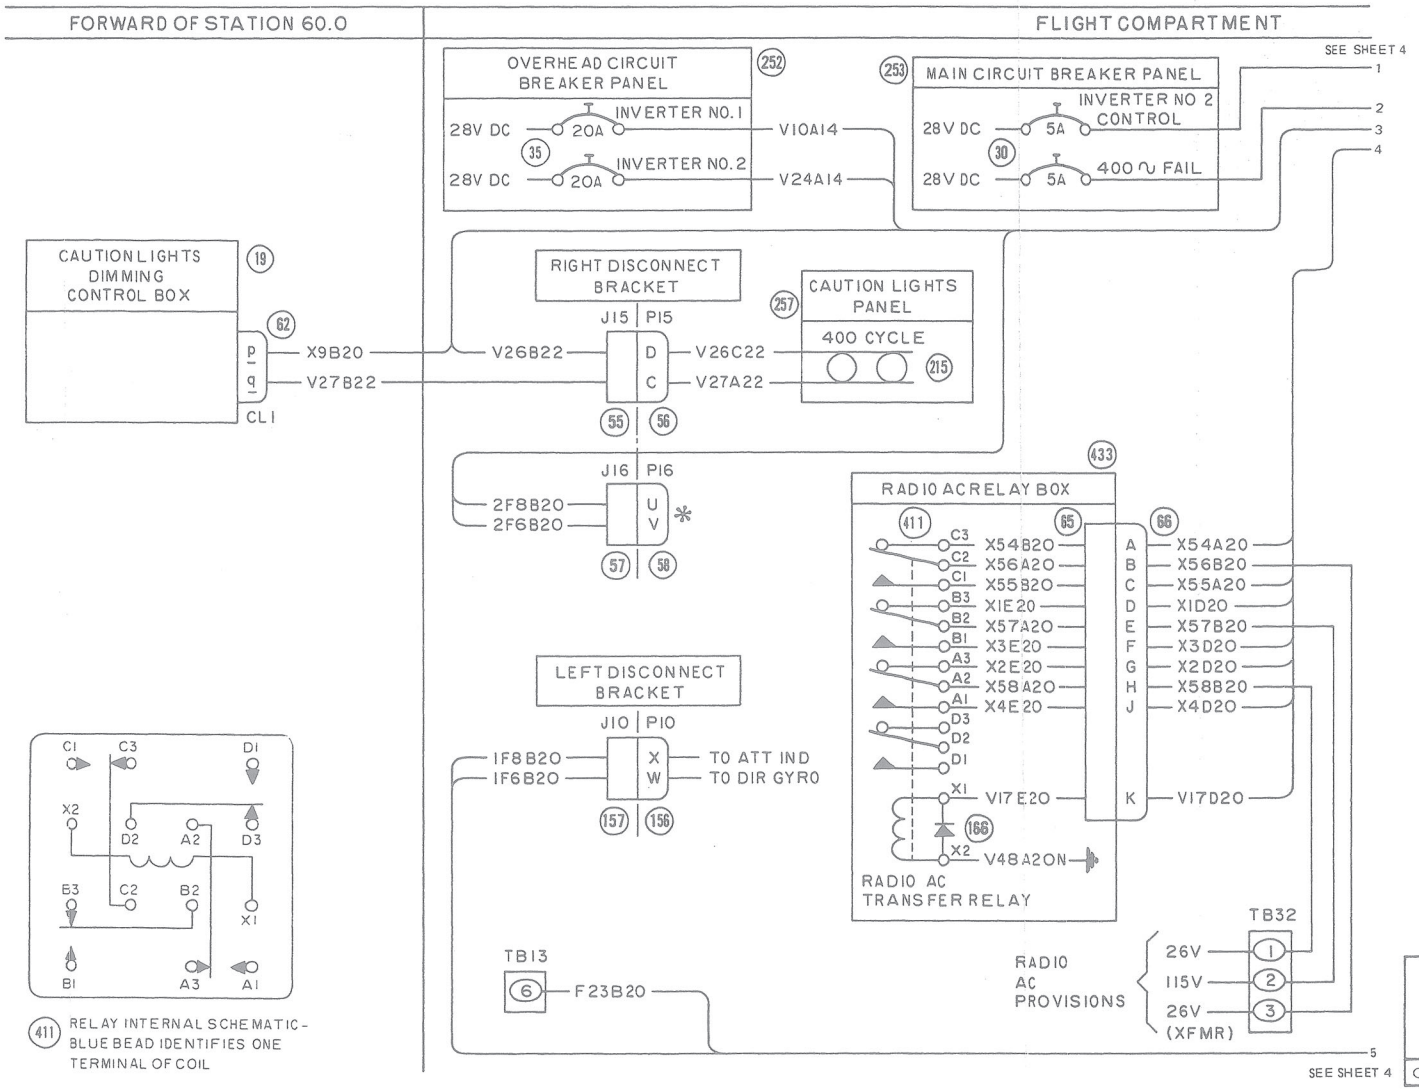

NOTES:
1. * PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION - POST MOD 6/1274 AND S.O.O. MOD 6079. TRANSFORMERS STANDARD EQUIPMENT - POST MOD 6/1317
3. △2 POST MOD 6/1274 OR POST MOD 6/1317
4. △3 RETROFIT MOD 6/1274
5. △4 MOD S.O.O. 6111
6. △5 POST MOD 6/1388
7. △6 PRE MOD 6/1586
8. △7 MOD 6/1586

AC POWER SUPPLIES (250VA)
(MOD 6/1274)
(SHEET 3)


C6N1002/45/B ISSUE NO. 1 2 3 4

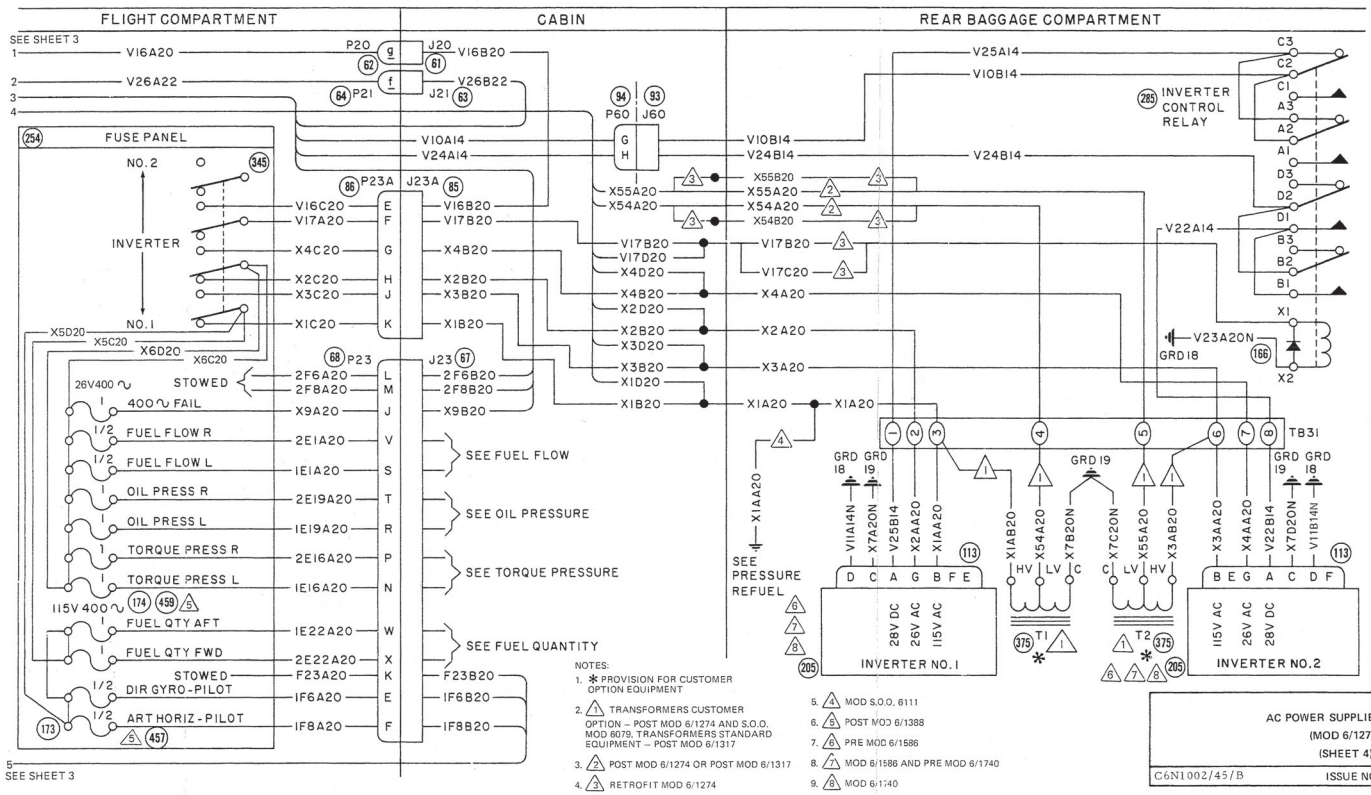

NOTES:
1. * PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION – POST MOD 6/1274 AND S.O.O. MOD 6079. TRANSFORMERS STANDARD EQUIPMENT – POST MOD 6/1317
3. △2 POST MOD 6/1274 OR POST MOD 6/1317
4. △3 RETROFIT MOD 6/1274
5. △4 MOD S.O.O. 6111
6. △5 POST MOD 6/1388
7. △6 PRE MOD 6/1586
8. △7 MOD 6/1586 AND PRE MOD 6/1740
9. △8 MOD 6/1740

AC POWER SUPPLIES (250VA)
(MOD 6/1274)
(SHEET 4)


C6N1002/45/B ISSUE NO. 1 2 3 4 5

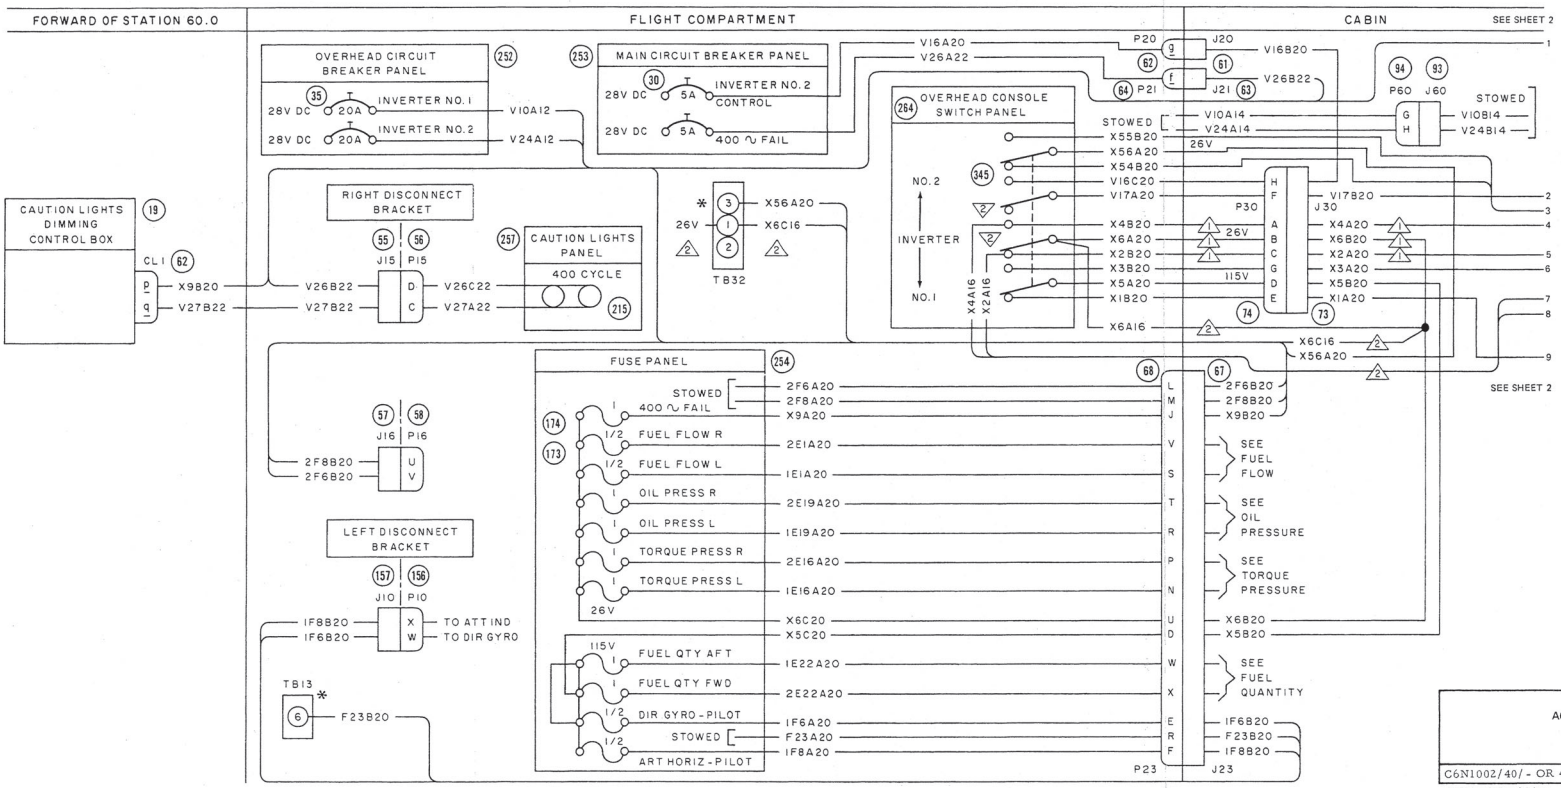

NOTES:
1. * PROVISIONAL WIRING
2. 1 OR 2 ALTERNATIVE INSTALLATIONS. 2 FOR INCREASED 26V AC SERVICES.
3. 3 S.O.O. MOD 6111

AC POWER SUPPLIES (400VA)
(PRE MOD 6/1274)
(SHEET 1)

C6N1002/40/- OR 48/A ISSUE NO. 1 2 3
AND C6N1068/D

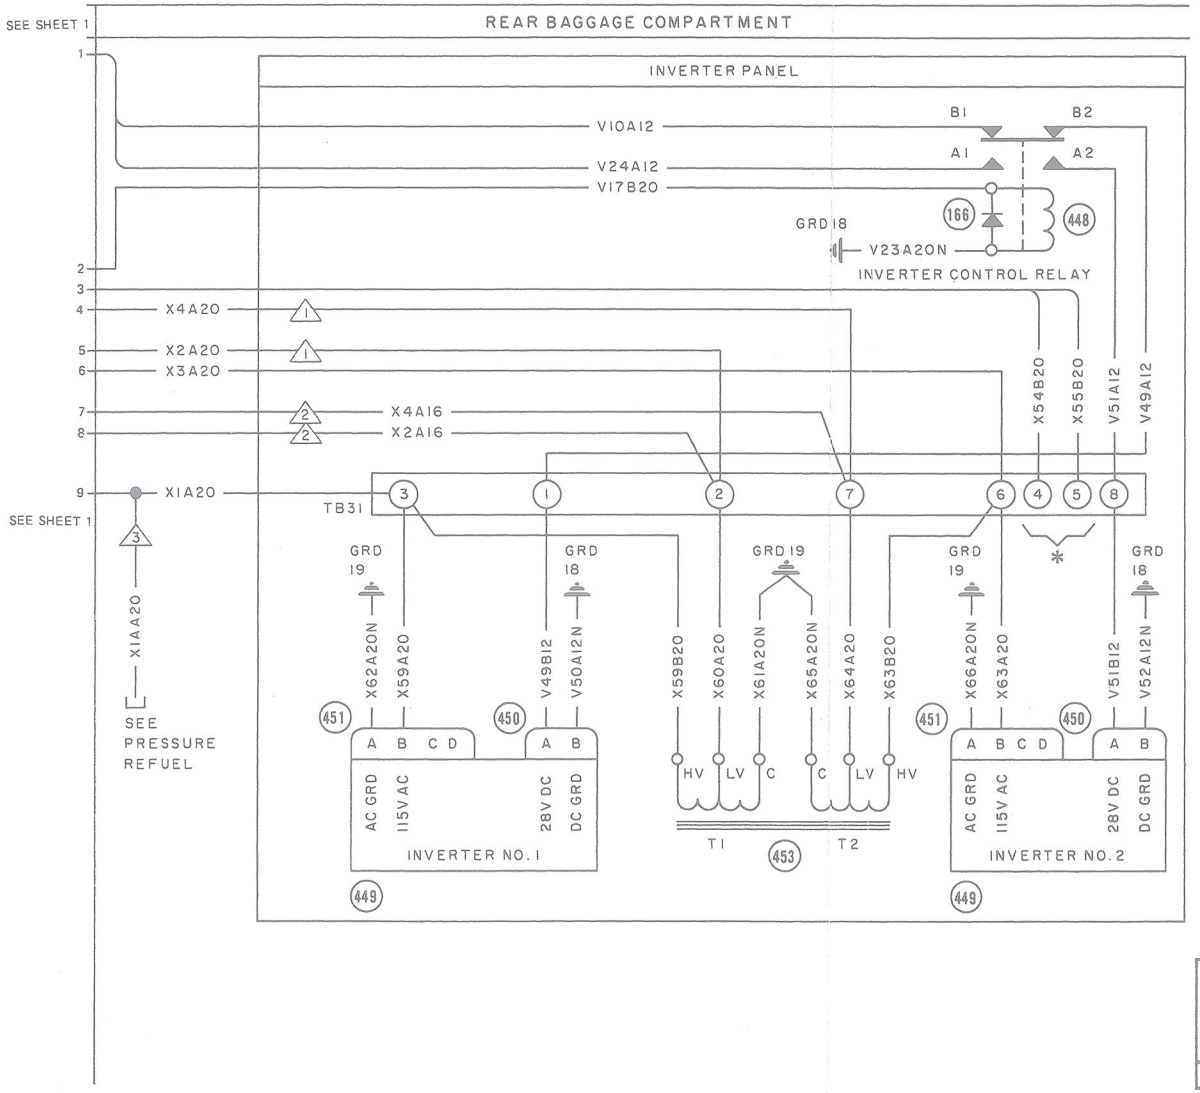


NOTES:
1. * PROVISIONAL WIRING
2. 1 OR 2 ALTERNATIVE INSTALLATIONS. 2 FOR INCREASED 26VAC SERVICES.
3. 3 S.O.O. MOD 6111

AC POWER SUPPLIES (400VA)
(PRE MOD 6/1274)
(SHEET 2)

C6N1002/40/- OR 48/A ISSUE NO. 1 2 3


AND C6N1068/D

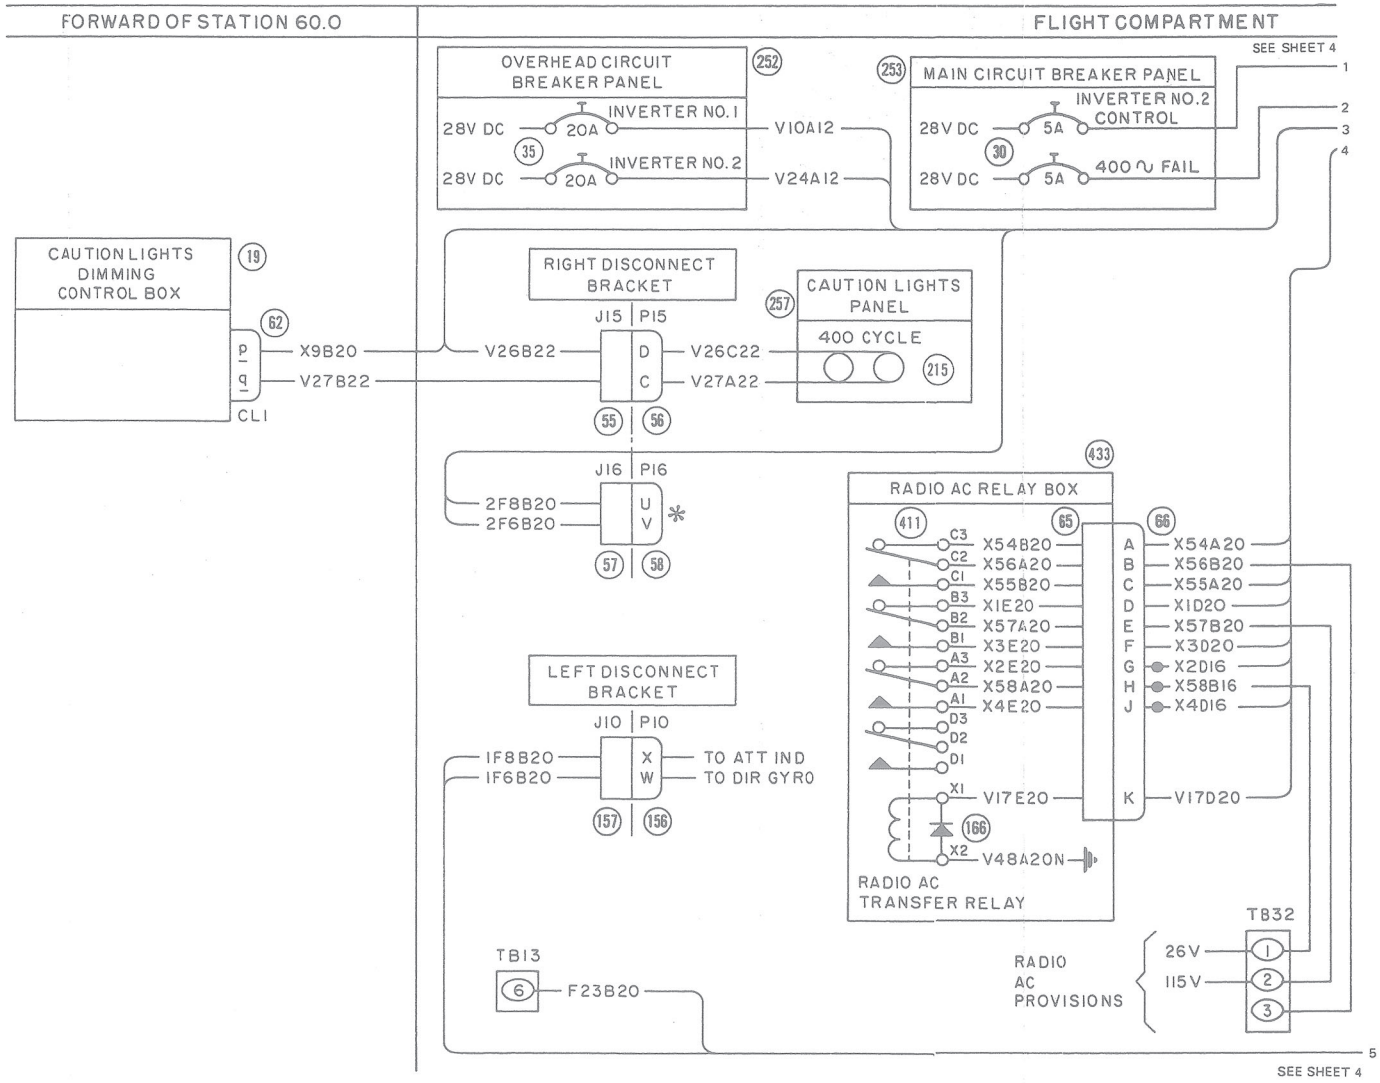

NOTES:
1. ✻ PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION - POST MOD 6/1274 AND S.O.O. MOD 6079. TRANSFORMERS STANDARD EQUIPMENT - POST MOD 6/1317
3. △2 POST MOD 6/1274 OR POST MOD 6/1317
4. △3 RETROFIT MOD 6/1274
5. △4 MOD S.O.O. 6111
6. △5 POST MOD 6/1388

AC POWER SUPPLIES (400VA)
(MOD 6/1274)
(SHEET 3)

C6N1002/45/B AND C6N1068/C — ISSUE NO. 1 2

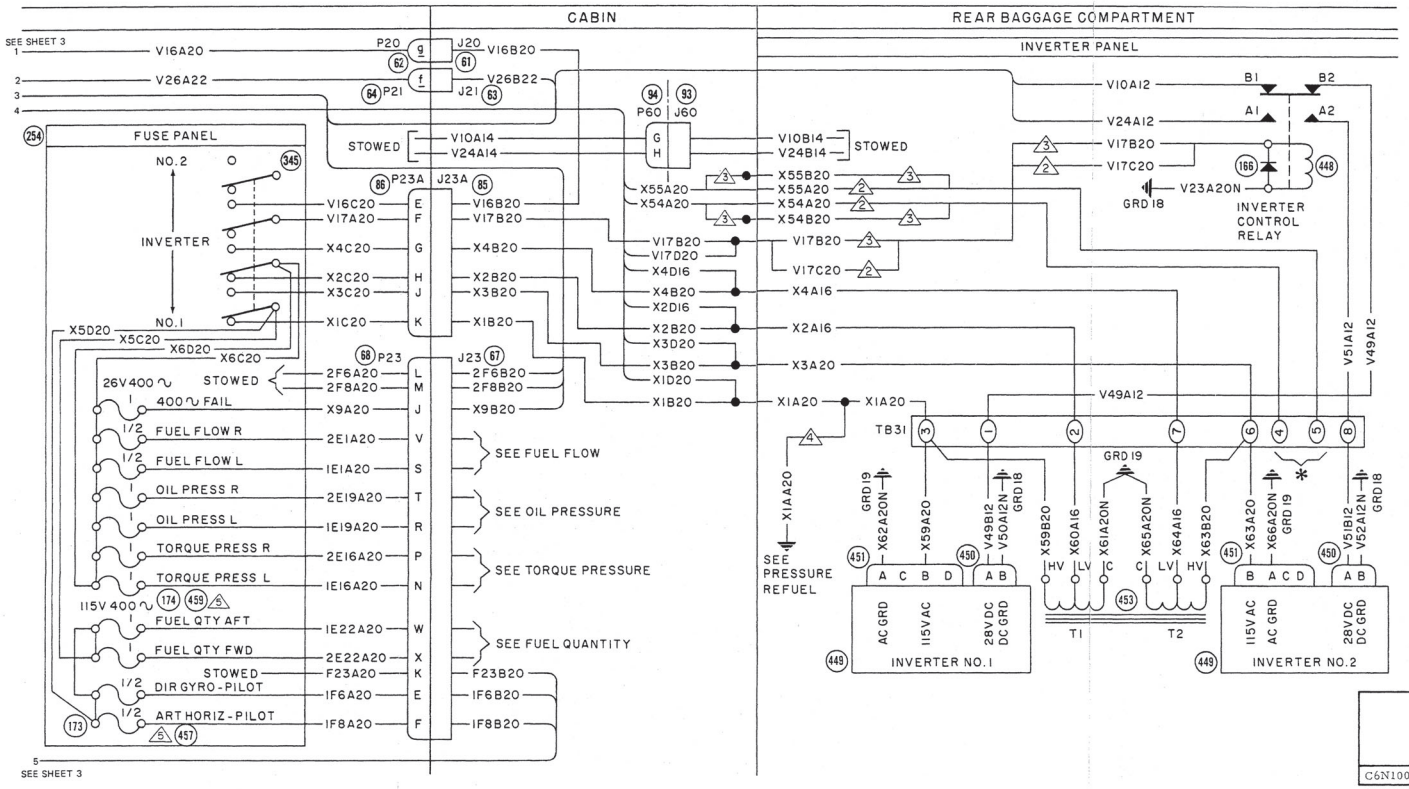


NOTES:
1. ✻ PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION - POST MOD 6/1274 AND S.O.O. MOD 6079. TRANSFORMERS STANDARD EQUIPMENT - POST MOD 6/1317
3. △2 POST MOD 6/1274 OR POST MOD 6/1317
4. △3 RETROFIT MOD 6/1274
5. △4 MOD S.O.O. 6111
6. △5 POST MOD 6/1388

AC POWER SUPPLIES (400VA)
(MOD 6/1274)
(SHEET 4)

C6N1002/45/B AND ISSUE NO. 1 2


C6N1068/C

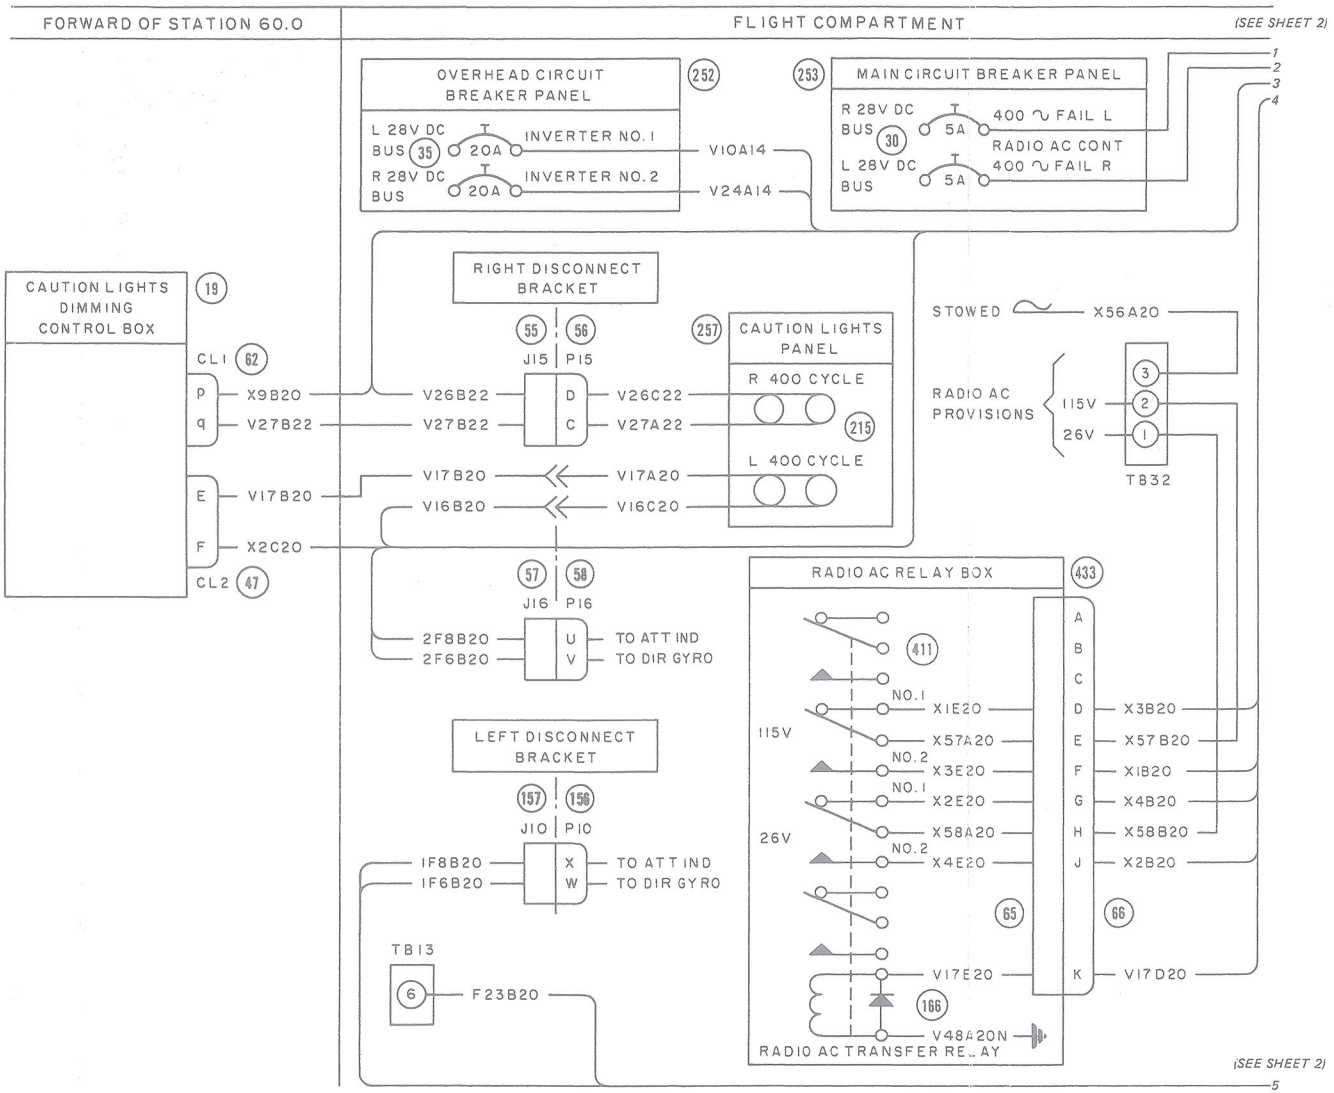

NOTES:
1. ✻ PROVISION FOR CUSTOMER EQUIPMENT OPTION
2. △1 S.O.O. MOD 6111
3. △2 PRE-MOD 6/1586
4. △3 MOD 6/1586

AC POWER SUPPLIES (250VA)
(MOD S.O.O. 6142 AND PRE-MOD 6/1416)
(SHEET 1)


C6Z1677/2/C ISSUE NO. 1 2 3

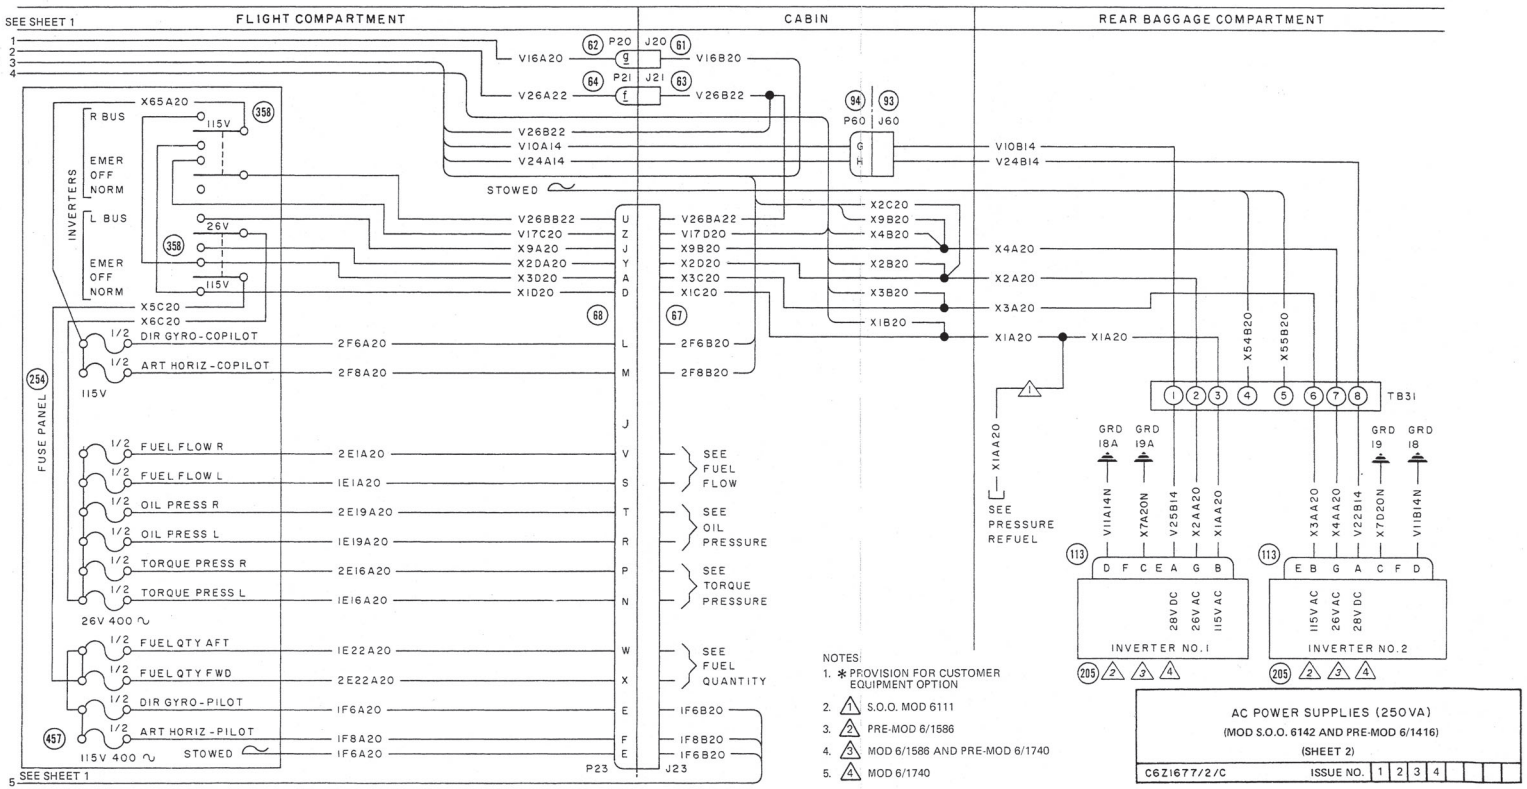

NOTES:
1. * PROVISION FOR CUSTOMER EQUIPMENT OPTION
2. △1 S.O.O. MOD 6111
3. △2 PRE-MOD 6/1586
4. △3 MOD 6/1586 AND PRE-MOD 6/1740
5. △4 MOD 6/1740

AC POWER SUPPLIES (250VA)
(MOD S.O.O. 6142 AND PRE-MOD 6/1416)
(SHEET 2)

C6Z1677/2/C ISSUE NO. 1 2 3 4

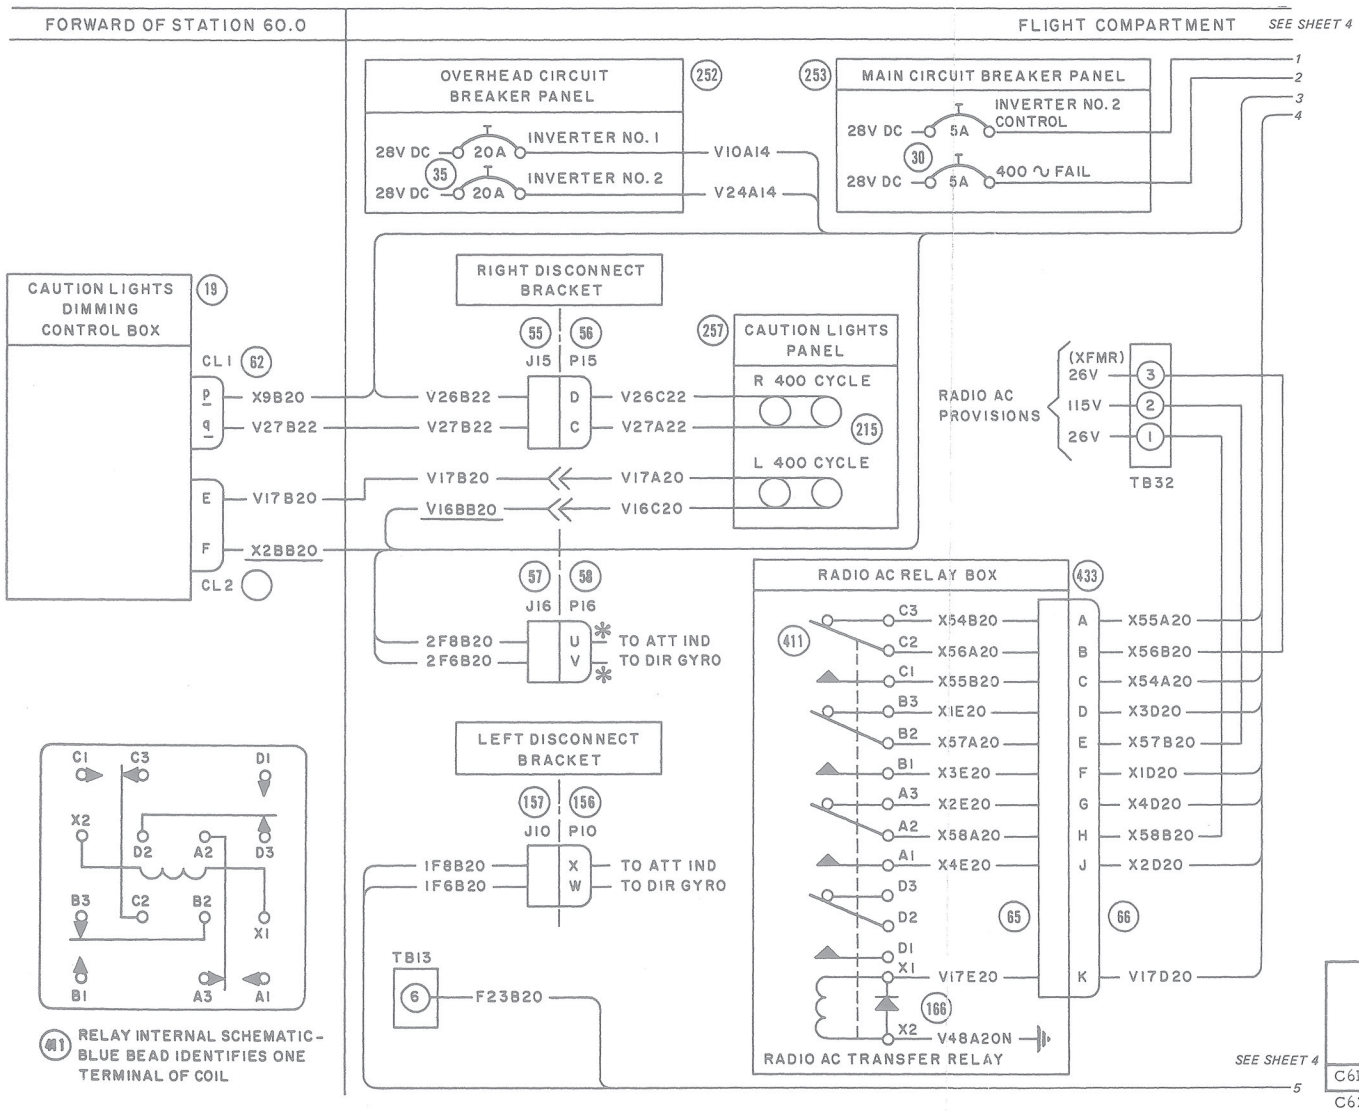


NOTES:
1. ✻ PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. △1 TRANSFORMERS CUSTOMER OPTION - POST MOD 6/1274 AND S.O.O. MOD 6079. TRANSFORMERS STANDARD EQUIPMENT - POST MOD 6/1317
3. △2 POST MOD 6/1274 OR POST MOD 6/1317
4. △3 RETROFIT MOD 6/1274
5. △4 S.O.O. MOD 6111
6. △5 PRE MOD 6/1586
7. △6 MOD 6/1586

(411) RELAY INTERNAL SCHEMATIC - BLUE BEAD IDENTIFIES ONE TERMINAL OF COIL

AC POWER SUPPLIES (250VA)
(MOD S.O.O. 6142 AND MOD 6/1416)
(SHEET 3)

C6N1002/45/B AND C6Z1677/3/A ISSUE NO. 1 2

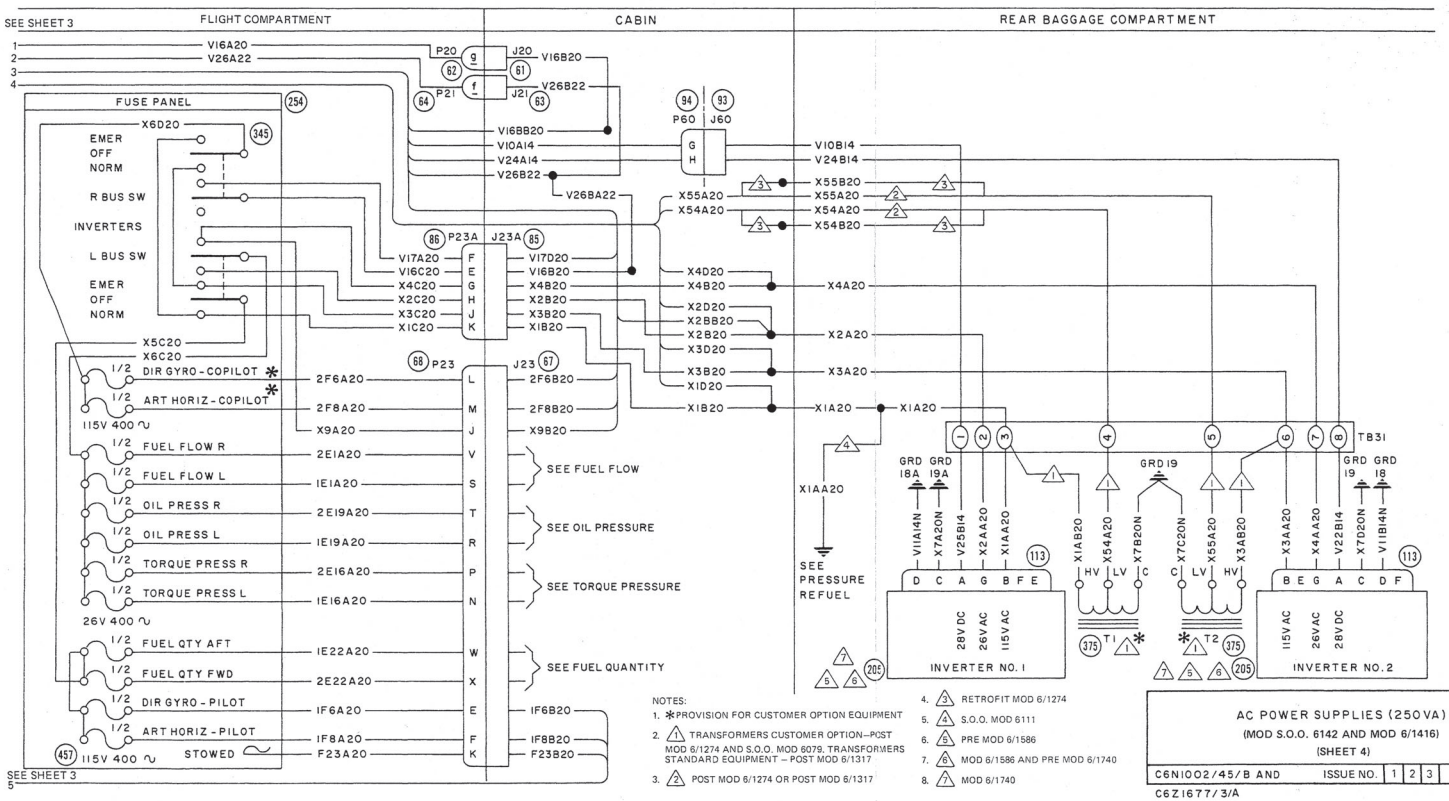

NOTES:

1. * PROVISION FOR CUSTOMER OPTION EQUIPMENT
2. (1) TRANSFORMERS CUSTOMER OPTION—POST MOD 6/1274 AND S.O.O. MOD 6079. TRANSFORMERS STANDARD EQUIPMENT – POST MOD 6/1317
3. (2) POST MOD 6/1274 OR POST MOD 6/1317
4. (3) RETROFIT MOD 6/1274
5. (4) S.O.O. MOD 6111
6. (5) PRE MOD 6/1586
7. (6) MOD 6/1586 AND PRE MOD 6/1740
8. (7) MOD 6/1740

AC POWER SUPPLIES (250VA)
(MOD S.O.O. 6142 AND MOD 6/1416)
(SHEET 4)

C6N1002/45/B AND | ISSUE NO. 1 2 3

C6Z1677/3/A