



CABINET BUILD PLAN

CABINET BUILD PLAN

 Dimensions	1000 × 2000 × 600 mm
 Carcass material	Sandwich Plywood 17 mm (17 mm)
 Doors / shelves	2 doors · 4 Shelves
 Cut sheets	5 sheets · 68.35% yield
 Hardware items	19 item types
 Generated	10 Sept 2026

Cabinet Specifications

DIMENSIONS

External (W × H × D)	1000 × 2000 × 600 mm
Internal width	966 mm
Internal height	1866 mm
Shelf depth	580 mm
Shelf width	964 mm

MATERIALS

Carcass material	Sandwich Plywood 17 mm (17 mm)
Back panel material	Plywood 4 mm (back) (4 mm)
Edge banding	all-visible
Edge banding total	21.1 m

DOORS & HARDWARE

Door style	flat
Door count	2
Door dimensions	496 × 1894 mm
Door reveal	3 mm
Hinges per door	5
Handle style	bar

SHELVES

Shelf count	4
Shelf spacing	equal
Back panel	980 × 1880 mm

Cut Sheet Summary

 5 Sheets Required	 68.35% Material Yield	 4.71 Waste (m ²)	 19 Hardware Types
--	--	---	--

Parts List — 9 parts total

ID	Part Name	Qty	Material	Length	Width	Thick.	Edge Band
P01	Side Panel	2	Sandwich Plywood 17 mm	1900	600	17	Front edge
P02	Top Panel	1	Sandwich Plywood 17 mm	966	600	17	Front edge
P03	Bottom Panel	1	Sandwich Plywood 17 mm	966	600	17	Front edge
P04	Fixed Shelf	1	Sandwich Plywood 17 mm	966	580	17	Front edge
P05	Adjustable Shelf	4	Sandwich Plywood 17 mm	964	580	17	Front edge
P06	Door	2	Sandwich Plywood 17 mm	1894	496	17	All 4 edges
P07	Back Panel	1	Plywood 4 mm (back)	1880	980	4	None
P08	Toe Kick (Front)	1	Sandwich Plywood 17 mm	1000	100	17	Front edge
P09	Toe Kick (Side)	2	Sandwich Plywood 17 mm	583	100	17	None

Hardware List — 19 item types

Item	Qty	Unit	Notes
Euro Hinge 35 mm (110°)	10	pcs	H01
Hinge Mounting Plate	10	pcs	H02
Shelf Pin 5 mm	16	pcs	H03
Confirmat Screw 7×50 mm	12	pcs	H04
Confirmat Cover Cap	12	pcs	H05
Back Panel Nail 25 mm	39	pcs	H06
L-Bracket (wall mount)	4	pcs	H07
Wall Screw + Dowel 8×60 mm	8	pcs	H08
Bar Handle 160 mm	2	pcs	H09
Wood Glue (PVA)	1	bottle	H10
Soft-Close Hinge Damper	10	pcs	H13
Door Bumper Pad (silicone)	4	pcs	H14
Cabinet Leveller Foot	4	pcs	H15
Edge Banding Roll (50 m)	1	rolls	H16
Corner Brace (metal)	4	pcs	H20
Plastic Corner Protector	8	pcs	H21
Wood Screw 3.5×35 mm	96	pcs	H22
Sanding Pad Assorted Pack	1	pack	H23
Edge Banding Iron Trimmer	1	pcs	H24

 Cut Sheet #1 / 5 — Sandwich Plywood 17 mm (17 mm)

 6.59% yield

 2 parts



P01 Side Panel — 600×1900 mm

P01 Side Panel — 600×1900 mm

 Cut Sheet #2 / 5 — Sandwich Plywood 17 mm (17 mm)

 70.39% yield

 5 parts



P06 Door — 496×1894 mm

P06 Door — 496×1894 mm

P08 Toe Kick (Front) — 100×1000 mm

P09 Toe Kick (Side) — 100×583 mm

P09 Toe Kick (Side) — 100×583 mm

 Cut Sheet #3 / 5 — Sandwich Plywood 17 mm (17 mm)

 76.55% yield

 4 parts



P02 Top Panel — 600×966 mm

P03 Bottom Panel — 600×966 mm


P04 Fixed Shelf — 580×966 mm

P05 Adjustable Shelf — 580×964 mm

 Cut Sheet #4 / 5 — Sandwich Plywood 17 mm (17 mm)

 **66.35% yield**

 **3 parts**

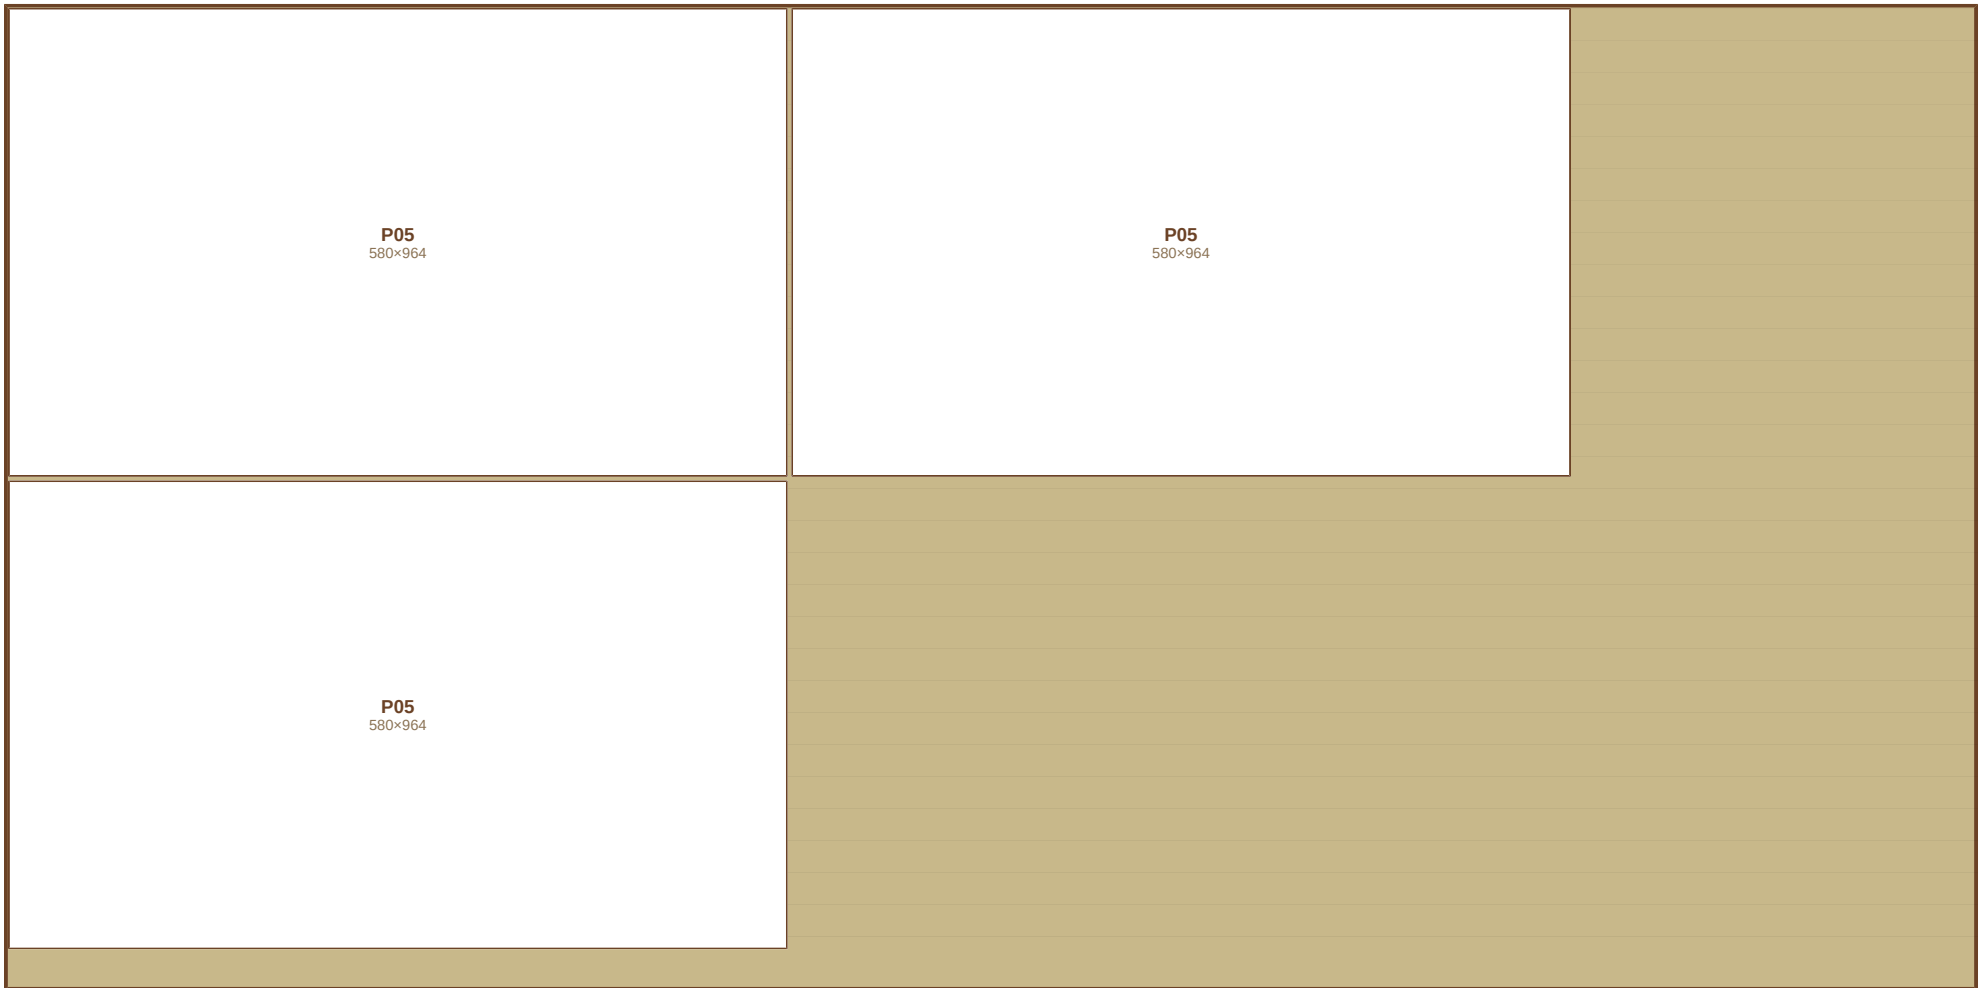

P05 Adjustable Shelf — 580×964 mm **P05** Adjustable Shelf — 580×964 mm **P05** Adjustable Shelf — 580×964 mm

 Cut Sheet #5 / 5 — Plywood 4 mm (back) (4 mm)

 61.89% yield

 1 parts



P07 Back Panel — 980×1880 mm

Drilling & Boring Guide

Hinge Cup Boring

- Bore 35 mm diameter cups, 12 mm deep on door inside face
- Hinge cup centre: 22.5 mm from door edge
- 5 hinge(s) per door — positions from top:
 - ³Hinge 1: 95 mm from top
 - ³Hinge 2: 521 mm from top
 - ³Hinge 3: 947 mm from top
 - ³Hinge 4: 1373 mm from top
 - ³Hinge 5: 1799 mm from top

Mounting Plates

- Fix mounting plates on side panels, aligned with hinge positions
- Plate centre: 37 mm from panel front edge
- Pre-drill 3 mm pilot holes for plate screws

Shelf Pin Holes (System 32)

- Drill 5 mm holes, 10 mm deep, on both side panels (inner face)
- Two columns per side: 37 mm and 543 mm from front edge
- Spacing: 32 mm on-centre (System 32 line boring)
- First hole: 37 mm from bottom of internal space
- Total rows: 57 per column

Confirmat / Assembly Screws


- Pre-drill 5 mm through-holes on outer face of top/bottom panels
- Pilot drill 3.5 mm × 40 mm into end-grain of side panels
- Spacing: ~150 mm apart along each joint
- First/last confirmat: ~50 mm from panel edge

Back Panel

- Plywood 4 mm (back) (4 mm) — 980 × 1880 mm
- Fix into 10 × 4 mm rabbet, or staple/nail at ~150 mm intervals

 Exploded Assembly View

Parts shown separated for clarity — arrows indicate assembly direction.

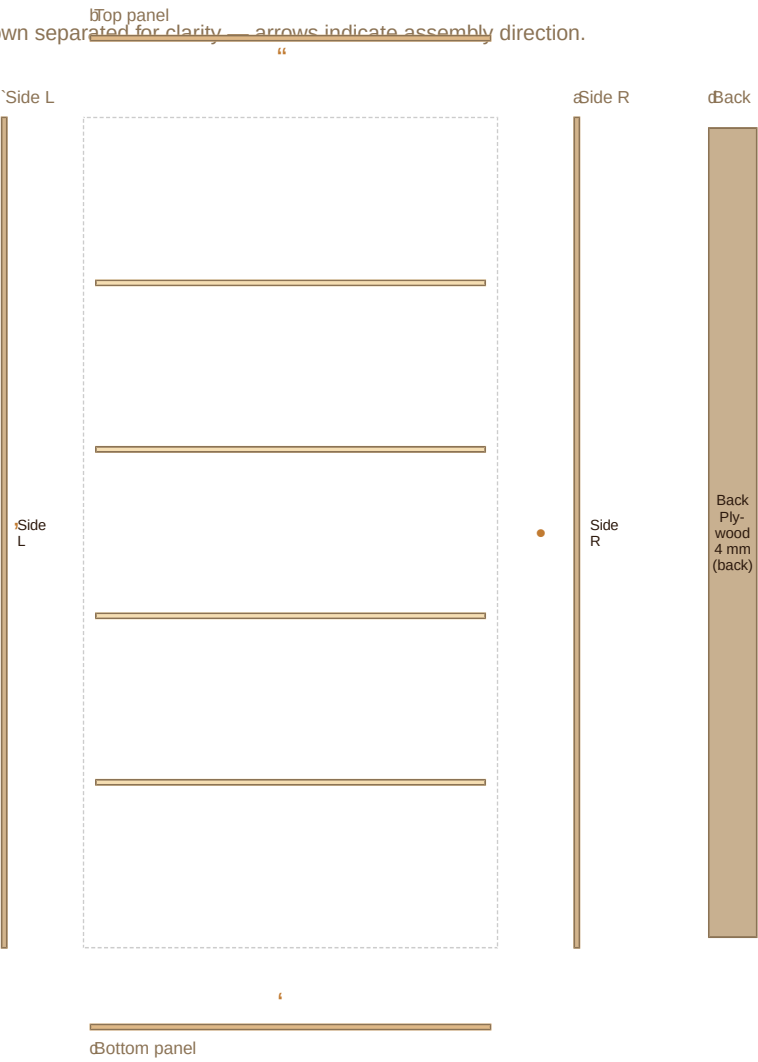

1000 mm × 2000 mm × 600 mm

Door(s)

Material: Sandwich Plywood 17 mm · Shelves: 4 · Doors: 2

Door 1

Door 2

Assembly Sequence

- 1**

 **Prepare all panels**
Cut all parts per the cut list. Sand faces to 180 grit. Apply edge banding (all-visible) to all designated edges.
- 2**

 **Drill shelf pin holes**
Drill 5 mm × 10 mm holes on both side panels (inner face), 32 mm apart, two columns per side. Use a line-boring jig for precision.
- 3**

 **Pre-drill confirmat holes**
Drill 5 mm through-holes on top and bottom panels. Drill 3.5 mm × 40 mm pilot holes into side panel end-grain. Mark positions ~50 mm from edges, ~150 mm apart.
- 4**

 **Assemble the carcass box**
Join side panels to top and bottom with confirmat screws. Use Sandwich Plywood 17 mm panels. Internal width: 966 mm. Verify square with diagonal measurements — both diagonals must match.
- 5**

 **Install fixed centre shelf**
Install the fixed structural shelf at mid-height (required for cabinets > 1200 mm tall). Secure with confirmats through both side panels.
- 6**

 **Attach back panel**
Fit the Plywood 4 mm (back) back panel (980 × 1880 mm) into the rabbet or staple/nail at ~150 mm intervals. The back panel keeps the carcass square — check again before fastening.
- 7**

 **Bore hinge cups on doors**
Bore 35 mm cups, 12 mm deep, centre 22.5 mm from door edge. 5 hinges per door at positions: 95, 521, 947, 1373, 1799 mm from top.
- 8**

 **Mount hinge plates on carcass**
Screw mounting plates on side panels aligned with hinge positions. Plate centre: 37 mm from front edge. Pre-drill pilot holes.
- 9**

 **Hang doors and adjust**
Clip hinges into mounting plates. Adjust 3-way (in/out, up/down, lateral) until doors are flush with 3 mm reveal all around.
- 10**

 **Install shelf pins and shelves**
Insert shelf pins at desired heights. Place 4 adjustable shelf/shelves (964 × 580 mm).
- 11**

 **Install handles**
Mount bar handles on door(s). For bar handles use 128 mm or 160 mm centre-to-centre. Pre-drill before fastening to avoid tear-out.
- 12**

 **Final checks**
Verify all doors open and close smoothly with consistent reveal. Check shelf levels with a spirit level. Tighten any loose confirmats. Clean all sawdust.

Shopping List

Sheet Goods

Material	Size (mm)	Qty
Sandwich Plywood 17 mm (17 mm)	1220 × 2440	4
Plywood 4 mm (back) (4 mm)	1220 × 2440	1

Hardware List

Item	Qty	Unit
Euro Hinge 35 mm (110°)	10	pcs
Hinge Mounting Plate	10	pcs
Shelf Pin 5 mm	16	pcs
Conformat Screw 7×50 mm	12	pcs
Conformat Cover Cap	12	pcs
Back Panel Nail 25 mm	39	pcs
L-Bracket (wall mount)	4	pcs
Wall Screw + Dowel 8×60 mm	8	pcs
Bar Handle 160 mm	2	pcs
Wood Glue (PVA)	1	bottle
Soft-Close Hinge Damper	10	pcs
Door Bumper Pad (silicone)	4	pcs
Cabinet Leveller Foot	4	pcs
Edge Banding Roll (50 m)	1	rolls
Corner Brace (metal)	4	pcs
Plastic Corner Protector	8	pcs
Wood Screw 3.5×35 mm	96	pcs
Sanding Pad Assorted Pack	1	pack
Edge Banding Iron Trimmer	1	pcs

Edge Banding

Total edge banding required: 21.1 metres