

PHY FUNDAMENTALS II


Wireless Signal Propagation

Overview


1. Antenna
2. Reflection, Diffraction, Scattering
3. Fading, Shadowing, Multipath
4. Inter-symbol Interference
5. Path loss model (Frii's, 2-ray)
6. MIMO (Diversity, Multiplexing, Beamforming)
7. Orthogonal Frequency Division Multiplexing (OFDM)
8. Orthogonal Frequency Division Multiple Access (OFDMA)
9. Effect of Frequency

Antenna


- ❑ Transmitter converts electrical energy to electromagnetic waves
- ❑ Receiver converts electromagnetic waves to electrical energy
- ❑ Same antenna is used for transmission and reception
- ❑ Omni-Directional: Power radiated in all directions
- ❑ Directional: Most power in the desired direction
- ❑ Isotropic antenna: Radiates in all directions *equally*
- ❑ Antenna Gain = Power at particular point/Power with Isotropic
Expressed in dBi (“decibel relative to **i**sotropic”)

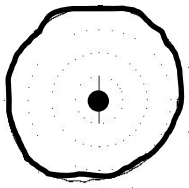

Omni-Directional



Directional

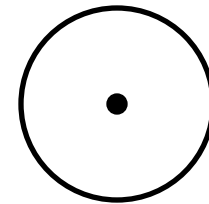

Isotropic

Example

Question: How much stronger a 17 dBi antenna effectively receives (transmits) the signal compared to the isotropic antenna?

Solution

Let

Power of isotropic antenna = P_{iso}

Power of 17 dBi antenna = P

We have


$$17 = 10\log_{10}(P/P_{\text{iso}})$$

Thus $P/P_{\text{iso}} = 10^{1.7} = 50.12$, i.e., the 17 dBi antenna will *effectively* receive (transmit) the signal **50.12** times stronger than the isotropic antenna albeit using the same *actual* transmit power.

Relationship between antenna size and frequency

- ❑ Antennas are designed to transmit or receive a specific frequency band
 - ❑ Cannot use a TV antenna for wireless router, or vice-versa (why?)
- ❑ End-to-end antenna length = $\frac{1}{2}$ wavelength
 - ❑ So that electrons can travel back and forth the antenna in one cycle
- ❑ If dipole (two rods), each rod is $\frac{1}{4}$ wavelength

Reflection, Diffraction, Scattering

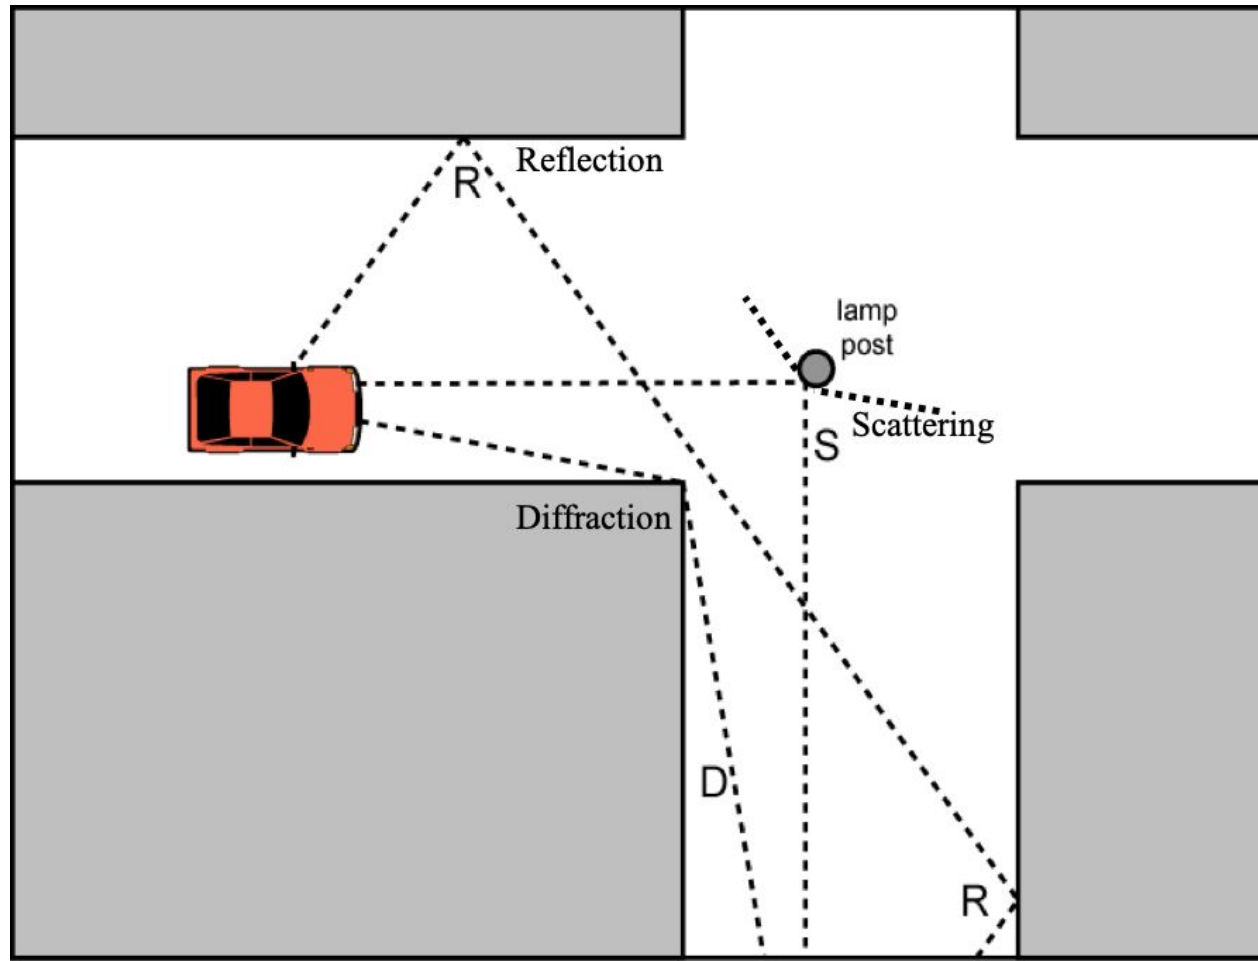


Reflection, Diffraction and Scattering (Cont)

- ❑ **Reflection:** Surface large relative to wavelength (λ) of signal
 - ❑ May have phase shift from original
 - ❑ May cancel out original signal or increase/strengthen it at receiver
- ❑ **Diffraction:** Edge of impenetrable body; large relative to λ
 - ❑ Receiver may receive signal even if no line-of-sight (LOS) to transmitter
- ❑ **Scattering**
 - ❑ Obstacle size on order of wavelength. Lamp posts etc.
 - ❑ Reflection/diffraction are more directional; scattering in many directions
- ❑ If LOS, diffracted and scattered signals not significant (LOS dominates)
 - ❑ Reflected signals may be significant
- ❑ If no LOS, diffraction and scattering are primary means of reception

Path Loss

- ❑ Received power (P_R) at a particular location is only a fraction of the total power used by the transmitter to transmit the signal (P_T)
- ❑ Path loss = $P_T - P_R$
 - ❑ Depends on distance/separation between Tx-Rx
- ❑ Need to estimate path loss to design wireless links
- ❑ How to estimate path loss?
- ❑ There are well-known path loss models
 - ❑ Frii's model: designed for free-space (no reflections); frequency dependent
 - ❑ 2-Ray model: reflections considered, but frequency-independent (antenna heights are important)

Free Space Path Loss (Frii's Law)

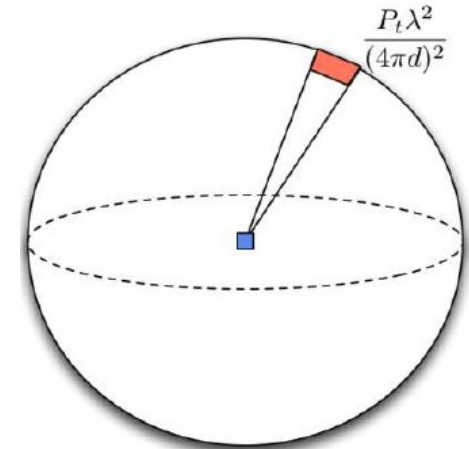

- Tx and Rx placed in *empty space*
 - No absorbing/reflecting obstacles
- Received power (P_R) decreases as *inverse square of distance* (d^{-2} law)


$$P_R = P_T G_T G_R \left(\frac{\lambda}{4\pi d} \right)^2$$

- Where G_T = Tx antenna gain, G_R = Rx antenna gain
- For isotropic antennas, $G_T = G_R = 1$ (“unit gain antennas” or 0 dBi)

- For isotropic antennas: $P_R = P_T \left(\frac{c}{4\pi df} \right)^2$

Free-space path loss (cont)

- A factor of 10 increase in distance □ 20dB more path loss (20dB/decade)
 - 2.4 GHz path loss at 1 meter = 40.04dB, 10 meter = 60.04dB
- The higher the frequency, the greater the path loss at fixed distance
 - At 10 meter, 2.4GHz = 60.04dB, 5GHz = 67.25dB

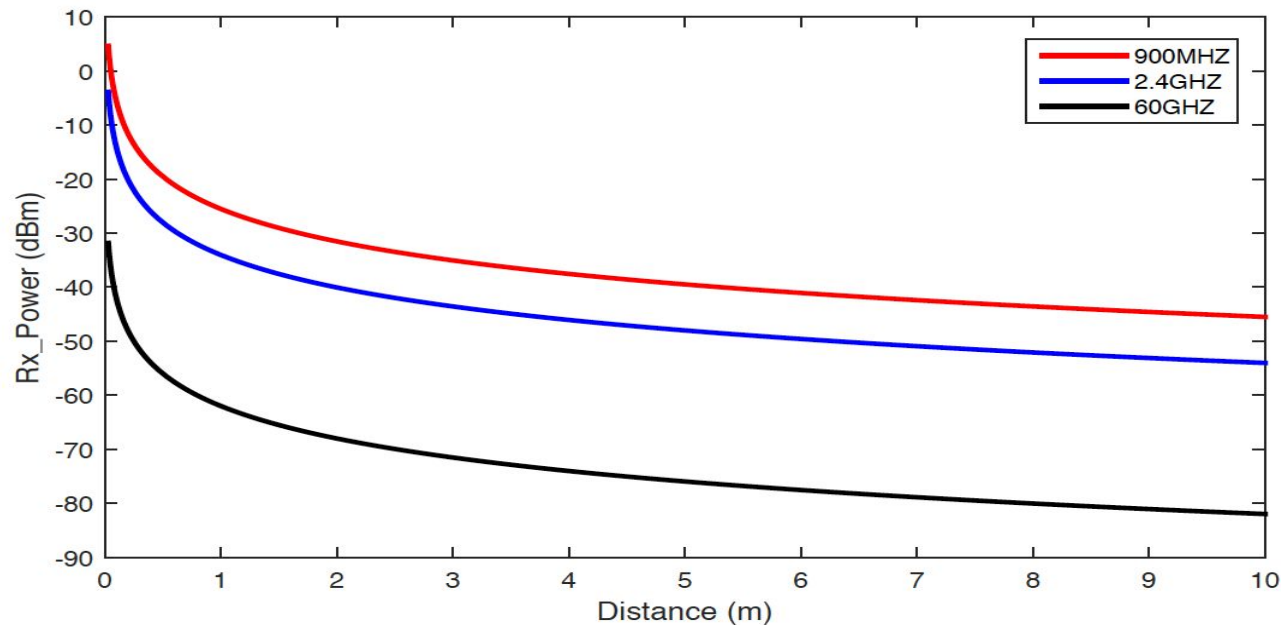

Example



- ❑ Tx and Rx placed in *empty space*
 - No absorbing/reflecting obstacles
- ❑ Received power (P_R) decreases as *inverse square of distance* (d^{-2} law)
 - Where G_T = Tx antenna gain, G_R = Rx antenna gain
 - For isotropic antennas, $G_T = G_R = 1$ (“unit gain antennas” or 0 dBi)
- ❑ For isotropic antennas:
$$PL_{dB} = 20 \log_{10} \left(\frac{4\pi f d}{c} \right) = 20 \log_{10}(d) + 20 \log_{10}(f) - 147.55$$
 - d in meter, f in Hz, $c = 3 \times 10^8$ m/s

Example



- Tx and Rx placed in *empty space*
 - No absorbing/reflecting obstacles
- Received power (P_R) decreases as *inverse square of distance (d^2 law)*
 - Where G_T = Tx antenna gain, G_R = Rx antenna gain
 - For isotropic antennas, $G_T = G_R = 1$ (“unit gain antennas” or 0 dBi)
- For isotropic antennas:

$$PL_{dB} = 20 \log_{10} \left(\frac{4\pi f d}{c} \right) = 20 \log_{10}(d) + 20 \log_{10}(f) - 147.55$$

- d in meter, f in Hz, $c = 3 \times 10^8$ m/s

Receiver Sensitivity

- ❑ The received power (received signal strength or RSS) has to be greater than a **threshold** for the receiver to decode information correctly (with low error probability)
 - ❑ To achieve a minimum signal-to-noise ratio (SNR)
- ❑ Different hardware/standard/equipment specify different values
 - ❑ Depends on channel bandwidth and receiver noise figure (and temperature)
 - ❑ Larger bandwidth ❑ larger minimum power (and vice versa)
 - ❑ Larger receiver noise ❑ larger minimum power (and vice versa)
- ❑ Examples (for room temperature)
 - ❑ LTE: -52 dBm [roughly]
 - ❑ Bluetooth: -70 dBm [roughly]

Example

- ❑ To increase the coverage with low transmit power, a manufacturer produced Bluetooth chipsets with a receiver sensitivity of -80 dBm. What is the maximum communication range that could be achieved for this chipset for a transmit power of 1 mW? Assume Free Space Path Loss with unit antenna gains.


Bluetooth frequency $f = 2.4$ GHz, $P_T = 1$ mW, $P_R = -80$ dBm = 10^{-8} mW

We have
$$P_R = P_T \left(\frac{c}{4\pi df} \right)^2$$

Or,
$$d = \frac{c}{4\pi f} \sqrt{P_T / P_R}$$


$$= 99.5 \text{ meter}$$

Multipath

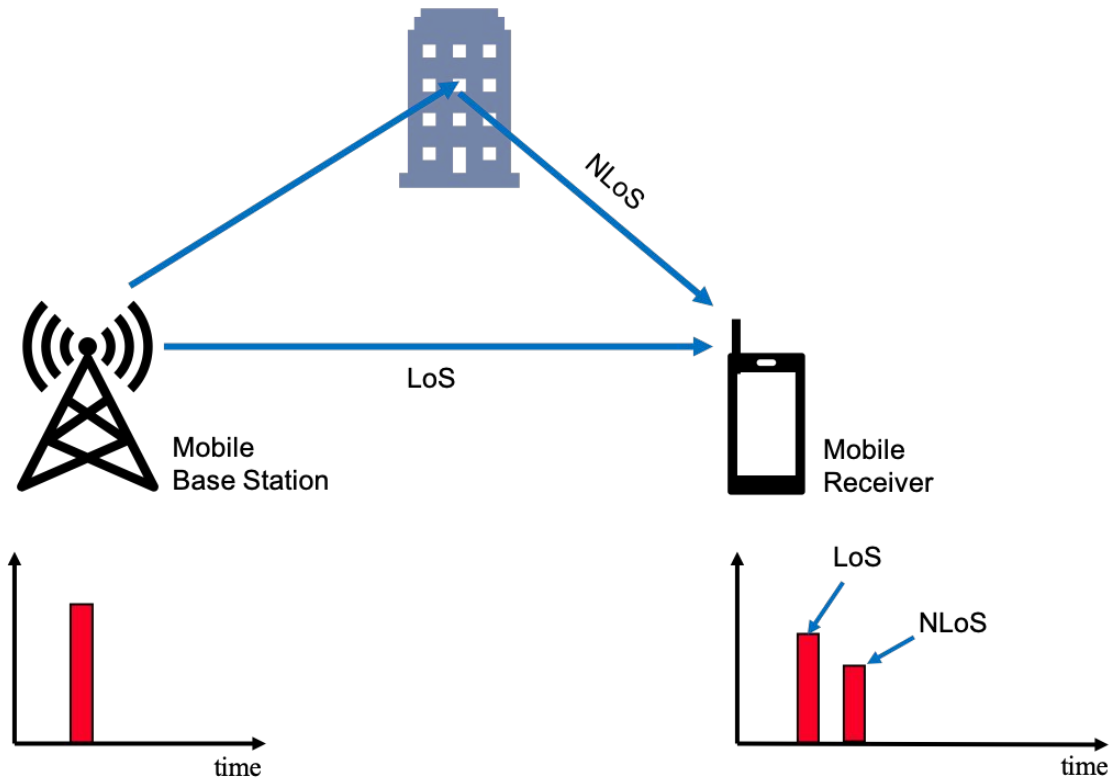


- ❑ Multiple copies of the signal received (LoS+reflected NLoS)
- ❑ The LoS signal reaches the receiver first followed by the NLoS copy (NLoS has longer path length compared to the LoS path)
- ❑ $RSS(LoS) > RSS(NLoS)$. NLoS signal travels further and hence attenuates more compared to the LoS.

Inter-Symbol Interference

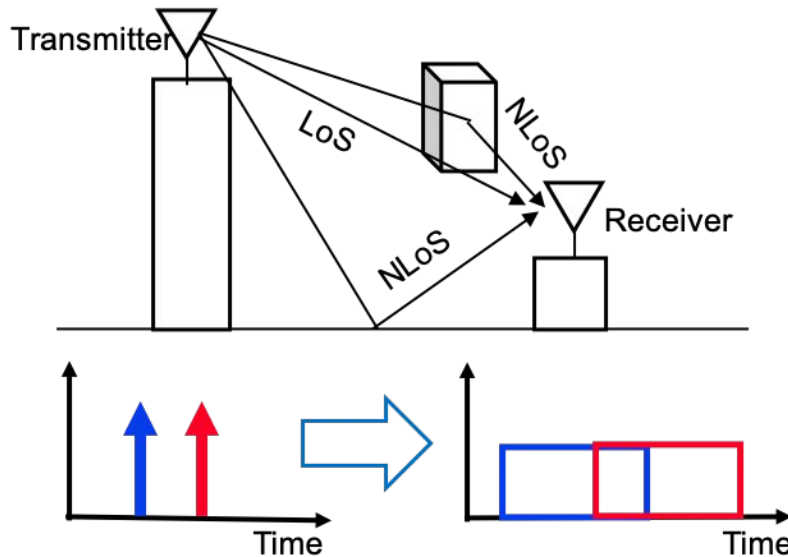


- ❑ Multipath effect: receiver continues to receive the signal (its reflections) even after the transmitter completes symbol transmission
- ❑ As a result, symbols become wider; two consecutively transmitted symbols overlap and interfere with each other
- ❑ Longer bit intervals or symbol lengths are required to avoid ISI
 - ❑ Limits the number of bits/s (data rate *inverse* of symbol length)

Delay Spread

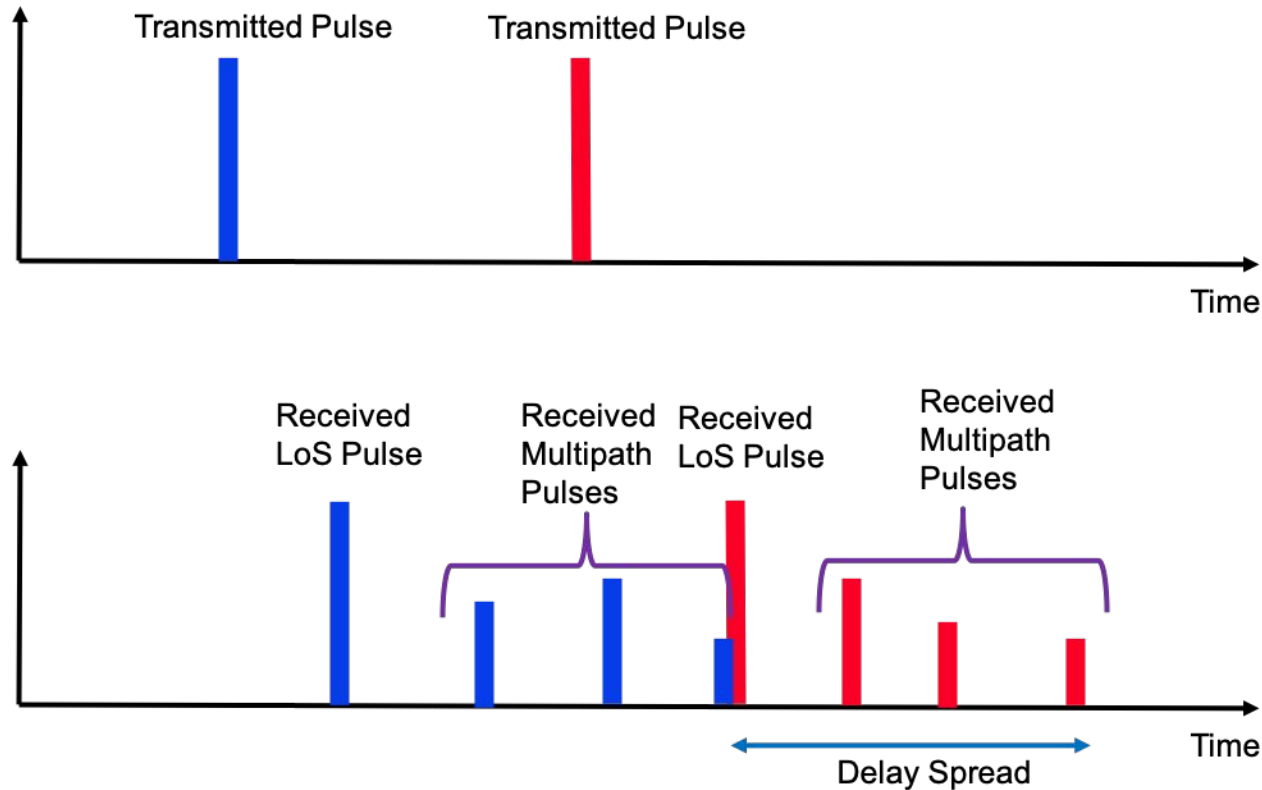

- ❑ How long to wait to avoid ISI?
- ❑ RSS of late arrivals fluctuate, but consistently diminish on average
- ❑ **Delay Spread** = Time between the first (LoS) and the last copy of NLoS
 - ❑ $RSS(\text{last copy of NLoS}) < RSS_{\text{threshold}}$ (so next symbol can still be decoded)

2-ray path loss model

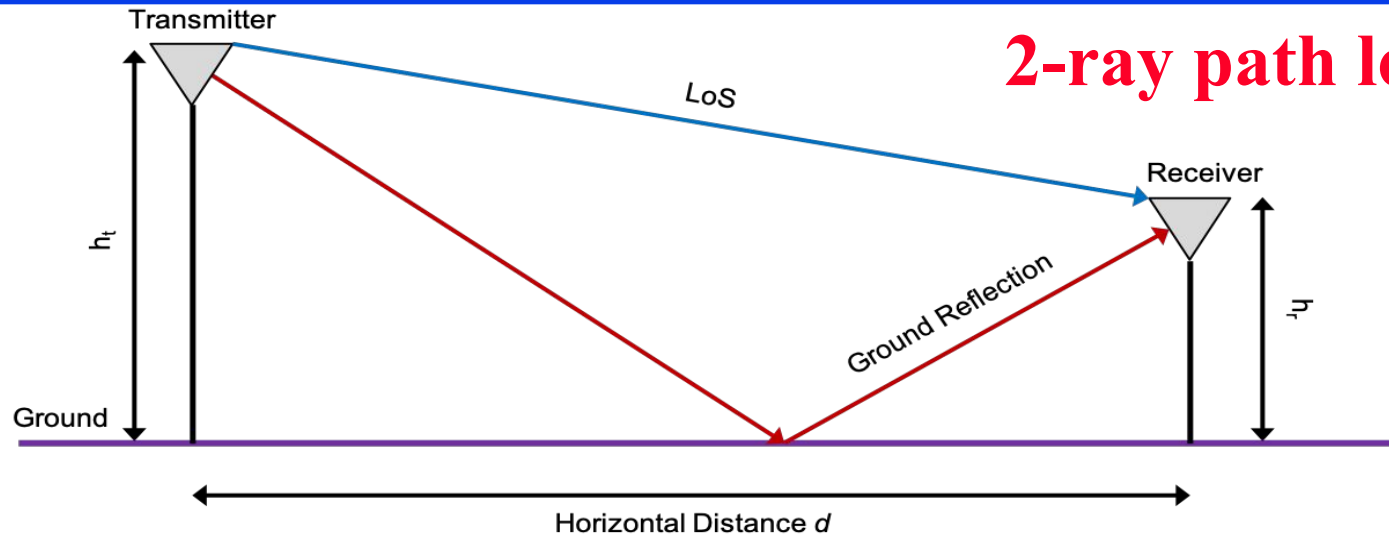

$$P_R = P_T G_T G_R \left(\frac{h_t h_r}{d^2} \right)^2$$

- Tx and Rx placed in *empty space*
 - No absorbing/reflecting obstacles
- Received power (P_R) decreases as *inverse square of distance (d^{-2} law)*

- Where G_T = Tx antenna gain, and G_R = Rx antenna gain
- For isotropic antennas, $G_T = G_R = 1$ ("unit gain antennas" or 0 dBi)

□ For isotropic antennas:

$$PL_{dB} = 20 \log_{10} \left(\frac{4\pi f d}{c} \right) = 20 \log_{10}(d) + 20 \log_{10}(f) - 147.55$$

➤ d in meter, f in Hz, $c = 3 \times 10^8$ m/s

- For isotropic antennas:

$$PL_{dB} = 20 \log_{10} \left(\frac{4\pi f d}{c} \right) = 20 \log_{10}(d) + 20 \log_{10}(f) - 147.55$$

- d in meter, f in Hz, $c = 3 \times 10^8$ m/s

Example



- ❑ Tx and Rx placed in *empty space*
 - No absorbing/reflecting obstacles
- ❑ Received power (P_R) decreases as *inverse square of distance* (d^{-2} law)
 - Where G_T = Tx antenna gain, G_R = Rx antenna gain
 - For isotropic antennas, $G_T = G_R = 1$ (“unit gain antennas” or 0 dBi)
- ❑ For isotropic antennas:
$$PL_{dB} = 20 \log_{10} \left(\frac{4\pi f d}{c} \right) = 20 \log_{10}(d) + 20 \log_{10}(f) - 147.55$$
 - d in meter, f in Hz, $c = 3 \times 10^8$ m/s


Path loss exponent

- Empty/free space (no reflector) □ d^{-2} law (Frii's)
 - $PL(dB) = 10\log_{10}(d^2) + C = 10 \times 2 \times \log_{10}(d) + C$ (a straight line with slope = 2)
- 2-ray model □ d^{-4} law
 - $PL(dB) = 10\log_{10}(d^4) + C = 10 \times 4 \times \log_{10}(d) + C$ (a straight line with slope = 4)
- Measurements in real environments □ d^{-n} ($n = 1.5$ to 5.5 , typically 4)
 - $PL(dB) = 10\log_{10}(d^n) + C = 10n \log_{10}(d) + C$ (a straight line with slope = n)

C is a constant; frequency related (Free-space)
or antenna height related (2-ray)

Small Scale Fading

- ❑ Multipath has phase change (due to reflection and different path to travel)
- ❑ Fading: the signal amplitude can change significantly by moving a few *centimeters* (called *small scale fading*: fluctuates in small time scale): *half-wavelength path distance can cause 180 degree phase shift!*
 - ❑ **Constructive:** increased amplitude due to alignment of phase
 - ❑ **Destructive:** reduced amplitude due to misaligned phase

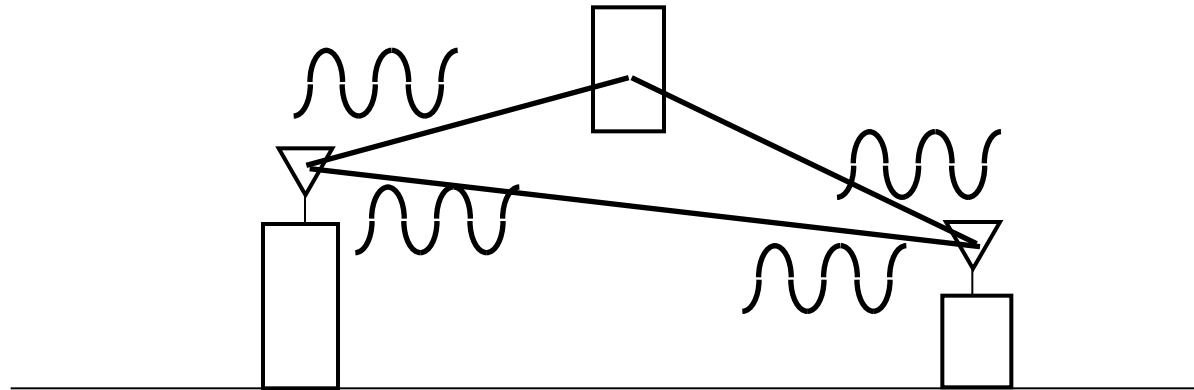

$$\begin{array}{c} \text{Sine wave} \\ + \\ \text{Sine wave} \end{array} = \text{Larger Sine wave}$$



Constructive

$$\begin{array}{c} \text{Sine wave} \\ + \\ \text{Inverted Sine wave} \end{array} = \text{Flat line}$$


Destructive

Shadowing (large scale fading)

- Shadowing gives rise to *large scale* fading
 - Mobile may be in the *shadow* of a building (fading) for *several meters*
 - RSS drops when in shadow

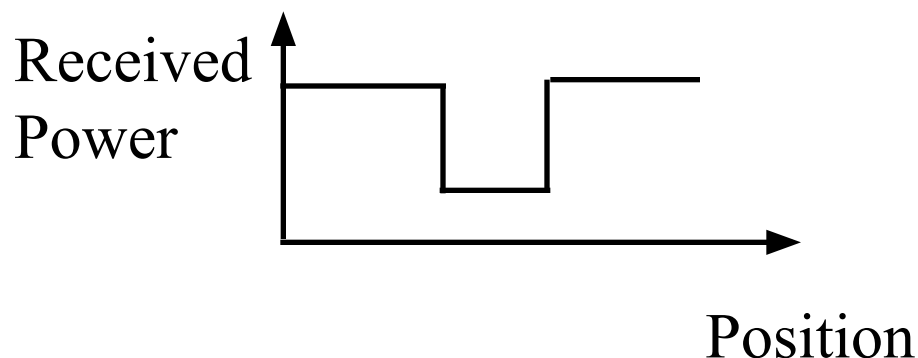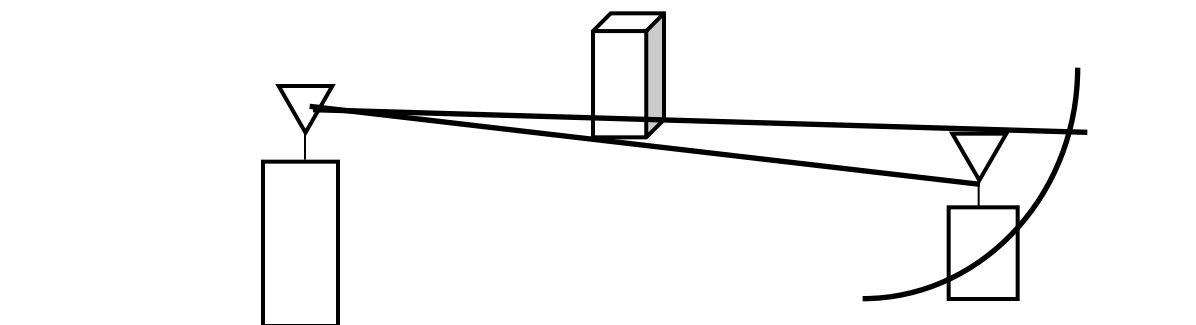

Total Path Loss

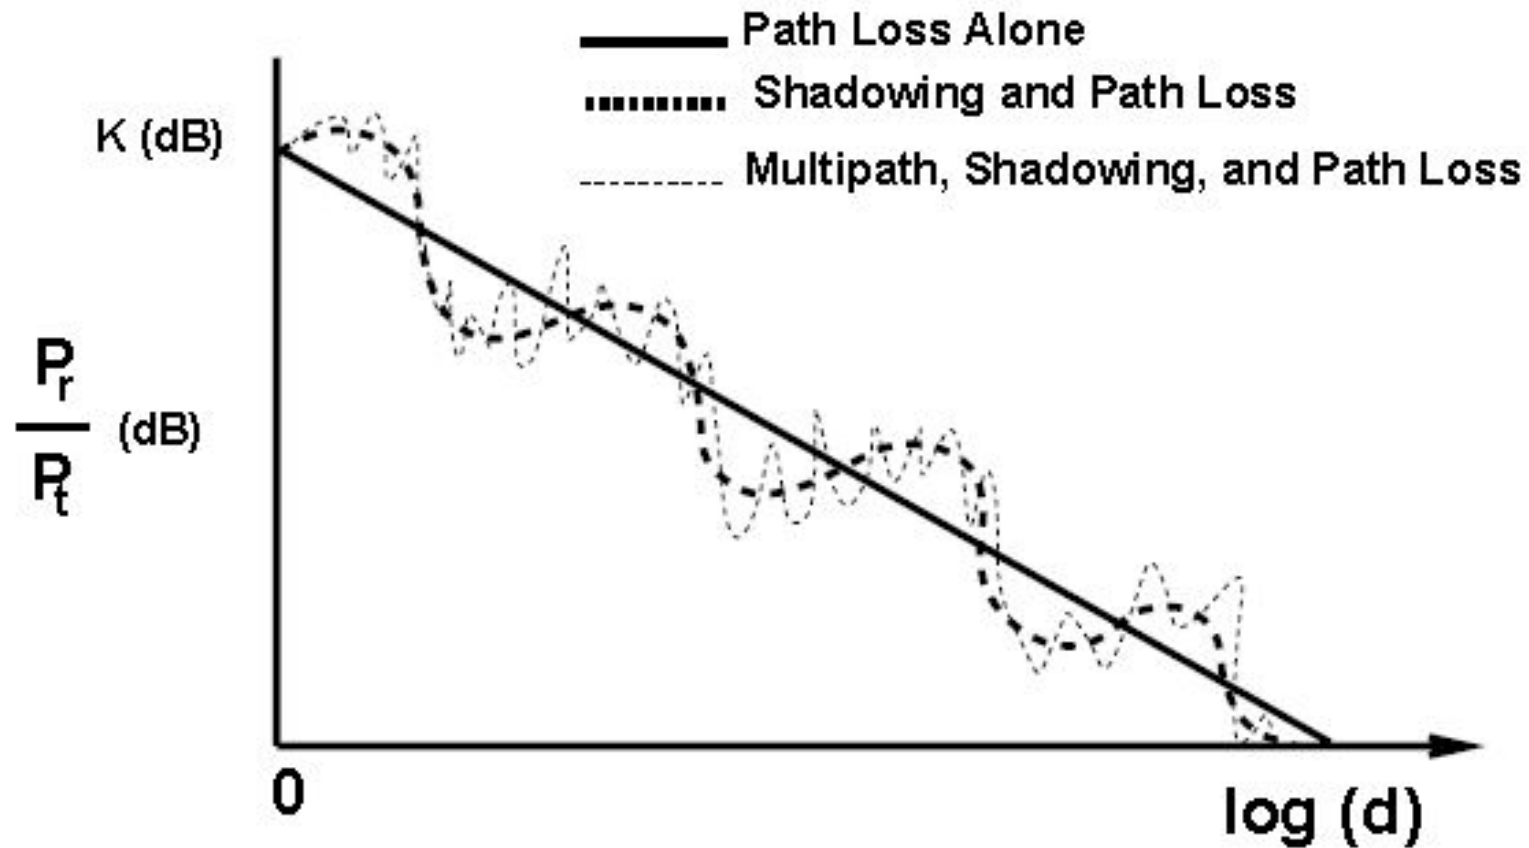

MIMO

- ❑ Traditionally, single antennas were used
- ❑ Multiple antennas are increasingly being used to boost quality/reliability and capacity of wireless communications
 - E.g., most recent WiFi routers have multiple antennas
- ❑ Multiple input (multiple antennas at the *transmitter*)
- ❑ Multiple output (multiple antennas at the *receiver*)
- ❑ MIMO – multiple input multiple output





MIMO Antenna Configurations

- ❑ SISO – single input (1 Tx antenna) single output (1 Rx antenna)
- ❑ SIMO – single input (1 Tx antenna) multiple output (>1 Rx antenna)
- ❑ MISO – multiple input (>1 Tx antenna) single output (1 Rx antenna)
- ❑ MIMO – multiple input (>1 Tx antenna) multiple output (>1 Rx antenna)
 - ❑ 2x2 MIMO – 2 input & 2 output (2 Tx antennas & 2 Rx antennas)
 - ❑ 4x2 MIMO – 4 input & 2 output (4 Tx antennas & 2 Rx antennas)
 - ❑ 1000x2 MIMO – 1000 input & 2 output (1000 Tx antennas & 2 Rx antennas)

Why Multiple Antennas Can Improve Performance?

- ❑ **Multi-path scenario:** if antennas are spaced $>\lambda/2$ apart, multipath signals for different antennas can be **uncorrelated**
 - ❑ multiple (*spatial*) channels using the same frequency!
 - ❑ More channels means opportunity to improve *signal quality* and *data rate*
- ❑ **Line-of-Sight (LOS) scenario:** multiple antennas at the transmitter can be used to realize *virtual directional antennas* (beamforming)
 - ❑ Increase **coverage** and *signal strength* at a particular direction of choice

Spatial Channels

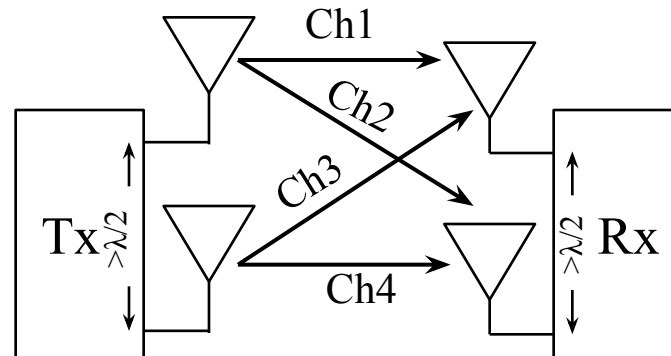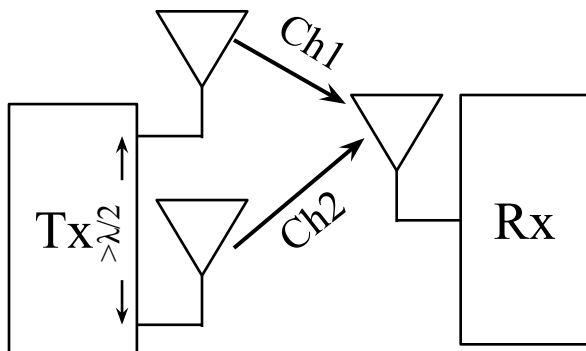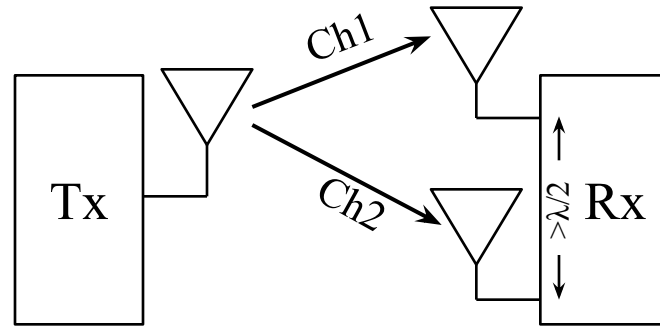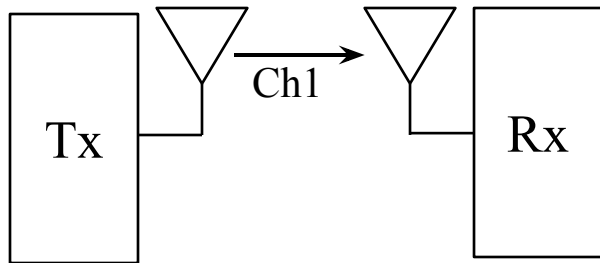

MIMO Techniques

- ❑ Spatial Diversity (a.k.a. Diversity)
 - ❑ Improve *reliability* by exploiting spatial channels
- ❑ Spatial Multiplexing (a.k.a. Multiplexing)
 - ❑ Improve *data rate* by exploiting spatial channels
- ❑ Beamforming
 - ❑ Increase *coverage* and *signal strength* by exploiting multiple Tx antennas to focus the beam at a narrow angle

Diversity

- ❑ Total # of *independent* paths = $N_T \times N_R$
 - ❑ N_T = # of transmit antenna, N_R = # of receive antenna
- ❑ Send same data (copied) over $N_T \times N_R$ redundant paths
- ❑ Increases reliability – probability that all paths will suffer bad fading at the same time is low
 - ❑ SNR at receiver can be improved (*diversity gain*)


Example

- A base station is equipped with an *antenna array* consisting of 100 elements. What is the maximum number of spatial channels that could be created from this base station to an ordinary mobile device equipped with a *single* antenna?


Answer: It is a 100x1 MIMO. 100 spatial channels are possible.

Multiplexing

- ❑ Send different bits of the data on different channels
- ❑ The combined data rate is increased due to multiplexing
- ❑ Overall multiplexing gain is limited by *degrees of freedom*
- ❑ Degrees of freedom = $\min(N_T, N_R)$

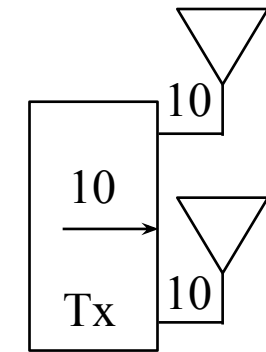

Diversity

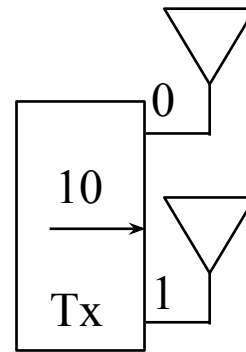


Multiplexing

Example


- ❑ What is the *degrees of freedom* for an 802.11ac WiFi system with the access point having 8 antennas and communicating to a laptop equipped with 2 antennas?
- ❑ Answer: degrees of freedom = $\min(8,2) = 2$

Beamforming

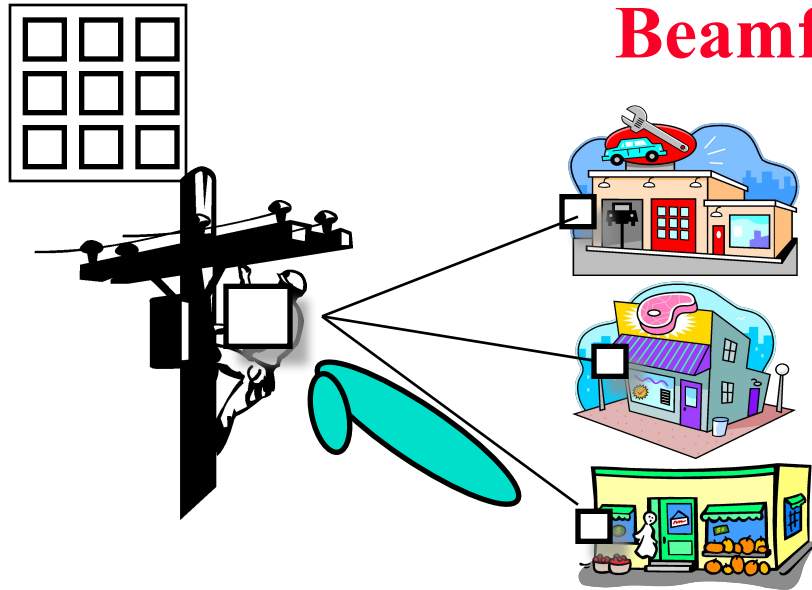


- ❑ Phased Antenna Arrays:
Transmit the same signal using multiple antennas
- ❑ By phase-shifting various signals $\Rightarrow$ Focus on a narrow directional beam (increased SNR and long-distance coverage)
- ❑ Receiver does the same, i.e., focus its reception from a particular BS
- ❑ Used when LOS

OOFDM

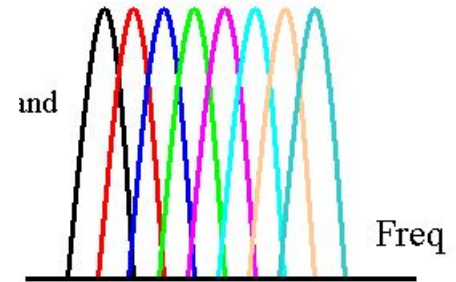


- ❑ **O**rthogonal **F**requency **D**ivision **M**ultiplexing
- ❑ Ten 100 kHz channels are better than one 1 MHz Channel

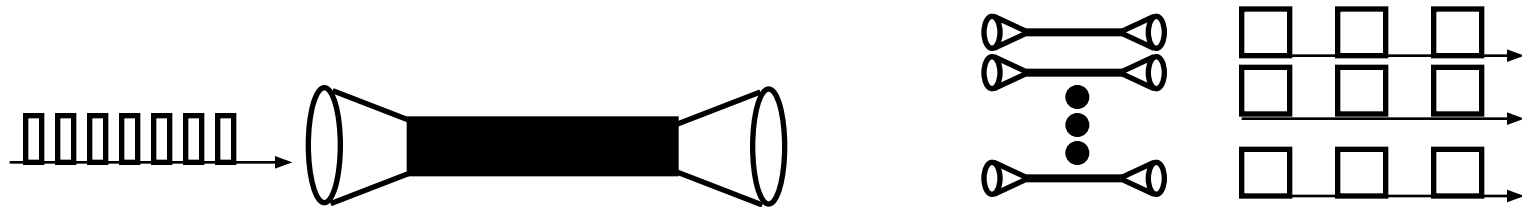

- ❑ Frequency band is divided into 256 or more sub-bands.
 - ❑ Orthogonal: Peak of one at null of others
- ❑ Each carrier is modulated indecently with a BPSK, QPSK, 16-QAM, 64-QAM etc. depending on the fading in the channel (frequency selective fading means different channel has different fading and requires different modulation and coding)
- ❑ Used in newer generation of WiFi and 4G/5G


Advantages of OFDM

- ❑ Robustness against frequency selective burst errors
- ❑ Allows adaptive modulation and coding of **sub**carriers
- ❑ Robust against narrowband interference (affecting only some subcarriers)
- ❑ Allows **pilot** subcarriers for channel estimation

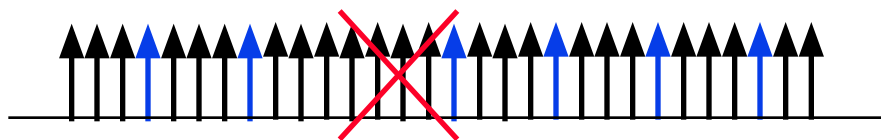


OFDM: Design considerations

- ❑ Subcarrier spacing = Frequency bandwidth/Number of subcarriers
- ❑ Large number of carriers $\Rightarrow$ Smaller data rate per carrier
 $\Rightarrow$ Larger symbol duration $\Rightarrow$ Less inter-symbol interference
- ❑ Reduced subcarrier spacing $\Rightarrow$ Increased inter-carrier interference due to Doppler spread in mobile applications

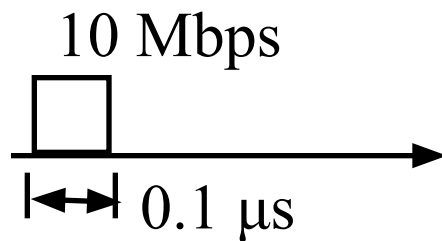



Small # of carriers
Shorter symbol durations
Higher data rates per carrier

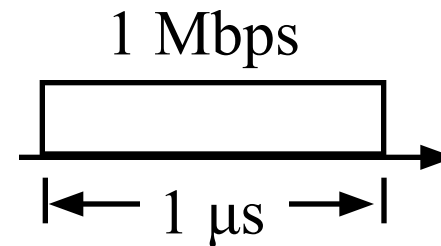

Large # of carriers
Longer symbol durations
Lower data rates per carrier

OFDMA

- ❑ Orthogonal Frequency Division [Multiple Access](#)
- ❑ Each user has a subset of subcarriers for a few time slots
- ❑ OFDM systems use TDMA (e.g., in WiFi)
- ❑ OFDMA allows Time+Freq DMA $\Rightarrow$ 2D Scheduling

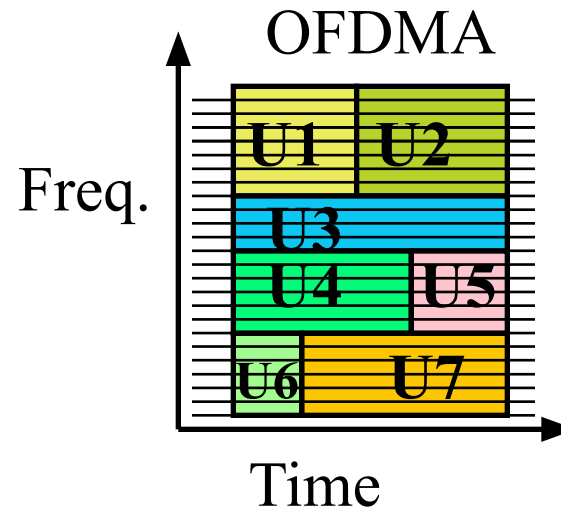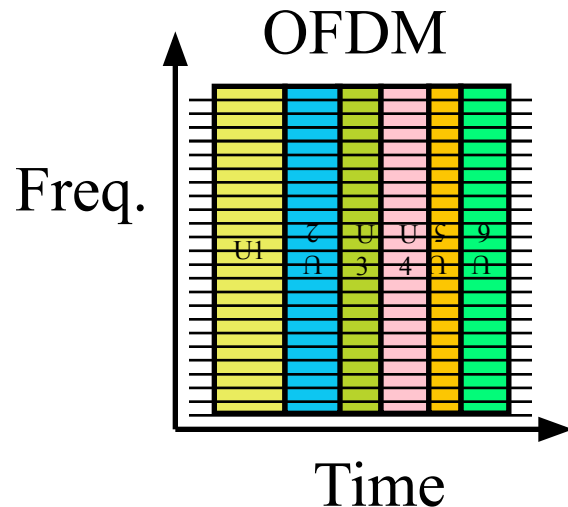


Example

- *With a subcarrier spacing of 10 kHz, how many subcarriers will be used in an OFDM system with 20 MHz channel bandwidth?*

$$\begin{aligned} \text{Number of subcarriers} &= \text{channel bandwidth} / \text{subcarrier spacing} \\ &= 20 \times 10^6 / 10 \times 10^3 = 2000 \end{aligned}$$



Effect of Frequency

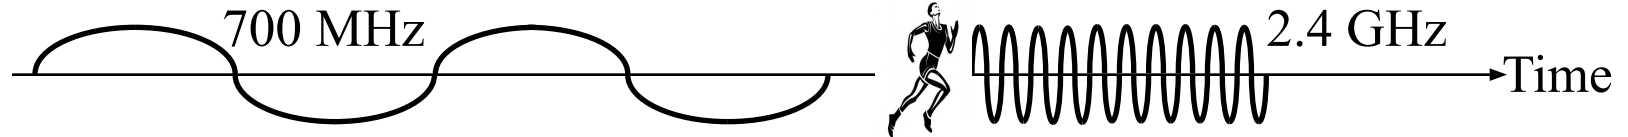


- ❑ Higher Frequencies have higher attenuation, e.g., 18 GHz has 20 dB/m more than 1.8 GHz
- ❑ Higher frequencies need smaller antenna
 $\text{Antenna} \geq \text{Wavelength}/2$, 800 MHz $\Rightarrow$ 6"
- ❑ Higher frequencies are affected more by weather
Higher than 10 GHz affected by rainfall
60 GHz affected by absorption of oxygen molecules
- ❑ Higher frequencies have more bandwidth and higher data rate
- ❑ Higher frequencies allow more frequency reuse
They attenuate close to cell boundaries. Low frequencies propagate far.

Effect of Frequency (Cont)

- ❑ Lower frequencies have longer reach
 - ⇒ Longer Cell Radius
 - ⇒ Good for rural areas
 - ⇒ Smaller number of towers
 - ⇒ Longer battery life
- ❑ Lower frequencies require larger antenna and antenna spacing
 - ⇒ MIMO difficult particularly on mobile devices
- ❑ Lower frequencies ⇒ Smaller channel width
 - ⇒ Need aggressive MCS, e.g., 256-QAM
- ❑ Doppler shift = vf/c = Velocity × Frequency / (speed of light)
 - ⇒ Lower Doppler spread at lower frequencies
- ❑ Mobility ⇒ Below 10 GHz

Summary

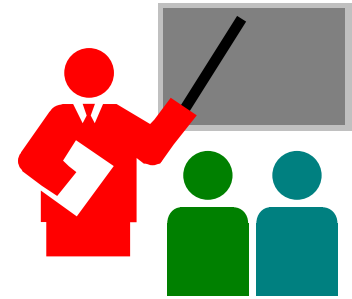

1. Path loss increases at a power of 2 to 5.5 with distance.
2. Fading = Changes in power with changes in position
3. Multiple Antennas: Receive diversity, transmit diversity, multiplexing, and beamforming
4. OFDM splits a band into many orthogonal subcarriers.
OFDMA = FDMA + TDMA

Acronyms

❑	BPSK	Binary Phase-Shift Keying
❑	BS	Base Station
❑	dB	DeciBels
❑	dBi	DeciBels Intrinsic
❑	dBm	DeciBels milliwatt
❑	DFT	Discrete Fourier Transform
❑	DMA	Direct Memory Access
❑	DSP	Digital Signal Processing
❑	DVB-H	Digital Video Broadcast handheld
❑	FDMA	Frequency Division Multiple Access
❑	FFT	Fast Fourier Transform
❑	IDFT	Inverse Discrete Fourier Transform
❑	IFFT	Inverse Fast Fourier Transform
❑	ISI	Inter-symbol interference
❑	kHz	Kilo Hertz
❑	LoS	Line of Sight

Acronyms (Cont)

- ❑ MHz Mega Hertz
- ❑ MIMO Multiple Input Multiple Output
- ❑ MS Mobile Station
- ❑ OFDM Orthogonal Frequency Division Multiplexing
- ❑ OFDMA Orthogonal Frequency Division Multiple Access
- ❑ QAM Quadrature Amplitude Modulation
- ❑ QPSK Quadrature Phase-Shift Keying
- ❑ RF Radio Frequency
- ❑ SNR Signal to Noise Ratio
- ❑ SS Subscriber Station
- ❑ STBC Space Time Block Codes
- ❑ TDMA Time Division Multiple Access