

Engineering Drawing

Lettering



Recommendation

- Text's style on the drawing must have the following 2 properties

Legibility

- Shape
- Space between letters
- Space between words

Uniformity

- Size (or text height)
- line thickness

Examples

ESTIMATE **GOOD**

ESTiMaTE Not uniform in style.

ESTIMATE
ESTIMATE Not uniform in height.

EST/MATE
ESTIMATE Not uniformly vertical.

ESTIMATE
ESTIMATE Not uniform in thickness of stroke.

ESTIMATE Inappropriate space between letters

Lettering Standard

ANSI Standard

- Use a Gothic text style, either inclined or vertical.
- Use all capital letters.
- Use 3 mm for most text height.
- Space between lines of text is **at least** 1/3 of text height.

This course


- Use only a vertical Gothic text style.
- Use all capital letters.
- Same. For letters in title block it is recommend to use 6 mm text height
- N/A.
Follows ANSI rule.

Basic Strokes


Straight




Slanted

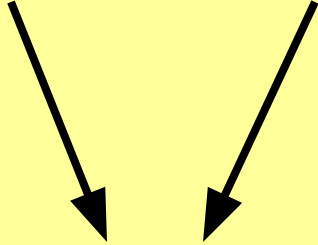

Horizontal



Curved

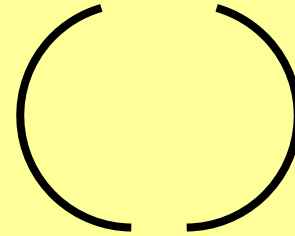


Examples


“I” letter



“A” letter

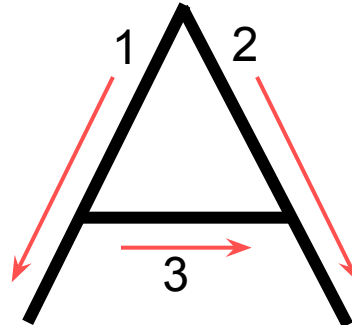


“B” letter

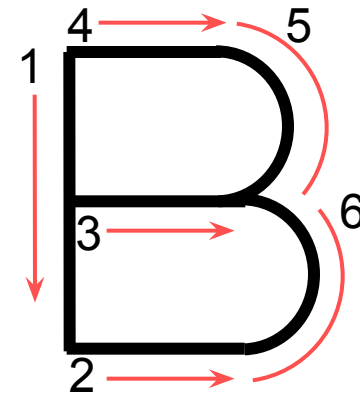


Upper-case Letters & Numerals

**Straight line
letters**

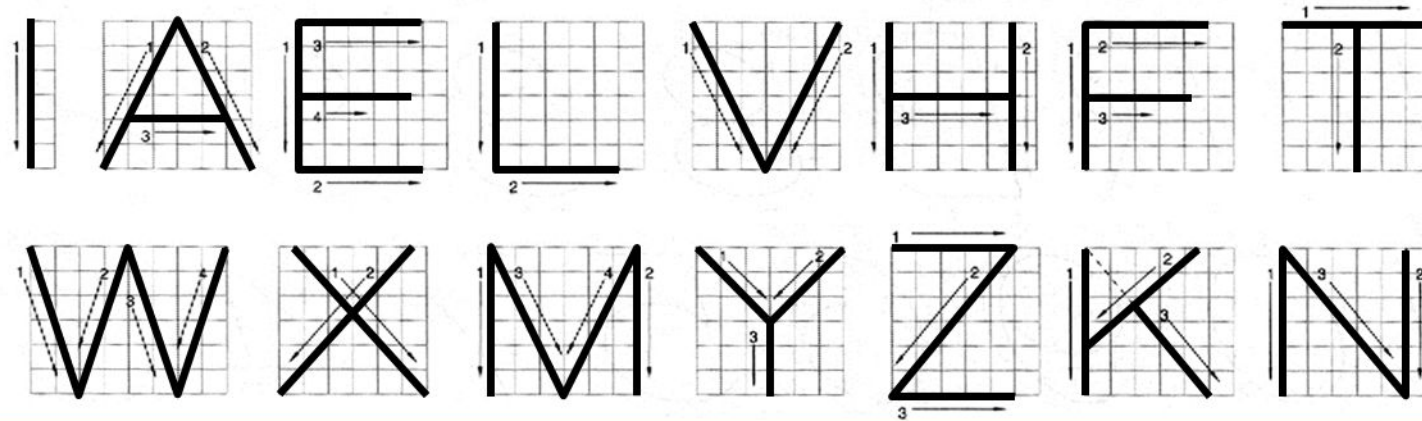

**Curved line
letters
&
Numerals**

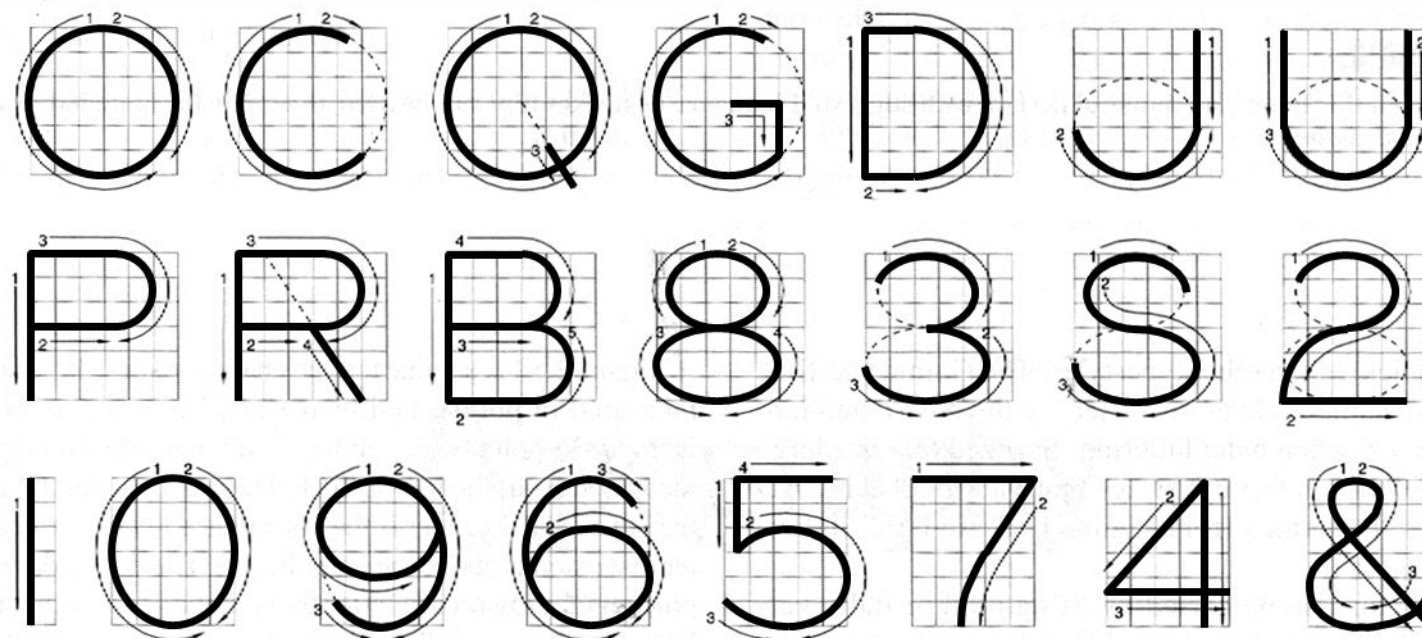

Engineering Drawing

Line Types



Basic Line Types & Application


Thickness Style	Thick	Thin
	Visible line	1. Dimension line 2. Extension line 3. Leader line
Continuous		
Dash		
Chain		

Hidden line

Center line

- 1. Visible line** represent features that can be seen in the current view.
- 2. Dimension line**
Extension line indicate the sizes and location of features.
Leader line
- 3. Hidden line** represent features that can not be seen in the current view.
- 4. Center line** represents symmetry, path of motion, centers of circles, axis of axisymmetrical parts

Line Types An Example:


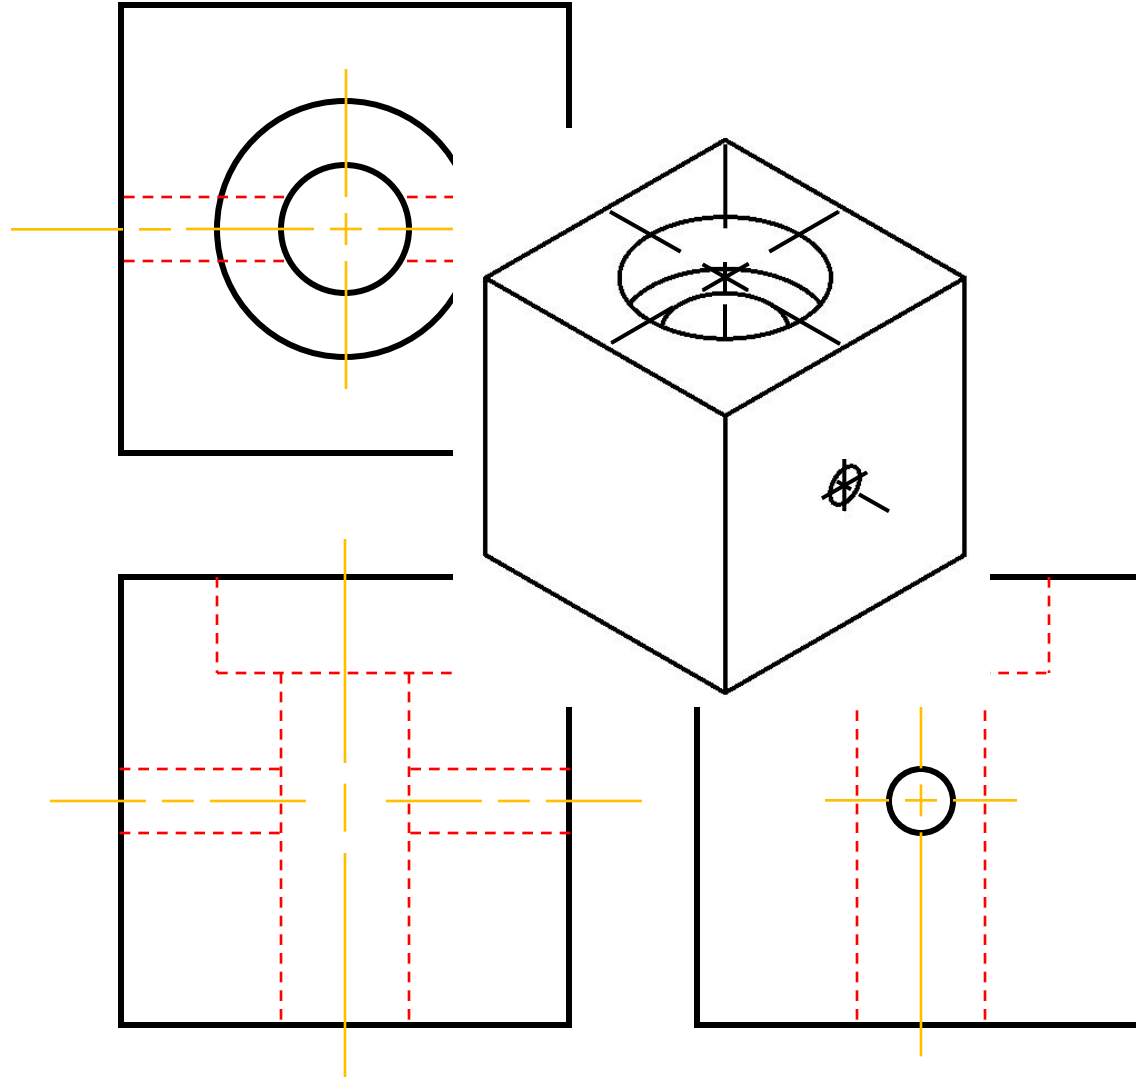


1. Visible


2. Hidden

3. Center


Basic Sketching Line types

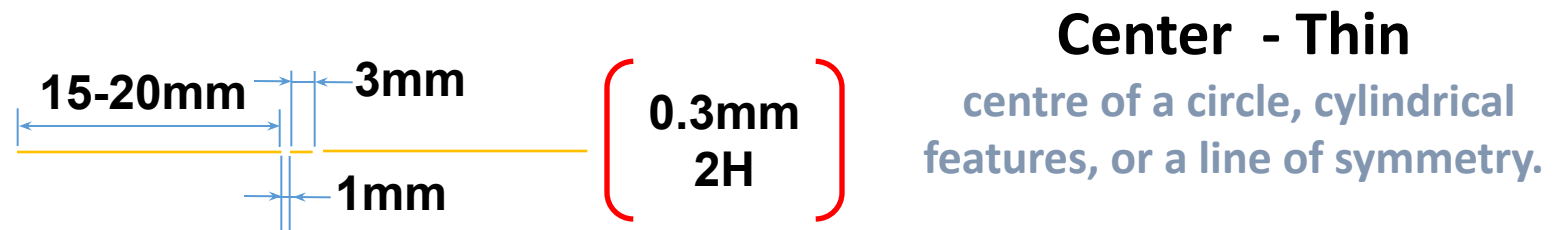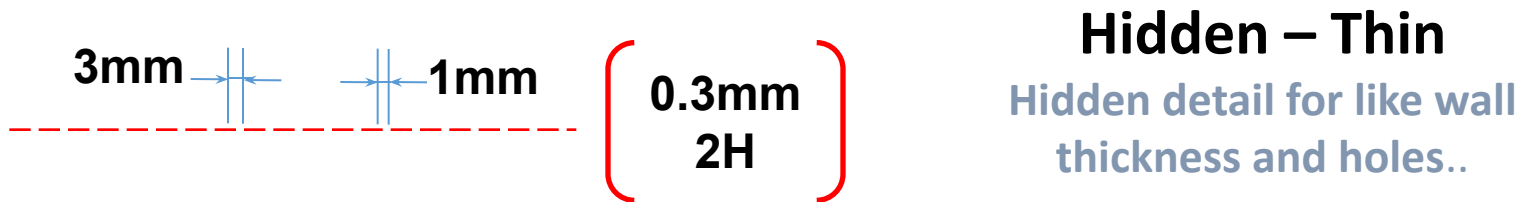

Basic Line Types

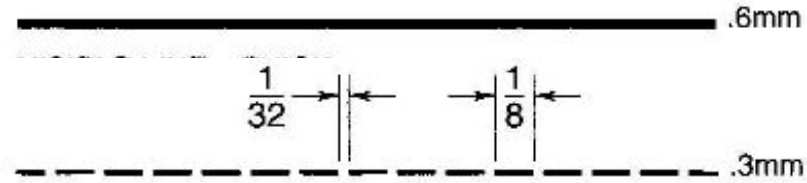


HIDDEN LINE – THIN



CENTER – THIN



SHORT BREAK LINE – THICK

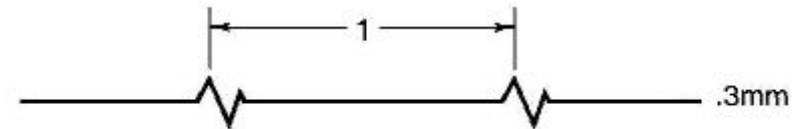


LONG BREAK LINE – THIN



DIMENSION & EXTENSION LINE – THIN



SECTION LINE – THIN



PHANTOM LINE – THIN

Example : Line conventions in engineering drawing

