


LulzBot TAZ Pro

Enclosure Assembly

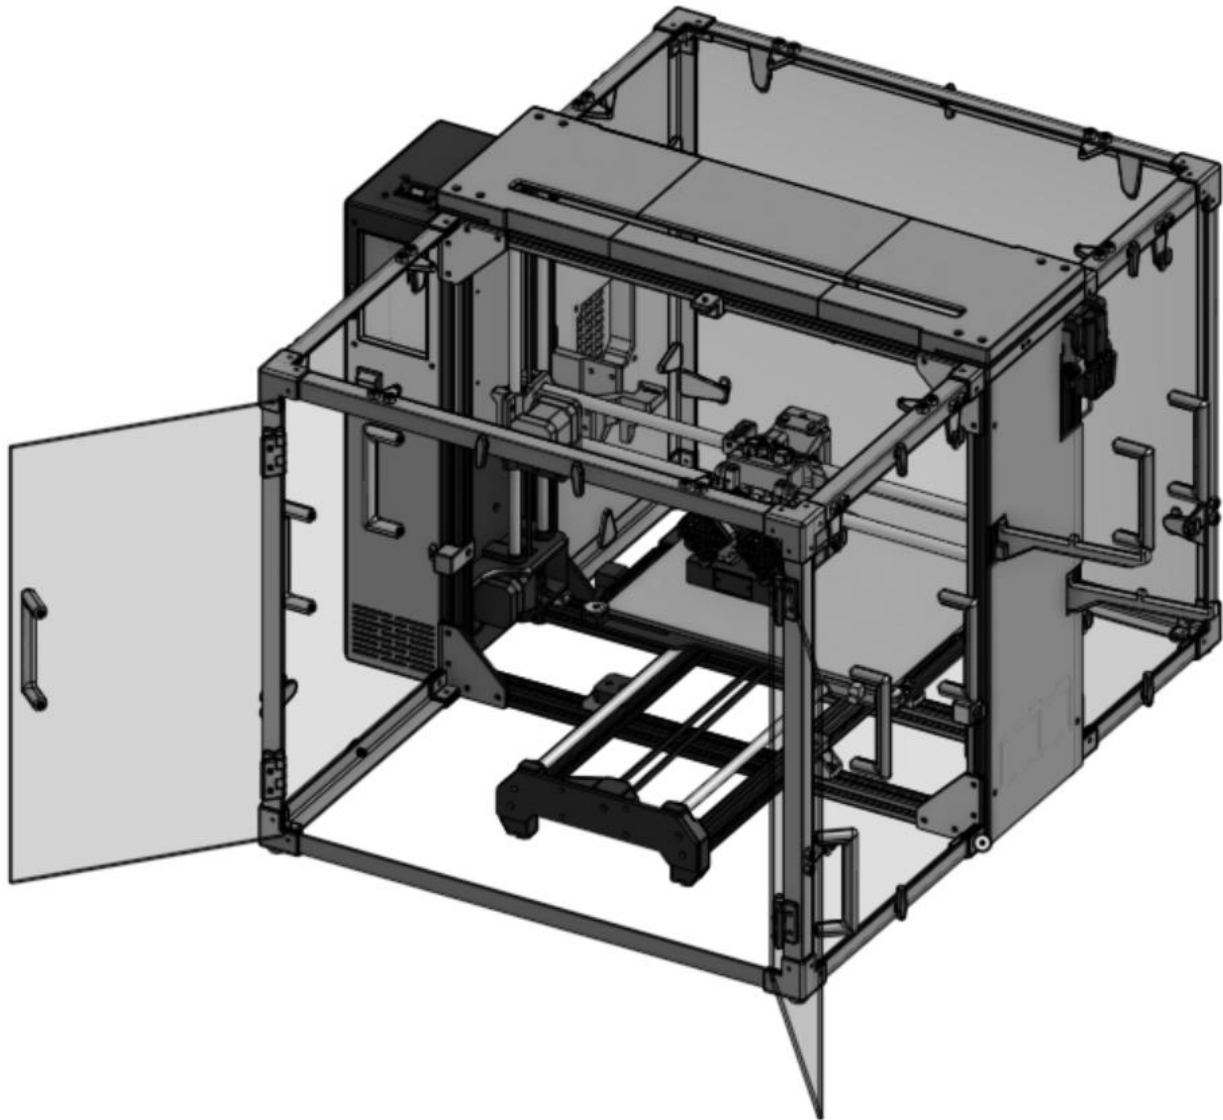

WARNING

Safety Precautions

PERSONAL PROTECTIVE EQUIPMENT

- Wear safety glasses throughout the building process
- Use a dust mask when cutting and sanding components

MATERIALS HANDLING

- Be cautious when handling sharp edges and material corners
- Use gloves when handling and cutting plexiglass to avoid cuts and glass splinters
- Ensure proper ventilation when working with materials that may emit fumes or particles

ASSEMBLY AREA


- Keep workplace clear and free of clutter to prevent accidents
- Ensure adequate lighting to prevent misplaced parts or tools
- Be mindful of trip hazards from tools, cables, or materials

FOLLOW INSTRUCTIONS


- Read and understand all assembly instructions before starting
- Seek help if needed (GitHub video resource)

Disclaimer: Following these warnings does not guarantee safety; always exercise caution and use common sense during assembly and operation.


TOOLS REQUIRED

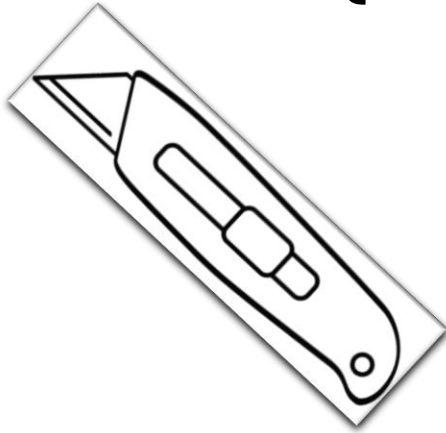

Utility Knife

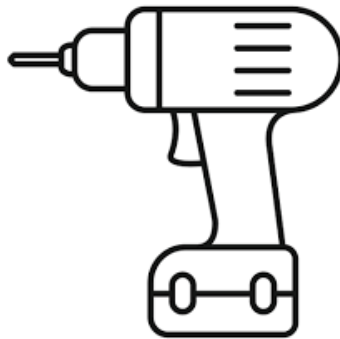

Drill (3mm, 6mm, 8mm)

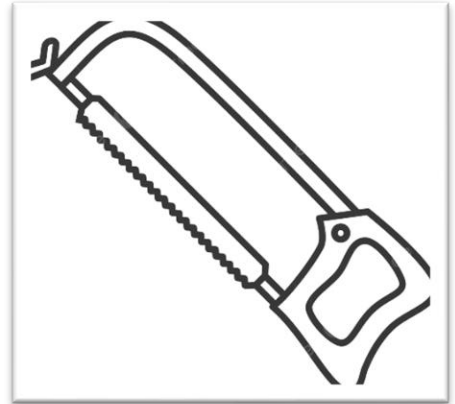


Hacksaw



Needle-Nose Pliers



Bastard File

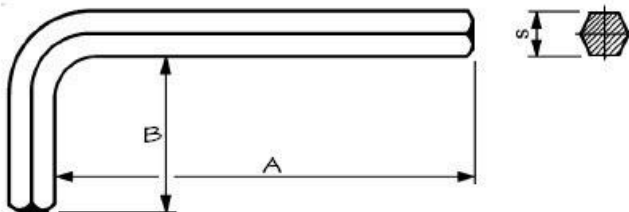


Metric Allen Key Set


PREPARE 3D-PRINTED COMPONENTS

Go into the GitHub to access Onshape files needed to print


CORNERS (4 TOP + 4 BOTTOM)

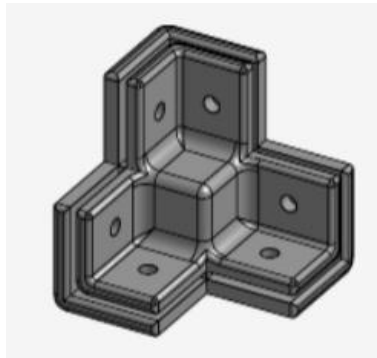


HANDLES (10)

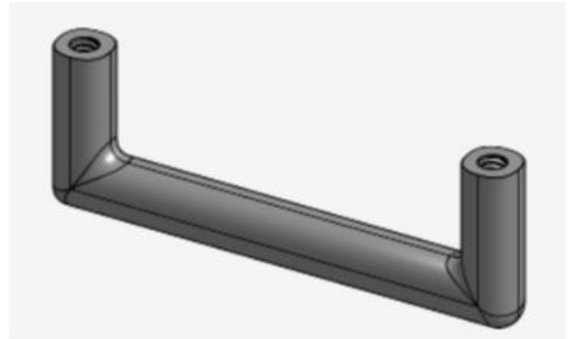

FRAME ATTATCHMENT BRACKET (8)

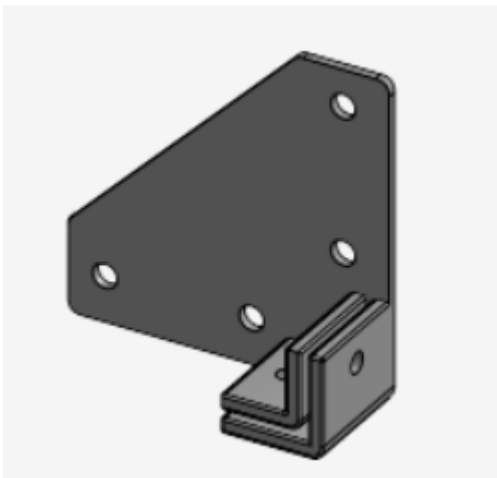

SWIVEL LOCKS (10)

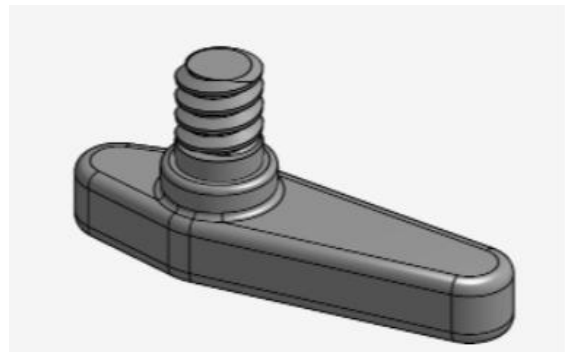


**STATIC ATTATCHMENT
BRACKET** (12)

Nuts (60)

Top Assembly (1 Right + 1 Centre Front + 1 Centre Back + Left)

HOOKS (7 Top + 3 Right + 2
Left +2 Frame Left + 1 Frame Right)


ALUMINUM FRAME

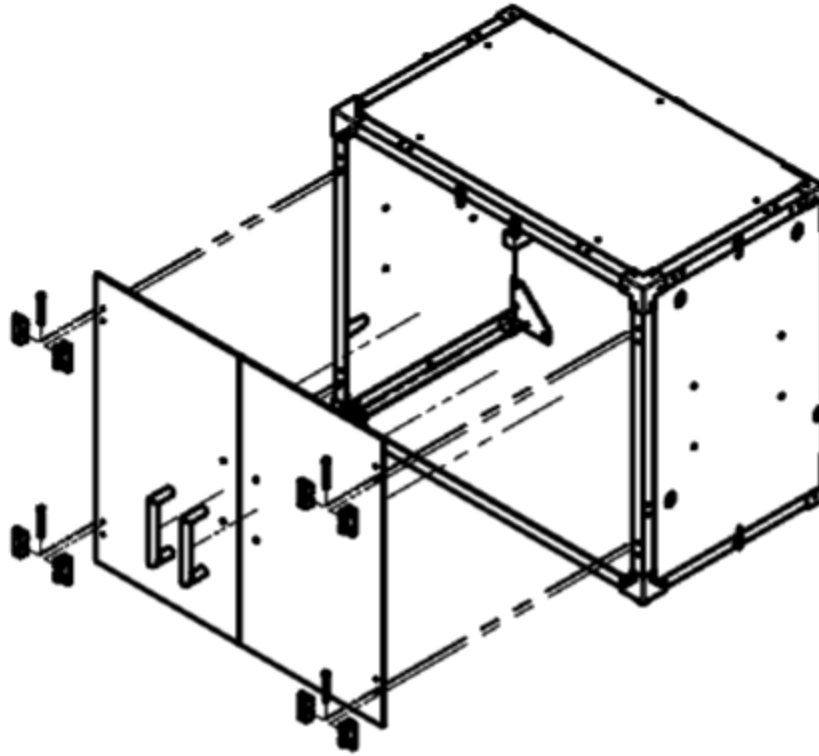

REQUIRED MATERIALS


2X 1/16" Thickness, 3/4" Solid Aluminum Angle - 8ft

1X 1/16" Thickness, 3/4" Solid Aluminum Angle - 6ft

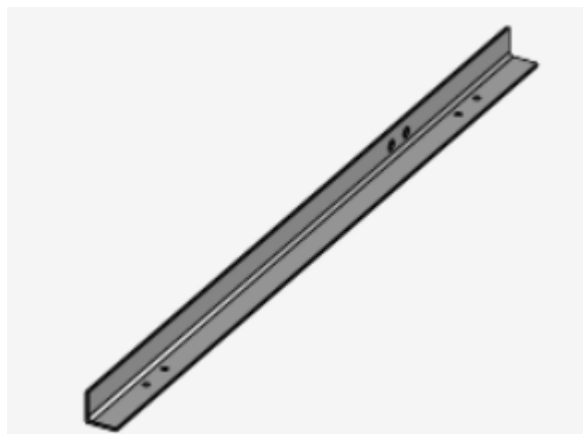

Cut and drill holes in the angled aluminum to the following dimensions:

FRONT WIDTH TOP

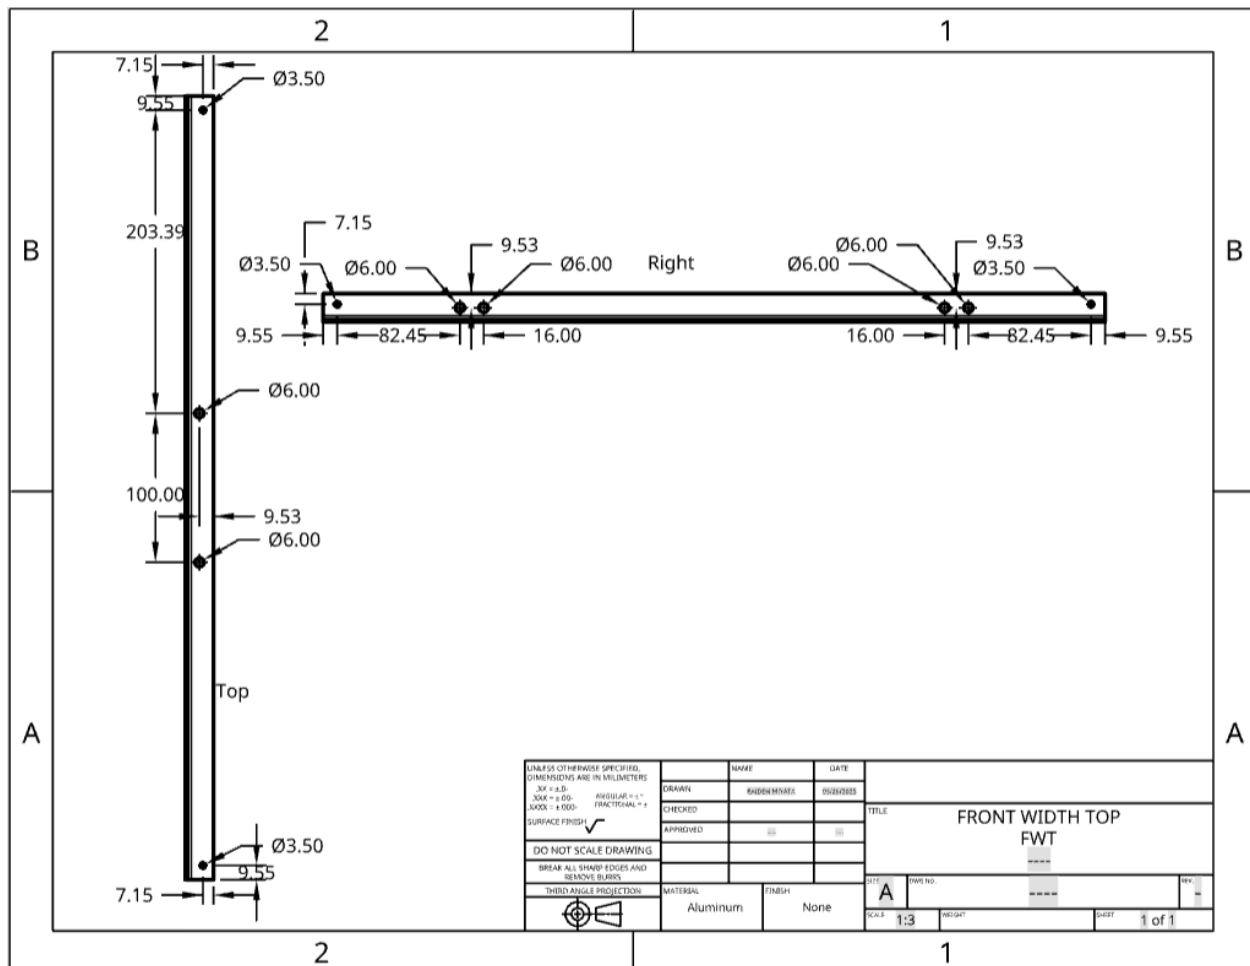

This drawing is for the width cut of the frame when facing the control panel front-on.

Technical drawing of a front length bottom (FLB) showing top and right views with dimensions and a title block.

Top View Dimensions:

- Overall width: 304.80
- Top flange width: 9.55
- Top flange thickness: 7.15
- Top flange hole diameter: Ø3.50

Right View Dimensions:

- Overall length: 142.85
- Right flange width: 9.55
- Right flange thickness: 7.15
- Right flange hole diameter: Ø3.50
- Right flange hole offset from center: 9.53
- Right flange hole diameter: Ø6.00

Title Block:

SPECIFICATIONS: DRAWING SPECIFIED DIMENSIONS ARE IN MILLIMETERS		NAME	DATE
1:1 = 1:1	200 ± 0.05	DESIGNED	DRAWING
200 ± 0.05	200 ± 0.05	CHECKED	
SURFACE FINISH	✓	APPROVED	
DO NOT SCALE DRAWING			
BREAK ALL SHARP EDGES AND REMOVE BUMP			
THIRD ANGLE PROJECTION		MATERIAL	FINISH
		Aluminum	None
		SIZE	1:2
		NO. OF	1 of 1

This drawing is for the lower length cut of frame when facing the control panel front-on.

Technical drawing of the front length top right of a FLTR (Front Length Top Right) component. The drawing shows a vertical section on the left and a horizontal section on the right. The vertical section has a total height of 304.80 and features two Ø6.00 holes spaced 62.45 apart, with a Ø3.50 hole at the bottom. The horizontal section has a total length of 166.00 and features four Ø6.00 holes and two Ø3.50 holes. Dimensions are given in millimeters. The drawing is labeled 'Top' and 'Right'. A title block at the bottom right contains the title 'FRONT LENGTH TOP RIGHT FLTR' and other drawing information.


UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETERS JOE = ±0.000 XXX = ±0.000 SURFACE FINISH ✓		NAME	DATE	TITLE FRONT LENGTH TOP RIGHT FLTR
DO NOT SCALE DRAWING	CHECKED	DESIGNED BY	23/08/2023	
BREAK ALL SHARP EDGES AND REMOVE BURRS	APPROVED	DESIGNED BY	DESIGNED BY	
THIRD ANGLE PROJECTION				
	MATERIAL Aluminum	FINISH None	SCALE 1:2	
			SHEET 1 of 1	

This drawing is for the top right cut of frame going into the printer when facing the control panel front-on.

Technical drawing of the Front Width Bottom (FWB) view of a part. The drawing shows a vertical section labeled "Top" and a horizontal section labeled "Right". Dimensions include a total height of 525.88, a top flange width of 7.15, and a hole diameter of Ø3.50. The drawing is oriented with "A" and "B" markers.

This drawing is for the lower width cut of frame going along the length of the printer when facing the control panel front-on.

FRONT HEIGHT LEFT

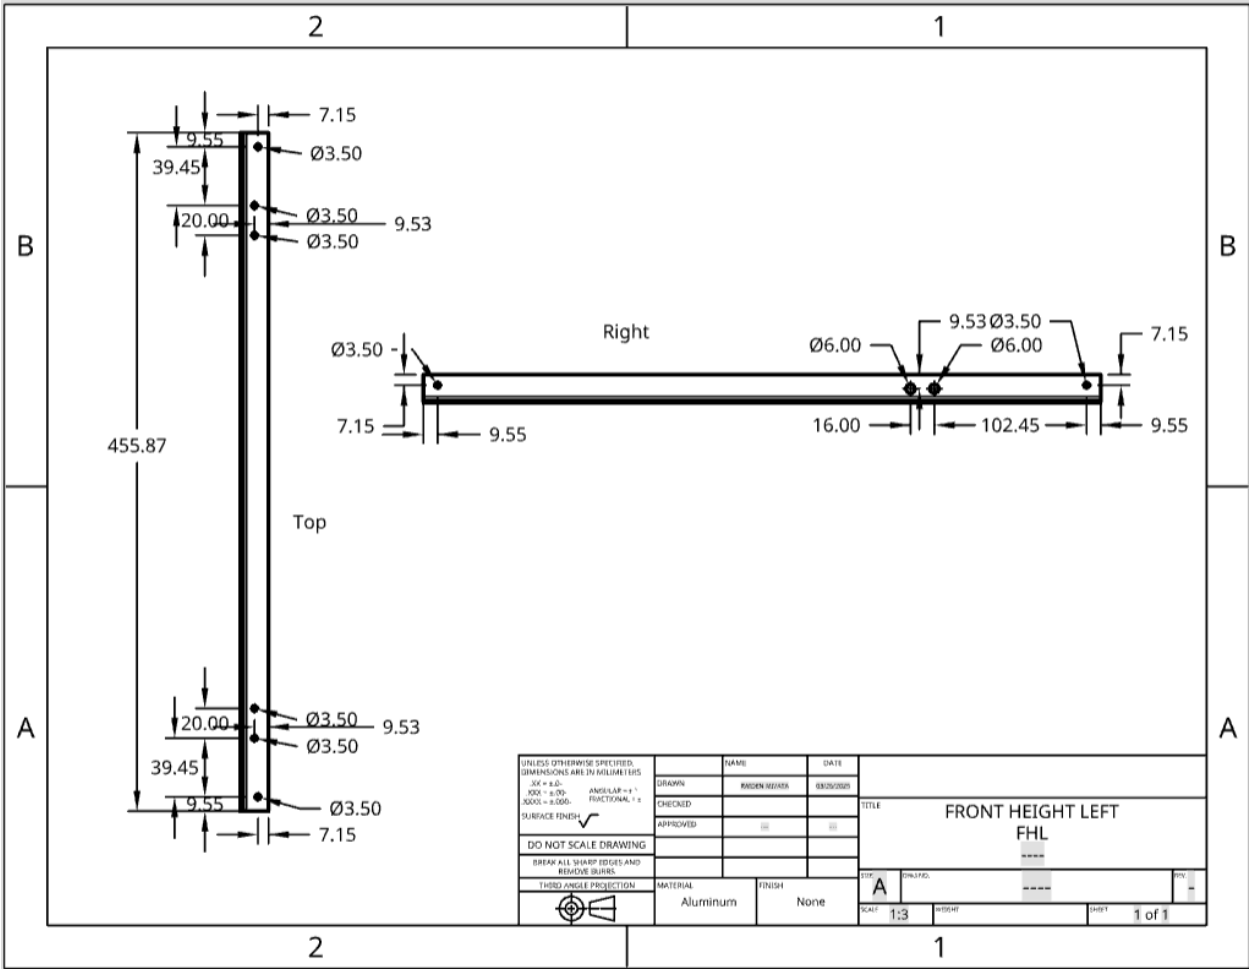

This drawing is for the left height cut of frame going upward when facing the control panel front-on.

Technical drawing of the Front Height Right (FHR) part, showing top and left views with dimensions in millimeters.

Top View Dimensions:

- Overall Height: 455.87
- Base Width: 9.55
- Top Section Width: 9.53
- Top Section Height: 20.00
- Top Section Width: 39.45
- Top Section Height: 9.55
- Top Section Width: 7.15
- Top Section Height: 9.55
- Top Section Width: 9.53
- Top Section Height: 20.00
- Top Section Width: 39.45
- Top Section Height: 9.55
- Top Section Width: 7.15
- Top Section Height: 9.55

Left View Dimensions:


- Overall Length: 102.45
- Base Width: 9.55
- Top Section Width: 9.53
- Top Section Height: 20.00
- Top Section Width: 39.45
- Top Section Height: 9.55
- Top Section Width: 7.15
- Top Section Height: 9.55
- Top Section Width: 9.53
- Top Section Height: 20.00
- Top Section Width: 39.45
- Top Section Height: 9.55
- Top Section Width: 7.15
- Top Section Height: 9.55

Part Details:

- Material: Aluminum
- Finish: None
- Scale: 1:3
- Title: FRONT HEIGHT RIGHT FHR
- Date: 1/1


This drawing is for the right height cut of frame going upward when facing the control panel front-on.

BACK LENGTH TOP LEFT

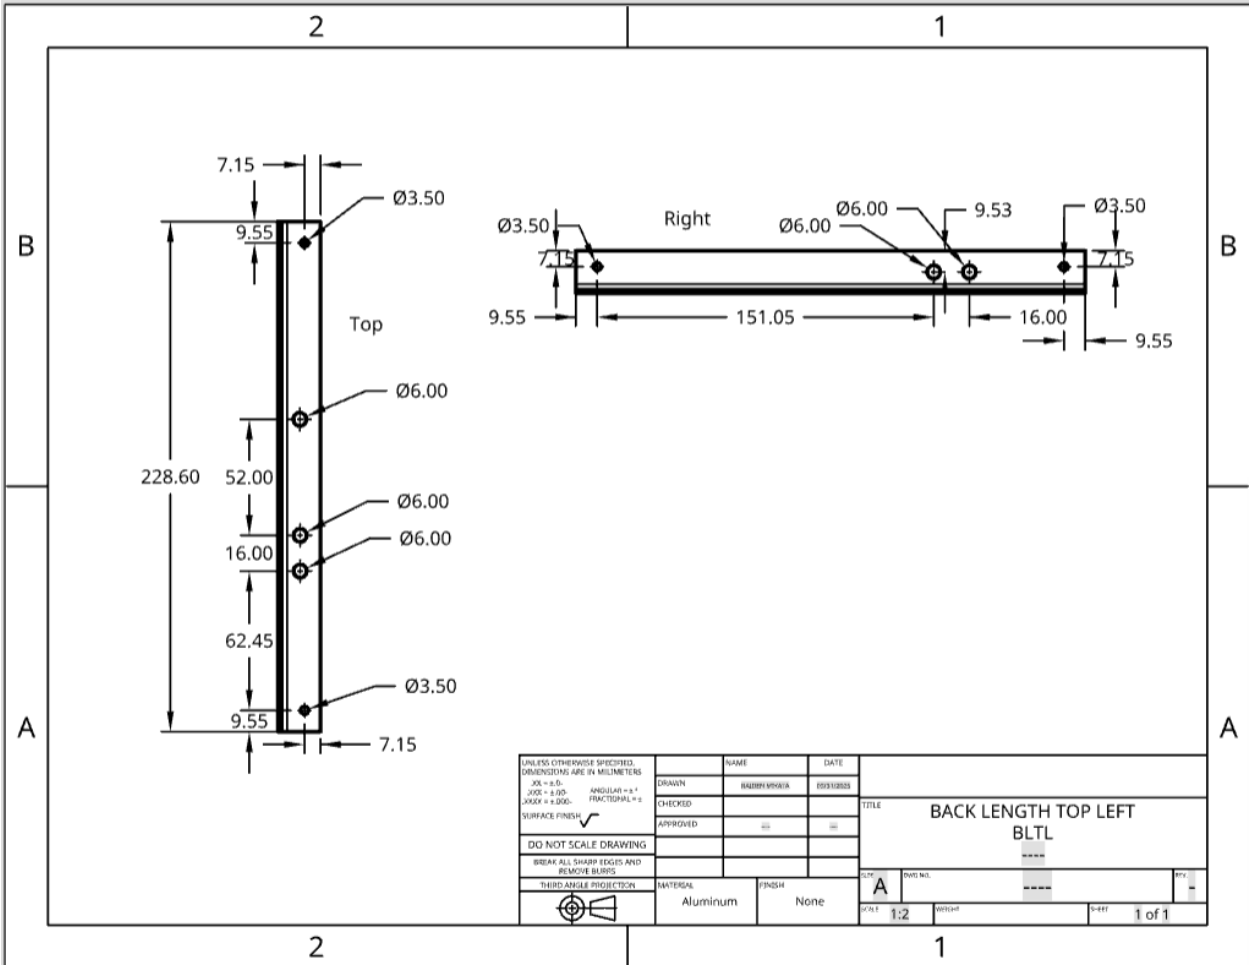


This drawing is for the top left length cut of the frame going inward when facing the direct back of the control panel.

BACK LENGTH TOP RIGHT

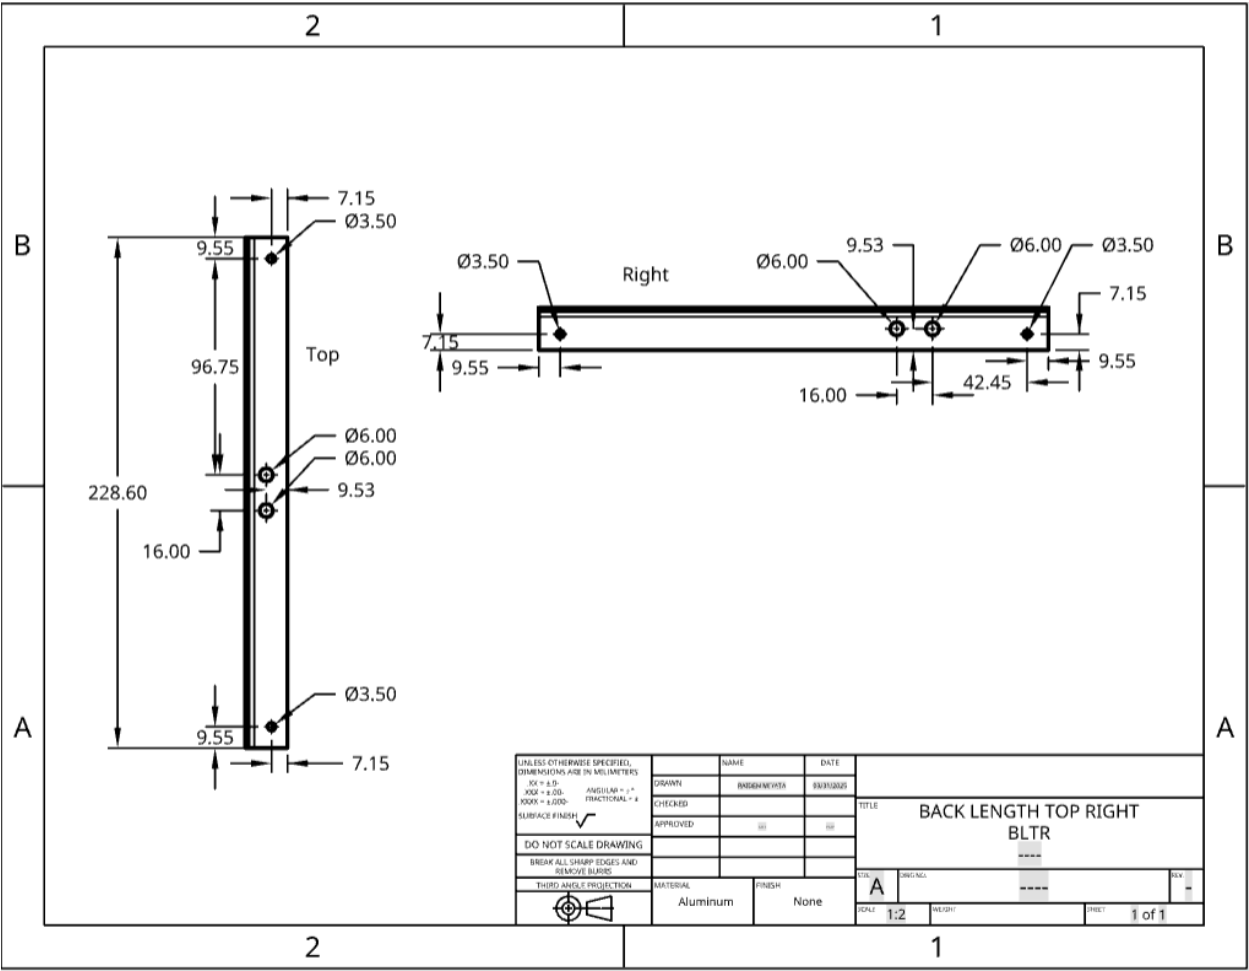


This drawing is for the top right length cut of the frame going inward when facing the direct back of the control panel.

BACK LENGTH BOTTOM LEFT

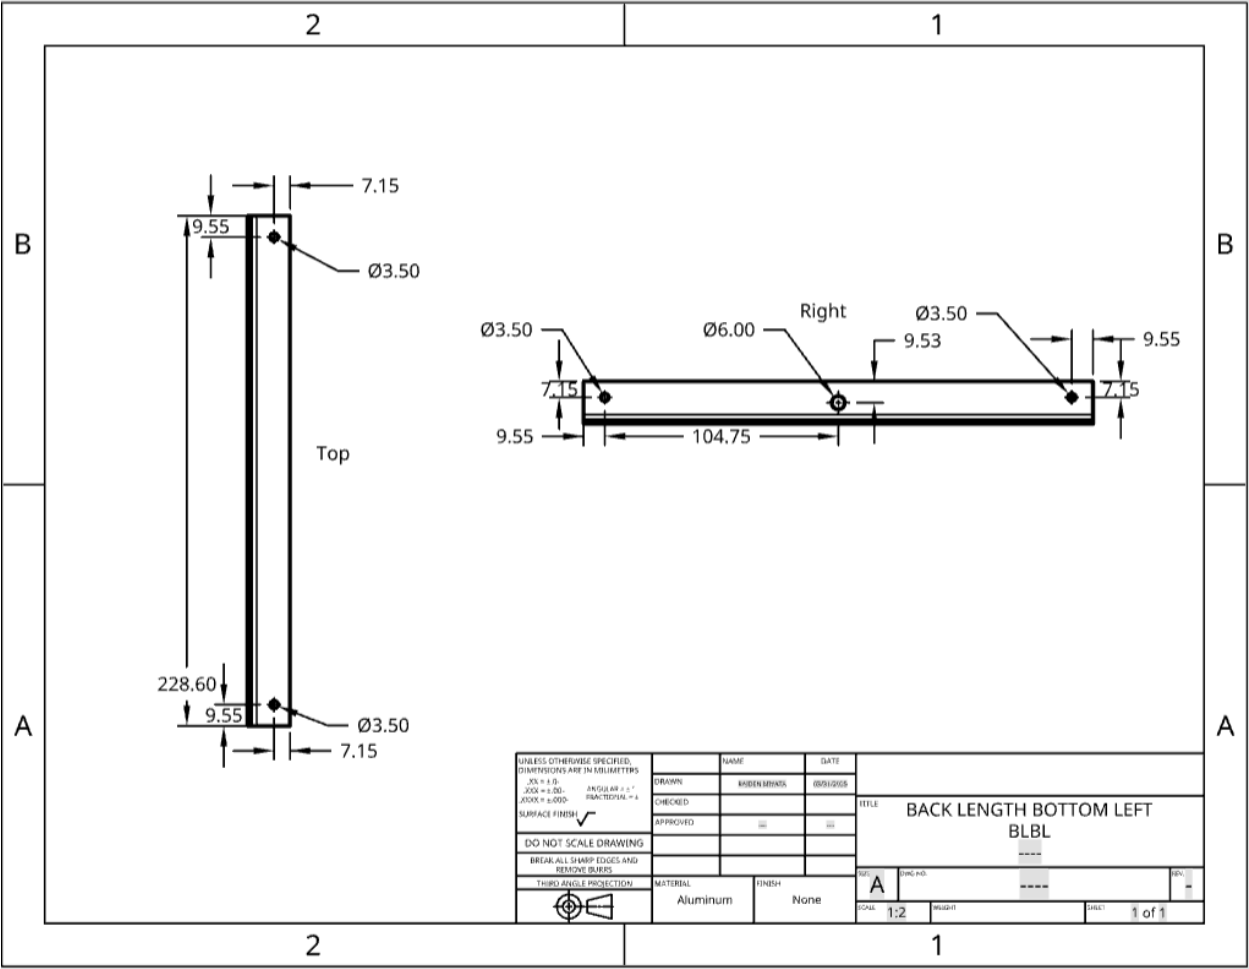

This drawing is for the bottom left length cut of the frame going inward when facing the direct back of the control panel.

BACK LENGTH BOTTOM RIGHT

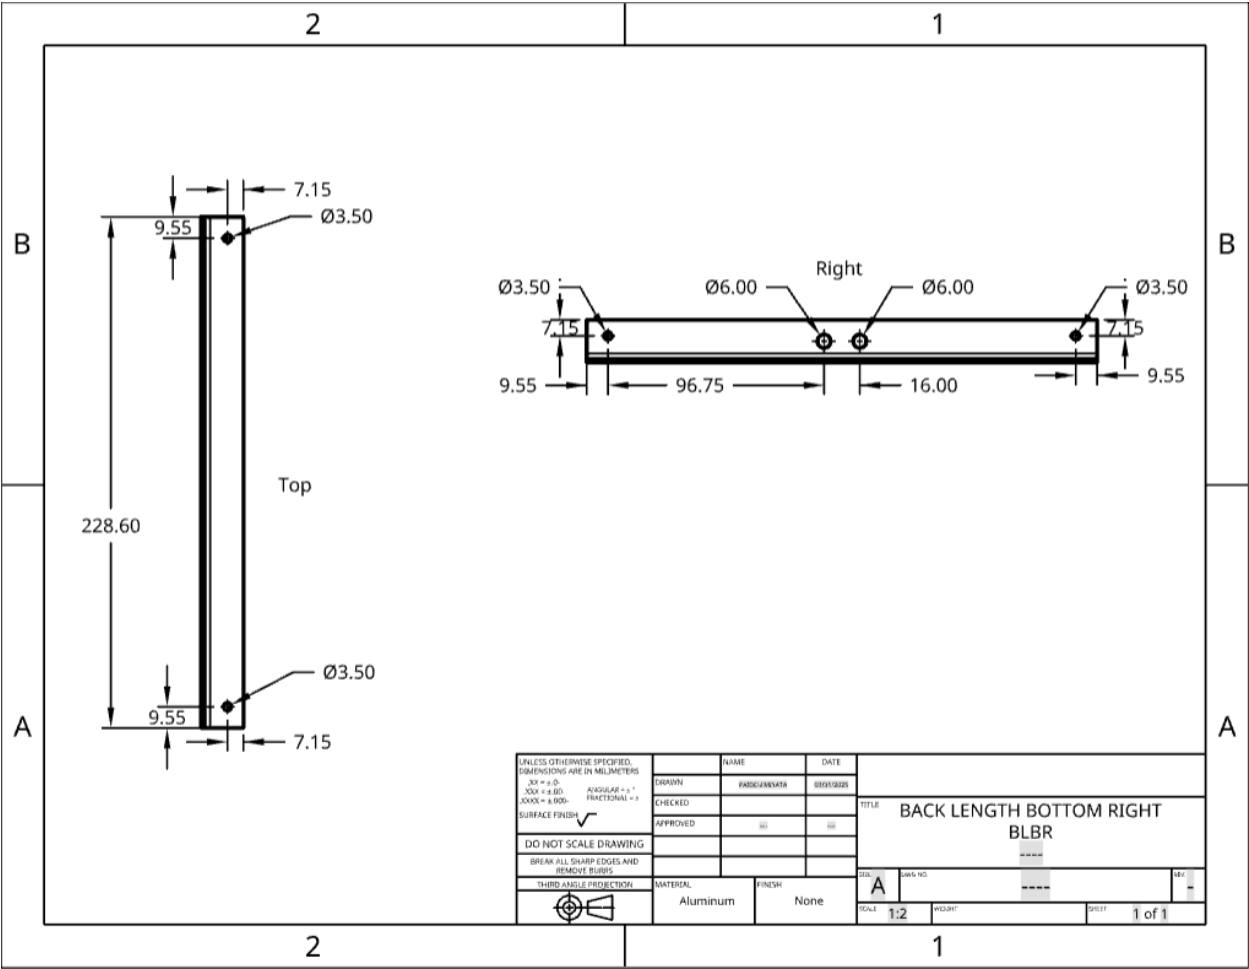

This drawing is for the bottom right length cut of the frame going inward when facing the direct back of the control panel.

[illegible]

This drawing is for the bottom width cut of the frame going along the printer when facing the direct back of the control panel.

Technical drawing of a rectangular plate with dimensions and hole specifications. The drawing includes a top view and a side view.

Top View Dimensions:

- Overall Width: 16.00
- Overall Length: 184.94
- Hole 1 (Top Left): Ø3.50, 7.15 from left edge, 9.55 from top edge.
- Hole 2 (Top Right): Ø6.00, 82.45 from left edge, 9.55 from top edge.
- Hole 3 (Bottom Left): Ø6.00, 82.45 from left edge, 9.55 from bottom edge.
- Hole 4 (Bottom Right): Ø3.50, 16.00 from right edge, 9.55 from bottom edge.

Side View Dimensions:

- Overall Length: 184.94
- Overall Thickness: 7.15
- Hole 1 (Top Left): Ø6.00, 82.45 from left edge, 9.55 from top edge.
- Hole 2 (Top Right): Ø3.50, 16.00 from right edge, 9.55 from top edge.
- Hole 3 (Bottom Left): Ø3.50, 82.45 from left edge, 9.55 from bottom edge.
- Hole 4 (Bottom Right): Ø6.00, 16.00 from right edge, 9.55 from bottom edge.

Title Block:

UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETERS		NAME		DATE	
300 = 3.0 3000 = 3.00 30000 = 3.000		DRAWN		08/30/2025	
SURFACE FINISH		CHECKED		TITLE	
DO NOT SCALE DRAWING		APPROVED		BACK WIDTH TOP BHW	
BREAK ALL SHARP EDGES AND REMOVE BURS		MATERIAL		FINISH	
THIRD ANGLE PROJECTION		Aluminum		None	
SCALE		SHEET NO.		REV.	
1:3		A		1 of 1	

This drawing is for the top width cut of the frame going along the printer when facing the direct back of the control panel.

Technical drawing of a Back Height Left (BHL) component. The drawing shows a vertical section (Left) and a horizontal section (Right). Dimensions are in millimeters.

Vertical Section (Left):

- Top flange width: 9.55
- Top flange hole diameter: Ø3.50
- Top flange hole offset: 7.15
- Main body diameter: Ø6.00
- Main body length: 455.88
- Bottom flange diameter: Ø3.50
- Bottom flange offset: 7.15
- Bottom flange thickness: 9.55

Horizontal Section (Right):


- Top flange width: 9.55
- Top flange hole diameter: Ø3.50
- Top flange hole offset: 7.15
- Main body diameter: Ø6.00
- Main body length: 102.45
- Bottom flange diameter: Ø3.50
- Bottom flange offset: 7.15
- Bottom flange thickness: 9.55

Table:

UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN MILLIMETERS		NAME		DATE	
1/2" = 1"	1:1	DESIGN	REVISIONS	DATE	
3/4" = 1"	1:1	CHECKED			
1" = 1"	1:1	APPROVED			
DO NOT SCALE DRAWING					
BREAK ALL SHARP EDGES AND REMOVE BURRS					
THERMAL PROTECTION					
MATERIAL		FINISH		SCALE	
Aluminum		None		1:3	
TITLE				BACK HEIGHT LEFT BHL	
LDR				REV	
A				1	
SCALE				1:3	
REVISION				1 of 1	

This drawing is for the left height cut of the frame going upward when facing the direct back of the control panel.


BACK HEIGHT RIGHT

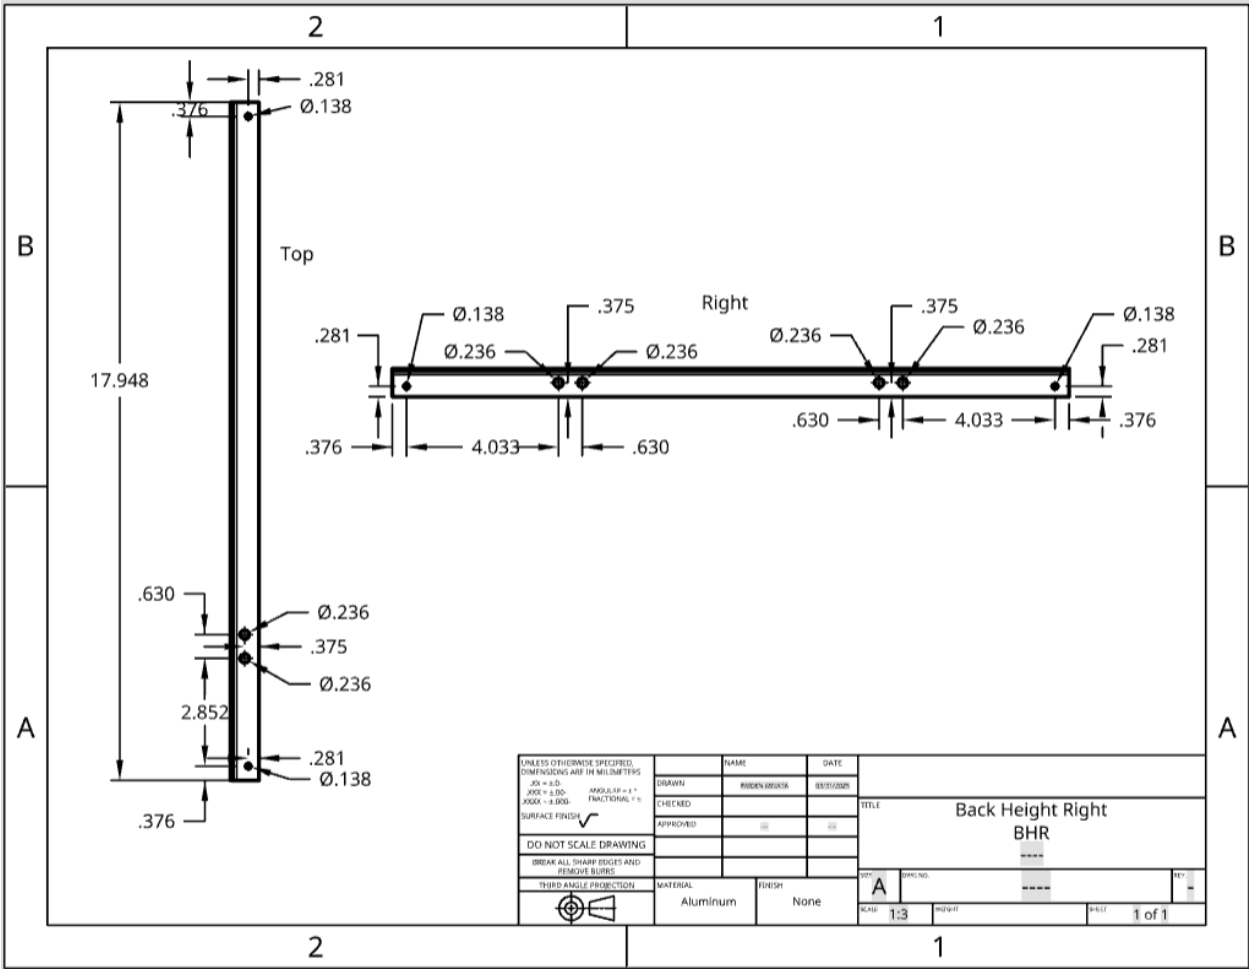

This drawing is for the right height cut of the frame going upward when facing the direct back of the control panel.


FRONT CORNER ASSEMBLY

BOTTOM CORNERS

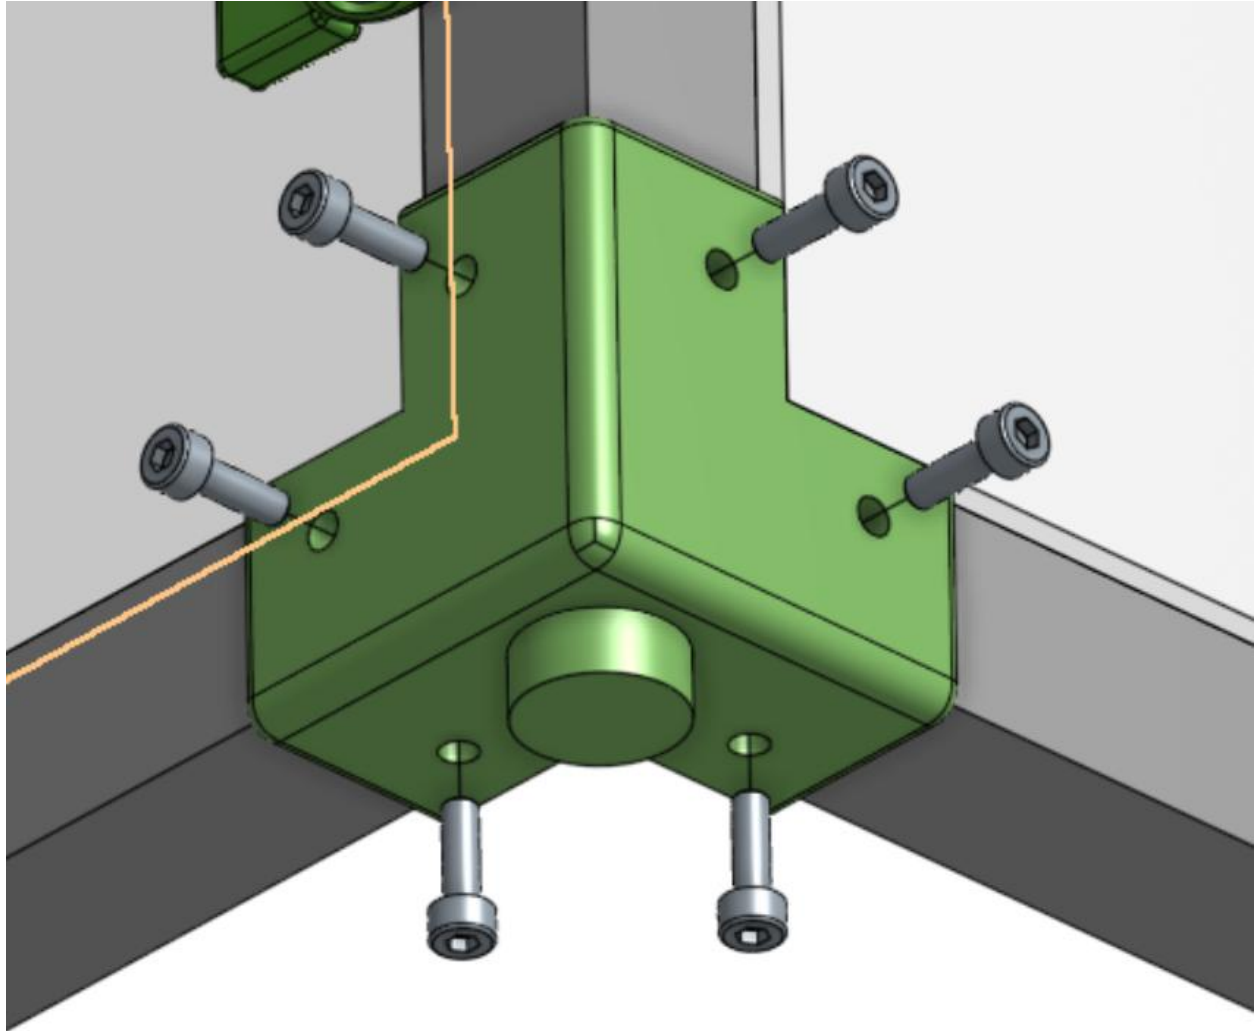

Acquire the bottom corner parts and insert the angled aluminum into the designed slots. Then screw in the bolts with their assigned nuts.


TOP CORNERS

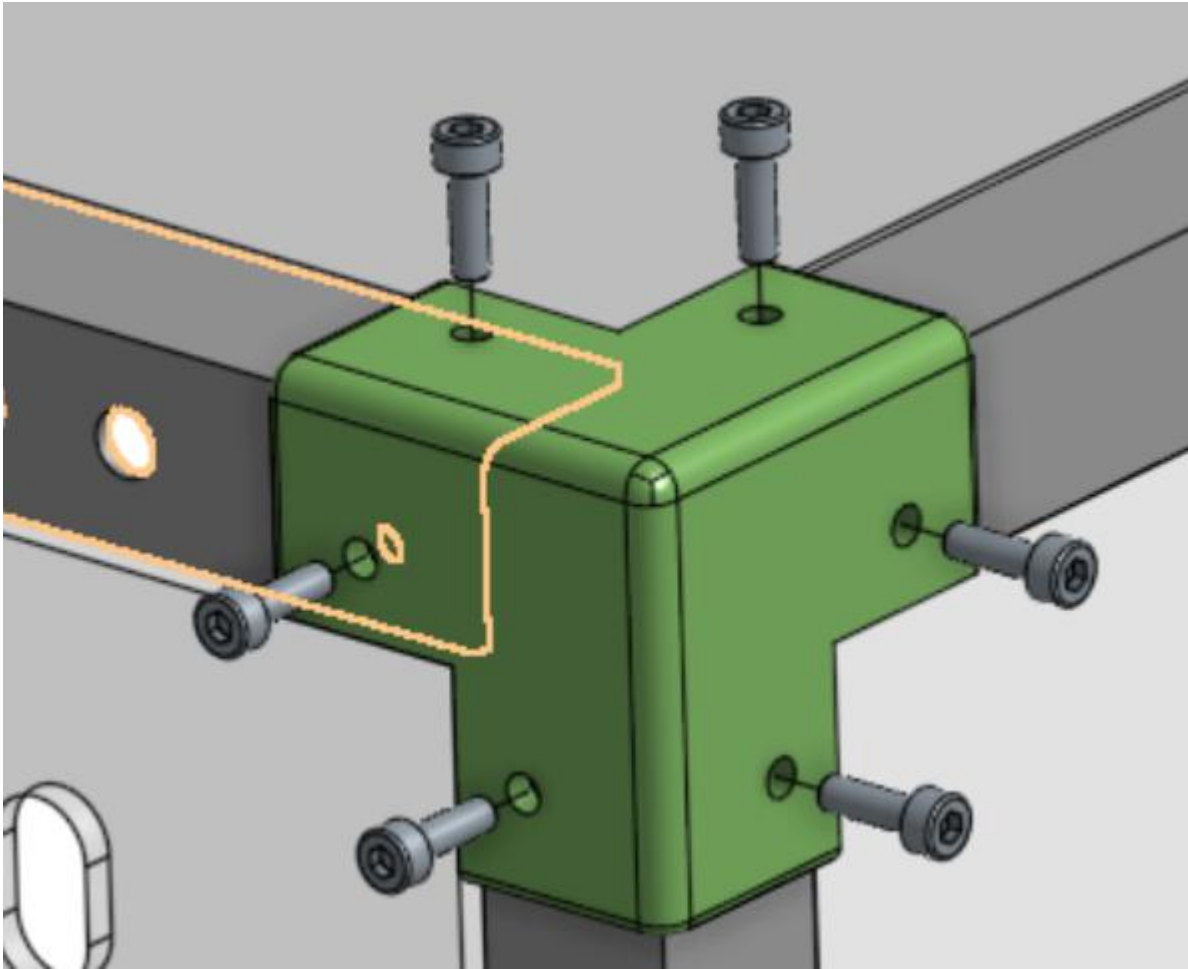

Acquire the top corner parts and insert the angled aluminum into the designed slots. Then screw in the bolts with their assigned nuts.


BACK CORNER ASSEMBLY

BOTTOM CORNERS

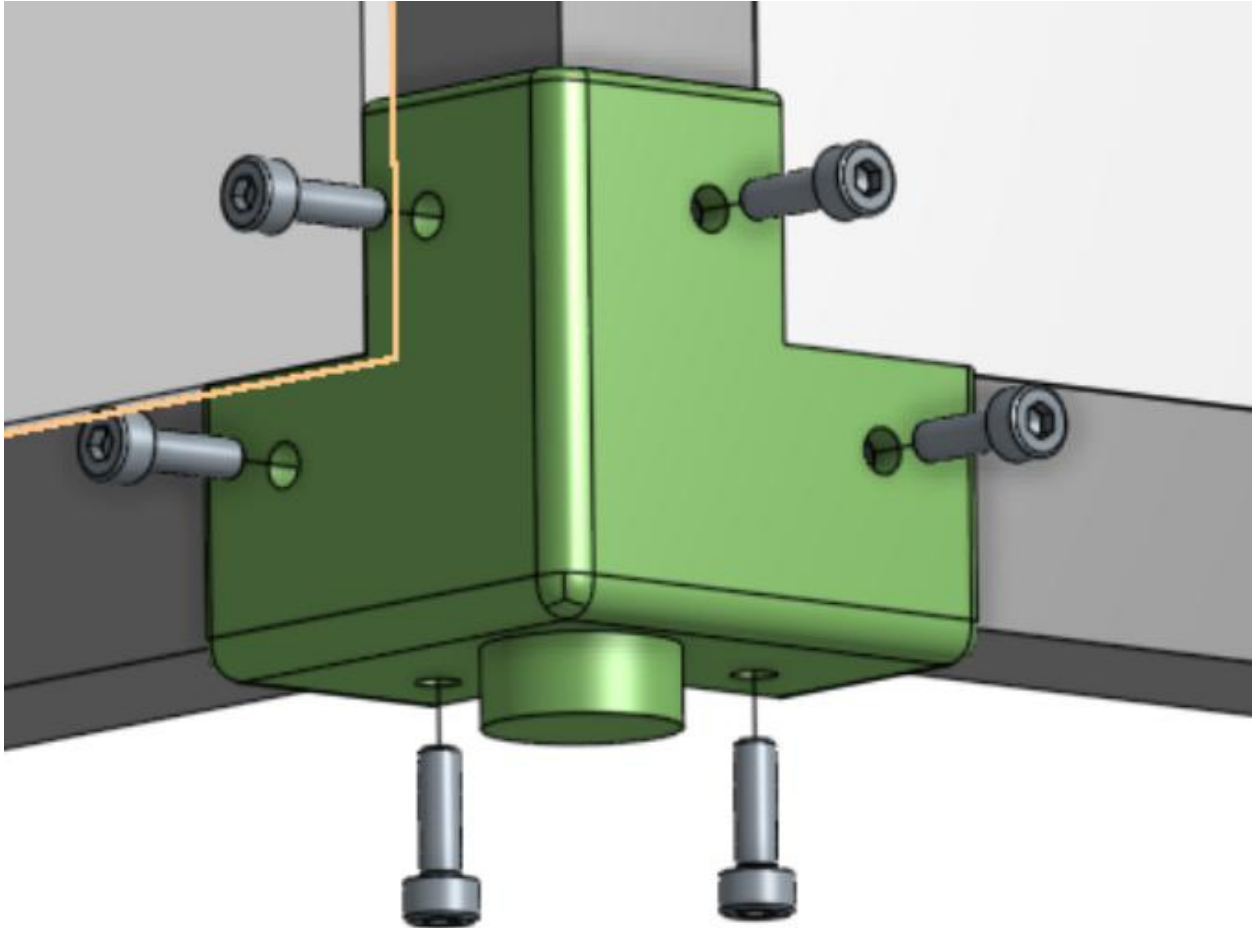


Acquire the bottom corner parts and insert the angled aluminum into the designed slots. Then screw in the bolts with their assigned nuts.

TOP CORNERS

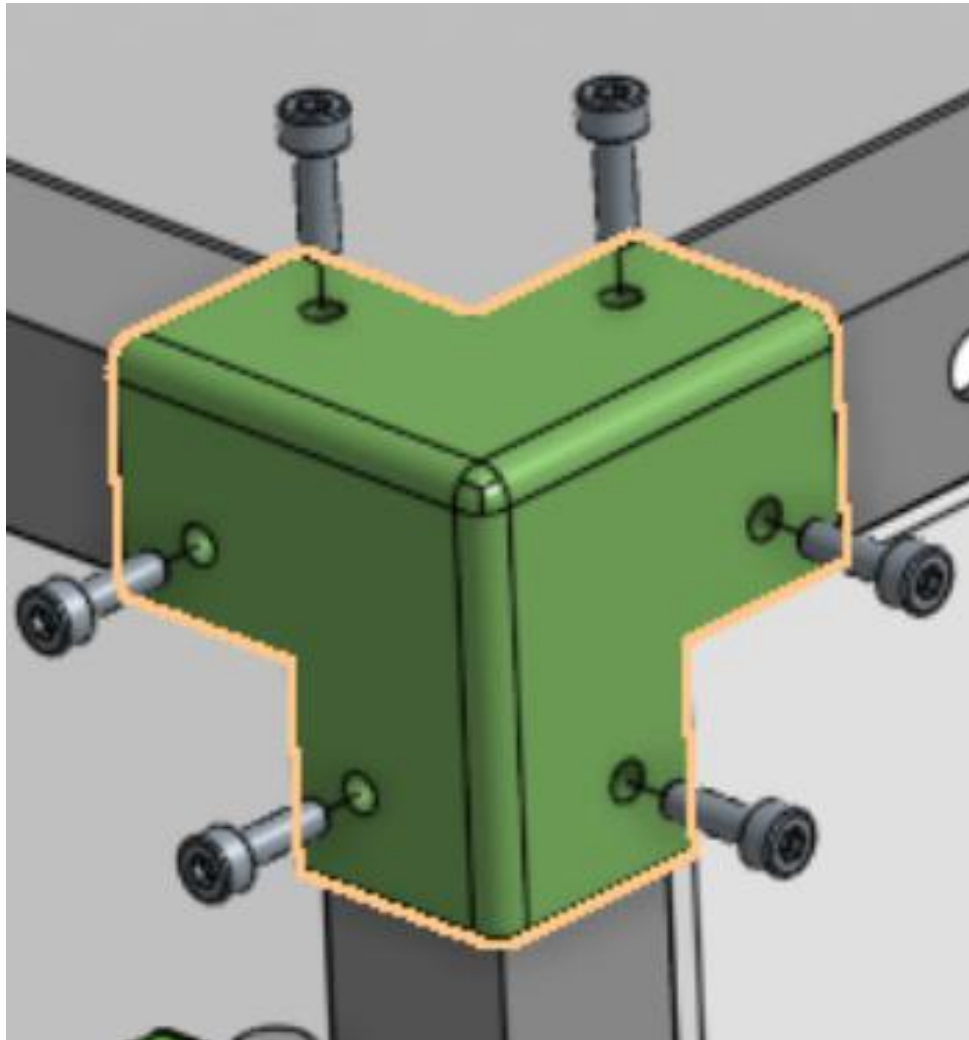


Acquire the top corner parts and insert the angled aluminum into the designed slots. Then screw in the bolts with their assigned nuts.

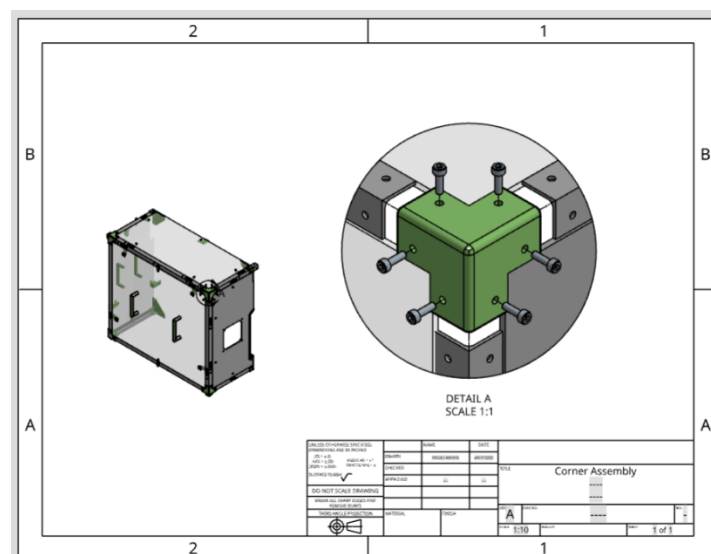


PTG PLASTIC PANELS

Cut and drill holes into the PTG plastic following the drawings below:


FRONT TOP

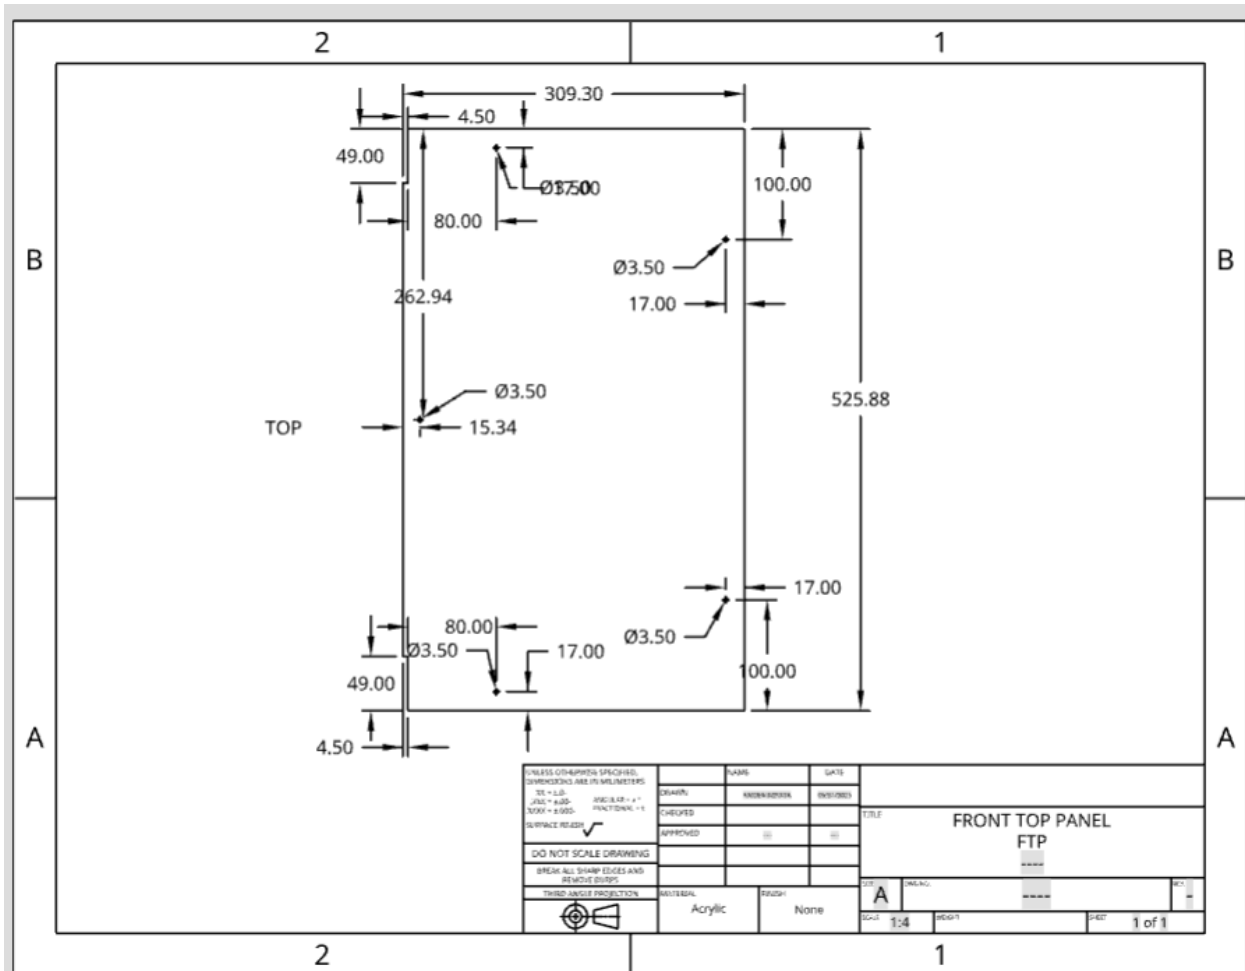

FRONT SIDE

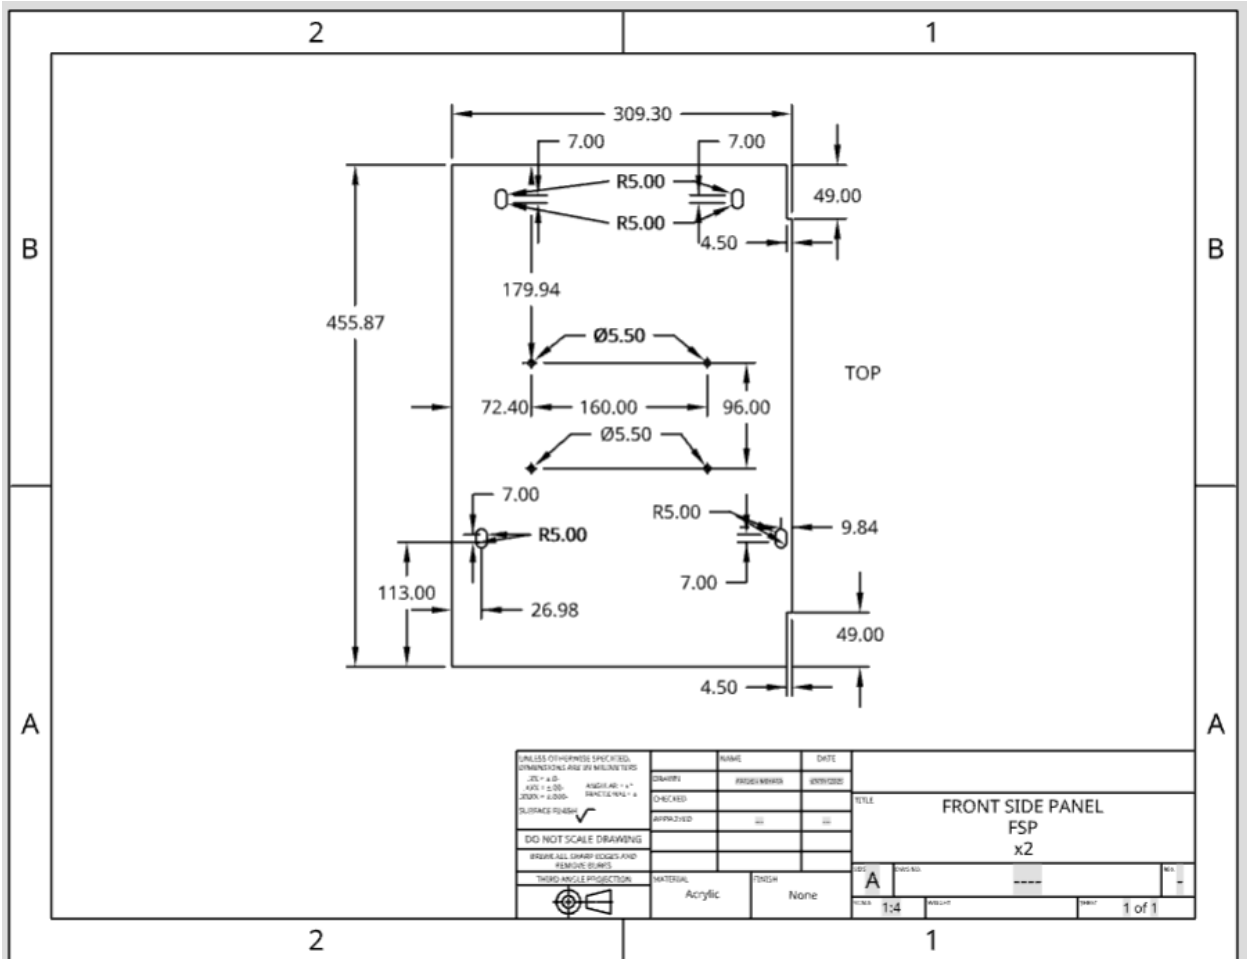


REAR TOP

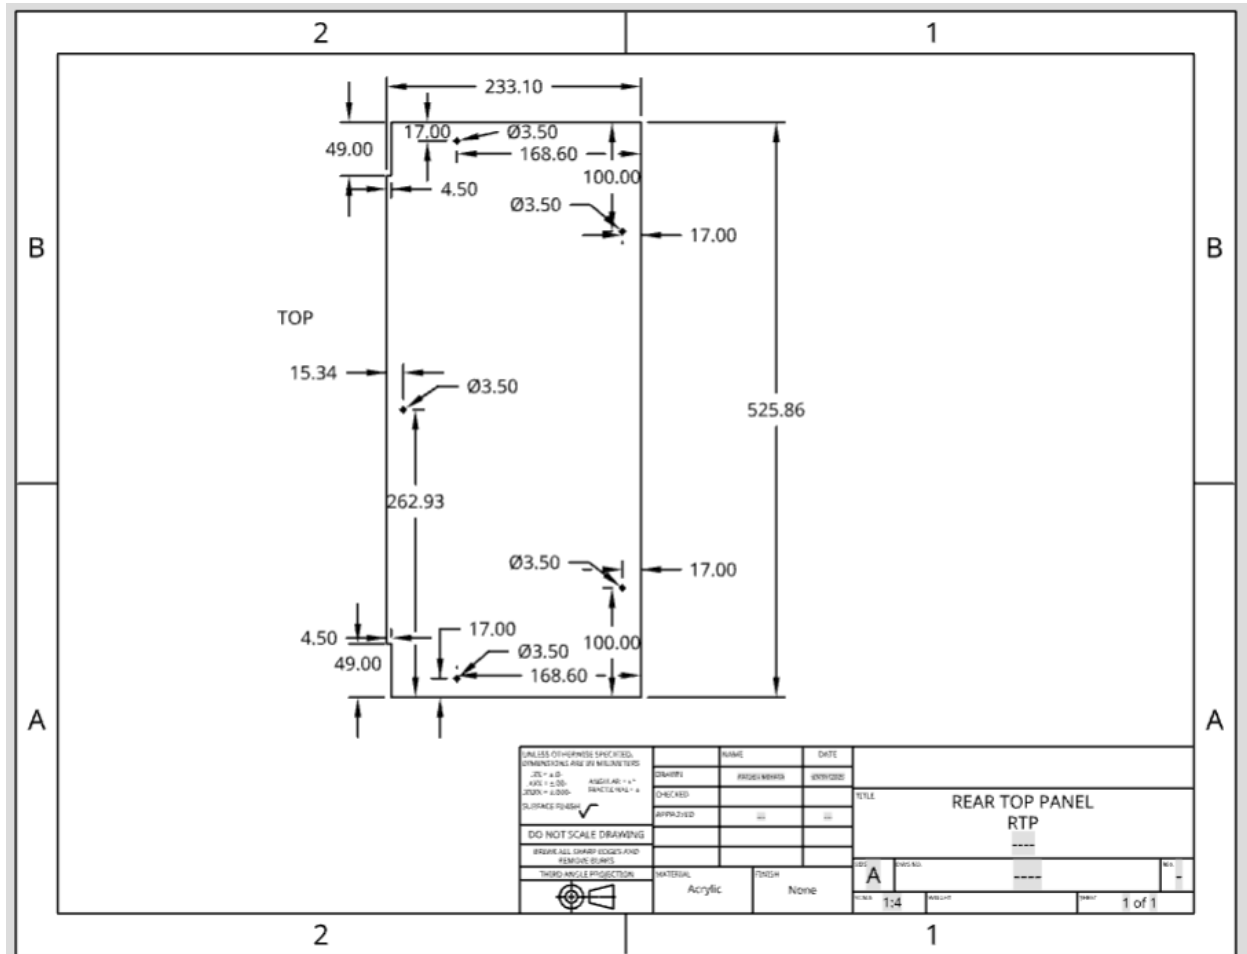


☐ Select ☐ Dilettante Dancer ☐ Dilettante Dancer ☐ DILETTANTE DANCER ☐ Dilettante Dancer Dilettante

LARGE REAR

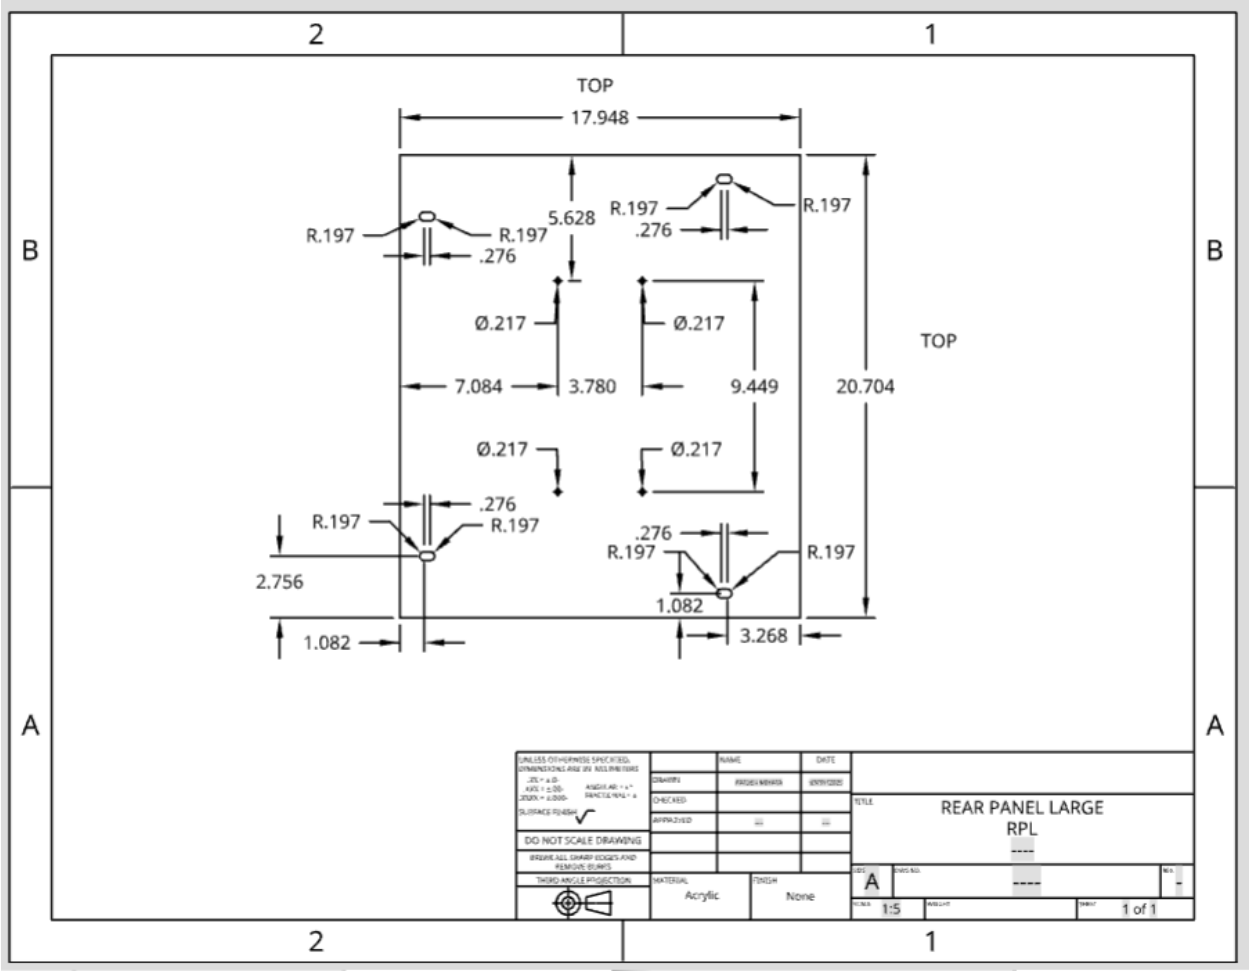


BACK LEFT SIDE

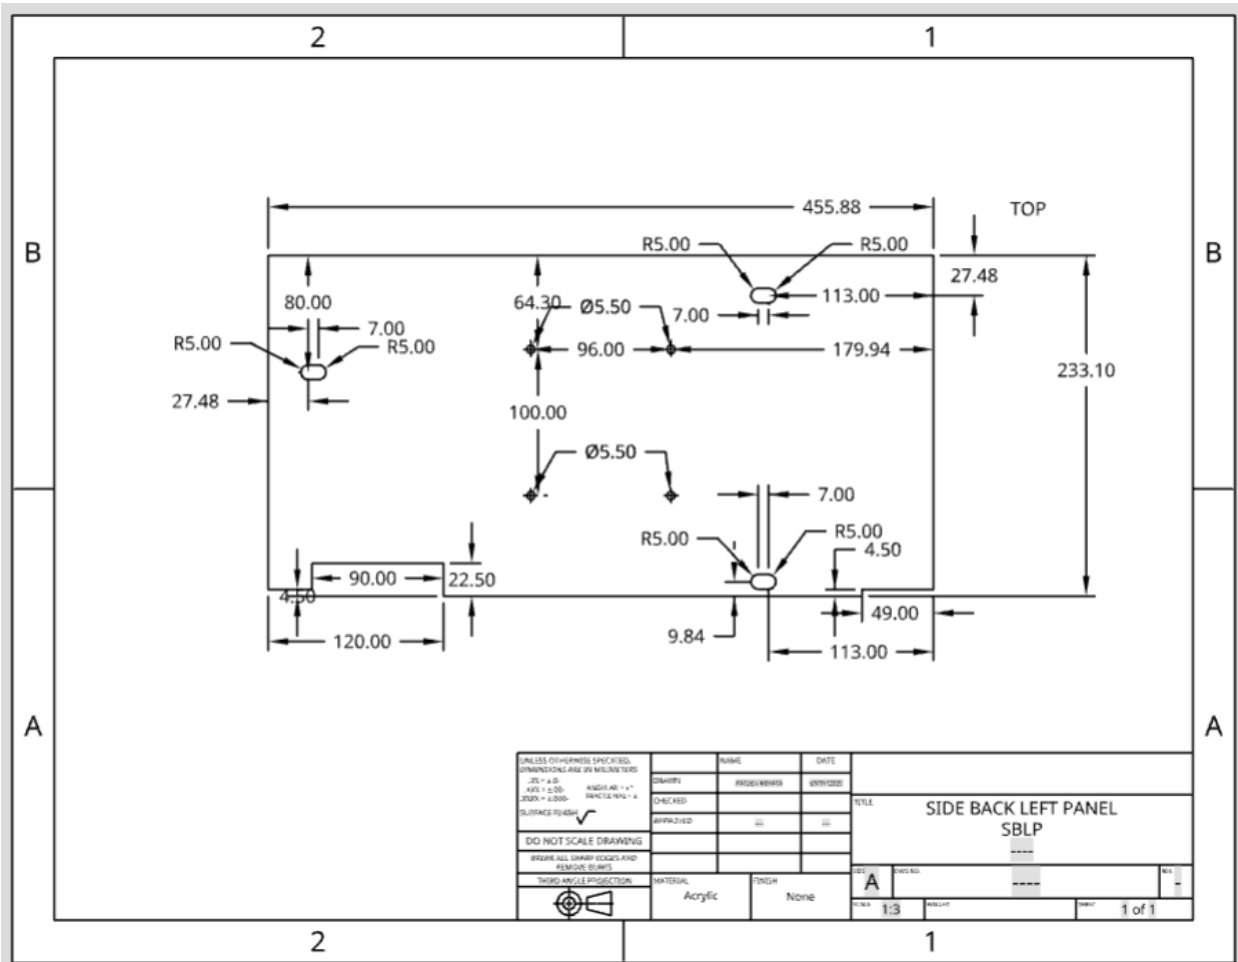


CORROGATED PANELS

PRINTER PANEL


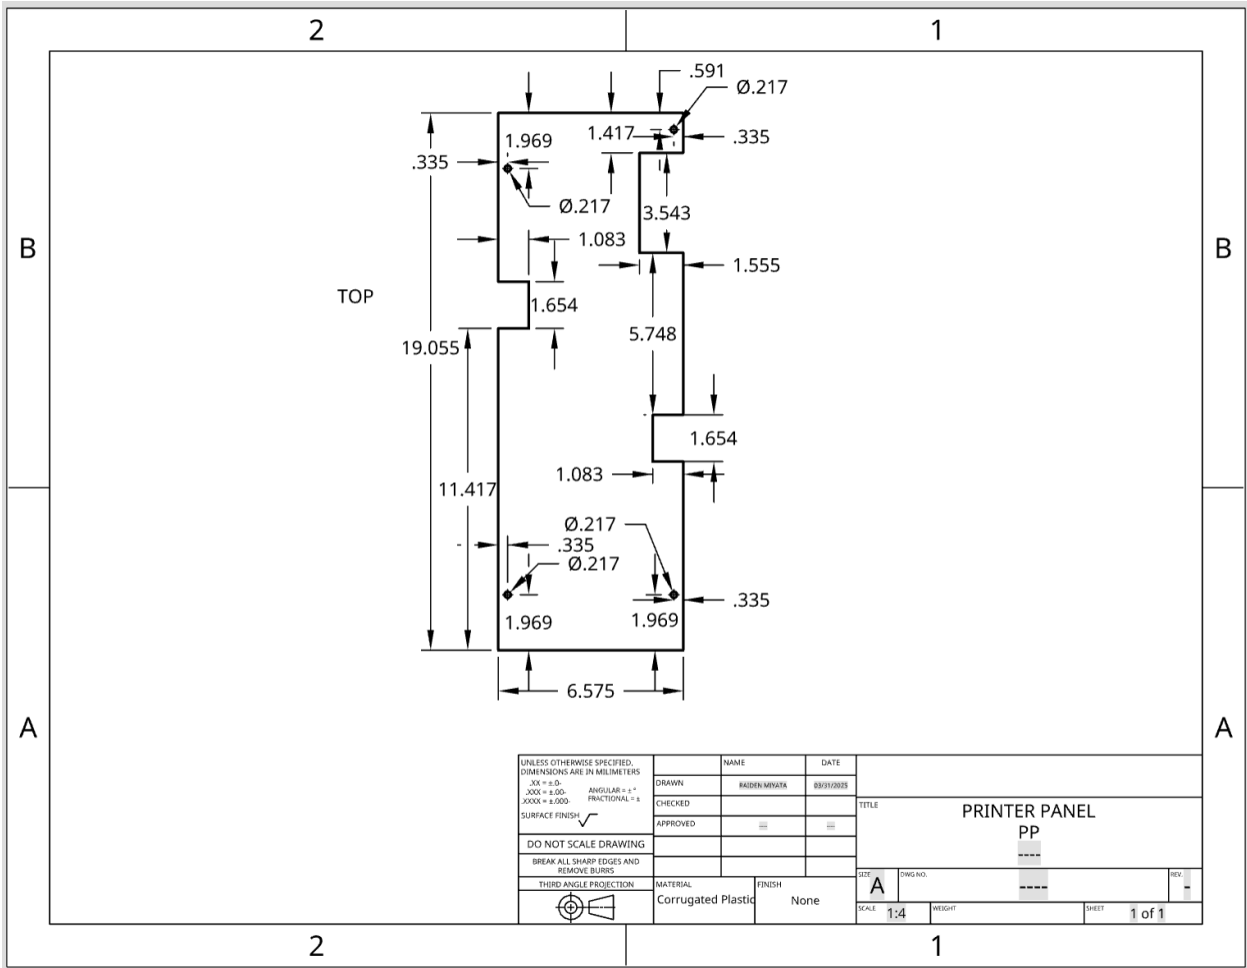




FAN PANEL

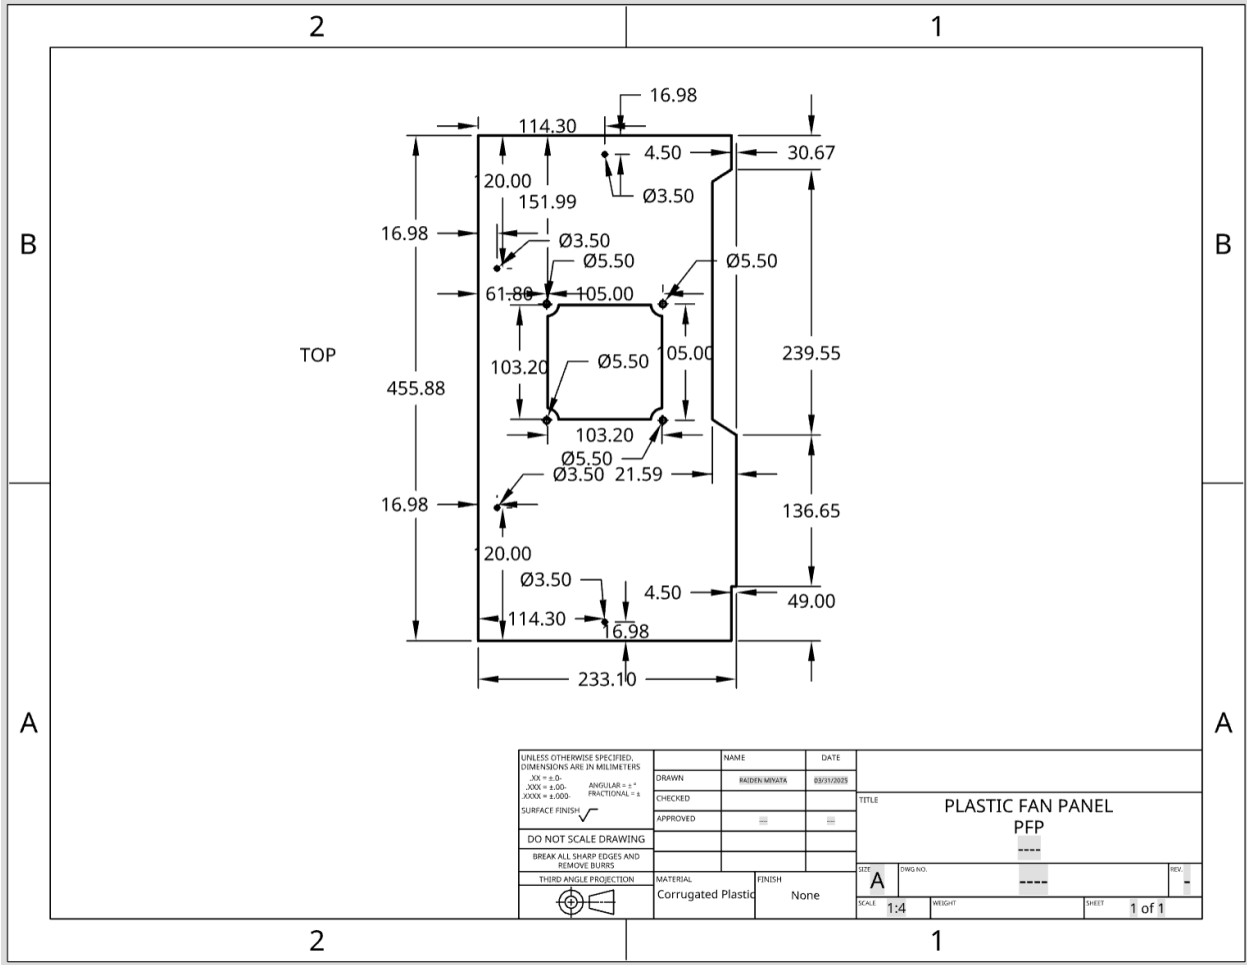


PANEL + FRAME COMPONENTS

Screw in the 3D printed components onto the PTG Panels and aluminum frame as shown in their individual assemblies.

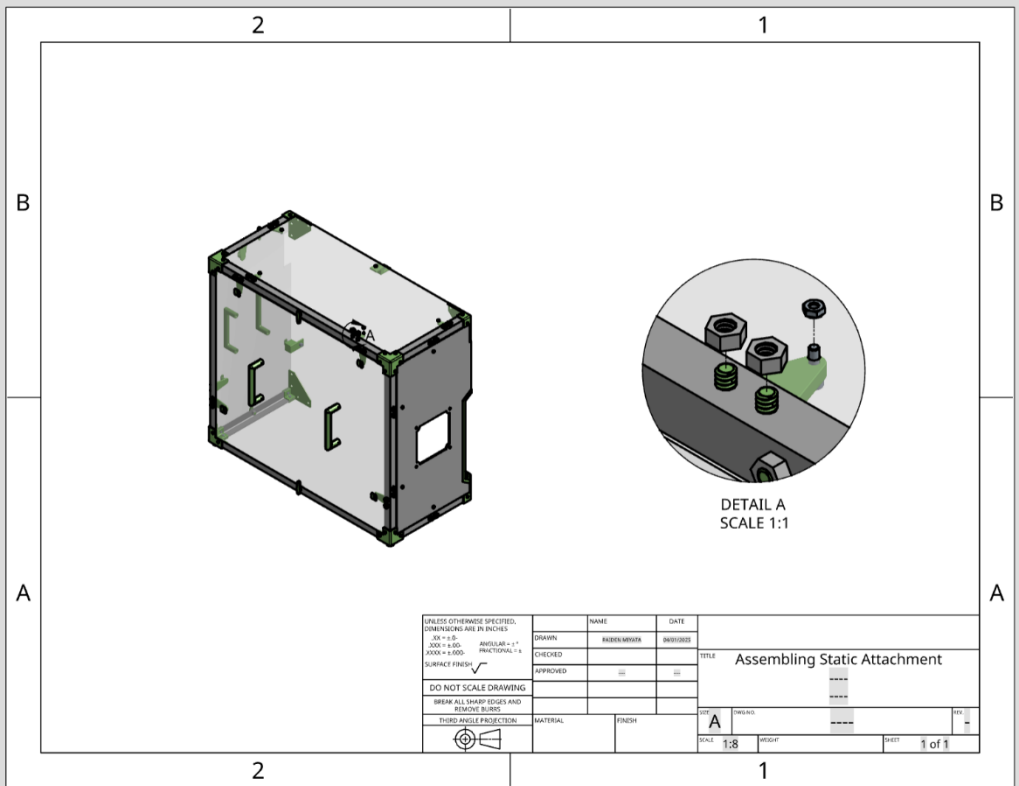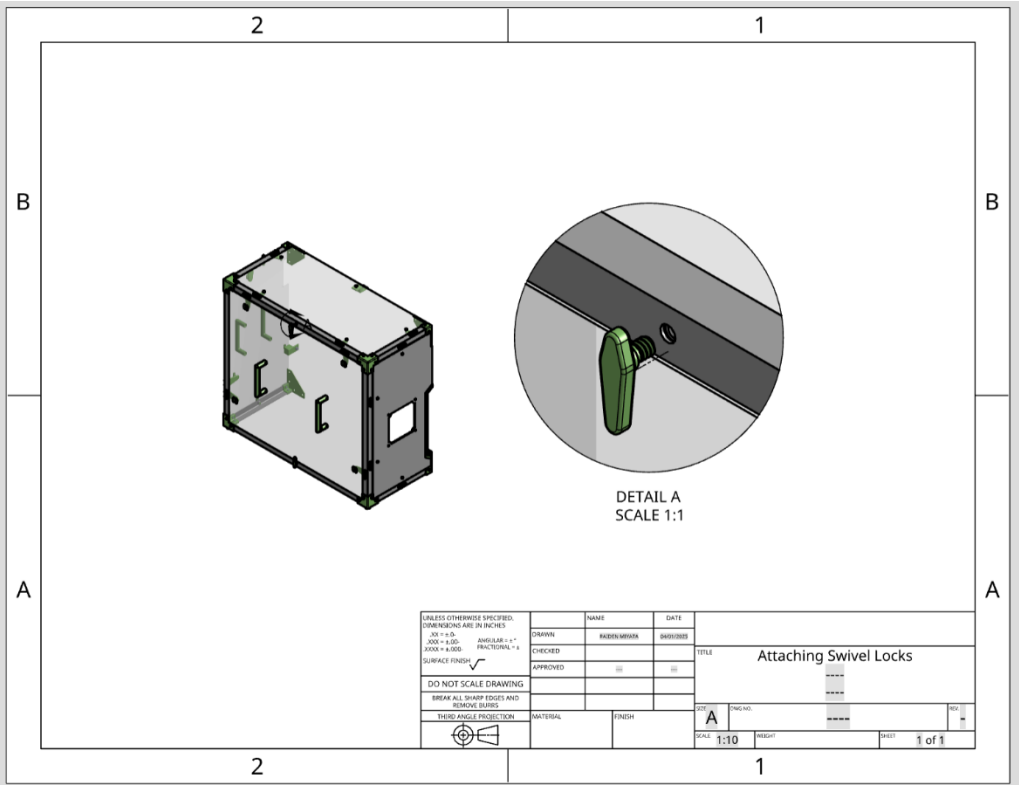

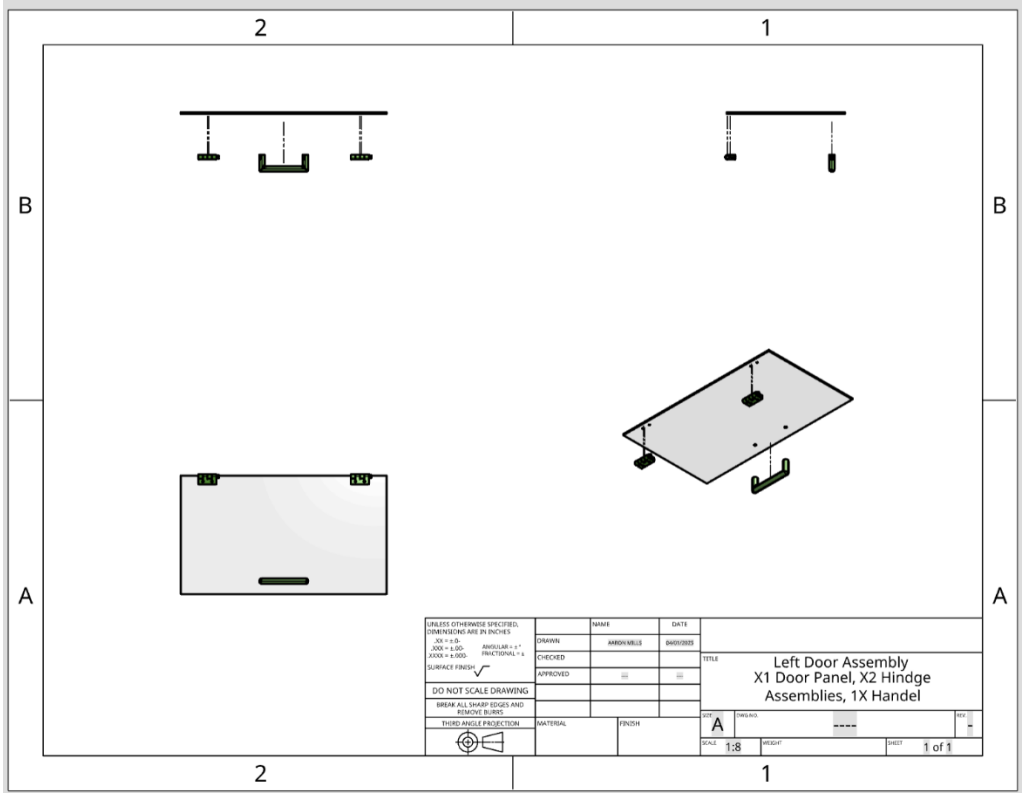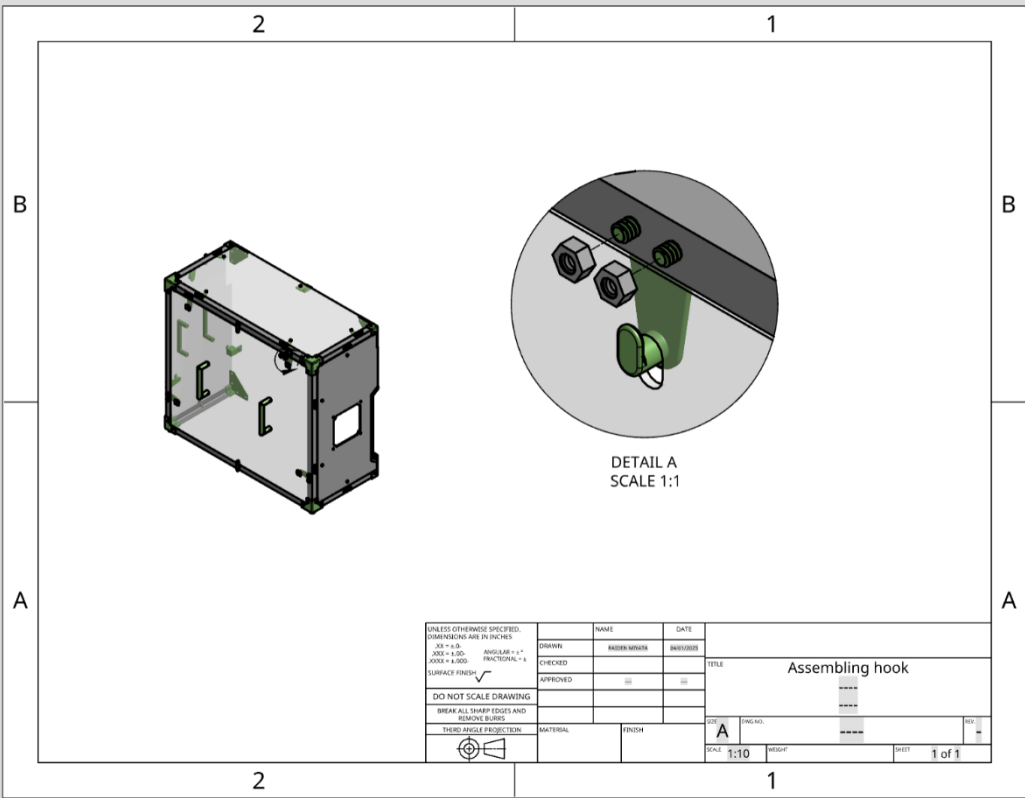

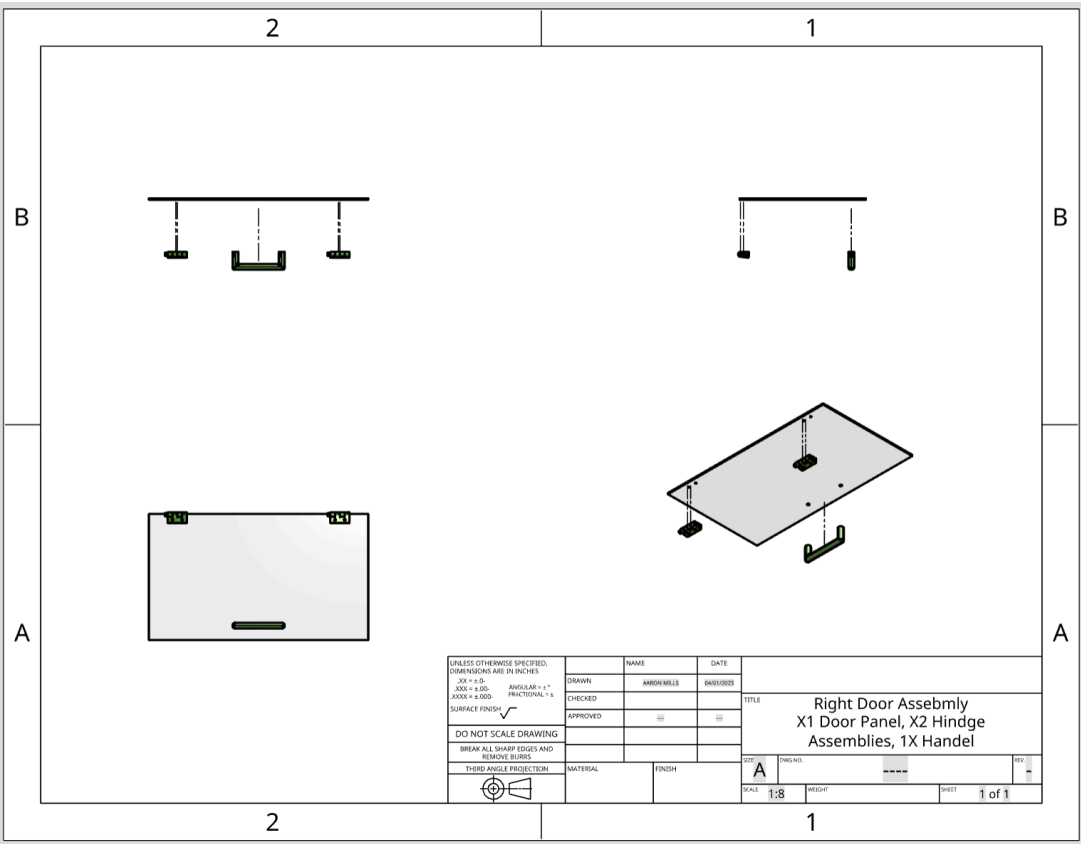

UNLESS OTHERWISE SPECIFIED,
DIMENSIONS ARE IN INCHES

XX = ±.01

XXX = ±.005

XXXX = ±.002

ANGULAR ±.1°

FRACTIONAL ±.1

SURFACE FINISH

DO NOT SCALE DRAWING

BREAK ALL SHARP EDGES AND
REMOVE BURRS

THIRD ANGLE PROJECTION

DRAWN

CHECKED

APPROVED

MATERIAL

FINISH

NAME

AMONHILLS

DATE

08/12/2020

TITLE

Right Door Assebmly
X1 Door Panel, X2 Hinde
Assemblies, 1X Handel

QTY

1

DWG NO.

REV

1

SCALE

1:8

WEIGHT


SHEET

1 of 1

DIRECT PRINTER ATTACHMENT


BOTTOM ATTATCHMENT BRACKETS

First attach the brackets to the printer and screw in place, then insert the aluminum frame into the slot and screw that aswell.

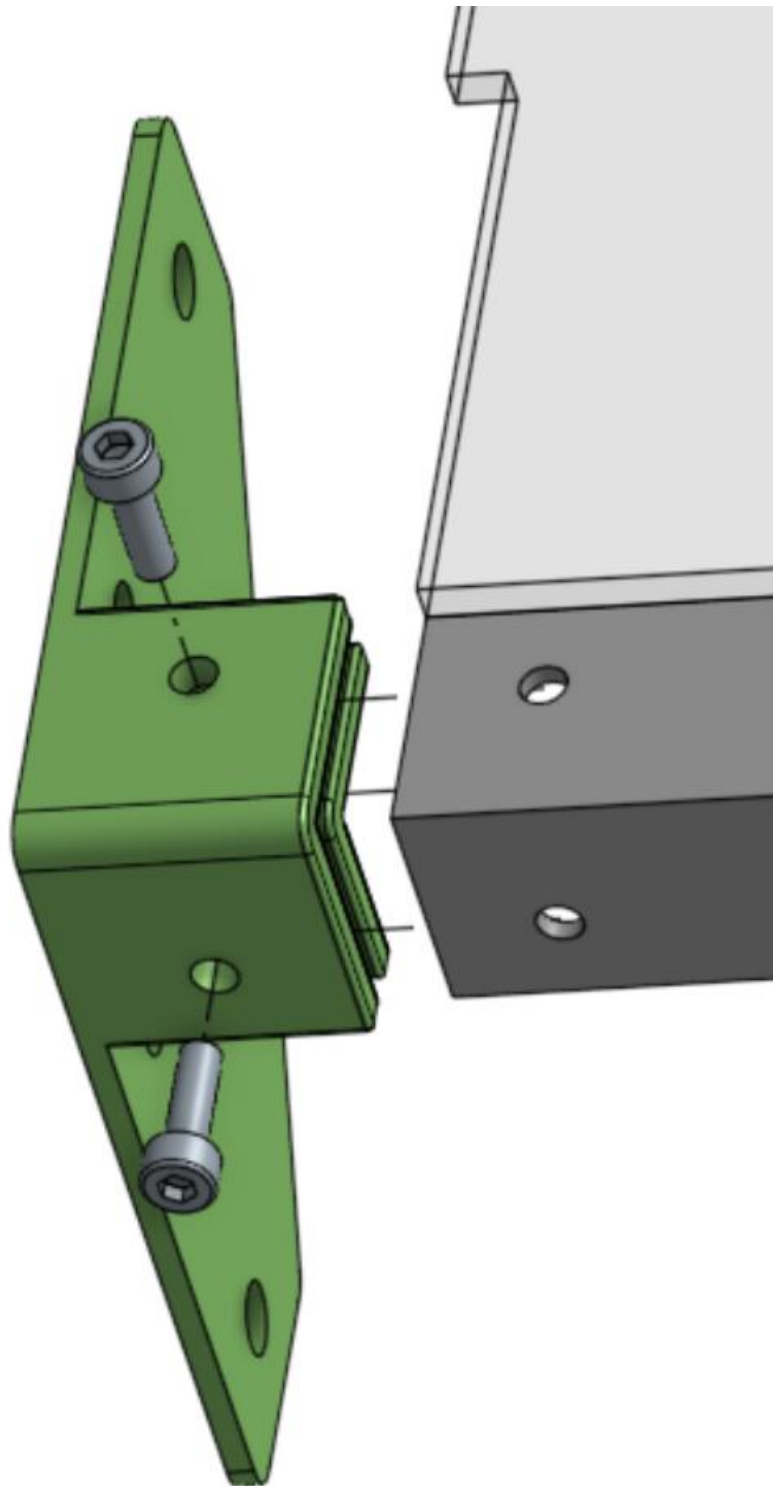


TOP ATTATCHMENT BRACKETS


First attach the brackets to the printer and screw in place, then insert the aluminum frame into the slot and screw that aswell.

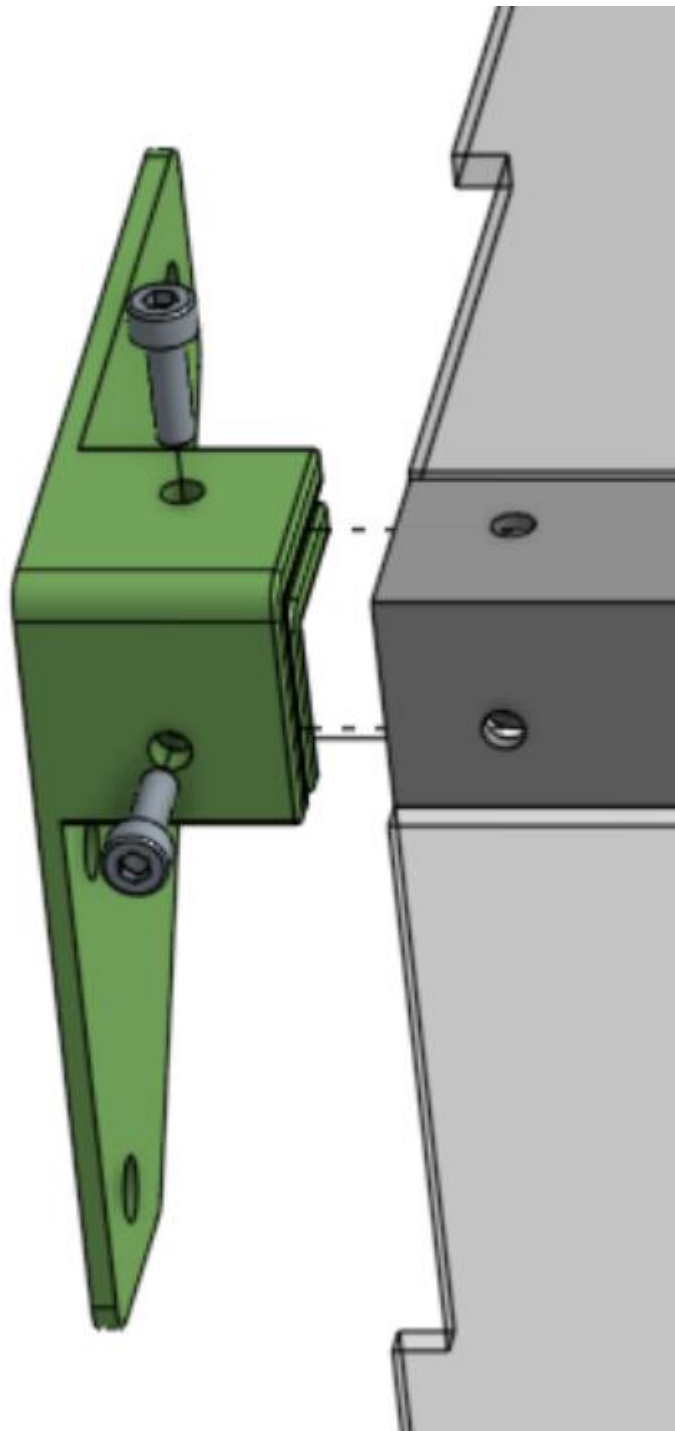


DIRECT PRINTER ATTACHMENT

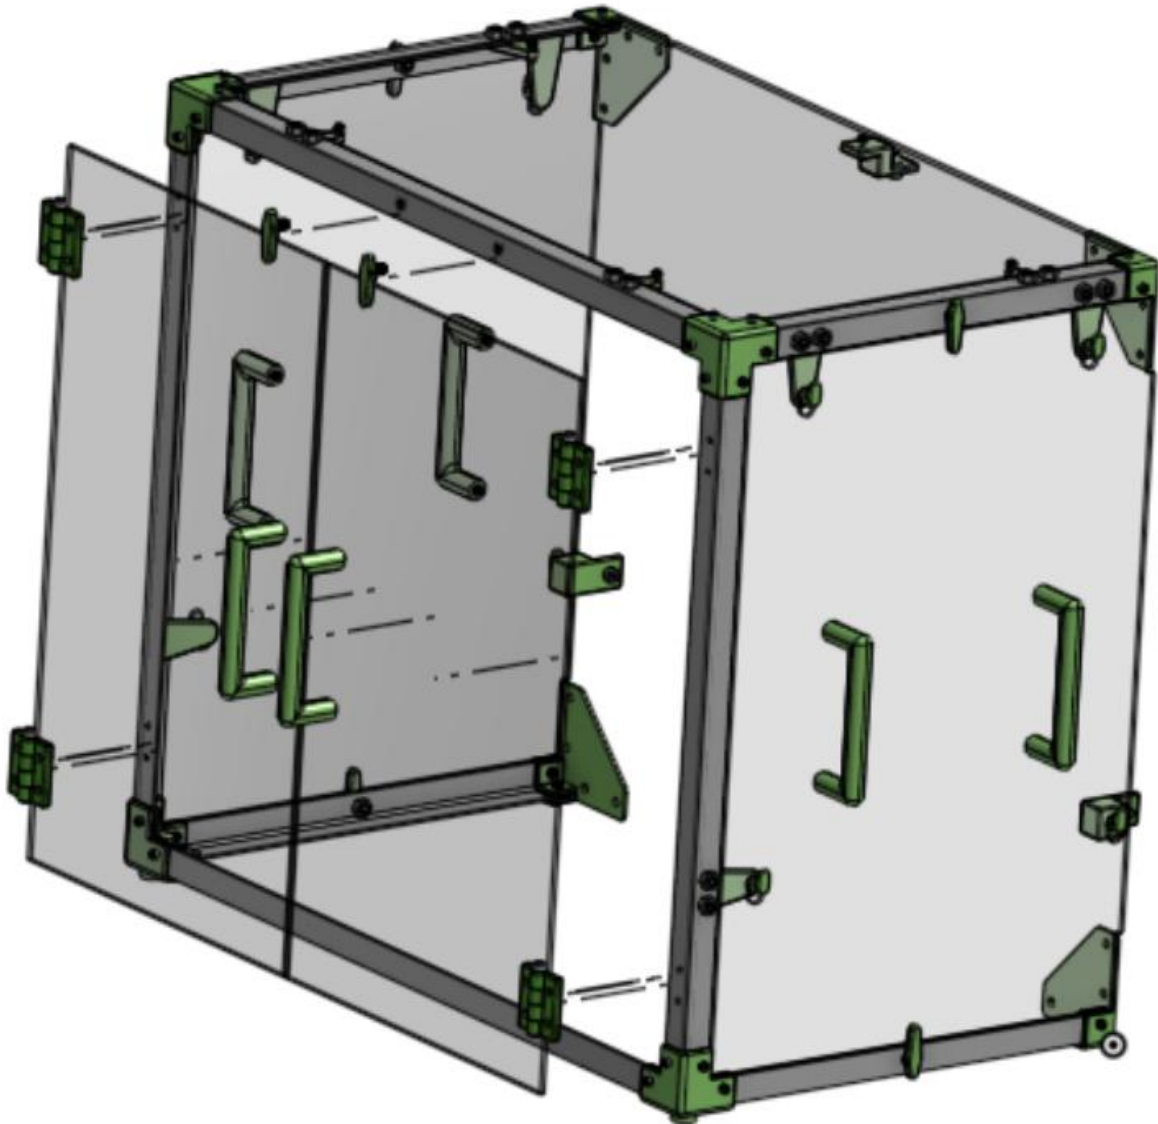


Using the holes attach the door assemblies to the printer by attaching the hinges to the doors then to their respective holes in the front frame assembly

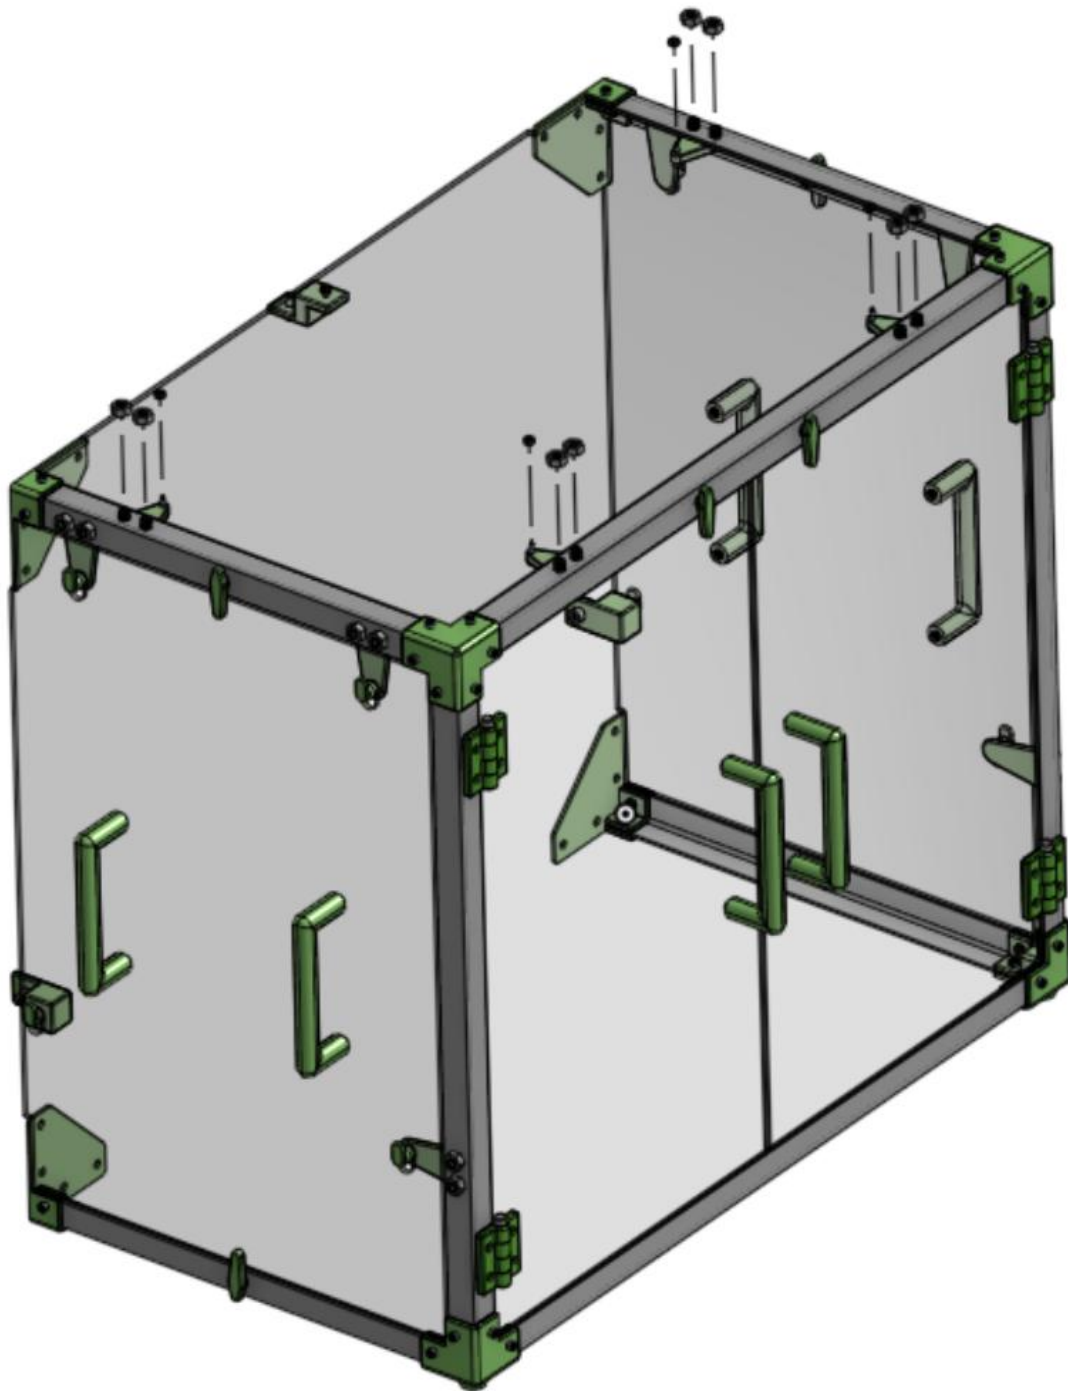


First attach the static attachment brackets using the 3d printed nuts then place the top panel front resting on them. Then using the respective nuts and bolts attach the panel to the frame

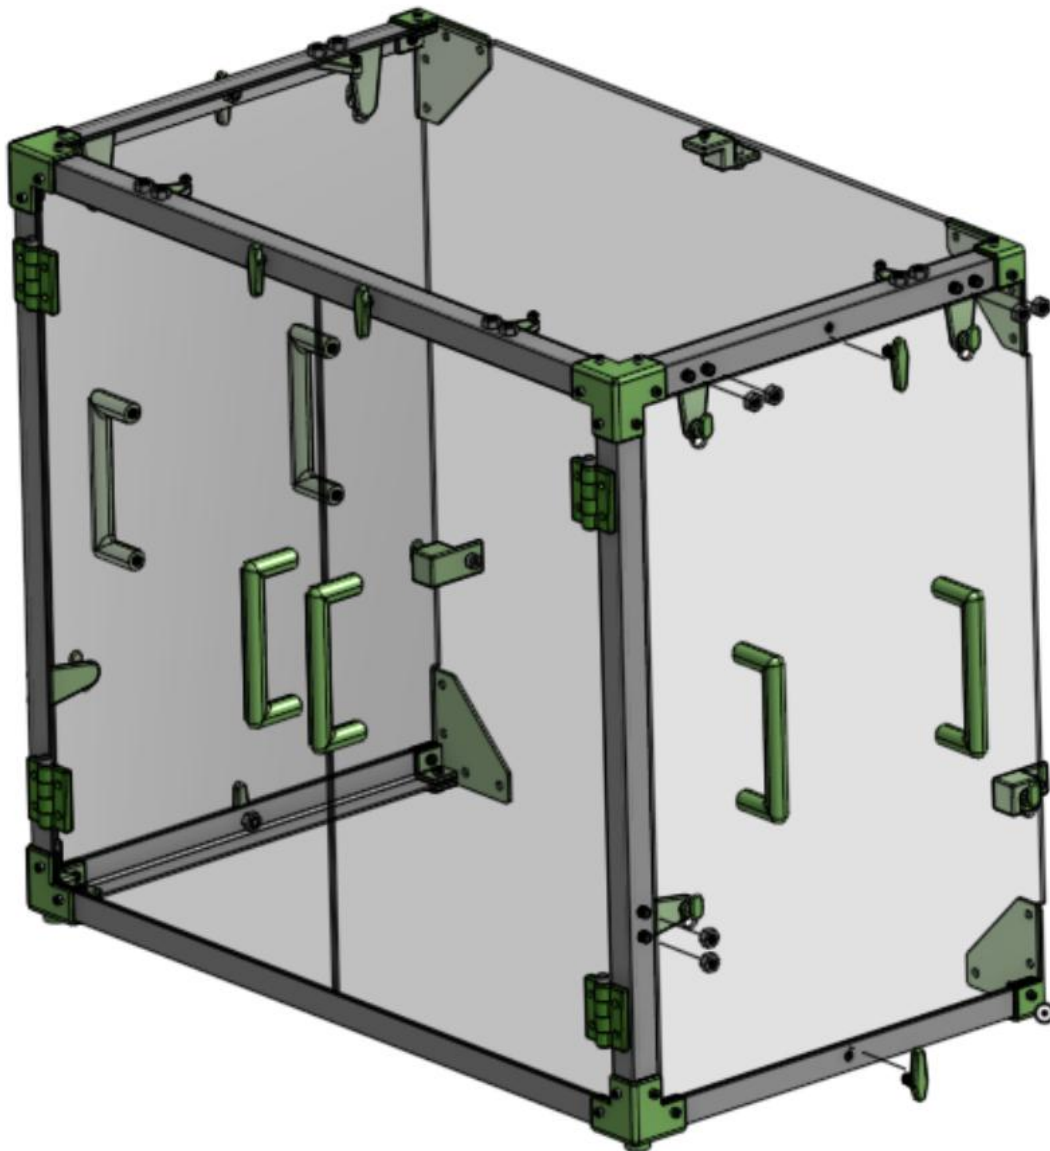


Attach all the hook and the two swivel locks to the frame using the 3d printed nuts.

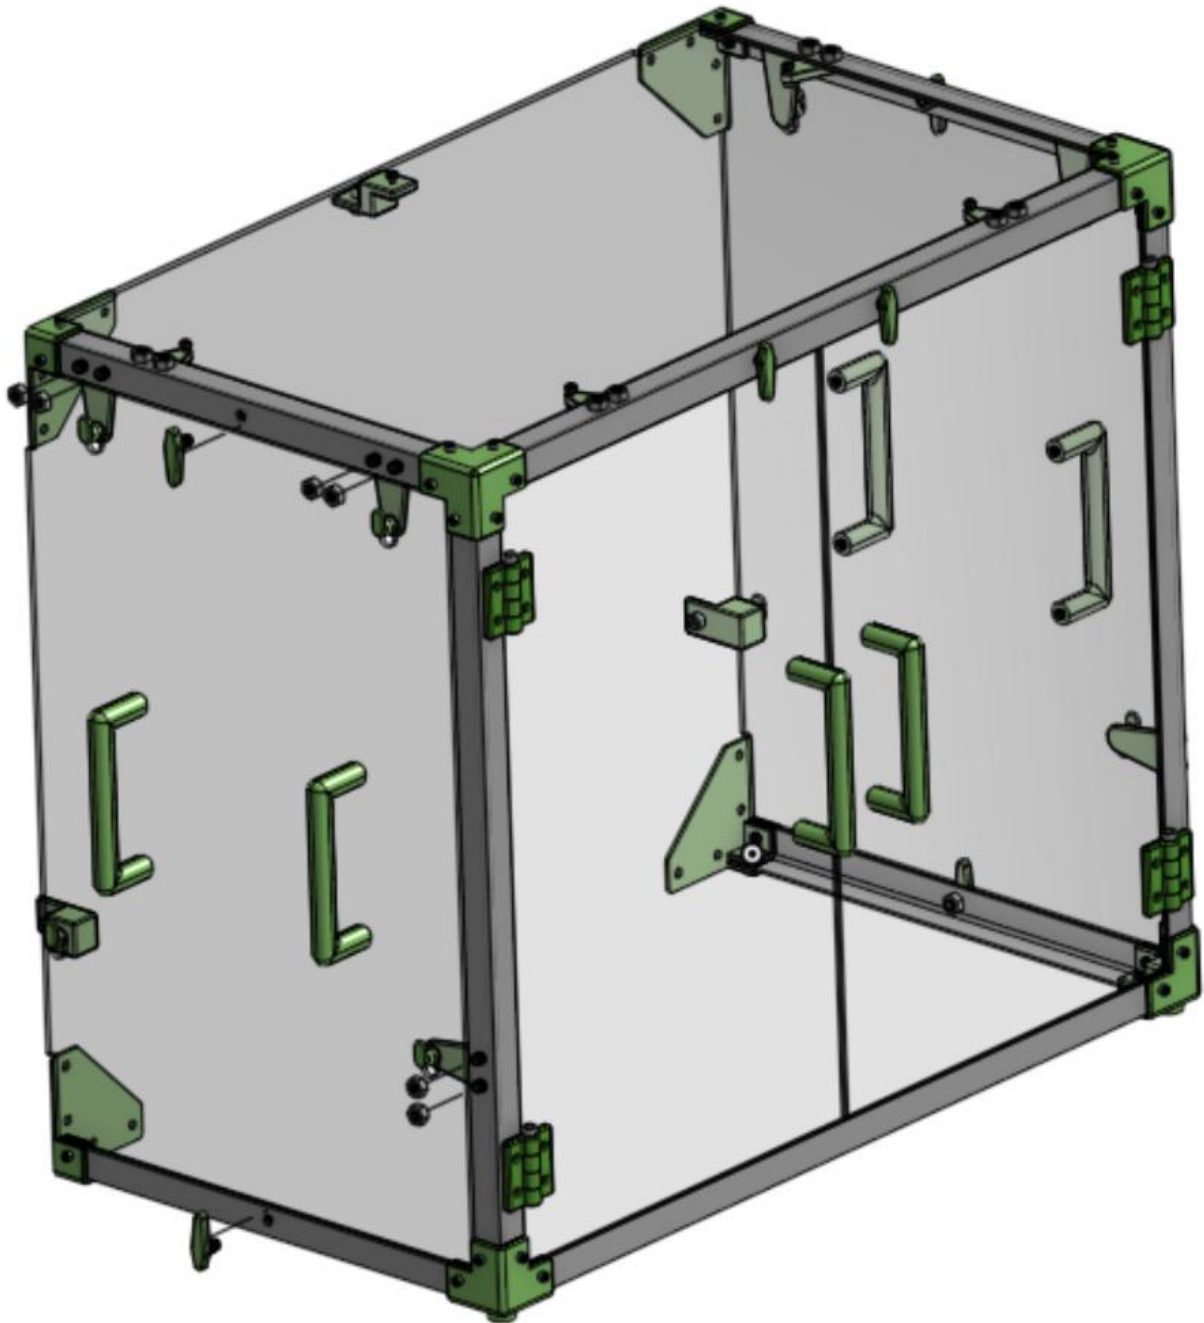


Attach all the hook and the two swivel locks to the frame using the 3d printed nuts.

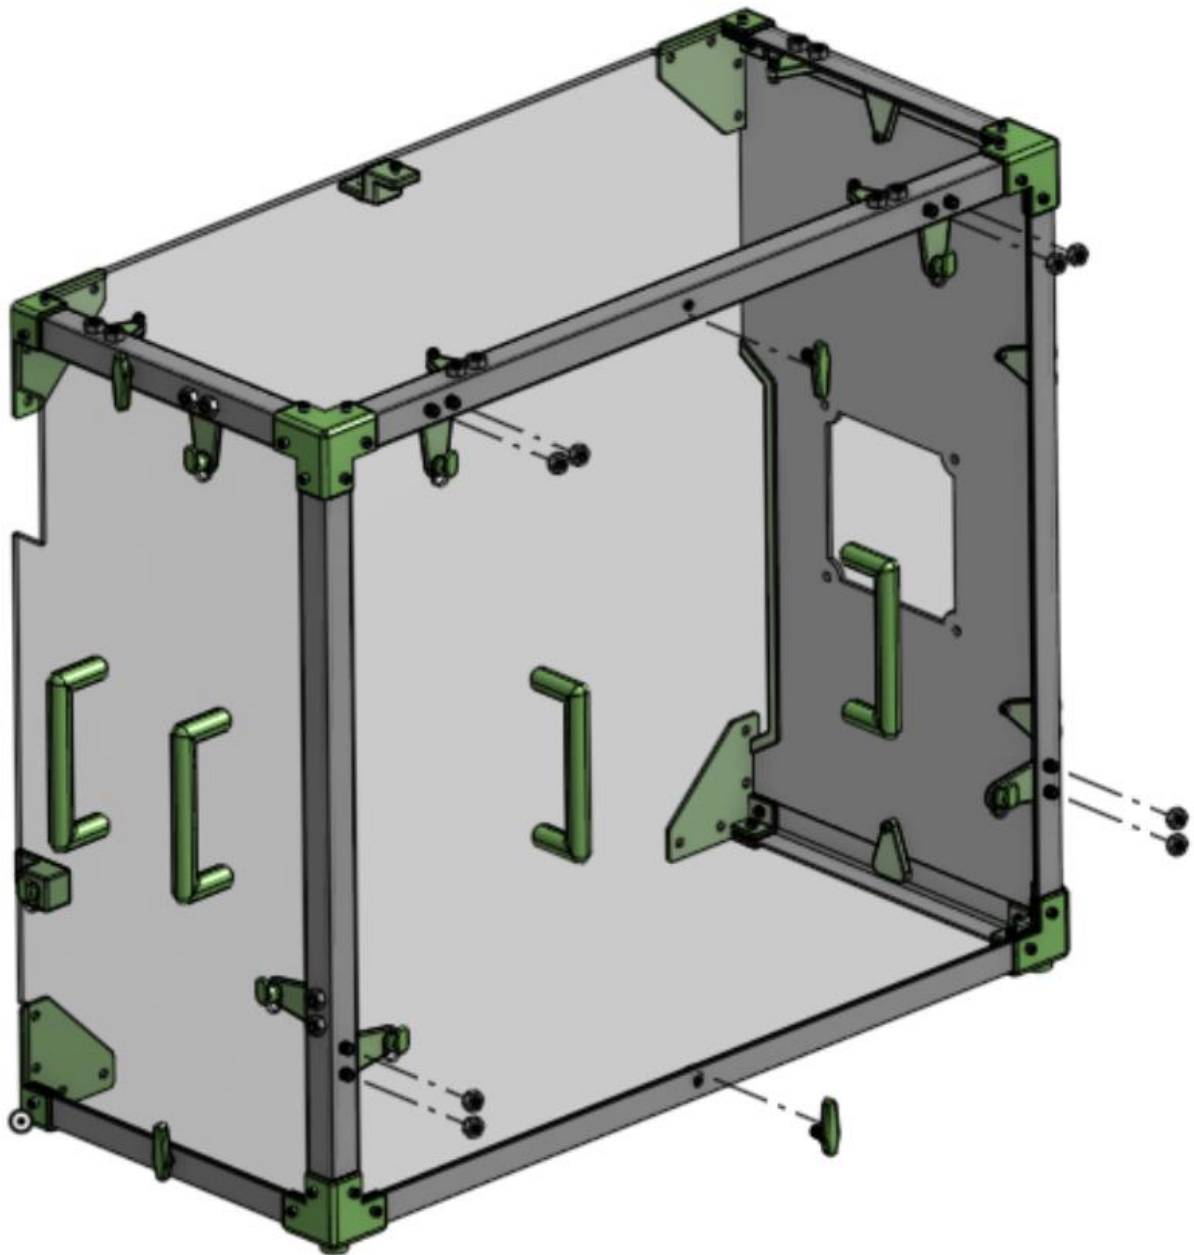


For the Large back panel attach all the hooks and swivel locks using the 3d printed nuts.

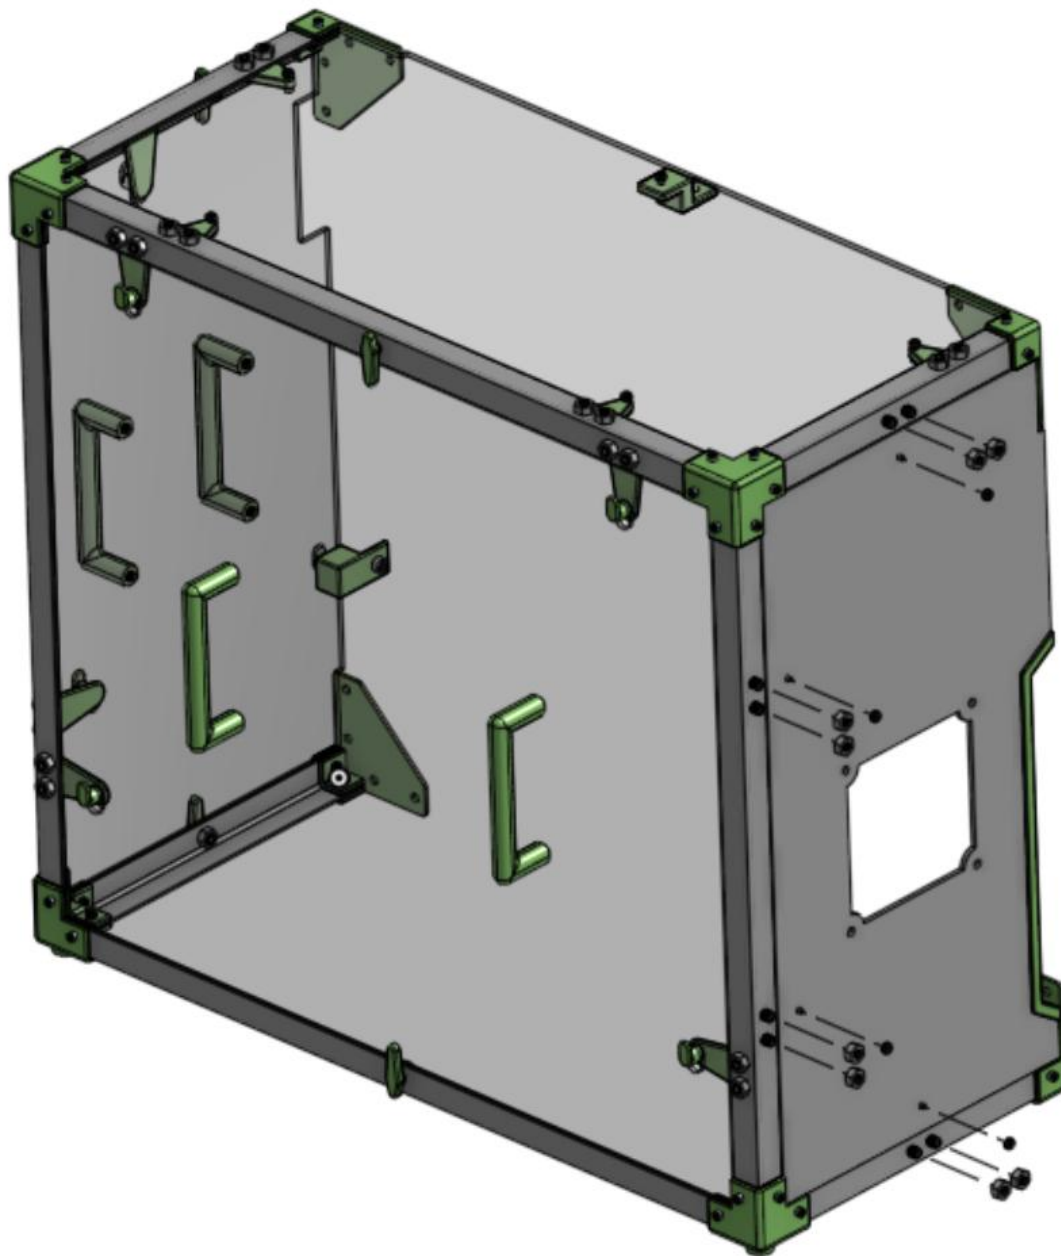


Using the static attachment brackets use the 3d printed nuts to attach them to the frame then place the panel resting against them. Then use the allocated nuts and bolts to attach the panel to the brackets and frame.

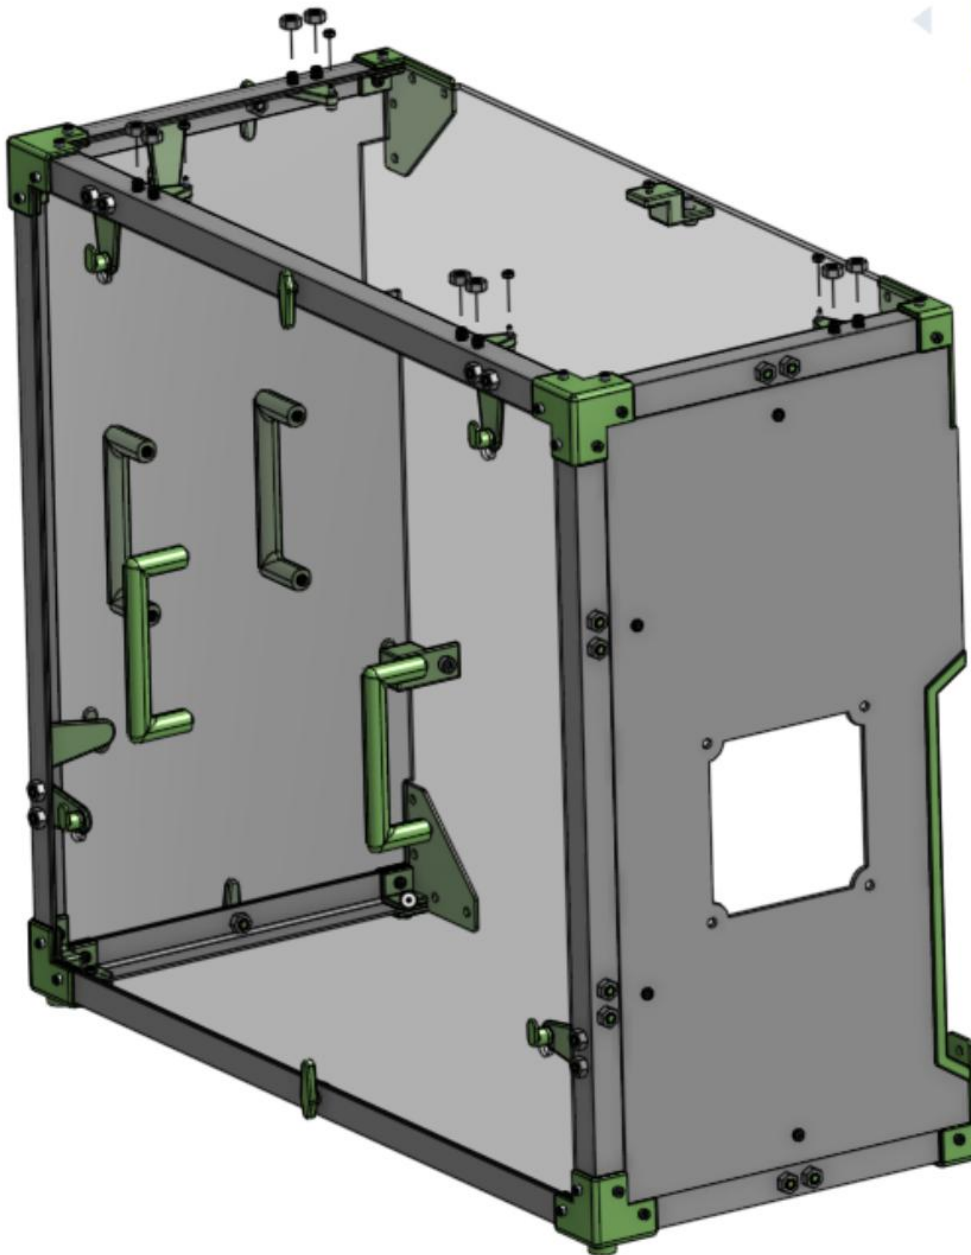

First attach the static attachment brackets using the 3d printed nuts then place the top panel front resting on them. Using the respective nuts and bolts, attach the panel to the frame.

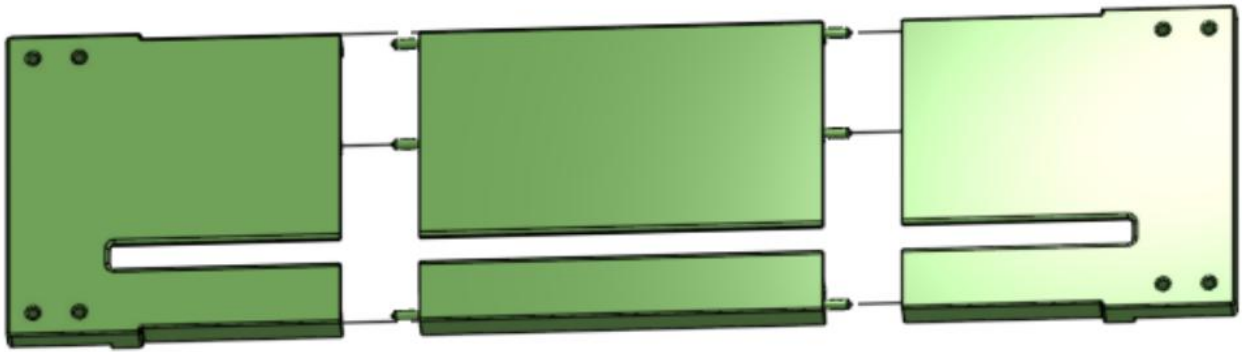

Using the top parts place the dowels with the holes of the Top centre piece then attach the left and right piece as shown in the photo. The pieces should friction fit however if the fitment is too loose you may always add glue.

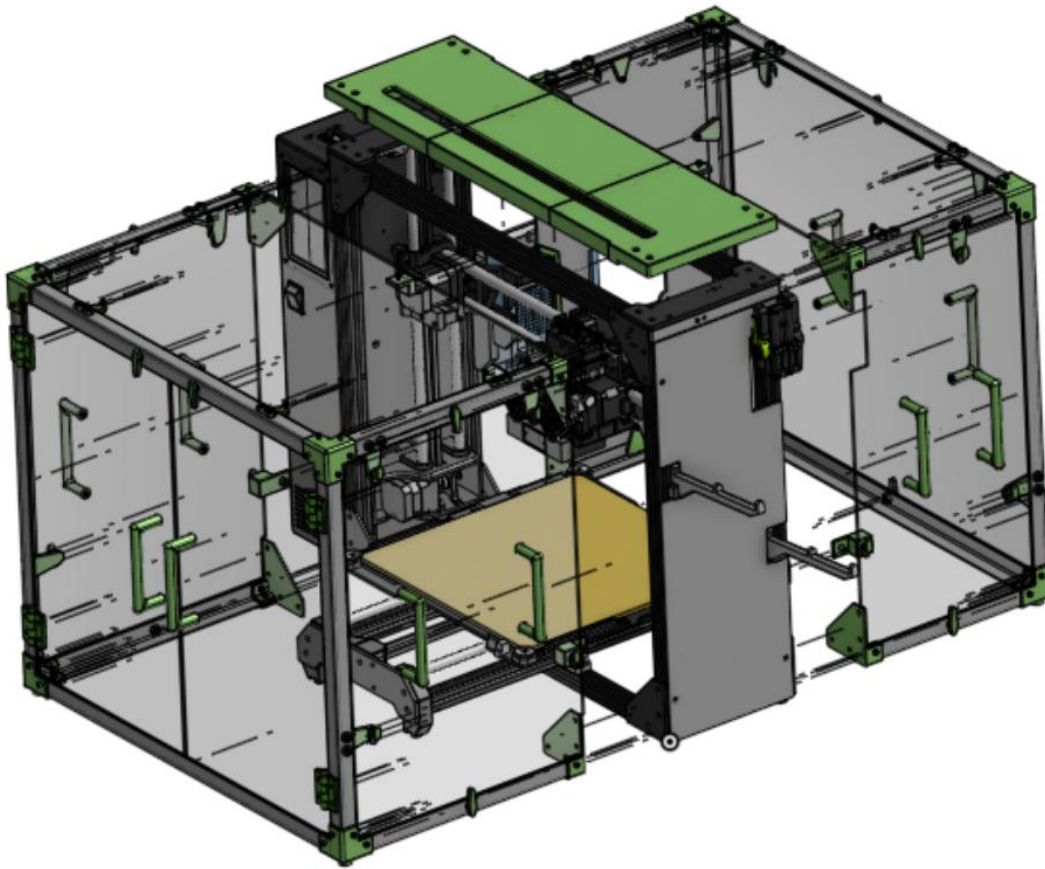

To attach the front and back frames use the present nuts directly from printer frame. Remove all the nuts and metal plates and line up the metal brackets on the printer to the printed attachment brackets. Reattach the new component with the same nuts the original plates were attached to. For the top remove the bolts which hold the top plates in place, then using the larger bolts attach the Top part by threading the screws through the attachment bracket and into the holes and nuts already there.