

Front 1.2mm or 1.5mm mild steel




Front variants



Buffer Beams
6mm angle supports the footplate
Secure angles to buffer beams with 1.2mm or 3/64" rivets.
All other rivets are dummy and may be omitted
Countersink at rear where rivets would otherwise foul spacer blocks.

Note: three 1.8mm holes shown in face are to secure buffer beams and coupling
The builder may want to choose alternatives.

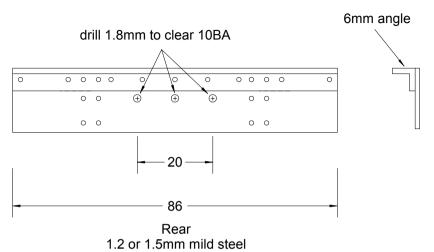

Wild Rose III sheet 6a Buffer beams for frames with cut-offs

Copyright Dave Watkins 04/07/2012