
Simple dummy firebox This hides the end of the boiler and could be omitted from a closed cab loco


Dummy backhead 1.5mm brass

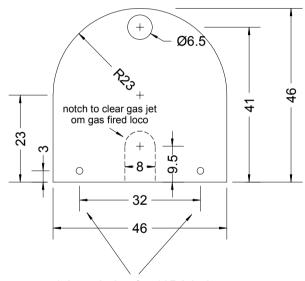

1.8mm holes for 10BA bolts to secure to footplate angle

Cladding 0.5mm brass sheet, trim length to fit and soft solder to dummy backhead.

Notch to clear steam pipe from regulator to lubricator.

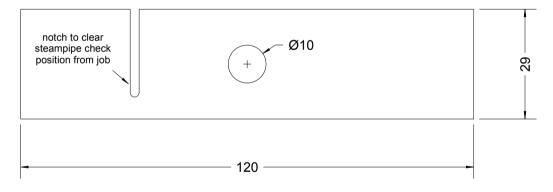

Wild Rose III sheet 28 simple dummy Firebox

Copyright Dave Watkins 12/4/2013