


Rb-87 795 nm LATTICE LASER BASEPLATE V9.6 - WHICH HOLES ARE TAPPED

PLATE 603.25 x 374.65 x 25.40 mm (24 x 15 x 1 in stock)

UNITS mm COORDINATES = STEP-FILE COORDINATES

Geometry per the STEP file Lattice_V9_6_baseplate_24x15in.step. This sheet says only which holes are threaded and which are not.
Drill sizes, tolerances, material and finish: shop standard.

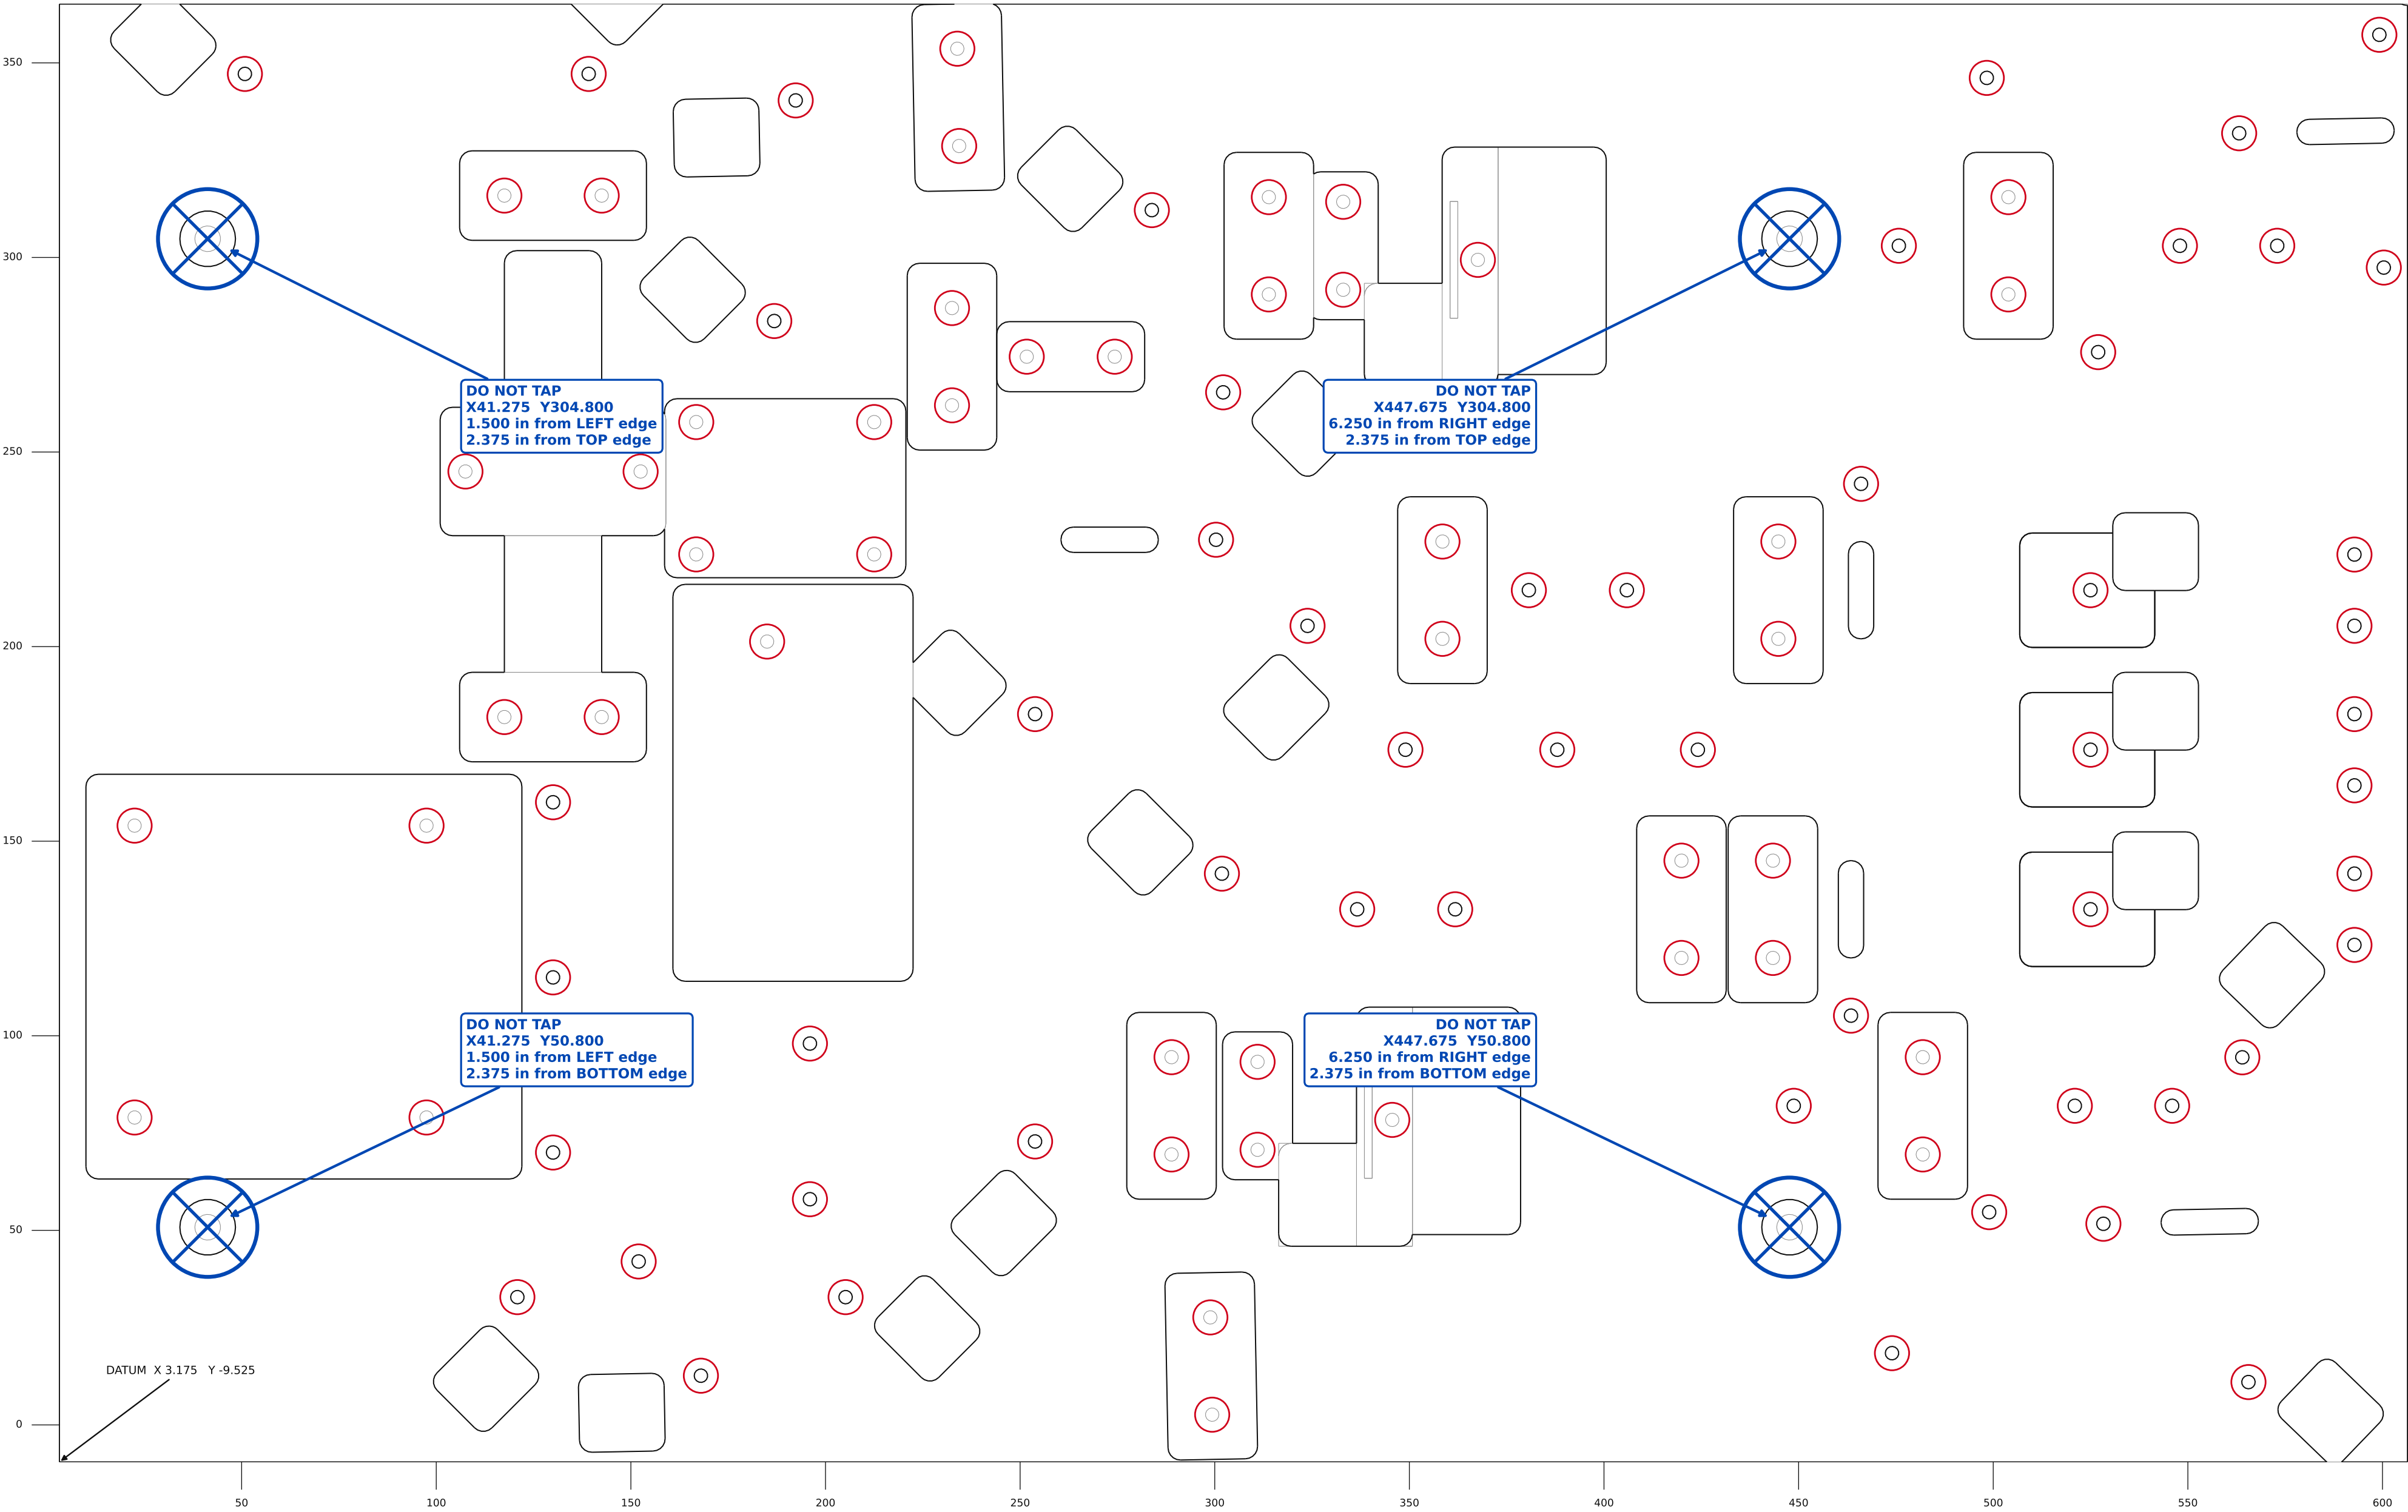

-  **TAP - 99 holes, all #8-32 UNC**
-  **DO NOT TAP - 4 holes (1/4-20 table-bolt clearance)**

103 holes in the part. Every one of them is marked.


The rounded corners inside the milled pockets are end-mill fillets, not holes.

Rb-87 795 nm TA BASEPLATE V9.3 - WHICH HOLES ARE TAPPED

PLATE 628.65 x 349.25 x 25.40 mm (25 x 14 x 1 in stock)

UNITS mm COORDINATES = STEP-FILE COORDINATES

Geometry per the STEP file TA_Board_V9_baseplate_25x14in.step. This sheet says only which holes are threaded and which are not.
Drill sizes, tolerances, material and finish: shop standard.

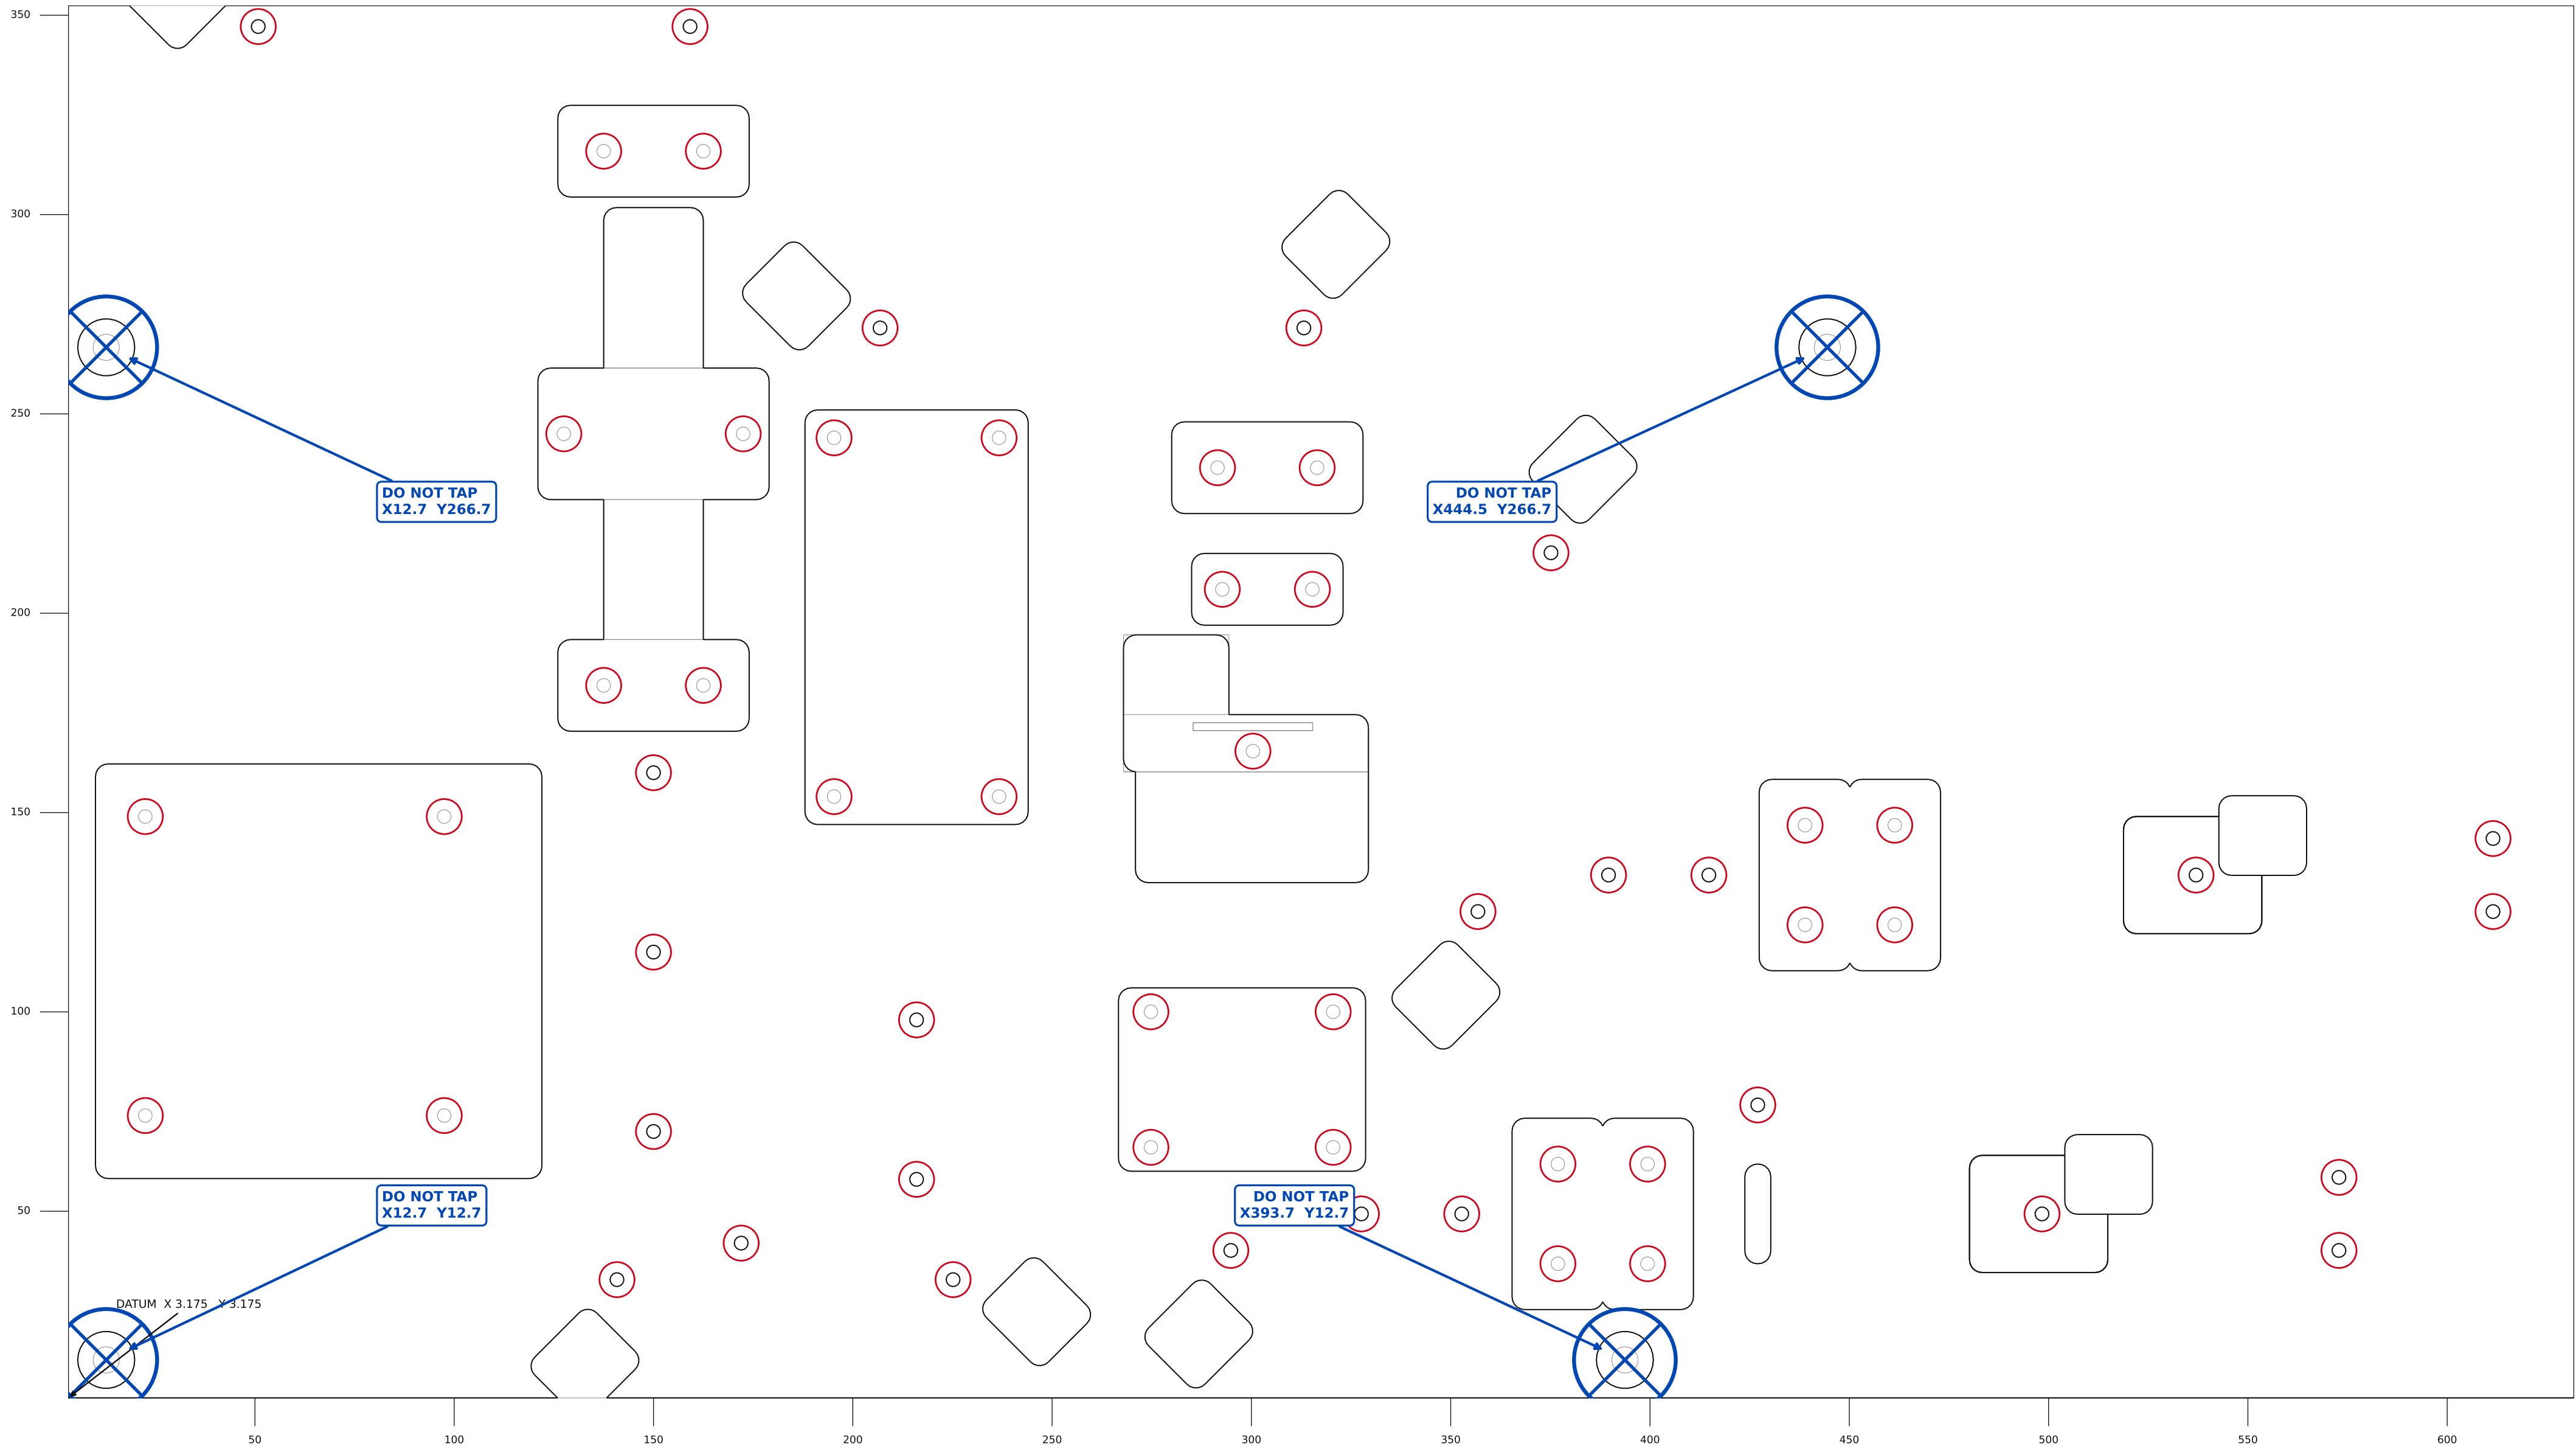

-  **TAP - 57 holes, all #8-32 UNC**
-  **DO NOT TAP - 4 holes (1/4-20 table-bolt clearance)**

61 holes in the part. Every one of them is marked.

The rounded corners inside the milled pockets are end-mill fillets, not holes.


SCALE 1 : 1.15

Rb-87 795 nm AOM DOUBLE-PASS BASEPLATE V9 - WHICH HOLES ARE TAPPED

PLATE 425.45 x 146.05 x 25.40 mm (17 x 6 x 1 in stock)

UNITS mm COORDINATES = STEP-FILE COORDINATES

Geometry per the STEP file AOM_DoublePass_f75_V9_baseplate_17x6in.step. This sheet says only which holes are threaded and which are not.
Drill sizes, tolerances, material and finish: shop standard.

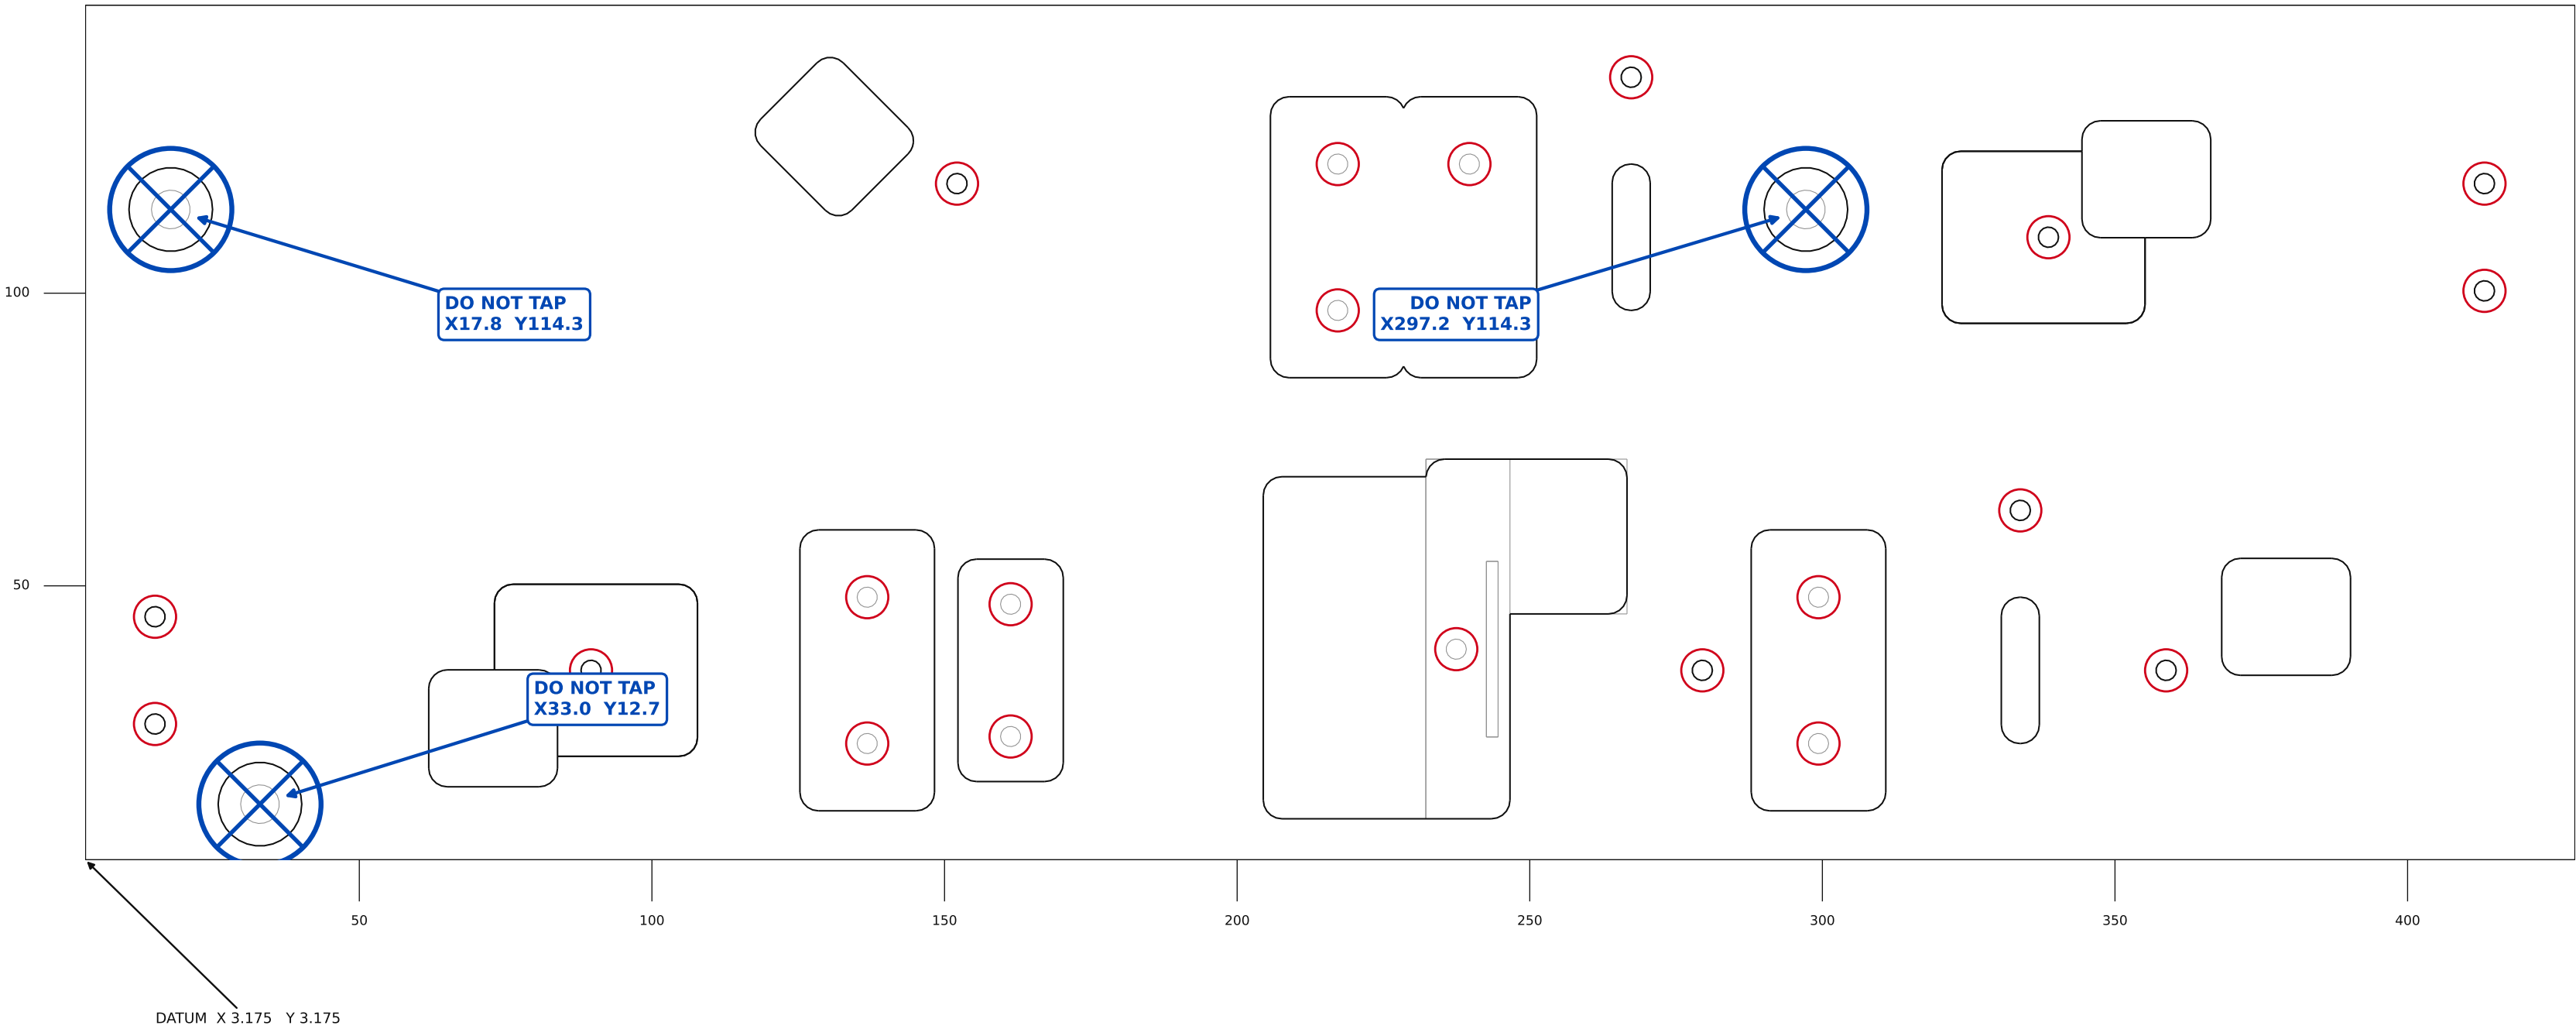


-  **TAP - 22 holes, all #8-32 UNC**
-  **DO NOT TAP - 3 holes (1/4-20 table-bolt clearance)**

25 holes in the part. Every one of them is marked.
The rounded corners inside the milled pockets are end-mill fillets, not holes.

SCALE 1 : 1.00

TA ADAPTER (TA_adapter.stl) - WHICH HOLES ARE TAPPED

Slab 100 x 108 x 11.3 mm. Sits in the TA pocket of the lattice / TA baseplate; the TA butterfly board screws onto it.
Geometry per the mesh file. This sheet says only which holes are threaded. Drill sizes, tolerances, material and finish: shop standard.

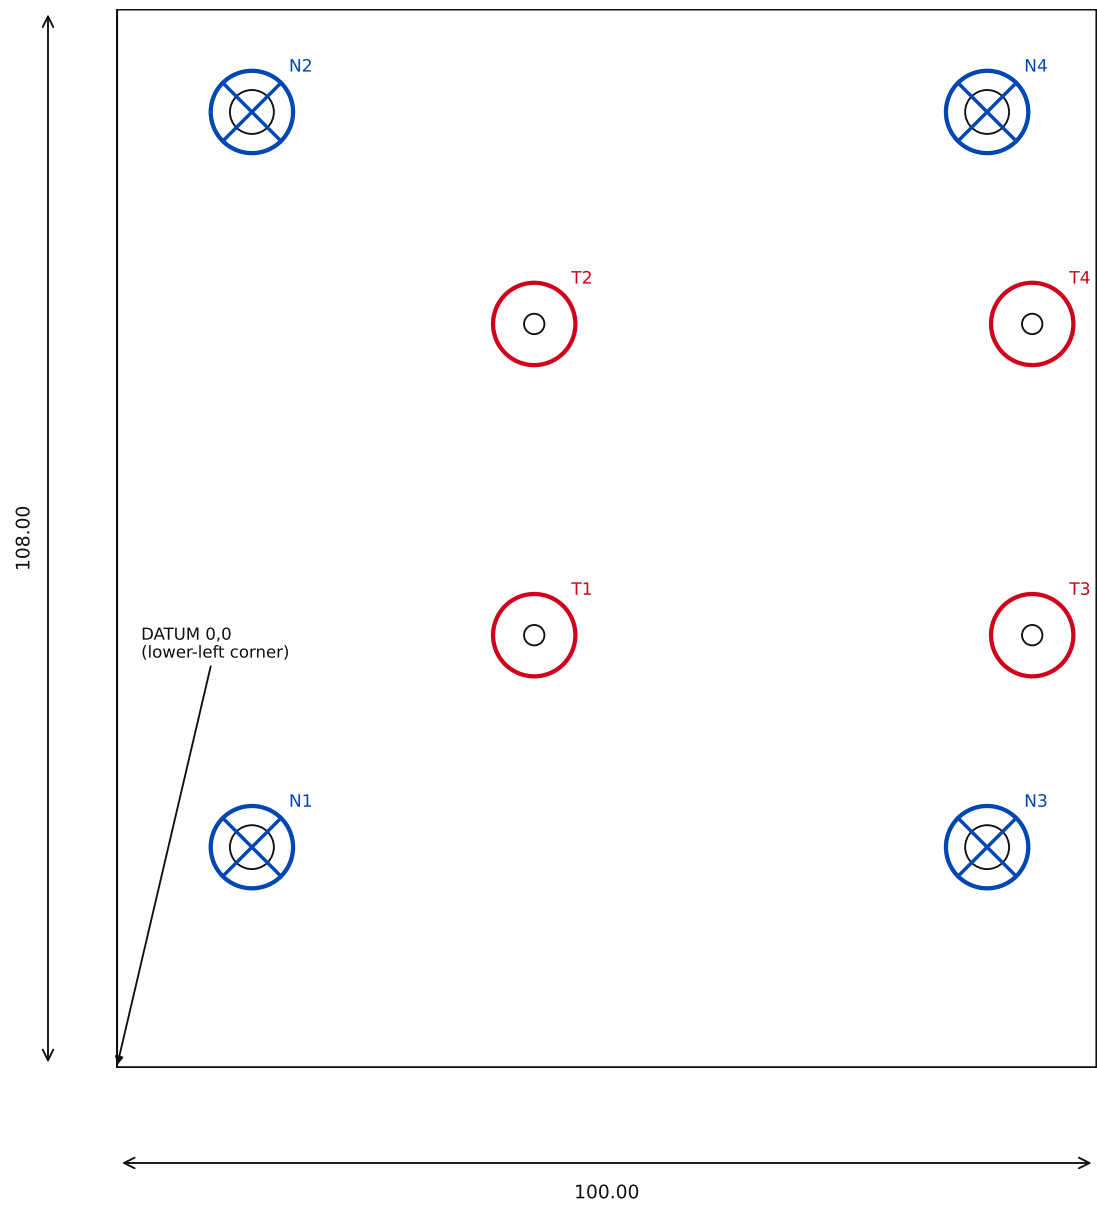

TAP
4 holes M2.5 x 0.45

DO NOT TAP
4 holes (8-32 clearance to the baseplate)

ID	THREAD	X	Y	MODEL Ø
T1	M2.5 x 0.45	42.600	44.125	2.08
T2	M2.5 x 0.45	42.600	75.875	2.08
T3	M2.5 x 0.45	93.400	44.125	2.08
T4	M2.5 x 0.45	93.400	75.875	2.08
N1	none	13.800	22.500	4.48
N2	none	13.800	97.500	4.48
N3	none	88.800	22.500	4.48
N4	none	88.800	97.500	4.48

X, Y from the lower-left corner of the part (mm).
MODEL Ø = hole diameter as modelled, i.e. the as-drawn bore;
the shop chooses the actual drill. All holes go through.

AOM ADAPTER (aom_adapter.stl) - WHICH HOLES ARE TAPPED

Plate 56 x 34 x 5 mm with two 1 mm ribs on the top face. Carries the G&H AOMO 3100-125 on the KM100PM mount.
Geometry per the mesh file. This sheet says only which holes are threaded. Drill sizes, tolerances, material and finish: shop standard.

TAP

2 holes M4 x 0.7

DO NOT TAP

4 holes clearance, in a row

ID	THREAD	X	Y	MODEL Ø
T1	M4 x 0.7	5.775	20.000	3.29
T2	M4 x 0.7	50.225	20.000	3.29
N1	none	9.966	3.000	3.90
N2	none	22.666	3.000	3.90
N3	none	33.334	3.000	3.90
N4	none	46.034	3.000	3.90

X, Y from the lower-left corner of the part (mm).
MODEL Ø = hole diameter as modelled, i.e. the as-drawn bore;
the shop chooses the actual drill. All holes go through.

