
LATTICE BOARD V9.7 - AOM FLUSH WALL 2026-10-14 - WHICH HOLES ARE TAPPED

Geometry: Lattice_V9_7_baseplate_24x15in.step
This sheet identifies threaded and clearance holes. Drill sizes, tolerances, material and finish: shop standard.
AOM: 6 mm from locating-lip outer face; flush side wall; R3 corners; front relief 4 mm deep. Bearing faces and height unchanged.

PLATE 603.25 x 374.65 x 25.40 mm UNITS mm COORDINATES = STEP FILE

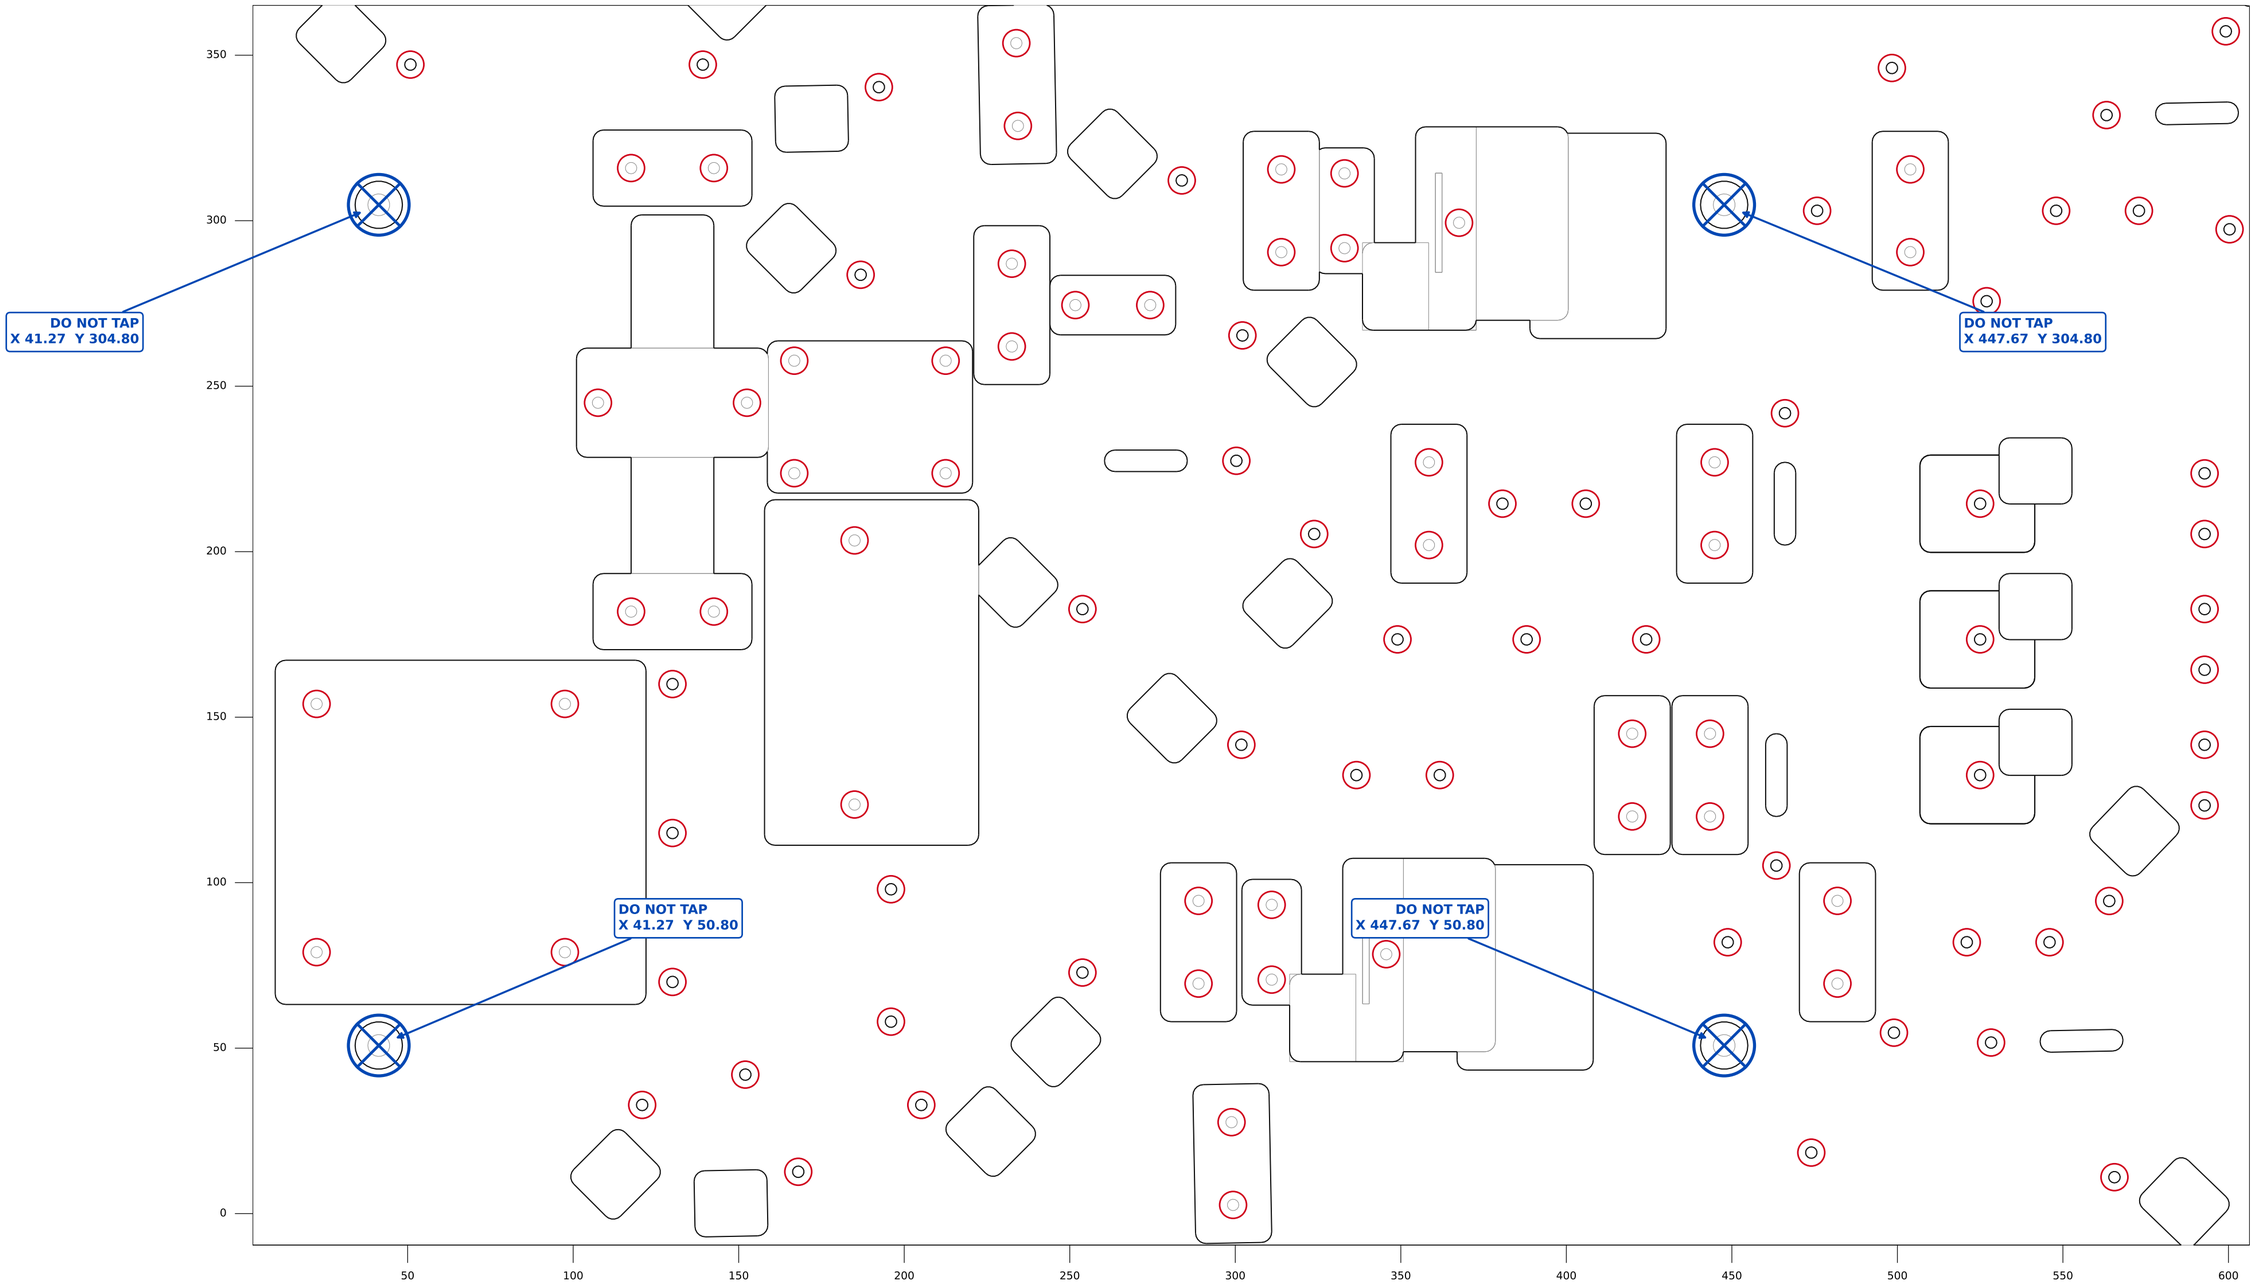

DATUM X 3.175 Y -9.525 (lower-left outline corner)

TAP - 100 x #8-32 UNC

DO NOT TAP - 4 x 1/4-20 clearance

104 holes. Every hole is marked.

Pocket corner radii are end-mill fillets, not holes.


SCALE 1 : 1.31

Rb-87 795 nm TA BASEPLATE V9.3 - WHICH HOLES ARE TAPPED

Geometry per the STEP file TA_Board_V9_baseplate_25x14in.step. This sheet says only which holes are threaded and which are not.
Drill sizes, tolerances, material and finish: shop standard.

PLATE 628.65 x 349.25 x 25.40 mm   (25 x 14 x 1 in stock)

UNITS mm   COORDINATES = STEP-FILE COORDINATES

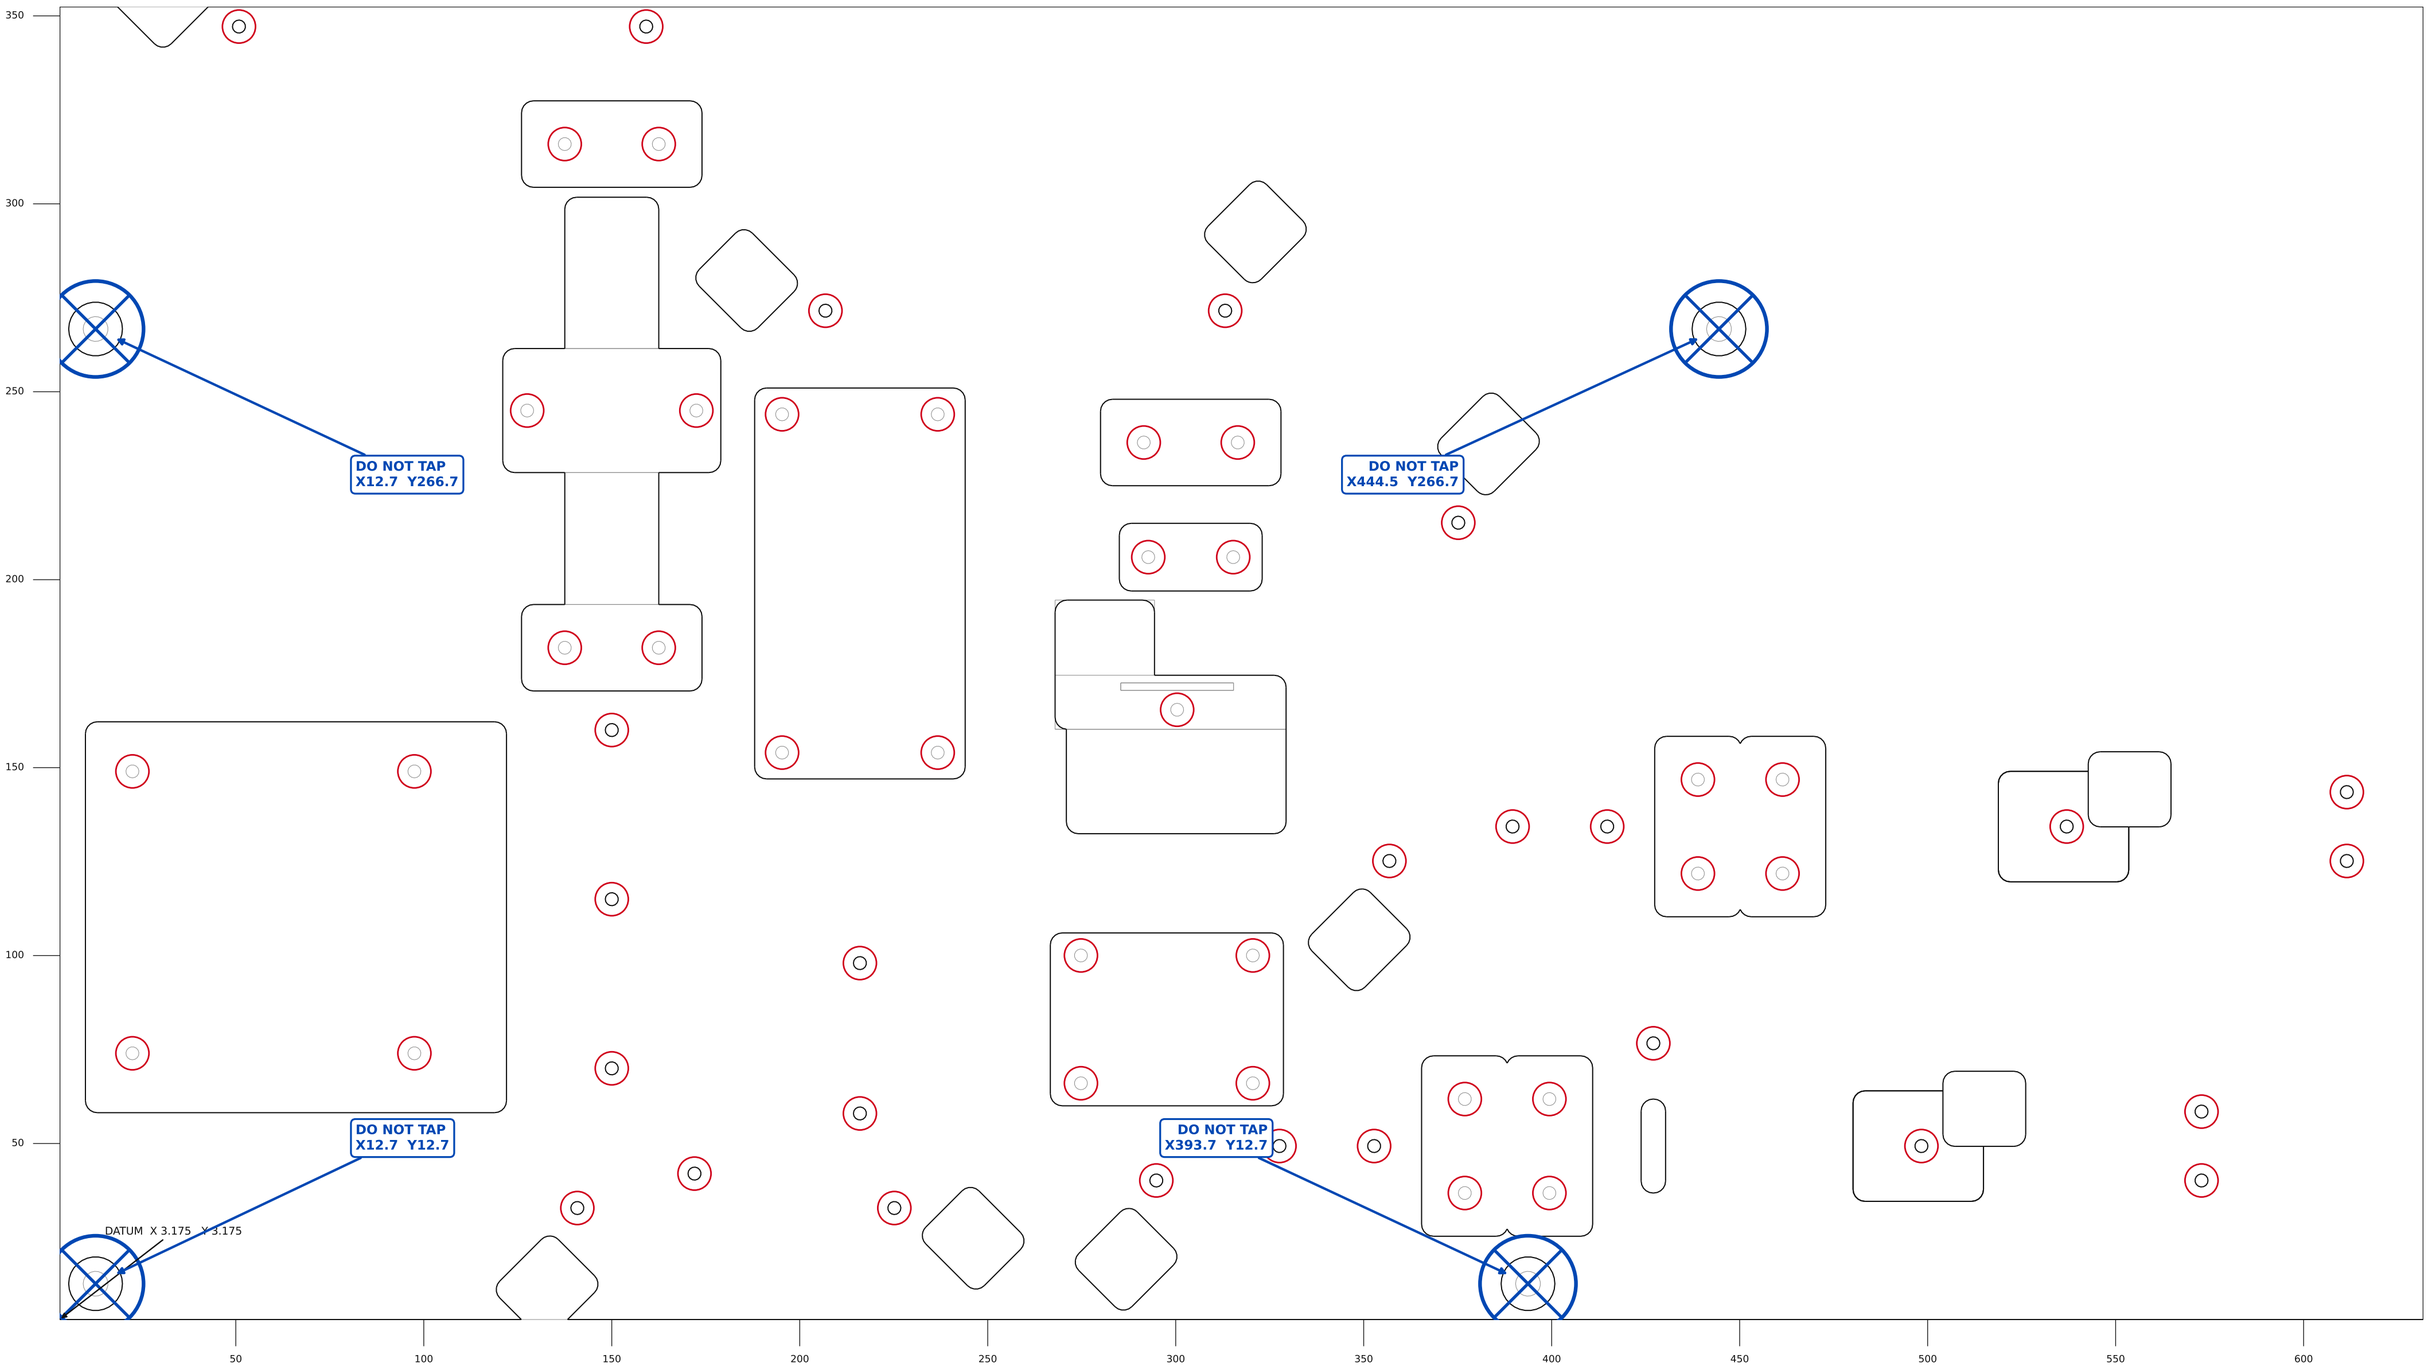

TAP - 57 holes, all #8-32 UNC

DO NOT TAP - 4 holes (1/4-20 table-bolt clearance)

61 holes in the part. Every one of them is marked.

The rounded corners inside the milled pockets are
end-mill fillets, not holes.


SCALE 1 : 1.15

Rb-87 795 nm AOM DOUBLE-PASS BASEPLATE V9 - WHICH HOLES ARE TAPPED

Geometry per the STEP file AOM_DoublePass_f75_V9_baseplate_17x6in.step. This sheet says only which holes are threaded and which are not.
Drill sizes, tolerances, material and finish: shop standard.

PLATE 425.45 x 146.05 x 25.40 mm (17 x 6 x 1 in stock)

UNITS mm COORDINATES = STEP-FILE COORDINATES

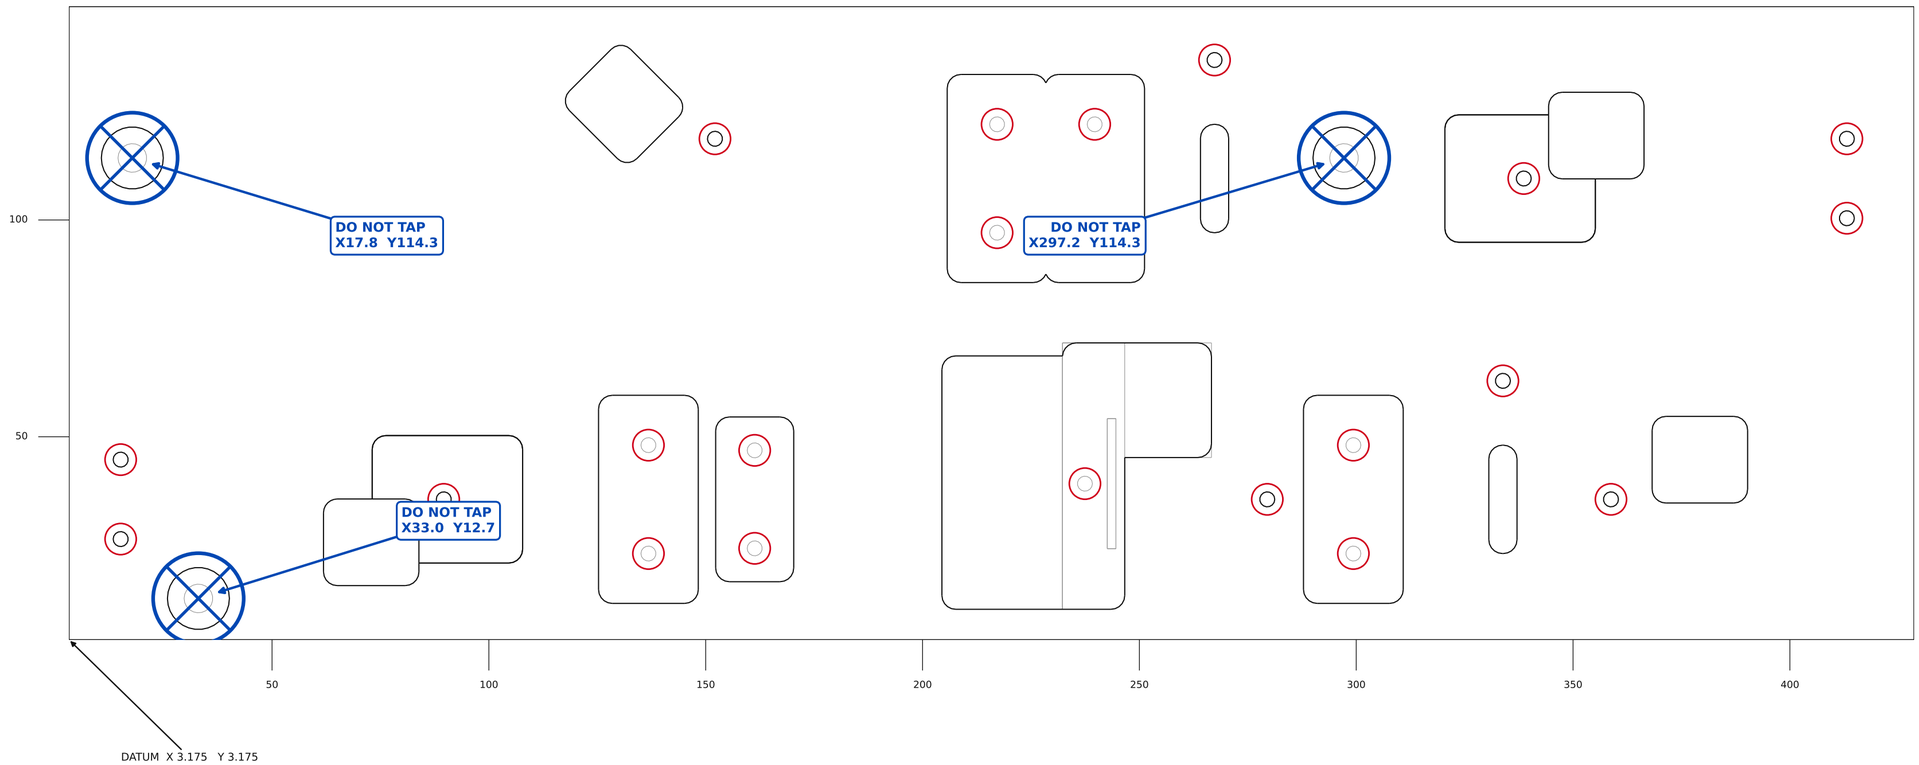

TAP - 22 holes, all #8-32 UNC

DO NOT TAP - 3 holes (1/4-20 table-bolt clearance)


25 holes in the part. Every one of them is marked.

The rounded corners inside the milled pockets are end-mill fillets, not holes.

SCALE 1 : 1.00

TA ADAPTER (TA_adapter.stl) - WHICH HOLES ARE TAPPED

Slab 100 x 108 x 11.3 mm. Sits in the TA pocket of the lattice / TA baseplate; the TA butterfly board screws onto it.
Geometry per the mesh file. This sheet says only which holes are threaded. Drill sizes, tolerances, material and finish: shop standard.

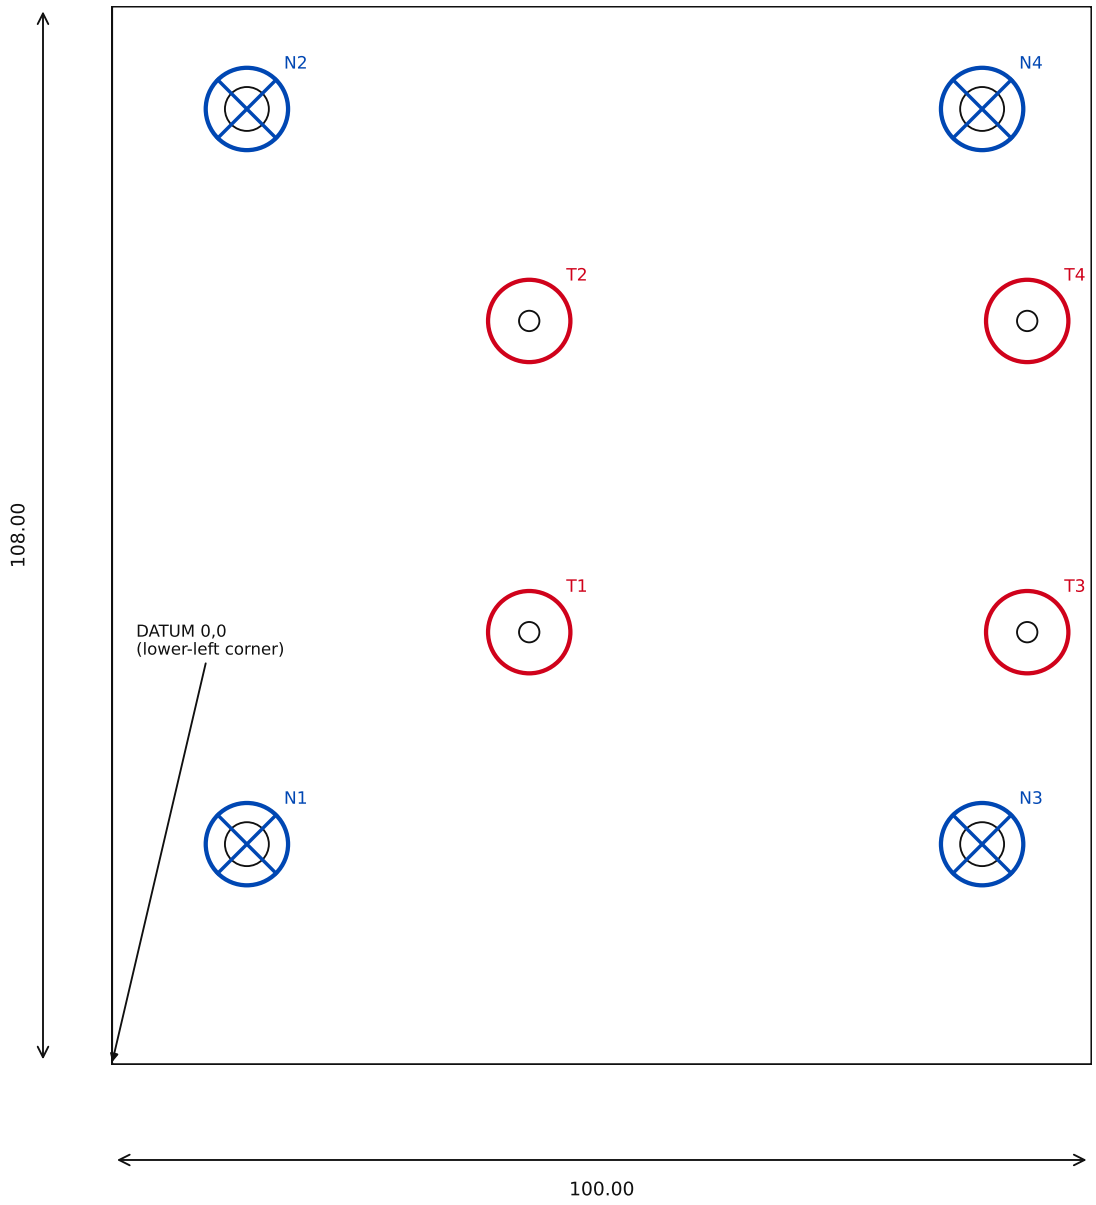

TAP

4 holes M2.5 x 0.45

DO NOT TAP

4 holes (8-32 clearance to the baseplate)


ID	THREAD	X	Y	MODEL Ø
T1	M2.5 x 0.45	42.600	44.125	2.08
T2	M2.5 x 0.45	42.600	75.875	2.08
T3	M2.5 x 0.45	93.400	44.125	2.08
T4	M2.5 x 0.45	93.400	75.875	2.08
N1	none	13.800	22.500	4.48
N2	none	13.800	97.500	4.48
N3	none	88.800	22.500	4.48
N4	none	88.800	97.500	4.48

X, Y from the lower-left corner of the part (mm).
MODEL Ø = hole diameter as modelled, i.e. the as-drawn bore;
the shop chooses the actual drill. All holes go through.

SCALE 1.3 : 1 A4

AOM ADAPTER (aom_adapter.stl) - WHICH HOLES ARE TAPPED

Plate 56 x 34 x 5 mm with two 1 mm ribs on the top face. Carries the G&H AOMO 3100-125 on the KM100PM mount.
Geometry per the mesh file. This sheet says only which holes are threaded. Drill sizes, tolerances, material and finish: shop standard.

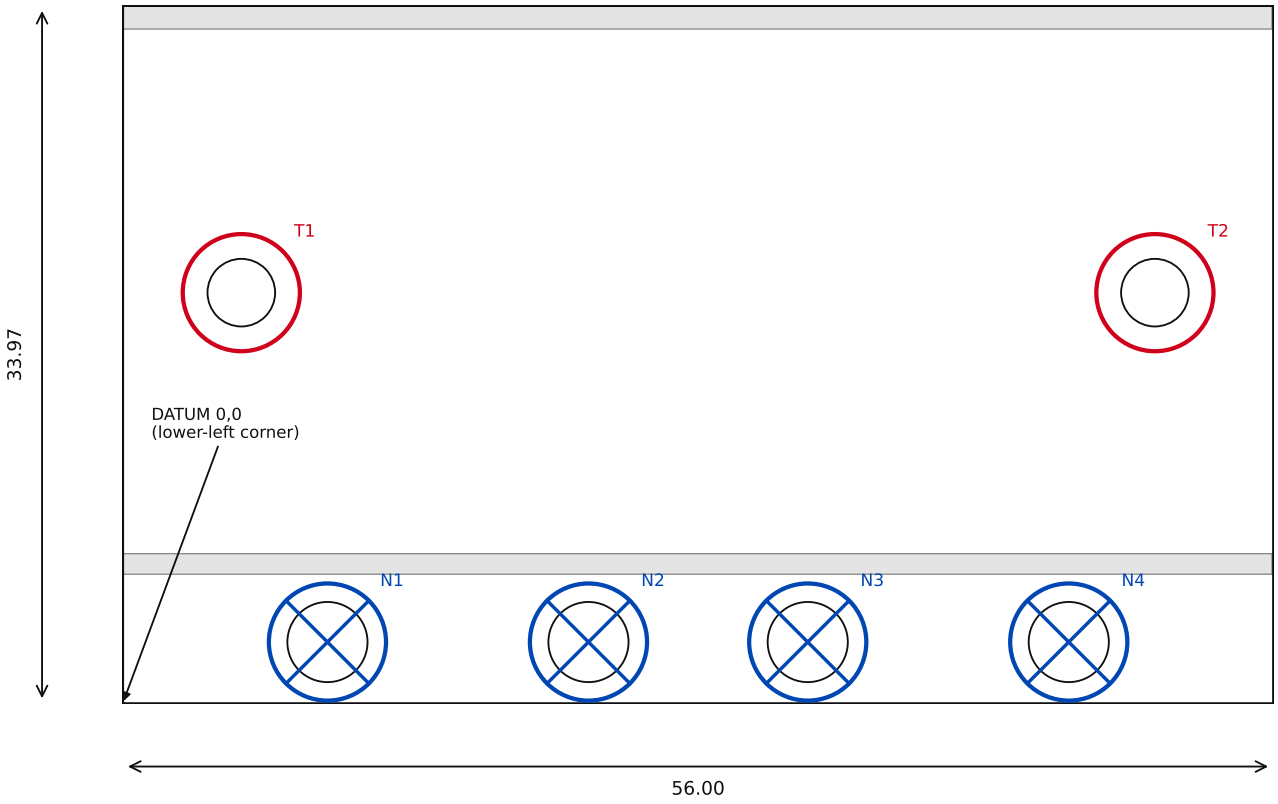

TAP

2 holes M4 x 0.7

DO NOT TAP

4 holes clearance, in a row

ID	THREAD	X	Y	MODEL Ø
T1	M4 x 0.7	5.775	20.000	3.29
T2	M4 x 0.7	50.225	20.000	3.29
N1	none	9.966	3.000	3.90
N2	none	22.666	3.000	3.90
N3	none	33.334	3.000	3.90
N4	none	46.034	3.000	3.90

X, Y from the lower-left corner of the part (mm).
MODEL Ø = hole diameter as modelled, i.e. the as-drawn bore;
the shop chooses the actual drill. All holes go through.

SCALE 2.7 : 1 A4