LVDS-MIPI bridge board hardware configuration changes

1. Remove R39 and R40 from the LVDS–MIPI bridge board (refer to below attached Image).

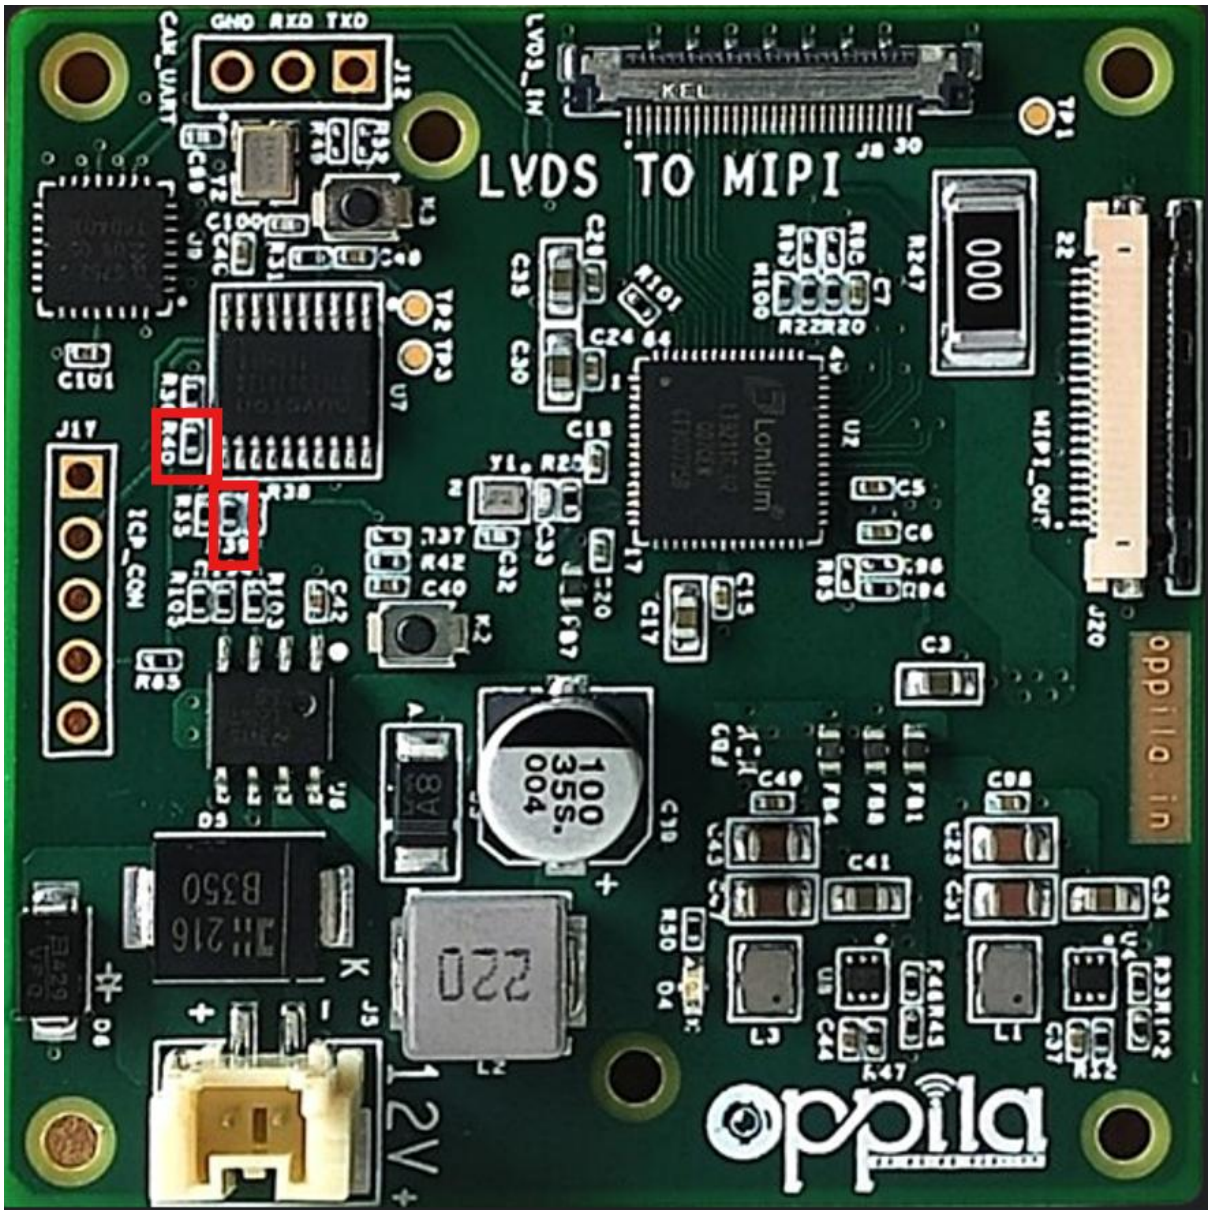
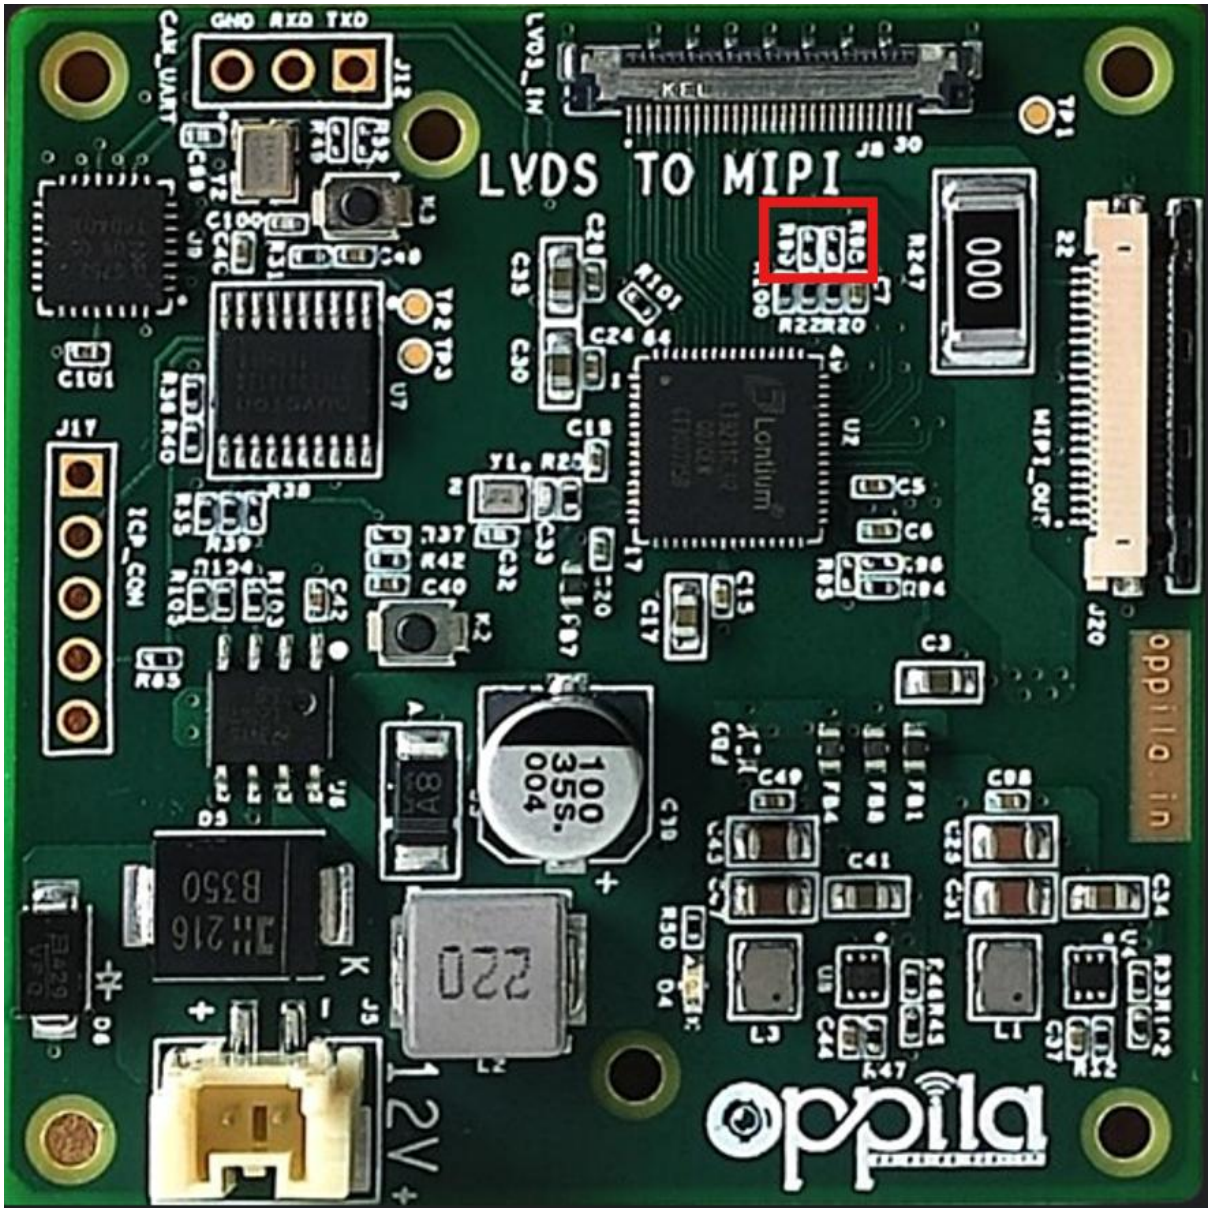
2. Populate R98 and R99 using either a 0Ω resistor (0402 package) or a solder bridge, as per convenience. Kindly refer to the attached Image below for the exact placement of these resistors.